

VR-3071 (Series) Home Gateway

User Manual



Preface

This manual provides information related to the installation and operation of this device. The individual reading this manual is presumed to have a basic understanding of telecommunications terminology and concepts.

If you find the product to be inoperable or malfunctioning, please contact technical support for immediate service by email at INT-support@comtrend.com

For product update, new product release, manual revision, or software upgrades, please visit our website at <http://www.comtrend.com>

Important Safety Instructions

With reference to unpacking, installation, use, and maintenance of your electronic device, the following basic guidelines are recommended:

- Do not use or install this product near water, to avoid fire or shock hazard. For example, near a bathtub, kitchen sink or laundry tub, or near a swimming pool. Also, do not expose the equipment to rain or damp areas (e.g. a wet basement).
- Do not connect the power supply cord on elevated surfaces. Allow it to lie freely. There should be no obstructions in its path and no heavy items should be placed on the cord. In addition, do not walk on, step on, or mistreat the cord.
- Use only the power cord and adapter that are shipped with this device.
- Never install telephone wiring during stormy weather conditions.

CAUTION:

- Always disconnect all telephone lines from the wall outlet before servicing or disassembling this equipment.
- Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user authority to operate the equipment.
- Do not stack equipment or place equipment in tight spaces, in drawers, or on carpets. Be sure that your equipment is surrounded by at least 2 inches of air space.
- To prevent interference with cordless phones, ensure that the gateway is at least 5 feet (1.5m)from the cordless phone base station.
- If you experience trouble with this equipment, disconnect it from the network until the problem has been corrected or until you are sure that equipment is not malfunctioning.

**WARNING**

- Disconnect the power line from the device before servicing
- For indoor use only
- Do NOT open the casing
- Do NOT use near water
- Do NOT insert sharp objects into the RJ-11 jack
- Keep away from the fire
- For use in ventilated environment / space
- Use 26 AWG or larger cable connect to RJ-11 port

- Débranchez l'alimentation électrique avant l'entretien
- Cet appareil est conçu pour l'usage intérieur seulement
- N'ouvrez pas le boîtier
- N'utilisez pas cet appareil près de l'eau
- N'insérez pas d'objets tranchants dans la prise RJ-11
- N'approchez pas du feu
- Veuillez utiliser dans un environnement aéré
- Veuillez utiliser fil électrique de 26AWG pour port RJ-11

Power Specifications (Alimentation) :

Input : 12Vdc, 3.0A or 2.0A

Output : USB3.0, 900mA

**User Information**

Any changes or modifications not expressly approved by the party responsible for compliance could void your authority to operate the equipment.

Aucune modification apportée à l'appareil par l'utilisateur, quelle qu'en soit la nature. Tout changement ou modification peuvent annuler le droit d'utilisation de l'appareil par l'utilisateur.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

This Class B digital apparatus complies with Canadian ICES-003. To reduce potential radio interference to other users, the antenna type and its gain should be so chosen that the equivalent isotropically radiated power (e.i.r.p.) is not more than that permitted for successful communication. This device complies with Part 15 of the FCC Rules and Industry Canada licence-exempt RSS standard(s).

Operation is subject to the following two conditions:

1. This device may not cause interference, and
2. This device must accept any interference, including interference that may cause undesired operation of the device.

Cet appareil numérique de la classe B est conforme à la norme NMB-003 Canada. Pour réduire le risque d'interférence aux autres utilisateurs, le type d'antenne et son gain doivent être choisis de façon que la puissance isotrope rayonnée équivalente (PIRE) ne dépasse pas ce qui est nécessaire pour une communication réussie.

Cet appareil est conforme à la norme RSS Industrie Canada exempts de licence norme(s).

Son fonctionnement est soumis aux deux conditions suivantes:

1. Cet appareil ne peut pas provoquer d'interférences et
2. Cet appareil doit accepter toute interférence, y compris les interférences qui peuvent causer un mauvais fonctionnement du dispositif.

Radiation Exposure

FCC

1. This Transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.
2. This equipment complies with FCC RF radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with a minimum distance of 23 cm between the radiator and your body.

ISED

This device complies with the ISED radiation exposure limit set forth for an uncontrolled environment. This device should be installed and operated with minimum distance 23 cm between the radiator & your body. This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.

“This product meets the applicable Innovation, Science and Economic development Canada technical specifications”.

The device for operation in the band 5150–5250 MHz is only for indoor use to reduce the potential for harmful interference to co-channel mobile satellite systems.

This product meets the applicable Industry Canada technical specifications.

The Ringer Equivalence Number (REN) indicates the maximum number of devices allowed to be connected to a telephone interface. The termination of an interface may consist of any combination of devices subject only to the requirement that the sum of the RENs of all the devices not exceed five.

Cet équipement est conforme avec l'exposition aux radiations ISED définies pour un environnement non contrôlé. Cet équipement doit être installé et utilisé à une distance minimum de 23 cm entre le radiateur et votre corps. Cet émetteur ne doit pas être co-localisées ou opérant en conjonction avec une autre antenne ou transmetteur.

«Ce produit est conforme aux spécifications techniques applicables d'Innovation, Sciences et Développement économique Canada».

les dispositifs fonctionnant dans la bande 5150-5250 MHz sont réservés uniquement pour une utilisation à l'intérieur afin de réduire les risques de brouillage préjudiciable aux systèmes de satellites mobiles utilisant les mêmes canaux.

Le présent matériel est conforme aux spécifications techniques applicables d'Industrie Canada.

L'indice d'équivalence de la sonnerie (IES) sert à indiquer le nombre maximal de terminaux qui peuvent être raccordés à une interface téléphonique. La terminaison d'une interface peut consister en une combinaison quelconque de dispositifs, à la seule condition que la somme d'indices d'équivalence de la sonnerie de tous les dispositifs n'excède pas cinq.

Le numéro REN (Ringer Equivalence Number) indique le nombre maximal de périphériques pouvant être connectés à une interface téléphonique. La terminaison d'une interface peut consister en une combinaison quelconque d'appareils, à la condition que la somme des REN de tous les appareils ne dépasse pas cinq.

Certification

- FCC / IC standard
 - Part 15B / ICES-003
 - Part 15C / RSS-247(2.4GHz)
 - Part 15E / RSS-247(5GHz)
 - TIA-968 / IC-CS03
 - UL 62368-1 / CSA 62368-1

Copyright

Copyright©2020 Comtrend Corporation. All rights reserved. The information contained herein is proprietary to Comtrend Corporation. No part of this document may be translated, transcribed, reproduced, in any form, or by any means without prior written consent of Comtrend Corporation.

NOTE: This document is subject to change without notice.

Open Source Software Notice

Comtrend's products use open source software to fulfill their function.

Licenses for the open source software are granted under the GNU General Public License in various versions. For further information on the GNU General Public License see <http://www.gnu.org/licenses/>

You are allowed to modify all open source code (except for proprietary programs) and to conduct reverse engineering for the purpose of debugging such modifications; to the extent such programs are linked to libraries licensed under the GNU Lesser General Public License. You are not allowed to distribute information resulting from such reverse engineering or to distribute the modified proprietary programs.

The rights owners of the open source software require you to refer to the following disclaimer which shall apply with regard to those rights owners:

Warranty Disclaimer

THE OPEN SOURCE SOFTWARE IN THIS PRODUCT IS DISTRIBUTED IN THE HOPE THAT IT WILL BE USEFUL, BUT WITHOUT ANY WARRANTY, WITHOUT EVEN THE IMPLIED WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE. SEE THE APPLICABLE LICENSES FOR MORE DETAILS. Comtrend's products will strictly follow the market's standard requirements. It is not permitted to modify any Wi-Fi parameters, including the Wi-Fi power setting.

Obtain Source Code

If you wish to download the open source code please see:
<https://www.comtrend.com/gplcddl.html>

If you do not see the required source code on our website link and wish to be provided with the entire source code for that product, we will provide it to you and any third party with the source code of the software licensed under an open source software license. Please send us a written request by email or mail to one of the following addresses:

Email: Comtrend support team - opensource@comtrend.com

Postal: Comtrend Corporation
3F-1, 10 Lane 609,
Chongxin Rd., Section 5,
Sanchong Dist,
New Taipei City 24159,
Taiwan
Tel: 886-2-2999-8261

In detail name the product and firmware version for which you request the source code and indicate means to contact you and send you the source code.

PLEASE NOTE WE WILL CHARGE THE COSTS OF A DATA CARRIER AND THE POSTAL CHARGES TO SEND THE DATA CARRIER TO YOU. THE AMOUNT WILL VARY ACCORDING TO YOUR LOCATION AND THE COMTREND SUPPORT TEAM WILL NOTIFY THE EXACT COSTS WHEN REVIEWING THE REQUEST.

THIS OFFER IS VALID FOR THREE YEARS FROM THE MOMENT WE DISTRIBUTED THE PRODUCT. FOR MORE INFORMATION AND THE OPEN SOURCE LIST (& RESPECTIVE LICENCES) FOR INDIVIDUAL PRODUCTS PLEASE SEE:
<https://www.comtrend.com/gplcddl.html>

Protect Our Environment

This symbol indicates that when the equipment has reached the end of its useful life, it must be taken to a recycling centre and processed separate from domestic waste.

The cardboard box, the plastic contained in the packaging, and the parts that make up this router can be recycled in accordance with regionally established regulations. Never dispose of this electronic equipment along with your household waste; you may be subject to penalties or sanctions under the law. Instead, please be responsible and ask for disposal instructions from your local government.

Table of Contents

CHAPTER 1 INTRODUCTION.....	10
CHAPTER 2 INSTALLATION.....	11
2.1 HARDWARE SETUP.....	11
2.1.1 Back Panel.....	12
2.1.2 Bottom Panel.....	14
2.1.3 Front Panel.....	15
CHAPTER 3 WEB USER INTERFACE.....	17
3.1 DEFAULT SETTINGS	17
3.2 IP CONFIGURATION.....	18
3.3 LOGIN PROCEDURE.....	20
CHAPTER 4 DEVICE INFORMATION.....	22
4.1 WAN	24
4.2 STATISTICS.....	26
4.2.1 LAN Statistics	26
4.2.2 WAN Service	27
4.2.3 XTM Statistics.....	28
4.2.4 xDSL Statistics.....	29
4.3 ROUTE	35
4.4 ARP.....	36
4.5 DHCP	37
4.6 NAT SESSION	38
4.7 IGMP INFO.....	39
4.8 CPU & MEMORY	40
4.9 NETWORK MAP	41
4.10 WIRELESS.....	42
4.10.1 Station Info	42
4.10.2 WiFi Insight	43
4.10.2.1 Site Survey.....	44
4.10.2.2 Channel Statistics	46
4.10.2.3 Metrics (Advanced Troubleshooting).....	50
4.10.2.4 Configure	52
CHAPTER 5 BASIC SETUP.....	53
5.1 WAN SETUP	54
5.1.1 WAN Service Setup	55
5.2 NAT	57
5.2.1 Virtual Servers	57
5.2.2 Port Triggering.....	59
5.2.3 DMZ Host.....	61
5.3 LAN.....	62
5.3.1 Lan VLAN Setting.....	64
5.3.2 LAN IPv6 Autoconfig.....	65
5.3.3 UPnP	67
5.4 PARENTAL CONTROL	68
5.4.1 Time Restriction.....	68
5.4.2 URL Filter	69
5.5 HOME NETWORKING	71
5.5.1 Print Server	71
5.5.2 DLNA.....	71
5.5.3 Storage Service.....	72
5.6 WIRELESS.....	75
5.6.1 SSID.....	75
5.6.2 Security.....	76
CHAPTER 6 ADVANCED SETUP.....	77
6.1 SECURITY	77

6.1.1 IP Filtering	77
6.1.2 MAC Filtering	81
6.2 QUALITY OF SERVICE (QoS).....	83
6.2.1 QoS Queue.....	84
6.2.1.1 QoS Queue Configuration	84
6.2.1.2 Wlan Queue	88
6.2.2 QoS Classification.....	89
6.2.3 QoS Port Shaping	92
6.3 ROUTING	93
6.3.1 Default Gateway.....	93
6.3.2 Static Route.....	94
6.3.3 Policy Routing	95
6.3.4 RIP.....	97
6.4 DNS	98
6.4.1 DNS Server	98
6.4.2 Dynamic DNS	99
6.5 DSL.....	101
6.6 DNS PROXY	103
6.7 INTERFACE GROUPING	104
6.8 IPTUNNEL.....	107
6.8.1 IPv6inIPv4.....	107
6.8.2 IPv4inIPv6.....	109
6.8.3 MAP.....	110
6.9 IPSEC	112
6.9.1 IPSec Tunnel Mode Connections	112
6.10 CERTIFICATE.....	116
6.10.1 Local.....	116
6.10.2 Trusted CA.....	119
6.11 MULTICAST.....	120
6.12 WIRELESS	123
6.12.1 SSID.....	123
6.12.2 Security.....	124
6.12.3 WPS	125
6.12.4 MAC Filtering	126
6.12.5 Wireless WDS(Wireless Distribution System).....	127
6.12.6 Advanced	133
CHAPTER 7 DIAGNOSTICS.....	136
7.1 DIAGNOSTICS – INDIVIDUAL TESTS	136
7.2 ETHERNET OAM	137
7.3 PING	139
7.4 TRACE ROUTE	140
CHAPTER 8 MANAGEMENT	141
8.1 SETTINGS.....	141
8.1.1 Backup Settings.....	141
8.1.2 Update Settings.....	142
8.1.3 Restore Default	142
8.2 SYSTEM LOG	144
8.3 SNMP AGENT	146
8.4 TR-069 CLIENT	147
8.5 INTERNET TIME	149
8.6 ACCESS CONTROL	150
8.6.1 Accounts	150
8.6.2 Services.....	152
8.6.3 IP Address.....	153
8.7 UPDATE SOFTWARE	155
8.8 REBOOT.....	156
CHAPTER 9 LOGOUT	157
APPENDIX A - FIREWALL	158

APPENDIX B - PIN ASSIGNMENTS	161
APPENDIX C – SPECIFICATIONS	162
APPENDIX D - SSH CLIENT	165
APPENDIX E - PRINTER SERVER.....	166
APPENDIX F - CONNECTION SETUP.....	173

Chapter 1 Introduction

VR-3071 is a Multi-DSL router using the Intel solution and provides both ADSL and 35b VDSL. It integrates 5 Giga Ethernet ports, WLAN 802.11ax 2.4GHz (2T2R) frequency band and 802.11ax 5GHz (4T4R) frequency band. VR-3071 is designed for high speed applications and TR-069 allows for uncomplicated remote management.

Chapter 2 Installation

2.1 Hardware Setup



DO NOT STACK


Non-stackable

This device is not stackable – do not place units on top of each other, otherwise damage could occur.

Follow the instructions below to complete the hardware setup.

2.1.1 Back Panel

The figure below shows the back panel of the device.

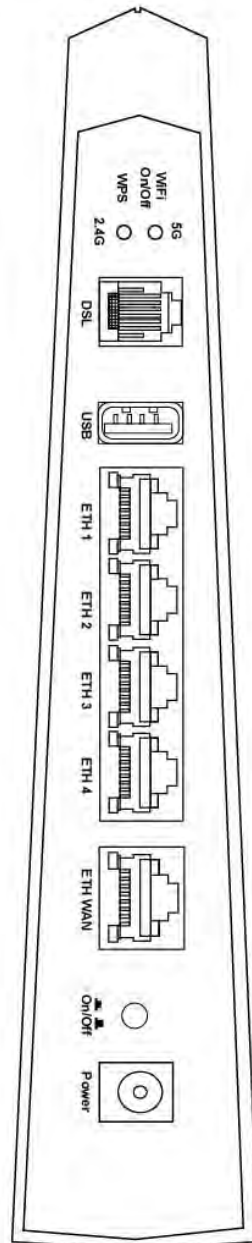

WiFi On/Off/ WPS Button 5G

Press the 5G button for less than 5 seconds to enable WPS which will allow 2 minutes for WiFi connection.

Press and hold the 5G button > 5 seconds and less than 10 seconds to enable/disable the WiFi function.

WiFi On/Off/ WPS Button 2.4G

Press the 2.4G button for less than 5 seconds to enable WPS which will allow 2 minutes for WiFi connection.

Press and hold the 2.4G button > 5 seconds and less than 10 seconds to enable/disable the WiFi function.

WPS Button

Press the WPS button less than 2 seconds to enable WPS which will allow 2 minutes for WiFi connection.

DSL

Connect to the DSL port with the DSL RJ11 cable. The VR-3071 supports the following DSL profiles -

ADSL : ADSL, ADSL 2, ADSL 2+.

VDSL : 8a, 8b, 8c, 8d, 12a, 12b, 17a, 30a and 35b.

USB Port

This port can be used to connect the router to a storage device. It can only be used for SAMBA(storage) and for a Printer Server. Support for other devices may be added in future firmware upgrades.

LAN (Ethernet) Ports

You can connect the router to up to four LAN devices using RJ45 cables. The ports are auto-sensing MDI/X and either straight-through or crossover cable can be used.

ETH WAN PORT

This port is designated to be used for Ethernet WAN functionality only. Use 1000-BASE-T RJ-45 cables to connect to Gigabit WAN server, or 10/100BASE-T RJ-45 cables for standard network usage. This ports is auto-sensing MDI/X; so either straight-through or crossover cable can be used.


Power ON

Press the power button to the OFF position (OUT). Connect the power adapter to the power port. Attach the power adapter to a wall outlet or other AC source. Press the power button to the ON position (IN). If the Power LED displays as expected then the device is ready for setup (see section – LED Indicators).

Caution 1: If the device fails to power up, or it malfunctions, first verify that the power cords are connected securely and then power it on again. If the problem persists, contact technical support.

Caution 2: Before servicing or disassembling this equipment, disconnect all power cords and telephone lines from their outlets.

2.1.2 Bottom Panel

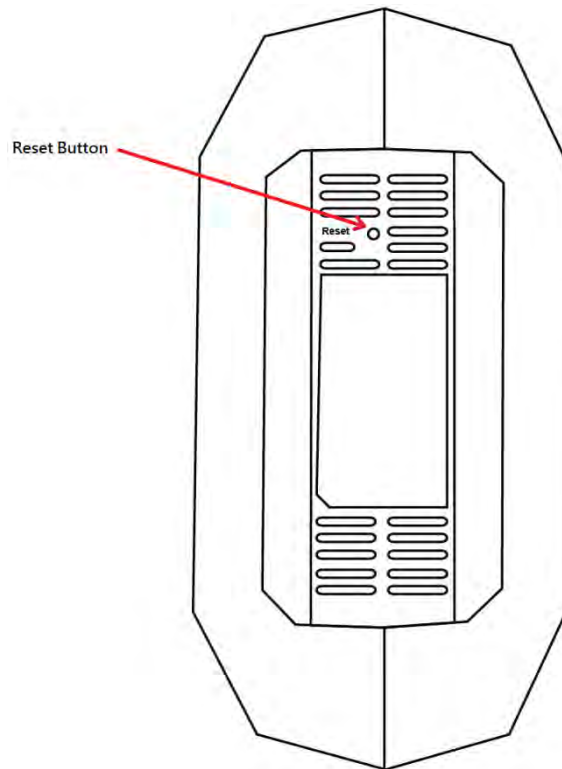


Reset Button

Restore the default parameters of the device by pressing the Reset button for 10 seconds. After the device has rebooted successfully, the front panel should display as expected (see section [2.1.3 Front Panel](#) for details).

NOTE: If pressed down for more than 60 seconds, the VR-3071 will go into a firmware update state (CFE boot mode). The firmware can then be updated using an Internet browser pointed to the default IP address.

2.1.3 Front Panel

The front panel LED indicators are shown below and explained in the following table. This information can be used to check the status of the device and its connections.

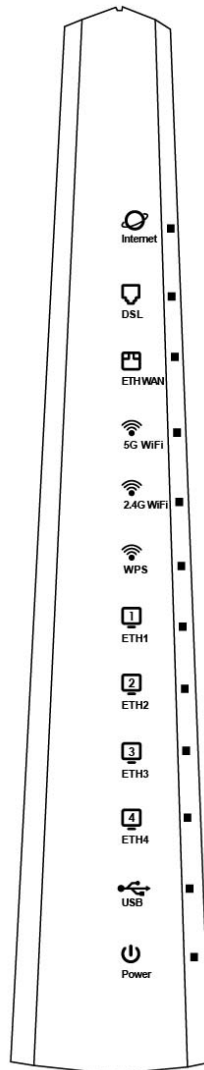

LED	Color	Mode	Function
INTERNET	Green	On	IP connected and no traffic detected. If an IP or PPPoE session is dropped due to an idle timeout, the light will remain blue. The light will turn red when it attempts to reconnect and DHCP or PPPoE fails.
		Off	Modem power off, modem in WDSd mode or WAN connection not present.
		Blink	IP connected and IP Traffic is passing through the device (either direction)
	Red	On	Device attempted to become IP connected and failed (no DHCP response, no PPPoE response, PPPoE authentication failed, no IP address from IPCP, etc.)

DSL	Green	On	xDSL Link is established.
		Off	The device is powered down.
		Blink	xDSL Link is training.
ETH WAN	Green	On	Ethernet WAN is connected.
		Off	Ethernet WAN is not connected.
		Blink	Ethernet WAN is transmitting/ receiving.
5G WiFi	Green	On	Wi-Fi enabled.
		Off	Wi-Fi disabled.
		Blink	Data transmitting or receiving over WLAN.
2.4G WiFi	Green	On	Wi-Fi enabled.
		Off	Wi-Fi disabled.
		Blink	Data transmitting or receiving over WLAN.
WPS	Green	On	WPS connection successful. The LED will stay on for 3 minutes.
		Off	No WPS association process ongoing.
		Blink	WPS connection in progress.
ETH 1X-4X	Green	On	An Ethernet Link is established.
		Off	An Ethernet Link is not established.
		Blink	Data transmitting or receiving over Ethernet.
USB	Green	On	At least one device is connected to the USB port.
		Off	No device is connected to the USB port or a device is connected to a USB port but not active.
		Blink	Data TX/RX passing through at least one of the USB ports.
POWER	Green	On	The device is powered up.
		Off	The device is powered down.
	Red	On	POST (Power On Self Test) failure or other malfunction. A malfunction is any error of internal sequence or state that will prevent the device from connecting to the DSLAM or passing customer data.

Note:

A malfunction is any error of internal sequence or state that will prevent the device from connecting to the DSLAM or passing customer data. This may be identified at various times such as after power on or during operation through the use of self testing or in operations which result in a unit state that is not expected or should not occur.

IP connected (the device has a WAN IP address from IPCP or DHCP and DSL is up or a static IP address is configured, PPP negotiation has successfully complete – if used – and DSL is up) and no traffic detected. If the IP or PPPoE session is dropped for any other reason, the light is turned off. The light will turn red when it attempts to reconnect and DHCP or PPPoE fails.

Chapter 3 Web User Interface

This section describes how to access the device via the web user interface (WUI) using an Internet browser such as Internet Explorer (version 5.0 and later).

3.1 Default Settings

The factory default settings of this device are summarized below.

- LAN IP address: 192.168.1.1
- LAN subnet mask: 255.255.255.0
- Administrative access (username: **root**, password: **12345**)
- WLAN access: **enabled**

Technical Note

During power on, the device initializes all settings to default values. It will then read the configuration profile from the permanent storage section of flash memory. The default attributes are overwritten when identical attributes with different values are configured. The configuration profile in permanent storage can be created via the web user interface or telnet user interface, or other management protocols. The factory default configuration can be restored either by pushing the reset button for more than ten seconds until the power indicates LED blinking or by clicking the Restore Default Configuration option in the Restore Settings screen.

3.2 IP Configuration


DHCP MODE

When the VR-3071 powers up, the onboard DHCP server will switch on. Basically, the DHCP server issues and reserves IP addresses for LAN devices, such as your PC.

To obtain an IP address from the DCHP server, follow the steps provided below.

NOTE: The following procedure assumes you are running Windows. However, the general steps involved are similar for most operating systems (OS). Check your OS support documentation for further details.

- STEP 1:** From the Network Connections window, open Local Area Connection (*You may also access this screen by double-clicking the Local Area Connection icon on your taskbar*). Click the **Properties** button.
- STEP 2:** Select Internet Protocol (TCP/IP) **and click the** Properties button.
- STEP 3:** Select Obtain an IP address automatically as shown below.

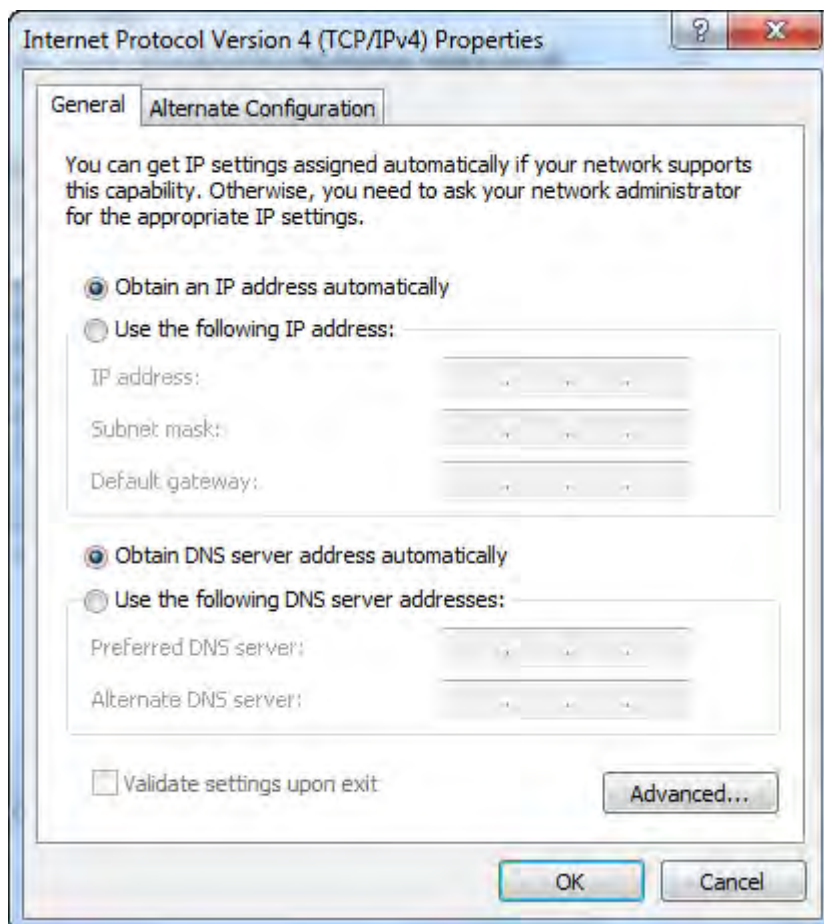

- STEP 4:** Click **OK** to submit these settings.

If you experience difficulty with DHCP mode, you can try static IP mode instead.

STATIC IP MODE

In static IP mode, you assign IP settings to your PC manually.


Follow these steps to configure your PC IP address to use subnet 192.168.1.x.

NOTE: The following procedure assumes you are running Windows. However, the general steps involved are similar for most operating systems (OS). Check your OS support documentation for further details.

STEP 1: From the Network Connections window, open Local Area Connection (*You may also access this screen by double-clicking the Local Area Connection icon on your taskbar*). Click the **Properties** button.

STEP 2: Select Internet Protocol (TCP/IP) **and click the Properties** button.

STEP 3: Change the IP address to the 192.168.1.x (1 < x < 255) subnet with subnet mask of 255.255.255.0. The screen should now display as shown below.

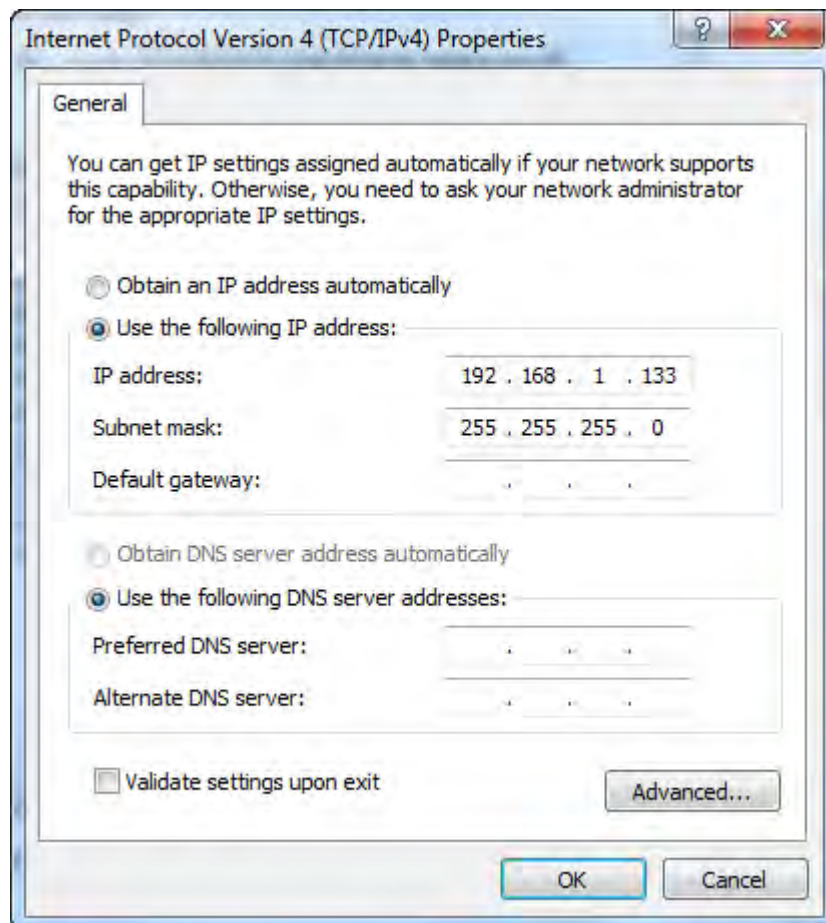

STEP 4: Click **OK** to submit these settings.

3.3 Login Procedure

Perform the following steps to login to the web user interface.

NOTE: The default settings can be found in section [3.1 Default Settings](#).

STEP 1: Start the Internet browser and enter the default IP address for the device in the Web address field. For example, if the default IP address is 192.168.1.1, type <http://192.168.1.1>.

NOTE: For local administration (i.e. LAN access), the PC running the browser must be attached to the Ethernet, and not necessarily to the device. For remote access (i.e. WAN), use the IP address shown on the [Device Information](#) screen and login with remote username and password.

STEP 2: A dialog box will appear, such as the one below. Enter the default username and password, as defined in section [3.1 Default Settings](#).



Click **OK** to continue.

NOTE: The login password can be changed later (see section [8.6.1 Accounts](#)).

STEP 3: After successfully logging in for the first time, you will reach this screen.

The screenshot displays the COMTREND web interface with the following sections:

- Navigation Icons:** Device Info, Basic Setup, Advanced Setup, Diagnostics, Management, Logout.
- Summary:** A vertical list of menu items including WAN, Statistics, Route, ARP, DHCP, NAT Session, IGMP Info, CPU & Memory, Network Map, and Wireless.
- Device:**

Model	VR-3071
Board ID	631781R-1851AX1
Serial Number	19A3071UXXF-AN000095
Firmware Version	BQ11-502CTU-C01_R05.A2pv6L046n.d27
Bootloader (CFE) Version	1.0.38-163.231-1
Up Time	47 secs
- LAN:**
 - Port status: ETH1 (Down), ETH2 (Down), ETH3 (Down), ETH4 (100 FD).
 - Configuration table:

LAN IPv4 Address	192.168.1.1
LAN Subnet Mask	255.255.255.0
LAN MAC Address	1c:64:99:23:8c:99
DHCP Server	Enabled
- Wireless:**
 - 2.4GHz Interface:**

Driver Version	17.10.99.1301
Primary SSID	Comtrend8C99_2.4GHz
Status	Enabled
Channel	6
Secure	Secure
Primary Encryption	WPA2-PSK TKIP+AES
Primary Passphrase/Key	***** <input type="button" value="Show"/>
 - 5GHz Interface:**

Driver Version	17.10.99.1301
Primary SSID	Comtrend8C99_5GHz
Status	Enabled
Channel	116
Secure	Secure
Primary Encryption	WPA2-PSK TKIP+AES
Primary Passphrase/Key	***** <input type="button" value="Show"/>
- WAN:**
 - Status: DOWN
 - Configuration table:

Default Gateway	
Primary DNS Server	0.0.0.0
Secondary DNS Server	0.0.0.0

You can also reach this page by clicking on the following icon located at the top of the screen.



Chapter 4 Device Information

You can reach this page by clicking on the following icon located at the top of the screen.



The web user interface window is divided into two frames, the main menu (on the left) and the display screen (on the right). The main menu has several options and selecting each of these options opens a submenu with more selections.

NOTE: The menu items shown are based upon the configured connection(s) and user account privileges. For example, user account has limited access to configuration modification.

Device Info is the first selection on the main menu so it will be discussed first. Subsequent chapters will introduce the other main menu options in sequence.

The Device Info Summary screen displays at startup.

Device Info

Basic Setup

Advanced Setup

Diagnostics

Management

Logout

Summary

WAN

Statistics

Route

ARP

DHCP

NAT Session

IGMP Info

CPU & Memory

Network Map

Wireless

Device

Model	VR-3071
Board ID	63178HR-1851AX1
Serial Number	19A3071UXXF-AN000095
Firmware Version	BQ11-502CTU-C01_R05.A2pv9L046n.d27
Bootloader (CFE) Version	1.0.39-163.231-1
Up Time	47 secs

Wireless

2.4GHz Interface	
Driver Version	17.10.99.1301
Primary SSID	Comtrend8C99_2.4GHz
Status	Enabled
Channel	6
	Secure
Primary Encryption	WPA2-PSK TKIP+AES
Primary Passphrase/Key	***** <input type="button" value="Show"/>
5GHz Interface	
Driver Version	17.10.99.1301
Primary SSID	Comtrend8C99_5GHz
Status	Enabled
Channel	116
	Secure
Primary Encryption	WPA2-PSK TKIP+AES
Primary Passphrase/Key	***** <input type="button" value="Show"/>

LAN

Down
ETH1

Down
ETH2

Down
ETH3

100 FD
ETH4

LAN IPv4 Address	192.168.1.1
LAN Subnet Mask	255.255.255.0
LAN MAC Address	1c:64:99:23:8c:99
DHCP Server	Enabled

WAN

DOWN

Default Gateway	
Primary DNS Server	0.0.0.0
Secondary DNS Server	0.0.0.0

This screen shows hardware, software, IP settings and other related information.

23

Leading the **Communication Trend**

4.1 WAN

Select WAN from the Device Info submenu to display the configured PVC(s).



Refresh – Click this button to refresh the screen.

DHCP Release – Click this button to release the IP through IPoE service.

DHCP Renew - Click this button to refresh an IP through IPoE service.

Item	Description
Interface	Name of the interface for WAN
Description	Name of the WAN connection
Type	Shows the connection type
VlanMuxId	Shows 802.1Q VLAN ID
IPv6	Shows WAN IPv6 status
Igmp Pxy	Shows Internet Group Management Protocol (IGMP) proxy status
Igmp Src Enbl	Shows the status of WAN interface used as IGMP source
MLD Pxy	Shows Multicast Listener Discovery (MLD) proxy status
MLD Src Enbl	Shows the status of WAN interface used as MLD source
NAT	Shows Network Address Translation (NAT) status
Firewall	Shows the status of Firewall

IPv4 Status	Lists the status of IPv4 connection if WAN enabled IPv4
IPv4 Address	Shows WAN IPv4 address
PPP connect/disconnect	Shows the PPP connection status
IPv6 Status	Lists the status of IPv6 connection if WAN enabled IPv6
IPv6 Address	Shows WAN IPv6 address

For your reference, if Manual Mode is enabled in PPP service as shown here.

Fixed MTU

MTU:

Enable PPP Manual Mode

Enable PPP Debug Mode

Bridge PPPoE Frames Between WAN and Local Ports

IGMP Multicast

Enable IGMP Multicast Proxy

Enable IGMP Multicast Source

Manual PPP connect/disconnect option will become available on the WAN Info page (as shown here).

COMTREND

Device Info

Basic Setup

Advanced Setup

Diagnostics

Management

Logout

Summary

WAN

Statistics

Route

ARP

DHCP

NAT Session

WAN Info

Interface	Description	Type	VlanMuxId	IPv6	Igmp Pxy	Igmp Src Enbl	MLD Pxy	MLD Src Enbl	NAT	Firewall	IPv4 Status	IPv4 Address	PPP connect/disconnect	IPv6 Status	IPv6 Address
ppp0.1	cpe-iptnf-2	PPPoE	Disabled	Disabled	Disabled	Disabled	Disabled	Disabled	Enabled	Disabled	LowerLayerDown		<input type="button" value="Connect"/>	ServiceDown	

4.2 Statistics

This selection provides LAN, WAN, ATM and xDSL statistics.

NOTE: These screens are updated automatically every 15 seconds.
Click **Reset Statistics** to perform a manual update.

4.2.1 LAN Statistics

This screen shows data traffic statistics for each LAN interface.

COMTREND

Device Info Basic Setup Advanced Setup Diagnostics Management Logout

Summary
WAN
Statistics
LAN
WAN Service
xTM
xDSL
Route
ARP
DHCP
NAT Session
IGMP Info

Statistics -- LAN

Interface	Received								Transmitted							
	Total				Multicast		Unicast	Broadcast	Total				Multicast		Unicast	Broadcast
	Bytes	Pkts	Errs	Drops	Bytes	Pkts	Pkts	Pkts	Bytes	Pkts	Errs	Drops	Bytes	Pkts	Pkts	Pkts
ETH1	51951	473	0	4	0	95	204	174	235351	374	0	0	0	106	265	3
ETH2	220	3	0	0	0	2	0	1	1122	11	0	0	0	10	0	1
ETH3	156568	1275	0	4	0	154	988	133	624565	1271	0	0	0	142	1127	2
ETH4	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0
ETHWAN	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0
Comtrend8C99_2.4GHz	0	0	0	0	0	0	0	0	95169	604	0	0	0	0	604	0
Comtrend8C99_5GHz	0	0	0	16	0	0	0	0	79393	580	0	59	0	580	580	0

Reset Statistics

Item	Description
Interface	LAN interface(s)
Received/Transmitted: - Bytes - Pkts - Errs - Drops	Number of Bytes Number of Packets Number of packets with errors Number of dropped packets

4.2.2 WAN Service

This screen shows data traffic statistics for each WAN interface.

COMTREND

Device Info Basic Setup Advanced Setup Diagnostics Management Logout

Summary
WAN
 Statistics
 LAN
[WAN Service](#)
 xTM
 xDSL

Statistics -- WAN


Interface	Description	Received								Transmitted																							
		Total				Multicast				Unicast				Broadcast				Total				Multicast				Unicast				Broadcast			
		Bytes	Pkts	Errs	Drops	Bytes	Pkts	Pkts	Pkts	Bytes	Pkts	Errs	Drops	Bytes	Pkts	Errs	Drops	Bytes	Pkts	Pkts	Pkts	Bytes	Pkts	Errs	Drops	Bytes	Pkts	Pkts	Pkts				

Reset Statistics

Item	Description
Interface	WAN interfaces
Description	WAN service label
Received/Transmitted - Bytes	Number of Bytes
- Pkts	Number of Packets
- Errs	Number of packets with errors
- Drops	Number of dropped packets

4.2.3 XTM Statistics

The following figure shows ATM (Asynchronous Transfer Mode)/PTM (Packet Transfer Mode) statistics.

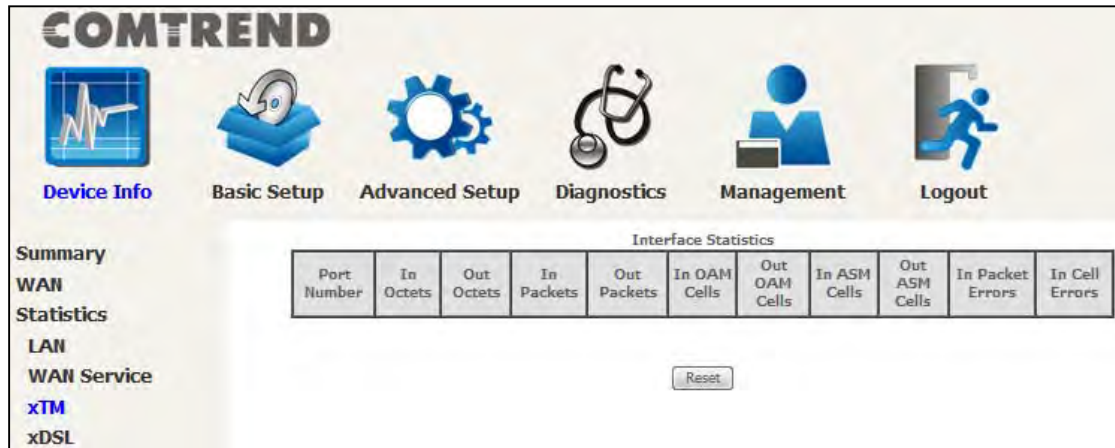

XTM Interface Statistics

Item	Description
Port Number	ATM PORT (0-1)
In Octets	Number of octets received over the interface
Out Octets	Number of octets transmitted over the interface
In Packets	Number of packets received over the interface
Out Packets	Number of packets transmitted over the interface
In OAM Cells	Number of OAM Cells received over the interface
Out OAM Cells	Number of OAM Cells transmitted over the interface
In ASM Cells	Number of ASM Cells received over the interface
Out ASM Cells	Number of ASM Cells transmitted over the interface
In Packet Errors	Number of packets in Error
In Cell Errors	Number of cells in Error

4.2.4 xDSL Statistics

The xDSL Statistics screen displays information corresponding to the xDSL type. The two examples below (VDSL & ADSL) show this variation.

VDSL2

COMTREND

Device Info Basic Setup Advanced Setup Diagnostics Management Logout


Statistics -- xDSL


Summary
WAN
Statistics
LAN
WAN Service
xTM
xDSL
Route
ARP
DHCP
NAT Session
IGMP Info
CPU & Memory
Network Map
Wireless


Mode:	VDSL2	
Traffic Type:	PTM	
Status:	Up	
Link Power State:	L0	
	Downstream	Upstream
PhyR Status:	Off	Off
Line Coding(Trellis):	On	On
SNR Margin (0.1 dB):	349	384
Attenuation (0.1 dB):	43	0
Output Power (0.1 dBm):	105	-149
Attainable Rate (Kbps):	87459	56514
	Path 0	
	Downstream	Upstream
Rate (Kbps):	29993	1047
B (# of bytes in Mux Data Frame):	31	11
M (# of Mux Data Frames in an RS codeword):	1	4
T (# of Mux Data Frames in an OH sub-frame):	64	48
R (# of redundancy bytes in the RS codeword):	10	10
S (# of data symbols over which the RS code word spans):	0.0339	0.0339
L (# of bits transmitted in each data symbol):	9904	335
D (interleaver depth):	1921	17
I (interleaver block size in bytes):	42	58
N (RS codeword size):	42	58
Delay (msec):	16	5
INP (DMT symbol):	7.50	2.00
OH Frames:	15738369	3036021
OH Frame Errors:	0	0
RS Words:	1748450939	148556587
RS Correctable Errors:	0	0
RS Uncorrectable Errors:	0	0
HEC Errors:	0	0
OCD Errors:	0	0
LCD Errors:	0	0
Total Cells:	2968014265	0
Data Cells:	105397	0
Bit Errors:	0	0
Total ES:	0	0
Total SES:	0	0
Total UAS:	179	179


xDSL BER Test Reset Statistics Draw Graph


ADSL2+






 Device Info


 Basic Setup


 Advanced Setup


 Diagnostics


 Management


 Logout

Statistics -- xDSL

Summary

WAN

Statistics

LAN

WAN Service

xTM

xDSL

Route

ARP

DHCP

NAT Session

IGMP Info

CPU & Memory

Network Map

Wireless

Mode:	ADSL 2plus	
Traffic Type:	ATM	
Status:	Up	
Link Power State:	LO	
	Downstream	Upstream
PhyR Status:	Off	Off
Line Coding(Trellis):	On	On
SNR Margin (0.1 dB):	63	69
Attenuation (0.1 dB):	45	0
Output Power (0.1 dBm):	43	94
Attainable Rate (Kbps):	29628	1450
	Path 0	
	Downstream	Upstream
Rate (Kbps):	29623	1387
MSGc (# of bytes in overhead channel message):	51	18
B (# of bytes in Mux Data Frame):	243	111
M (# of Mux Data Frames in FEC Data Frame):	1	2
T (Mux Data Frames over sync bytes):	4	1
R (# of check bytes in FEC Data Frame):	0	8
S (ratio of FEC over PMD Data Frame length):	0.2847	5.5402
L (# of bits in PMD Data Frame):	6854	335
D (interleaver depth):	1	8
Delay (msec):	0	11
INP (DMT symbol):	0.00	0.50
Super Frames:	24768	4778
Super Frame Errors:	0	355
RS Words:	0	81508
RS Correctable Errors:	0	0
RS Uncorrectable Errors:	0	0
HEC Errors:	1155	370
OCD Errors:	0	0
LCD Errors:	0	0
Total Cells:	7918529	353755
Data Cells:	42	0
Bit Errors:	0	0
Total ES:	18	0
Total SES:	18	0
Total UAS:	197	187

Click the **Reset Statistics** button to refresh this screen.

Item	Description
Mode	VDSL, VDSL2
Traffic Type	ATM, PTM
Status	Lists the status of the DSL link
Link Power State	Link output power state
phyR Status	Shows the status of PhyR™ (Physical Layer Re-Transmission) impulse noise protection
Line Coding (Trellis)	Trellis On/Off
SNR Margin (0.1 dB)	Signal to Noise Ratio (SNR) margin
Attenuation (0.1 dB)	Estimate of average loop attenuation in the downstream direction
Output Power (0.1 dBm)	Total upstream output power
Attainable Rate (Kbps)	The sync rate you would obtain
Rate (Kbps)	Current sync rates downstream/upstream

In ADSL2/VDSL mode, the following section is inserted.

Item	Description
MSGc	Number of bytes in overhead channel message
B	Number of bytes in Mux Data Frame
M	Number of Mux Data Frames in a RS codeword
T	Number of Mux Data Frames in an OH sub-frame
R	Number of redundancy bytes in the RS codeword
S	Number of data symbols the RS codeword spans
L	Number of bits transmitted in each data symbol
D	The interleaver depth
I	The interleaver block size in bytes
N	RS codeword size

Delay	The delay in milliseconds (msec)
INP	DMT symbol

Item	Description
Super Frames	Total number of super frames
Super Frame Errors	Number of super frames received with errors
RS Words	Total number of Reed-Solomon code errors
RS Correctable Errors	Total Number of RS with correctable errors
RS Uncorrectable Errors	Total Number of RS words with uncorrectable errors

Item	Description
OH Frames	Total number of OH frames
OH Frame Errors	Number of OH frames received with errors
RS Words	Total number of Reed-Solomon code errors
RS Correctable Errors	Total Number of RS with correctable errors
RS Uncorrectable Errors	Total Number of RS words with uncorrectable errors

Item	Description
HEC Errors	Total Number of Header Error Checksum errors
OCD Errors	Total Number of Out-of-Cell Delineation errors
LCD Errors	Total number of Loss of Cell Delineation
Total Cells	Total number of ATM cells (including idle + data cells)
Data Cells	Total number of ATM data cells
Bit Errors	Total number of bit errors


Item	Description
Total ES	Total Number of Errored Seconds
Total SES	Total Number of Severely Errored Seconds
Total UAS	Total Number of Unavailable Seconds

xDSL BER TEST

Click **xDSL BER Test** on the xDSL Statistics screen to test the Bit Error Rate (BER). A small pop-up window will open after the button is pressed, as shown below.




Click **Start** to start the test or click **Close** to cancel the test. After the BER testing is complete, the pop-up window will display as follows.

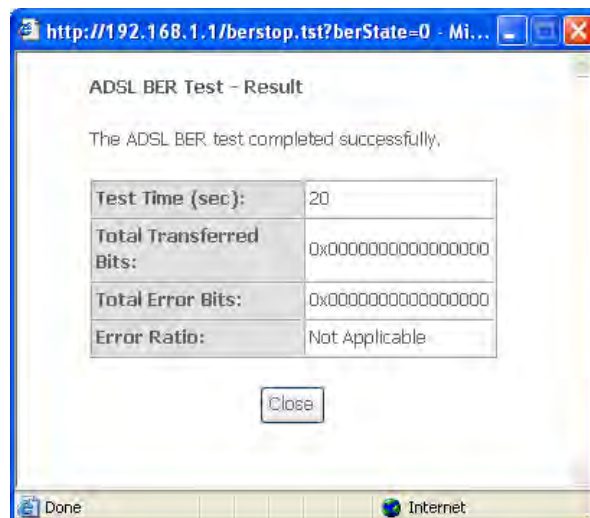

xDSL TONE GRAPH

Click **Draw Graph** on the xDSL Statistics screen and a pop-up window will display the xDSL statistics graph, including SNR, Bits per tone, QLN and Hlog of the xDSL line connection, as shown below.

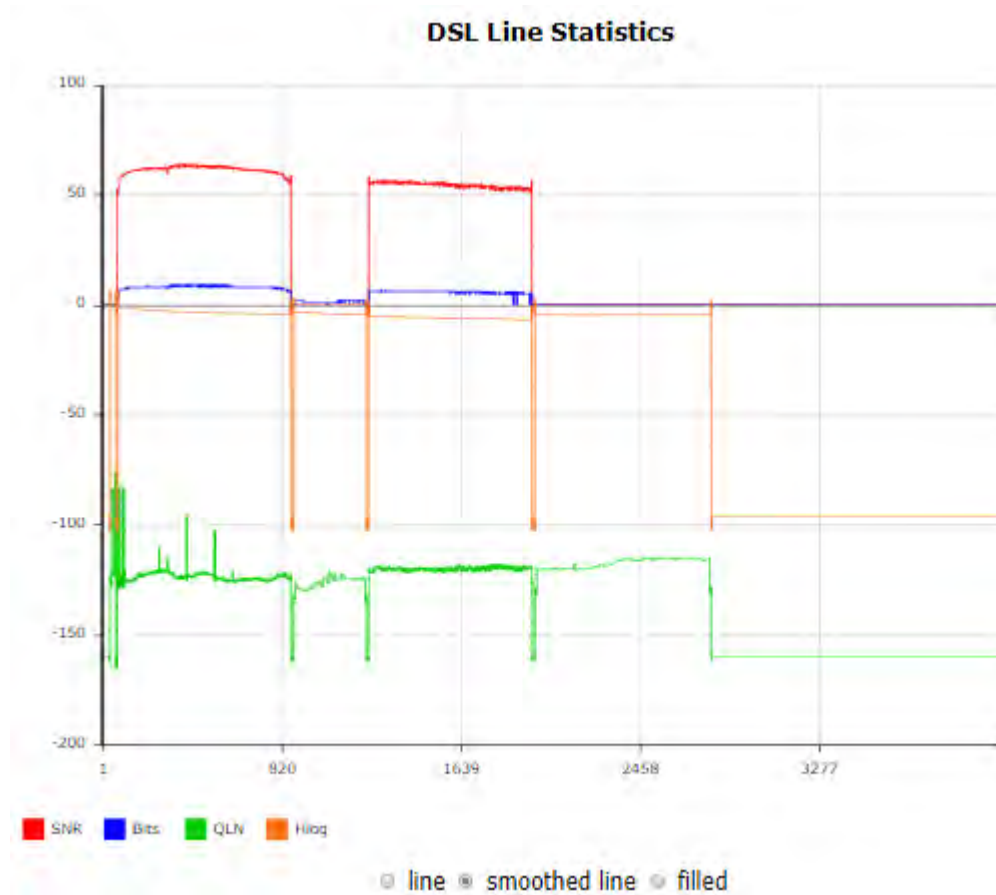

4.3 Route

Choose **Route** to display the routes that the VR-3071 has found.

COMTREND

Device Info Basic Setup Advanced Setup Diagnostics Management Logout

Summary
WAN
Statistics
Route
ARP
DHCP

Device Info - Route

Flags: U - up, ! - reject, G - gateway, H - host, R - reinstate
D - dynamic (redirect), M - modified (redirect).

Destination	Gateway	Subnet Mask	Flag	Metric	Service	Interface
192.168.1.0	0.0.0.0	255.255.255.0	U	0	cpe-ipintf-1	br0
239.0.0.0	0.0.0.0	255.0.0.0	U	0	cpe-ipintf-1	br0

Item	Description
Destination	Destination network or destination host
Gateway	Next hop IP address
Subnet Mask	Subnet Mask of Destination
Flag	U: route is up !: reject route G: use gateway H: target is a host R: reinstate route for dynamic routing D: dynamically installed by daemon or redirect M: modified from routing daemon or redirect
Metric	The 'distance' to the target (usually counted in hops). It is not used by recent kernels, but may be needed by routing daemons.
Service	Shows the WAN connection label
Interface	Shows connection interfaces

4.4 ARP

Click **ARP** to display the ARP information.

The screenshot shows the COMTREND web interface. At the top, there is a navigation menu with icons for Device Info, Basic Setup, Advanced Setup, Diagnostics, Management, and Logout. Below the menu, there is a sidebar with links for Summary, WAN, Statistics, Route, and ARP. The main content area displays 'Device Info -- ARP' and a table with the following data:

IP address	Flags	HW Address	Device
192.168.1.6	Complete	00:50:ba:24:29:bd	br0

Item	Description
IP address	Shows IP address of host PC
Flags	Complete, Incomplete, Permanent, or Publish
HW Address	Shows the MAC address of host PC
Device	Shows the connection interface

4.5 DHCP

Click **DHCP** to display all DHCP Leases.



Item	Description
Hostname	Shows the device/host/PC network name
MAC Address	Shows the Ethernet MAC address of the device/host/PC
IP Address	Shows IP address of device/host/PC
Expires In	Shows how much time is left for each DHCP Lease

4.6 NAT Session

This page displays all NAT connection session including both UPD/TCP protocols passing through the device.

Click the “Show All” button to display the following.

Source IP	Source Port	Destination IP	Destination Port	Protocol	Timeout
192.168.1.2	50684	192.168.1.1	80	tcp	83
127.0.0.1	45000	127.0.0.1	45032	udp	27
192.168.1.2	60311	192.168.1.1	53	udp	13
192.168.1.2	50683	192.168.1.1	80	tcp	83
192.168.1.2	53727	192.168.1.1	53	udp	28
192.168.1.2	50690	192.168.1.1	80	tcp	86399
192.168.1.2	50685	192.168.1.1	80	tcp	83

Item	Description
Source IP	The source IP from which the NAT session is established
Source Port	The source port from which the NAT session is established
Destination IP	The IP which the NAT session was connected to
Destination Port	The port which the NAT session was connected to
Protocol	The Protocol used in establishing the particular NAT session
Timeout	The time remaining for the TCP/UDP connection to be active


4.7 IGMP Info

Click **IGMP Info** to display the list of IGMP entries broadcasting through the IGMP proxy enabled WAN connection.

Item	Description
Interface	The Source interface from which the IGMP report was received
WAN	The WAN interface from which the multicast traffic is received
Groups	The destination IGMP group address
Member	The Source IP from which the IGMP report was received
Timeout	The time remaining before the IGMP report expires
Last Report Time	The time of the last received IGMP report
Total Time(sec)	Total
Total Joins	Total IGMP join packets received for this IGMP address for this client
Total Leaves	Total IGMP leave packets received for this IGMP address for this client

4.8 CPU & Memory

Displays the system performance graphs. Shows the current loading of the CPU and memory usage with dynamic updates.

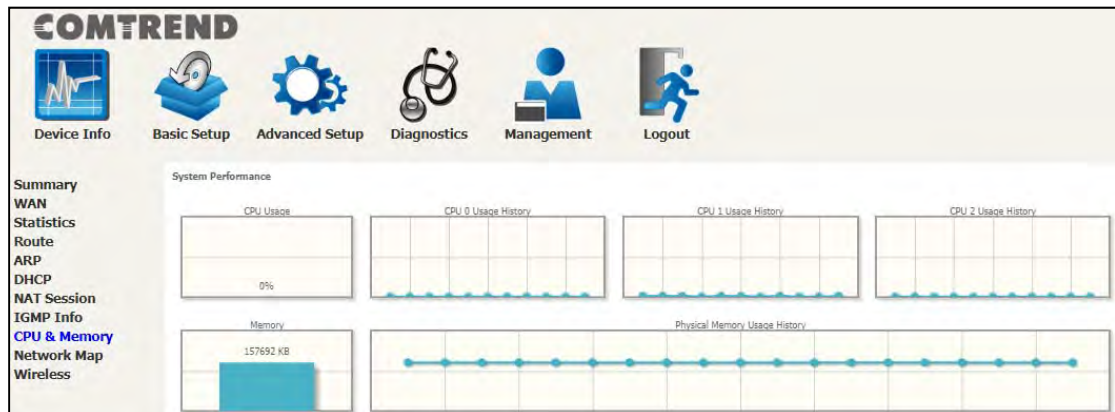

4.9 Network Map

The network map is a graphical representation of router's wan status and LAN devices.

The screenshot displays the COMTREND web interface. At the top, the COMTREND logo is visible. Below it, a navigation bar contains six icons with corresponding labels: Device Info (line graph), Basic Setup (floppy disk), Advanced Setup (gears), Diagnostics (stethoscope), Management (person with laptop), and Logout (person running). On the left side, a sidebar menu lists various system status and configuration options: Summary, WAN, Statistics, Route, ARP, DHCP, NAT Session, IGMP Info, CPU & Memory, **Network Map** (highlighted in blue), and Wireless. The main content area shows a network diagram. A globe icon labeled 'WAN Cable' is connected to a router icon. A red 'X' is placed on the line between the WAN Cable and the router, indicating a connection issue. The router is connected to a computer icon, which is labeled with the IP address '192.168.1.6 (you)'.

4.10 Wireless

4.10.1 Station Info

This page shows authenticated wireless stations and their status.

COMTREND

Device Info Basic Setup Advanced Setup Diagnostics Management Logout

Summary
WAN
Statistics
Route
ARP
DHCP
NAT Session
IGMP Info
CPU & Memory
Network Map
Wireless
Station Info
Wifi Insight

Station Info
This page allows you to configure the Virtual interfaces for each Physical interface.

Wireless Interface: Comtrend8C99_2.4GHz(1C:64:99:23:8C:9A) ▾
BSS-MAC (SSID): 1C:64:99:23:8C:9A (Comtrend8C99_2.4GHz enabled) ▾

Authenticated Stations:

MAC Address	Association Time	Authorized	WMM Link	Power Save	APSD Default
-------------	------------------	------------	----------	------------	--------------

Consult the table below for descriptions of each column heading.

Item	Description
Wireless Interface	Lists the 5GHz/2.4GHz interface that the station connects to
BSS-MAC (SSID)	Lists which SSID of the modem that the stations connect to
MAC Address	Lists the MAC address of all the stations.
Association Time	Lists all the stations that are associated with the Access Point, along with the amount of time since packets were transferred to and from each station. If a station is idle for too long, it is removed from this list.
Authorized	Lists those devices with authorized access
WMM Link	Lists those devices that utilize WMM
Power Save	Lists those devices that utilize the Power Save Feature
APSD Default	Lists those devices that utilize the Automatic Power Save Delivery Feature

4.10.2 WiFi Insight

This page allows you to configure the WiFi Insight system. The WiFi Insight system allows the wireless interface to collect beacon data from nearby devices and analyze traffic on the connected stations. This data collection requires memory storage and therefore needs to be configured prior to use. To begin, click on the “Start Data Collection” button if no change is needed.

COMTREND

Device Info Basic Setup Advanced Setup Diagnostics Management Logout

Summary
WAN
Statistics
Route
ARP
DHCP
NAT Session
IGMP Info
CPU & Memory
Network Map
Wireless
Station Info
Wifi Insight
Site Survey
Channel Statistics
Metrics
Configure

Configure
In this page you will be able to configure the WiFi Insight system

Sample Interval
 5 Second
 10 Second
 15 Second
 20 Second

Start/Stop Data Collection

 Start collecting data every
 Sunday Monday Tuesday Wednesday Thursday Friday Saturday
 From To

Database Size
 Database Size MB
(Please note that, for example, 2 STA's connected using a 5 seconds sample interval run for 1 hour will occupy approximately 1.30 MB of database)
 Once Database size reaches maximum limit Overwrite Older Data Stop Datacollection

Counters

<input checked="" type="checkbox"/> Channel Statistics	<input checked="" type="checkbox"/> Packet Retried
<input checked="" type="checkbox"/> Chanim Statistics	<input checked="" type="checkbox"/> Queue Utilization
<input checked="" type="checkbox"/> Rx CRS Glitches	<input checked="" type="checkbox"/> Queue Length Per Precedence
<input checked="" type="checkbox"/> Bad PLCP	<input checked="" type="checkbox"/> Data Throughput
<input checked="" type="checkbox"/> Bad FCS	<input checked="" type="checkbox"/> Physical Rate
<input checked="" type="checkbox"/> Packet Requested	<input checked="" type="checkbox"/> RTS Fail
<input checked="" type="checkbox"/> Packet Stored	<input checked="" type="checkbox"/> Retry Drop
<input checked="" type="checkbox"/> Packet Dropped	<input checked="" type="checkbox"/> PS Retry
	<input checked="" type="checkbox"/> Acked

Export Database

4.10.2.1 Site Survey

The graph displays wireless APs found in your neighborhood by channel collected under the WiFi insight system. Select the wireless interface, channel, bandwidth to check the different display if desired.

2.4GHz



5GHz

COMTREND

[Device Info](#)
[Basic Setup](#)
[Advanced Setup](#)
[Diagnostics](#)
[Management](#)
[Logout](#)

[Summary](#)
[WAN](#)
[Statistics](#)
[Route](#)
[ARP](#)
[DHCP](#)
[NAT Session](#)
[IGMP Info](#)
[CPU & Memory](#)
[Network Map](#)
[Wireless](#)
[Station Info](#)
[Wifi Insight](#)
[Site Survey](#)
[Channel Statistics](#)
[Metrics](#)
[Configure](#)

Site Survey
In this page you will see all the AP's around.

5 GHz - Comtrend8C99_5GHz | Select Channel | Select Bandwidth | **Scan**

AP's Around

Network Name	Network Address	Signal [dBm]	SNR [dB]	Bandwidth [MHz]	Center Channel	Control Channel	Max PHY Rate [Mbps]	802.11	Security
Comtrend8C99_5GHz	1C:64:99:23:8C:9B	0	88	80	122	116	1733	an ac	TKIP AES, WPA-PSK, WPA2-PSK

4.10.2.2 Channel Statistics

This page allows you to see the WiFi and Non WiFi interference, and also the available capacity. This page is broken down into individual parts below.

Click on the drop-down menu to select 2.4GHz or 5GHz interface.

2.4GHz

Channel Statistics

In this page you will see the Wi-Fi and Non Wi-Fi Interference also Available Capacity

2.4 GHz - Comtrend0001_2.4GHz ▾


Current Channel :1
 Current Channel BandWidth:20 MHz
 Current Available Capacity :74%




Shows the bandwidth that is available for use in each channel.



Shows interference level in each channel.

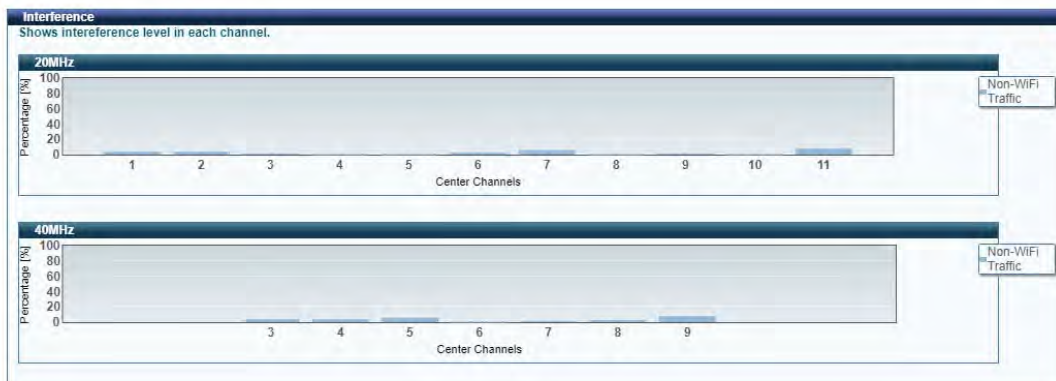

Shows the highest RSSI on each adjacent channel. Adjacent AP and associated stations are displayed for checking interference on those channels.

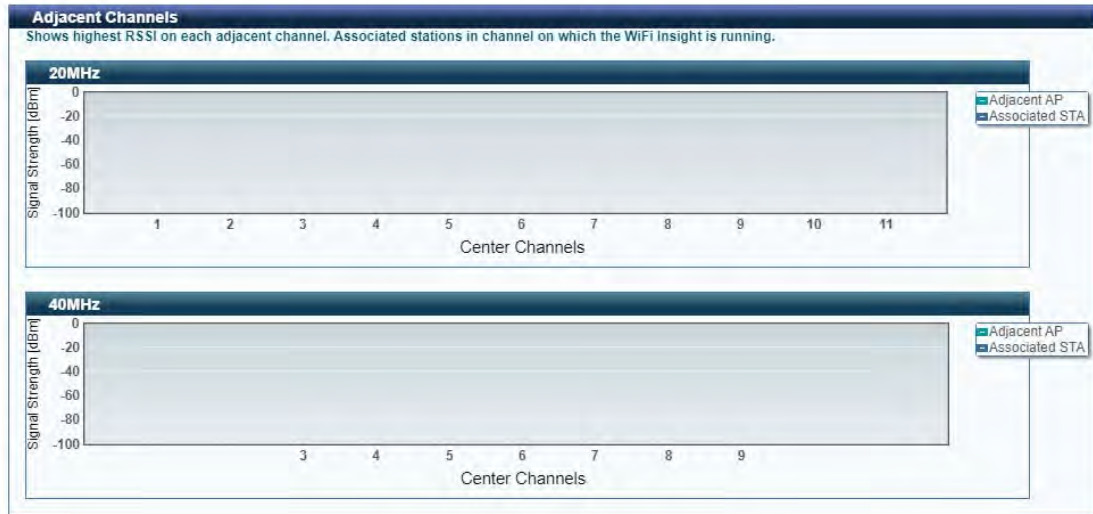

5 GHz

Channel Statistics
 In this page you will see the Wi-Fi and Non Wi-Fi Interference also Available Capacity

5 GHz - BrcmAP00000000


Current Channel :104
 Current Channel BandWidth:20 MHz
 Current Available Capacity :100%

Associated Station's
 Shows stations associated with AP.


Shows the bandwidth that is available for use in each channel.




Shows interference level in each channel.

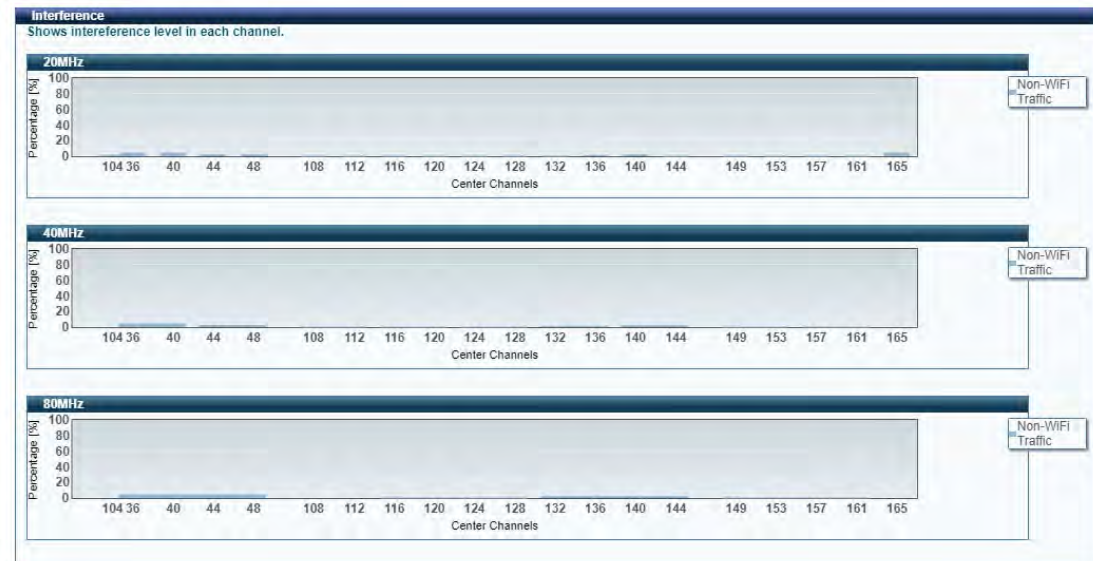

Shows the highest RSSI on each adjacent channel. Adjacent AP and associated stations are displayed for checking interference on those channels.

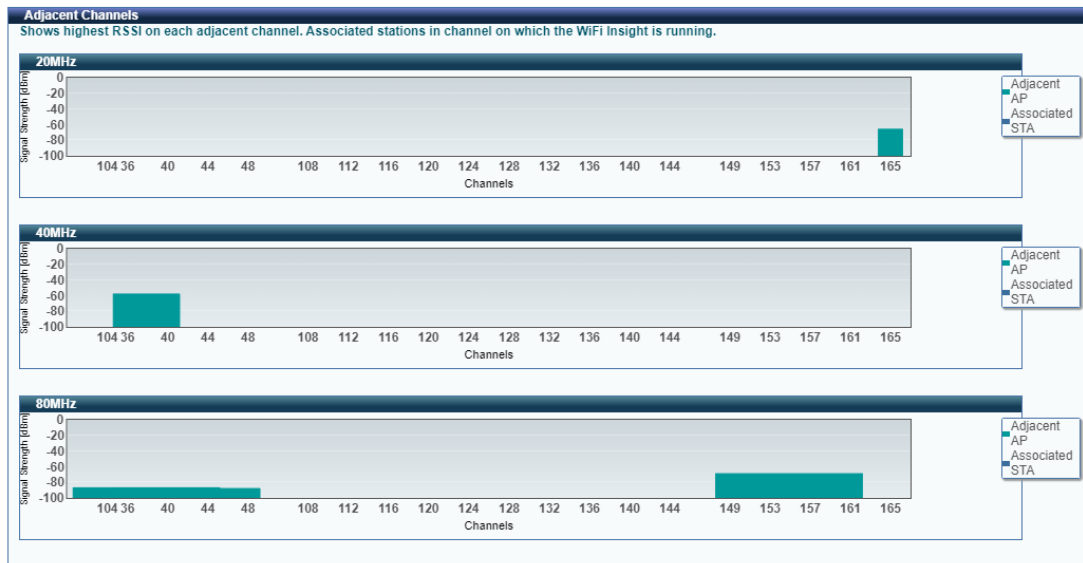

Shows the channel distribution and the possible interference caused for each AP.

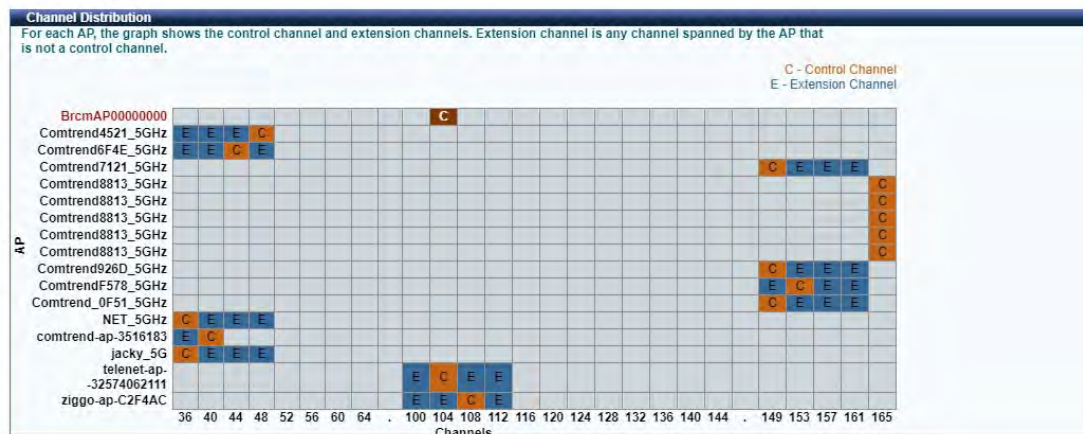

4.10.2.3 Metrics (Advanced Troubleshooting)

In this page you will see most of the counters like AMPDU(if available), Glitch, Chanim and Packet Queue Statistics. This page is broken down into individual parts below.




Click on the drop-down menu to select 2.4GHz or 5GHz interface.

Shows the rx glitch counters, bad frame check sequence counters received from air over time.



Select the counter of interest to monitor the statistics received over time in the chanim statistics graph.

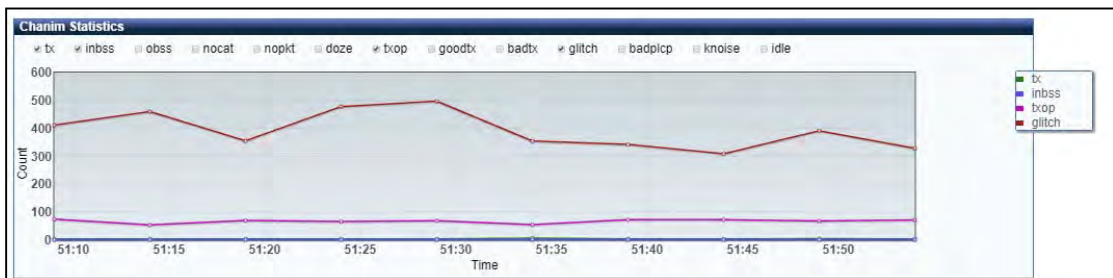

List the associated station to the wireless interface.

The screenshot displays a web interface titled "Associated Station's". At the top, it instructs the user to "Click on station's to see the Packet Queue Statistics". A central box contains the following information: SSID : Comtrend0001_2.4GHz, BSSID : 02:10:18:01:00:03, and Channel : 1. Below this text is an icon of a blue wireless router with green signal waves. A table header is visible at the bottom of the interface, with columns labeled "SR.", "MAC", "RSSI [dBm]", and "PHY Rate [Mbps]".

4.10.2.4 Configure

This page allows you to configure the WiFi insight system.

Sample Interval

Select the desired time interval to collect sampling data with the WiFi insight system.

Start/Stop Data Collection

Start/Stop the data collection process.

Database Size

Define the dedicated database size to be used for the WiFi insight system.

Counters

Define the counters that would be collected by the WiFi insight system.

Export Database

Export and save the collected database file.

Chapter 5 Basic Setup

You can reach this page by clicking on the following icon located at the top of the screen.



This will bring you to the following screen.

COMTREND

Device Info
 Basic Setup
 Advanced Setup
 Diagnostics
 Management
 Logout

WAN Setup
NAT
LAN
Parental Control
Home Networking
Wireless

LAN

Down ETH1
 Down ETH2
 Down ETH3
 100 FD ETH4

LAN IPv4 Address	192.168.1.1
LAN Subnet Mask	255.255.255.0
LAN MAC Address	1c64:99:23:8c99
DHCP Server	Enabled

WAN

Down

Default Gateway	
Primary DNS Server	0.0.0.0
Secondary DNS Server	0.0.0.0

Wireless

2.4GHz Interface	
Driver Version	17.10.99.1301
Primary SSID	Comtrend8C99_2.4GHz
Status	Enabled
Channel	1
	Secure
Primary Encryption	WPA2-PSK TKIP+AES
Primary Passphrase/Key	***** <input type="button" value="Show"/>
5GHz Interface	
Driver Version	17.10.99.1301
Primary SSID	Comtrend8C99_5GHz
Status	Enabled
Channel	161
	Secure
Primary Encryption	WPA2-PSK TKIP+AES
Primary Passphrase/Key	***** <input type="button" value="Show"/>

5.1 Wan Setup

Click WAN Setup on the on the left of your screen.
Add or remove ATM, PTM and ETH WAN interface connections here.

COMTREND

Device Info Basic Setup Advanced Setup Diagnostics Management Logout

WAN Setup
NAT
LAN
Parental Control
Home Networking
Wireless

Step 1: Layer 2 Interface

Select new interface to add: ATM Interface

DSL ATM Interface Configuration

Interface	Vpi	Vci	DSL Latency	Category	Peak Cell Rate(cells/s)	Sustainable Cell Rate(cells/s)	Max Burst Size(bytes)	Link Type	Conn Mode	IP QoS	Remove
DSL PTM Interface Configuration											
Interface	DSL Latency	PTM Priority	Conn Mode	IP QoS	Remove						
ETH WAN Interface Configuration											
Interface/(Name)	Connection Mode	Remove									

Step 2: Wide Area Network (WAN) Service Setup

Interface	Description	Type	Vlan8021p	VlanMuxId	VlanTpid	Igmp Proxy	Igmp Source	NAT	Firewall	IPv6	Mld Proxy	Mld Source	Manual Mode	Remove	Edit
<input type="button" value="Add"/> <input type="button" value="Remove"/>															

Click **Add** to create a new Layer 2 Interface (see [Appendix F - Connection Setup](#)).

To remove a connection, click the **Remove** button.

5.1.1 WAN Service Setup

This screen allows for the configuration of WAN interfaces.

Interface	Description	Type	Vlan8021p	VlanMuxId	VlanTpid	Igmp Proxy	Igmp Source	NAT	Firewall	IPv6	Mld Proxy	Mld Source	Manual Mode	Remove	Edit
ppp0.1	cpe-iptnf-2	PPPoE	N/A	N/A	N/A	Disabled	Disabled	Enabled	Disabled	Disabled	Disabled	Disabled	Disabled	<input type="checkbox"/>	<input type="button" value="Edit"/>

Click the **Add** button to create a new connection. For connections on ATM or PTM or ETH WAN interfaces see [Appendix F - Connection Setup](#).

To remove a connection, select its Remove column radio button and click **Remove**.

Interface	Description	Type	Vlan8021p	VlanMuxId	VlanTpid	Igmp Proxy	Igmp Source	NAT	Firewall	IPv6	Mld Proxy	Mld Source	Manual Mode	Remove	Edit
ppp0.1	cpe-iptnf-2	PPPoE	N/A	N/A	N/A	Disabled	Disabled	Enabled	Disabled	Disabled	Disabled	Disabled	Disabled	<input checked="" type="checkbox"/>	<input type="button" value="Edit"/>

Item	Description
Interface	Name of the interface for WAN
Description	Name of the WAN connection
Type	Shows the connection type
Vlan8021p	VLAN ID is used for VLAN Tagging (IEEE 802.1Q)
VlanMuxId	Shows 802.1Q VLAN ID
VlanTpid	VLAN Tag Protocol Identifier
IGMP Proxy	Shows Internet Group Management Protocol (IGMP) Proxy status
IGMP Source	Shows the status of WAN interface used as IGMP source
NAT	Shows Network Address Translation (NAT) status
Firewall	Shows the Security status
IPv6	Shows the WAN IPv6 address
MLD Proxy	Shows Multicast Listener Discovery (MLD) Proxy status
Mld Source	Shows the status of WAN interface used as MLD source
Manual Mode	Indicates the status of the PPP manual connect/disconnect button
Remove	Select interfaces to remove
Edit	Click the Edit button to make changes to the WAN interface

To remove a connection, select its Remove column radio button and click **Remove**.

NOTE: Up to 16 PVC profiles can be configured and saved in flash memory.

5.2 NAT

For NAT features under this section to work, NAT must be enabled in at least one PVC.

5.2.1 Virtual Servers

Virtual Servers allow you to direct incoming traffic from the WAN side (identified by Protocol and External port) to the internal server with private IP addresses on the LAN side. The Internal port is required only if the external port needs to be converted to a different port number used by the server on the LAN side. A maximum of 32 entries can be configured.

COMTREND

Device Info Basic Setup Advanced Setup Diagnostics Management Logout

WAN Setup
NAT
Virtual Servers
Port Triggering
DMZ Host
LAN
Parental Control

NAT -- Virtual Servers Setup

Virtual Server allows you to direct incoming traffic from WAN side (identified by Protocol and External port) to the Internal server with private IP address on the LAN side. The Internal port is required only if the external port needs to be converted to a different port number used by the server on the LAN side. A maximum 32 entries can be configured.

Add Remove

Server Name	External Port Start	External Port End	Protocol	Internal Port Start	Internal Port End	Server IP Address	WAN Interface	Remove

To add a Virtual Server, click **Add**. The following will be displayed.

COMTREND

Device Info Basic Setup Advanced Setup Diagnostics Management Logout

WAN Setup
NAT
Virtual Servers
Port Triggering
DMZ Host
LAN
Parental Control
Home Networking
Wireless

NAT -- Virtual Servers

Select the service name, and enter the server IP address and click "Apply/Save" to forward IP packets for this service to the specified server. NOTE: The "Internal Port End" cannot be modified directly. Normally, it is set to the same value as "External Port End". However, if you modify "Internal Port Start", then "Internal Port End" will be set to the same value as "Internal Port Start". Remaining number of entries that can be configured:32

Use Interface: All Interface

Service Name: Select One

Custom Service: [Text Input]

Server IP Address: 192.168.1.

Apply/Save

External Port Start	External Port End	Protocol	Internal Port Start	Internal Port End
		TCP		
		TCP		
		TCP		
		TCP		
		TCP		
		TCP		

Apply/Save

Click **Apply/Save** to apply and save the settings.

Consult the table below for field and header descriptions.

Item	Description
Use Interface	Select a WAN interface from the drop-down menu. If you choose All Interface, server rules will be created for all WAN interfaces.
Select a Service Or Custom Service	User should select the service from the list. Or User can enter the name of their choice.
Server IP Address	Enter the IP address for the server.
External Port Start	Enter the starting external port number (when you select Custom Server). When a service is selected, the port ranges are automatically configured.
External Port End	Enter the ending external port number (when you select Custom Server). When a service is selected, the port ranges are automatically configured.
Protocol	TCP, TCP/UDP, or UDP.
Internal Port Start	Enter the internal port starting number (when you select Custom Server). When a service is selected the port ranges are automatically configured
Internal Port End	Enter the internal port ending number (when you select Custom Server). When a service is selected, the port ranges are automatically configured.

5.2.2 Port Triggering

Some applications require that specific ports in the firewall be opened for access by the remote parties. Port Triggers dynamically 'Open Ports' in the firewall when an application on the LAN initiates a TCP/UDP connection to a remote party using the 'Triggering Ports'. The Router allows the remote party from the WAN side to establish new connections back to the application on the LAN side using the 'Open Ports'. A maximum 32 entries can be configured.

COMTREND

Device Info Basic Setup **Advanced Setup** Diagnostics Management Logout

WAN Setup
NAT
 Virtual Servers
Port Triggering
 DMZ Host
LAN
 Parental Control
 Home Networking
 Wireless

NAT -- Port Triggering Setup

Some applications require that specific ports in the Router's firewall be opened for access by the remote parties. Port Trigger dynamically opens up the 'Open Ports' in the firewall when an application on the LAN initiates a TCP/UDP connection to a remote party using the 'Triggering Ports'. The Router allows the remote party from the WAN side to establish new connections back to the application on the LAN side using the 'Open Ports'. A maximum 32 entries can be configured.

Add Remove

Application Name	Trigger				Open				WAN Interface	Remove
	Protocol	Port Range		Protocol	Port Range					
		Start	End		Start	End				

To add a Trigger Port, click **Add**. The following will be displayed.

COMTREND

Device Info Basic Setup **Advanced Setup** Diagnostics Management Logout

WAN Setup
NAT
 Virtual Servers
Port Triggering
 DMZ Host
LAN
 Parental Control
 Home Networking
 Wireless

NAT -- Port Triggering

Some applications such as games, video conferencing, remote access applications and others require that specific ports in the Router's firewall be opened for access by the applications. You can configure the port settings from this screen by selecting an existing application or creating your own (Custom application) and click "Save/Apply" to add it.
 Remaining number of entries that can be configured:32

Use Interface: ppp0.1/ppp0.1

Application Name:
 Select an application: Select One
 Custom application:

Save/Apply

Trigger Port Start	Trigger Port End	Trigger Protocol	Open Port Start	Open Port End	Open Protocol
		TCP			TCP
		TCP			TCP
		TCP			TCP
		TCP			TCP

Save/Apply

Click **Save/Apply** to save and apply the settings.

Consult the table below for field and header descriptions.

Item	Description
Use Interface	Select a WAN interface from the drop-down menu.
Select an Application Or Custom Application	User should select the application from the list. Or User can enter the name of their choice.
Trigger Port Start	Enter the starting trigger port number (when you select custom application). When an application is selected, the port ranges are automatically configured.
Trigger Port End	Enter the ending trigger port number (when you select custom application). When an application is selected, the port ranges are automatically configured.
Trigger Protocol	TCP, TCP/UDP, or UDP.
Open Port Start	Enter the starting open port number (when you select custom application). When an application is selected, the port ranges are automatically configured.
Open Port End	Enter the ending open port number (when you select custom application). When an application is selected, the port ranges are automatically configured.
Open Protocol	TCP, TCP/UDP, or UDP.

5.2.3 DMZ Host

The DSL router will forward IP packets from the WAN that do not belong to any of the applications configured in the Virtual Servers table to the DMZ host computer.




The screenshot shows the COMTREND router's web management interface. At the top, there is a navigation menu with icons and labels for: Device Info, Basic Setup (highlighted in blue), Advanced Setup, Diagnostics, Management, and Logout. Below the navigation menu is a sidebar with a list of menu items: WAN Setup, NAT, Virtual Servers, Port Triggering, DMZ Host (highlighted in blue), LAN, Parental Control, and Home Networking. The main content area is titled "NAT -- DMZ Host" and contains the following text: "The Broadband Router will forward IP packets from the WAN that do not belong to any of the applications configured in the Virtual Servers table to the DMZ host computer." Below this, there are two instructions: "Enter the computer's IP address and click 'Apply' to activate the DMZ host." and "Clear the IP address field and click 'Apply' to deactivate the DMZ host." At the bottom of the main content area, there is a text label "DMZ Host IP Address:" followed by an empty text input field and a "Save/Apply" button.

To **Activate** the DMZ host, enter the DMZ host IP address and click **Save/Apply**.

To **Deactivate** the DMZ host, clear the IP address field and click **Save/Apply**.

5.3 LAN

Configure the LAN interface settings and then click **Apply/Save**.

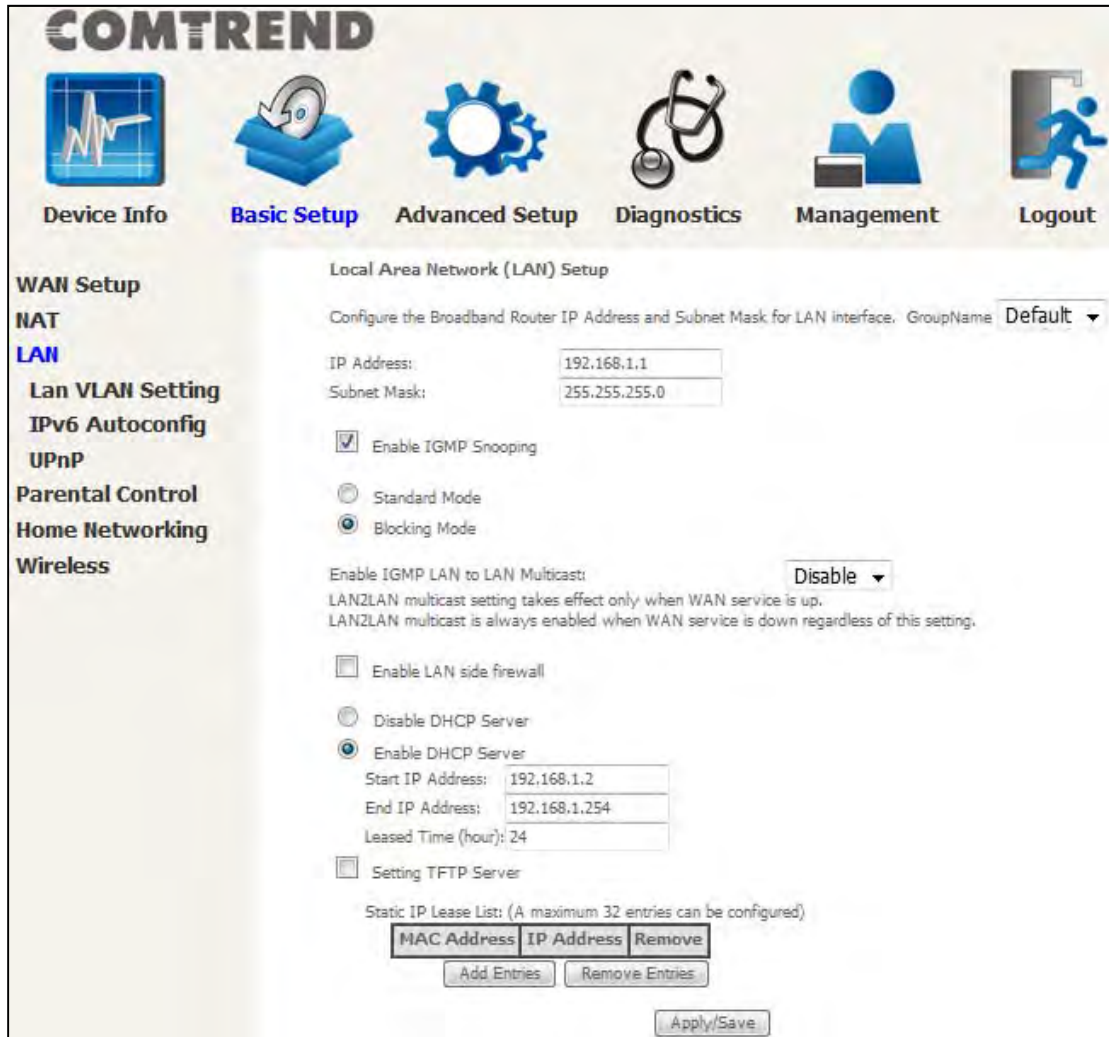

The settings shown above are described below.

GroupName: Select an Interface Group.

1st LAN INTERFACE

IP Address: Enter the IP address for the LAN port.

Subnet Mask: Enter the subnet mask for the LAN port.

Enable IGMP Snooping: Enable by ticking the checkbox .

Standard Mode: In standard mode, multicast traffic will flood to all WDS ports when no client subscribes to a multicast group – even if IGMP snooping is enabled.

Blocking Mode: In blocking mode, the multicast data traffic will be blocked and not flood to all WDS ports when there are no client subscriptions to any multicast group.

Enable IGMP LAN to LAN Multicast: Select Enable from the drop-down menu to allow IGMP LAN to LAN Multicast forwarding.

Enable LAN side firewall: Enable by ticking the checkbox .

DHCP Server: To enable DHCP, select **Enable DHCP server** and enter Start and End IP addresses and the Leased Time. This setting configures the router to automatically assign IP, default gateway and DNS server addresses to every PC on your LAN.

Setting TFTP Server: Enable by ticking the checkbox . Then, input the TFTP server address or an IP address.

Static IP Lease List: A maximum of 32 entries can be configured.



To add an entry, enter MAC address and Static IP and then click **Apply/Save**.

DHCP Static IP Lease

Enter the Mac address and Static IP address then click "Apply/Save".

MAC Address:

IP Address:

To remove an entry, tick the corresponding checkbox in the Remove column and then click the **Remove Entries** button, as shown below.



5.3.1 Lan VLAN Setting

The CPE will tag VLAN on specific LAN port(s) when this feature is used.



Click the **Add** button to display the following.

Vlan Id	Pbits	Remove
<input type="text"/>	<input type="text" value="0"/>	<input type="checkbox"/>

Item	Description
Vlan ID	The VLAN ID to be supported on the LAN port.
pbits	The VLAN priority bit to be supported on the LAN port.
Remove	Tick the checkbox and click the Remove button to delete entries.

5.3.2 LAN IPv6 Autoconfig

Configure the LAN interface settings and then click **Save/Apply**.

The settings shown above are described below.

Static LAN IPv6 Address Configuration

Item	Description
Interface Address (prefix length is required):	Configure static LAN IPv6 address and subnet prefix length

IPv6 LAN Applications

Item	Description
Stateless	Use stateless configuration
Stateful	Use stateful configuration
Start interface ID:	Start of interface ID to be assigned to dhcpv6 client
End interface ID:	End of interface ID to be assigned to dhcpv6 client
Leased Time (hour):	Lease time for dhcpv6 client to use the assigned IP address

Item	Description
Enable RADVD	Enable use of router advertisement daemon
Enable ULA Prefix Advertisement	Allow RADVD to advertise Unique Local Address Prefix
Randomly Generate	Use a Randomly Generated Prefix
Statically Configure Prefix	Specify the prefix to be used
Preferred Life Time (hour)	The preferred life time for this prefix
Valid Life Time (hour)	The valid life time for this prefix
Enable MLD Snooping	Enable/disable IPv6 multicast forward to LAN ports
Standard Mode Blocking Mode	In standard mode, IPv6 multicast traffic will flood to all WDS ports when no client subscribes to a multicast group even if MLD snooping is enabled In blocking mode, IPv6 multicast data traffic will be blocked and not flood to all WDS ports when there are no client subscriptions to any multicast group
Enable MLD LAN To LAN Multicast	Enable/disable IPv6 multicast between LAN ports

5.3.3 UPnP

Select the checkbox provided and click **Apply/Save** to enable UPnP protocol.



COMTREND

Device Info **Basic Setup** Advanced Setup Diagnostics Management Logout

WAN Setup
NAT
LAN
Lan VLAN Setting
IPv6 Autoconfig
UPnP

UPnP Configuration

NOTE: UPnP is activated only when there is a live WAN service with NAT enabled.

Enable UPnP

Apply/Save


5.4 Parental Control

This selection provides WAN access control functionality.


5.4.1 Time Restriction

This feature restricts access from a LAN device to an outside network through the device on selected days at certain times. Make sure to activate the Internet Time server synchronization as described in section 8.5 Internet Time, so that the scheduled times match your local time.

Clicking on the checkbox in the Enable field allows the user to select all / none entries for Enabling/Disabling.

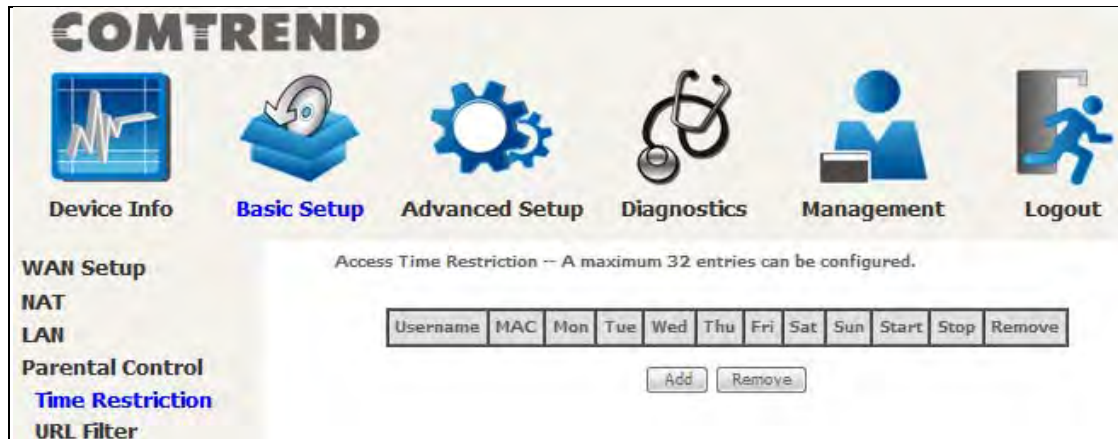

Click **Add** to display the following screen.

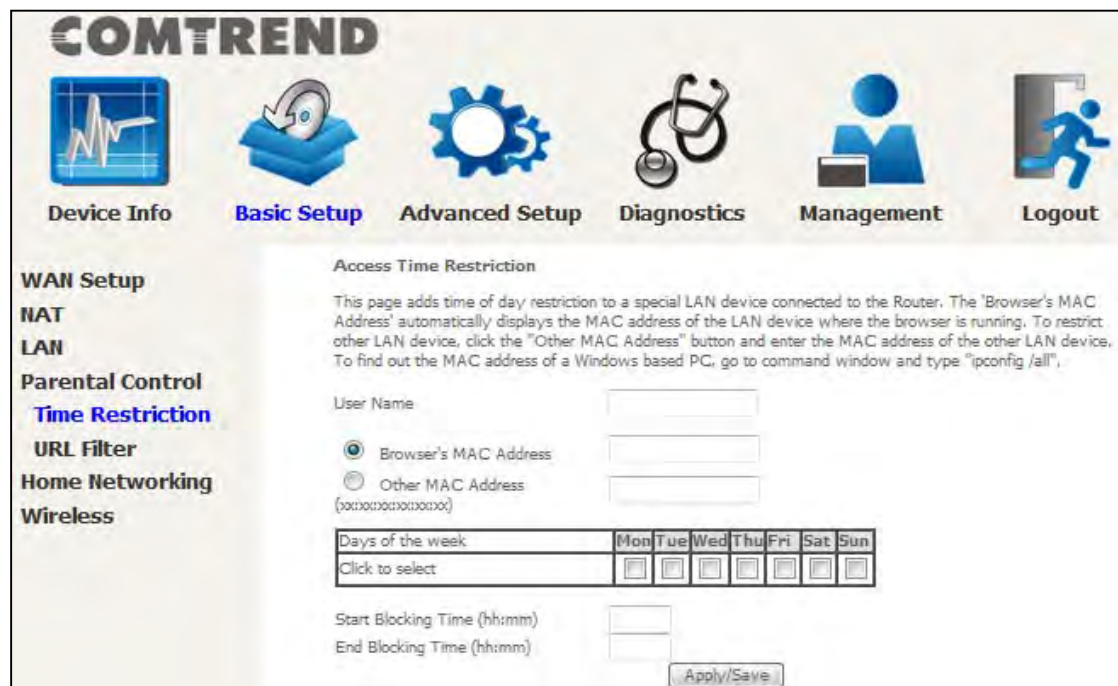

See below for field descriptions. Click **Apply/Save** to add a time restriction.

- User Name:** A user-defined label for this restriction.
- Browser's MAC Address:** MAC address of the PC running the browser.
- Other MAC Address:** MAC address of another LAN device.
- Days of the Week:** The days the restrictions apply.
- Start Blocking Time:** The time the restrictions start.
- End Blocking Time:** The time the restrictions end.

5.4.2 URL Filter

This screen allows for the creation of a filter rule for access rights to websites based on their URL address and port number.




Select URL List Type: Exclude or Include.

Tick the **Exclude** radio button to deny access to the websites listed.

Tick the **Include** radio button to restrict access to only those listed websites.

Then click **Add** to display the following screen.

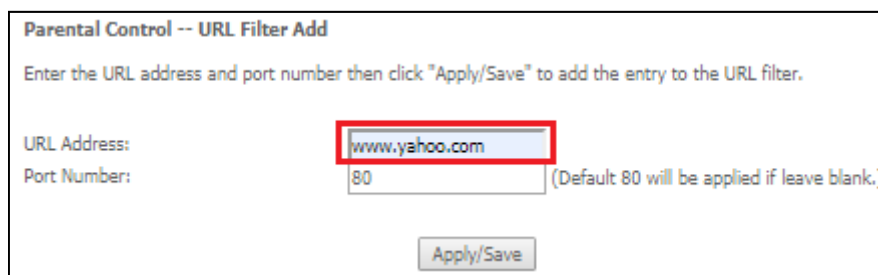

Enter the URL address and port number then click **Apply/Save** to add the entry to the URL filter. URL Addresses begin with "www", as shown in this example.

URL Filter -- Please select the list type first then configure the list entries. Maximum 100 entries can be configured.

URL List Type: Exclude Include


Address	Port	Remove
www.yahoo.com	80	<input type="checkbox"/>

A maximum of 100 entries can be added to the URL Filter list.

5.5 Home Networking

5.5.1 Print Server

This page allows you to enable or disable printer support.

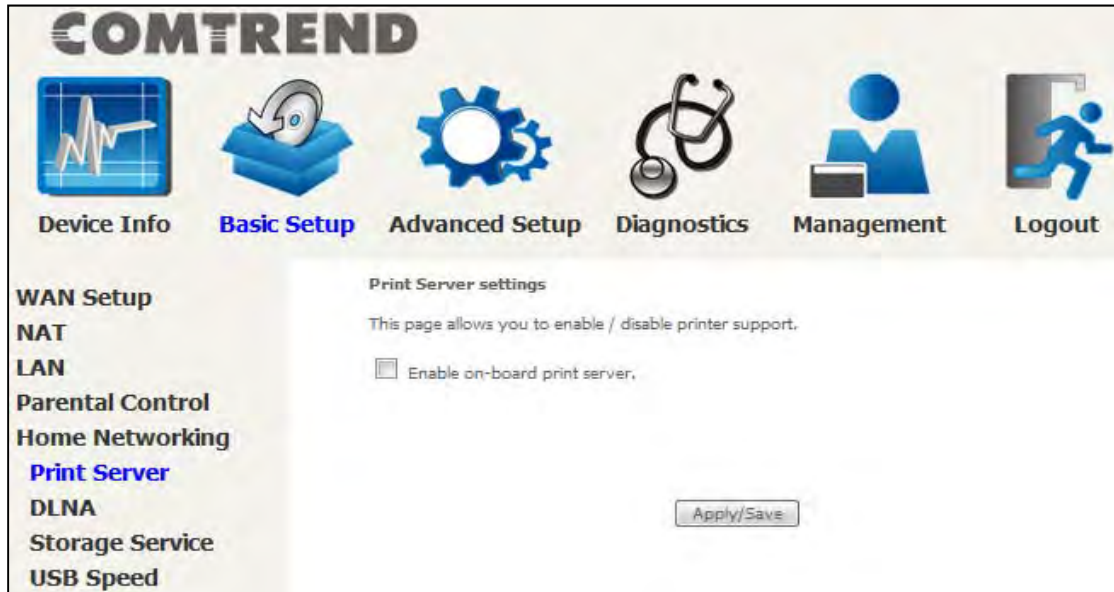

Please reference [Appendix E](#) to see the procedure for enabling the Printer Server.

5.5.2 DLNA

Enabling DLNA allows users to share digital media, like pictures, music and video, to other LAN devices from the digital media server.

Insert the USB drive into the USB host port on the back of the router. Click Enable on-board digital media server, a dropdown list of directories found on the USB driver will be available for selection. Select media path from the drop-down list or manually modify the media library path and click **Apply/Save** to enable the DLNA media server.



5.5.3 Storage Service

The Storage service allows you to use Storage devices with modem to be more easily accessed.

5.5.3.1 Storage Device Info

This page also displays storage devices attached to the USB host.

COMTREND

Device Info **Basic Setup** Advanced Setup Diagnostics Management Logout

WAN Setup
NAT
LAN
Parental Control
Home Networking
Print Server
DLNA
Storage Service
Storage Device Info
User Accounts

Storage Service

The Storage service allows you to use Storage devices with modem to be more easily accessed

Volumename	FileSystem	Total Space	Used Space
disk1_1	fat	962	6

Display after storage device attached (for your reference).


Volumename	FileSystem	Total Space	Used Space
disk1_1	fat	962	6

5.5.3.2 Storage User Accounts

Add a storage account to access the USB device for the samba access system.




Click the **Add** button to display the following. volumeName would be disk1_1 if only 1 USB has been plugged into the device.

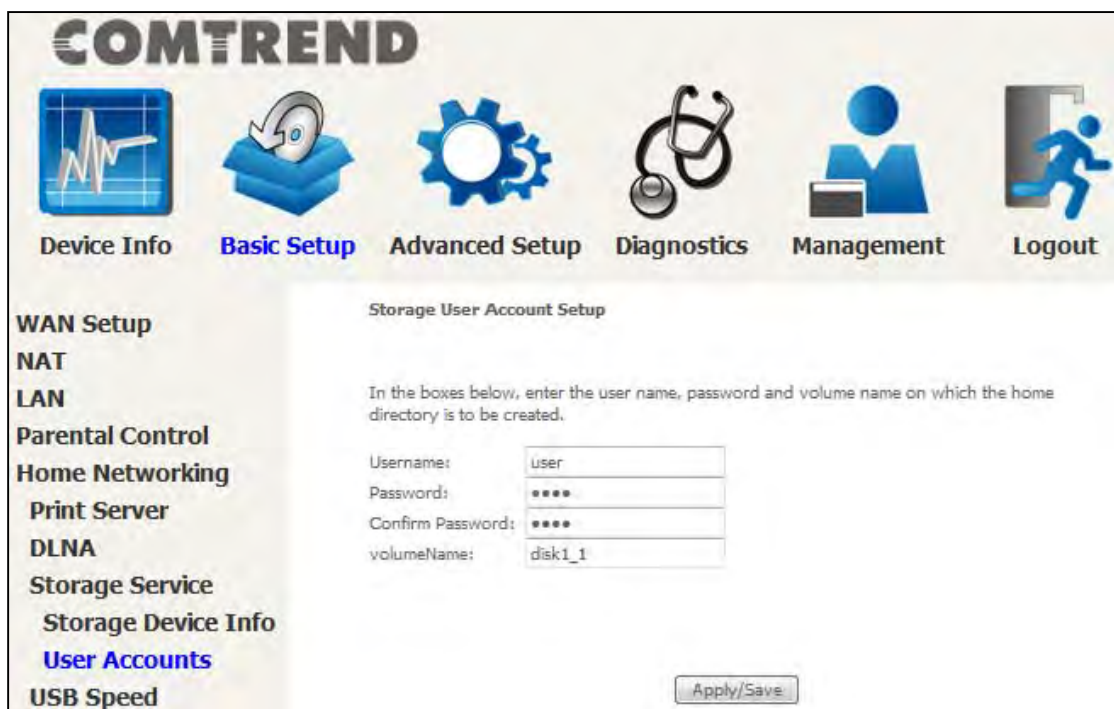

In the boxes provided, enter the user name, password and volume name on which the home directory is to be created. Then click the **Apply/Save** button.

In any windows folder, enter the address \\192.168.1.1 to access the samba folder created. A password prompt will show. Enter username password as configured. Access \\192.168.1.1 again (or refresh the screen), the user folder will now be available for access.

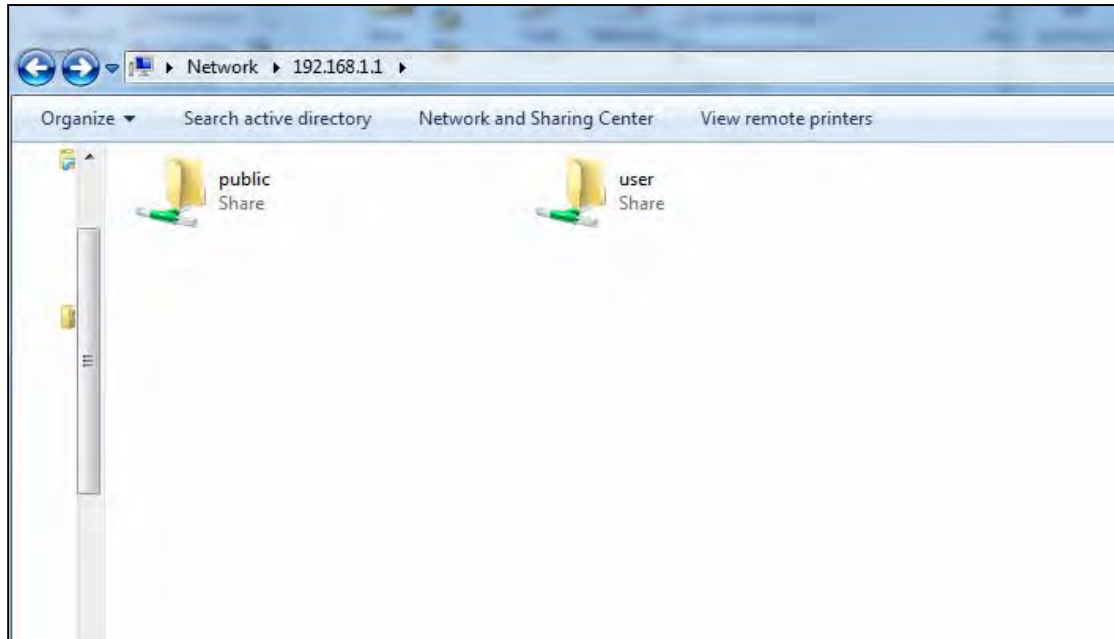

5.5.3.2 Storage User Accounts

This page allows you to enable / disable USB 3.0 device support.
 Note: Enabling USB 3.0 can cause interference with the built-in 2.4GHz wireless radio. It is advised leaving the default value as USB 2.0



5.6 Wireless

5.6.1 SSID

This page allows you to configure the Virtual interfaces for each Physical interface.

COMTREND

Device Info **Basic Setup** Advanced Setup Diagnostics Management Logout

WAN Setup
NAT
LAN
Parental Control
Home Networking
Wireless
SSID
Security

SSID
This page allows you to configure the Virtual interfaces for each Physical interface.

Wireless Interface: Comtrend8C99_2.4GHz(1C:64:99:23:8C:9A) ▼

BSS-MAC (SSID): 1C:64:99:23:8C:9A (Comtrend8C99_2.4GHz enabled) ▼

BSS Enabled: Enabled ▼

Network Name (SSID): Comtrend8C99_2.4GHz

Network Type: Open ▼

AP Isolation: Off ▼

BSS Max Associations Limit: 128

WMM Advertise: Advertise ▼

WMM: On ▼

Apply Cancel


Click the **Apply** button to apply your changes. The settings shown above are described below.

Item	Description
Wireless Interface	Select which wireless interface to configure
BSS-MAC (SSID)	Select desired BSS to configure
BSS Enabled	Enable or disable this SSID
Network Name (SSID)	Sets the network name (also known as SSID) of this network
Network Type	Selecting Closed hides the network from active scans. Selecting Open reveals the network from active scans.
AP Isolation	Selecting On enables AP Isolation mode. When enabled, STAs associated with the AP will not be able to communicate with each other.
BSS Max Associations Limit	Sets the maximum associations for this BSS


WMM Advertise	When WMM is enabled for the radio, selecting On allows WMM to be advertised in beacons and probes for this BSS. Off disables advertisement of WMM in beacons and probes.
WMF	Choose On to enable Wireless Multicast Forwarding on this BSS. Off disables this feature.

5.6.2 Security

This page allows you to configure security for the wireless LAN interfaces.

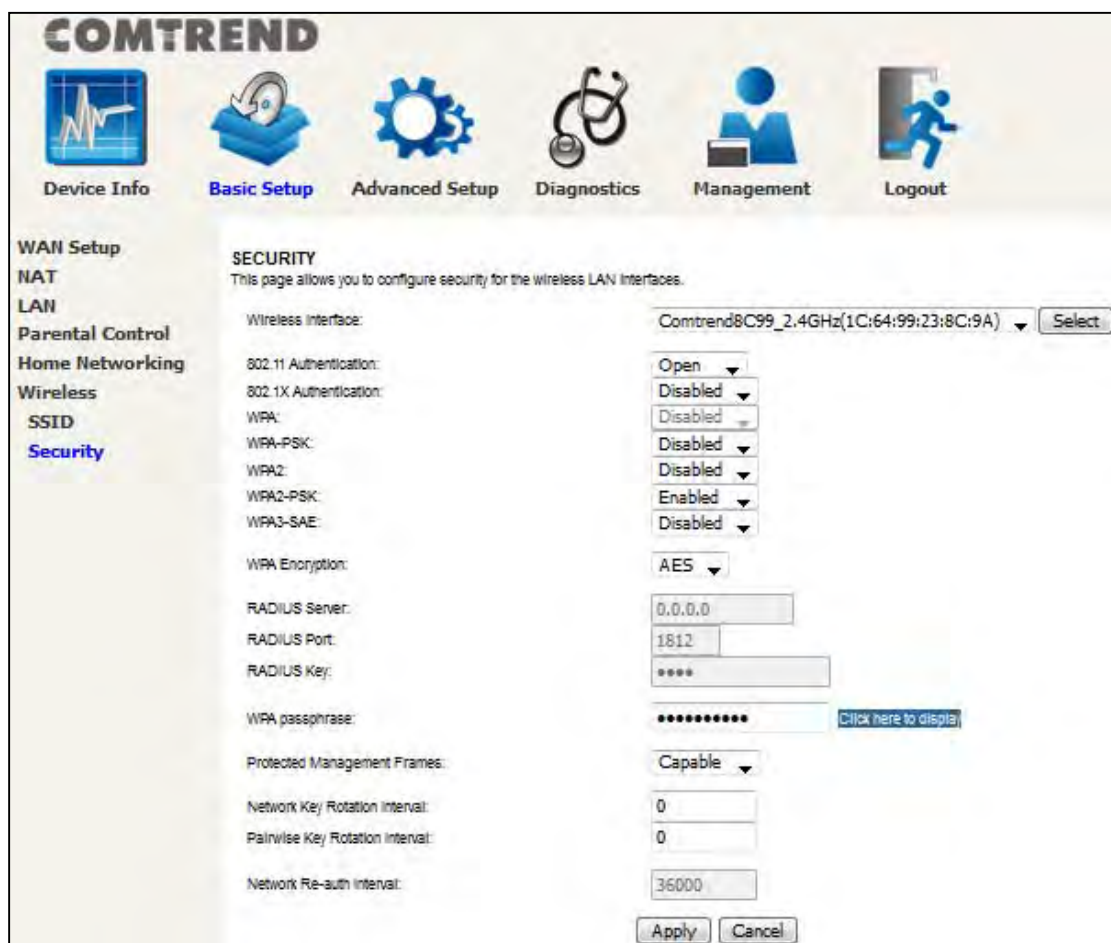

Click the **Apply** button to apply your changes. For information on each parameter, move the cursor over the parameter that you are interested in (as shown here).

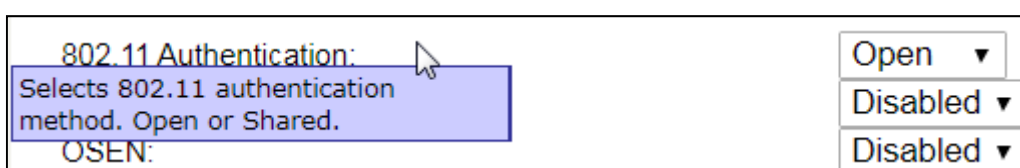

Chapter 6 Advanced Setup

You can reach this page by clicking on the following icon located at the top of the screen.



6.1 Security

For detailed descriptions, with examples, please consult [Appendix A - Firewall](#).

6.1.1 IP Filtering

This screen sets filter rules that limit IP traffic (Outgoing/Incoming). Multiple filter rules can be set and each applies at least one limiting condition. For individual IP packets to pass the filter all conditions must be fulfilled.

NOTE: This function is not available when in WDS mode. Instead, [MAC Filtering](#) performs a similar function.

OUTGOING IP FILTER

By default, all outgoing IP traffic is allowed, but IP traffic can be blocked with filters.

The screenshot shows the COMTREND web interface. At the top, there is a navigation bar with icons for Device Info, Basic Setup, **Advanced Setup**, Diagnostics, Management, and Logout. Below this, a sidebar menu lists Security (IP Filtering, Outgoing, Incoming, MAC Filtering) and Quality of Service. The main content area is titled 'Outgoing IP Filtering Setup' and contains the following text:

Outgoing IP Filtering Setup

By default, all outgoing IP traffic from LAN is allowed, but some IP traffic can be **BLOCKED** by setting up filters.

Choose Add or Remove to configure outgoing IP filters.

Filter Name	IP Version	Protocol	SrcIP/ PrefixLength	SrcPort	DstIP/ PrefixLength	DstPort	Remove
<input type="button" value="Add"/> <input type="button" value="Remove"/>							

To add a filter (to block some outgoing IP traffic), click the **Add** button.

On the following screen, enter your filter criteria and then click **Apply/Save**.

The screenshot shows the COMTREND web interface. At the top, there are navigation icons for Device Info, Basic Setup, **Advanced Setup**, Diagnostics, Management, and Logout. Below these is a sidebar menu with categories like Security, Quality of Service, Routing, DNS, DSL, DNS Proxy, Interface Grouping, and IP Tunnel. The main content area is titled 'Add IP Filter -- Outgoing' and contains a form with the following fields:

- Filter Name:
- IP Version:
- Protocol:
- Source IP address[/prefix length]:
- Source Port (port or port:port):
- Destination IP address[/prefix length]:
- Destination Port (port or port:port):


An 'Apply/Save' button is located at the bottom right of the form.

Consult the table below for field descriptions.

Item	Description
Filter Name	The filter rule label
IP Version	Select from the drop down menu
Protocol	TCP, TCP/UDP, UDP, or ICMP
Source IP address	Enter source IP address
Source Port (port or port:port)	Enter source port number or range
Destination IP address	Enter destination IP address
Destination Port (port or port:port)	Enter destination port number or range

INCOMING IP FILTER

By default, all incoming IP traffic is blocked, but IP traffic can be allowed with filters.

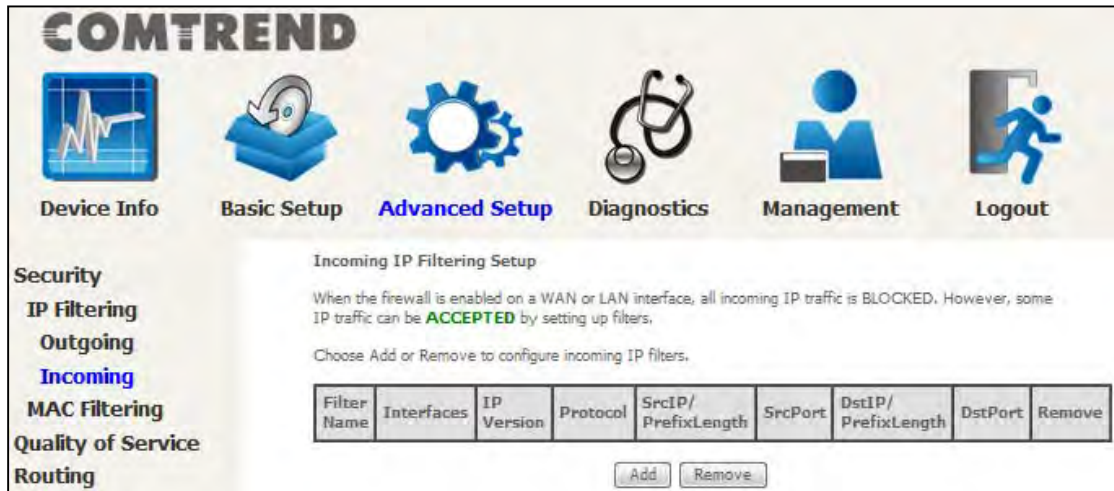

To add a filter (to allow incoming IP traffic), click the **Add** button.

On the following screen, enter your filter criteria and then click **Apply/Save**.



Consult the table below for field descriptions.

Item	Description
Filter Name	The filter rule label
IP Version	Select from the drop down menu

Protocol	TCP, TCP/UDP, UDP, or ICMP
Source IP address	Enter source IP address
Source Port (port or port:port)	Enter source port number or range
Destination IP address	Enter destination IP address
Destination Port (port or port:port)	Enter destination port number or range

At the bottom of this screen, select the WAN and LAN Interfaces to which the filter rule will apply. You may select all or just a subset. WAN interfaces in WDS mode or without firewall enabled are not available.

6.1.2 MAC Filtering

NOTE: This option is only available in WDS mode. Other modes use [IP Filtering](#) to perform a similar function.

Each network device has a unique 48-bit MAC address. This can be used to filter (block or forward) packets based on the originating device. MAC filtering policy and rules for the VR-3071 can be set according to the following procedure.

The MAC Filtering Global Policy is defined as follows. **FORWARDED** means that all MAC layer frames will be **FORWARDED** except those matching the MAC filter rules. **BLOCKED** means that all MAC layer frames will be **BLOCKED** except those matching the MAC filter rules. The default MAC Filtering Global policy is **FORWARDED**. It can be changed by clicking the **Change Policy** button.

COMTREND

Device Info Basic Setup **Advanced Setup** Diagnostics Management Logout

Security
 IP Filtering
MAC Filtering
 Quality of Service
 Routing
 DNS
 DSL
 DNS Proxy
 Interface Grouping
 IP Tunnel
 IPSec
 Certificate
 Multicast
 Wireless

MAC Filtering Setup

MAC Filtering is only effective on WAN services configured in Bridge mode. **FORWARDED** means that all MAC layer frames will be **FORWARDED** except those matching with any of the specified rules in the following table. **BLOCKED** means that all MAC layer frames will be **BLOCKED** except those matching with any of the specified rules in the following table.

MAC Filtering Policy For Each Interface:
WARNING: Changing from one policy to another of an interface will cause all defined rules for that interface to be REMOVED AUTOMATICALLY! You will need to create new rules for the new policy.

Interface	Policy	Change
atm0.1	FORWARD	<input type="checkbox"/>

Choose Add or Remove to configure MAC filtering rules.

Interface	Protocol	Destination MAC	Source MAC	Frame Direction	Remove
<input type="button" value="Add"/> <input type="button" value="Remove"/>					

Choose **Add** or **Remove** to configure MAC filtering rules. The following screen will appear when you click **Add**. Create a filter to identify the MAC layer frames by specifying at least one condition below. If multiple conditions are specified, all of them must be met.



Click **Save/Apply** to save and activate the filter rule.

Consult the table below for detailed field descriptions.


Item	Description
Protocol Type	PPPoE, IPv4, IPv6, AppleTalk, IPX, NetBEUI, IGMP
Destination MAC Address	Defines the destination MAC address
Source MAC Address	Defines the source MAC address
Frame Direction	Select the incoming/outgoing packet interface
WAN Interfaces	Applies the filter to the selected WDS interface

6.2 Quality of Service (QoS)

NOTE: QoS must be enabled in at least one PVC to display this option.
(See [Appendix F - Connection Setup](#) for detailed PVC setup instructions).

To Enable QoS tick the checkbox and select a Default DSCP Mark.

Click **Apply/Save** to activate QoS.

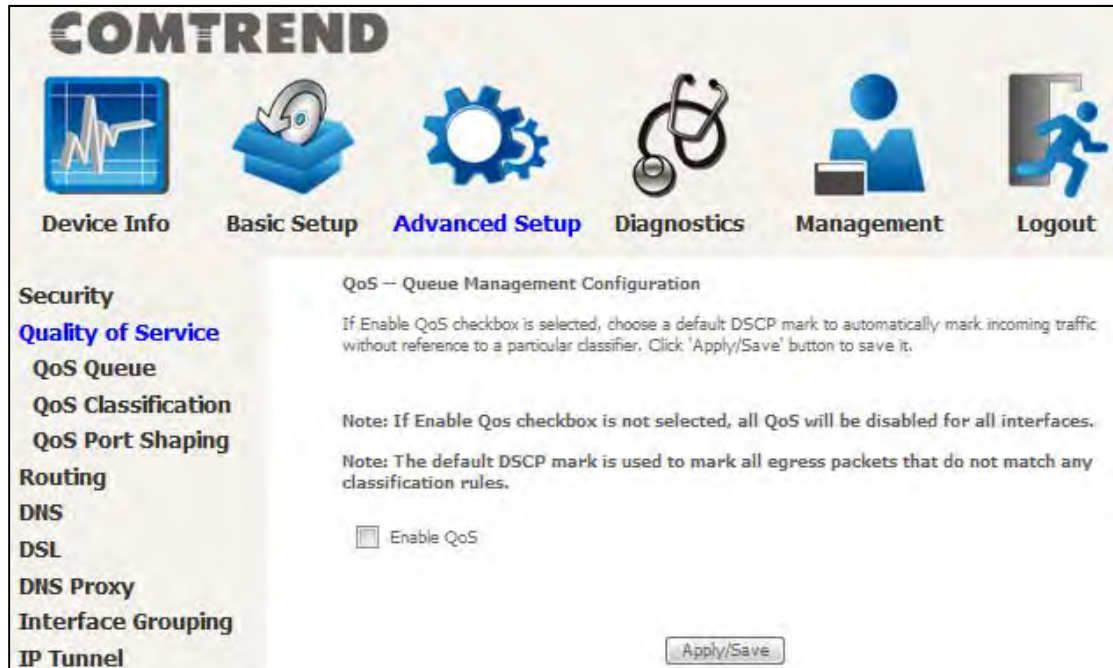

QoS and DSCP Mark are defined as follows:

Quality of Service (QoS): This provides different priority to different users or data flows, or guarantees a certain level of performance to a data flow in accordance with requests from Queue Prioritization.



Default Differentiated Services Code Point (DSCP) Mark: This specifies the per hop behavior for a given flow of packets in the Internet Protocol (IP) header that do not match any other QoS rule.

6.2.1 QoS Queue

6.2.1.1 QoS Queue Configuration

Configure queues with different priorities to be used for QoS setup.

In ATM mode, a maximum of 16 queues can be configured.

In PTM mode, a maximum of 8 queues can be configured.

For each Ethernet interface, a maximum of 8 queues can be configured.

For each Ethernet WAN interface, a maximum of 8 queues can be configured.

(Please see the screen on the following page).



Device Info



Basic Setup



Advanced Setup



Diagnostics



Management



Logout

Security

Quality of Service

QoS Queue

Queue Configuration

Wlan Queue

QoS Classification

QoS Port Shaping

Routing

DNS

DSL

DNS Proxy

Interface Grouping

IP Tunnel

IPSec

Certificate

Multicast

Wireless

QoS Queue Setup

In PTM mode, maximum 8 queues can be configured.
 For each Ethernet interface, maximum 8 queues can be configured.
 For each Ethernet WAN interface, maximum 8 queues can be configured.
 To add a queue, click the Add button.
 To remove queues, check their remove-checkboxes, then click the Remove button.
 The Enable button will scan through every queues in the table. Queues with enable-checkbox checked will be enabled. Queues with enable-checkbox un-checked will be disabled.
 The enable-checkbox also shows status of the queue after page reload.

The QoS function has been disabled. Queues would not take effects.

Name	Key	Interface	Qid	Preced/Alg/ Wght	PtmPrio	DropAlg/ LoMin/ LoMax /HiMin /HiMax	ShapingRate (bps)	MinBitRate(bps)	BurstSize(bytes)	Enable	Remove
LAN Q8	129	eth1	8	1/SP					<input checked="" type="checkbox"/>	<input type="checkbox"/>	
LAN Q7	130	eth1	7	2/SP					<input checked="" type="checkbox"/>	<input type="checkbox"/>	
LAN Q6	131	eth1	6	3/SP					<input checked="" type="checkbox"/>	<input type="checkbox"/>	
LAN Q5	132	eth1	5	4/SP					<input checked="" type="checkbox"/>	<input type="checkbox"/>	
LAN Q4	133	eth1	4	5/SP					<input checked="" type="checkbox"/>	<input type="checkbox"/>	
LAN Q3	134	eth1	3	6/SP					<input checked="" type="checkbox"/>	<input type="checkbox"/>	
LAN Q2	135	eth1	2	7/SP					<input checked="" type="checkbox"/>	<input type="checkbox"/>	
LAN Q1	136	eth1	1	8/SP					<input checked="" type="checkbox"/>	<input type="checkbox"/>	
LAN Q8	137	eth2	8	1/SP					<input checked="" type="checkbox"/>	<input type="checkbox"/>	
LAN Q7	138	eth2	7	2/SP					<input checked="" type="checkbox"/>	<input type="checkbox"/>	
LAN Q6	139	eth2	6	3/SP					<input checked="" type="checkbox"/>	<input type="checkbox"/>	
LAN Q5	140	eth2	5	4/SP					<input checked="" type="checkbox"/>	<input type="checkbox"/>	
LAN Q4	141	eth2	4	5/SP					<input checked="" type="checkbox"/>	<input type="checkbox"/>	
LAN Q3	142	eth2	3	6/SP					<input checked="" type="checkbox"/>	<input type="checkbox"/>	
LAN Q2	143	eth2	2	7/SP					<input checked="" type="checkbox"/>	<input type="checkbox"/>	
LAN Q1	144	eth2	1	8/SP					<input checked="" type="checkbox"/>	<input type="checkbox"/>	
LAN Q8	145	eth3	8	1/SP					<input checked="" type="checkbox"/>	<input type="checkbox"/>	
LAN Q7	146	eth3	7	2/SP					<input checked="" type="checkbox"/>	<input type="checkbox"/>	
LAN Q6	147	eth3	6	3/SP					<input checked="" type="checkbox"/>	<input type="checkbox"/>	
LAN Q5	148	eth3	5	4/SP					<input checked="" type="checkbox"/>	<input type="checkbox"/>	
LAN Q4	149	eth3	4	5/SP					<input checked="" type="checkbox"/>	<input type="checkbox"/>	
LAN Q3	150	eth3	3	6/SP					<input checked="" type="checkbox"/>	<input type="checkbox"/>	
LAN Q2	151	eth3	2	7/SP					<input checked="" type="checkbox"/>	<input type="checkbox"/>	
LAN Q1	152	eth3	1	8/SP					<input checked="" type="checkbox"/>	<input type="checkbox"/>	
LAN Q8	153	eth4	8	1/SP					<input checked="" type="checkbox"/>	<input type="checkbox"/>	
LAN Q7	154	eth4	7	2/SP					<input checked="" type="checkbox"/>	<input type="checkbox"/>	
LAN Q6	163	eth0	6	3/SP					<input checked="" type="checkbox"/>	<input type="checkbox"/>	
LAN Q5	164	eth0	5	4/SP					<input checked="" type="checkbox"/>	<input type="checkbox"/>	
LAN Q4	165	eth0	4	5/SP					<input checked="" type="checkbox"/>	<input type="checkbox"/>	
LAN Q3	166	eth0	3	6/SP					<input checked="" type="checkbox"/>	<input type="checkbox"/>	
LAN Q2	167	eth0	2	7/SP					<input checked="" type="checkbox"/>	<input type="checkbox"/>	
LAN Q1	168	eth0	1	8/SP					<input checked="" type="checkbox"/>	<input type="checkbox"/>	

To remove queues, check their remove-checkboxes (for user created queues), then click the **Remove** button.


The **Enable** button will scan through every queue in the table. Queues with the enable-checkbox checked will be enabled. Queues with the enable-checkbox un-checked will be disabled.

The enable-checkbox also shows status of the queue after page reload.

Note that if WMM function is disabled in the Wireless Page, queues related to wireless will not take effect. This function follows the Differentiated Services rule of IP QoS.

Enable and assign an interface and precedence on the next screen. Click **Apply/Save** on this screen to activate it.

To add a queue, click the **Add** button to display the following screen.

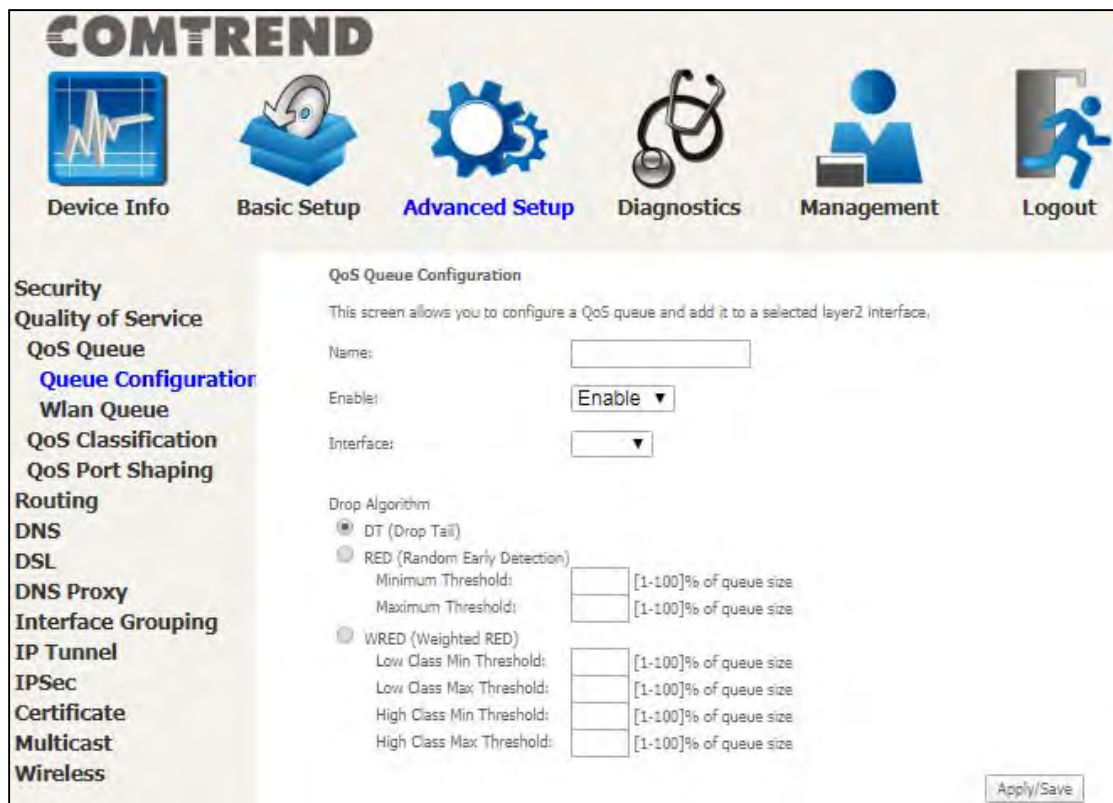

Name: Identifier for this Queue entry.

Enable: Enable/Disable the Queue entry.

Interface: Assign the entry to a specific network interface (QoS enabled).


Drop Algorithm: Select the algorithm to be used to ensure that the QoS rule is enforced if the traffic exceeds the configured limit.

Drop Tail: Packets are sent in first come first serve fashion, the tailing traffic would be dropped if they exceed the handling limit.

Random Early Detection: Packets are monitored by configured queue threshold and serving proportion.

WRED: Weighted RED, the assigned monitoring queue would be given different priority and threshold to ensure various priority queues would be served fairly.

After selecting an Interface the following will be displayed.

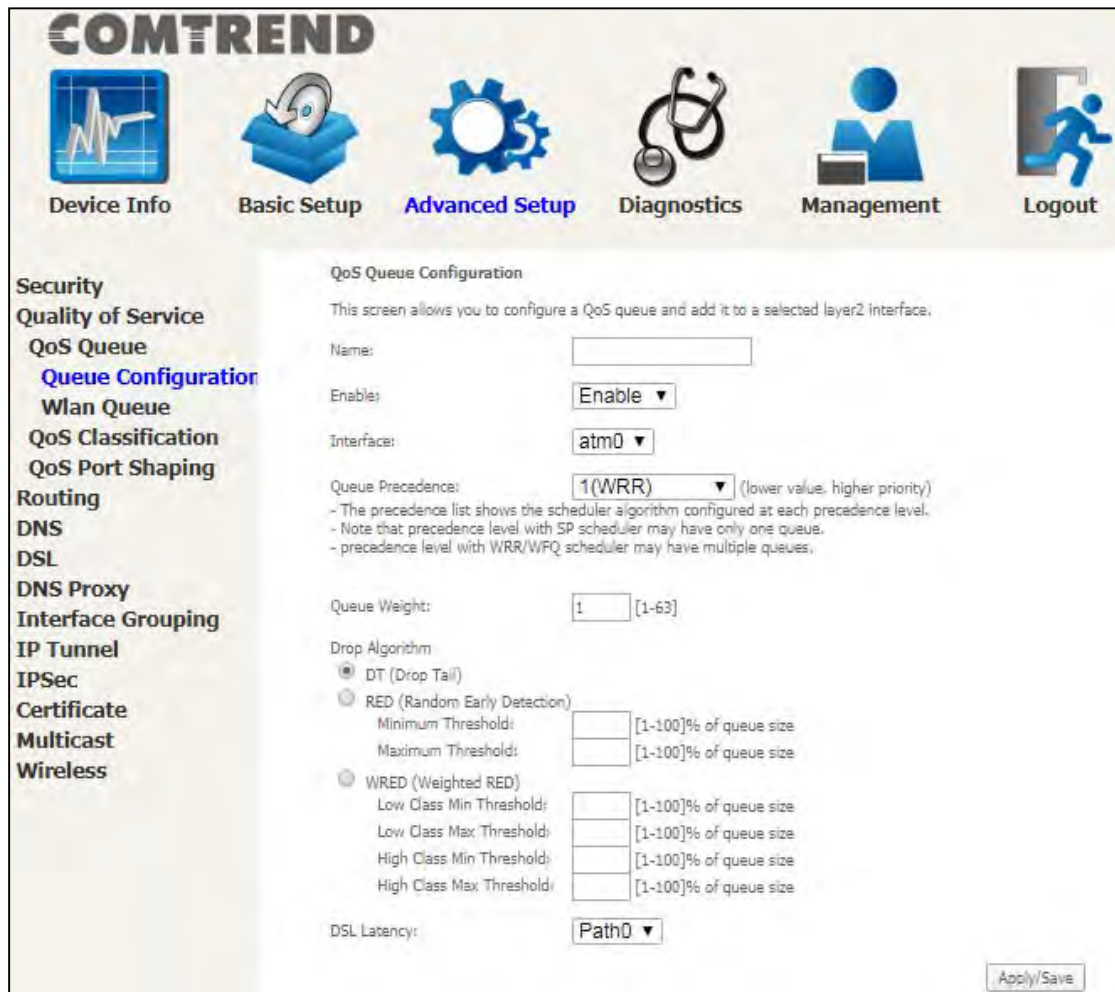

The precedence list shows the scheduler algorithm for each precedence level. Queues of equal precedence will be scheduled based on the algorithm. Queues of unequal precedence will be scheduled based on SP.

Shaping Rate: Specify a shaping rate limit to the defined queue.

Click **Apply/Save** to apply and save the settings.

6.2.1.2 Wlan Queue

Displays the list of available wireless queues for WMM and wireless data transmit priority.

COMTREND

Device Info Basic Setup **Advanced Setup** Diagnostics Management Logout

Security
Quality of Service
QoS Queue
Queue Configuration
Wlan Queue
QoS Classification
QoS Port Shaping
Routing
DNS
DSL
DNS Proxy
Interface Grouping
IP Tunnel
IPSec
Certificate
Multicast
Wireless

QoS Wlan Queue Setup

Note: If WMM function is disabled in Wireless Page, queues related to wireless will not take effects.
The QoS function has been disabled. Queues would not take effects.

Name	Key	Interface	Qid	Prec/Alg/Wght	Enable
WMM Voice Priority	1	wl0	8	1/SP	Enabled
WMM Voice Priority	2	wl0	7	2/SP	Enabled
WMM Video Priority	3	wl0	6	3/SP	Enabled
WMM Video Priority	4	wl0	5	4/SP	Enabled
WMM Best Effort	5	wl0	4	5/SP	Enabled
WMM Background	6	wl0	3	6/SP	Enabled
WMM Background	7	wl0	2	7/SP	Enabled
WMM Best Effort	8	wl0	1	8/SP	Enabled
WMM Voice Priority	65	wl1	8	1/SP	Enabled
WMM Voice Priority	66	wl1	7	2/SP	Enabled
WMM Video Priority	67	wl1	6	3/SP	Enabled
WMM Video Priority	68	wl1	5	4/SP	Enabled
WMM Best Effort	69	wl1	4	5/SP	Enabled
WMM Background	70	wl1	3	6/SP	Enabled
WMM Background	71	wl1	2	7/SP	Enabled
WMM Best Effort	72	wl1	1	8/SP	Enabled

6.2.2 QoS Classification

The network traffic classes are listed in the following table.

Click **Add** to configure a network traffic class rule and **Enable** to activate it. To delete an entry from the list, click **Remove**.

This screen creates a traffic class rule to classify the upstream traffic, assign queuing priority and optionally overwrite the IP header DSCP byte. A rule consists of a class name and at least one logical condition. All the conditions specified in the rule must be satisfied for it to take effect.

Click **Apply/Save** to save and activate the rule.

Field	Description
Traffic Class Name	Enter a name for the traffic class.
Rule Order	Last is the only option.
Rule Status	Disable or enable the rule.
Classification Criteria	
Ingress Interface	Select an interface: (i.e. LAN, WAN, local, ETH1, ETH2, ETH3, w10)
Ether Type	Set the Ethernet type (e.g. IP, ARP, IPv6).
Source MAC Address	A packet belongs to SET-1, if a binary-AND of its source MAC address with the Source MAC Mask is equal to the binary-AND of the Source MAC Mask and this field.
Source MAC Mask	This is the mask used to decide how many bits are checked in Source MAC Address.
Destination MAC Address	A packet belongs to SET-1 then the result that the Destination MAC Address of its header binary-AND to the Destination MAC Mask must equal to the result that this field binary-AND to the Destination MAC Mask.
Destination MAC Mask	This is the mask used to decide how many bits are checked in the Destination MAC Address.
Classification Results	
Specify Egress Interface	Choose the egress interface from the available list.
Specify Egress Queue	Choose the egress queue from the list of available for the specified egress interface.
Mark Differentiated Service Code Point	The selected Code Point gives the corresponding priority to packets that satisfy the rule.
Mark 802.1p Priority	Select between 0-7. - Class non-vlan packets egress to a non-vlan interface will be tagged with VID 0 and the class rule p-bits.

	<ul style="list-style-type: none">- Class vlan packets egress to a non-vlan interface will have the packet p-bits re-marked by the class rule p-bits. No additional vlan tag is added.- Class non-vlan packets egress to a vlan interface will be tagged with the interface VID and the class rule p-bits.- Class vlan packets egress to a vlan interface will be additionally tagged with the packet VID, and the class rule p-bits.
Set Rate Limit	The data transmission rate limit in kbps.

6.2.3 QoS Port Shaping

QoS port shaping supports traffic shaping of the Ethernet interface. Input the shaping rate and burst size to enforce QoS rule on each interface. If "Shaping Rate" is set to "-1", it means no shaping and "Burst Size" will be ignored.

COMTREND

Device Info Basic Setup **Advanced Setup** Diagnostics Management Logout

Security
Quality of Service
 QoS Queue
 Queue Configuration
 Wlan Queue
 QoS Classification
QoS Port Shaping
 Routing
 DNS
 DSL
 DNS Proxy
 Interface Grouping
 IP Tunnel
 IPSec
 Certificate

QoS Port Shaping Setup

QoS port shaping supports traffic shaping of Ethernet interface.
 If "Shaping Rate" is set to "-1", it means no shaping and "Burst Size" will be ignored.

Interface	Type	Shaping Rate (Kbps)	Burst Size (bytes)	Enable
eth1	LAN	-1	0	<input type="checkbox"/>
eth2	LAN	-1	0	<input type="checkbox"/>
eth3	LAN	-1	0	<input type="checkbox"/>
eth4	LAN	-1	0	<input type="checkbox"/>
eth0	LAN	-1	0	<input type="checkbox"/>

Apply/Save

Click **Apply/Save** to apply and save the settings.


6.3 Routing

The following routing functions are accessed from this menu:
Default Gateway, Static Route, Policy Routing and RIP.

NOTE: In WDS mode, the **RIP** menu option is hidden while the other menu options are shown but ineffective.

6.3.1 Default Gateway

The default gateway interface list can have multiple WAN interfaces served as system default gateways but only one will be used according to the priority with the first being the highest and the last one the lowest priority if the WAN interface is connected. Priority order can be changed by removing all and adding them back in again.

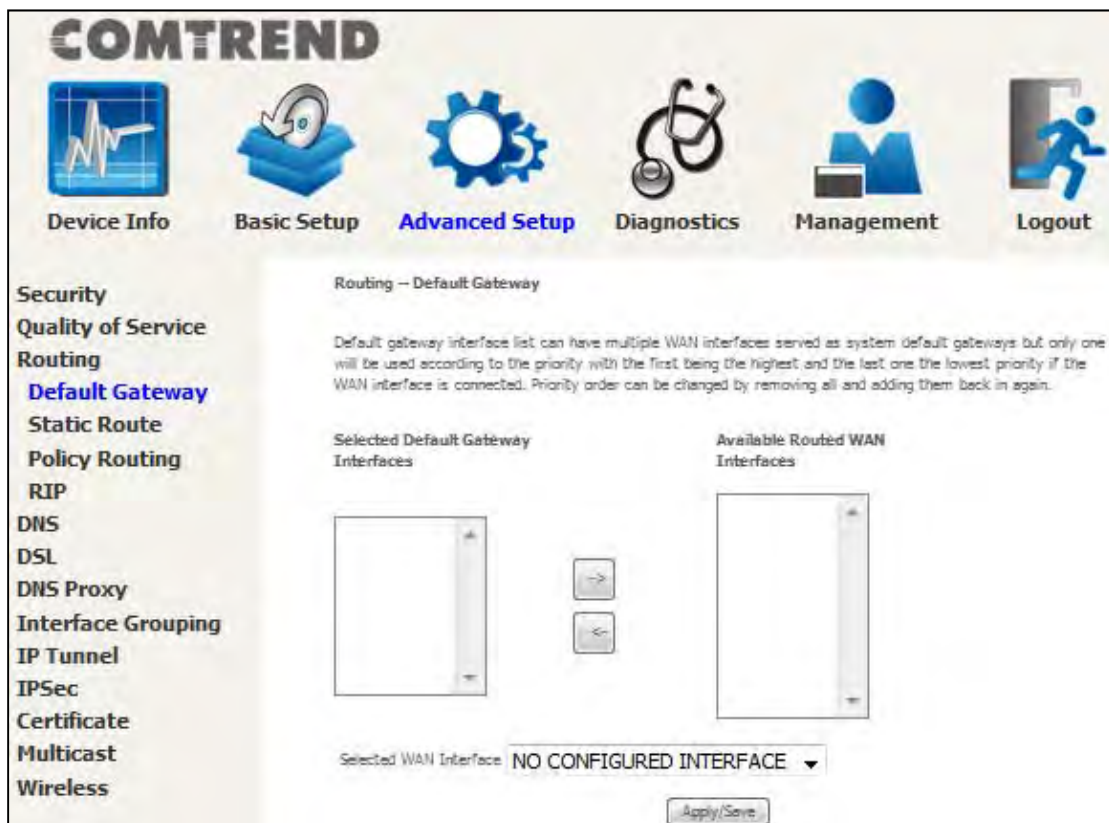


Click **Apply/Save** to apply and save the settings.

6.3.2 Static Route

This option allows for the configuration of static routes by destination IP. Click **Add** to create a static route or click **Remove** to delete a static route.



After clicking **Add** the following will display.

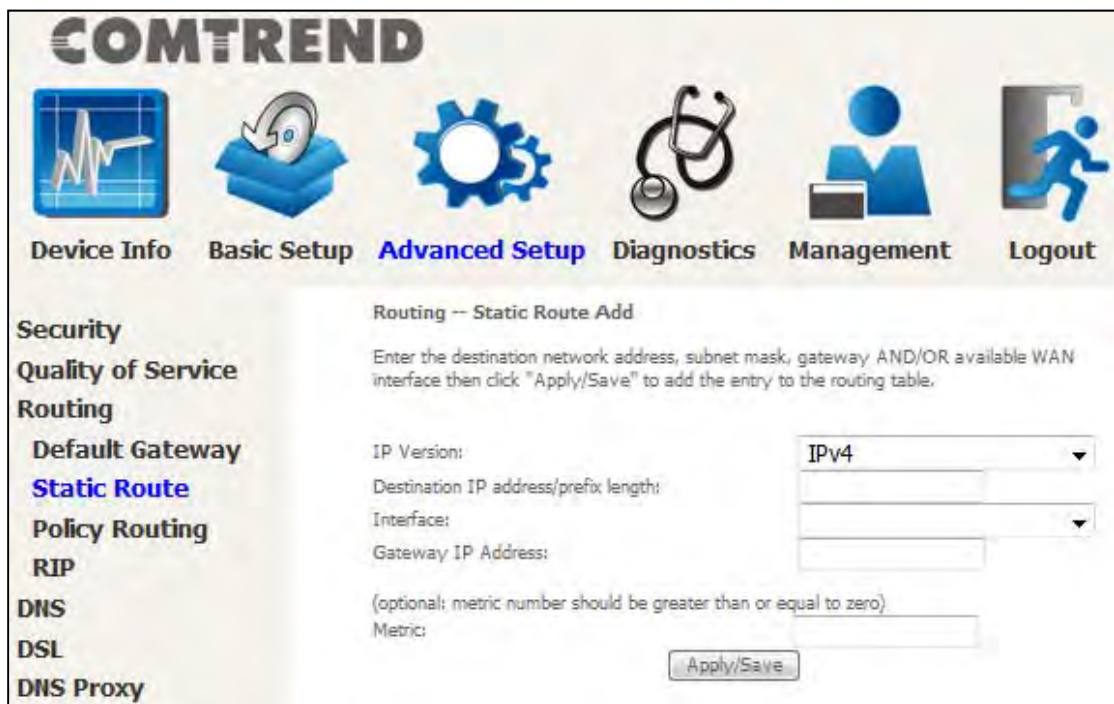

- **IP Version:** Select the IP version to be IPv4 or IPv6.
- **Destination IP address/prefix length:** Enter the destination IP address.
- **Interface:** Select the proper interface for the rule.
- **Gateway IP Address:** The next-hop IP address.
- **Metric:** The metric value of routing.

After completing the settings, click **Apply/Save** to add the entry to the routing table.

6.3.3 Policy Routing

This option allows for the configuration of static routes by policy.

Click **Add** to create a routing policy or **Remove** to delete one.



On the following screen, complete the form and click **Apply/Save** to create a policy.



Item	Description
Policy Name	Name of the route policy
Physical LAN Port	Specify the port to use this route policy
Source IP	IP Address to be routed
Use Interface	Interface that traffic will be directed to
Default Gateway IP	IP Address of the default gateway

6.3.4 RIP

To activate RIP, configure the RIP version/operation mode and select the **Enabled** checkbox for at least one WAN interface before clicking **Save/Apply**.

COMTREND

Device Info Basic Setup **Advanced Setup** Diagnostics Management Logout

Security
Quality of Service
Routing
Default Gateway
Static Route
Policy Routing
RIP
DNS
DSL

Routing -- RIP Configuration

NOTE: If selected interface has NAT enabled, only Passive mode is allowed.

To activate RIP for the WAN Interface, select the desired RIP version and operation and place a check in the 'Enabled' checkbox. To stop RIP on the WAN Interface, uncheck the 'Enabled' checkbox. Click the 'Apply/Save' button to star/stop RIP and save the configuration.

Interface	Version	Operation	Enabled
WAN Interface not exist for RIP.			

6.4 DNS

6.4.1 DNS Server

Select DNS Server Interface from available WAN interfaces OR enter static DNS server IP addresses for the system. In ATM mode, if only a single PVC with IPoA or static IPoE protocol is configured, Static DNS server IP addresses must be entered. **DNS Server Interfaces** can have multiple WAN interfaces served as system DNS servers but only one will be used according to the priority with the first being the highest and the last one the lowest priority if the WAN interface is connected. Priority order can be changed by removing all and adding them back in again.

COMTREND

Device Info Basic Setup **Advanced Setup** Diagnostics Management Logout

Security
Quality of Service
Routing
DNS
DNS Server
Dynamic DNS
DSL
DNS Proxy
Interface Grouping
IP Tunnel
IPSec
Certificate
Multicast
Wireless

DNS Server Configuration

Select DNS Server Interface from available WAN interfaces OR enter static DNS server IP addresses for the system. If only a single WAN with static IPoE protocol is configured, Static DNS server IP addresses must be entered.
DNS Server Interfaces can have multiple WAN interfaces served as system dns servers but only one will be used according to the priority with the first being the highest and the last one the lowest priority if the WAN interface is connected. Priority order can be changed by removing all and adding them back in again.

Select DNS Server Interface from available WAN interfaces:
Selected DNS Server Interfaces Available WAN Interfaces

Use the following Static DNS IP address:
Primary DNS server:
Secondary DNS server:

Obtain IPv6 DNS info from a WAN interface:
WAN Interface selected:

Use the following Static IPv6 DNS address:
Primary IPv6 DNS server:
Secondary IPv6 DNS server:

Apply/Save


Click **Apply/Save** to save the new configuration.

6.4.2 Dynamic DNS

The Dynamic DNS service allows you to map a dynamic IP address to a static hostname in any of many domains, allowing the VR-3071 to be more easily accessed from various locations on the Internet.



To add a dynamic DNS service, click **Add**. The following screen will display.

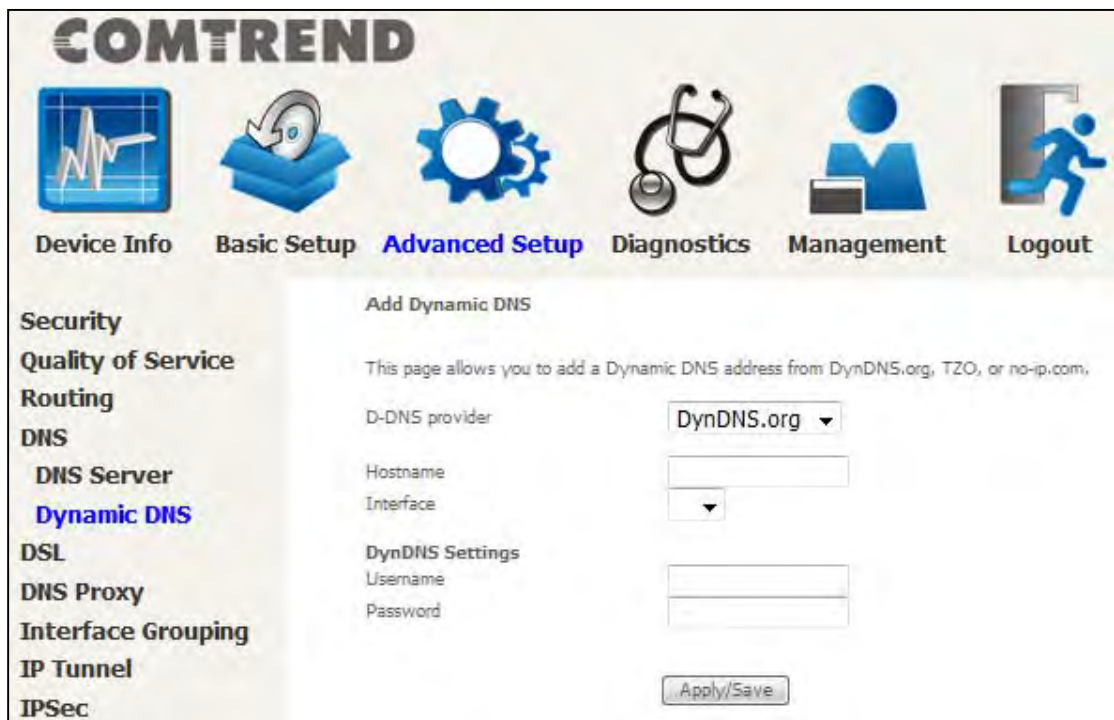

Click **Apply/Save** to save your settings.

Consult the table below for field descriptions.

Item	Description
D-DNS provider	Select a dynamic DNS provider from the list
Hostname	Enter the name of the dynamic DNS server
Interface	Select the interface from the list
Username	Enter the username of the dynamic DNS server
Password	Enter the password of the dynamic DNS server

6.5 DSL

The DSL Settings screen allows for the selection of DSL modulation modes. For optimum performance, the modes selected should match those of your ISP.

COMTREND

Device Info Basic Setup **Advanced Setup** Diagnostics Management Logout

Security
Quality of Service
Routing
DNS
DSL
DNS Proxy
Interface Grouping
IP Tunnel
IPSec
Certificate
Multicast
Wireless

DSL Settings

Select the modulation below,

- G.Dmt Enabled
- G.lite Enabled
- T1.413 Enabled
- ADSL2 Enabled
- AnnexL Enabled
- ADSL2+ Enabled
- AnnexM Enabled
- VDSL2 Enabled

Select the profile below,

- 8a Enabled
- 8b Enabled
- 8c Enabled
- 8d Enabled
- 12a Enabled
- 12b Enabled
- 17a Enabled
- 30a Enabled
- 35b Enabled

US0

- Enabled

Capability

- Bitswap Enable
- SRA Enable

G.997.1 EOC xTU-R Serial Number (Reboot is required for EOC changes to take effect)

- Equipment Serial Number
- Equipment MAC Address

Apply/Save

Click **Apply/Save** to save your settings.

Consult the table below for field descriptions.


DSL Mode	Data Transmission Rate - Mbps (Megabits per second)
G.Dmt	Downstream: 12 Mbps Upstream: 1.3 Mbps
G.lite	Downstream: 4 Mbps Upstream: 0.5 Mbps
T1.413	Downstream: 8 Mbps Upstream: 1.0 Mbps
ADSL2	Downstream: 12 Mbps Upstream: 1.0 Mbps
AnnexL	Supports longer loops but with reduced transmission rates
ADSL2+	Downstream: 24 Mbps Upstream: 1.0 Mbps
AnnexM	Downstream: 24 Mbps Upstream: 3.5 Mbps
VDSL2	Downstream: 100 Mbps Upstream: 60 Mbps

VDSL Profile	Maximum Downstream Throughput- Mbps (Megabits per second)
8a	Downstream 50
8b	Downstream 50
8c	Downstream: 50
8d	Downstream: 50
12a	Downstream: 68
12b	Downstream: 68
17a	Downstream: 100
30a	Downstream: 100 Mbps Upstream: 100 Mbps
35b	Downstream: 300 Mbps Upstream: 100 Mbps
Options	Description
US0	Band between 20 and 138 kHz for long loops to upstream
Bitswap Enable	Enables adaptive handshaking functionality
SRA Enable	Enables Seamless Rate Adaptation (SRA)
G997.1 EOC	Select Equipment Serial Number or Equipment MAC

xTU-R Serial Number	Address to use router's serial number or MAC address in ADSL EOC messages
---------------------	---

6.6 DNS Proxy

DNS proxy receives DNS queries and forwards DNS queries to the Internet. After the CPE gets answers from the DNS server, it replies to the LAN clients. Configure DNS proxy with the default setting, when the PC gets an IP via DHCP, the domain name, Home, will be added to PC's DNS Suffix Search List, and the PC can access route with "Comtrend.Home".

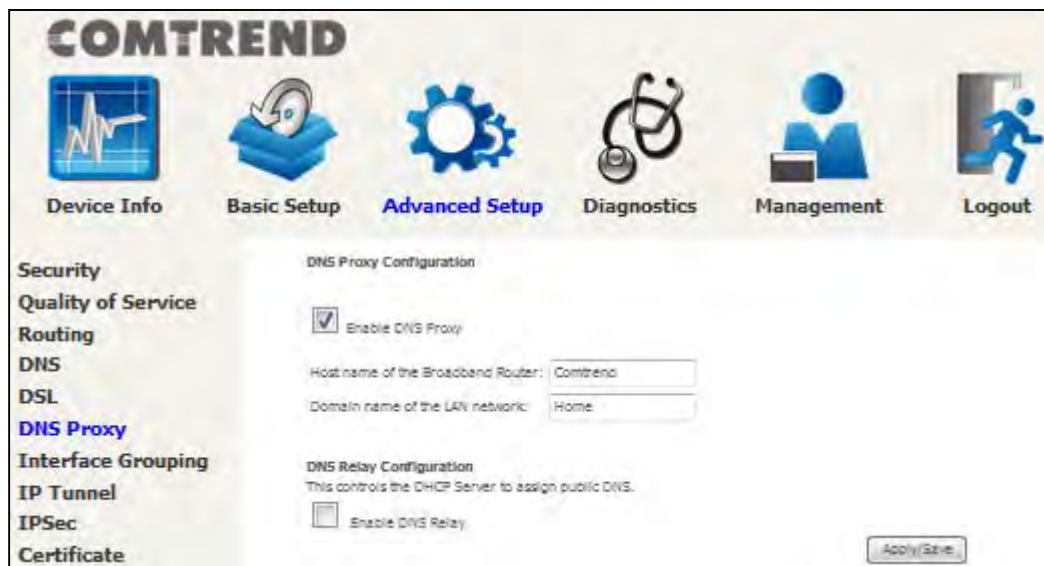

6.7 Interface Grouping

Interface Grouping supports multiple ports to PVC and bridging groups. Each group performs as an independent network. To use this feature, you must create mapping groups with appropriate LAN and WAN interfaces using the **Add** button.

The **Remove** button removes mapping groups, returning the ungrouped interfaces to the Default group. Only the default group has an IP interface.

COMTREND

Device Info Basic Setup **Advanced Setup** Diagnostics Management Logout

Security
Quality of Service
Routing
DNS
DSL
DNS Proxy
Interface Grouping
IP Tunnel
IPSec
Certificate
Multicast
Wireless

Interface Grouping -- A maximum 16 entries can be configured

Interface Grouping supports multiple ports to WAN and bridging groups. Each group will perform as an independent network. To support this feature, you must create mapping groups with appropriate LAN and WAN interfaces using the Add button. The Remove button will remove the grouping and add the ungrouped interfaces to the Default group. Only the default group has IP interface.

Group Name	Remove	WAN Interface	LAN Interfaces	DHCP Vendor IDs
Default			ETH1	
			ETH2	
			ETH3	
			ETH4	
			ETHWAN	
			Comtrend8C99_2.4GHz	
			Comtrend8C99_5GHz	

Add Remove

To add an Interface Group, click the **Add** button. The following screen will appear. It lists the available and grouped interfaces. Follow the instructions shown onscreen.

Device Info

Basic Setup

Advanced Setup

Diagnostics

Management

Logout

Security

Quality of Service

Routing

DNS

DSL

DNS Proxy

Interface Grouping

IP Tunnel

IPSec

Certificate

Multicast

Wireless

Interface grouping Configuration

To create a new interface group:

1. Enter the Group name and the group name must be unique and select either 2, (dynamic) or 3, (static) below:
2. If you like to automatically add LAN clients to a WAN Interface in the new group add the DHCP vendor ID string. By configuring a DHCP vendor ID string any DHCP client request with the specified vendor ID (DHCP option 60) will be denied an IP address from the local DHCP server.
3. Select interfaces from the available interface list and add it to the grouped interface list using the arrow buttons to create the required mapping of the ports. **Note that these clients may obtain public IP addresses**
4. Click Apply/Save button to make the changes effective immediately

IMPORTANT If a vendor ID is configured for a specific client device, please **REBOOT** the client device attached to the modem to allow it to obtain an appropriate IP address.

Group Name:

Grouped WAN Interfaces

Available WAN Interfaces

Grouped LAN Interfaces

Available LAN Interfaces

Comtrend8C99_2.4GHz
 Comtrend8C99_5GHz
 ETHWAN
 ETH1
 ETH2
 ETH3
 ETH4

Automatically Add Clients
With the following DHCP Vendor IDs

Automatically Add Clients With Following DHCP Vendor IDs:

Add support to automatically map LAN interfaces to PVC's using DHCP vendor ID (option 60). The local DHCP server will decline and send the requests to a remote DHCP server by mapping the appropriate LAN interface. This will be turned on when Interface Grouping is enabled.

For example, imagine there are 4 PVCs (0/33, 0/36, 0/37, 0/38). VPI/VCI=0/33 is for PPPoE while the other PVCs are for IP set-top box (video). The LAN interfaces are ETH1, ETH2, ETH3, and ETH4.

The Interface Grouping configuration will be:

1. Default: ETH1, ETH2, ETH3, and ETH4.
2. Video: nas_0_36, nas_0_37, and nas_0_38. The DHCP vendor ID is "Video".

If the onboard DHCP server is running on "Default" and the remote DHCP server is running on PVC 0/36 (i.e. for set-top box use only). LAN side clients can get IP addresses from the CPE's DHCP server and access the Internet via PPPoE (0/33).


If a set-top box is connected to ETH1 and sends a DHCP request with vendor ID "Video", the local DHCP server will forward this request to the remote DHCP server. The Interface Grouping configuration will automatically change to the following:

1. Default: ETH2, ETH3, and ETH4
2. Video: nas_0_36, nas_0_37, nas_0_38, and ETH1.


6.8 IP Tunnel

6.8.1 IPv6inIPv4

Configure 6in4 tunneling to encapsulate IPv6 traffic over explicitly-configured IPv4 links.

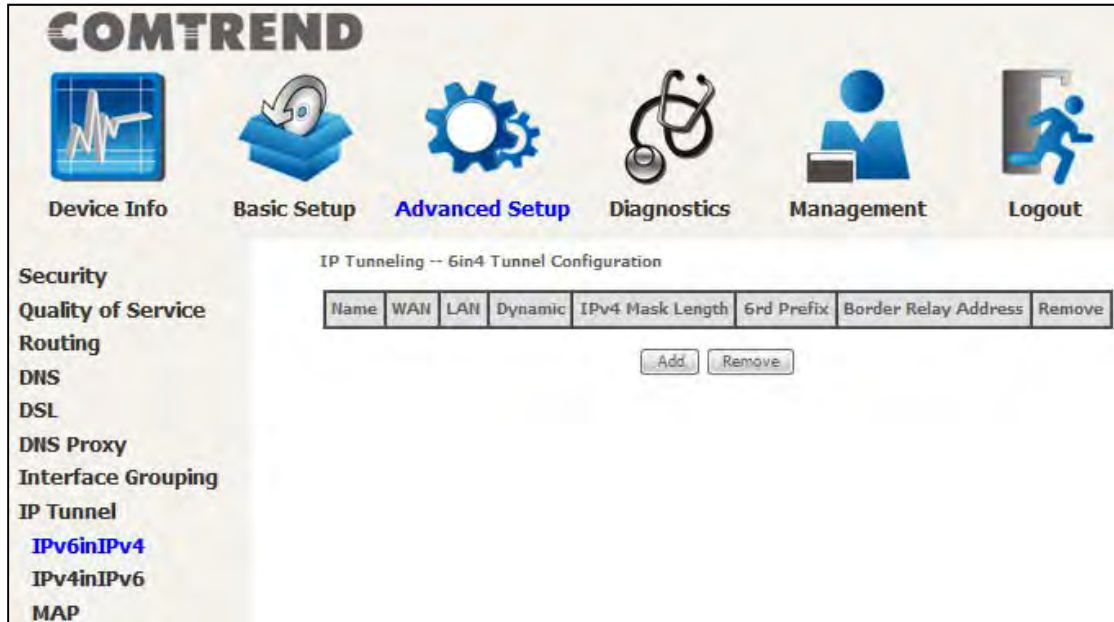

Click the **Add** button to display the following.

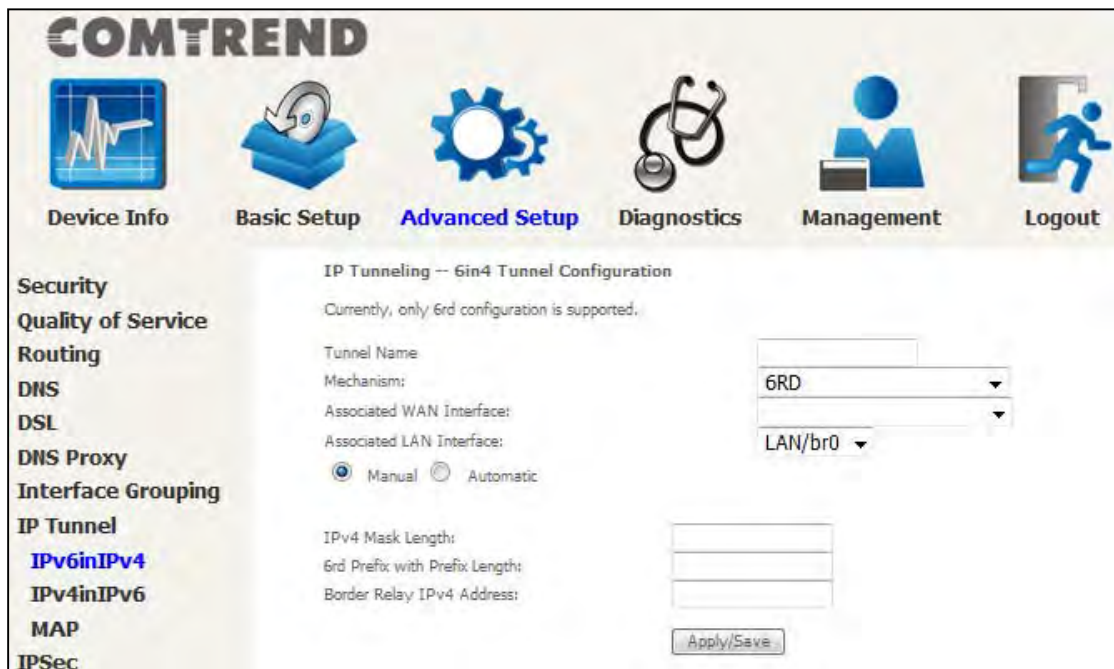

Click **Apply/Save** to apply and save the settings.

Item	Description
Tunnel Name	Input a name for the tunnel
Mechanism	Mechanism used by the tunnel deployment


Associated WAN Interface	Select the WAN interface to be used by the tunnel
Associated LAN Interface	Select the LAN interface to be included in the tunnel
Manual/Automatic	Select automatic for point-to-multipoint tunneling / manual for point-to-point tunneling
IPv4 Mask Length	The subnet mask length used for the IPv4 interface
6rd Prefix with Prefix Length	Prefix and prefix length used for the IPv6 interface
Border Relay IPv4 Address	Input the IPv4 address of the other device

6.8.2 IPv4inIPv6

Configure 4in6 tunneling to encapsulate IPv4 traffic over an IPv6-only environment.



Click the **Add** button to display the following.

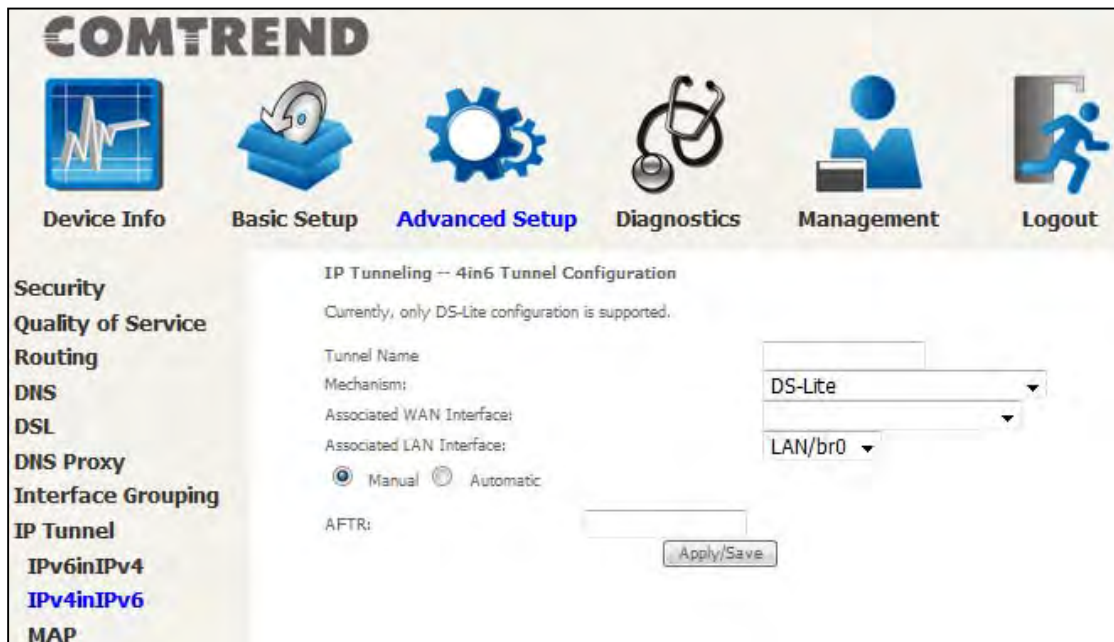

Click **Apply/Save** to apply and save the settings.

Item	Description
Tunnel Name	Input a name for the tunnel
Mechanism	Mechanism used by the tunnel deployment

Associated WAN Interface	Select the WAN interface to be used by the tunnel
Associated LAN Interface	Select the LAN interface to be included in the tunnel
Manual/Automatic	Select automatic for point-to-multipoint tunneling / manual for point-to-point tunneling
AFTR	Address of Address Family Translation Router

6.8.3 MAP

This page allows you to configure MAP-T and MAP-E entries.

COMTREND

Device Info Basic Setup **Advanced Setup** Diagnostics Management Logout


Security
Quality of Service
Routing
DNS
DSL
DNS Proxy
Interface Grouping
IP Tunnel
IPv6inIPv4
IPv4inIPv6
MAP

MAP -- MAP-T/MAP-E Configuration

Mechanism	WAN	Dynamic	BR Prefix	BMR IPv6 Prefix	BMR IPv4 Prefix	PSID Offset	PSID Length	PSID	Remove

Add Remove

Click the **Add** button to display the following.

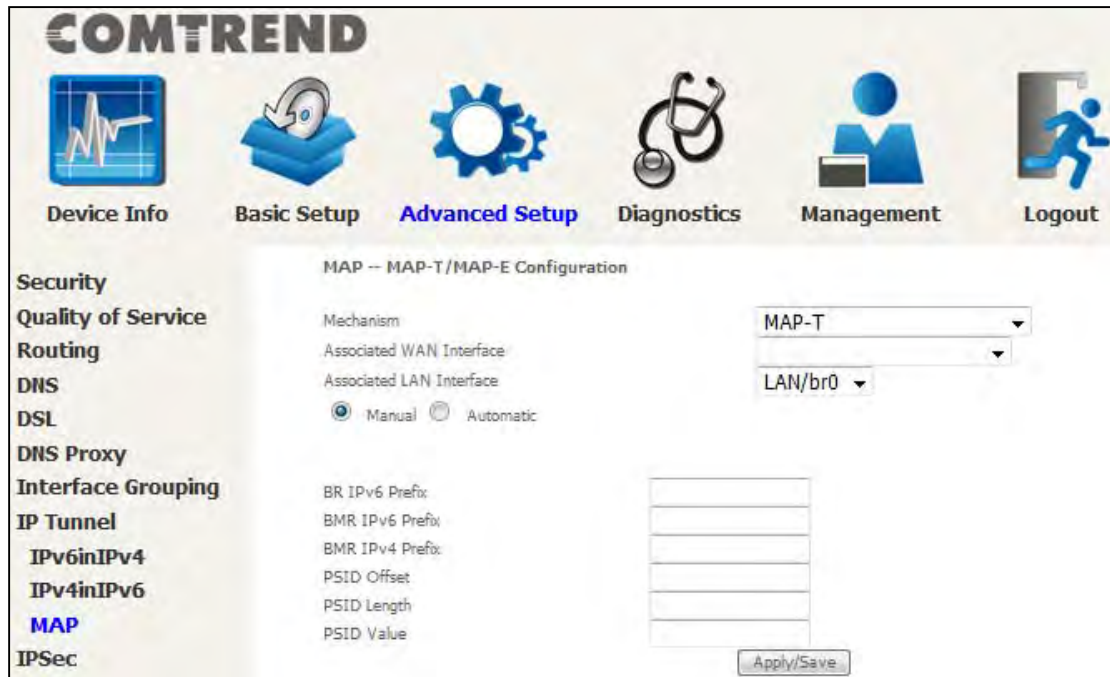

Click **Apply/Save** to apply and save the settings. The settings shown above are described below.

Item	Description
Mechanism	Choose whether to encapsulate with MAP-E or MAP-T to be used for NAT64 translation
Associated WAN Interface	Lists the LAN interfaces available to be used for IP MAP
Associated LAN Interface	Lists the LAN interfaces available to be used for IP MAP
Manual Automatic	Configure the prefix and relative PSID settings manually The prefix settings will be configured automatically from the mapping interfaces
BR IPv6 Prefix	Configure the border relay IPv6 Prefix
BMR IPv6 Prefix	Configure the basic mapping rule IPv6 Prefix
BMR IPv4 Prefix	Configure the basic mapping rule IPv4 Prefix
PSID Offset	Port Set ID offset assigned to the IP MAP
PSID Length	Define the port set ID length
PSID Value	Define the port set ID value

6.9 IPSec

6.9.1 IPSec Tunnel Mode Connections

You can add, edit or remove IPSec tunnel mode connections from this page.

COMTREND

Device Info Basic Setup **Advanced Setup** Diagnostics Management Logout

Security
Quality of Service
Routing
DNS
DSL
DNS Proxy
Interface Grouping
IP Tunnel
IPv6inIPv4
IPv4inIPv6
MAP
IPSec

IPSec Tunnel Mode Connections
Add, remove or enable/disable IPSec tunnel connections from this page.

Connection Name	IP Version	Tunnel Mode	Key Exchange Method	Local Gateway Interface	Remote Gateway	Local Addresses	Remote Addresses	Remove
<input type="button" value="Add New Connection"/> <input type="button" value="Remove"/>								

Click **Add New Connection** to add a new IPSec termination rule.


The following screen will display.

Heading	Description
IPSec Connection Name	User-defined label
IP Version	Select the corresponding IPv4 / IPv6 version for the IPSEC connection
Tunnel Mode	Select tunnel protocol, AH (Authentication Header) or ESP (Encapsulating Security Payload) for this tunnel.
Local Gateway Interface	Select from the list of wan interface to be used as gateway for the IPSEC connection
Remote IPsec Gateway Address	The location of the Remote IPsec Gateway. IP address or domain name can be used.

Tunnel access from local IP addresses	Specify the acceptable host IP on the local side. Choose Single or Subnet .
IP Address/Subnet Mask for VPN	If you chose Single , please enter the host IP address for VPN. If you chose Subnet , please enter the subnet information for VPN.
Tunnel access from remote IP addresses	Specify the acceptable host IP on the remote side. Choose Single or Subnet .
IP Address/Subnet Mask for VPN	If you chose Single , please enter the host IP address for VPN. If you chose Subnet , please enter the subnet information for VPN.
Key Exchange Method	Select from Auto(IKE) or Manual

For the Auto(IKE) key exchange method, select Pre-shared key or Certificate (X.509) authentication. For Pre-shared key authentication you must enter a key, while for Certificate (X.509) authentication you must select a certificate from the list.

See the tables below for a summary of all available options.

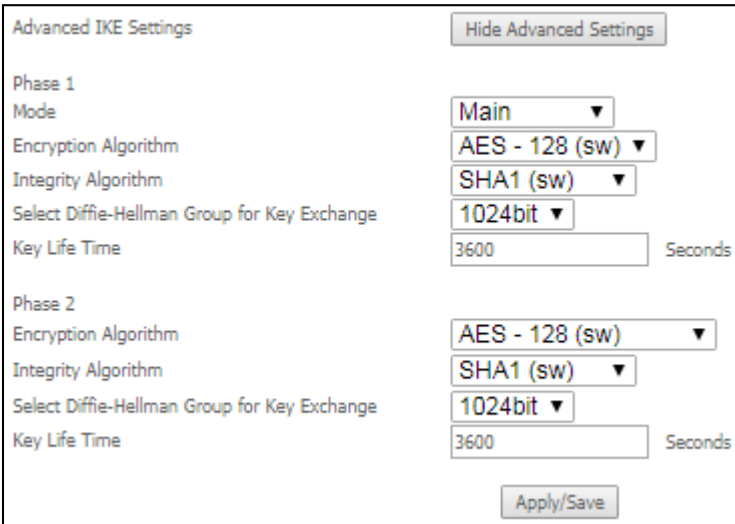Auto(IKE) Key Exchange Method	
Pre-Shared Key / Certificate (X.509)	Input Pre-shared key / Choose Certificate
Perfect Forward Secrecy	Enable or Disable
Advanced IKE Settings	Select Show Advanced Settings to reveal the advanced settings options shown below.
	
Advanced IKE Settings	Select Hide Advanced Settings to hide the advanced settings options shown above.
Phase 1 / Phase 2	Choose settings for each phase, the available options are separated with a "/" character.

Mode	Main / Aggressive
Encryption Algorithm	DES / 3DES / AES 128,192,256
Integrity Algorithm	MD5 / SHA1
Select Diffie-Hellman Group	768 – 8192 bit
Key Life Time	Enter your own or use the default (1 hour)

The Manual key exchange method options are summarized in the table below.

Manual Key Exchange Method

Key Exchange Method	<input type="text" value="Manual"/>
Encryption Algorithm	<input type="text" value="AES"/>
Encryption Key	<input style="width: 100%;" type="text"/> <small>Hex value: DES - 16 digit, 3DES - 48, AES 32, 48, 64 digit</small>
Authentication Algorithm	<input type="text" value="SHA1"/>
Authentication Key	<input style="width: 100%;" type="text"/> <small>Hex value: MD5 - 32 digit, SHA1 - 40 digit</small>
SPI	<input style="width: 100%;" type="text" value="101"/> <small>Hex value: 100-FFFFFFFF</small>
<input type="button" value="Apply/Save"/>	

Encryption Algorithm	DES / 3DES / AES (aes-cbc)
Encryption Key	DES: 16 digit Hex, 3DES: 48 digit Hex
Authentication Algorithm	MD5 / SHA1
Authentication Key	MD5: 32 digit Hex, SHA1: 40 digit Hex
SPI (default is 101)	Enter a Hex value from 100-FFFFFFFF

6.10 Certificate

A certificate is a public key, attached with its owner's information (company name, server name, personal real name, contact e-mail, postal address, etc) and digital signatures. There will be one or more digital signatures attached to the certificate, indicating that these entities have verified that this certificate is valid.


6.10.1 Local

The screenshot shows the COMTREND web interface. At the top, there is a navigation bar with the COMTREND logo and six icons representing different sections: Device Info, Basic Setup, Advanced Setup (highlighted), Diagnostics, Management, and Logout. Below this is a left-hand navigation menu with categories like Security, Quality of Service, Routing, DNS, DSL, DNS Proxy, Interface Grouping, IP Tunnel, IPSec, Certificate, Local (highlighted), and Trusted CA. The main content area is titled 'Local Certificates' and contains the following text: 'Add, View or Remove certificates from this page. Local certificates are used by peers to verify your identity. Maximum 4 certificates can be stored.' Below the text is a table header with columns: Name, In Use, Subject, Type, and Action. At the bottom of the main content area, there are two buttons: 'Create Certificate Request' and 'Import Certificate'.

CREATE CERTIFICATE REQUEST

Click **Create Certificate Request** to generate a certificate-signing request.

The certificate-signing request can be submitted to the vendor/ISP/ITSP to apply for a certificate. Some information must be included in the certificate-signing request. Your vendor/ISP/ITSP will ask you to provide the information they require and to provide the information in the format they regulate. Enter the required information and click **Apply** to generate a private key and a certificate-signing request. The contents of this application form do not affect the basic parameter settings of the product.

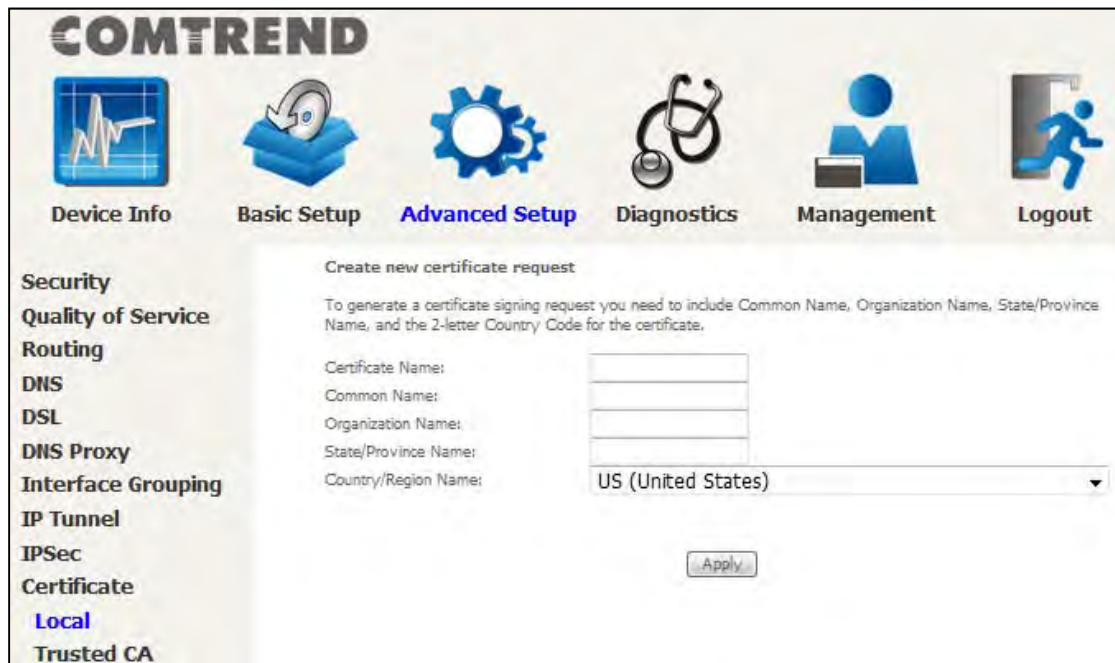

The following table is provided for your reference.

Item	Description
Certificate Name	A user-defined name for the certificate.
Common Name	Usually, the fully qualified domain name for the machine.
Organization Name	The exact legal name of your organization. Do not abbreviate.
State/Province Name	The state or province where your organization is located. It cannot be abbreviated.
Country/Region Name	The two-letter ISO abbreviation for your country.

IMPORT CERTIFICATE

Click **Import Certificate** to paste the certificate content and the private key provided by your vendor/ISP/ITSP into the corresponding boxes shown below.


The screenshot shows the COMTREND web interface. At the top, there is a navigation bar with icons and labels for: Device Info, Basic Setup, **Advanced Setup**, Diagnostics, Management, and Logout. Below this is a sidebar menu with categories: Security, Quality of Service, Routing, DNS, DSL, DNS Proxy, Interface Grouping, IP Tunnel, IPSec, Certificate (with sub-items Local and Trusted CA), Multicast, and Wireless. The main content area is titled 'Import certificate' and contains the following fields and instructions:

- Instruction: Enter certificate name, paste certificate content and private key.
- Field: Certificate Name: [input box]
- Field: Certificate: [text area containing: -----BEGIN CERTIFICATE-----
<insert certificate here>
-----END CERTIFICATE-----]
- Field: Private Key: [text area containing: -----BEGIN RSA PRIVATE KEY-----
<insert private key here>
-----END RSA PRIVATE KEY-----]
- Button: Apply


Enter a certificate name and click the **Apply** button to import the certificate and its private key.

6.10.2 Trusted CA

CA is an abbreviation for Certificate Authority, which is a part of the X.509 system. It is itself a certificate, attached with the owner information of this certificate authority; but its purpose is not encryption/decryption. Its purpose is to sign and issue certificates, in order to prove that these certificates are valid.

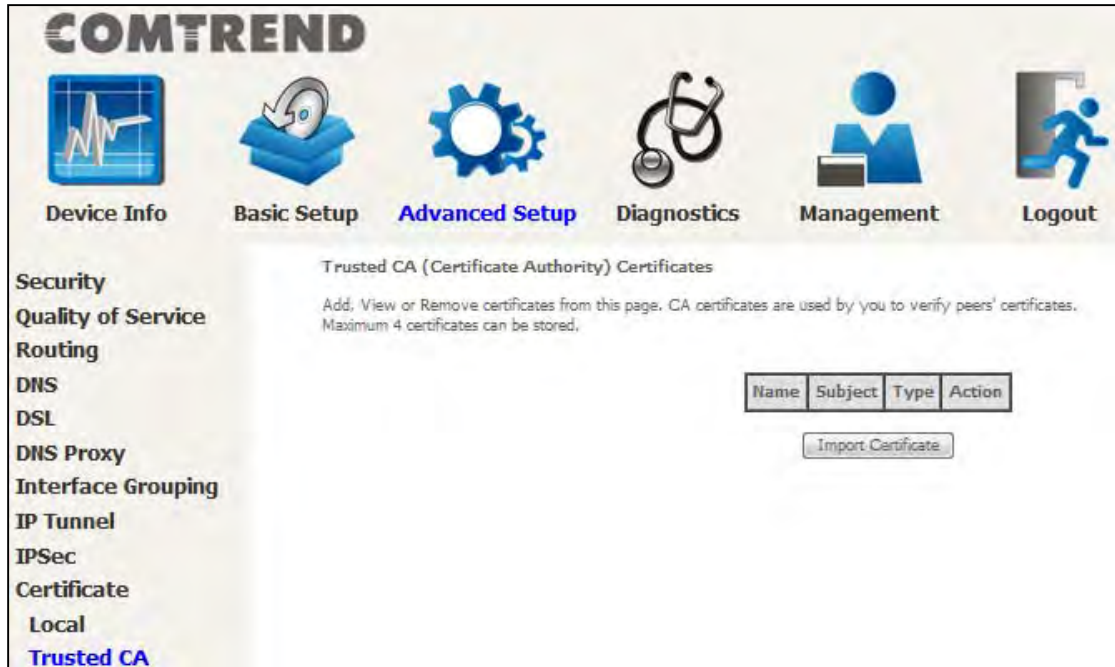

Click **Import Certificate** to paste the certificate content of your trusted CA. The CA certificate content will be provided by your vendor/ISP/ITSP and is used to authenticate the Auto-Configuration Server (ACS) that the CPE will connect to.

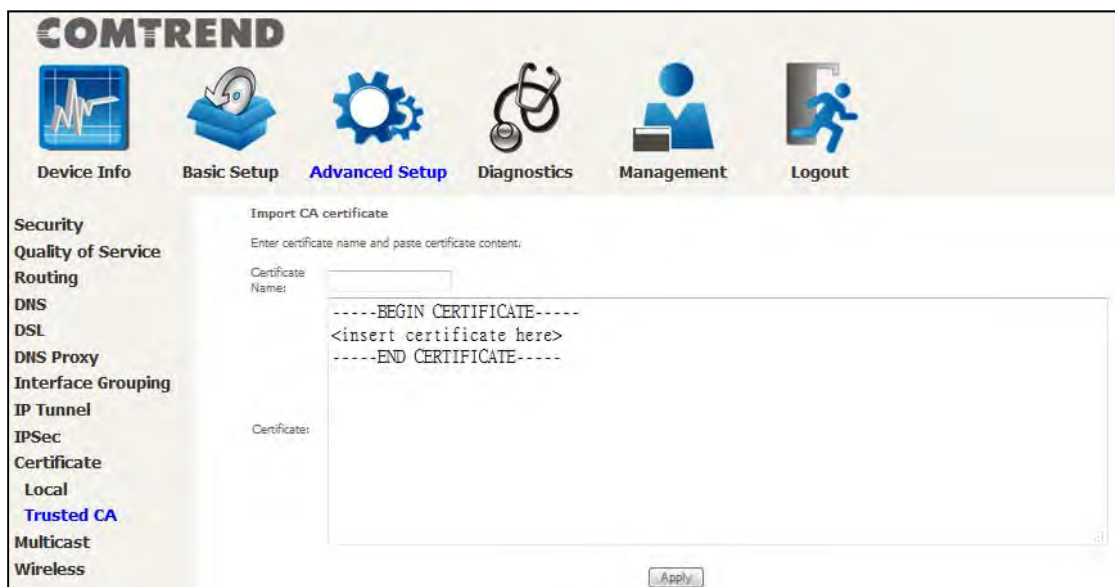

Enter a certificate name and click **Apply** to import the CA certificate.

6.11 Multicast

Input new IGMP or MLD protocol configuration fields if you want modify default values shown. Then click **Apply/Save**.

The screenshot shows the COMTREND web interface with the 'Advanced Setup' menu selected. The left sidebar contains a navigation menu with the following items: Security, Quality of Service, Routing, DNS, DSL, DNS Proxy, Interface Grouping, IP Tunnel, IPsec, Certificate, **Multicast**, and Wireless. The main content area is titled 'Multicast' and contains the following configuration sections:

- Multicast Precedence:** A dropdown menu set to 'Disable' with a note 'lower value, higher priority'.
- Multicast Strict Grouping Enforcement:** A dropdown menu set to 'Disable'.
- IGMP Configuration:** A section with the instruction 'Enter IGMP protocol configuration fields if you want modify default values shown below.' and several input fields:
 - Default Version: 3
 - Query Interval: 125
 - Query Response Interval: 10
 - Last Member Query Interval: 10
 - Robustness Value: 2
 - Maximum Multicast Groups: 25
 - Maximum Multicast Data Sources (for IGMPv3): 10
 - Maximum Multicast Group Members: 25
 - Fast Leave Enable:
- IGMP Group Exception List:** A table with columns 'Group Address', 'Mask/Mask bits', and 'Remove'. It contains three rows of data and an 'Add' button at the bottom right.

Group Address	Mask/Mask bits	Remove
224.0.0.0	255.255.255.0	<input type="checkbox"/>
239.255.255.250	255.255.255.255	<input type="checkbox"/>
224.0.255.135	255.255.255.255	<input type="checkbox"/>
<input type="text"/>	<input type="text"/>	<input type="button" value="Add"/>
- MLD Configuration:** A section with the instruction 'Enter MLD protocol (IPv6 Multicast) configuration fields if you want modify default values shown below.' and several input fields:
 - Default Version: 2
 - Query Interval: 125
 - Query Response Interval: 10
 - Last Member Query Interval: 10
 - Robustness Value: 2
 - Maximum Multicast Groups: 10
 - Maximum Multicast Data Sources (for mldv2): 10
 - Maximum Multicast Group Members: 10
 - Fast Leave Enable:
- MLD Group Exception List:** A table with columns 'Group Address', 'Mask/Mask bits', and 'Remove'. It contains three rows of data and an 'Add' button at the bottom right.

Group Address	Mask/Mask bits	Remove
ff01::0000	ffff::0000	<input type="checkbox"/>
ff02::0000	ffff::0000	<input type="checkbox"/>
ff05::0001:0003	ffff.ffff.ffff.ffff.ffff.ffff.ffff.ffff	<input type="checkbox"/>
<input type="text"/>	<input type="text"/>	<input type="button" value="Add"/>

At the bottom of the page, there is an 'Apply/Save' button.

Multicast Precedence: Select precedence of multicast packets.

Multicast Strict Grouping Enforcement: Enable/Disable multicast strict grouping.

Item	Description
Default Version	Define IGMP using version with video server.
Query Interval	The query interval is the amount of time in seconds between IGMP General Query messages sent by the router (if the router is the querier on this subnet). The default query interval is 125 seconds.
Query Response Interval	The query response interval is the maximum amount of time in seconds that the IGMP router waits to receive a response to a General Query message. The query response interval is the Maximum Response Time field in the IGMP v2 Host Membership Query message header. The default query response interval is 10 seconds and must be less than the query interval.
Last Member Query Interval	The last member query interval is the amount of time in seconds that the IGMP router waits to receive a response to a Group-Specific Query message. The last member query interval is also the amount of time in seconds between successive Group-Specific Query messages. The default last member query interval is 10 seconds.
Robustness Value	The robustness variable is a way of indicating how susceptible the subnet is to lost packets. IGMP can recover from robustness variable minus 1 lost IGMP packets. The robustness variable should be set to a value of 2 or greater. The default robustness variable value is 2.
Maximum Multicast Groups	Setting the maximum number of Multicast groups.
Maximum Multicast Data Sources (for IGMPv3)	Define the maximum multicast video stream number.
Maximum Multicast Group Members	Setting the maximum number of groups that ports can accept.
Fast Leave Enable	When you enable IGMP fast-leave processing, the switch immediately removes a port when it detects an IGMP version 2 leave message on that port.

IGMP Group Exception List / MLD Group Exception List

Item	Description
Group Address	This is the delimited list of ignored multicast addresses being queried when sending a Group-Specific or Group-and-Source-Specific Query.
Mask/Mask Bits	This is the delimited list of ignored multicast mask being queried when sending a Group-Specific or Group-and-Source-Specific Query.
Remove	Allows a user to remove a specific item in the exception list.

6.12 Wireless

6.12.1 SSID

This page allows you to configure the Virtual interfaces for each Physical interface.

COMTREND

Device Info Basic Setup **Advanced Setup** Diagnostics Management Logout

Security
Quality of Service
Routing
DNS
DSL
DNS Proxy
Interface Grouping
IP Tunnel
IPSec
Certificate
Multicast
Wireless
SSID

SSID
 This page allows you to configure the Virtual interfaces for each Physical interface.

Wireless Interface: Comtrend8C99_2.4GHz(1C:64:99:23:8C:9A) ▼

BSS-MAC (SSID): 1C:64:99:23:8C:9A (Comtrend8C99_2.4GHz enabled) ▼

BSS Enabled: Enabled ▼

Network Name (SSID): Comtrend8C99_2.4GHz

Network Type: Open ▼

AP Isolation: Off ▼

BSS Max Associations Limit: 128

WMM Advertise: Advertise ▼

WMMF: On ▼

Apply Cancel

Click the **Apply** button to apply your changes. The settings shown above are described below.

Item	Description
Wireless Interface	Select which wireless interface to configure
BSS-MAC (SSID)	Select desired BSS to configure
BSS Enabled	Enable or disable this SSID
Network Name (SSID)	Sets the network name (also known as SSID) of this network
Network Type	Selecting Closed hides the network from active scans. Selecting Open reveals the network from active scans.
AP Isolation	Selecting On enables AP Isolation mode. When enabled, STAs associated with the AP will not be able to communicate with each other.
BSS Max Associations Limit	Sets the maximum associations for this BSS

WMM Advertise	When WMM is enabled for the radio, selecting On allows WMM to be advertised in beacons and probes for this BSS. Off disables advertisement of WMM in beacons and probes.
WMF	Choose On to enable Wireless Multicast Forwarding on this BSS. Off disables this feature.

6.12.2 Security

This page allows you to configure security for the wireless LAN interfaces.

The screenshot shows the 'Security' configuration page in the Comtrend web interface. The left sidebar contains a navigation menu with the following items: Security, Quality of Service, Routing, DNS, DSL, DNS Proxy, Interface Grouping, IP Tunnel, IPSec, Certificate, Multicast, Wireless, SSID, Security (highlighted), WPS, MAC Filtering, Wireless Bridge, and Advanced. The main content area is titled 'SECURITY' and includes the following configuration options:

- Wireless interface: Comtrend8C99_2.4GHz(1C:64:99:23:8C:9A) [Select]
- 802.11 Authentication: Open
- 802.1X Authentication: Disabled
- WPA: Disabled
- WPA-PSK: Disabled
- WPA2: Disabled
- WPA2-PSK: Enabled
- WPA3-SAE: Disabled
- WPA Encryption: AES
- RADIUS Server: 0.0.0.0
- RADIUS Port: 1812
- RADIUS Key: ****
- WPA passphrase: ***** [Click here to display]
- Protected Management Frames: Capable
- Network Key Rotation Interval: 0
- Pairwise Key Rotation Interval: 0
- Network Re-auth Interval: 36000

Buttons for 'Apply' and 'Cancel' are located at the bottom of the configuration area.

Click the **Apply** button to apply your changes. For information on each parameter, move the cursor over the parameter that you are interested in (as shown here).

This close-up shows the '802.11 Authentication' dropdown menu with three options: 'Open', 'Disabled', and 'Disabled'. A tooltip box is positioned over the 'Open' option, containing the following text:

802.11 Authentication:
Selects 802.11 authentication method. Open or Shared.
OSEN:

6.12.3 WPS

This page allows you to configure WPS.

COMTREND

Device Info Basic Setup **Advanced Setup** Diagnostics Management Logout

Security
Quality of Service
Routing
DNS
DSL
DNS Proxy
Interface Grouping
IP Tunnel
IPSec
Certificate
Multicast
Wireless
SSID
Security
WPS
MAC Filtering
Wireless Bridge
Advanced

WPS
This page allows you to configure WPS.

Wireless Interface: Comtrend8C99_2.4GHz(1C:64:99:23:8C:9A)

WPS Current Mode: AP with Built-in Registrar

WPS Configuration: Enabled

Device WPS UUID: 91615404

Device PIN:

Configure by External Registrar: Allow

Current SSID: Comtrend8C99_2.4GHz
Current Authentication Type: WPA2-PSK
Current Encryption Type: TKIP+AES
[Click here to display](#)

SSID: Comtrend8C99_2.4GHz

Authentication Type: WPA2-PSK

Encryption Type: TKIP+AES

WPA passphrase: [Click here to display](#)

Station PIN: Note: Empty for PBC method.

Authorized Station MAC:

WPS Current Status: Init

List Wifi-Invite enabled STAs:

Action	Friendly Name	MAC Address

Click the **Apply** button to apply your changes. For information on each parameter, move the cursor over the parameter that you are interested in (as shown here).

WPS
This page allows you to configure WPS.

Wireless Interface: Comtrend0001_5GHz(02:10:18:01:00:02)

WPS Current Mode:

WPS Configuration: Enabled

6.12.4 MAC Filtering

This page allows you to configure the MAC Filtering for each Physical interface.

COMTREND

Device Info Basic Setup **Advanced Setup** Diagnostics Management Logout

Security
Quality of Service
Routing
DNS
DSL
DNS Proxy
Interface Grouping
IP Tunnel
IPSec
Certificate
Multicast
Wireless
SSID
Security
WPS
MAC Filtering

MAC Filtering
 This page allows you to configure the MAC Filtering for each Physical interface.

Wireless Interface: Comtrend8C99_2.4GHz(1C:64:99:23:8C:9A) ▾

MAC Restrict Mode: Disabled ▾

MAC filter based Probe Response: On ▾

MAC Address	Action

Apply Cancel

Click the **Apply** button to apply your changes. For information on each parameter, move the cursor over the parameter that you are interested in (as shown here).

MAC Restrict Mode: Disabled ▾

On ▾

MAC Restrict Mode:
 Selects whether clients with the specified MAC address are allowed or denied wireless access.

6.12.5 Wireless WDS(Wireless Distribution System)

This page allows you to configure the Physical Wireless interfaces.

Click the **Apply** button to apply your changes. For information on each parameter, move the cursor over the parameter that you are interested in (as shown here).

Note: With reference to the above setup, please ensure that the conditions below are met, and both devices are rebooted afterwards:

1. Ensure that the first Comtrend device (home router) does not use the same IP address as the second Comtrend wireless device (wireless WDS). See section 5.3 LAN, for details on how to change the IP address.

The screenshot displays the Comtrend web interface for LAN Setup. The top navigation bar includes icons for Device Info, Basic Setup, Advanced Setup, Diagnostics, Management, and Logout. The left sidebar lists various settings: WAN Setup, NAT, LAN (highlighted), Lan VLAN Setting, IPv6 Autoconfig, UPnP, Parental Control, Home Networking, and Wireless. The main content area is titled 'Local Area Network (LAN) Setup' and includes a dropdown for 'GroupName' set to 'Default'. A red box highlights the 'IP Address' field with the value '192.168.1.1' and the 'Subnet Mask' field with the value '255.255.255.0'. Below this, there are several configuration options: 'Enable IGMP Snooping' (checked), 'Standard Mode' (radio button), 'Blocking Mode' (radio button), 'Enable IGMP LAN to LAN Multicast' (set to 'Disable'), 'Enable LAN side firewall' (checkbox), 'Disable DHCP Server' (radio button), 'Enable DHCP Server' (radio button), 'Start IP Address' (192.168.1.2), 'End IP Address' (192.168.1.254), 'Leased Time (hour): 24', and 'Setting TFTP Server' (checkbox). At the bottom, there is a 'Static IP Lease List' table with columns for 'MAC Address', 'IP Address', and 'Remove', along with 'Add Entries' and 'Remove Entries' buttons, and an 'Apply/Save' button.

- Both devices need to have the same fixed channel. See section 6.12.6 [Advanced](#) for details.

COMTREND

Device Info Basic Setup **Advanced Setup** Diagnostics Management Logout

Security
 Quality of Service
 Routing
 DNS
 DSL
 DNS Proxy
 Interface Grouping
 IP Tunnel
 IPSec
 Certificate
 Multicast
 Wireless
 SSID
 Security
 WPS
 MAC Filtering
 Wireless Bridge
Advanced

Radio
 This page allows you to configure the Physical Wireless interfaces.

Wireless Interface: Comtrend8C99_2.4GHz(1C:64:99:23:8C:9A) ▾

Interface: Enabled ▾

802.11 Band: 2.4 GHz ▾ Current: 2.4 GHz

Channel Specification: 1 ▾ Current: 1 *Interference Level: Acceptable**

802.11 n-mode: Auto ▾

Bandwidth: 20 MHz ▾ Current: 20MHz

NPHY Rate: Auto ▾

NPHY TxChains: 2 ▾

NPHY RxChains: 2 ▾

54g™ Mode: 54g Auto ▾

802.11n Protection: Auto ▾

VLAN Priority Support: Off ▾

Rate: 1 Mbps ▾

Basic Rate Set: Default ▾

Multicast Rate: Auto ▾

Regulatory Mode: 802.11H Loose ▾

DFS Preferred Channel List: [-] [-] [-] [-] [-]

TPC Mitigation (db): 0 (Off) ▾

OBSS Coexistence: Off ▾

Fragmentation Threshold: 2346

RTS Threshold: 2347

DTM Interval: 1

Beacon Interval: 100

Beacon Rotation: Disabled ▾

Preamble Type: Long ▾

Max Associations Limit: 128

XPress™ Technology: On ▾

SW Probe Response: On ▾

Beamforming transmission (BFR): Disabled ▾

Beamforming reception (BFE): Disabled ▾

MU-MIMO TX: Disabled ▾

RFS Mode Advertisement: Auto ▾

WMM Support: On ▾

No-Acknowledgement: Off ▾

APSD Support: On ▾

Enable IGMP Proxy: Disable ▾

BandSteering Daemon: Disable ▾

BSD Role Config:

Helper Addr&Port:	IPAddr	Port Number
192.168.1.2	192.168.1.2	9877
Primary Addr&Port:	192.168.1.1	9878

Airtime Fairness: Enable ▾

Apply Cancel

- Both devices need to have a (different) fixed access SSID (Network Name). See section 6.12.1 SSID for details.

The screenshot displays the Comtrend web interface. At the top, there is a navigation bar with icons for Device Info, Basic Setup, Advanced Setup (highlighted), Diagnostics, Management, and Logout. Below this is a sidebar menu with categories: Security, Quality of Service, Routing, DNS, DSL, DNS Proxy, Interface Grouping, IP Tunnel, IPSec, Certificate, Multicast, Wireless, and SSID (highlighted). The main content area is titled 'SSID' and includes a description: 'This page allows you to configure the Virtual interfaces for each Physical interface.' The configuration table is as follows:

Wireless interface:	Comtrend8C99_2.4GHz(1C:64:99:23:8C:9A) ▾
BSS-MAC (SSID):	1C:64:99:23:8C:9A (Comtrend8C99_2.4GHz enabled) ▾
BSS Enabled:	Enabled ▾
Network Name (SSID):	Comtrend8C99_2.4GHz
Network Type:	Open ▾
AP Isolation:	Off ▾
BSS Max Associations Limit:	128
WMM Advertise:	Advertise ▾
WME:	On ▾

At the bottom of the configuration area are 'Apply' and 'Cancel' buttons.

- Both devices need to have 802.11 Authentication Open and WPA2-PSK/WPA3-SAE disabled. See section 6.12.2 Security for details.

COMTREND

Device Info Basic Setup **Advanced Setup** Diagnostics Management Logout

Security
 Quality of Service
 Routing
 DNS
 DSL
 DNS Proxy
 Interface Grouping
 IP Tunnel
 IPsec
 Certificate
 Multicast
 Wireless
 SSID
Security
 WPS
 MAC Filtering
 Wireless Bridge
 Advanced

SECURITY
 This page allows you to configure security for the wireless LAN interfaces.

Wireless Interface: Comtrend8C99_2.4GHz(1C:64:99:23:8C:9A)

802.11 Authentication: Open

802.1X Authentication: Disabled

WPA: Disabled

WPA-PSK: Disabled

WPA2: Disabled

WPA2-PSK: Disabled

WPA3-SAE: Disabled

WPA Encryption: AES

RADIUS Server: 0.0.0.0

RADIUS Port: 1812

RADIUS Key: ****

WPA passphrase: ***** [Click here to display](#)

Protected Management Frames: Capable

Network Key Rotation Interval: 0

Pairwise Key Rotation Interval: 0

Network Re-auth Interval: 36000

5. Both devices (A & B) need to have each other's MAC address. See section [6.12.5 Wireless WDS](#) for details.

COMTREND

Device Info Basic Setup **Advanced Setup** Diagnostics Management Logout

Security
Quality of Service
Routing
DNS
DSL
DNS Proxy
Interface Grouping
IP Tunnel
IPSec
Certificate
Multicast
Wireless
SSID
Security
WPS
MAC Filtering
Wireless Bridge
Advanced

Wireless Bridge
This page allows you to configure the Physical Wireless interfaces.

Wireless Interface: Comtrend8C99_2.4GHz(1C:64:99:23:8C:9A) ▾

Mode: Access Point ▾

Network: BSS ▾

URE Mode: OFF ▾

STA Retry Time(sec): 5

Bridges:

Peer MAC Address Lite Status

Bridge Restriction: Enabled ▾

Bridge Link Detection Interval: 1

Apply Cancel

6. Now make sure to reboot both devices. See section [8.8 Reboot](#) for details.

COMTREND

Device Info Basic Setup Advanced Setup Diagnostics **Management** Logout

Settings
System Log
SNMP Agent
TR-069 Client
Internet Time
Access Control
Update Software
Reboot

Click the button below to reboot the router.

Reboot

6.12.6 Advanced

This page allows you to configure the Physical Wireless interfaces.

2.4GHz

COMTREND

Device Info Basic Setup **Advanced Setup** Diagnostics Management Logout

Security
Quality of Service
Routing
DNS
DSL
DNS Proxy
Interface Grouping
IP Tunnel
IPSec
Certificate
Multicast
Wireless
SSID
Security
WPS
MAC Filtering
Wireless Bridge
Advanced

Radio
 This page allows you to configure the Physical Wireless interfaces.

Wireless Interface: Comtrend8C99_2.4GHz(1C:64:99:23:8C:9A) ▾

Interface: Enabled ▾
 802.11 Band: 2.4 GHz ▾ Current: 2.4 GHz
 Channel Specification: 1 ▾ Current: 1 ***Interference Level: Acceptable
 802.11 n-mode: Auto ▾
 Bandwidth: 20 MHz ▾ Current: 20MHz
 NPHY Rate: Auto ▾
 NPHY TxChains: 2 ▾
 NPHY RxChains: 2 ▾
 54g™ Mode: 54g Auto ▾
 802.11n Protection: Auto ▾
 VLAN Priority Support: Off ▾
 Rate: 1 Mbps ▾
 Basic Rate Set: Default ▾
 Multicast Rate: Auto ▾

Regulatory Mode: 802.11H Loose ▾
 DFS Preferred Channel List: ▾ ▾ ▾ ▾ ▾
 TPC Mitigation (db): 0 (Off) ▾

OBSS Coexistence: Off ▾

Fragmentation Threshold: 2346
 RTS Threshold: 2347
 DTIM Interval: 1
 Beacon Interval: 100
 Beacon Rotation: Disabled ▾
 Preamble Type: Long ▾
 Max Associations Limit: 128

XPress™ Technology: On ▾
 SW Probe Response: On ▾

Beamforming transmission (BFR): Disabled ▾
 Beamforming reception (BFE): Disabled ▾
 MU-MIMO TX: Disabled ▾

RIFS Mode Advertisement: Auto ▾

WMM Support: On ▾
 No-Acknowledgement: Off ▾
 APSD Support: On ▾

Enable IGMP Proxy: Disable ▾

BandSteering Daemon : Disable ▾
 BSD Role Config: IPAddr Port Number
 Helper Addr&Port: 192.168.1.2 9877
 Primary Addr&Port: 192.168.1.1 9878

Airtime Fairness: Enable ▾

Apply Cancel

5GHz

COMTREND

Device Info Basic Setup **Advanced Setup** Diagnostics Management Logout

Security
Quality of Service
Routing
DNS
DSL
DNS Proxy
Interface Grouping
IP Tunnel
IPSec
Certificate
Multicast
Wireless
SSID
Security
WPS
MAC Filtering
Wireless Bridge
Advanced

Radio
 This page allows you to configure the Physical Wireless interfaces.

Wireless Interface: Comtrend8C99_5GHz(1C:64:99:23:8C:9B) ▾

Interface: Enabled ▾

802.11 Band: 5 GHz ▾ Current: 5 GHz

Channel Specification: Auto ▾ Current: 100 ***Interference Level: Acceptable

802.11 n-mode: Auto ▾

Bandwidth: 40 MHz ▾ Current: 20MHz

NPHY Rate: Auto ▾

NPHY TxChains: 4 ▾

NPHY RxChains: 4 ▾

54g™ Mode: 54g Auto ▾

802.11n Protection: Auto ▾

VLAN Priority Support: Off ▾

Rate: 6 Mbps ▾

Basic Rate Set: Default ▾

Multicast Rate: Auto ▾

Regulatory Mode: 802.11H Loose ▾

DFS Preferred Channel List: 0 ▾ 0 ▾ 0 ▾ 0 ▾ 0 ▾ 0 ▾

TPC Mitigation (db): 0 (Off) ▾

OBSS Coexistence: Off ▾

Fragmentation Threshold: 2346

RTS Threshold: 2347

DTIM Interval: 1

Beacon Interval: 100

Beacon Rotation: Disabled ▾

Preamble Type: Long ▾

Max Associations Limit: 64

XPress™ Technology: On ▾

SW Probe Response: On ▾

Beamforming transmission (BFR): Disabled ▾

Beamforming reception (BFE): Disabled ▾

MU-MIMO TX: Enabled ▾

RIFS Mode Advertisement: Auto ▾

WMM Support: On ▾

No-Acknowledgement: Off ▾

APSD Support: On ▾

Enable IGMP Proxy: Disable ▾

BandSteering Daemon : Disable ▾

BSD Role Config: IPAddr Port Number

Helper Addr&Port: 192.168.1.2 9877

Primary Addr&Port: 192.168.1.1 9878

Airtime Fairness: Enable ▾

Apply Cancel

Click the **Apply** button to apply your changes.

For information on each parameter, move the cursor over the parameter that you are interested in (as shown here).

Country:	UNITED STATES ▼
Regulation:	Current: US
Restricts the channel set based on country requirements.	0 ▼ Current: 0

Chapter 7 Diagnostics

You can reach this page by clicking on the following icon located at the top of the screen.



7.1 Diagnostics – Individual Tests

The first Diagnostics screen is a dashboard that shows overall connection status.

LAN	
Down	Down
Down	100 FD
ETH1	ETH2
ETH3	ETH4
LAN IPv4 Address	192.168.1.1
LAN Subnet Mask	255.255.255.0
LAN MAC Address	1c:64:96:23:8c:98
DHCP Server	Disabled
DHCP IP Range	192.168.1.2 - 192.168.1.254

Device	
Model	VR-3071
Serial Number	19A3071U00P-4N000095
Firmware Version	BQ11-502CTU-C01_R05.A2p6LD46n.d27j
Bootloader (CFE) Version	1.0.38-163.231-1
Up Time	48 mins:33 secs
System Log	<input type="button" value="Show"/>

Click the Diagnostics Menu item on the left side of the screen to display the individual connections.

Diagnostics

The individual tests are listed below. If a test displays a fail status, click "Rerun Diagnostic Tests" at the bottom of this page to make sure the fail status is consistent. If the test continues to fail, click "Help" and follow the troubleshooting procedures.

Test the connection to your local network

Test your ETH1 Connection:	FAIL	Help
Test your ETH2 Connection:	FAIL	Help
Test your ETH3 Connection:	PASS	Help
Test your ETH4 Connection:	FAIL	Help
Test your ETHWAN Connection:	FAIL	Help
Test your Wireless Connection:	PASS,PASS	Help

7.2 Ethernet OAM

The Ethernet OAM (Operations, Administration, Management) page provides settings to enable/disable 802.3ah, 802.1ag/Y1.731 OAM protocols.



To enable Ethernet Link OAM (802.3 ah), click Enabled to display the full configuration list. At least one option must be enabled for 802.1ah.

Ethernet Link OAM (802.3ah)

Enabled

WAN Interface:

OAM ID: (positive integer)

Auto Event

Variable Retrieval

Link Events

Remote Loopback

Active Mode

Item	Description
WAN Interface	Select layer 2 WAN interface for outgoing OAM packets
OAM ID	OAM Identification number
Auto Event	Supports OAM auto event
Variable Retrieval	Supports OAM variable retrieval
Link Events	Supports OAM link events
Remote Loopback	Supports OAM remove loopback
Active mode	Supports OAM active mode

To enable Ethernet Service OAM (802.1ag/Y1731), click Enabled to display the full configuration list.

Ethernet Service OAM (802.1ag / Y.1731)

Enabled 802.1ag Y.1731

WAN Interface:

MD Level: [0-7]

MD Name: [e.g. Broadcom]

MA ID: [e.g. BRCM]

Local MEP ID: [1-8191]

Local MEP VLAN ID: [1-4094] (-1 means no VLAN tag)

CCM Transmission

Remote MEP ID: [1-8191] (-1 means no Remote MEP)

Loopback and Linktrace Test

Target MAC: [e.g. 02:10:18:aa:bb:cc]

Linktrace TTL: [1-255] (-1 means no max hop limit)

Loopback Result:	N/A		
Linktrace Result:	N/A		

Click **Apply/Save** to implement new configuration settings.

Item	Description
WAN Interface	Select from the list of WAN Interfaces to send OAM packets
MD Level	Maintenance Domain Level
MD Name	Maintenance Domain name
MA ID	Maintenance Association Identifier
Local MEP ID	Local Maintenance association End Point Identifier
Local MEP VLAN ID	VLAN IP used for Local Maintenance End point

Click CCM Transmission to enable CPE sending Continuity Check Message (CCM) continuously.

Remote MEP ID	Maintenance association End Point Identifier for the remote receiver
---------------	--

To perform Loopback/Linktrace OAM test, enter the Target MAC of the destination and click "Send Loopback" or "Send Linktrace" button.

Target MAC	MAC Address of the destination to send OAM loopback/linktrace packet
Linktrace TTL	Time to Live value for the loopback/linktrace packet

7.3 Ping

Input the IP address/hostname and click the **Ping** button to execute ping diagnostic test to send the ICMP request to the specified host.

The screenshot shows the COMTREND web interface. At the top, there is a navigation menu with icons for Device Info, Basic Setup, Advanced Setup, Diagnostics (selected), Management, and Logout. The main content area is titled 'Diagnostics' and includes sub-sections for Ethernet OAM, Ping (selected), and TraceRoute. The Ping section displays the following test results:

```

Ping
Send ICMP ECHO_REQUEST packets to network hosts.

Ping IP Address / Hostname:  

PING 192.168.1.1 (192.168.1.1): 56 data bytes
64 bytes from 192.168.1.1: seq=0 ttl=64 time=0.295 ms
64 bytes from 192.168.1.1: seq=1 ttl=64 time=0.202 ms
64 bytes from 192.168.1.1: seq=2 ttl=64 time=0.211 ms
64 bytes from 192.168.1.1: seq=3 ttl=64 time=0.234 ms

-- 192.168.1.1 ping statistics --
4 packets transmitted, 4 packets received, 0% packet loss
round-trip min/avg/max = 0.202/0.235/0.295 ms
    
```

7.4 Trace Route

Input the IP address/hostname and click the **TraceRoute** button to execute the trace route diagnostic test to send the ICMP packets to the specified host.



The screenshot displays the COMTREND web interface. At the top, the COMTREND logo is visible. Below it, a navigation menu includes icons and labels for Device Info, Basic Setup, Advanced Setup, Diagnostics (highlighted in blue), Management, and Logout. On the left side, a sidebar menu lists Diagnostics, Ethernet OAM, Ping, and TraceRoute (highlighted in blue). The main content area is titled 'TraceRoute' and contains the following text: 'Trace the route ip packets follow going to "host".' Below this is a form with the label 'TraceRoute IP Address / Hostname:' and an empty input field. To the right of the input field is a button labeled 'TraceRoute'. At the bottom of the main content area, the following output is displayed: 'traceroute to 192.168.1.1 (192.168.1.1), 30 hops max, 38 byte packets' and '1 Comtrend.Home (192.168.1.1) 0.040 ms'.

Chapter 8 Management

You can reach this page by clicking on the following icon located at the top of the screen.




The Management menu has the following maintenance functions and processes:

8.1 Settings

This includes [Backup Settings](#), [Update Settings](#), and [Restore Default](#) screens.

8.1.1 Backup Settings

To save the current configuration to a file on your PC, click **Backup Settings**. You will be prompted for backup file location. This file can later be used to recover settings on the **Update Settings** screen, as described below.

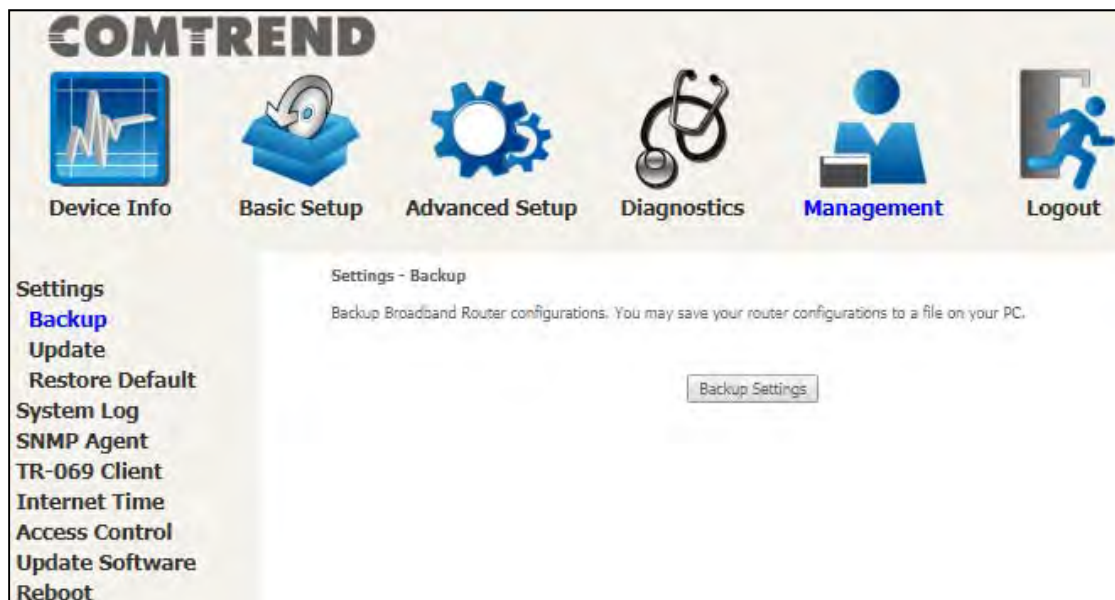


8.1.2 Update Settings

This option recovers configuration files previously saved using **Backup Settings**. Press **Browse...** to search for the file, or enter the file name (including folder path) in the **File Name** box, and then click **Update Settings** to recover settings.



8.1.3 Restore Default

Click **Restore Default Settings** to restore factory default settings.

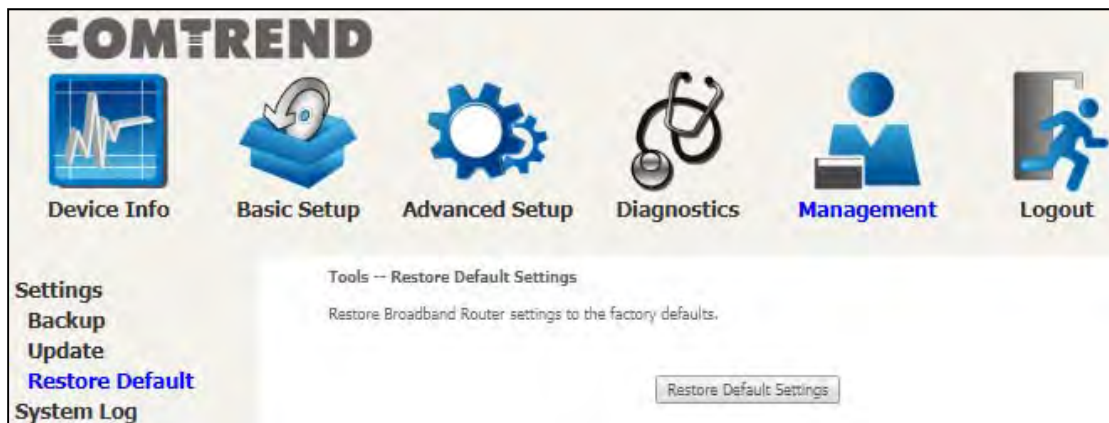

After **Restore Default Settings** is clicked, the following screen appears.

Broadband Router Restore

The Broadband Router configuration has been restored to default settings and the router is rebooting.

Close the Broadband Router Configuration window and wait for 2 minutes before reopening your web browser. If necessary, reconfigure your PC's IP address to match your new configuration.

Close the browser and wait for 2 minutes before reopening it. It may also be necessary, to reconfigure your PC IP configuration to match any new settings.


NOTE: This entry has the same effect as the **Reset** button. The VR-3071 board hardware and the boot loader support the reset to default. If the **Reset** button is continuously pressed for more than 10 seconds, the current configuration data will be erased. If the **Reset** button is continuously pressed for more than 60 seconds, the boot loader will erase all configuration data saved in flash memory and enter bootloader mode.

8.2 System Log

This function allows a system log to be kept and viewed upon request.

Follow the steps below to configure, enable, and view the system log.

STEP 1: Click **Configure System Log**, as shown below (circled in **Red**).

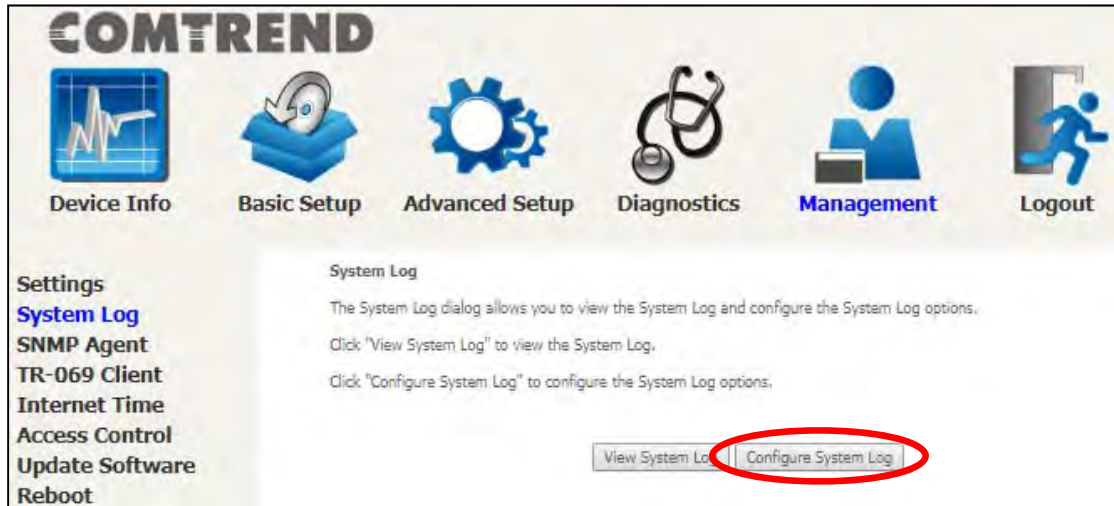

STEP 2: Select desired options and click **Apply/Save**.



Consult the table below for detailed descriptions of each system log option.

Item	Description
Log	Indicates whether the system is currently recording events. The user can enable or disable event logging. By default, it is disabled. To enable it, select the Enable radio button and then click Apply/Save .

<p>Log Level</p>	<p>Allows you to configure the event level and filter out unwanted events below this level. The events ranging from the highest critical level “Emergency” down to this configured level will be recorded to the log buffer on the VR-3071 SDRAM. When the log buffer is full, the newer event will wrap up to the top of the log buffer and overwrite the old event. By default, the log level is “Debugging”, which is the lowest critical level.</p> <p>The log levels are defined as follows:</p> <ul style="list-style-type: none"> • Emergency = system is unusable • Alert = action must be taken immediately • Critical = critical conditions • Error = Error conditions • Warning = normal but significant condition • Notice= normal but insignificant condition • Informational= provides information for reference • Debugging = debug-level messages <p>Emergency is the most serious event level, whereas Debugging is the least important. For instance, if the log level is set to Debugging, all the events from the lowest Debugging level to the most critical level Emergency level will be recorded. If the log level is set to Error, only Error and the level above will be logged.</p>
<p>Display Level</p>	<p>Allows the user to select the logged events and displays on the View System Log window for events of this level and above to the highest Emergency level.</p>
<p>Mode</p>	<p>Allows you to specify whether events should be stored in the local memory, or be sent to a remote system log server, or both simultaneously. If remote mode is selected, view system log will not be able to display events saved in the remote system log server. When either Remote mode or Both mode is configured, the WEB UI will prompt the user to enter the Server IP address and Server UDP port.</p>

STEP 3: Click **View System Log**. The results are displayed as follows.

System Log			
Date/Time	Facility	Severity	Message
Jan 1 00:00:12	syslog	emerg	BCM96345 started: BusyBox v0.60.4 (2004.09.14-06:30+0000)
Jan 1 00:00:17	user	crit	klogd: USB Link UP.
Jan 1 00:00:19	user	crit	klogd: eth0 Link UP.

8.3 SNMP Agent

Simple Network Management Protocol (SNMP) allows a management application to retrieve statistics and status from the SNMP agent in this device. Select the **Enable** radio button, configure options, and click **Save/Apply** to activate SNMP.

COMTREND

Device Info Basic Setup Advanced Setup Diagnostics Management Logout

Settings
 System Log
SNMP Agent
 TR-069 Client
 Internet Time
 Access Control
 Update Software
 Reboot

SNMP - Configuration

Simple Network Management Protocol (SNMP) allows a management application to retrieve statistics and status from the SNMP agent in this device.

Select the desired values and click "Apply" to configure the SNMP options.

SNMP Agent Disable Enable

Read Community: public
 Set Community: private
 System Name: Comtrend
 System Location: unknown
 System Contact: unknown
 Trap Manager IP: 0.0.0.0

Save/Apply

8.4 TR-069 Client

WAN Management Protocol (TR-069) allows an Auto-Configuration Server (ACS) to perform auto-configuration, provision, collection, and diagnostics to this device. Select desired values and click **Apply/Save** to configure TR-069 client options.

The table below is provided for ease of reference.

Item	Description
Enable TR-069	Tick the checkbox <input checked="" type="checkbox"/> to enable.
OUI-serial	The serial number used to identify the CPE when making a connection to the ACS using the CPE WAN Management Protocol. Select MAC to use the router's MAC address as serial number to authenticate with the ACS or select serial number to use the router's serial number.
Inform	Disable/Enable TR-069 client on the CPE.

Inform Interval	The duration in seconds of the interval for which the CPE MUST attempt to connect with the ACS and call the Inform method.
ACS URL	URL for the CPE to connect to the ACS using the CPE WAN Management Protocol. This parameter MUST be in the form of a valid HTTP or HTTPS URL. An HTTPS URL indicates that the ACS supports SSL. The "host" portion of this URL is used by the CPE for validating the certificate from the ACS when using certificate-based authentication.
ACS User Name	Username used to authenticate the CPE when making a connection to the ACS using the CPE WAN Management Protocol. This username is used only for HTTP-based authentication of the CPE.
ACS Password	Password used to authenticate the CPE when making a connection to the ACS using the CPE WAN Management Protocol. This password is used only for HTTP-based authentication of the CPE.
WAN Interface used by TR-069 client	Choose Any_WAN, LAN, Loopback or a configured connection.
Connection Request	
Authentication	Tick the checkbox <input checked="" type="checkbox"/> to enable.
User Name	Username used to authenticate an ACS making a Connection Request to the CPE.
Password	Password used to authenticate an ACS making a Connection Request to the CPE.
URL	IP address and port the ACS uses to connect to the router.

The **Send Inform** button forces the CPE to establish an immediate connection to the ACS.

8.5 Internet Time

This option automatically synchronizes the router time with Internet timeservers. To enable time synchronization, tick the corresponding checkbox , choose your preferred time server(s), select the correct time zone offset, and click **Apply/Save**.

COMTREND

Device Info Basic Setup Advanced Setup Diagnostics **Management** Logout

Settings
 System Log
 SNMP Agent
 TR-069 Client
Internet Time
 Access Control
 Update Software
 Reboot

Time settings
 This page allows you to the modem's time configuration.

Automatically synchronize with Internet time servers

First NTP time server:

Second NTP time server:

Third NTP time server:

Fourth NTP time server:

Fifth NTP time server:

Time zone offset:

NOTE: Internet Time must be activated to use. See [5.4 Parental Control](#). The internet time feature will not operate when the router is in WDSd mode, since the router would not be able to connect to the NTP timeserver.

8.6 Access Control


8.6.1 Accounts


This screen is used to configure the user account access passwords for the device. Access to the VR-3071 is controlled through the following user accounts:


- The root account has unrestricted access to view and change the configuration of your Broadband router.


Use the fields to update passwords for the accounts, add/remove accounts (max of 5 accounts) as well as adjust their specific privileges.


COMTREND



Device Info


Basic Setup


Advanced Setup


Diagnostics


Management


Logout

Settings

System Log

SNMP Agent

TR-069 Client

Internet Time

Access Control

Accounts

Services

IP Address

Update Software

Reboot

Access Control -- Accounts/Passwords

By default, access to your Broadband router is controlled through three user accounts: root, support, and user.

The root account has unrestricted access to view and change the configuration of your Broadband router.

The support account is typically utilized by Carrier/ISP technicians for maintenance and diagnostics.

The user account is typically utilized by End-Users to view configuration settings and statistics, with limited ability to configure certain settings.

Use the fields below to update passwords for the accounts, add/remove accounts (max of 5 accounts). Note: Passwords may be as long as 16 characters but must not contain a space.

Select an account:

Create an account:

Old Password:

New Password:

Confirm Password:

Use the fields below to enable/disable accounts as well as adjust their specific privileges.

Feature	root
Account access	Both
Add/Remove WAN	Enabled
Wireless - Basic	Enabled
Wireless - Advanced	Enabled
LAN Settings	Enabled
Interface Grouping	Enabled
NAT Settings	Enabled
Update Software	Enabled
Security	Enabled
Quality of Service	Enabled
Management Settings	Enabled
Advanced Setup	Enabled

Note: Passwords may be as long as 16 characters but must not contain a space. Click **Save/Apply** to continue.

8.6.2 Services

The Services option limits or opens the access services over the LAN or WAN. These access services available are: HTTP, SSH, TELNET, SNMP, HTTPS, FTP, TFTP and ICMP. Enable a service by selecting its dropdown listbox. Click **Apply/Save** to activate.

(It **unable** to modify any Wi-Fi parameters, **include** Wi-Fi power setting. And COMTREND's Product will follow Market's standard requirement)

COMTREND

Device Info Basic Setup Advanced Setup Diagnostics Management Logout

Settings
System Log
SNMP Agent
TR-069 Client
Internet Time
Access Control
Accounts
Services
IP Address
Update Software
Reboot

Service Access Control Configuration
 Select each listbox and click save/apply to configure your Setting.

Service	Current	New
HTTP	Lan	LAN
SSH	Lan	LAN
TELNET	Lan	LAN
SNMP	Disable	Disable
HTTPS	Lan	LAN
FTP	Lan	LAN
ICMP	Lan	LAN

Apply/Save

8.6.3 IP Address

The IP Address Access Control mode, if enabled, permits access to local management services from IP addresses contained in the Access Control List. If the Access Control mode is disabled, the system will not validate IP addresses for incoming packets. The services are the system applications listed in the Service Control List **beside ICMP**.

COMTREND

Device Info Basic Setup **Advanced Setup** Diagnostics Management Logout

Settings
System Log
SNMP Agent
TR-069 Client
Internet Time
Access Control
Accounts
Services
IP Address
Update Software
Reboot

Access Control -- IP Address

The IP Address Access Control mode, if enabled, permits access to local management services from IP addresses contained in the Access Control List . If the Access Control mode is disabled, the system will not validate IP addresses for incoming packets. The services are the system applications listed in the Service Control List **beside ICMP**

Access Control Mode: Disable Enable

IP Address	Subnet Mask	Interface	Remove

Add Remove

Click the **Add** button to display the following.

COMTREND

Device Info Basic Setup Advanced Setup Diagnostics **Management** Logout

Settings
System Log
SNMP Agent
TR-069 Client
Internet Time
Access Control
Accounts
Services
IP Address
Update Software
Reboot

Access Control

Enter the IP address of the management station permitted to access the local management services, and click 'Save/Apply.'

IP Address	Subnet Mask	Interface
		none ▼

Save/Apply

Configure the address and subnet of the management station permitted to access the local management services, and click **Save/Apply**.

IP Address – IP address of the management station.


Subnet Mask – Subnet address for the management station.

Interface – Access permission for the specified address, allowing the address to access the local management service from none/lan/wan/lan&wan interfaces.

8.7 Update Software

This option allows for firmware upgrades from a locally stored file.

(It **unable** to modify any Wi-Fi parameters, **include** Wi-Fi power setting. And COMTREND's Product will follow Market's standard requirement)

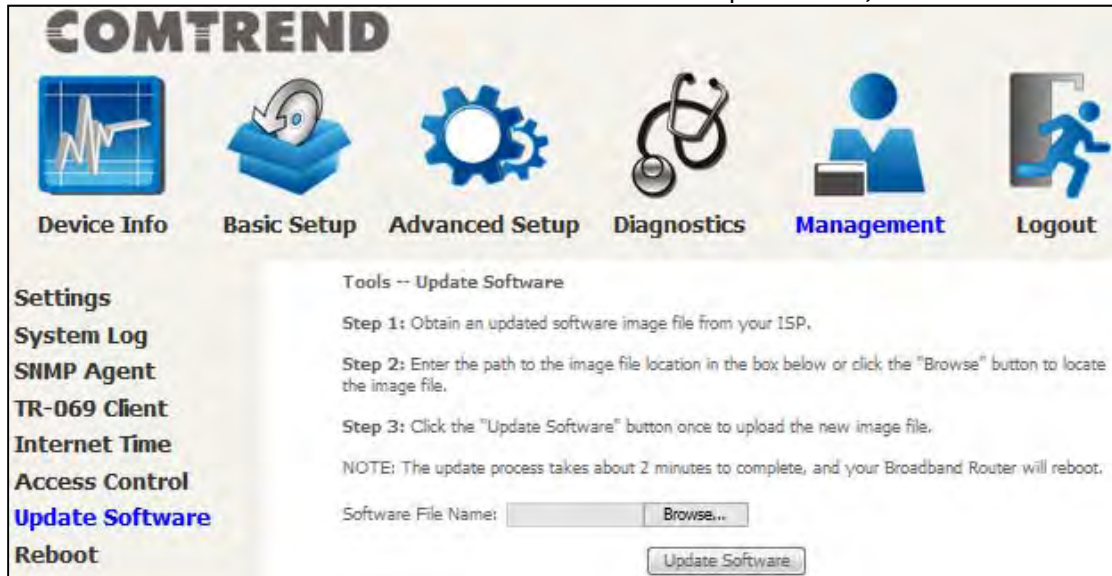

STEP 1: Obtain an updated software image file from your ISP.

STEP 2: Enter the path and filename of the firmware image file in the **Software File Name** field or click the **Browse** button to locate the image file.

STEP 3: Click the **Update Software** button once to upload and install the file.


NOTE: The update process will take about 2 minutes to complete. The device will reboot and the browser window will refresh to the default screen upon successful installation. It is recommended that you compare the **Software Version** on the [Device Information](#) screen with the firmware version installed, to confirm the installation was successful.

8.8 Reboot

To save the current configuration and reboot the router, click **Reboot**.



NOTE: You may need to close the browser window and wait for 2 minutes before reopening it. It may also be necessary, to reset your PC IP configuration.

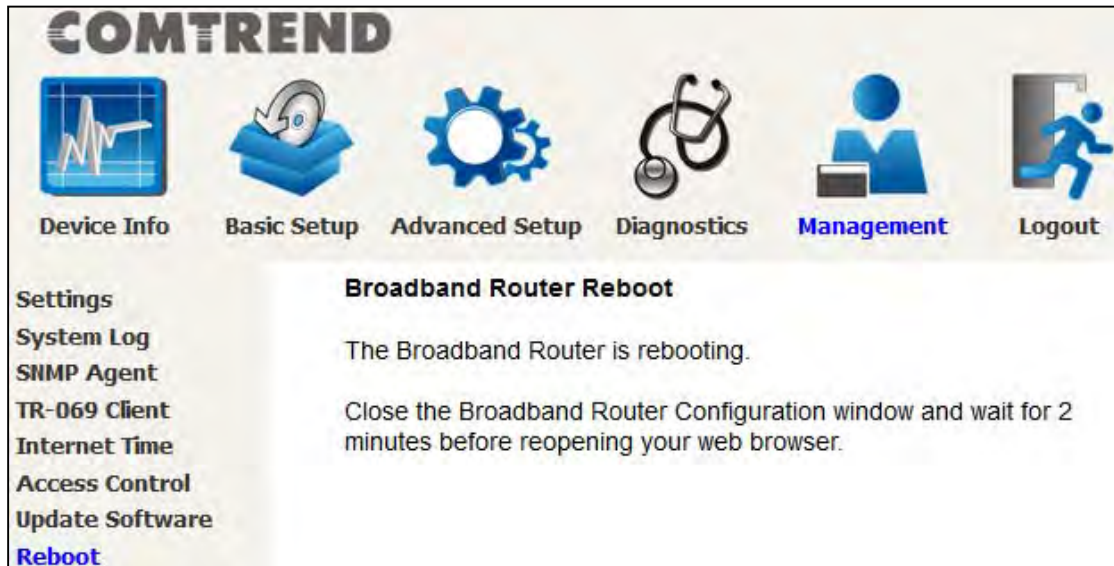

Chapter 9 Logout


To log out from the device simply click the following icon located at the top of your screen.



When the following window pops up, click the **OK** button to exit the router.



Upon successful exit, the following message will be displayed.

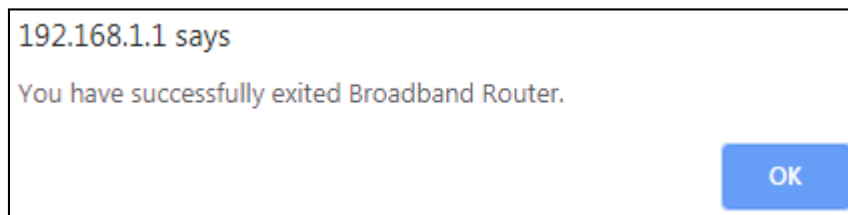

Appendix A - Firewall

STATEFUL PACKET INSPECTION

Refers to an architecture, where the firewall keeps track of packets on each connection traversing all its interfaces and makes sure they are valid. This is in contrast to static packet filtering which only examines a packet based on the information in the packet header.

DENIAL OF SERVICE ATTACK

Is an incident in which a user or organization is deprived of the services of a resource they would normally expect to have. Various DoS attacks the device can withstand are ARP Attack, Ping Attack, Ping of Death, Land, SYN Attack, Smurf Attack, and Tear Drop.

TCP/IP/PORT/INTERFACE FILTER

These rules help in the filtering of traffic at the Network layer (i.e. Layer 3). When a Routing interface is created, **Enable Firewall** must be checked. Navigate to Advanced Setup → Security → IP Filtering.

OUTGOING IP FILTER

Helps in setting rules to DROP packets from the LAN interface. By default, if the Firewall is Enabled, all IP traffic from the LAN is allowed. By setting up one or more filters, specific packet types coming from the LAN can be dropped.

Example 1:

Filter Name	: Out_Filter1
Protocol	: TCP
Source IP address	: 192.168.1.45
Source Subnet Mask	: 255.255.255.0
Source Port	: 80
Dest. IP Address	: NA
Dest. Subnet Mask	: NA
Dest. Port	: NA

This filter will Drop all TCP packets coming from the LAN with IP Address/Subnet Mask of 192.168.1.45/24 having a source port of 80 irrespective of the destination. All other packets will be Accepted.

Example 2:

Filter Name	: Out_Filter2
Protocol	: UDP
Source IP Address	: 192.168.1.45
Source Subnet Mask	: 255.255.255.0
Source Port	: 5060:6060
Dest. IP Address	: 172.16.13.4
Dest. Subnet Mask	: 255.255.255.0
Dest. Port	: 6060:7070

This filter will drop all UDP packets coming from the LAN with IP Address / Subnet Mask of 192.168.1.45/24 and a source port range of 5060 to 6060, destined to 172.16.13.4/24 and a destination port range of 6060 to 7070.

INCOMING IP FILTER

Helps in setting rules to Allow or Deny packets from the WAN interface. By default, all incoming IP traffic from the WAN is Blocked, if the Firewall is Enabled. By setting up one or more filters, specific packet types coming from the WAN can be Accepted.

Example 1: Filter Name : In_Filter1
 Protocol : TCP
 Policy : Allow
 Source IP Address : 210.168.219.45
 Source Subnet Mask : 255.255.0.0
 Source Port : 80
 Dest. IP Address : NA
 Dest. Subnet Mask : NA
 Dest. Port : NA
 Selected WAN interface : br0

This filter will ACCEPT all TCP packets coming from WAN interface “br0” with IP Address/Subnet Mask 210.168.219.45/16 with a source port of 80, irrespective of the destination. All other incoming packets on this interface are DROPPED.

Example 2: Filter Name : In_Filter2
 Protocol : UDP
 Policy : Allow
 Source IP Address : 210.168.219.45
 Source Subnet Mask : 255.255.0.0
 Source Port : 5060:6060
 Dest. IP Address : 192.168.1.45
 Dest. Sub. Mask : 255.255.255.0
 Dest. Port : 6060:7070
 Selected WAN interface : br0

This rule will ACCEPT all UDP packets coming from WAN interface “br0” with IP Address/Subnet Mask 210.168.219.45/16 and a source port in the range of 5060 to 6060, destined to 192.168.1.45/24 and a destination port in the range of 6060 to 7070. All other incoming packets on this interface are DROPPED.

MAC LAYER FILTER

These rules help in the filtering of Layer 2 traffic. MAC Filtering is only effective in WDS mode. After a WDS mode connection is created, navigate to Advanced Setup → Security → MAC Filtering in the WUI.

Example 1: Global Policy : Forwarded
 Protocol Type : PPPoE
 Dest. MAC Address : 00:12:34:56:78:90
 Source MAC Address : NA
 Src. Interface : eth1
 Dest. Interface : eth2

Addition of this rule drops all PPPoE frames going from eth1 to eth2 with a Destination MAC Address of 00:12:34:56:78:90 irrespective of its Source MAC Address. All other frames on this interface are forwarded.

Example 2: Global Policy : Blocked
 Protocol Type : PPPoE
 Dest. MAC Address : 00:12:34:56:78:90
 Source MAC Address : 00:34:12:78:90:56
 Src. Interface : eth1
 Dest. Interface : eth2

Addition of this rule forwards all PPPoE frames going from eth1 to eth2 with a Destination MAC Address of 00:12:34:56:78 and Source MAC Address of 00:34:12:78:90:56. All other frames on this interface are dropped.

DAYTIME PARENTAL CONTROL

This feature restricts access of a selected LAN device to an outside Network through the VR-3071, as per chosen days of the week and the chosen times.

Example: User Name : FilterJohn
 Browser's MAC Address : 00:25:46:78:63:21
 Days of the Week : Mon, Wed, Fri
 Start Blocking Time : 14:00
 End Blocking Time : 18:00

With this rule, a LAN device with MAC Address of 00:25:46:78:63:21 will have no access to the WAN on Mondays, Wednesdays, and Fridays, from 2pm to 6pm. On all other days and times, this device will have access to the outside Network.

Appendix B - Pin Assignments

Giga ETHERNET Ports (RJ45)

Pin	Name	Description
1	BI_DA+	Bi-directional pair A +
2	BI_DA-	Bi-directional pair A -
3	BI_DB+	Bi-directional pair B +
4	BI_DC+	Bi-directional pair C +
5	BI_DC-	Bi-directional pair C -
6	BI_DB-	Bi-directional pair B -
7	BI_DD+	Bi-directional pair D +
8	BI_DD-	Bi-directional pair D -

Appendix C – Specifications

Hardware

- RJ-11 X1 for VDSL2 (35b)/ADSL2+ (Annex A)
- RJ-45 X 4 for GELAN
- RJ-45 X 1 for GEWAN
- Reset button X 1
- 2.4G WiFi on/off, WPS button X 1
- 5G WiFi on/off, WPS button X 1
- Internal Antenna X 4
- Power switch X 1

ADSL

- G.994
- G.992.1 (G.dmt) Annexes A
- G.992.2 (G.lite) Annexes A
- ANSI T1.413
- G.992.3 (ADSL2) Annexes A
- G.992.5 (ADSL2+) Annexes A

VDSL

- G.993.2(VDSL2) 35b, 17a, 12a, 12b, 8a, 8b, 8c, 8d
- G.993.5 (G.vector)
- G.998.4 (G.INP)
- SRA (Seamless Rate Adaptation)
- UPBO (Upstream Power Back-off)

Ethernet

- IEEE 802.3, IEEE 802.3u IEEE 802.3ab
- 10/100 /1000 BASE-T, auto-sense
- Support MDI/MDX

Networking Protocols

- RFC 2364 (PPPoA), RFC 2684 (RFC 1483) WDS/Router, RFC 2516 (PPPoE); RFC 1577 (IPoA)
- PPPoE Pass-Through, Multiple PPPoE Sessions on Single WAN Interface
- PPPoE Filtering of Non-PPPoE Packets Between WAN and LAN
- Transparent Bridging Between all LAN and WAN Interfaces
- 802.1p/802.1q VLAN, DSCP
- IGMP Proxy V1/V2/V3, IGMP Snooping V1/V2/V3, Fast leave
- Static route, RIP v1/v2, ARP, RARP, SNTP
- DHCP Server/Client/Relay, DNS Proxy/ Relay, Dynamic DNS, UPnP, DLNA
- IPv6 Dual Stack, IPV6 Rapid Deployment (6RD)

Management

- TR-069/TR-098/TR-104/TR-111/TR-181, SNMP, Telnet, Web- Based Management, Configuration Backup and Restoration
- Software Upgrade via HTTP, TFTP Server, or FTP Server

Firewall/Filtering

- Stateful Packet Inspection Firewall
- Stateless Packet Filter
- URI/URL Filtering
- TCP/IP/Port/Interface Filtering Rules Support Both Incoming and Outgoing Filtering


NAT/PAT

- Port Triggering
- Port Forwarding (Virtual Server)
- Symmetric port-overloading NAT, Full-Cone NAT
- DMZ host
- VPN Pass Through (PPTP, L2TP, IPSec)

Wireless

- IEEE 802.11n, 2.4GHz, 2T2R
Backward compatible with 802.11g/b
2412 - 2462 MHz
- IEEE 802.11ac, 5GHz, 2T2R,
Backward compatible with 802.11n/a
U-NII-1 (5150~5250 MHz)
U-NII-2a (5250~5350 MHz) optional
U-NII-2c/2e (5470~5725 MHz) optional
U-NII-3 (5725~5825 MHz)
- WPA/WPA-PSK, WPA2/WPA2-PSK with TKIP & AES Security Type
- Multiple SSID
- MAC Address Filtering

Power Supply

- External power adapter :
Input : 12Vdc / 3.0A or 2.0A
Output : USB3.0,  900mA

Environment

- Operating Temperature: 0°C ~40°C (32°F ~104°F)
- Operating Humidity: 10%~90% non-condensing
- Storage Temperature: -25°C ~65°C (-23°F ~149°F)
- Storage Humidity: 5%~90% non-condensing

Kit Weight

(1* VR-3071, 1*RJ11 cable, 1*RJ45 cable, 1*power adapter) = 0.8 kg

NOTE: Specifications are subject to change without notice.

* The **PRT-6301** is the same as VR-3071, without the xDSL function.

Appendix D - SSH Client

Unlike Microsoft Windows, Linux OS has a ssh client included. For Windows users, there is a public domain one called "putty" that can be downloaded from here:

<http://www.chiark.greenend.org.uk/~sgtatham/putty/download.html>

To access the ssh client you must first enable SSH access for the LAN or WAN from the Management → Access Control → Services menu in the web user interface.

To access the router using the Linux ssh client

For LAN access, type: `ssh -l root 192.168.1.1`

For WAN access, type: `ssh -l root WAN IP address`

To access the router using the Windows "putty" ssh client

For LAN access, type: `putty -ssh -l root 192.168.1.1`

For WAN access, type: `putty -ssh -l root WAN IP address`

NOTE: The WAN IP address can be found on the Device Info → WAN screen

Appendix E - Printer Server

These steps explain the procedure for enabling the Printer Server.


NOTE: This function only applies to models with a USB host port.



STEP 1: Enable Print Server from Web User Interface. Select the Enable on-board print server checkbox and input Printer name & Make and model. Click the **Apply/Save** button.

NOTE: The **Printer name** can be any text string up to 40 characters.
The **Make and model** can be any text string up to 128 characters.


The screenshot displays the COMTREND web interface. At the top, there is a navigation bar with icons for Device Info, Basic Setup (selected), Advanced Setup, Diagnostics, Management, and Logout. On the left side, a sidebar menu lists various settings categories: WAN Setup, NAT, LAN, Parental Control, Home Networking, Print Server (highlighted in blue), DLNA, and Storage Service. The main content area is titled 'Print Server settings' and includes the following text: 'This page allows you to enable / disable printer support.' Below this, there is a checked checkbox for 'Enable on-board print server.' Two input fields are present: 'Printer name' with the value 'hpdeskjet' and 'Make and model' with the value '321123'. A red box highlights these two input fields. At the bottom right of the form, there is an 'Apply/Save' button.

STEP 2: Click the Windows start  button. → Then select **Control Panel**.

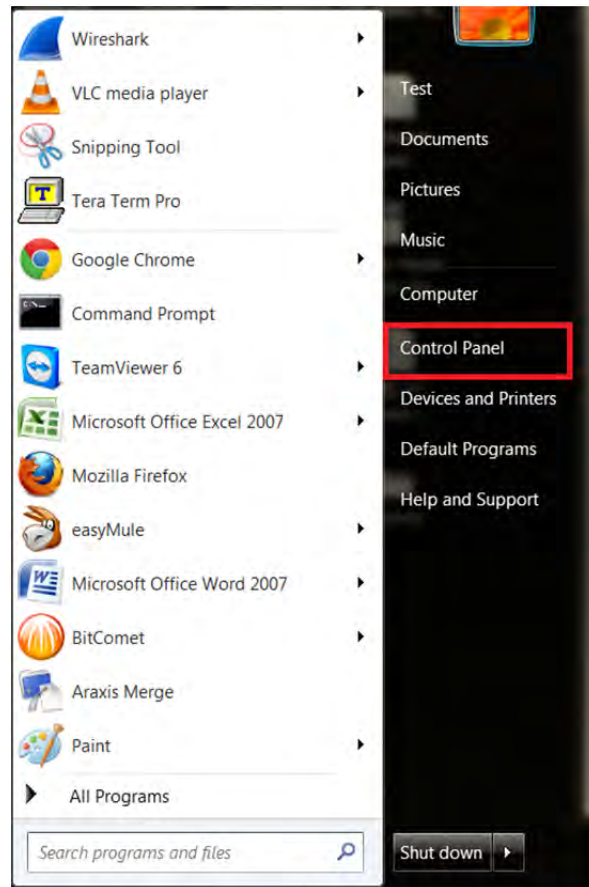


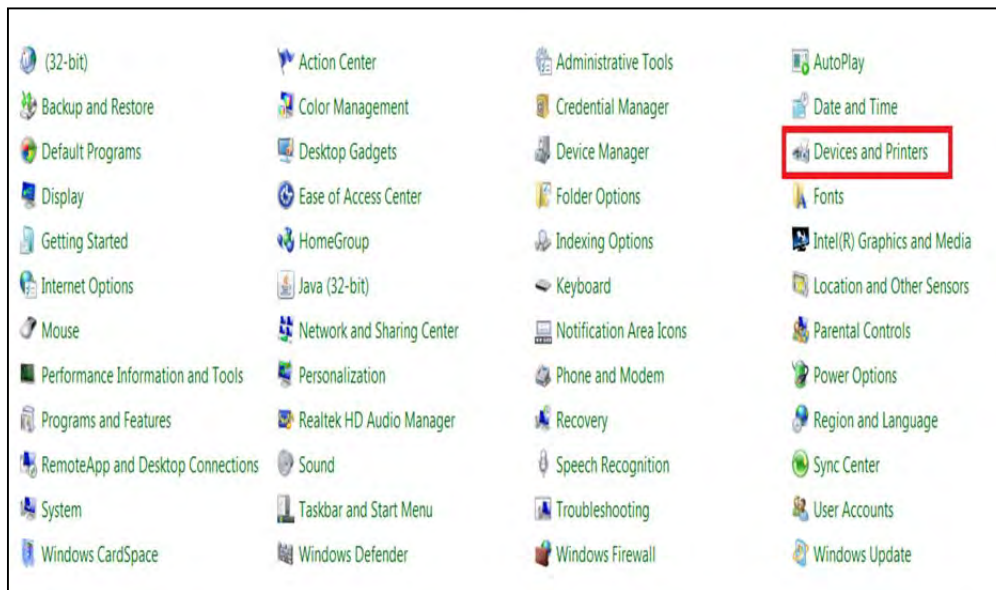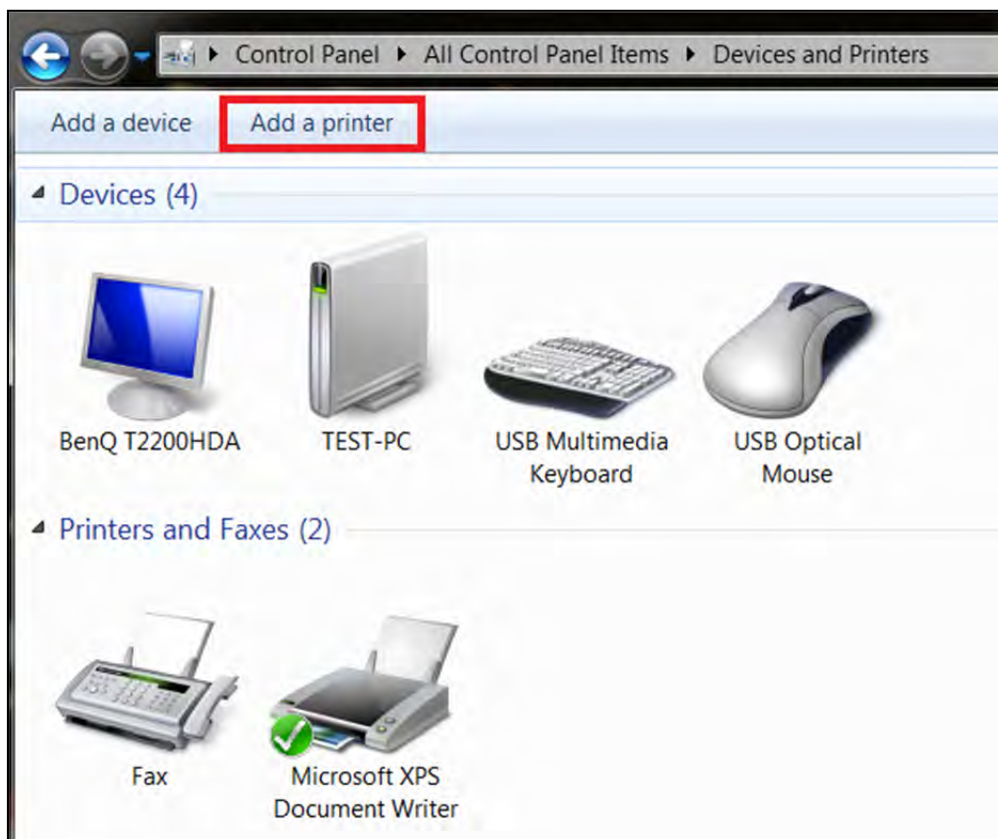STEP 3: Select Devices and Printers.**STEP 4: Select Add a printer.**

STEP 5: Select **Add a network, wireless or Bluetooth printer**.

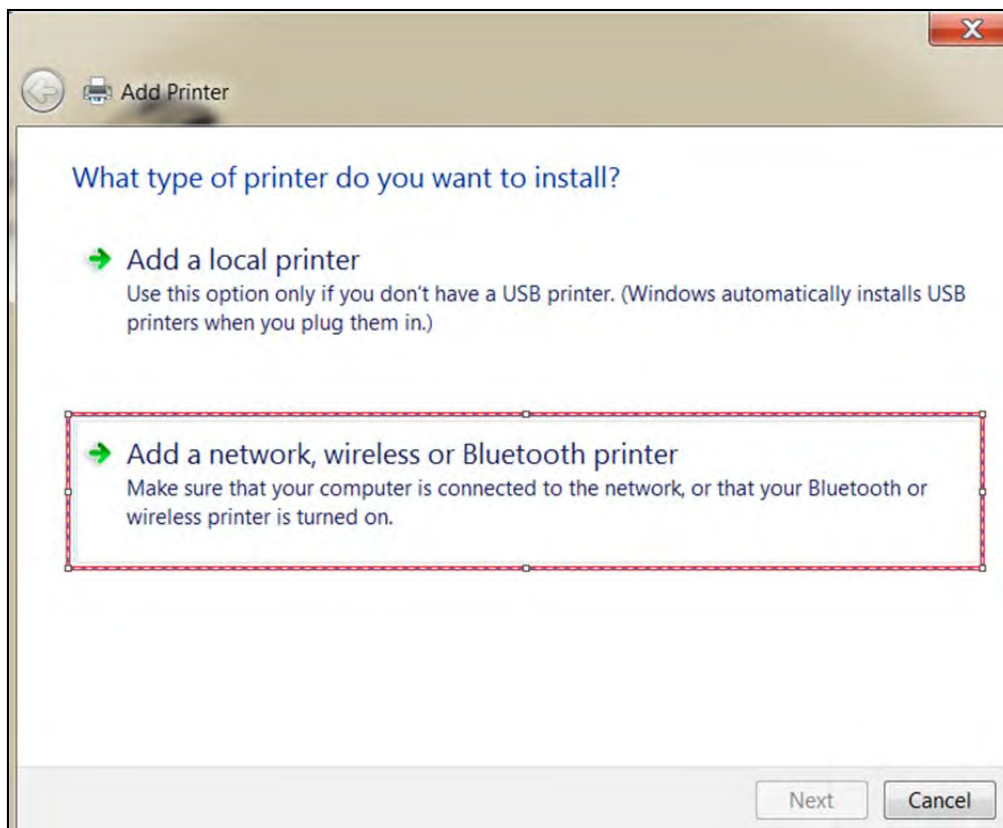


STEP 6: Click the **Stop** button. → Select **The printer that I want isn't listed**.

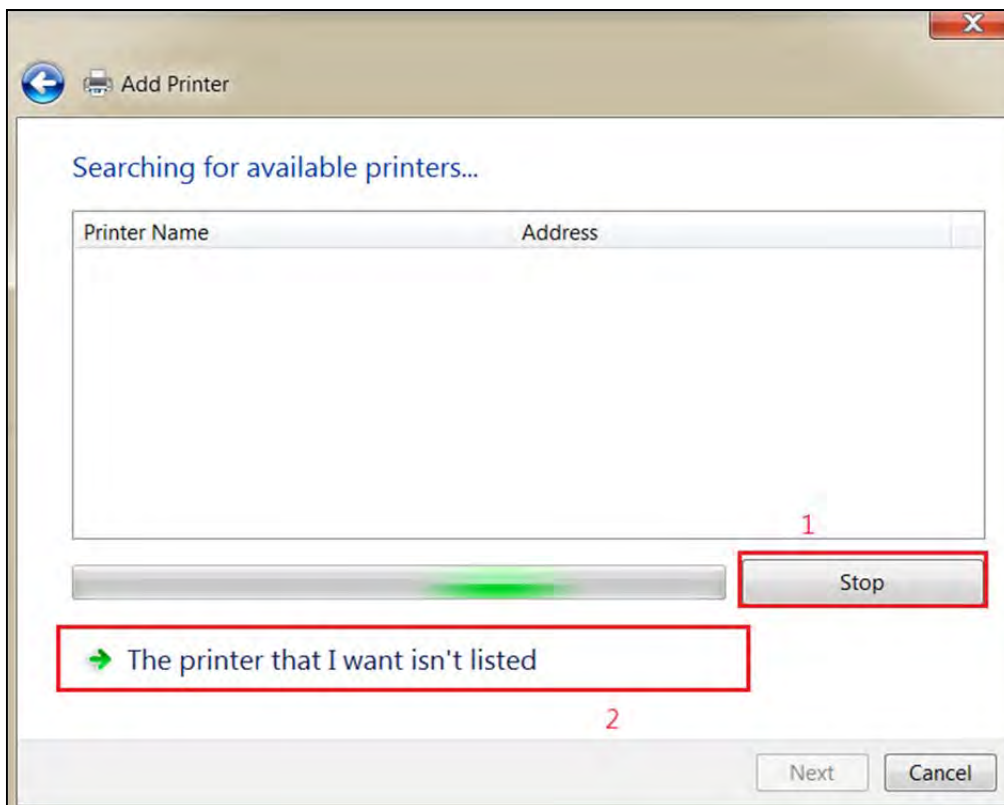


STEP 7: Choose **Select a shared printer by name**. Then input the printer link and click **Next**.

<http://LAN IP:631/printers/>the name of the printer


NOTE: The printer name must be the same name inputted in the WEB UI “printer server settings” as in step 1.

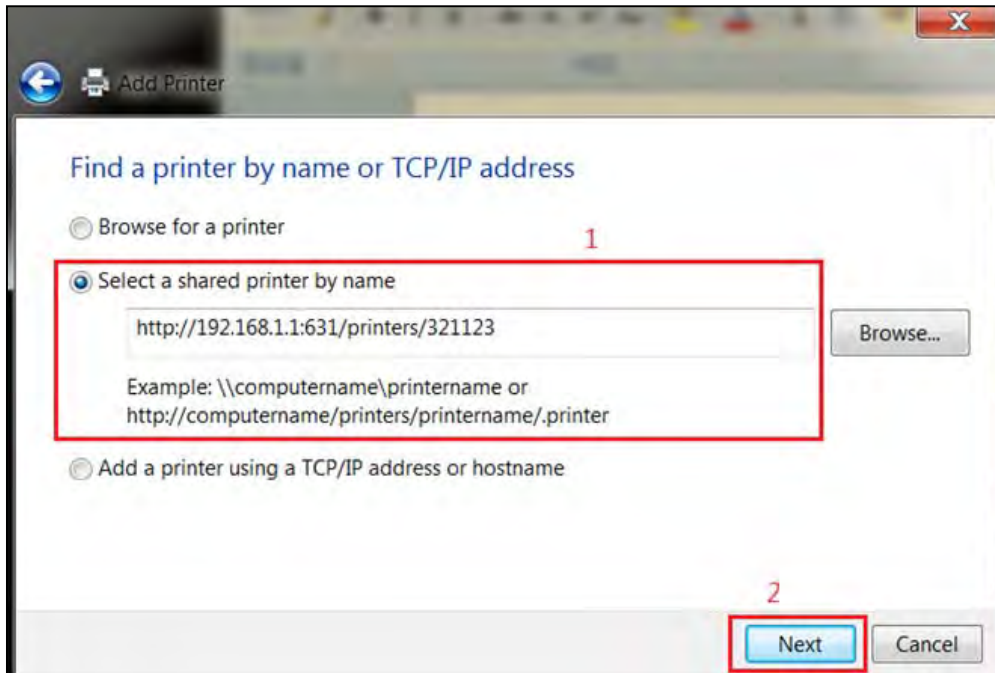


STEP 8: Select the **manufacturer** → and **model** of your printer → then, click **OK**.

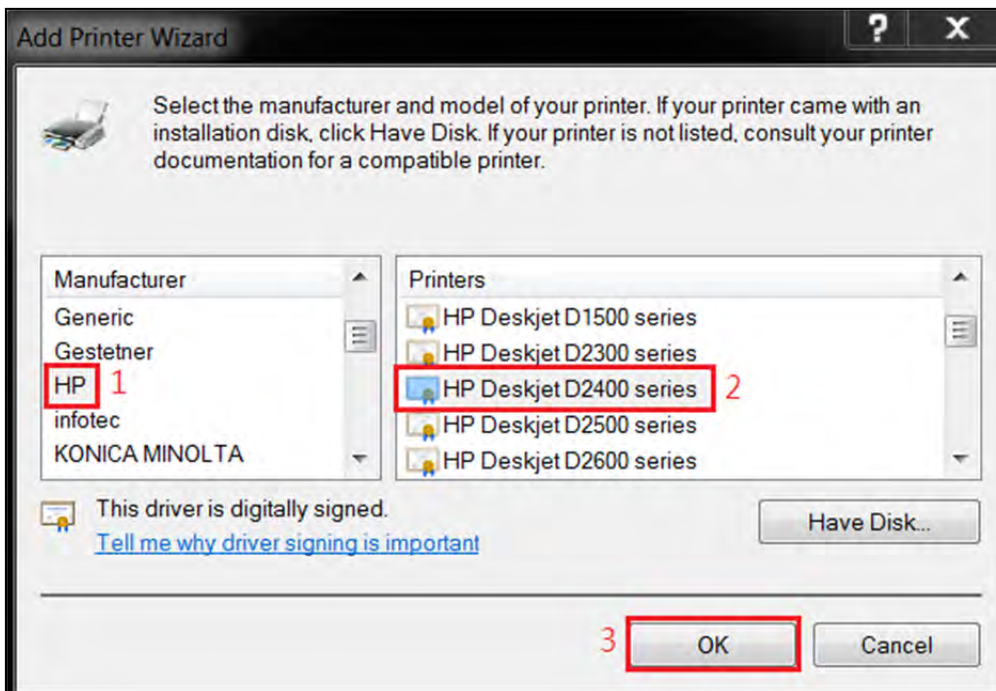


STEP 9: The printer has been successfully installed. Click the **Next** button.

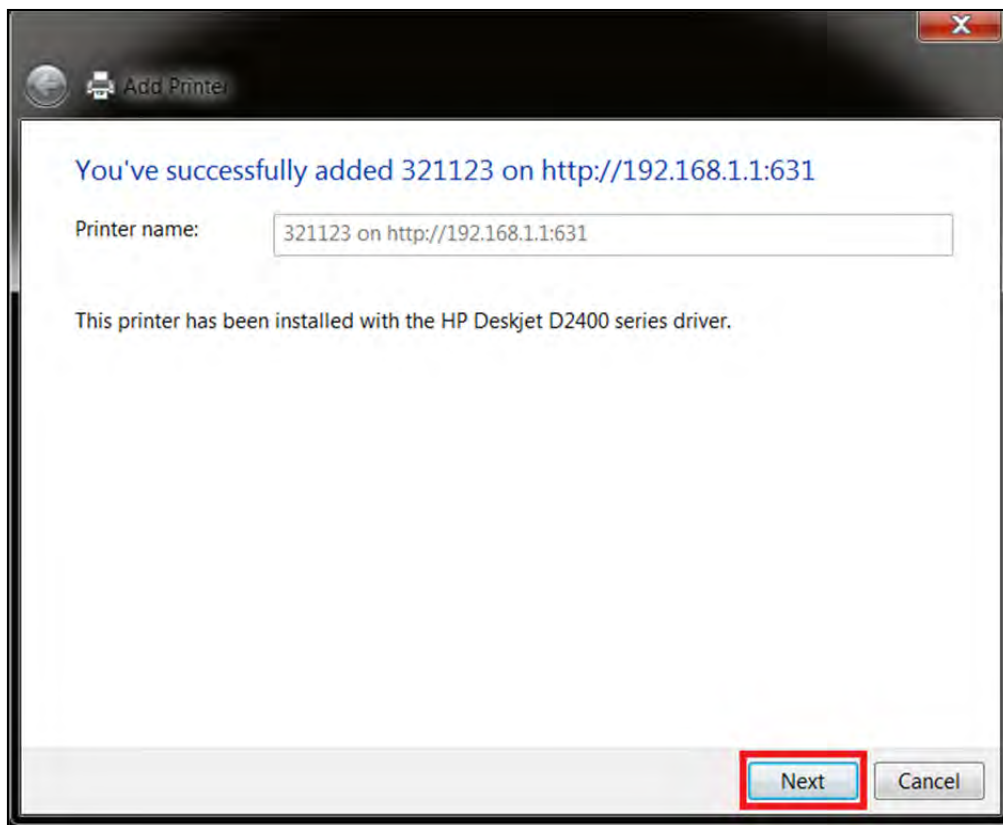

STEP 10: Click Finish (or print a test page if required).

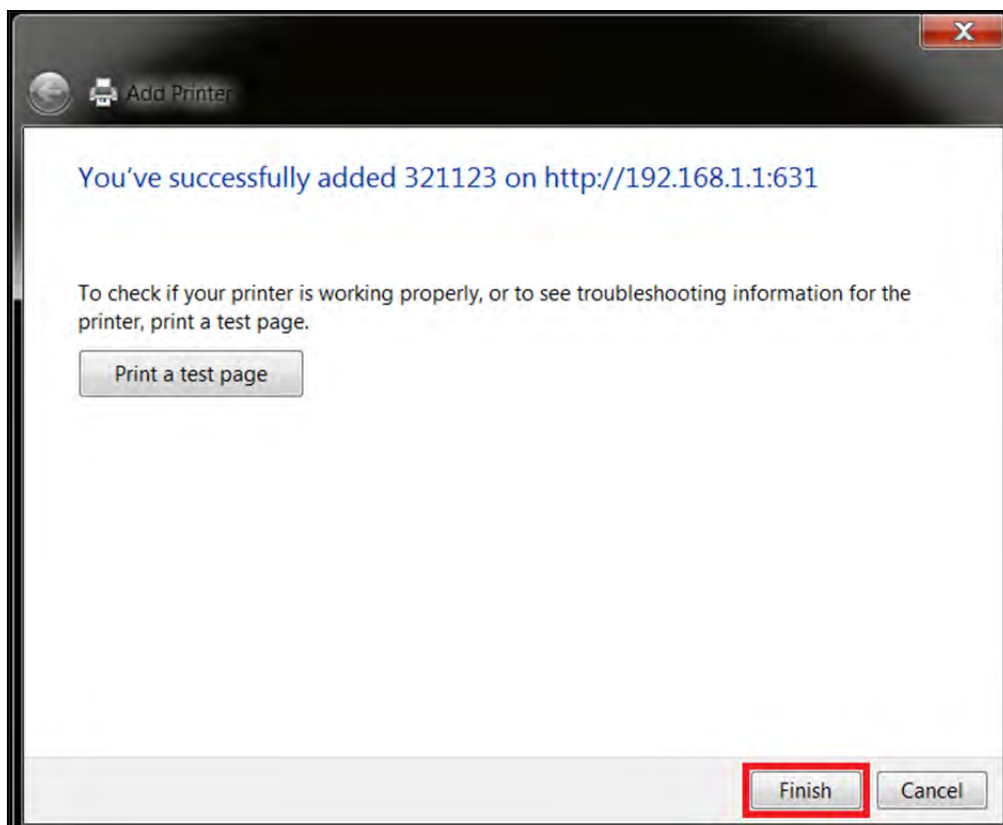

STEP 11: Go to → **Control Panel** → **All Control Panel Items** → **Devices and Printers** to confirm that the printer has been configured.

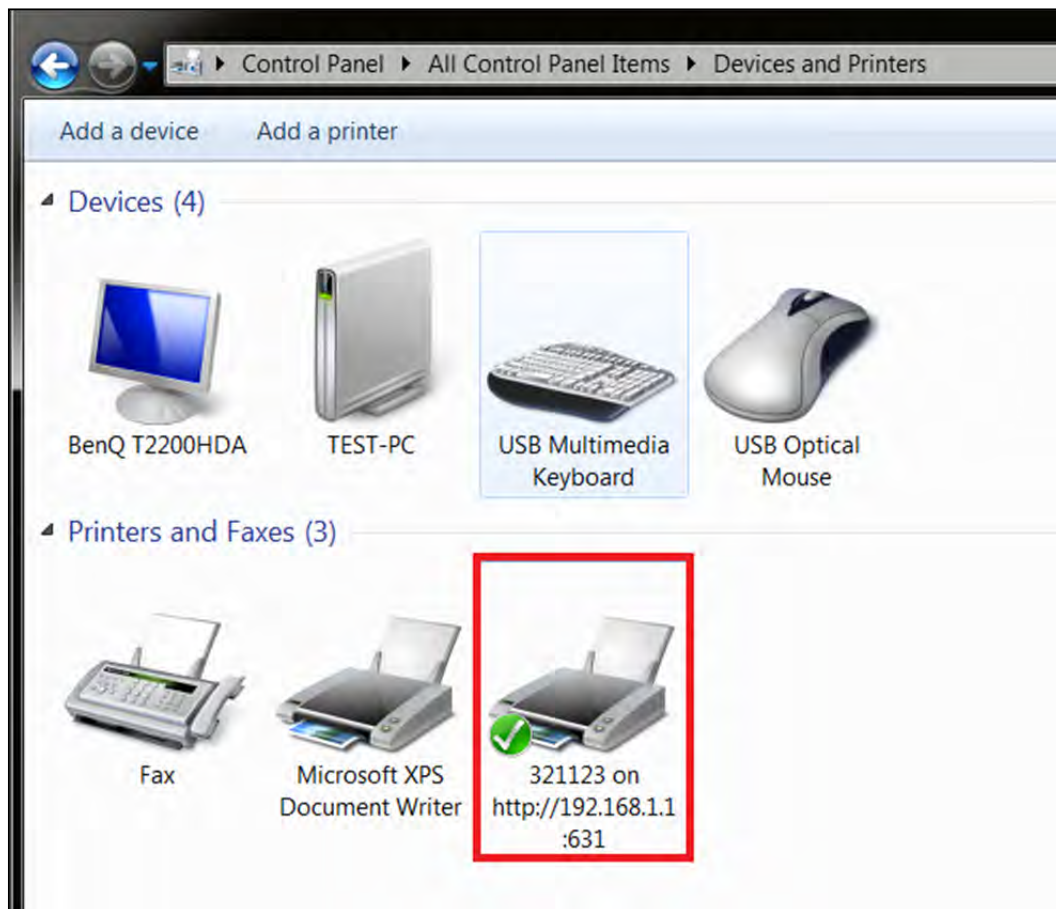

Appendix F - Connection Setup

Creating a WAN connection is a two-stage process.

- 1 - Setup a Layer 2 Interface (ATM, PTM or Ethernet).
- 2 - Add a WAN connection to the Layer 2 Interface.

The following sections describe each stage in turn.

F1 ~ Layer 2 Interfaces

Every layer2 interface operates in Multi-Service Connection (VLAN MUX) mode, which supports multiple connections over a single interface. Note that PPPoA and IPoA connection types are not supported for Ethernet WAN interfaces. After adding WAN connections to an interface, you must also create an Interface Group to connect LAN/WAN interfaces.

F1.1 ATM Interfaces

Follow these procedures to configure an ATM interface.

NOTE: The VR-3071 supports up to 16 ATM interfaces.



STEP 1: Go to Basic Setup → WAN Setup → Select ATM Interface from the drop-down menu.

COMTREND

Device Info **Basic Setup** Advanced Setup Diagnostics Management Logout

WAN Setup
NAT
LAN
Parental Control
Home Networking
Wireless

Step 1: Layer 2 Interface

Select new interface to add: **ATM Interface** Add

DSL ATM Interface Configuration

Interface	Vpi	Vci	DSL Latency	Category	Peak Cell Rate(cells/s)	Sustainable Cell Rate(cells/s)	Max Burst Size(bytes)	Link Type	Conn Mode	IP QoS	Remove

DSL PTM Interface Configuration

Interface	DSL Latency	PTM Priority	Conn Mode	IP QoS	Remove

ETH WAN Interface Configuration

Interface/(Name)	Connection Mode	Remove

Step 2: Wide Area Network (WAN) Service Setup

Interface	Description	Type	Vlan8021p	VlanMuxId	VlanTpid	Igmp Proxy	Igmp Source	NAT	Firewall	IPv6	Mld Proxy	Mld Source	Manual Mode	Remove	Edit

Add Remove

This table is provided here for ease of reference.

Item	Description
Interface	WAN interface name
VPI	ATM VPI (0-255)
VCI	ATM VCI (32-65535)
DSL Latency	{Path0} → portID = 0
Category	ATM service category
Peak Cell Rate	Maximum allowed traffic rate for the ATM PCR service connection
Sustainable Cell Rate	The average allowable, long-term cell transfer rate on the VBR service connection
Max Burst Size	The maximum allowable burst size of cells that can be transmitted continuously on the VBR service connection
Link Type	Choose EoA (for PPPoE, IPoE, and WDS), PPPoA, or IPoA.
Connection Mode	Default Mode – Single service over one connection Vlan Mux Mode – Multiple Vlan service over one connection
IP QoS	Quality of Service (QoS) status
Remove	Select items for removal

STEP 2: Click **Add** to proceed to the next screen.

NOTE: To add WAN connections to one interface type, you must delete existing connections from the other interface type using the **remove** button.

ATM PVC Configuration

This screen allows you to configure a ATM PVC.

VPI: [0-255]
VCI: [32-65535]

Select DSL Link Type (EoA is for PPPoE, IPoE, and Bridge.)

EoA
 PPPoA
 IPoA

Encapsulation Mode:

Service Category:

Select Scheduler for Queues of Equal Precedence

Round Robin (weight=1)
 Weighted Fair Queuing
Default Queue Weight: [1-63]

Default Queue Precedence: [1-8] (lower value, higher priority)
Note: For WFQ, the default queue precedence will be applied to all other queues in the VC.

There are many settings here including: VPI/VCI, DSL Link Type, Encapsulation Mode, Service Category and Queue Weight.

Here are the available encapsulations for each xDSL Link Type:

- ◆ EoA- LLC/SNAP-BRIDGING, VC/MUX
- ◆ PPPoA- VC/MUX, LLC/ENCAPSULATION
- ◆ IPoA- LLC/SNAP-ROUTING, VC MUX

STEP 3: Click **Apply/Save** to confirm your choices.

On the next screen, check that the ATM interface is added to the list. For example, an ATM interface on PVC 0/35 in Default Mode with an EoA Link type is shown below.

Select new interface to add:

DSL ATM Interface Configuration

Interface	Vpi	Vci	DSL Latency	Category	Peak Cell Rate(cells/s)	Sustainable Cell Rate(cells/s)	Max Burst Size(bytes)	Link Type	Conn Mode	IP QoS	Remove
atm0	0	35	Path0	UBR				EoA	VlanMuxMode	Support	<input type="button" value="Remove"/>

To add a WAN connection go to [Section F2 ~ WAN Connections](#).

F1.2 PTM Interfaces

Follow these procedures to configure a PTM interface.



STEP 1: Go to Basic Setup → WAN Setup → Select PTM Interface from the drop-down menu.

The screenshot shows the COMTREND web interface. At the top, there are navigation icons for Device Info, Basic Setup, Advanced Setup, Diagnostics, Management, and Logout. The 'Basic Setup' icon is highlighted. On the left sidebar, 'WAN Setup' is selected, with sub-items: NAT, LAN, Parental Control, Home Networking, and Wireless. The main content area is titled 'Step 1: Layer 2 Interface'. It features a dropdown menu labeled 'Select new interface to add:' with 'PTM Interface' selected and an 'Add' button. Below this are three configuration tables:

Interface	Vpi	Vci	DSL Latency	Category	Peak Cell Rate(cells/s)	Sustainable Cell Rate(cells/s)	Max Burst Size(bytes)	Link Type	Conn Mode	IP QoS	Remove
atm0	0	35	Path0	UBR				EoA	VlanMuxMode	Support	Remove

Interface	DSL Latency	PTM Priority	Conn Mode	IP QoS	Remove

Interface/(Name)	Connection Mode	Remove

This table is provided here for ease of reference.

Item	Description
Interface	WAN interface name.
DSL Latency	{Path0} → portID = 0
PTM Priority	Normal or High Priority (Preemption).
Connection Mode	Default Mode – Single service over one interface. Vlan Mux Mode – Multiple Vlan services over one interface.
IP QoS	Quality of Service (QoS) status.
Remove	Select interfaces to remove.

STEP 2: Click **Add** to proceed to the next screen.

NOTE: To add WAN connections to one interface type, you must delete existing connections from the other interface type using the **remove** button.

PTM Configuration

This screen allows you to configure a PTM flow.

Select Scheduler for Queues of Equal Precedence

Round Robin (weight=1)

Weighted Fair Queuing
 Default Queue Weight: [1-63]

Default Queue Precedence: [1-8] (lower value, higher priority)

Note: For WFQ, the default queue precedence will be applied to all other queues in the VC.

Default PTM interface Quality of Service can be configured here, including Scheduler, and Queue Weight.

STEP 3: Click **Apply/Save** to confirm your choices.

On the next screen, check that the PTM interface is added to the list.

For example, a PTM interface in Default Mode is shown below.

DSL PTM Interface Configuration					
Interface	DSL Latency	PTM Priority	Conn Mode	IP QoS	Remove
ptm0	Path0	Normal&High	VlanMuxMode	Support	<input type="button" value="Remove"/>

To add a WAN connection go to [Section F2 ~ WAN Connections](#).

F1.3 Ethernet WAN Interface

The VR-3071 supports a single Ethernet WAN interface over the ETH WAN port. Follow these procedures to configure an Ethernet interface.



STEP 1: Go to Basic Setup → WAN Setup → Select ETHERNET Interface from the drop-down menu.

COMTREND

Device Info Basic Setup Advanced Setup Diagnostics Management Logout

WAN Setup
NAT
LAN
Parental Control
Home Networking
Wireless

Step 1: Layer 2 Interface

Select new interface to add: **ETHERNET Interface** ▼ Add

DSL ATM Interface Configuration

Interface	Vpi	Vci	DSL Latency	Category	Peak Cell Rate(cells/s)	Sustainable Cell Rate(cells/s)	Max Burst Size(bytes)	Link Type	Conn Mode	IP QoS	Remove
atm0	0	35	Path0	UBR				EoA	VlanMuxMode	Support	Remove

DSL PTM Interface Configuration

Interface	DSL Latency	PTM Priority	Conn Mode	IP QoS	Remove
pcm0	Path0	Normal&High	VlanMuxMode	Support	Remove

ETH WAN Interface Configuration


Interface/(Name)	Connection Mode	Remove

This table is provided here for ease of reference.

Item	Description
Interface/ (Name)	WAN interface name.
Connection Mode	Default Mode – Single service over one interface. Vlan Mux Mode – Multiple Vlan services over one interface.
Remove	Select interfaces to remove.

STEP 2: Click **Add** to proceed to the next screen.

STEP 3: Select an Ethernet port and Click **Apply/Save** to confirm your choices.

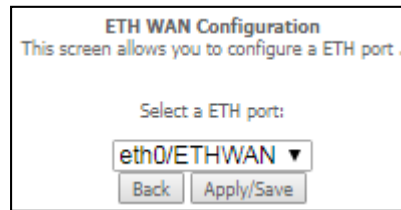

ETH WAN Configuration
This screen allows you to configure a ETH port .

Select a ETH port:

eth0/ETHWAN ▼

Back Apply/Save

On the next screen, check that the ETHERNET interface is added to the list.

Interface/(Name)	Connection Mode	Remove
eth0/ETHWAN	VlanMuxMode	Remove

To add a WAN connection go to [Section F2 ~ WAN Connections](#).

F2 ~ WAN Connections

The VR-3071 supports one WAN connection for each interface, up to a maximum of 16 connections.

To setup a WAN connection follow these instructions.



STEP 1: Go to Basic Setup → WAN Setup.

Step 2: Wide Area Network (WAN) Service Setup

Interface	Description	Type	Vlan8021p	VlanMuxId	VlanTpid	Igmp Proxy	Igmp Source	NAT	Firewall	IPv6	Mld Proxy	Mld Source	Remove	Edit
<input type="button" value="Add"/> <input type="button" value="Remove"/>														

STEP 2: Click **Add** to create a WAN connection. The following screen will display.

WAN Service Interface Configuration

Select a layer 2 interface for this service

Note: For ATM interface, the descriptor string is (portId_vpi_vci)
 For PTM interface, the descriptor string is (portId_high_low)
 Where portId=0 --> DSL Latency PATH0
 portId=1 --> DSL Latency PATH1
 portId=4 --> DSL Latency PATH0&1
 low =0 --> Low PTM Priority not set
 low =1 --> Low PTM Priority set
 high =0 --> High PTM Priority not set
 high =1 --> High PTM Priority set

eth0/ETHWAN ▼

STEP 3: Choose a layer 2 interface from the drop-down box and click **Next**. The WAN Service Configuration screen will display as shown below.

WAN Service Configuration

Select WAN service type:

PPP over Ethernet (PPPoE)
 IP over Ethernet
 Bridging

Enter Service Description:

For tagged service, enter valid 802.1P Priority and 802.1Q VLAN ID.
 For untagged service, set -1 to both 802.1P Priority and 802.1Q VLAN ID.

Enter 802.1P Priority [0-7]:
 Enter 802.1Q VLAN ID [0-4094]:
 Select VLAN TPID:

Internet Protocol Selection:

NOTE: The WAN services shown here are those supported by the layer 2 interface you selected in the previous step. If you wish to change your selection click the **Back** button and select a different layer 2 interface.

STEP 4: For VLAN Mux Connections only, you must enter Priority & VLAN ID tags.

Enter 802.1P Priority [0-7]:
 Enter 802.1Q VLAN ID [0-4094]:
 Select VLAN TPID:

Select a TPID if VLAN tag Q-in-Q is used.

STEP 5: You will now follow the instructions specific to the WAN service type you wish to establish. This list should help you locate the correct procedure:

- (1) For [PPP over ETHERNET \(PPPoE\) – IPv4](#)
- (2) For [IP over ETHERNET \(IPoE\) – IPv4](#)
- (3) For [Bridging – IPv4](#)
- (4) For [PPP over ATM \(PPPoA\) – IPv4](#)
- (5) For [IP over ATM \(IPoA\) – IPv4](#)
- (6) For [PPP over ETHERNET \(PPPoE\) – IPv6](#)
- (7) For [IP over ETHERNET \(IPoE\) – IPv6](#)
- (8) Bridging – IPv6 (Not Supported)
- (9) For [PPP over ATM \(PPPoA\) – IPv6](#)
- (10) IPoA – IPv6 (Not Supported)

The subsections that follow continue the WAN service setup procedure.

F2.1 PPP over ETHERNET (PPPoE) – IPv4

STEP 1: Select the PPP over Ethernet radio button and click **Next**.

WAN Service Configuration

Select WAN service type:

PPP over Ethernet (PPPoE)
 IP over Ethernet
 Bridging

Enter Service Description:

For tagged service, enter valid 802.1P Priority and 802.1Q VLAN ID.
For untagged service, set -1 to both 802.1P Priority and 802.1Q VLAN ID.

Enter 802.1P Priority [0-7]:

Enter 802.1Q VLAN ID [0-4094]:

Select VLAN TPID:

Internet Protocol Selection:

STEP 2: On the next screen, enter the PPP settings as provided by your ISP. Click **Next** to continue or click **Back** to return to the previous step.

PPP Username and Password

PPP usually requires that you have a user name and password to establish your connection. In the boxes below, enter the user name and password that your ISP has provided to you.

PPP Username:

PPP Password:

PPPoE Service Name:

Authentication Method: **AUTO** ▼

Configure Keep-alive (PPP echo-request) Interval and the Number of retries

Interval:(second)

Number of retries:

Enable Fullcone NAT

Dial on demand (with idle timeout timer)

Enable NAT

Enable Firewall

Use Static IPv4 Address

Fixed MTU

MTU:

Enable PPP Manual Mode

Enable PPP Debug Mode

Bridge PPPoE Frames Between WAN and Local Ports

IGMP Multicast

Enable IGMP Multicast Proxy

Enable IGMP Multicast Source

Click **Next** to continue or click **Back** to return to the previous step.

The settings shown above are described below.

PPP SETTINGS

The PPP Username, PPP password and the PPPoE Service Name entries are dependent on the particular requirements of the ISP. The user name can be a maximum of 256 characters and the password a maximum of 32 characters in length. For Authentication Method, choose from AUTO, PAP, CHAP, and MSCHAP.

CONFIGURE KEEP-ALIVE

Configures the interval and number of keep alive packets (PPP echo-request) sent by the device for the PPP connection.

Interval (second): Time between sending out each PPP echo-request packet.

Number of retries: Number of retries before PPP connection is dropped.

ENABLE FULLCONE NAT

This option becomes available when NAT is enabled. Known as one-to-one NAT, all requests from the same internal IP address and port are mapped to the same external IP address and port. An external host can send a packet to the internal host, by sending a packet to the mapped external address.

DIAL ON DEMAND

The VR-3071 can be configured to disconnect if there is no activity for a period of time by selecting the **Dial on demand** checkbox . You must also enter an inactivity timeout period in the range of 1 to 4320 minutes.

ENABLE NAT

If the LAN is configured with a private IP address, the user should select this checkbox . The NAT submenu will appear in the Advanced Setup menu after reboot. On the other hand, if a private IP address is not used on the LAN side (i.e. the LAN side is using a public IP), this checkbox should not be selected to free up system resources for better performance.

ENABLE FIREWALL

If this checkbox is selected, the Security submenu will be displayed on the Advanced Setup menu after reboot. If firewall is not necessary, this checkbox should not be selected to free up system resources for better performance.

USE STATIC IPv4 ADDRESS

Unless your service provider specially requires it, do not select this checkbox . If selected, enter the static IP address in the **IPv4 Address** field. Don't forget to adjust the IP configuration to Static IP Mode as described in section [3.2 IP Configuration](#).

FIXED MTU

Maximum Transmission Unit. The size (in bytes) of largest protocol data unit which the layer can pass onwards. This value is 1492 for PPPoE.

ENABLE PPP MANUAL MODE

Use this button to manually connect/disconnect PPP sessions.

ENABLE PPP DEBUG MODE

When this option is selected, the system will put more PPP connection information into the system log. This is for debugging errors and not for normal usage.

WDS PPPOE FRAMES BETWEEN WAN AND LOCAL PORTS

(This option is hidden when PPP IP Extension is enabled)

When Enabled, this creates local PPPoE connections to the WAN side. Enable this option only if all LAN-side devices are running PPPoE clients, otherwise disable it. The VR-3071 supports pass-through PPPoE sessions from the LAN side while simultaneously running a PPPoE client from non-PPPoE LAN devices.

ENABLE IGMP MULTICAST PROXY

Tick the checkbox to enable Internet Group Membership Protocol (IGMP) multicast. This protocol is used by IPv4 hosts to report their multicast group memberships to any neighboring multicast routers.

ENABLE IGMP MULTICAST SOURCE

Enable the WAN interface to be used as IGMP multicast source.

STEP 3: Choose an interface to be the default gateway.

Routing -- Default Gateway

Default gateway interface list can have multiple WAN interfaces served as system default gateways but only one will be used according to the priority with the first being the highest and the last one the lowest priority if the WAN interface is connected. Priority order can be changed by removing all and adding them back in again.

Selected Default Gateway Interfaces		Available Routed WAN Interfaces
ppp0.1	<input type="button" value="->"/>	
	<input type="button" value="<-"/>	

Click **Next** to continue or click **Back** to return to the previous step.

STEP 4: Select DNS Server Interface from available WAN interfaces OR enter static DNS server IP addresses for the system. In ATM mode, if only a single PVC with IPoA or static IPoE protocol is configured, Static DNS server IP addresses must be entered.

DNS Server Configuration

Select DNS Server Interface from available WAN interfaces OR enter static DNS server IP addresses for the system. In ATM mode, if only a single PVC with IPoA or static IPoE protocol is configured, Static DNS server IP addresses must be entered.

DNS Server Interfaces can have multiple WAN interfaces served as system dns servers but only one will be used according to the priority with the first being the highest and the last one the lowest priority if the WAN interface is connected. Priority order can be changed by removing all and adding them back in again.

Select DNS Server Interface from available WAN interfaces:

Selected DNS Server Interfaces		Available WAN Interfaces
ppp0.1	<input type="button" value="->"/> <input type="button" value="<-"/>	

Use the following Static DNS IP address:

Primary DNS server:

Secondary DNS server:

Click **Next** to continue or click **Back** to return to the previous step.

STEP 5: The WAN Setup - Summary screen shows a preview of the WAN service you have configured. Check these settings and click **Apply/Save** if they are correct, or click **Back** to modify them.

WAN Setup - Summary

Make sure that the settings below match the settings provided by your ISP.

Connection Type:	PPPoE
NAT:	Enabled
Full Cone NAT:	Disabled
Firewall:	Disabled
IGMP Multicast Proxy:	Disabled
IGMP Multicast Source Enabled:	Disabled
MLD Multicast Proxy:	Disabled
MLD Multicast Source Enabled:	Disabled
Quality Of Service:	Disabled

Click "Apply/Save" to have this interface to be effective. Click "Back" to make any modifications.

After clicking **Apply/Save**, the new service should appear on the main screen.

F2.2 IP over ETHERNET (IPoE) – IPv4

STEP 1: Select the IP over Ethernet radio button and click **Next**.

WAN Service Configuration

Select WAN service type:

PPP over Ethernet (PPPoE)

IP over Ethernet

Bridging

Enter Service Description:

For tagged service, enter valid 802.1P Priority and 802.1Q VLAN ID.
For untagged service, set -1 to both 802.1P Priority and 802.1Q VLAN ID.

Enter 802.1P Priority [0-7]:

Enter 802.1Q VLAN ID [0-4094]:

Select VLAN TPID:

Internet Protocol Selection:

STEP 2: The WAN IP settings screen provides access to the DHCP server settings. You can select the **Obtain an IP address automatically** radio button to enable DHCP (use the DHCP Options only if necessary). However, if you prefer, you can use the **Static IP address** method instead to assign WAN IP address, Subnet Mask and Default Gateway manually.

WAN IP Settings

Enter information provided to you by your ISP to configure the WAN IP settings.
 Notice: If "Obtain an IP address automatically" is chosen, DHCP will be enabled for PVC in IPoE mode.
 If "Use the following Static IP address" is chosen, enter the WAN IP address, subnet mask and interface gateway.

Obtain an IP address automatically

Option 60 Vendor ID:

Option 61 IAID: (8 hexadecimal digits)

Option 61 DUID: (hexadecimal digit)

Option 77 User ID:

Option 125: Disable Enable

Option 50 Request IP Address:

Option 51 Request Leased Time:

Option 54 Request Server Address:

Use the following Static IP address:

WAN IP Address:

WAN Subnet Mask:

WAN gateway IP Address:

Click **Next** to continue or click **Back** to return to the previous step.

STEP 3: This screen provides access to NAT, Firewall and IGMP Multicast settings. Enable each by selecting the appropriate checkbox . Click **Next** to continue or click **Back** to return to the previous step.

ENABLE NAT

If the LAN is configured with a private IP address, the user should select this checkbox . The NAT submenu will appear in the Advanced Setup menu after reboot. On the other hand, if a private IP address is not used on the LAN side (i.e. the LAN side is using a public IP), this checkbox should not be selected, so as to free up system resources for improved performance.

ENABLE FULLCONE NAT

This option becomes available when NAT is enabled. Known as one-to-one NAT, all requests from the same internal IP address and port are mapped to the same external IP address and port. An external host can send a packet to the internal host, by sending a packet to the mapped external address.

ENABLE FIREWALL

If this checkbox is selected, the Security submenu will be displayed on the Advanced Setup menu after reboot. If firewall is not necessary, this checkbox should not be selected so as to free up system resources for better performance.

ENABLE IGMP MULTICAST PROXY

Tick the checkbox to enable Internet Group Membership Protocol (IGMP) multicast. This protocol is used by IPv4 hosts to report their multicast group memberships to any neighboring multicast routers.

ENABLE IGMP MULTICAST SOURCE

Enable the WAN interface to be used as IGMP multicast source.

STEP 4: Choose an interface to be the default gateway.

Routing -- Default Gateway

Default gateway interface list can have multiple WAN interfaces served as system default gateways but only one will be used according to the priority with the first being the highest and the last one the lowest priority if the WAN interface is connected. Priority order can be changed by removing all and adding them back in again.

Selected Default Gateway Interfaces		Available Routed WAN Interfaces
atm0.1	<input type="button" value="->"/> <input type="button" value="<-"/>	

Click **Next** to continue or click **Back** to return to the previous step.

STEP 5: Select DNS Server Interface from available WAN interfaces OR enter static DNS server IP addresses for the system. In ATM mode, if only a single PVC with IPoA or static IPoE protocol is configured, Static DNS server IP addresses must be entered.

DNS Server Configuration

Select DNS Server Interface from available WAN interfaces OR enter static DNS server IP addresses for the system. If only a single WAN with static IPoE protocol is configured, Static DNS server IP addresses must be entered.
DNS Server Interfaces can have multiple WAN interfaces served as system dns servers but only one will be used according to the priority with the first being the highest and the last one the lowest priority if the WAN interface is connected. Priority order can be changed by removing all and adding them back in again.

Select DNS Server Interface from available WAN interfaces:

Selected DNS Server Interfaces		Available WAN Interfaces
atm0.1	<input type="button" value="->"/> <input type="button" value="<-"/>	

Use the following Static DNS IP address:

Primary DNS server:

Secondary DNS server:

Click **Next** to continue or click **Back** to return to the previous step.

STEP 6: The WAN Setup - Summary screen shows a preview of the WAN service you have configured. Check these settings and click **Apply/Save** if they are correct, or click **Back** to modify them.

WAN Setup - Summary

Make sure that the settings below match the settings provided by your ISP.

Connection Type:	IPoE
NAT:	Enabled
Full Cone NAT:	Disabled
Firewall:	Disabled
IGMP Multicast Proxy:	Disabled
IGMP Multicast Source Enabled:	Disabled
MLD Multicast Proxy:	Disabled
MLD Multicast Source Enabled:	Disabled
Quality Of Service:	Disabled

Click "Apply/Save" to have this interface to be effective. Click "Back" to make any modifications.

After clicking **Apply/Save**, the new service should appear on the main screen.

F2.3 Bridging – IPv4

STEP 1: Select the Bridging radio button and click **Next**.

WAN Service Configuration

Select WAN service type:

PPP over Ethernet (PPPoE)
 IP over Ethernet
 Bridging
 Allow as IGMP Multicast Source
 Allow as MLD Multicast Source

Enter Service Description:

For tagged service, enter valid 802.1P Priority and 802.1Q VLAN ID.
 For untagged service, set -1 to both 802.1P Priority and 802.1Q VLAN ID.

Enter 802.1P Priority [0-7]:

Enter 802.1Q VLAN ID [0-4094]:

Select VLAN TPID:

Allow as IGMP Multicast Source

Click to allow use of this WDS WAN interface as IGMP multicast source.

Allow as MLD Multicast Source

Click to allow use of this WDS WAN interface as MLD multicast source.

STEP 2: The WAN Setup - Summary screen shows a preview of the WAN service you have configured. Check these settings and click **Apply/Save** if they are correct, or click **Back** to return to the previous screen.

WAN Setup - Summary

Make sure that the settings below match the settings provided by your ISP.

Connection Type:	Bridge
NAT:	N/A
Full Cone NAT:	Disabled
Firewall:	Disabled
IGMP Multicast Proxy:	Not Applicable
IGMP Multicast Source Enabled:	Disabled
MLD Multicast Proxy:	Not Applicable
MLD Multicast Source Enabled:	Disabled
Quality Of Service:	Disabled

Click "Apply/Save" to have this interface to be effective. Click "Back" to make any modifications.

After clicking **Apply/Save**, the new service should appear on the main screen.

NOTE: If this WDS connection is your only WAN service, the VR-3071 will be inaccessible for remote management or technical support from the WAN.

F2.4 PPP over ATM (PPPoA) – IPv4

WAN Service Configuration

Enter Service Description:

Internet Protocol Selection:

STEP 1: Click **Next** to continue.

STEP 2: On the next screen, enter the PPP settings as provided by your ISP. Click **Next** to continue or click **Back** to return to the previous step.

PPP Username and Password

PPP usually requires that you have a user name and password to establish your connection. In the boxes below, enter the user name and password that your ISP has provided to you.

PPP Username:

PPP Password:

Authentication Method: **AUTO** ▼

Configure Keep-alive (PPP echo-request) Interval and the Number of retries

Interval:(second)

Number of retries:

Enable Fullcone NAT

Dial on demand (with idle timeout timer)

Enable NAT

Enable Firewall

Use Static IPv4 Address

Fixed MTU

MTU:

Enable PPP Manual Mode

Enable PPP Debug Mode

IGMP Multicast

Enable IGMP Multicast Proxy

Enable IGMP Multicast Source

PPP SETTINGS

The PPP username and password are dependent on the requirements of the ISP. The user name can be a maximum of 256 characters and the password a maximum of 32 characters in length. (Authentication Method: AUTO, PAP, CHAP, or MSCHAP.)

CONFIGURE KEEP-ALIVE

Configures the interval and number of keep alive packets (PPP echo-request) sent by the device for the PPP connection.

Interval (second): Time between sending out each PPP echo-request packet.

Number of retries: Number of retries before PPP connection is dropped.

ENABLE FULLCONE NAT

This option becomes available when NAT is enabled. Known as one-to-one NAT, all requests from the same internal IP address and port are mapped to the same external IP address and port. An external host can send a packet to the internal host, by sending a packet to the mapped external address.

DIAL ON DEMAND

The VR-3071 can be configured to disconnect if there is no activity for a period of time by selecting the **Dial on demand** checkbox . You must also enter an inactivity timeout period in the range of 1 to 4320 minutes.

ENABLE NAT

If the LAN is configured with a private IP address, the user should select this checkbox . The NAT submenu will appear in the Advanced Setup menu after reboot. On the other hand, if a private IP address is not used on the LAN side (i.e. the LAN side is using a public IP), this checkbox should not be selected to free up system resources for better performance.

ENABLE FIREWALL

If this checkbox is selected, the Security submenu will be displayed on the Advanced Setup menu after reboot. If firewall is not necessary, this checkbox should not be selected to free up system resources for better performance.

USE STATIC IPv4 ADDRESS

Unless your service provider specially requires it, do not select this checkbox . If selected, enter the static IP address in the **IP Address** field. Also, don't forget to adjust the IP configuration to Static IP Mode as described in [3.2 IP Configuration](#).

Fixed MTU

Fixed Maximum Transmission Unit. The size (in bytes) of largest protocol data unit which the layer can pass onwards. This value is 1500 for PPPoA.

ENABLE PPP MANUAL MODE

Use this button to manually connect/disconnect PPP sessions.

ENABLE PPP DEBUG MODE

When this option is selected, the system will put more PPP connection information into the system log. This is for debugging errors and not for normal usage.

ENABLE IGMP MULTICAST PROXY

Tick the checkbox to enable Internet Group Membership Protocol (IGMP) multicast. This protocol is used by IPv4 hosts to report their multicast group memberships to any neighboring multicast routers.

Enable IGMP Multicast Source

Enable the WAN interface to be used as IGMP multicast source.

STEP 3: Choose an interface to be the default gateway.

Routing -- Default Gateway

Default gateway interface list can have multiple WAN interfaces served as system default gateways but only one will be used according to the priority with the first being the highest and the last one the lowest priority if the WAN interface is connected. Priority order can be changed by removing all and adding them back in again.

Selected Default Gateway Interfaces		Available Routed WAN Interfaces
ppp0a0	<input type="button" value="->"/>	
	<input type="button" value="<-"/>	

Click **Next** to continue or click **Back** to return to the previous step.

STEP 4: Select DNS Server Interface from available WAN interfaces OR enter static DNS server IP addresses for the system. In ATM mode, if only a single PVC with IPoA or static IPoE protocol is configured, Static DNS server IP addresses must be entered.

DNS Server Configuration

Select DNS Server Interface from available WAN interfaces OR enter static DNS server IP addresses for the system. If only a single WAN with static IPoE protocol is configured, Static DNS server IP addresses must be entered.
DNS Server Interfaces can have multiple WAN interfaces served as system dns servers but only one will be used according to the priority with the first being the highest and the last one the lowest priority if the WAN interface is connected. Priority order can be changed by removing all and adding them back in again.

Select DNS Server Interface from available WAN interfaces:

Selected DNS Server Interfaces Available WAN Interfaces

pppoa0	<input type="button" value="->"/> <input type="button" value="<-"/>	
--------	--	--

Use the following Static DNS IP address:

Primary DNS server:

Secondary DNS server:

Click **Next** to continue or click **Back** to return to the previous step.

STEP 5: The WAN Setup - Summary screen shows a preview of the WAN service you have configured. Check these settings and click **Apply/Save** if they are correct, or click **Back** to modify them.

WAN Setup - Summary


Make sure that the settings below match the settings provided by your ISP.

Connection Type:	PPPoA
NAT:	Enabled
Full Cone NAT:	Disabled
Firewall:	Disabled
IGMP Multicast Proxy:	Disabled
IGMP Multicast Source Enabled:	Disabled
MLD Multicast Proxy:	Disabled
MLD Multicast Source Enabled:	Disabled
Quality Of Service:	Disabled

Click "Apply/Save" to have this interface to be effective. Click "Back" to make any modifications.

After clicking **Apply/Save**, the new service should appear on the main screen.

F2.5 IP over ATM (IPoA) – IPv4

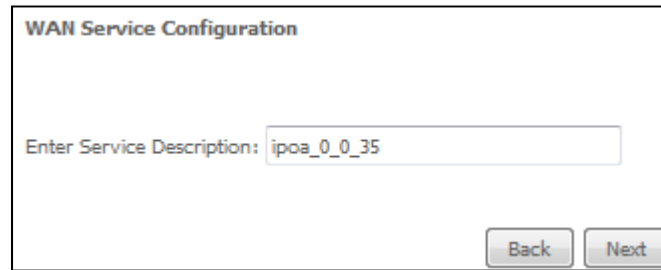


WAN Service Configuration

Enter Service Description:

STEP 1: Click **Next** to continue.

STEP 2: Enter the WAN IP settings provided by your ISP. Click **Next** to continue.

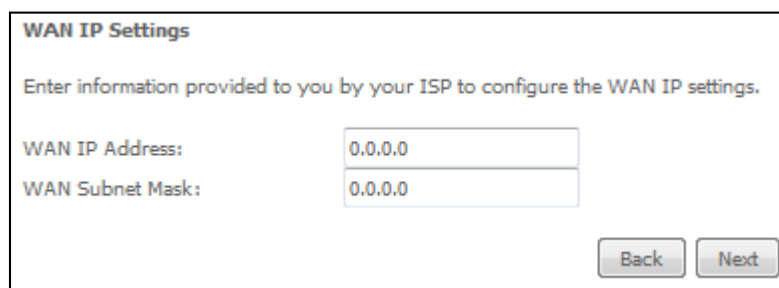


WAN IP Settings

Enter information provided to you by your ISP to configure the WAN IP settings.

WAN IP Address:

WAN Subnet Mask:

STEP 3: This screen provides access to NAT, Firewall and IGMP Multicast settings. Enable each by selecting the appropriate checkbox . Click **Next** to continue or click **Back** to return to the previous step.

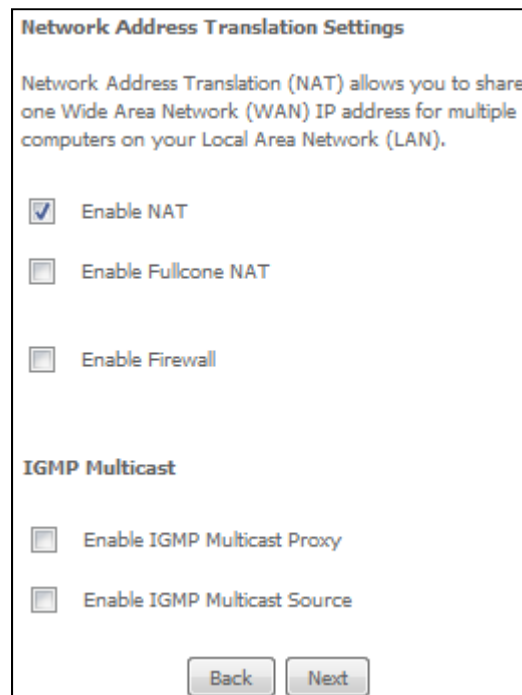

Network Address Translation Settings

Network Address Translation (NAT) allows you to share one Wide Area Network (WAN) IP address for multiple computers on your Local Area Network (LAN).

Enable NAT

Enable Fullcone NAT

Enable Firewall

IGMP Multicast

Enable IGMP Multicast Proxy

Enable IGMP Multicast Source

ENABLE NAT

If the LAN is configured with a private IP address, the user should select this checkbox . The NAT submenu will appear in the Advanced Setup menu after reboot. On the other hand, if a private IP address is not used on the LAN side (i.e. the LAN side is using a public IP), this checkbox should not be selected, so as to free up system resources for improved performance.

ENABLE FULLCONE NAT

This option becomes available when NAT is enabled. Known as one-to-one NAT, all requests from the same internal IP address and port are mapped to the same external IP address and port. An external host can send a packet to the internal host by sending a packet to the mapped external address.

ENABLE FIREWALL

If this checkbox is selected, the Security submenu will be displayed on the Advanced Setup menu after reboot. If firewall is not necessary, this checkbox should not be selected so as to free up system resources for better performance.


ENABLE IGMP MULTICAST PROXY

Tick the checkbox to enable Internet Group Membership Protocol (IGMP) multicast. This protocol is used by IPv4 hosts to report their multicast group memberships to any neighboring multicast routers.

Enable IGMP Multicast Source


Enable the WAN interface to be used as IGMP multicast source.

STEP 4: Choose an interface to be the default gateway.

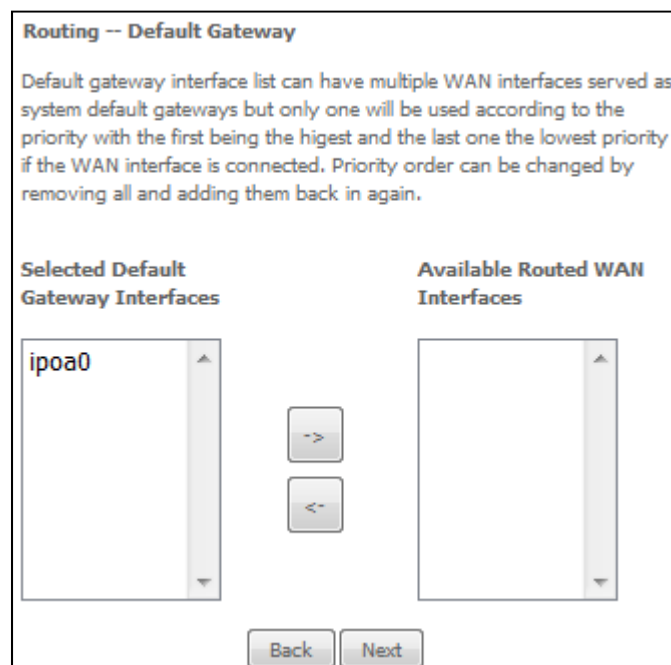

Click **Next** to continue or click **Back** to return to the previous step.

NOTE: If the DHCP server is not enabled on another WAN interface then the following notification will be shown before the next screen.

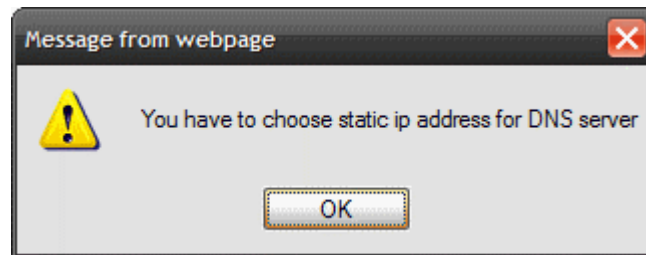

STEP 5: Select DNS Server Interface from available WAN interfaces OR enter static DNS server IP addresses for the system. In ATM mode, if only a single PVC with IPoA or static IPoE protocol is configured, Static DNS server IP addresses must be entered.

DNS Server Configuration

Select DNS Server Interface from available WAN interfaces OR enter static DNS server IP addresses for the system. If only a single WAN with static IPoE protocol is configured, Static DNS server IP addresses must be entered. **DNS Server Interfaces** can have multiple WAN interfaces served as system dns servers but only one will be used according to the priority with the first being the highest and the last one the lowest priority if the WAN interface is connected. Priority order can be changed by removing all and adding them back in again.

Select DNS Server Interface from available WAN interfaces:

Selected DNS Server Interfaces Available WAN Interfaces

▲

▼

▲

▼

Use the following Static DNS IP address:

Primary DNS server:

Secondary DNS server:

Click **Next** to continue or click **Back** to return to the previous step.

STEP 6: The WAN Setup - Summary screen shows a preview of the WAN service you have configured. Check these settings and click **Apply/Save** if they are correct, or click **Back** to modify them.

WAN Setup - Summary

Make sure that the settings below match the settings provided by your ISP.

Connection Type:	IPoA
NAT:	Enabled
Full Cone NAT:	Disabled
Firewall:	Disabled
IGMP Multicast Proxy:	Disabled
IGMP Multicast Source Enabled:	Disabled
MLD Multicast Proxy:	Disabled
MLD Multicast Source Enabled:	Disabled
Quality Of Service:	Disabled

Click "Apply/Save" to have this interface to be effective. Click "Back" to make any modifications.

After clicking **Apply/Save**, the new service should appear on the main screen.

F2.6 PPP over ETHERNET (PPPoE) – IPv6

STEP 1: Select the PPP over Ethernet radio button. Then select IPv6 only from the drop-down box at the bottom off the screen and click **Next**.

WAN Service Configuration

Select WAN service type:

PPP over Ethernet (PPPoE)
 IP over Ethernet
 Bridging

Enter Service Description:

For tagged service, enter valid 802.1P Priority and 802.1Q VLAN ID.
 For untagged service, set -1 to both 802.1P Priority and 802.1Q VLAN ID.

Enter 802.1P Priority [0-7]:

Enter 802.1Q VLAN ID [0-4094]:

Select VLAN TPID:

Internet Protocol Selection:

STEP 2: On the next screen, enter the PPP settings as provided by your ISP.

PPP Username and Password

PPP usually requires that you have a user name and password to establish your connection. In the boxes below, enter the user name and password that your ISP has provided to you.

PPP Username:

PPP Password:

PPPoE Service Name:

Authentication Method: **AUTO** ▼

Configure Keep-alive (PPP echo-request) Interval and the Number of retries

Interval:(second)

Number of retries:

Enable Fullcone NAT

Dial on demand (with idle timeout timer)

Enable Firewall

Use Static IPv4 Address

Use Static IPv6 Address

Enable IPv6 Unnumbered Model

Launch Dhcp6c for Address Assignment (IANA)

Launch Dhcp6c for Prefix Delegation (IAPD)

Launch Dhcp6c for Rapid Commit

Fixed MTU

MTU:

Enable PPP Manual Mode

Enable PPP Debug Mode

Bridge PPPoE Frames Between WAN and Local Ports

MLD Multicast

Enable MLD Multicast Proxy

Enable MLD Multicast Source

Click **Next** to continue or click **Back** to return to the previous step.

The settings shown above are described below.

PPP SETTINGS

The PPP Username, PPP password and the PPPoE Service Name entries are dependent on the particular requirements of the ISP. The user name can be a maximum of 256 characters and the password a maximum of 32 characters in length. For Authentication Method, choose from AUTO, PAP, CHAP, and MSCHAP.

CONFIGURE KEEP-ALIVE

Configures the interval and number of keep alive packets (PPP echo-request) sent by the device for the PPP connection.

Interval (second): Time between sending out each PPP echo-request packet.

Number of retries: Number of retries before PPP connection is dropped.

ENABLE FULLCONE NAT

This option becomes available when NAT is enabled. Known as one-to-one NAT, all requests from the same internal IP address and port are mapped to the same external IP address and port. An external host can send a packet to the internal host, by sending a packet to the mapped external address.

DIAL ON DEMAND

The VR-3071 can be configured to disconnect if there is no activity for a period of time by selecting the **Dial on demand** checkbox . You must also enter an inactivity timeout period in the range of 1 to 4320 minutes.

ENABLE FIREWALL

If this checkbox is selected, the Security submenu will be displayed on the Advanced Setup menu after reboot. If firewall is not necessary, this checkbox should not be selected to free up system resources for better performance.

USE STATIC IPv4 ADDRESS

Unless your service provider specially requires it, do not select this checkbox . If selected, enter the static IP address in the **IPv4 Address** field. Don't forget to adjust the IP configuration to Static IP Mode as described in section [3.2 IP Configuration](#).

USE STATIC IPv6 ADDRESS

Unless your service provider specially requires it, do not select this checkbox . If selected, enter the static IP address in the **IPv6 Address** field. Don't forget to adjust the IP configuration to Static IP Mode as described in section [3.2 IP Configuration](#).

ENABLE IPv6 UNNUMBERED MODEL

The IP unnumbered configuration command allows you to enable IP processing on a serial interface without assigning it an explicit IP address. The IP unnumbered interface can "borrow" the IP address of another interface already configured on the router, which conserves network and address space.

LAUNCH DHCP6C FOR ADDRESS ASSIGNMENT (IANA)

The Internet Assigned Numbers Authority (IANA) is a department of ICANN responsible for coordinating some of the key elements that keep the Internet running smoothly. Whilst the Internet is renowned for being a worldwide network free from central coordination, there is a technical need for some key parts of the Internet to be globally coordinated, and this coordination role is undertaken by IANA.

Specifically, IANA allocates and maintains unique codes and numbering systems that are used in the technical standards ("protocols") that drive the Internet.

IANA's various activities can be broadly grouped in to three categories:

- **Domain Names**
IANA manages the DNS Root, the .int and .arpa domains, and an IDN practices resource.
- **Number Resources**
IANA coordinates the global pool of IP and AS numbers, providing them to Regional Internet Registries.
- **Protocol Assignments**
Internet protocols' numbering systems are managed by IANA in conjunction with standards bodies.

LAUNCH DHCP6C FOR PREFIX DELEGATION (IAPD)

An Identity Association for Prefix Delegation (IAPD) is a collection of prefixes assigned to a requesting device. A requesting device may have more than one IAPD; for example, one for each of its interfaces.

A prefix-delegating router (DHCPv6 server) selects prefixes to be assigned to a requesting router (DHCPv6 client) upon receiving a request from the client. The server can select prefixes for a requesting client by using static and dynamic assignment mechanisms. Administrators can manually configure a list of prefixes and associated preferred and valid lifetimes for an IAPD of a specific client that is identified by its DUID.

When the delegating router receives a request from a client, it checks if there is a static binding configured for the IAPD in the client's message. If a static binding is present, the prefixes in the binding are returned to the client. If no such binding is found, the server attempts to assign prefixes for the client from other sources.

An IPv6 prefix delegating router can also select prefixes for a requesting router based on an external authority such as a RADIUS server using the Framed-IPv6-Prefix attribute.

LAUNCH DHCP6C FOR RAPID COMMIT

Rapid-Commit; is the process (option) in which a Requesting Router (DHCP Client) obtains "configurable information" (configurable parameters) from a Delegating Router (DHCP Server) by using a rapid DHCPv6 two-message exchange. The messages that are exchanged between the two routers (RR and DR) are called the DHCPv6 "SOLICIT" message and the DHCPv6 "REPLY" message.

FIXED MTU

Maximum Transmission Unit. The size (in bytes) of largest protocol data unit which the layer can pass onwards. This value is 1492 for PPPoE.

ENABLE PPP MANUAL MODE

Use this button to manually connect/disconnect PPP sessions.

ENABLE PPP DEBUG MODE

When this option is selected, the system will put more PPP connection information into the system log. This is for debugging errors and not for normal usage.

WDS PPPOE FRAMES BETWEEN WAN AND LOCAL PORTS

(This option is hidden when PPP IP Extension is enabled)

When Enabled, this creates local PPPoE connections to the WAN side. Enable this option only if all LAN-side devices are running PPPoE clients, otherwise disable it. The VR-3071 supports pass-through PPPoE sessions from the LAN side while simultaneously running a PPPoE client from non-PPPoE LAN devices.

ENABLE MLD MULTICAST PROXY

Multicast Listener Discovery (MLD) is a component of the Internet Protocol Version 6 (IPv6) suite. MLD is used by IPv6 routers for discovering multicast listeners on a directly attached link, much like IGMP is used in IPv4. The protocol is embedded in ICMPv6 instead of using a separate protocol.

ENABLE MLD MULTICAST SOURCE

Click to allow use of this WAN interface as Multicast Listener Discovery (MLD) multicast source.

STEP 3: Choose an interface to be the default gateway. Also, select a preferred WAN interface as the system default IPv6 gateway (from the drop-down box).

Routing -- Default Gateway

Default gateway interface list can have multiple WAN interfaces served as system default gateways but only one will be used according to the priority with the first being the highest and the last one the lowest priority if the WAN interface is connected. Priority order can be changed by removing all and adding them back in again.

Selected Default Gateway Interfaces	Available Routed WAN Interfaces
ppp0.1	

IPv6: Select a preferred wan interface as the system default IPv6 gateway.

Selected WAN Interface:

Back Next

Click **Next** to continue or click **Back** to return to the previous step.

STEP 4: Select DNS Server Interface from available WAN interfaces OR enter static DNS server IP addresses for the system. In ATM mode, if only a single PVC with IPoA or static IPoE protocol is configured, Static DNS server IP addresses must be entered.

Select the configured WAN interface for IPv6 DNS server information OR enter the static IPv6 DNS server Addresses. Note that selecting a WAN interface for IPv6 DNS server will enable DHCPv6 Client on that interface.

DNS Server Configuration

Select DNS Server Interface from available WAN interfaces OR enter static DNS server IP addresses for the system. If only a single WAN with static IPoE protocol is configured, Static DNS server IP addresses must be entered.
DNS Server Interfaces can have multiple WAN interfaces served as system dns servers but only one will be used according to the priority with the first being the highest and the last one the lowest priority if the WAN interface is connected. Priority order can be changed by removing all and adding them back in again.

Select DNS Server Interface from available WAN interfaces:

<p>Selected DNS Server Interfaces</p> <div style="border: 1px solid gray; padding: 5px; min-height: 100px;">ppp0.1</div>	<div style="border: 1px solid gray; width: 20px; height: 20px; margin: 5px auto; display: flex; align-items: center; justify-content: center;">-></div> <div style="border: 1px solid gray; width: 20px; height: 20px; margin: 5px auto; display: flex; align-items: center; justify-content: center;"><-</div>	<p>Available WAN Interfaces</p> <div style="border: 1px solid gray; padding: 5px; min-height: 100px;"></div>
--	---	--

Use the following Static DNS IP address:

Primary DNS server:

Secondary DNS server:

IPv6: Select the configured WAN interface for IPv6 DNS server information OR enter the static IPv6 DNS server Addresses.
 Note that selecting a WAN interface for IPv6 DNS server will enable DHCPv6 Client on that interface.

Obtain IPv6 DNS info from a WAN interface:

WAN Interface selected:

Use the following Static IPv6 DNS address:

Primary IPv6 DNS server:

Secondary IPv6 DNS server:

Click **Next** to continue or click **Back** to return to the previous step.

STEP 5: The WAN Setup - Summary screen shows a preview of the WAN service you have configured. Check these settings and click **Apply/Save** if they are correct, or click **Back** to modify them.

WAN Setup - Summary

Make sure that the settings below match the settings provided by your ISP.

Connection Type:	PPPoE
NAT:	Disabled
Full Cone NAT:	Disabled
Firewall:	Disabled
IGMP Multicast Proxy:	Disabled
IGMP Multicast Source Enabled:	Disabled
MLD Multicast Proxy:	Disabled
MLD Multicast Source Enabled:	Disabled
Quality Of Service:	Disabled

Click "Apply/Save" to have this interface to be effective. Click "Back" to make any modifications.

After clicking **Apply/Save**, the new service should appear on the main screen.

F2.7 IP over ETHERNET (IPoE) – IPv6

STEP 1: Select the IP over Ethernet radio button and click **Next**. Then select IPv6 only from the drop-down box at the bottom off the screen and click **Next**.

WAN Service Configuration

Select WAN service type:

PPP over Ethernet (PPPoE)
 IP over Ethernet
 Bridging

Enter Service Description:

For tagged service, enter valid 802.1P Priority and 802.1Q VLAN ID.
 For untagged service, set -1 to both 802.1P Priority and 802.1Q VLAN ID.

Enter 802.1P Priority [0-7]:

Enter 802.1Q VLAN ID [0-4094]:

Select VLAN TPID:

Internet Protocol Selection:

STEP 2: The WAN IP settings screen provides access to the DHCP server settings. You can select the **Obtain an IPv6 address automatically** radio button to enable DHCP (use the DHCP Options only if necessary). However, if you prefer, you can use the **Static IPv6 address** method instead to assign WAN IP address, Subnet Mask and Default Gateway manually.

Enter information provided to you by your ISP to configure the WAN IPv6 settings.

Notice: If "Obtain an IPv6 address automatically" is chosen, DHCP client will be enabled on this WAN interface.

If "Use the following Static IPv6 address" is chosen, enter the static WAN IPv6 address. If the address prefix length is not specified, it will be default to /64.

WAN IP Settings

Enter information provided to you by your ISP to configure the WAN IP settings.
 Notice: If "Obtain an IP address automatically" is chosen, DHCP will be enabled for PVC in IPoE mode.
 If "Use the following Static IP address" is chosen, enter the WAN IP address, subnet mask and interface gateway.

Obtain an IP address automatically

Option 60 Vendor ID:

Option 61 IAID: (8 hexadecimal digits)

Option 61 DUID: (hexadecimal digit)

Option 77 User ID:

Option 125: Disable Enable

Option 50 Request IP Address:

Option 51 Request Leased Time:

Option 54 Request Server Address:

Use the following Static IP address:

WAN IP Address:

WAN Subnet Mask:

WAN gateway IP Address:

Enter information provided to you by your ISP to configure the WAN IPv6 settings.
 Notice:
 If "Obtain an IPv6 address automatically" is chosen, DHCPv6 Client will be enabled on this WAN interface.
 If "Use the following Static IPv6 address" is chosen, enter the static WAN IPv6 address. If the address prefix length is not specified, it will be default to /64.

Obtain an IPv6 address automatically

Dhcpv6 Address Assignment (IANA)

Dhcpv6 Prefix Delegation (IAPD)

Use the following Static IPv6 address:

WAN IPv6 Address/Prefix Length:

Specify the Next-Hop IPv6 address for this WAN interface.
 Notice: This address can be either a link local or a global unicast IPv6 address.

WAN Next-Hop IPv6 Address:

Click **Next** to continue or click **Back** to return to the previous step.

DHCP6C FOR ADDRESS ASSIGNMENT (IANA)

The Internet Assigned Numbers Authority (IANA) is a department of ICANN responsible for coordinating some of the key elements that keep the Internet running smoothly. Whilst the Internet is renowned for being a worldwide network free from central coordination, there is a technical need for some key parts of the Internet to be globally coordinated, and this coordination role is undertaken by IANA.

Specifically, IANA allocates and maintains unique codes and numbering systems that are used in the technical standards (“protocols”) that drive the Internet.

IANA's various activities can be broadly grouped in to three categories:

- **Domain Names**
IANA manages the DNS Root, the .int and .arpa domains, and an IDN practices resource.
- **Number Resources**
IANA coordinates the global pool of IP and AS numbers, providing them to Regional Internet Registries.
- **Protocol Assignments**
Internet protocols' numbering systems are managed by IANA in conjunction with standards bodies.

DHCP6C FOR PREFIX DELEGATION (IAPD)

An Identity Association for Prefix Delegation (IAPD) is a collection of prefixes assigned to a requesting device. A requesting device may have more than one IAPD; for example, one for each of its interfaces.

A prefix-delegating router (DHCPv6 server) selects prefixes to be assigned to a requesting router (DHCPv6 client) upon receiving a request from the client. The server can select prefixes for a requesting client by using static and dynamic assignment mechanisms. Administrators can manually configure a list of prefixes and associated preferred and valid lifetimes for an IAPD of a specific client that is identified by its DUID.

When the delegating router receives a request from a client, it checks if there is a static binding configured for the IAPD in the client's message. If a static binding is present, the prefixes in the binding are returned to the client. If no such binding is found, the server attempts to assign prefixes for the client from other sources.

An IPv6 prefix delegating router can also select prefixes for a requesting router based on an external authority such as a RADIUS server using the Framed-IPv6-Prefix attribute.

WAN NEXT-HOP IPv6 ADDRESS

Specify the Next-Hop IPv6 address for this WAN interface.

This address can be either a link local or a global unicast IPv6 address.

STEP 3: This screen provides access to NAT, Firewall and IGMP Multicast settings. Enable each by selecting the appropriate checkbox .

Click **Next** to continue or click **Back** to return to the previous step.

ENABLE NAT

If the LAN is configured with a private IP address, the user should select this checkbox . The NAT submenu will appear in the Advanced Setup menu after reboot. On the other hand, if a private IP address is not used on the LAN side (i.e. the LAN side is using a public IP), this checkbox should not be selected, so as to free up system resources for improved performance.

ENABLE FIREWALL

If this checkbox is selected, the Security submenu will be displayed on the Advanced Setup menu after reboot. If firewall is not necessary, this checkbox should not be selected so as to free up system resources for better performance.

ENABLE MLD MULTICAST PROXY

Multicast Listener Discovery (MLD) is a component of the Internet Protocol Version 6 (IPv6) suite. MLD is used by IPv6 routers for discovering multicast listeners on a directly attached link, much like IGMP is used in IPv4. The protocol is embedded in ICMPv6 instead of using a separate protocol.

ENABLE MLD MULTICAST SOURCE

Click to allow use of this WAN interface as Multicast Listener Discovery (MLD) multicast source.

Enable WAN interface with base MAC

Enable this option to use the router's base MAC address as the MAC address for this WAN interface.

STEP 4: To choose an interface to be the default gateway. Also, select a preferred WAN interface as the system default IPv6 gateway (from the drop-down box).

Routing -- Default Gateway

Default gateway interface list can have multiple WAN interfaces served as system default gateways but only one will be used according to the priority with the first being the highest and the last one the lowest priority if the WAN interface is connected. Priority order can be changed by removing all and adding them back in again.

Selected Default Gateway Interfaces		Available Routed WAN Interfaces
atm0.1	<div style="margin-bottom: 5px;">-></div> <div style="margin-bottom: 5px;"><-</div>	

IPv6: Select a preferred wan interface as the system default IPv6 gateway.

Selected WAN Interface

Click **Next** to continue or click **Back** to return to the previous step.

STEP 5: Select DNS Server Interface from available WAN interfaces OR enter static DNS server IP addresses for the system. In ATM mode, if only a single PVC with IPoA or static IPoE protocol is configured, Static DNS server IP addresses must be entered.

Select the configured WAN interface for IPv6 DNS server information OR enter the static IPv6 DNS server Addresses. Note that selecting a WAN interface for IPv6 DNS server will enable DHCPv6 Client on that interface.

DNS Server Configuration

Select DNS Server Interface from available WAN interfaces OR enter static DNS server IP addresses for the system. If only a single WAN with static IPoE protocol is configured, Static DNS server IP addresses must be entered.
DNS Server Interfaces can have multiple WAN interfaces served as system dns servers but only one will be used according to the priority with the first being the highest and the last one the lowest priority if the WAN interface is connected. Priority order can be changed by removing all and adding them back in again.

Select DNS Server Interface from available WAN interfaces:

<p>Selected DNS Server Interfaces</p> <div style="border: 1px solid gray; padding: 5px; min-height: 100px;">atm0.1</div>	<div style="border: 1px solid gray; width: 20px; height: 20px; margin: 5px auto; display: flex; align-items: center; justify-content: center;">-></div> <div style="border: 1px solid gray; width: 20px; height: 20px; margin: 5px auto; display: flex; align-items: center; justify-content: center;"><-</div>	<p>Available WAN Interfaces</p> <div style="border: 1px solid gray; padding: 5px; min-height: 100px;"></div>
--	---	--

Use the following Static DNS IP address:

Primary DNS server:

Secondary DNS server:

IPv6: Select the configured WAN interface for IPv6 DNS server information OR enter the static IPv6 DNS server Addresses.
 Note that selecting a WAN interface for IPv6 DNS server will enable DHCPv6 Client on that interface.

Obtain IPv6 DNS info from a WAN interface:

WAN Interface selected:

Use the following Static IPv6 DNS address:

Primary IPv6 DNS server:

Secondary IPv6 DNS server:

Click **Next** to continue or click **Back** to return to the previous step.

STEP 6: The WAN Setup - Summary screen shows a preview of the WAN service you have configured. Check these settings and click **Apply/Save** if they are correct, or click **Back** to modify them.

WAN Setup - Summary

Make sure that the settings below match the settings provided by your ISP.


Connection Type:	IPoE
NAT:	Disabled
Full Cone NAT:	Disabled
Firewall:	Disabled
IGMP Multicast Proxy:	Disabled
IGMP Multicast Source Enabled:	Disabled
MLD Multicast Proxy:	Disabled
MLD Multicast Source Enabled:	Disabled
Quality Of Service:	Disabled

Click "Apply/Save" to have this interface to be effective. Click "Back" to make any modifications.

After clicking **Apply/Save**, the new service should appear on the main screen.

F2.8 PPP over ATM (PPPoA) – IPv6

STEP 1: Select IPv6 Only from the drop-down box at the bottom of this screen and click **Next**.

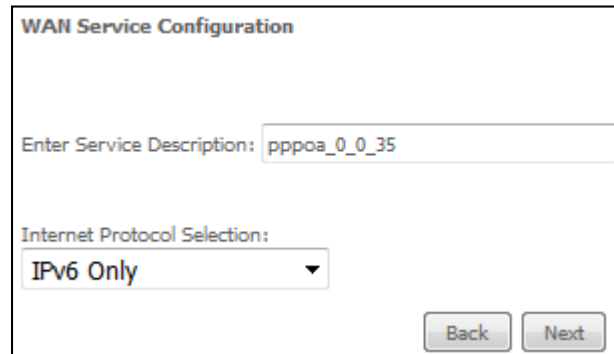

The image shows a screenshot of a web-based configuration interface titled "WAN Service Configuration". It contains the following elements:

- A text input field labeled "Enter Service Description:" with the value "pppoa_0_0_35" entered.
- A dropdown menu labeled "Internet Protocol Selection:" with "IPv6 Only" selected.
- Two buttons at the bottom right: "Back" and "Next".

STEP 2: On the next screen, enter the PPP settings as provided by your ISP. Click **Next** to continue or click **Back** to return to the previous step.

PPP Username and Password

PPP usually requires that you have a user name and password to establish your connection. In the boxes below, enter the user name and password that your ISP has provided to you.

PPP Username:

PPP Password:

Authentication Method: **AUTO** ▼

Configure Keep-alive (PPP echo-request) Interval and the Number of retries

Interval:(second)

Number of retries:

Enable Fullcone NAT

Dial on demand (with idle timeout timer)

Enable Firewall

Use Static IPv4 Address

Use Static IPv6 Address

Enable IPv6 Unnumbered Model

Launch Dhcp6c for Address Assignment (IANA)

Launch Dhcp6c for Prefix Delegation (IAPD)

Launch Dhcp6c for Rapid Commit

Fixed MTU

MTU:

Enable PPP Manual Mode

Enable PPP Debug Mode

MLD Multicast

Enable MLD Multicast Proxy

Enable MLD Multicast Source

PPP SETTINGS

The PPP username and password are dependent on the requirements of the ISP. The user name can be a maximum of 256 characters and the password a maximum of 32 characters in length. (Authentication Method: AUTO, PAP, CHAP, or MSCHAP.)

CONFIGURE KEEP-ALIVE

Configures the interval and number of keep alive packets (PPP echo-request) sent by the device for the PPP connection.

Interval (second): Time between sending out each PPP echo-request packet.

Number of retries: Number of retries before PPP connection is dropped.

ENABLE FULLCONE NAT

This option becomes available when NAT is enabled. Known as one-to-one NAT, all requests from the same internal IP address and port are mapped to the same external IP address and port. An external host can send a packet to the internal host, by sending a packet to the mapped external address.

DIAL ON DEMAND

The VR-3071 can be configured to disconnect if there is no activity for a period of time by selecting the **Dial on demand** checkbox . You must also enter an inactivity timeout period in the range of 1 to 4320 minutes.

ENABLE FIREWALL

If this checkbox is selected, the Security submenu will be displayed on the Advanced Setup menu after reboot. If firewall is not necessary, this checkbox should not be selected to free up system resources for better performance.

USE STATIC IPv4 ADDRESS

Unless your service provider specially requires it, do not select this checkbox . If selected, enter the static IP address in the **IP Address** field. Also, don't forget to adjust the IP configuration to Static IP Mode as described in [3.2 IP Configuration](#).

USE STATIC IPv6 ADDRESS

Unless your service provider specially requires it, do not select this checkbox . If selected, enter the static IP address in the **IPv6 Address** field. Don't forget to adjust the IP configuration to Static IP Mode as described in section [3.2 IP Configuration](#).

ENABLE IPv6 UNNUMBERED MODEL

The IP unnumbered configuration command allows you to enable IP processing on a serial interface without assigning it an explicit IP address. The IP unnumbered interface can "borrow" the IP address of another interface already configured on the router, which conserves network and address space.

LAUNCH DHCP6C FOR ADDRESS ASSIGNMENT (IANA)

The Internet Assigned Numbers Authority (IANA) is a department of ICANN responsible for coordinating some of the key elements that keep the Internet running smoothly. Whilst the Internet is renowned for being a worldwide network free from central coordination, there is a technical need for some key parts of the Internet to be globally coordinated, and this coordination role is undertaken by IANA.

Specifically, IANA allocates and maintains unique codes and numbering systems that are used in the technical standards ("protocols") that drive the Internet.

IANA's various activities can be broadly grouped in to three categories:

- Domain Names
 - IANA manages the DNS Root, the .int and .arpa domains, and an IDN practices resource.

- Number Resources
IANA coordinates the global pool of IP and AS numbers, providing them to Regional Internet Registries.
- Protocol Assignments
Internet protocols' numbering systems are managed by IANA in conjunction with standards bodies.

LAUNCH DHCP6C FOR PREFIX DELEGATION (IAPD)

An Identity Association for Prefix Delegation (IAPD) is a collection of prefixes assigned to a requesting device. A requesting device may have more than one IAPD; for example, one for each of its interfaces.

A prefix-delegating router (DHCPv6 server) selects prefixes to be assigned to a requesting router (DHCPv6 client) upon receiving a request from the client. The server can select prefixes for a requesting client by using static and dynamic assignment mechanisms. Administrators can manually configure a list of prefixes and associated preferred and valid lifetimes for an IAPD of a specific client that is identified by its DUID.

When the delegating router receives a request from a client, it checks if there is a static binding configured for the IAPD in the client's message. If a static binding is present, the prefixes in the binding are returned to the client. If no such binding is found, the server attempts to assign prefixes for the client from other sources.

An IPv6 prefix delegating router can also select prefixes for a requesting router based on an external authority such as a RADIUS server using the Framed-IPv6-Prefix attribute.

LAUNCH DHCP6C FOR RAPID COMMIT

Rapid-Commit; is the process (option) in which a Requesting Router (DHCP Client) obtains "configurable information" (configurable parameters) from a Delegating Router (DHCP Server) by using a rapid DHCPv6 two-message exchange. The messages that are exchanged between the two routers (RR and DR) are called the DHCPv6 "SOLICIT" message and the DHCPv6 "REPLY" message.

FIXED MTU

Fixed Maximum Transmission Unit. The size (in bytes) of largest protocol data unit which the layer can pass onwards. This value is 1500 for PPPoA.

ENABLE PPP MANUAL MODE

Use this button to manually connect/disconnect PPP sessions.

ENABLE PPP DEBUG MODE

When this option is selected, the system will put more PPP connection information into the system log. This is for debugging errors and not for normal usage.

ENABLE MLD MULTICAST PROXY

Multicast Listener Discovery (MLD) is a component of the Internet Protocol Version 6 (IPv6) suite. MLD is used by IPv6 routers for discovering multicast listeners on a directly attached link, much like IGMP is used in IPv4. The protocol is embedded in ICMPv6 instead of using a separate protocol.

ENABLE MLD MULTICAST SOURCE

Click to allow use of this WAN interface as Multicast Listener Discovery (MLD) multicast source.

STEP 3: Choose an interface to be the default gateway.

Routing -- Default Gateway

Default gateway interface list can have multiple WAN interfaces served as system default gateways but only one will be used according to the priority with the first being the highest and the last one the lowest priority if the WAN interface is connected. Priority order can be changed by removing all and adding them back in again.

Selected Default Gateway Interfaces

pppoa0

->

<-

Available Routed WAN Interfaces

IPv6: Select a preferred wan interface as the system default IPv6 gateway.

Selected WAN Interface: pppoa_0_0_35/pppoa0

Back
Next

Click **Next** to continue or click **Back** to return to the previous step.

STEP 4: Select DNS Server Interface from available WAN interfaces OR enter static DNS server IP addresses for the system. In ATM mode, if only a single PVC with IPoA or static IPoE protocol is configured, Static DNS server IP addresses must be entered.

Select the configured WAN interface for IPv6 DNS server information OR enter the static IPv6 DNS server Addresses. Note that selecting a WAN interface for IPv6 DNS server will enable DHCPv6 Client on that interface.

DNS Server Configuration

Select DNS Server Interface from available WAN interfaces OR enter static DNS server IP addresses for the system. If only a single WAN with static IPoE protocol is configured, Static DNS server IP addresses must be entered.

DNS Server Interfaces can have multiple WAN interfaces served as system dns servers but only one will be used according to the priority with the first being the highest and the last one the lowest priority if the WAN interface is connected. Priority order can be changed by removing all and adding them back in again.

Select DNS Server Interface from available WAN interfaces:

Selected DNS Server Interfaces		Available WAN Interfaces
pppoa0	<input type="button" value="->"/> <input type="button" value="<-"/>	

Use the following Static DNS IP address:

Primary DNS server:

Secondary DNS server:

IPv6: Select the configured WAN interface for IPv6 DNS server information OR enter the static IPv6 DNS server Addresses.
Note that selecting a WAN interface for IPv6 DNS server will enable DHCPv6 Client on that interface.

Obtain IPv6 DNS info from a WAN interface:

WAN Interface selected:

Use the following Static IPv6 DNS address:

Primary IPv6 DNS server:

Secondary IPv6 DNS server:

Click **Next** to continue or click **Back** to return to the previous step.

STEP 5: The WAN Setup - Summary screen shows a preview of the WAN service you have configured. Check these settings and click **Apply/Save** if they are correct, or click **Back** to modify them.

WAN Setup - Summary

Make sure that the settings below match the settings provided by your ISP.

Connection Type:	PPPoA
NAT:	Disabled
Full Cone NAT:	Disabled
Firewall:	Disabled
IGMP Multicast Proxy:	Disabled
IGMP Multicast Source Enabled:	Disabled
MLD Multicast Proxy:	Disabled
MLD Multicast Source Enabled:	Disabled
Quality Of Service:	Disabled

Click "Apply/Save" to have this interface to be effective. Click "Back" to make any modifications.

After clicking **Apply/Save**, the new service should appear on the main screen.