

TRENDnet TEW-653AP

300Mbps Wireless N PoE Access Point



Table of Content

| | |
|---|----|
| Introduction..... | 4 |
| Features and Benefits | 4 |
| Wireless Performance Considerations | 5 |
| Package Contents | 6 |
| System Requirement | 6 |
| Hardware Installation..... | 6 |
| Modes..... | 7 |
| Using the Web Browser | 8 |
| Setup Wizard..... | 8 |
| System..... | 10 |
| Operation Mode | 10 |
| Status | 10 |
| LAN | 11 |
| SNMP..... | 12 |
| Schedule..... | 13 |
| Event Log..... | 13 |
| Monitor..... | 14 |
| Wireless Access Point Mode..... | 15 |
| Basic..... | 15 |
| Advanced | 16 |
| Security | 17 |
| Encryption: WEP | 17 |
| Encryption: WPA pre-shared key..... | 18 |
| Encryption: WPA RADIUS..... | 19 |
| Filter..... | 20 |
| WPS | 21 |
| Client List..... | 22 |
| VLAN..... | 22 |
| WMM..... | 23 |
| Wireless WDS Bridge Mode..... | 24 |
| Basic..... | 24 |
| Security: Disabled | 24 |
| Security: WEP..... | 25 |
| Security: WPA pre-shared key | 25 |
| Advanced | 26 |
| WMM..... | 27 |
| Repeater Mode | 28 |

| | |
|----------------------------------|----|
| Wireless Basic | 28 |
| Advanced | 29 |
| Repeater Mode Security | 30 |
| WEP | 30 |
| WPA pre-shared key | 31 |
| Filter | 32 |
| WPS | 33 |
| Client List | 34 |
| WMM | 34 |
| Tools | 35 |
| Admin | 35 |
| Time Setting | 35 |
| Power Saving | 36 |
| LED Control | 36 |
| Diagnosis | 37 |
| Firmware | 37 |
| Backup | 38 |
| Restart | 38 |
| FCC Interference Statement | 39 |
| IC Interference Statement | 40 |
| Limited Warranty | 41 |

Introduction

TEW-653AP is a powerful and multi-functioned 11n Access Point and it can act three modes AP/WDS/Universal Repeater. Smoke detector appearance will minimize visibility. So this model can work properly at Hotel or public area.

TEW-653AP is a Wireless Network device that delivers up to 6x faster speeds and 7x extended coverage than 802.11g devices. Product's RF performance is finely tuned so it will bring best wireless signal for each client. TEW-653AP supports home network with superior throughput, performance and unparalleled wireless range. To protect data during wireless transmissions, TEW-653AP encrypts all wireless transmissions through WEP data encryption and supports WPA/WPA2. Its MAC address filter allows users to select stations with access to connect network. TEW-653AP thus is the best product to ensure network quality for hotspots.

Features and Benefits

- Wi-Fi compliant with IEEE 802.11n and IEEE 802.11b/g standards
- Power device by an Ethernet cable using standard IEEE802.3af Power over Ethernet (PoE) protocol
- Functional Access Point, WDS and Universal Repeater modes provide network flexibility
- Advance wireless security with 64/128-bit WEP, WPA/WPA2 Radius and WPA-PSK/WPA2-PSK
- Supports multiple SSID (up to 4 SSIDs) with 802.1q VLAN tagging (AP mode)
- High-speed up to 300Mbps data rate using 802.11n connection
- User isolation support (AP mode)
- Monitor bandwidth allocation through graphical interface
- Support Wi-Fi Protected Setup (WPS) for easy configuration
- 802.1x Authentication protocol support
- Support for Wireless Multimedia (WMM) QoS
- Easy web management via web browser
- Remote network management and SNMP support (v1, v2c)
- 3-year limited warranty

Wireless Performance Considerations

There are a number of factors that can impact the range of wireless devices.

1. Adjust your wireless devices so that the signal is traveling in a straight path, rather than at an angle. The more material the signal has to pass through the more signal you will lose.
2. Keep the number of obstructions to a minimum. Each obstruction can reduce the range of a wireless device. Position the wireless devices in a manner that will minimize the amount of obstructions between them.
3. Building materials can have a large impact on your wireless signal. In an indoor environment, try to position the wireless devices so that the signal passes through less dense material such as dry wall. Dense materials like metal, solid wood, glass or even furniture may block or degrade the signal.
4. Antenna orientation can also have a large impact on your wireless signal. Use the wireless adapter's site survey tool to determine the best antenna orientation for your wireless devices.
5. Interference from devices that produce RF (radio frequency) noise can also impact your signal. Position your wireless devices away from anything that generates RF noise, such as microwaves, radios and baby monitors.
6. Any device operating on the 2.4GHz frequency will cause interference. Devices such as 2.4GHz cordless phones or other wireless remotes operating on the 2.4GHz frequency can potentially drop the wireless signal. Although the phone may not be in use, the base can still transmit wireless signal. Move the phone's base station as far away as possible from your wireless devices.

If you are still experiencing low or no signal consider repositioning the wireless devices or installing additional access points. The use of higher gain antennas may also provide the necessary coverage depending on the environment.

Package Contents

The package contains the following items. In case of return, please keep the original box set, and the complete box set must be included for full refund.

- TEW-653AP
- 12V/1A 100V~240V Power Adapter
- Quick Installation
- CD-Rom (User's Guide)

System Requirement



The following are the minimum system requirements in order to configure the device.

- PC/AT compatible computer with an Ethernet interface.
- Operating system that supports HTTP web-browser

Hardware Installation

- 1 Place the unit in an appropriate place after conducting a site survey.
- 2 Plug one end of the Ethernet cable into the RJ-45 port on the rear panel of the device and another end into your PC/Notebook.
- 3 Insert the DC-inlet of the power adapter into the port labeled "DC-IN" and the other end into the power socket on the wall.
- 4 Regarding wall mount please use $\Phi 3.0$ screw for fixing.

This diagram depicts the hardware configuration

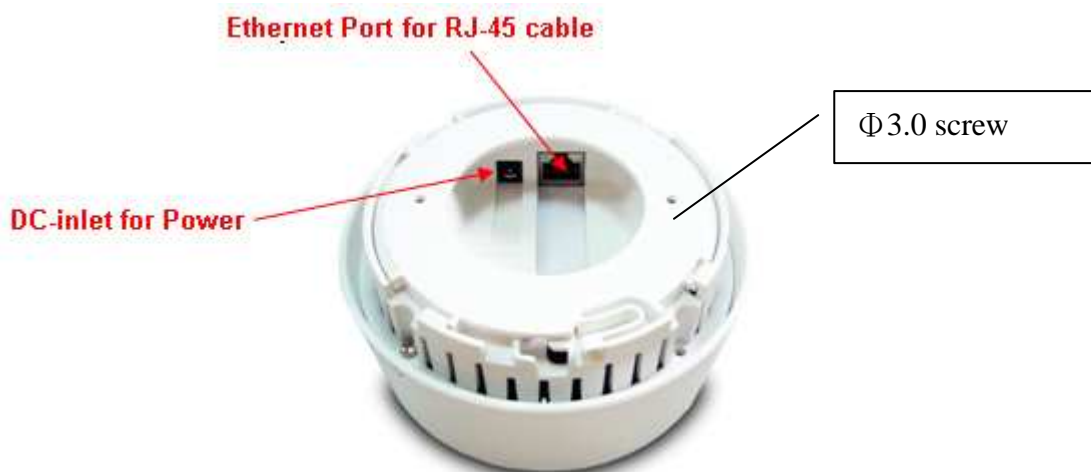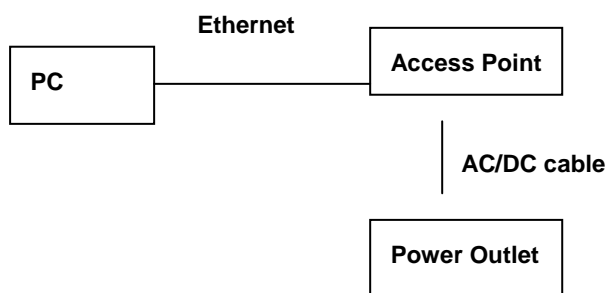

Modes

You are allowed to configure TEW-653AP into different modes: AP, WDS Bridge and Repeater. AP/WDS/Universal Repeater

Access Point

In AP (Access Point) mode, your device acts as a communication hub for users with a wireless device to connect to a wired LAN/WAN.

WDS Bridge



You can only connect to the device via Ethernet Port


WDS (Wireless Distribution System) allows AP to communicate with one another wirelessly. This capability is critical in providing a seamless experience for roaming clients and for managing multiple wireless networks.

Repeater

Repeater is used to regenerate or replicate signals that are weakened or distorted by transmission over long distances and through areas with high levels of electromagnetic interference (EMI). Repeater (AP) mode on one radio channel is usually configured along with Universal (STA) mode on AP channel.

Using the Web Browser

1. Open Internet Explorer 5.0 or above Internet browser.
2. Enter IP address <http://192.168.100.1> (the factory-default IP address setting) to the URL web address location.




3. When the following dialog box appears, enter the user name and password to login to the main configuration window, the default username and password is "**admin**".




Setup Wizard


Setup wizard is provided as part of the web configuration utility. User can simply follow the step-by-step process to get the wireless Access Point configuration ready to run in these easy steps by clicking on the "Wizard" button on the function menu. The following screen will appear. Please click "Next" to continue.

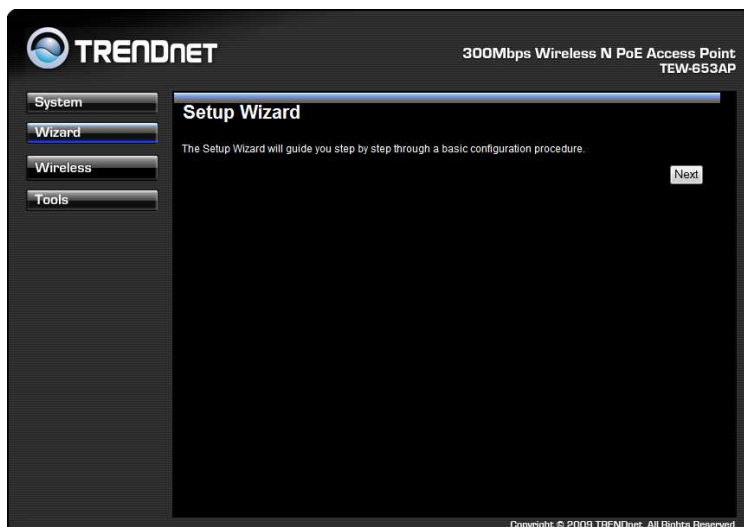


Step 1: Set the Operation Mode of the Access Point by selecting AP Mode, WDS Bridge Mode or Repeater Mode. Please click "Next" to continue.

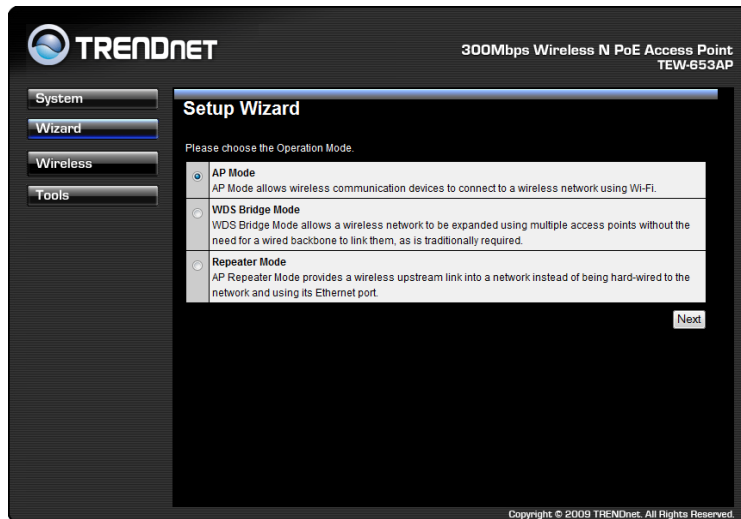

Step 2: Select the level of security you would like to apply on the Access Point between Lowest to Highest. You can type in your personal settings by entering in the SSID and KEY information. Please click “Next” to continue.

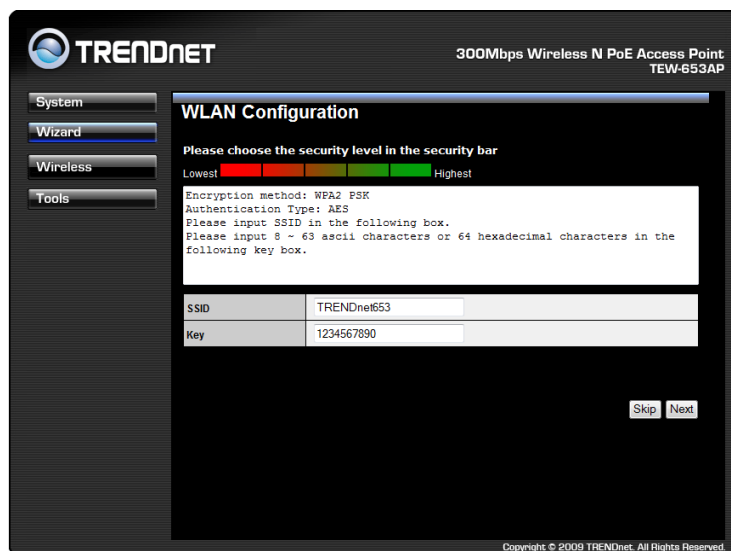


Step 3: Your settings will appear and click Reboot to apply settings.

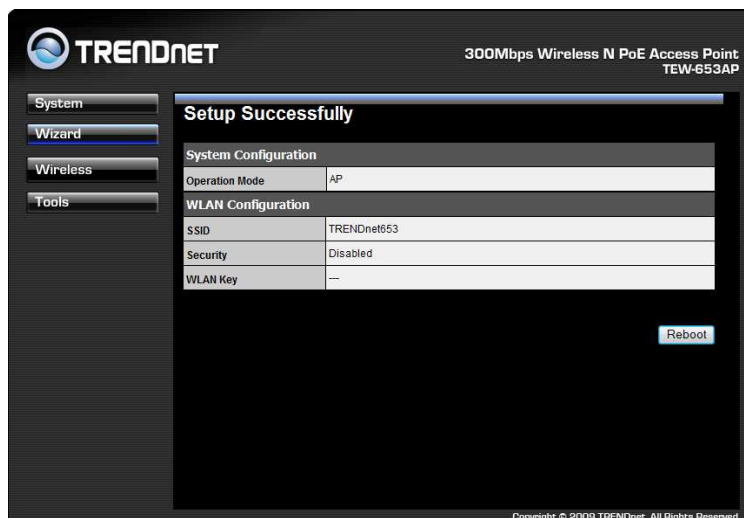

System


Operation Mode

You are allowed to configure TEW-653AP into different modes: AP, WDS Bridge and Repeater.

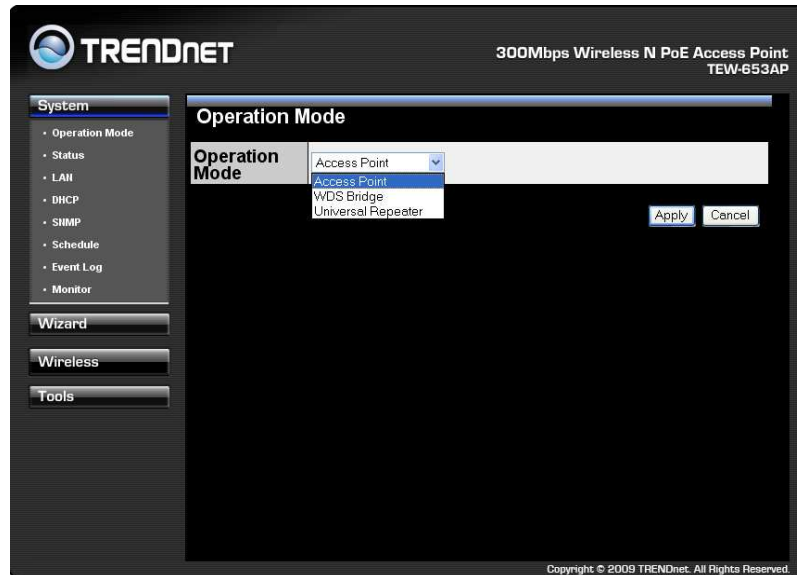

Status

This selection enables users to view the current applied settings of the Access Point.

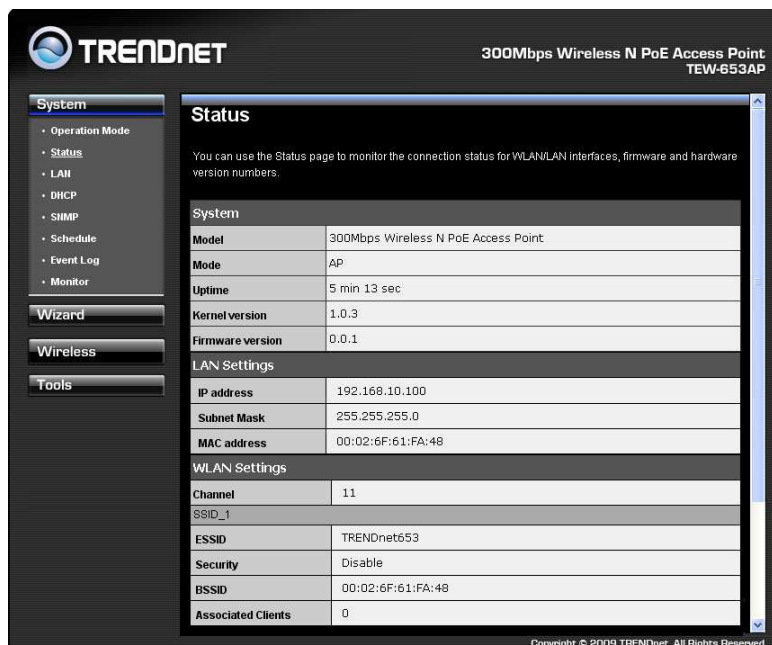

System: Basic information of the device.

WLAN Settings: WLAN channel.

SSID_1: SSID information.

LAN

This screen allows users to configure the LAN settings of the access point and to configure the DHCP settings.

TRENDNET 300Mbps Wireless N PoE Access Point
TEW-653AP

System

- Operation Mode
- Status
- LAN
- DHCP
- SNMP
- Schedule
- Event Log
- Monitor

Wizard

Wireless

Tools

LAN

You can enable the Broadband routers DHCP server to dynamically allocate IP Addresses to your LAN client PCs. The broadband router must have an IP Address for the Local Area Network.

LAN IP

| | |
|----------------------|----------------|
| IP address | 192.168.10.100 |
| IP Subnet Mask | 255.255.255.0 |
| 802.1d Spanning Tree | Disabled |

DHCP Server

| | |
|-------------|----------------|
| DHCP Server | Disabled |
| Lease time | Forever |
| Start IP | 192.168.10.101 |
| End IP | 192.168.10.200 |
| Domain name | TEW-653AP |

Apply Cancel

Copyright © 2009 TRENDnet. All Rights Reserved.

Bridge Type: Select Static IP or Dynamic IP from the drop-down list. If you select Static IP, you will be required to specify an IP address and subnet mask. If Dynamic IP is selected, then the IP address is received automatically from the external DHCP server.

IP Address: Specify an IP address.

IP Subnet Mask: Specify a subnet mask for the IP address.

802.1d Spanning Tree: Select Enable or Disable from the drop-down list. Enabling spanning tree will avoid redundant data loops.

SNMP

Allows you to assign the contact details, location, community name and trap settings for SNMP. This is a networking management protocol used to monitor network-attached devices. SNMP allows messages (called protocol data units) to be sent to various parts of a network. Upon receiving these messages, SNMP-compatible devices (called agents) return data stored in their Management Information Bases.

The screenshot shows the Trendnet web interface for a 300Mbps Wireless N PoE Access Point (TEW-653AP). The left sidebar contains a navigation menu with the following items: System (selected), Operation Mode, Status, LAN, DHCP, SNMP, Schedule, Event Log, and Monitor. Below the menu are buttons for Wizard, Wireless, and Tools. The main content area is titled "SNMP" and includes a brief description: "SNMP is used in network management systems to monitor network-attached devices for conditions that warrant administrative attention." Below this is a table of configuration options:

| | |
|-----------------|---------------|
| SNMP Active | Enabled |
| SNMP Version | All |
| Read Community | public |
| Set Community | private |
| System Location | US |
| System Contact | admin |
| Trap Active | Enabled |
| Trap Manager IP | 192.168.1.100 |
| Trap Community | public |

An "Apply" button is located at the bottom right of the configuration table. The footer of the page reads "Copyright © 2009 TRENDnet. All Rights Reserved."

SNMP Active: Choose to enable or disable the SNMP feature.

SNMP Version: You may select a specific version or select All from the drop-down list.

Read Community Name: Specify the password for access the SNMP community for read only access.

Set Community Name: Specify the password for access to the SNMP community with read/write access.

System Location: Specify the location of the device.

System Contact: Specify the contact details of the device.


Trap Active: Choose to enable or disable the SNMP trapping feature. .

Trap Manager IP: Specify the password for the SNMP trap community.

Trap Community: Specify the name of SNMP trap community.


Schedule

This screen allows users to set schedules on the access point.

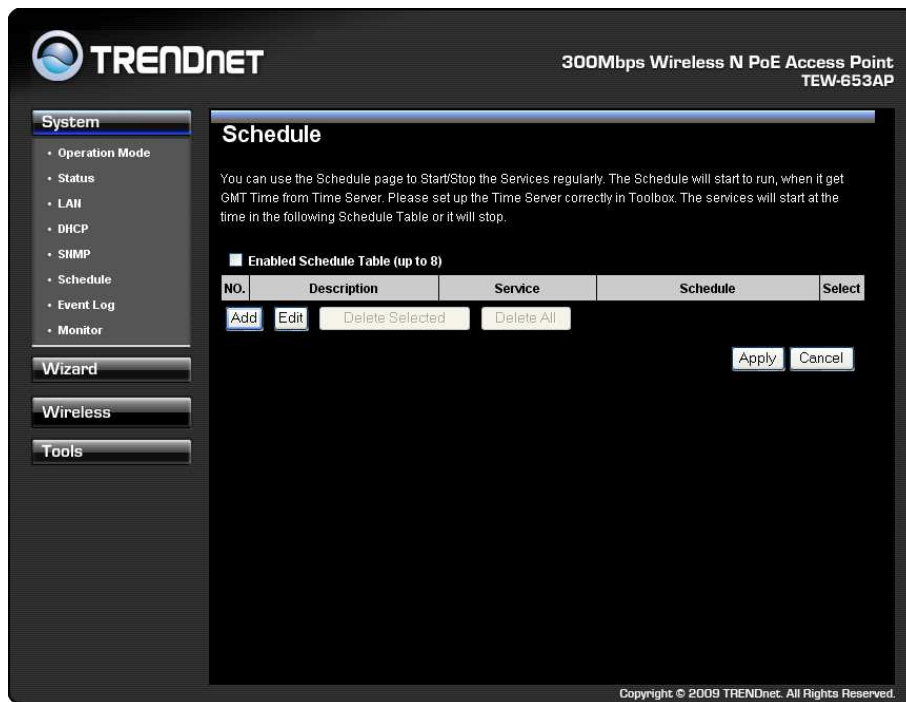

Event Log

This screen allows users to view a running log of the access point system statistics, events and activities.

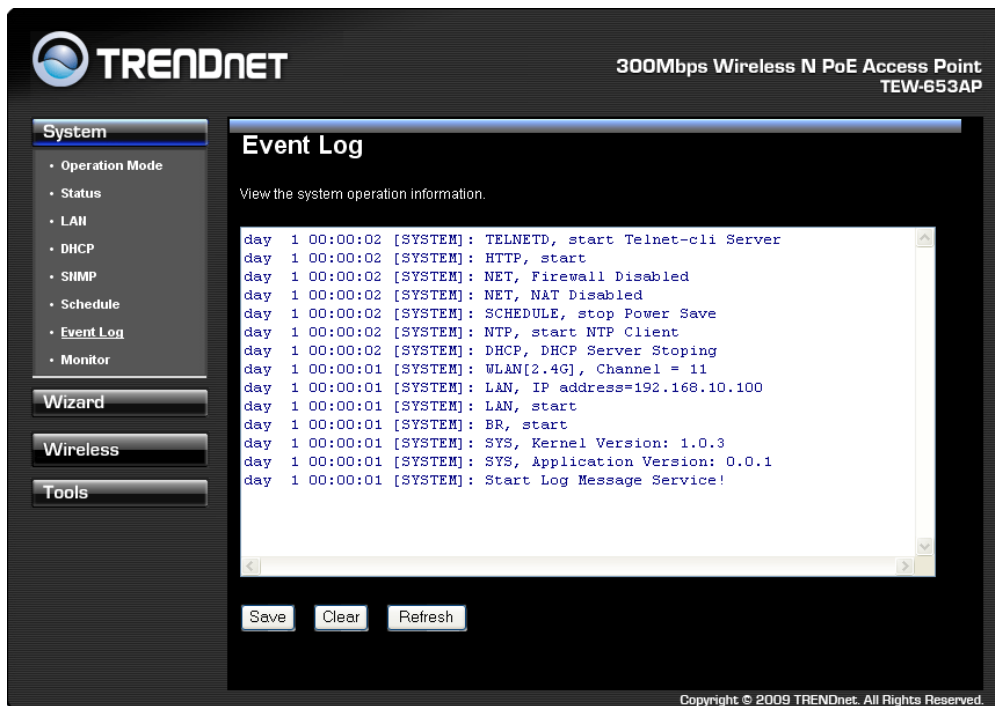

Wireless Access Point Mode

Basic

This screen allows users configure the access point under Access Point mode.

TRENDNET 300Mbps Wireless N PoE Access Point TEW-653AP

Basic

This page allows you to define SSID, and Channel for the wireless connection. These parameters are used for the wireless stations to connect to the Access Point

| | |
|---------------|---|
| Radio | <input checked="" type="radio"/> Enable <input type="radio"/> Disable |
| Mode | AP |
| Band | 2.4 GHz (802.11b/g/n) |
| Enabled SSID# | 1 |
| SSID1 | TRENDnet653 |
| Auto Channel | <input type="radio"/> Enable <input checked="" type="radio"/> Disable |
| Channel | 11 |

Apply Cancel

Copyright © 2009 TRENDnet. All Rights Reserved.

Radio: To enable/disable wireless signal.

Mode: Select AP or WDS mode. WDS mode allows the access point to interlink with other AP devices through WDS connection.

| | |
|-----------------|--------------|
| MAC Address 1 : | 000000000000 |
| MAC Address 2 : | 000000000000 |
| MAC Address 3 : | 000000000000 |
| MAC Address 4 : | 000000000000 |
| Set Security : | Set Security |

Band: Configure the device into different wireless modes.

- 2.4 GHz (B)
- 2.4 GHz (N)
- 2.4 GHz (B+G)
- 2.4 GHz (G)
- 2.4 GHz (B+G+N)

Enabled SSID#: The device allows you to add up to 4 unique SSID

ESSID#: Description of each configured SSID

MAC Address 1~4: When WDS is selected enter the MAC address of the access points you would like to establish a WDS connection with.

Advanced

This screen allows users to configure advanced settings of the access point.

The screenshot shows the 'Advanced' configuration page for a Trendnet 300Mbps Wireless N PoE Access Point (TEW-653AP). The page is divided into a left sidebar with navigation tabs (System, Wizard, Wireless, Tools) and a main content area. The 'Advanced' section is active, displaying a table of wireless settings. A warning message at the top of the main area states: 'These settings are only for more technically advanced users who have a sufficient knowledge about wireless LAN. These settings should not be changed unless you know what effect the changes will have on your Broadband router.' The settings table includes: Fragment Threshold (2346), RTS Threshold (2347), Beacon Interval (100), DTIM Period (1), Data rate (Auto), N Data rate (Auto), Channel Bandwidth (Auto 20/40 MHz), Preamble Type (Short Preamble), CTS Protection (Auto), and Tx Power (100%). 'Apply' and 'Cancel' buttons are located at the bottom right of the settings table.

| Setting | Value | Range |
|--------------------|---|--------------|
| Fragment Threshold | 2346 | (256-2346) |
| RTS Threshold | 2347 | (1-2347) |
| Beacon Interval | 100 | (20-1024 ms) |
| DTIM Period | 1 | (1-255) |
| Data rate | Auto | |
| N Data rate | Auto | |
| Channel Bandwidth | <input checked="" type="radio"/> Auto 20/40 MHz <input type="radio"/> 20 MHz | |
| Preamble Type | <input type="radio"/> Long Preamble <input checked="" type="radio"/> Short Preamble | |
| CTS Protection | <input checked="" type="radio"/> Auto <input type="radio"/> Always <input type="radio"/> None | |
| Tx Power | 100 % | |

Fragment Threshold: Packets over the specified size will be fragmented in order to improve performance on noisy networks. Specify a value between 256 and 2346. The default value is 2346.

RTS Threshold: Packets over the specified size will use the RTS/CTS mechanism to maintain performance in noisy networks and preventing hidden nodes from degrading the performance. Specify a value between 0 and 2347. The default value is 2347.

Beacon Interval: Beacons are packets sent by a wireless Access Point to synchronize wireless devices. Specify a Beacon Interval value between 24 and 1024. The default value is set to 100 milliseconds.

DTIM Period: A DTIM is a countdown informing clients of the next window for listening to broadcast and multicast messages. When the wireless Access Point has buffered broadcast or multicast messages for associated clients, it sends the next DTIM with a DTIM Period value. Wireless clients detect the beacons and awaken to receive the broadcast and multicast messages. The default value is 1. Valid settings are between 1 and 10.

Data rate: You may select a data rate from the drop-down list, however, it is recommended to select auto. This is also known as auto-fallback.

N Data Rate: You may select N data rate from the drop-down list, however, it is recommended to select auto.

Channel Bandwidth: Select channel bandwidth.

Preamble Type: Select a short or long preamble. For optimum performance it is recommended to also configure the client device as the same preamble type.

CTS Protection: CTS (Clear to Send) can be always enabled, auto, or disabled. By enabled CTS, the Access Point and clients will wait for a 'clear' signal before transmitting. It is recommended to select auto.

Security

This screen allows users to configure the wireless security settings of the access point.

Encryption: WEP

The screenshot shows the configuration page for the TRENDnet 300Mbps Wireless N PoE Access Point (TEW-653AP). The page is titled "Security" and includes a sidebar with navigation options: System, Wizard, Wireless (Basic, Advanced, Security, Filter, WPS, Client List, VLAN, WMM), and Tools. The main content area contains the following settings:

| | |
|-----------------------|--|
| SSID Selection | TRENDnet653 |
| Broadcast SSID | Enable |
| WMM | Enable |
| Encryption | WEP |
| Authentication type | <input checked="" type="radio"/> Open System <input type="radio"/> Shared Key <input type="radio"/> Auto |
| Key Length | 64-bit |
| Key type | ASCII (5 characters) |
| Default key | Key 1 |
| Encryption Key 1 | XXXXXXXX |
| Encryption Key 2 | XXXXXXXX |
| Encryption Key 3 | XXXXXXXX |
| Encryption Key 4 | XXXXXXXX |
| 802.1x Authentication | <input type="checkbox"/> Enable 802.1x Authentication |

Copyright © 2009 TRENDnet. All Rights Reserved.

ESSID Selection: As this device supports multiple SSIDs, it is possible to configure a different security mode for each SSID (profile). Select an SSID from the drop-down list.

Broadcast SSID: Select Enable or Disable from the drop-down list. This is the SSID broadcast feature. When this option is set to Enable, your wireless network name is broadcast to anyone within the range of your signal. If you're not using encryption then they could connect to your network. When this is disabled, you must enter the Wireless Network Name (SSID) on the client manually to connect to the network.

WMM: Choose to Enable or Disable WMM. This is the Quality of Service (QoS) feature for prioritizing voice and video applications. This option can be further configured in WMM under the Wireless drop-down menu.

Encryption: Select WEP from the drop-down list.

Authentication Type: Select Open System, Shared Key, or auto. Authentication method from the drop-down list. An open system allows any client to authenticate as long as it conforms to any MAC address filter policies that may have been set. All authentication packets are transmitted without encryption. Shared Key sends an unencrypted challenge text string to any device attempting to communicate with the AP. The device requesting authentication encrypts the challenge text and sends it back to the access point. If the challenge text is encrypted correctly, the access point allows the requesting device to authenticate. It is recommended to select Auto if you are not sure which authentication type is used.

Key Length: Select a 64-bit or 128-bit WEP key length from the drop-down list.

Key Type: Select a key type from the drop-down list. 128-bit encryption requires a longer key than 64-bit encryption. Keys are defined by entering in a string in HEX (hexadecimal - using characters 0-9, A-F) or ASCII (American Standard Code for Information Interchange - alphanumeric characters) format. ASCII format is provided so you can enter a string that is easier to remember.

Default Key: You may choose one of your 4 different WEP keys from below.

Encryption Key 1-4: You may enter four different WEP keys.

Enable 802.1x Authentication: Place a check in this box if you would like to use RADIUS authentication. This option works with a RADIUS Server to authenticate wireless clients. Wireless clients should have established the necessary credentials before attempting to authenticate to the Server through this Gateway. Furthermore, it may be necessary to configure the RADIUS Server to allow this Gateway to authenticate users. You will then be required to specify the RADIUS Server's IP address, port, and password.

Encryption: WPA pre-shared key

The screenshot shows the configuration interface for a TRENDNET 300Mbps Wireless N PoE Access Point (TEW-653AP). The 'Security' section is active, and the following settings are visible:

| Field | Value |
|---------------------|---|
| SSID Selection | TRENDnet653 |
| Broadcast SSID | Enable |
| WMM | Enable |
| Encryption | WPA pre-shared key |
| WPA type | <input checked="" type="radio"/> WPA(TKIP) <input type="radio"/> WPA2(AES) <input type="radio"/> WPA2 Mixed |
| Pre-shared Key type | Passphrase |
| Pre-shared Key | |

Buttons for 'Apply' and 'Cancel' are located at the bottom right of the configuration area. The footer of the page reads 'Copyright © 2009 TRENDnet. All Rights Reserved.'

ESSID Selection: As this device supports multiple SSIDs, it is possible to configure a different security mode for each SSID (profile). Select an SSID from the drop-down list.

Broadcast SSID: Select Enable or Disable from the drop-down list. This is the SSID broadcast feature. When this option is set to Enable, your wireless network name is broadcast to anyone within the range of your signal. If you're not using encryption then they could connect to your network. When this is disabled, you must enter the Wireless Network Name (SSID) on the client manually to connect to the network.

WMM: Choose to Enable or Disable WMM. This is the Quality of Service (QoS) feature for prioritizing voice and video applications. This option can be further configured in WMM under the Wireless drop-down menu.

Encryption: Select WPA pre-shared key from the drop-down list.

WPA Type: Select TKIP, AES, or WPA2 Mixed. The encryption algorithm used to secure the data communication. TKIP (Temporal Key Integrity Protocol) provides per-packet key

generation and is based on WEP. AES (Advanced Encryption Standard) is a very secure block based encryption. Note that, if the bridge uses the AES option, the bridge can associate with the access point only if the access point is also set to use only AES.

Pre-shared Key Type: The Key Type can be passphrase or Hex format.

Pre-Shared Key: The key is entered as a pass-phrase of up to 63 alphanumeric characters in ASCII (American Standard Code for Information Interchange) format at both ends of the wireless connection. It cannot be shorter than eight characters, although for proper security it needs to be of ample length and should not be a commonly known phrase. This phrase is used to generate session keys that are unique for each wireless client.

Encryption: WPA RADIUS

The screenshot shows the configuration interface for a TRENDnet 300Mbps Wireless N PoE Access Point (TEW-653AP). The 'Security' tab is selected in the left-hand menu. The main content area displays the following settings:

| | |
|--------------------------|---|
| SSID Selection | TRENDnet653 |
| Broadcast SSID | Enable |
| WMM | Enable |
| Encryption | WPA RADIUS |
| WPA type | <input checked="" type="radio"/> WPA(TKIP) <input type="radio"/> WPA2(AES) <input type="radio"/> WPA2 Mixed |
| RADIUS Server IP address | |
| RADIUS Server port | 1812 |
| RADIUS Server password | |

Buttons for 'Apply' and 'Cancel' are located at the bottom right of the configuration area. The footer of the page reads 'Copyright © 2009 TRENDnet. All Rights Reserved.'

ESSID Selection: As this device supports multiple SSIDs, it is possible to configure a different security mode for each SSID (profile). Select an SSID from the drop-down list.

Broadcast SSID: Select Enable or Disable from the drop-down list. This is the SSID broadcast feature. When this option is set to Enable, your wireless network name is broadcast to anyone within the range of your signal. If you're not using encryption then they could connect to your network. When this is disabled, you must enter the Wireless Network Name (SSID) on the client manually to connect to the network.

WMM: Choose to Enable or Disable WMM. This is the Quality of Service (QoS) feature for prioritizing voice and video applications. This option can be further configured in WMM under the Wireless drop-down menu.

Encryption: Select WPA RADIUS from the drop-down list.

WPA Type: Select TKIP, AES, or WPA2 Mixed. The encryption algorithm used to secure the data communication. TKIP (Temporal Key Integrity Protocol) provides per-packet key generation and is based on WEP. AES (Advanced Encryption Standard) is a very secure block based encryption. Note that, if the bridge uses the AES option, the bridge can associate with the access point only if the access point is also set to use only AES.

RADIUS Server IP Address: Specify the IP address of the RADIUS server.

RADIUS Server Port: Specify the port number of the RADIUS server, the default port is 1812.

RADIUS Server Password: Specify the pass-phrase that is matched on the RADIUS Server.

Filter

This page enabled you to define access to the access point. Computers in the MAC address table are only authorized to associate with the access point.

TRENDNET 300Mbps Wireless N PoE Access Point TEW-653AP

System
Wizard
Wireless
• Basic
• Advanced
• Security
• Filter
• WPS
• Client List
• VLAN
• WMM
Tools

Filter

For security reason, the Access Point features MAC Address Filtering which only allows authorized MAC Addresses to associate with the Access Point

Enable Wireless Access Control

| Description | MAC address |
|----------------------|----------------------|
| <input type="text"/> | <input type="text"/> |

Add Reset

MAC Address Filtering Table

| NO. | Description | MAC address | Select |
|-----------------|-------------|-------------|--------|
| Delete Selected | | | |
| Delete All | | | |
| Reset | | | |

Apply Cancel

Copyright © 2009 TRENDnet. All Rights Reserved.

Enable Wireless Access Control: Check box to enable feature

Description: Enter the name of the device

MAC address: Enter the device's MAC address

ADD: Click to add MAC address into table

Reset: Click to reset entry

Delete Selected: Allows you to delete selected entry

Delete All: Deletes all entries in the MAC address table


Reset: Reset all entries

Apply: Click to apply changes made

Cancel: Click to cancel any new setting changes made.

WPS

This screen allows users to configure the Wi-Fi Protected Setup function under Access Point mode.

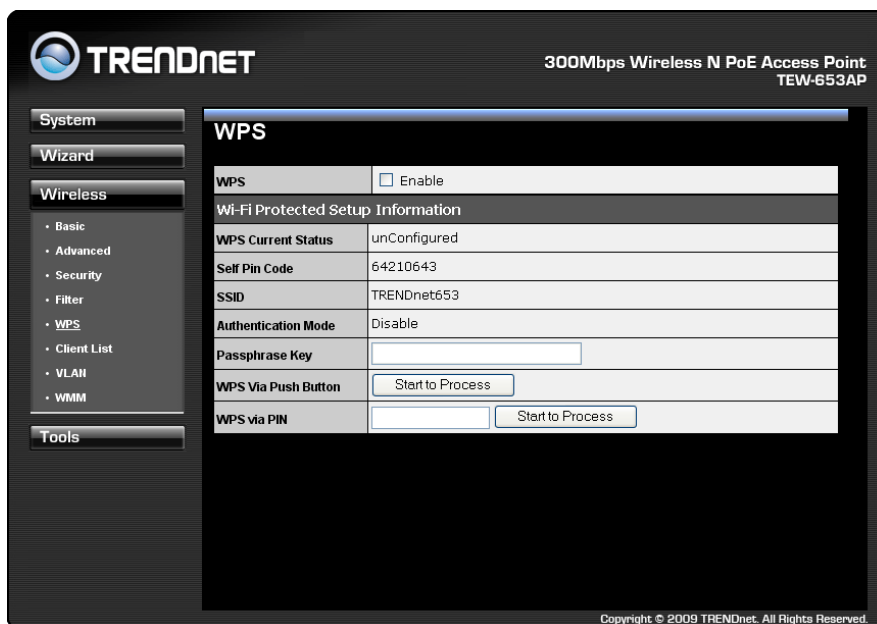

WPS: Place a check in this box to enable this feature.

WPS Current Status: Displays the current status of the WPS configuration.

Self Pin Code: Displays the current PIN.

SSID: Displays the current SSID.

Authentication Mode: Displays the current authentication mode.

Passphrase Key: Displays the current passphrase.

Interface: Displays the current interface.


WPS Via Push Button: Click on the **Start to Process** button if you would like to enable WPS through the Push Button instead of the PIN. After pressing this button you will be required to press the WPS on the client device within two minutes. Click on the **OK** button in the dialog box.

WPS via PIN: Specify a PIN, which unique number that can be used to add the router to an existing network or to create a new network. Then click on the **Start to Process** button.

Apply: Click on the button to save the changes.


Client List

This screen allows users to view a list of connected clients.

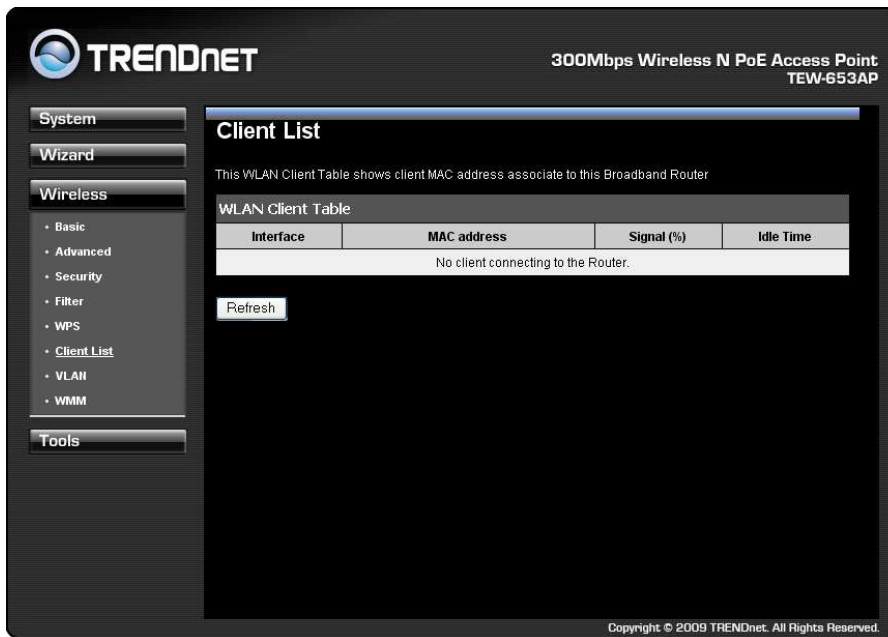

VLAN

This feature is only available under AP mode and allows users to configure the VLAN settings of the access point.

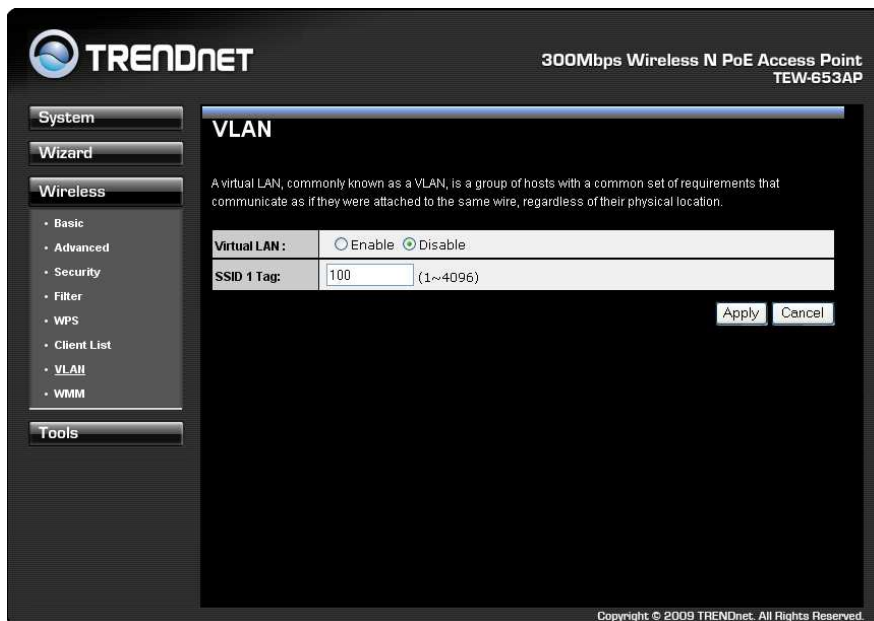

Virtual LAN: Choose to Enable or Disable the VLAN features.

SSID1 Tag: Specify the VLAN tag.

WMM

This screen allows users to configure the WMM (Wireless Multi-Media) settings of the access point under AP mode.

TRENDnet 300Mbps Wireless N PoE Access Point TEW-653AP

WMM

WMM technology maintains the priority of audio, video and voice applications in a Wi-Fi network so that other applications and traffic are less likely to slow them.

WMM Parameters of Access Point

| | Aifsn | CWMin | CWMax | Txop | ACM | AckPolicy |
|--------------|-------|-------|-------|------|--------------------------|--------------------------|
| AC_BE | 3 | 15 | 63 | 0 | <input type="checkbox"/> | <input type="checkbox"/> |
| AC_BK | 7 | 15 | 1023 | 0 | <input type="checkbox"/> | <input type="checkbox"/> |
| AC_VI | 1 | 7 | 15 | 94 | <input type="checkbox"/> | <input type="checkbox"/> |
| AC_VO | 1 | 3 | 7 | 47 | <input type="checkbox"/> | <input type="checkbox"/> |

WMM Parameters of Station

| | Aifsn | CWMin | CWMax | Txop | ACM |
|--------------|-------|-------|-------|------|--------------------------|
| AC_BE | 3 | 15 | 1023 | 0 | <input type="checkbox"/> |
| AC_BK | 7 | 15 | 1023 | 0 | <input type="checkbox"/> |
| AC_VI | 2 | 7 | 15 | 94 | <input type="checkbox"/> |
| AC_VO | 2 | 3 | 7 | 47 | <input type="checkbox"/> |

Copyright © 2009 TRENDnet. All Rights Reserved.

Wireless WDS Bridge Mode

Basic

This screen allows users to configure the access point's WDS bridge settings.

| TRENDnet 300Mbps Wireless N PoE Access Point TEW-653AP | |
|---|---|
| System | |
| Wizard | |
| Wireless | |
| Basic | |
| Advanced | |
| WMM | |
| Tools | |
| Basic | |
| This page allows you to define SSID, and Channel for the wireless connection. These parameters are used for the wireless stations to connect to the Access Point. | |
| Radio | <input checked="" type="radio"/> Enable <input type="radio"/> Disable |
| Mode | WDS |
| Band | 2.4 GHz (802.11b/g/n) |
| Enabled SSID# | 1 |
| SSID 1 | TRENDnet653 |
| Auto Channel | <input type="radio"/> Enable <input checked="" type="radio"/> Disable |
| Channel | 11 |
| MAC address 1 | 000000000000 |
| MAC address 2 | 000000000000 |
| MAC address 3 | 000000000000 |
| MAC address 4 | 000000000000 |
| Set Security | Set Security |
| Apply Cancel | |
| Copyright © 2009 TRENDnet. All Rights Reserved. | |

Radio: To enable/disable radio frequency.

Mode: WDS mode allows you to interlink with other AP devices. Setting MAC address and encryption algorithm

Band: Configure the device into different wireless modes.

2.4 GHz (B)

2.4 GHz (N)

2.4 GHz (B+G)

2.4 GHz (G)

2.4 GHz (B+G+N)

Enabled SSID#: The device allows you to add up to 4 unique SSID

ESSID#: Description of each configured SSID

Channel: You can manually configure a channel to be used.

MAC Address 1~4: To specify MAC address of other AP devices.

 MAC address will only shows when configured in WDS AP mode.

Security: Disabled

This page allows you setup the WDS bridge security. The value depends on your WDS Security settings.

| | | | |
|--------------|---------|-------|-------|
| Encryption : | Disable | Apply | Reset |
|--------------|---------|-------|-------|

Security: WEP

The screenshot shows a web interface titled "Set Security" with a subtitle "This page allows you setup the WDS security." The form contains the following fields:

| | |
|--------------------|----------------------|
| Encryption | WEP |
| Key Length | 64-bit |
| Key Format | ASCII (5 characters) |
| Default Tx Key | Key 1 |
| Encryption Key 1 : | <input type="text"/> |
| Encryption Key 2 : | <input type="text"/> |
| Encryption Key 3 : | <input type="text"/> |
| Encryption Key 4 : | <input type="text"/> |

At the bottom right of the form are two buttons: "Apply" and "Reset".

Key Length: Select a 64-bit or 128-bit WEP key length from the drop-down list.

Key Format: Select a key type from the drop-down list. 128-bit encryption requires a longer key than 64-bit encryption. Keys are defined by entering in a string in HEX (hexadecimal - using characters 0-9, A-F) or ASCII (American Standard Code for Information Interchange - alphanumeric characters) format. ASCII format is provided so you can enter a string that is easier to remember.

Default Tx Key: You may choose one of your 4 different WEP keys from below.

Encryption Key 1-4: You may enter four different WEP keys.

Security: WPA pre-shared key

The screenshot shows a web interface titled "Set Security" with a subtitle "This page allows you setup the WDS security." The form contains the following fields:

| | |
|-----------------------|--|
| Encryption | WPA pre-shared key |
| WPA type | <input checked="" type="radio"/> WPA(TKIP) <input type="radio"/> WPA2(AES) |
| Pre-shared Key Format | Passphrase |
| Pre-shared Key | <input type="text"/> |

At the bottom right of the form are two buttons: "Apply" and "Reset".

WPA Type: Select TKIP, AES, or WPA2 Mixed. The encryption algorithm used to secure the data communication. TKIP (Temporal Key Integrity Protocol) provides per-packet key generation and is based on WEP. AES (Advanced Encryption Standard) is a very secure block based encryption. Note that, if the bridge uses the AES option, the bridge can associate with the access point only if the access point is also set to use only AES.

Pre-shared Key Type: The Key Type can be passphrase or Hex format.

Pre-Shared Key: The key is entered as a pass-phrase of up to 63 alphanumeric characters in ASCII (American Standard Code for Information Interchange) format at both ends of the wireless connection. It cannot be shorter than eight characters, although for proper security

it needs to be of ample length and should not be a commonly known phrase. This phrase is used to generate session keys that are unique for each wireless client.

Advanced

This screen allows users to configure the advanced wireless settings of the access point in WDS mode.

The screenshot shows the configuration interface for a TRENDnet 300Mbps Wireless N PoE Access Point (TEW-653AP). The 'Advanced' settings page is displayed, featuring a sidebar with navigation options: System, Wizard, Wireless (with sub-options: Basic, Advanced, WMM), and Tools. The main content area contains the following settings:

| Setting | Value | Range |
|--------------------|---|--------------|
| Fragment Threshold | 2346 | (256-2346) |
| RTS Threshold | 2347 | (1-2347) |
| Beacon Interval | 100 | (20-1024 ms) |
| DTIM Period | 1 | (1-255) |
| Data rate | Auto | |
| N Data rate | Auto | |
| Channel Bandwidth | <input checked="" type="radio"/> Auto 20/40 MHz <input type="radio"/> 20 MHz | |
| Preamble Type | <input type="radio"/> Long Preamble <input checked="" type="radio"/> Short Preamble | |
| CTS Protection | <input checked="" type="radio"/> Auto <input type="radio"/> Always <input type="radio"/> None | |
| Tx Power | 100 % | |

Buttons for 'Apply' and 'Cancel' are located at the bottom right of the settings area. A copyright notice 'Copyright © 2009 TRENDnet. All Rights Reserved.' is visible at the bottom of the page.

Fragment Threshold: Packets over the specified size will be fragmented in order to improve performance on noisy networks. Specify a value between 256 and 2346. The default value is 2346.

RTS Threshold: Packets over the specified size will use the RTS/CTS mechanism to maintain performance in noisy networks and preventing hidden nodes from degrading the performance. Specify a value between 0 and 2347. The default value is 2347.

Beacon Interval: Beacons are packets sent by a wireless Access Point to synchronize wireless devices. Specify a Beacon Interval value between 25 and 1000. The default value is set to 100 milliseconds.

DTIM Period: A DTIM is a countdown informing clients of the next window for listening to broadcast and multicast messages. When the wireless Access Point has buffered broadcast or multicast messages for associated clients, it sends the next DTIM with a DTIM Period value. Wireless clients detect the beacons and awaken to receive the broadcast and multicast messages. The default value is 1. Valid settings are between 1 and 10.

Data rate: You may select a data rate from the drop-down list, however, it is recommended to select auto. This is also known as auto-fallback.

N Data Rate: You may select N data rate from the drop-down list, however, it is recommended to select auto.

Channel Bandwidth: Select channel bandwidth.

Preamble Type: Select a short or long preamble. For optimum performance it is recommended to also configure the client device as the same preamble type.

CTS Protection: CTS (Clear to Send) can be always enabled, auto, or disabled. By enabled CTS, the Access Point and clients will wait for a 'clear' signal before transmitting. It is recommended to select auto.

WMM

This screen allows users to configure the WMM (Wi-Fi Multi-Media) settings of the access point in WDS mode.

The screenshot shows the WMM configuration interface for a Trendnet 300Mbps Wireless N PoE Access Point (TEW-653AP). The interface includes a sidebar with navigation options: System, Wizard, Wireless (Basic, Advanced, WMM), and Tools. The main content area is titled 'WMM' and contains a brief description of WMM technology. Below this, there are two tables for configuring WMM parameters.

WMM Parameters of Access Point

| | Aifsn | CWMin | CWMax | Txop | ACM | AckPolicy |
|-------|-------|-------|-------|------|--------------------------|--------------------------|
| AC_BE | 3 | 15 | 63 | 0 | <input type="checkbox"/> | <input type="checkbox"/> |
| AC_BK | 7 | 15 | 1023 | 0 | <input type="checkbox"/> | <input type="checkbox"/> |
| AC_VI | 1 | 7 | 15 | 94 | <input type="checkbox"/> | <input type="checkbox"/> |
| AC_VO | 1 | 3 | 7 | 47 | <input type="checkbox"/> | <input type="checkbox"/> |

WMM Parameters of Station

| | Aifsn | CWMin | CWMax | Txop | ACM |
|-------|-------|-------|-------|------|--------------------------|
| AC_BE | 3 | 15 | 1023 | 0 | <input type="checkbox"/> |
| AC_BK | 7 | 15 | 1023 | 0 | <input type="checkbox"/> |
| AC_VI | 2 | 7 | 15 | 94 | <input type="checkbox"/> |
| AC_VO | 2 | 3 | 7 | 47 | <input type="checkbox"/> |

Buttons: Reset to Default, Apply, Cancel

Copyright © 2009 TRENDnet. All Rights Reserved.

Repeater Mode

Wireless Basic

This screen allows users to configure the wireless settings of the access point in Repeater mode.

The screenshot shows the configuration interface for a TRENDnet 300Mbps Wireless N PoE Access Point (TEW-653AP). The interface is divided into a left sidebar with navigation options (System, Wizard, Wireless, Tools) and a main content area titled 'Basic'. The 'Basic' section contains a form for configuring wireless settings. The 'Radio' section has 'Enable' selected. The 'Mode' is set to 'Repeater'. The 'Band' is set to '2.4 GHz (802.11b/g/n)'. The 'Enabled SSID#' is set to '1'. The 'SSID1' is 'TRENDnet653'. There is a 'Site Survey' button. Below this is a 'Wireless Information' section with fields for 'SSID' (TRENDnet653), 'Status' (Disconnected), and 'Channel'. 'Apply' and 'Cancel' buttons are at the bottom right. A copyright notice 'Copyright © 2009 TRENDnet. All Rights Reserved.' is at the very bottom.

| Basic | |
|--|---|
| This page allows you to define SSID, and Channel for the wireless connection. These parameters are used for the wireless stations to connect to the Access Point | |
| Radio | <input checked="" type="radio"/> Enable <input type="radio"/> Disable |
| Mode | Repeater |
| Band | 2.4 GHz (802.11b/g/n) |
| Enabled SSID# | 1 |
| SSID 1 | TRENDnet653 |
| Site Survey | <input type="button" value="Site Survey"/> |
| Wireless Information | |
| SSID | TRENDnet653 |
| Status | Disconnected |
| Channel | |

Radio: To enable/disable radio frequency.

Mode: Universal Repeater

Band: Configure the device into different wireless modes.

2.4 GHz (B)

2.4 GHz (N)

2.4 GHz (B+G)

2.4 GHz (G)

2.4 GHz (B+G+N)

Enabled SSID#: The device allows you to add up to 4 unique SSID

ESSID#: Description of each configured SSID

Channel: You can manually configure a channel to be used.

Site Survey: List out all connected devices.

Advanced

This screen allows users to configure the advanced wireless settings of the access point in Repeater mode.

| Advanced | | |
|--|---|--------------|
| These settings are only for more technically advanced users who have a sufficient knowledge about wireless LAN. These settings should not be changed unless you know what effect the changes will have on your Broadband router. | | |
| Fragment Threshold | <input type="text" value="2346"/> | (256-2346) |
| RTS Threshold | <input type="text" value="2347"/> | (1-2347) |
| Beacon Interval | <input type="text" value="100"/> | (20-1024 ms) |
| DTIM Period | <input type="text" value="1"/> | (1-255) |
| Data rate | <input type="text" value="Auto"/> | |
| N Data rate | <input type="text" value="Auto"/> | |
| Channel Bandwidth | <input checked="" type="radio"/> Auto 20/40 MHz <input type="radio"/> 20 MHz | |
| Preamble Type | <input type="radio"/> Long Preamble <input checked="" type="radio"/> Short Preamble | |
| CTS Protection | <input checked="" type="radio"/> Auto <input type="radio"/> Always <input type="radio"/> None | |
| Tx Power | <input type="text" value="100 %"/> | |

Apply Cancel

Copyright © 2009 TRENDnet. All Rights Reserved.

Fragment Threshold: Packets over the specified size will be fragmented in order to improve performance on noisy networks. Specify a value between 256 and 2346. The default value is 2346.

RTS Threshold: Packets over the specified size will use the RTS/CTS mechanism to maintain performance in noisy networks and preventing hidden nodes from degrading the performance. Specify a value between 0 and 2347. The default value is 2347.

Beacon Interval: Beacons are packets sent by a wireless Access Point to synchronize wireless devices. Specify a Beacon Interval value between 25 and 1000. The default value is set to 100 milliseconds.

DTIM Period: A DTIM is a countdown informing clients of the next window for listening to broadcast and multicast messages. When the wireless Access Point has buffered broadcast or multicast messages for associated clients, it sends the next DTIM with a DTIM Period value. Wireless clients detect the beacons and awaken to receive the broadcast and multicast messages. The default value is 1. Valid settings are between 1 and 10.

Data rate: You may select a data rate from the drop-down list, however, it is recommended to select auto. This is also known as auto-fallback.


Preamble Type: Select a short or long preamble. For optimum performance it is recommended to also configure the client device as the same preamble type.

CTS Protection: CTS (Clear to Send) can be always enabled, auto, or disabled. By enabled CTS, the Access Point and clients will wait for a 'clear' signal before transmitting. It is recommended to select auto.

Repeater Mode Security

This screen allows users to configure the wireless security settings of the access point in Repeater mode.

WEP

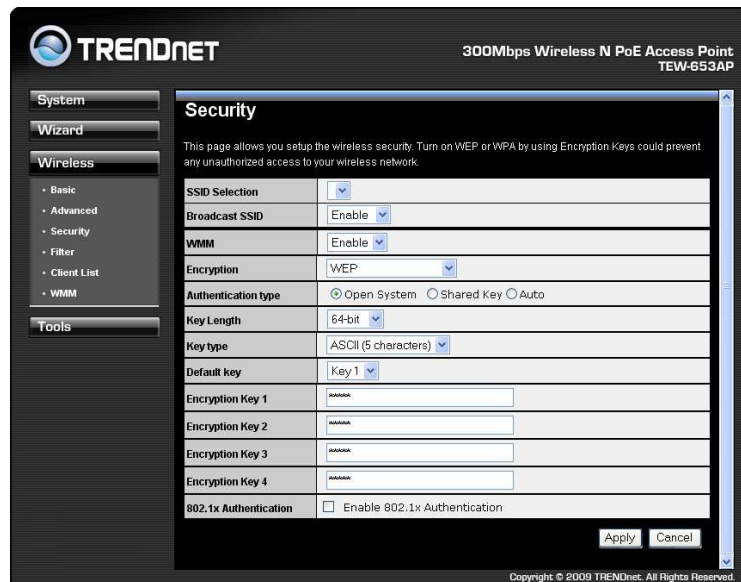

ESSID Selection: As this device supports multiple SSIDs, it is possible to configure a different security mode for each SSID (profile). Select an SSID from the drop-down list.

Broadcast SSID: Select Enable or Disable from the drop-down list. This is the SSID broadcast feature. When this option is set to Enable, your wireless network name is broadcast to anyone within the range of your signal. If you're not using encryption then they could connect to your network. When this is disabled, you must enter the Wireless Network Name (SSID) on the client manually to connect to the network.

WMM: Choose to Enable or Disable WMM. This is the Quality of Service (QoS) feature for prioritizing voice and video applications. This option can be further configured in WMM under the Wireless drop-down menu.

Encryption: Select WEP from the drop-down list.

Authentication Type: Select Open System, Shared Key, or auto. Authentication method from the drop-down list. An open system allows any client to authenticate as long as it conforms to any MAC address filter policies that may have been set. All authentication packets are transmitted without encryption. Shared Key sends an unencrypted challenge text string to any device attempting to communicate with the AP. The device requesting authentication encrypts the challenge text and sends it back to the access point. If the challenge text is encrypted correctly, the access point allows the requesting device to authenticate. It is recommended to select Auto if you are not sure which authentication type is used.

Key Length: Select a 64-bit or 128-bit WEP key length from the drop-down list.

Key Type: Select a key type from the drop-down list. 128-bit encryption requires a longer key than 64-bit encryption. Keys are defined by entering in a string in HEX (hexadecimal - using characters 0-9, A-F) or ASCII (American Standard Code for Information Interchange - alphanumeric characters) format. ASCII format is provided so you can enter a string that is easier to remember.

Default Key: You may choose one of your 4 different WEP keys from below.

Encryption Key 1-4: You may enter four different WEP keys.

Enable 802.1x Authentication: Place a check in this box if you would like to use RADIUS authentication. This option works with a RADIUS Server to authenticate wireless clients. Wireless clients should have established the necessary credentials before attempting to authenticate to the Server through this Gateway. Furthermore, it may be necessary to configure the RADIUS Server to allow this Gateway to authenticate users. You will then be required to specify the RADIUS Server's IP address, port, and password.

WPA pre-shared key

The screenshot displays the 'Security' configuration page for a Trendnet 300Mbps Wireless N PoE Access Point (TEW-653AP). The page is titled 'Security' and includes a sub-header '300Mbps Wireless N PoE Access Point TEW-653AP'. The main content area contains several configuration fields:

- SSID Selection:** A dropdown menu.
- Broadcast SSID:** A dropdown menu set to 'Enable'.
- WMM:** A dropdown menu set to 'Enable'.
- Encryption:** A dropdown menu set to 'WPA pre-shared key'.
- WPA type:** Radio buttons for 'WPA(TKIP)' (selected), 'WPA2(AES)', and 'WPA2 Mixed'.
- Pre-shared Key type:** A dropdown menu set to 'Passphrase'.
- Pre-shared Key:** A text input field.

At the bottom right of the configuration area are 'Apply' and 'Cancel' buttons. The footer of the page reads 'Copyright © 2009 TRENDnet. All Rights Reserved.' The left sidebar contains navigation tabs for 'System', 'Wizard', 'Wireless', and 'Tools', with 'Wireless' being the active section. Under 'Wireless', there are sub-items: 'Basic', 'Advanced', 'Security', 'Filter', 'Client List', and 'WMM'.

ESSID Selection: As this device supports multiple SSIDs, it is possible to configure a different security mode for each SSID (profile). Select an SSID from the drop-down list.

Broadcast SSID: Select Enable or Disable from the drop-down list. This is the SSID broadcast feature. When this option is set to Enable, your wireless network name is broadcast to anyone within the range of your signal. If you're not using encryption then they could connect to your network. When this is disabled, you must enter the Wireless Network Name (SSID) on the client manually to connect to the network.

WMM: Choose to Enable or Disable WMM. This is the Quality of Service (QoS) feature for prioritizing voice and video applications. This option can be further configured in WMM under the Wireless drop-down menu.

Encryption: Select WPA pre-shared key from the drop-down list.

WPA Type: Select TKIP, AES, or WPA2 Mixed. The encryption algorithm used to secure the data communication. TKIP (Temporal Key Integrity Protocol) provides per-packet key generation and is based on WEP. AES (Advanced Encryption Standard) is a very secure block based encryption. Note that, if the bridge uses the AES option, the bridge can associate with the access point only if the access point is also set to use only AES.

Pre-shared Key Type: The Key Type can be passphrase or Hex format.

Pre-Shared Key: The key is entered as a pass-phrase of up to 63 alphanumeric characters in ASCII (American Standard Code for Information Interchange) format at both ends of the wireless connection. It cannot be shorter than eight characters, although for proper security it needs to be of ample length and should not be a commonly known phrase. This phrase is used to generate session keys that are unique for each wireless client.

Filter

This page enabled you to define access to the access point. Computers in the MAC address table are only authorized to associate with the access point.


The screenshot shows the TRENDNET web interface for a 300Mbps Wireless N PoE Access Point (TEW-653AP). The interface is in the 'Filter' configuration page. On the left, there is a navigation menu with categories: System, Wizard, Wireless (with sub-items: Basic, Advanced, Security, Filter, Client List, WMM), and Tools. The main content area is titled 'Filter' and contains the following elements:

- A note: "For security reason, the Access Point features MAC Address Filtering which only allows authorized MAC Addresses to associate with the Access Point."
- A checkbox labeled "Enable Wireless Access Control" which is currently checked.
- A table with two columns: "Description" and "MAC address". Below the table are "Add" and "Reset" buttons.
- A section titled "MAC Address Filtering Table" containing a table with four columns: "NO.", "Description", "MAC address", and "Select". Below this table are "Delete Selected", "Delete All", and "Reset" buttons.
- "Apply" and "Cancel" buttons at the bottom right.

Copyright © 2009 TRENDnet. All Rights Reserved.

WPS

This screen allows users to configure the Wi-Fi Protected Setup function in Repeater mode

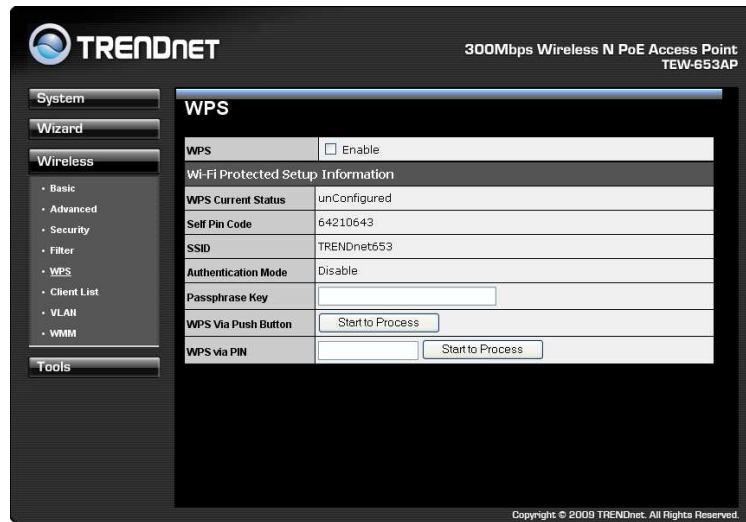

WPS: Place a check in this box to enable this feature.

WPS Current Status: Displays the current status of the WPS configuration.

Self Pin Code: Displays the current PIN.

SSID: Displays the current SSID.

Authentication Mode: Displays the current authentication mode.

Passphrase Key: Displays the current passphrase.

Interface: Displays the current interface.


WPS Via Push Button: Click on the **Start to Process** button if you would like to enable WPS through the Push Button instead of the PIN. After pressing this button you will be required to press the WPS on the client device within two minutes. Click on the **OK** button in the dialog box.

WPS via PIN: Specify a PIN, which unique number that can be used to add the router to an existing network or to create a new network. Then click on the **Start to Process** button.

Click on the **Apply** button to save the changes.


Client List

This screen allows users to view a list of connected clients.

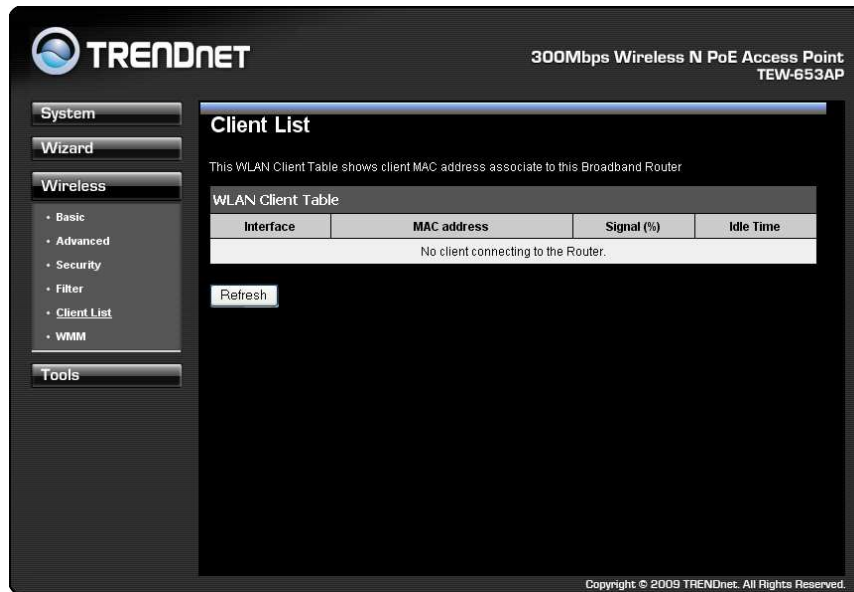

WMM


This screen allows users to configure the WMM (Wi-Fi Multi-Media) settings in Repeater mode.

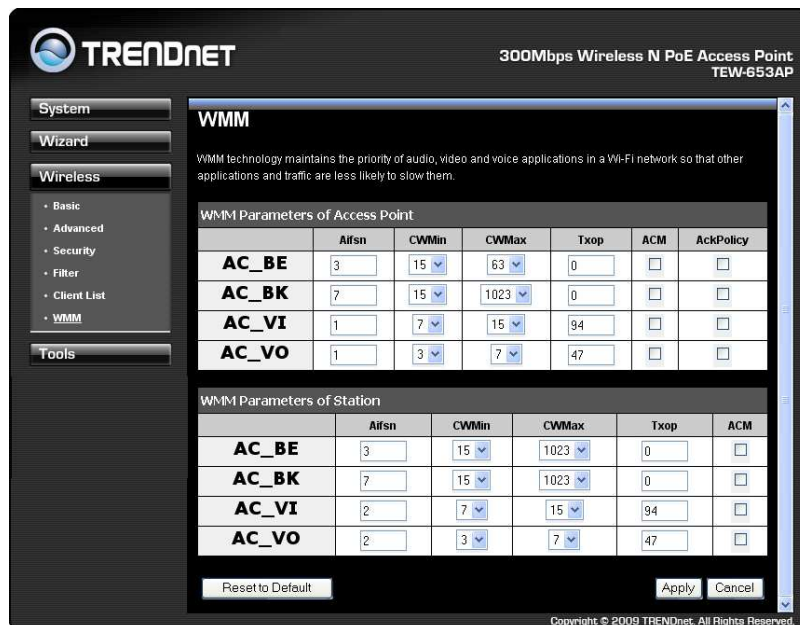

Tools

Admin

Change current login password of the device. It is recommended to change the default password for security reasons.

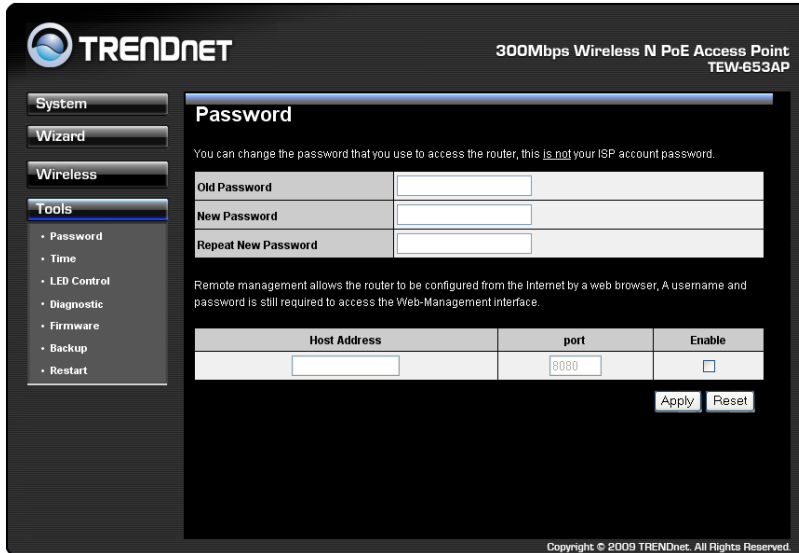


The screenshot shows the TrendNet web management interface for a 300Mbps Wireless N PoE Access Point (TEW-653AP). The left sidebar contains navigation options: System, Wizard, Wireless, and Tools. The Tools menu is expanded, showing Password, Time, LED Control, Diagnostic, Firmware, Backup, and Restart. The main content area is titled "Password" and includes a warning: "You can change the password that you use to access the router, this is not your ISP account password." Below this are three input fields for "Old Password", "New Password", and "Repeat New Password". A section for "Remote management" includes a table with columns "Host Address", "port", and "Enable". The "port" field is set to "8080" and the "Enable" checkbox is unchecked. "Apply" and "Reset" buttons are at the bottom right. Copyright © 2009 TRENDnet. All Rights Reserved.

Time Setting

This feature allows users to configure, update, and maintain the correct time on the device's internal system clock as well as configure the time zone. The date and time of the device can be configured manually or by synchronizing with a time server.



If the device loses power for any reason, it will not be able to keep its clock running, and will not display the correct time once the device has been restarted. Therefore, you must re-enter the correct date and time.

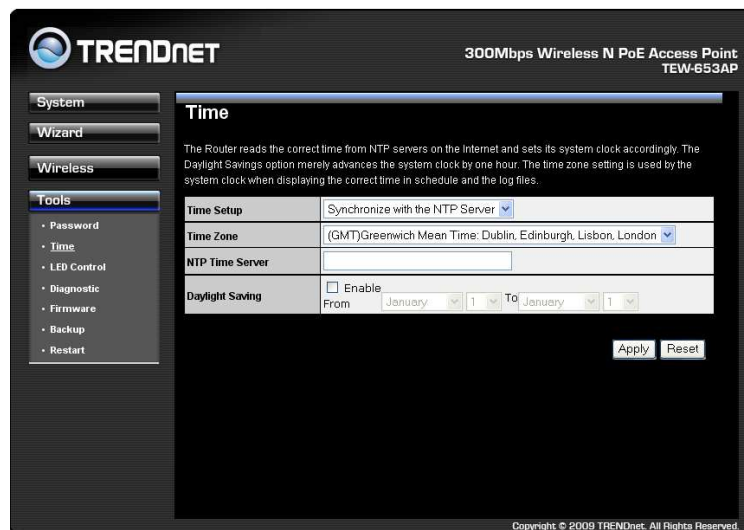

The screenshot shows the TrendNet web management interface for a 300Mbps Wireless N PoE Access Point (TEW-653AP). The left sidebar is the same as in the previous screenshot. The main content area is titled "Time" and includes a warning: "The Router reads the correct time from NTP servers on the Internet and sets its system clock accordingly. The Daylight Savings option merely advances the system clock by one hour. The time zone setting is used by the system clock when displaying the correct time in schedule and the log files." Below this are four rows of configuration options: "Time Setup" (Synchronize with the NTP Server), "Time Zone" ((GMT)Greenwich Mean Time: Dublin, Edinburgh, Lisbon, London), "NTP Time Server" (empty input field), and "Daylight Saving" (checkbox for Enable, From: January 1, To: January 1). "Apply" and "Reset" buttons are at the bottom right. Copyright © 2009 TRENDnet. All Rights Reserved.


Time Zone: Select time zone.

NTP Time Server: Specify the NTP server's IP address for time synchronization.

Daylight Saving: To enable daylight savings time.


Power Saving

This screen allows users to enable the Power Saving feature of the access point. Please note that users must enable the power saving schedule.

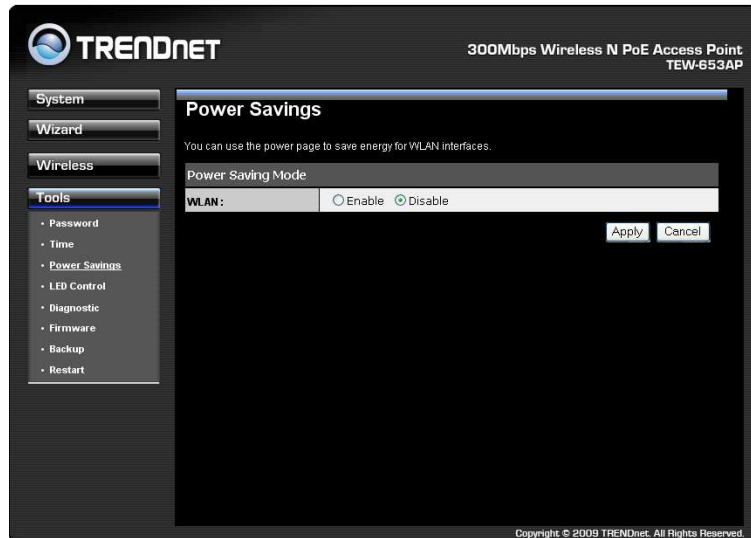


LED Control

This screen allows users to control the LED behavior of the access point.

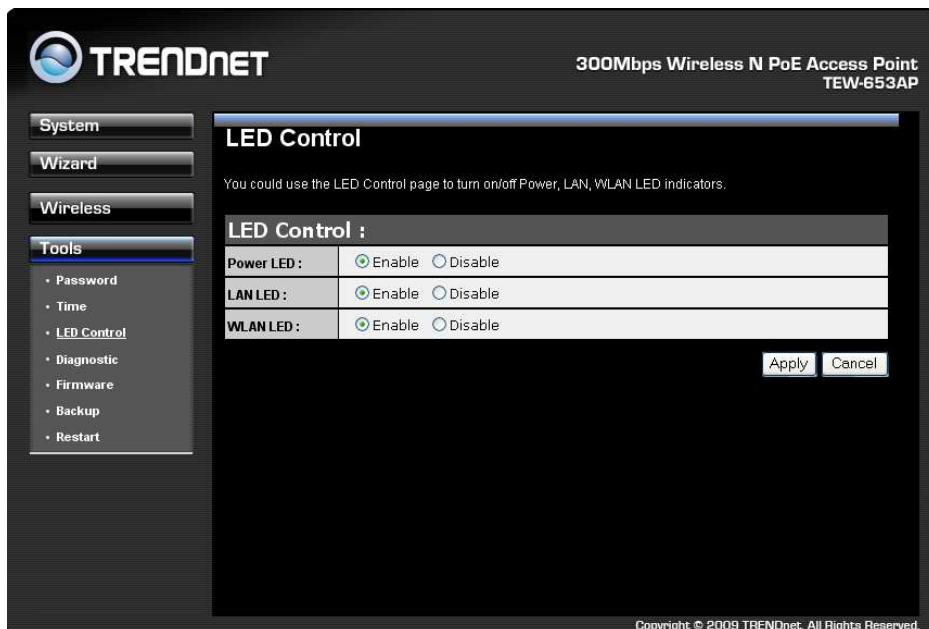


Diagnosis

Check whether a network destination is reachable with ping service.

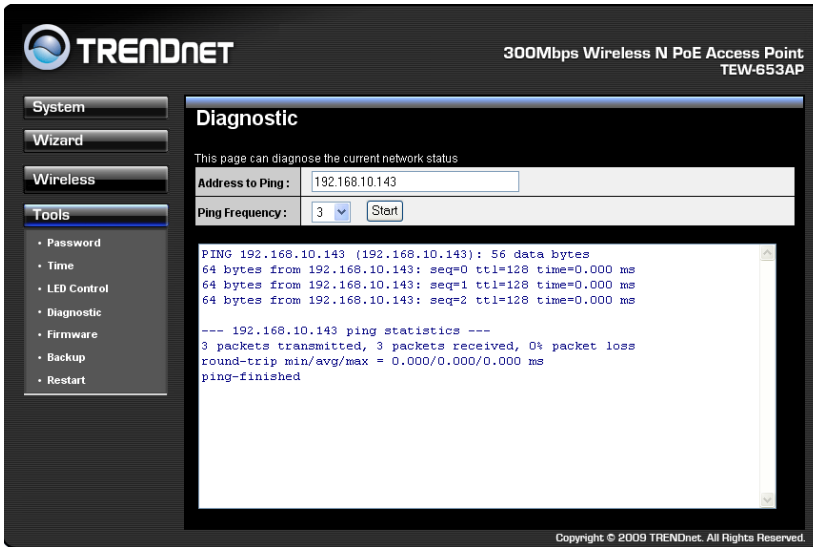


Firmware

It allows you to upgrade the firmware of the device in order to improve the functionality and performance.

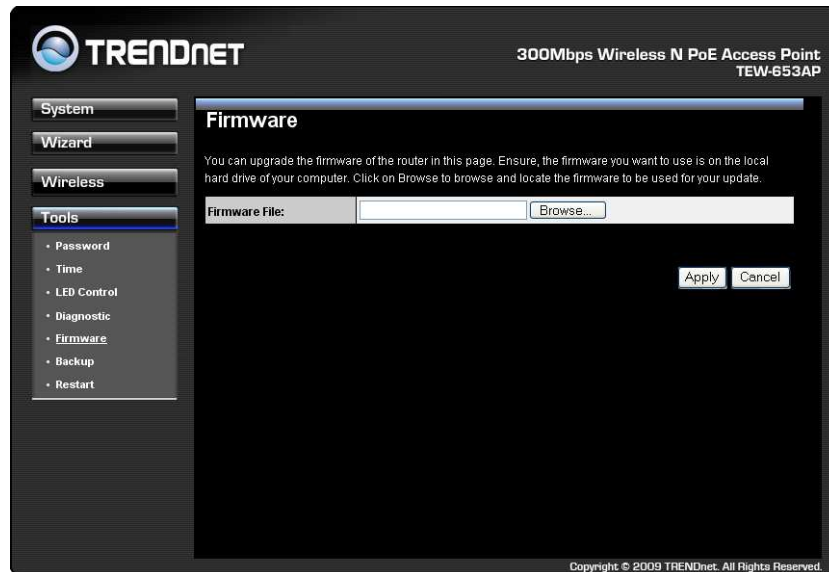


Backup

This allows you to restore to factory default setting or backup/restore your current setting.

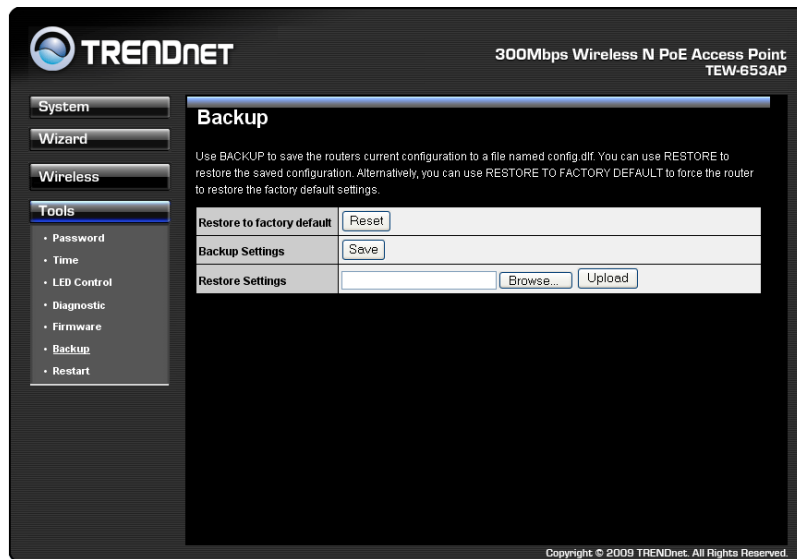

Restart

This will only reset you devices with current configuration unaffected.

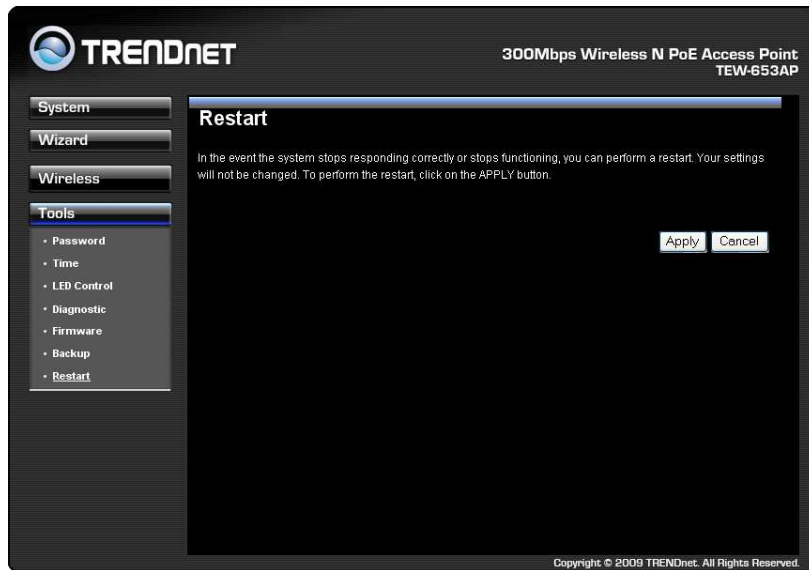

FCC Interference Statement

Federal Communication Commission Interference Statement

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

FCC Caution: Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate this equipment.

IMPORTANT NOTE:

FCC Radiation Exposure Statement:

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 20cm between the radiator & your body.

We declare that the product is limited in CH1~CH11 by specified firmware controlled in the USA.

This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.

IC Interference Statement

Industry Canada statement:

This device complies with RSS-210 of the Industry Canada Rules. Operation is subject to the following two conditions:

(1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

IMPORTANT NOTE:

Radiation Exposure Statement:

This equipment complies with IC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 20cm between the radiator & your body.

Limited Warranty

TRENDnet warrants its products against defects in material and workmanship, under normal use and service, for the following lengths of time from the date of purchase.

TEW-653AP – 3 Years Warranty

AC/DC Power Adapter, Cooling Fan, and Power Supply carry 1 year warranty.

If a product does not operate as warranted during the applicable warranty period, TRENDnet shall reserve the right, at its expense, to repair or replace the defective product or part and deliver an equivalent product or part to the customer. The repair/replacement unit's warranty continues from the original date of purchase. All products that are replaced become the property of TRENDnet. Replacement products may be new or reconditioned. TRENDnet does not issue refunds or credit. Please contact the point-of-purchase for their return policies.

TRENDnet shall not be responsible for any software, firmware, information, or memory data of customer contained in, stored on, or integrated with any products returned to TRENDnet pursuant to any warranty.

There are no user serviceable parts inside the product. Do not remove or attempt to service the product by any unauthorized service center. This warranty is voided if (i) the product has been modified or repaired by any unauthorized service center, (ii) the product was subject to accident, abuse, or improper use (iii) the product was subject to conditions more severe than those specified in the manual.

Warranty service may be obtained by contacting TRENDnet within the applicable warranty period and providing a copy of the dated proof of the purchase. Upon proper submission of required documentation a Return Material Authorization (RMA) number will be issued. An RMA number is required in order to initiate warranty service support for all TRENDnet products. Products that are sent to TRENDnet for RMA service must have the RMA number marked on the outside of return packages and sent to TRENDnet prepaid, insured and packaged appropriately for safe shipment. Customers shipping from outside of the USA and Canada are responsible for return shipping fees. Customers shipping from outside of the USA are responsible for custom charges, including but not limited to, duty, tax, and other fees.

WARRANTIES EXCLUSIVE: IF THE TRENDNET PRODUCT DOES NOT OPERATE AS WARRANTED ABOVE, THE CUSTOMER'S SOLE REMEDY SHALL BE, AT TRENDNET'S

OPTION, REPAIR OR REPLACE. THE FOREGOING WARRANTIES AND REMEDIES ARE EXCLUSIVE AND ARE IN LIEU OF ALL OTHER WARRANTIES, EXPRESSED OR IMPLIED, EITHER IN FACT OR BY OPERATION OF LAW, STATUTORY OR OTHERWISE, INCLUDING WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE. TRENDNET NEITHER ASSUMES NOR AUTHORIZES ANY OTHER PERSON TO ASSUME FOR IT ANY OTHER LIABILITY IN CONNECTION WITH THE SALE, INSTALLATION MAINTENANCE OR USE OF TRENDNET'S PRODUCTS.

TRENDNET SHALL NOT BE LIABLE UNDER THIS WARRANTY IF ITS TESTING AND EXAMINATION DISCLOSE THAT THE ALLEGED DEFECT IN THE PRODUCT DOES NOT EXIST OR WAS CAUSED BY CUSTOMER'S OR ANY THIRD PERSON'S MISUSE, NEGLIGENCE, IMPROPER INSTALLATION OR TESTING, UNAUTHORIZED ATTEMPTS TO REPAIR OR MODIFY, OR ANY OTHER CAUSE BEYOND THE RANGE OF THE INTENDED USE, OR BY ACCIDENT, FIRE, LIGHTNING, OR OTHER HAZARD.

LIMITATION OF LIABILITY: TO THE FULL EXTENT ALLOWED BY LAW TRENDNET ALSO EXCLUDES FOR ITSELF AND ITS SUPPLIERS ANY LIABILITY, WHETHER BASED IN CONTRACT OR TORT (INCLUDING NEGLIGENCE), FOR INCIDENTAL, CONSEQUENTIAL, INDIRECT, SPECIAL, OR PUNITIVE DAMAGES OF ANY KIND, OR FOR LOSS OF REVENUE OR PROFITS, LOSS OF BUSINESS, LOSS OF INFORMATION OR DATA, OR OTHER FINANCIAL LOSS ARISING OUT OF OR IN CONNECTION WITH THE SALE, INSTALLATION, MAINTENANCE, USE, PERFORMANCE, FAILURE, OR INTERRUPTION OF THE POSSIBILITY OF SUCH DAMAGES, AND LIMITS ITS LIABILITY TO REPAIR, REPLACEMENT, OR REFUND OF THE PURCHASE PRICE PAID, AT TRENDNET'S OPTION. THIS DISCLAIMER OF LIABILITY FOR DAMAGES WILL NOT BE AFFECTED IF ANY REMEDY PROVIDED HEREIN SHALL FAIL OF ITS ESSENTIAL PURPOSE.

Governing Law: This Limited Warranty shall be governed by the laws of the state of California.

Some TRENDnet products include software code written by third party developers. These codes are subject to the GNU General Public License ("GPL") or GNU Lesser General Public License ("LGPL").

Go to <http://www.trendnet.com/gpl> or <http://www.trendnet.com> Download section and look for the desired TRENDnet product to access to the GPL Code or LGPL Code. These codes are distributed WITHOUT WARRANTY and are subject to the copyrights of the developers. TRENDnet does not provide technical support for these codes. Please go to <http://www.gnu.org/licenses/gpl.txt> or <http://www.gnu.org/licenses/lgpl.txt> for specific terms of each license.