



Wireless Network Equipment (WNE)

Freedom Series: Types AP24, BR24, CP24

Models: 24-SB-07M, 24-LB-15O, 24-LB-20S

Freedom Series: Types AP58, BR58, CP58

Models: 58-LB-09M, 58-LB-15O, 58-LB-17S, 58-LB-32D

Instruction Manual

Alico Systems Inc
2461 W. 205th Street, Suite B105
Torrance, California 90501-1464
Telephone: 310-781-9500
www.alicosystems.com



Notices

FCC Notice:

Part 15 Notice:

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Class B Digital Device:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.



Scope:

This equipment is intended to be installed by professional trained installers familiar with the appropriate FCC Regulations and Local Building Codes. The equipment is designed to be installed on a pole or as a wall mount unit. While the unit is in operation the WNE antenna shall be at least 20 cms away from all persons.

Setup Instructions:

Package Contains:

1. AP24/AP58 Access Point-Bridge-CPE
2. Power over Ethernet Injector
3. 48VDC Power Supply
4. AC power cord
5. RJ45 Feed-Through Assembly
6. CD Containing the “WinBox” application software to provision the AP24/AP58 Access Point - Bridge and a PDF version of this “Startup Instructions for AP24/AP58”

What You Need to Get Started:

- You need to provide 2 straight patch segments of CAT-5e Ethernet cable with RJ45 connectors on each end. You may also need a crossover cable to configure the AP24/AP58 if you are connecting directly to a PC.
- The first CAT-5e patch cable will be used to connect the AP24/AP58 to the POE module. This cable needs to have RJ45 connectors preferably with no boots. Having a boot on the RJ45 cable on the AP24/AP58 side may prevent you to properly install the Feed-Through Assembly. See instructions on the next slide.
- **CAUTION DO NOT USE A CROSS OVER CABLE BETWEEN THE AP24/AP58 AND THE POE MODULE. YOU WILL PERMANENTLY DAMAGE THE AP24/AP58.**
- The second CAT-5e patch cable will be used to connect the POE module to your Switch/Router. If you are connecting the POE module directly to your PC for setup you need to use a crossover cable. The total length for both CAT-5e cable segments must not exceed 300 feet (~90 meters).
- The options to setup the AP24/AP58 would be to connect your PC directly to the POE module (using a crossover cable), through a switch (using a patch cable) or wireless. To connect using the wireless IF set your PC/Laptop SSID to AP24/AP58 and click on connect. Once connected you can follow the instructions shown on following pages using the WinBox.
- The AP24/AP58 is shipped with a default private address 192.168.0.239. You can change this IP address or setup multiple IP addresses for the AP24/AP58.
- In order to get started quickly the AP24/AP58 is shipped with an internal bridge setup (called “bridge1”) between the Wireless LAN Port and the Ethernet Port. This “bridge1” is setup with the default IP address 192.168.0.239. You can also setup the unit in the router mode if needed to get full routing, DHCP server, capabilities etc. The Wireless LAN is setup in the infrastructure AP mode with a SSID of “AP24” (or AP58).

WNE Wiring Diagram

The wireless network equipment is powered by a 48 VDC Power over Ethernet power supply/injector module. The following steps should be accomplished to power the WNE:

1. Install the WNE enclosure either on a pole or to a wall.
2. Follow the instructions in the next section to assemble the Ethernet weatherproof cable feed through assembly.
3. Connect one end of a patch (straight through) CAT 5e Ethernet cable to the AP24/58 through the Feed through assembly.
4. Connect the other end of the CAT5e cable to the power and data port of the Power Over Ethernet Module.
5. Locate the LAN Switch in your wiring closet and connect a patch (straight through) CAT 5e cable from the IN/DATA port of the Power over Ethernet module to a LAN Switch port.
6. Last connect the 48VDC power supply to the Power Over Ethernet injector. Using the supplied AC power cord connect the power supply to the AC. The unit operates on 110/240 VAC, 50/60 Hz.

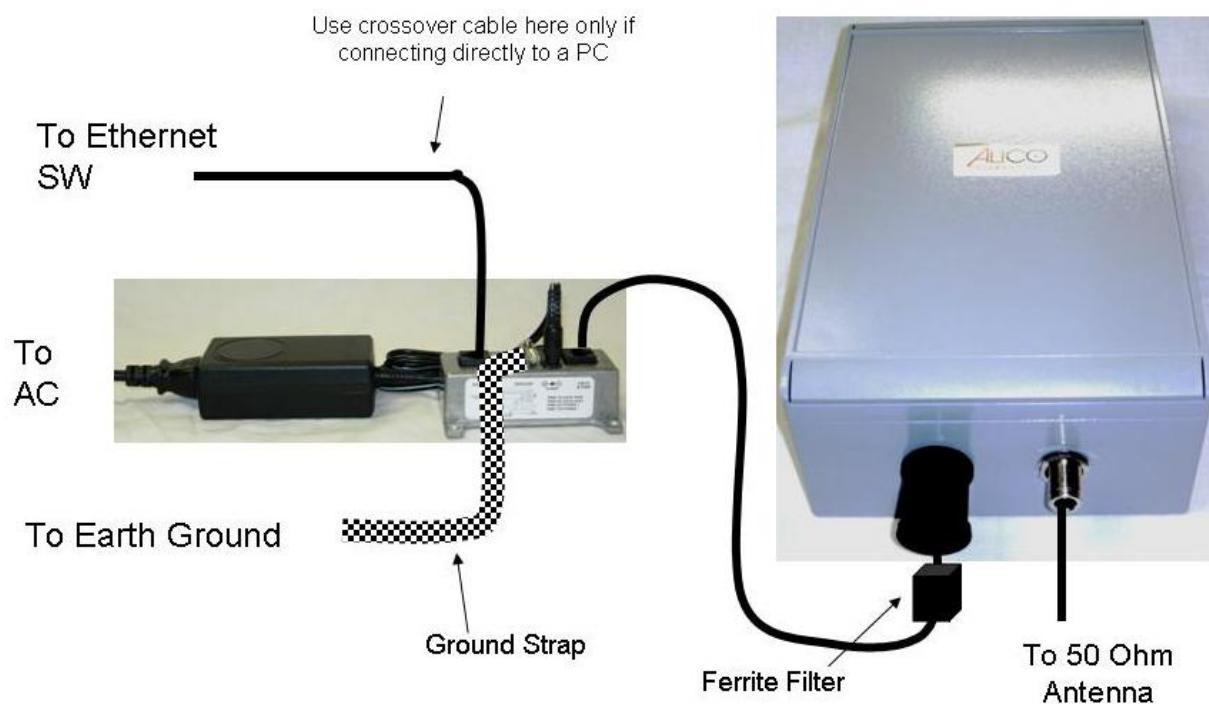


Figure 1 Connection Diagram



Antenna Installation Requirements:

The installer shall ensure that the following antenna gains are not exceeded when installing the Alico Wireless Networking Equipment with an external antenna.

Freedom Series Antenna Certifications:

The Alico Systems Freedom Series Access Points, Bridges and CPEs are certified with the following antenna configurations.

1. 2.4 GHz Frequency Band (2400 to 2483.5 MHz) Freedom Series Types AP24, BR24, CP24

Antenna Type	Model Designation	Maximum Antenna Gain (dBi)
Mobile Omni	24-SB-07M	7
Omni	24-LB-15O	15
Sector	24-LB-20S	20

2. 5.8 GHz Frequency Band (5725 to 5850 MHz) Freedom Series Types AP58, BR58, CP58

Antenna Type	Model Designation	Maximum Antenna Gain (dBi)
Mobile Omni	58-SB-09M	9
Omni	58-LB-15O	15
Sector	58-LB-17S	17
Dish	58-LB-32D	32



Cable Feed-through Assembly

Step 1: Use a Cat 5/6 cable with a open RJ45 connector without a boot.

Step 2: Trim about $\frac{1}{2}$ the length of the bayonet tab from the customer cable connector that will be external to the enclosure (not the RJ45 connected to the RJ45-ECS). This trimming is required to prevent interference when the RJ45-ECS cable feedthru is screwed into the RJ45-ECS housing

Step 3: Remove the thin enclosure nut from the feedthru assembly. This can be discarded. Loosen the compression nut completely.

Step 4: Insert the RJ45 connector thru the feedthru assembly

Step 5: Tighten the compression nut loosely

Step 6: Screw the entire feedthru assembly into the RJ45-ECS housing which is already mounted in the enclosure. There should be a rubber gasket between the two assemblies. Tighten the feedthru assembly to create a seal.

Step 7: The final step is to tighten the compression nut until the gaskets are tight around the Cat5 cable. Always push the cable toward the connector while tightening to ensure good strain relief of cable to connector.

Disassembly

Step 1: Loosen the compression nut to relieve pressure on the Cat5 cable

Step 2: Unscrew the feedthru assembly from the RJ45-ECS housing

Step 3: Using a small screwdriver depress the RJ45 bayonet lock to release the RJ45 connector from the socket.



Specifications

Data	10BaseT, 100BaseT and 1000BaseT Networks CAT5e per TIA/EIA 568B ClassD per ISO/IEC 11801
Mechanical	Mating Cycles >500 Positive RJ45 bayonet coupling Cat5 Cable Strain Relief
Sealing	IP68
Salt Spray	>1000h
Flammability	UL94VO
Thermal Shock	10 cycles -40 to +100 deg C
Temperature Range	-40 deg C to +85 deg C
Installation Hole Dia	0.787" (20mm)
Overall Size (L x Dia)	3.75" x 1.18" (95 x 30mm)
Weight	2 oz (57gm)




- Do not tighten compression gasket until you are finalizing the installation. The gasket should only be fully tightened once. Thorough inspection of the compression fitting should be done if it is reused.
- After assembly, we recommend completely wrapping the Feed-Through-Assembly using waterproof outdoor electrical tape as a secondary water barrier.




Starting Winbox Using the MAC Address

Note: In order to connect using the MAC address your PC must be on different subnet than the default AP24/AP58 IP address 192.168.0.239

1. Copy the WinBox application from the CD to a convenient folder on your PC
2. Double click on the WinBox application
3. The WinBox screen shown below will appear
4. Click on the square button “...” to the left of the “Connect” button.

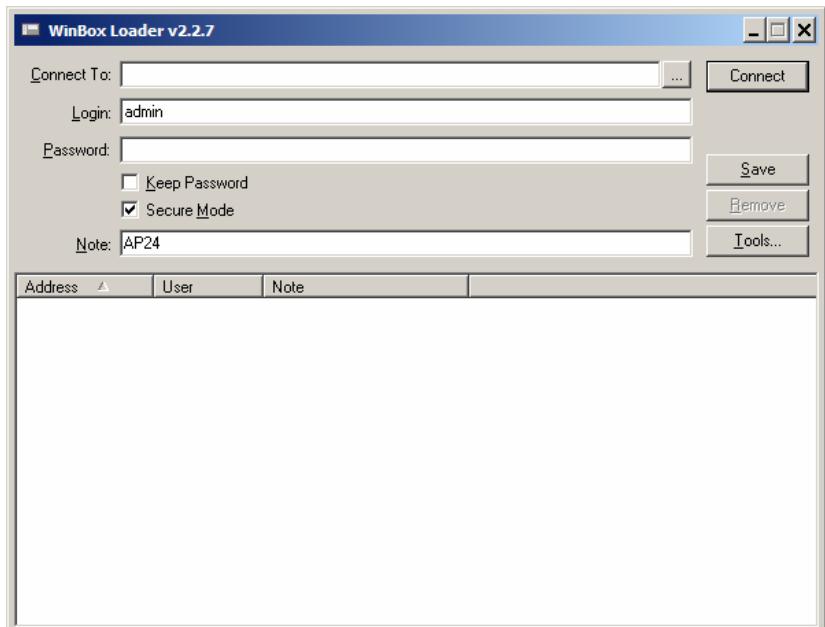


5. Select the AP24/AP58 line.
6. Press the Connect button.
7. Login as “admin”
8. Password: (blank) **CAUTION**
DO NOT SET A PASSWORD
AND LOSE IT AS IT WILL
REQUIRE SHIPMENT OF
UNIT BACK TO THE FACTORY FOR PASSWORD RESET; PASSWORD SHOULD BE SET
AFTER SETUP IS COMPLETE AND PROPERLY LOGGED INTO YOUR RECORDS

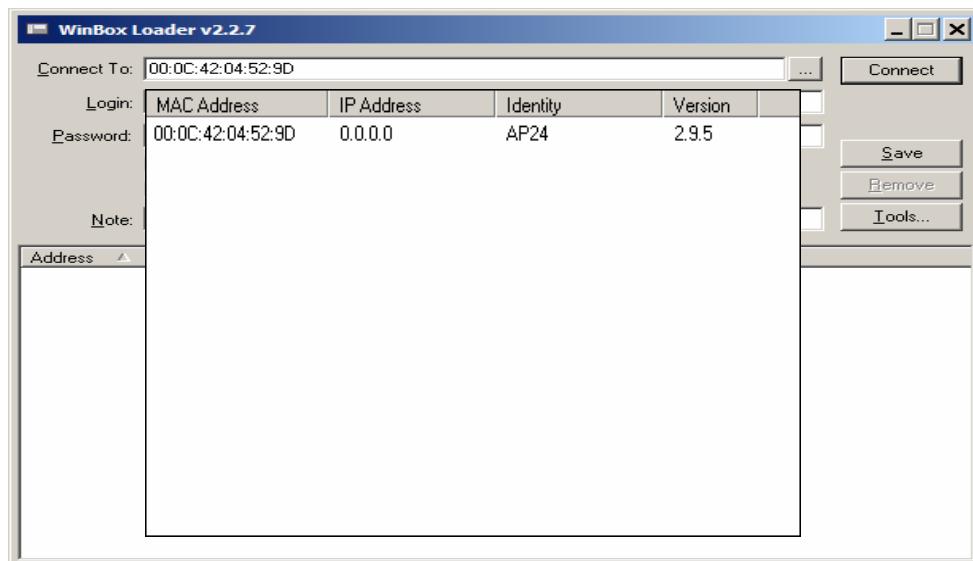



Starting Winbox Using IP Address

1. If your PC is setup on the same subnet as the default AP24/AP58 IP address 192.168.0.239 then you must use the IP address to login. Using a MAC address will not work.
2. To log in to the WinBox enter the IP address 192.168.0.239 in the Connect To field
3. Click on the connect button to log in.
4. Used admin as login name and leave the password blank.
5. You can change this as you wish or add your own to the list if these do not conflict with your network.
6. When using the IP address to login make sure you only have one interface enabled on your PC which is the one being used to connect to the AP24/AP58.

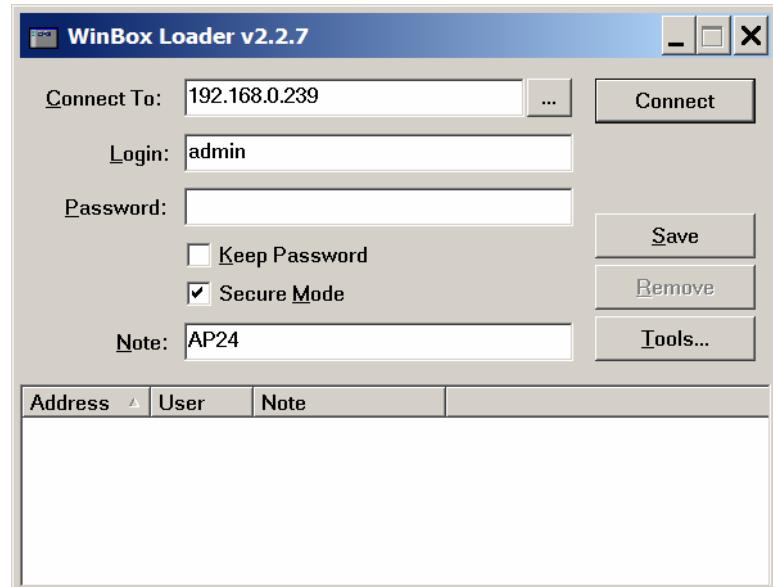


Try out the different buttons on the left to see all the available options;

- Ether1 and wlan1 are the ports that are active for the AP24/AP58.
- Ether2, ether3 and serial ports are not used on the AP24/AP58 even though they appear on some of the menus.




Looking at Interfaces

1. Click on the “Interfaces” button on the left column
2. Double click on the “ether1” interface to see the illustrated traffic pattern

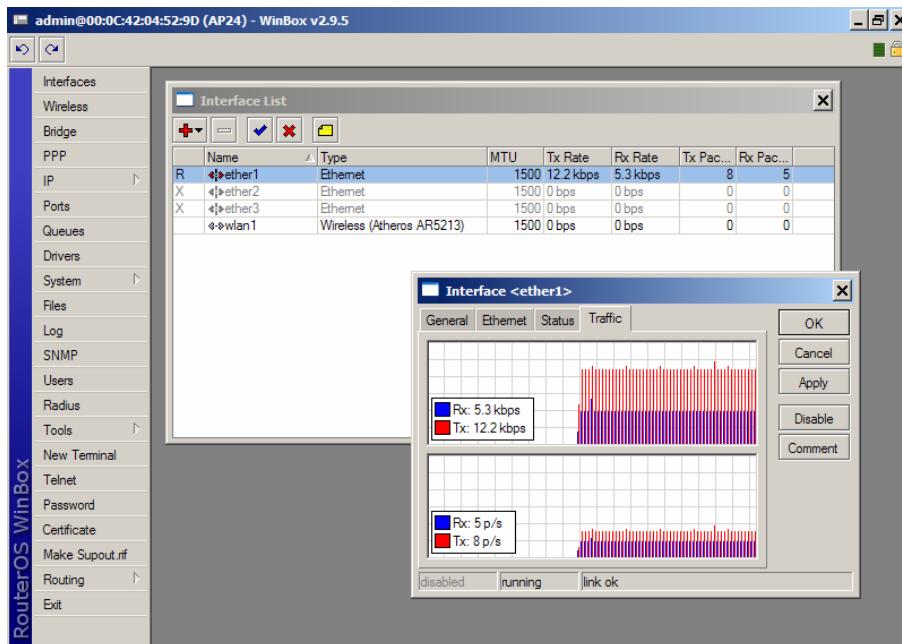

Setting Up the Bridge (already setup)


1. Click the “Bridge” button on the left column of WinBox
2. Click on the “+” button
3. Default bridge name is “bridge1”
4. click OK

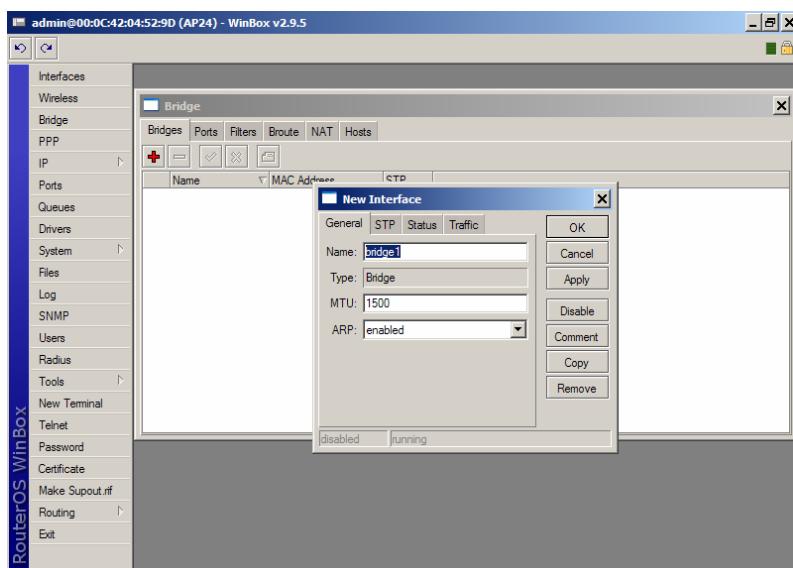




Bridging the ether1 and wlan1 Ports

1. On the Bridge window click on the “Ports” tab
2. Double click on the “ether1” line
3. Select “bridge1” on the Bridge Port <ether1> window
4. Click OK
5. Double click on the “wlan1” line
6. Select “bridge1” on the Bridge Port <wlan1> window
7. Click OK

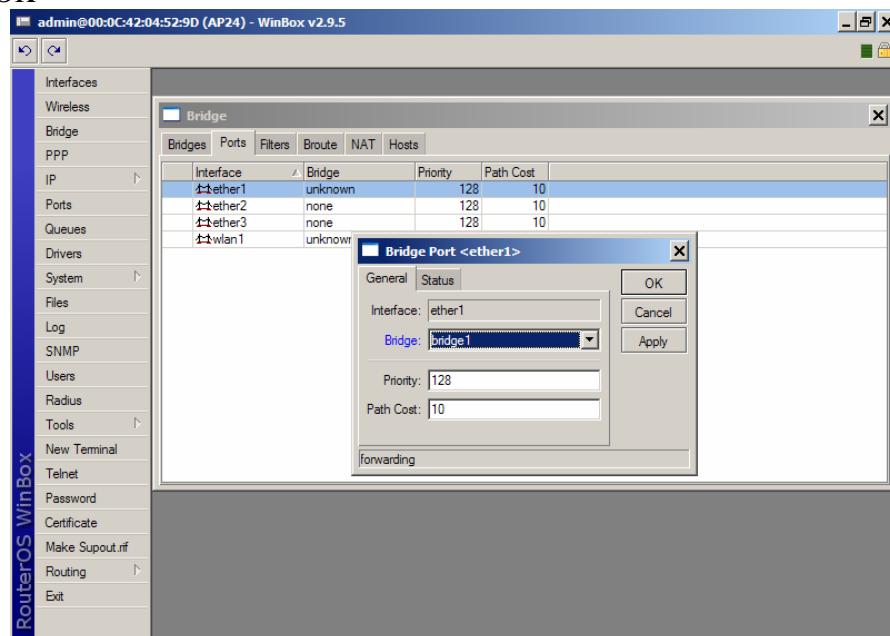


Bridge1 Operating

You now have an operating bridge inside the AP24/AP58, close “Bridge” window.

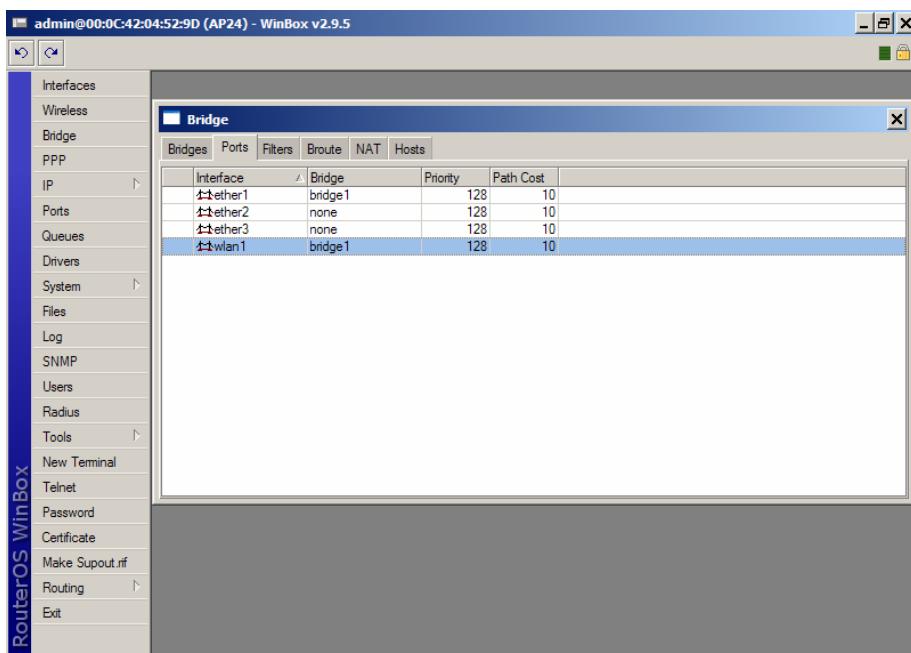


Setting Up the IP Address

1. Click on the “IP” button on the left column.
2. Click on the “+” button
3. Setup your network IP address for the AP24/AP58 in CIDR format (e.g.”192.168.0.239/24”)
4. Remember you are setting an IP address for the “bridge1”. Since the AP24/AP58 is factory set as a bridge the IP address is only needed for the management interface.
5. If you are setting the AP24/AP58 as a router then you would need to add IP addresses for the “ether1” and the “wlan1” as well as setting up the appropriate routes.

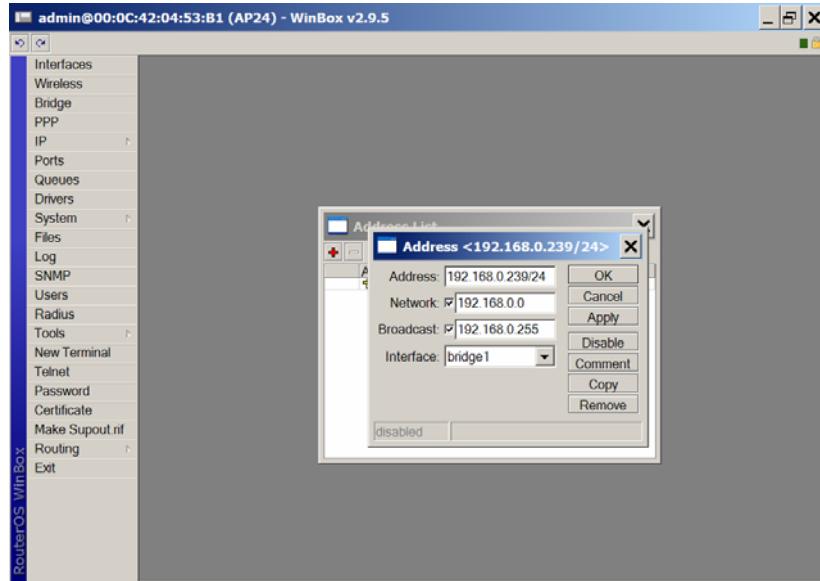


Checking the Interfaces

Click on the “Interfaces” button on the left column now shows all the interfaces and the logical “bridge1”

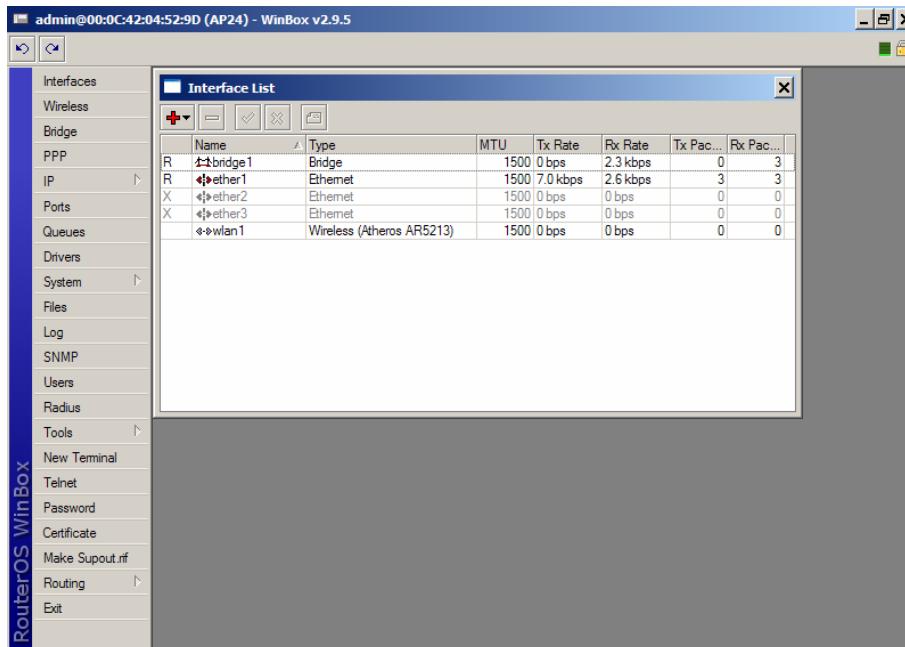


Checking the Wireless Setup

1. Click on the “Wireless” button on the left column of the WinBox window
2. Then double click on the “wlan1” line
3. You will see the window as shown below. This window has tabs on the top and buttons on the right side.
4. Please note that some of the tabs are hidden, to look at all the tabs click on the “...” square button at the end of the tabs to see the list as shown.
5. The AP24/AP58 is setup as a 2.4GHz b/g access point
6. You can change the SSID if you like. To hide the SSID click on the check mark at the bottom of the window
7. The AP24/AP58 is setup with manually set frequency channels. If you want the AP24/AP58 to auto select the frequency setup the DFS mode to either “no radar detect” or “radar detect”. In the “no radar detect” mode the AP24/AP58 scans for the frequency with the lowest interference and selects that frequency. In the “radar detect mode” the AP24/AP58 selects the frequency like the “no radar detect” mode, and switches frequency if there is interference afterwards.

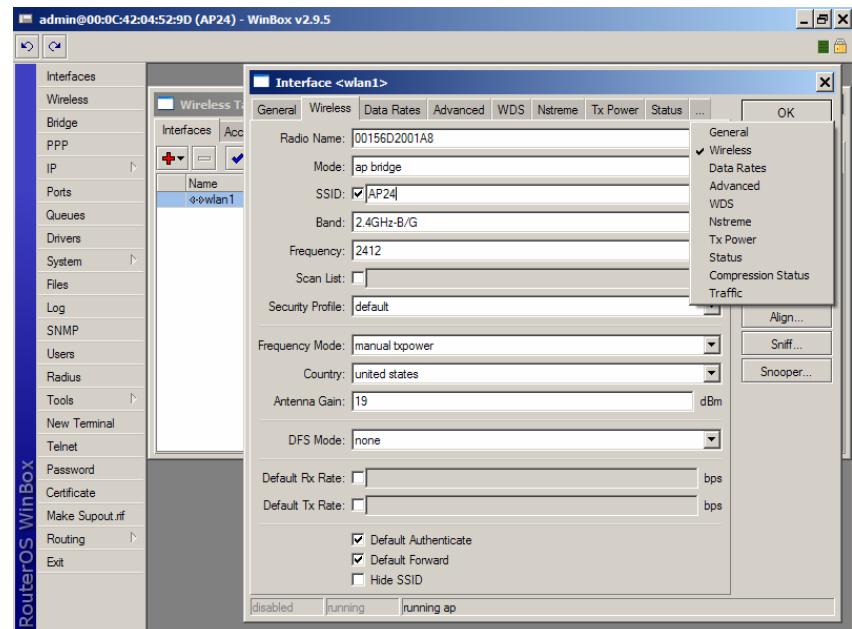

Using the Web Interface

The AP24/58 can also be accessed using a web browser. However please note the web interface has limited functionality. Full functionality can only be achieved either via the Winbox or using the built in command line interface. To use the command line interface you can either use the Terminal inside the Winbox window or login via Telnet or SSH.

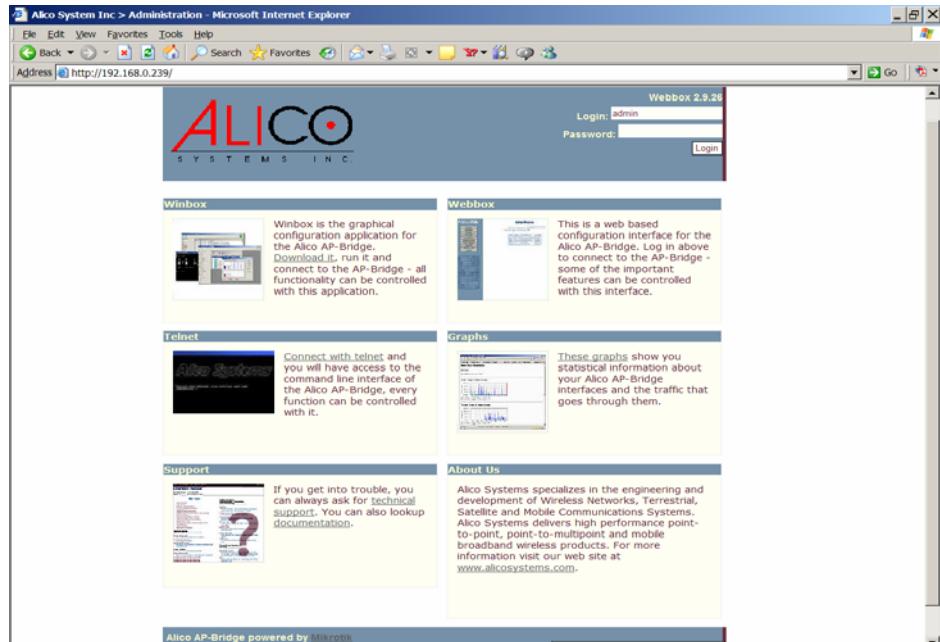



Support

- This is a short guide to get started with the AP24/AP58
- The AP24/AP58 has a very rich routing and firewall capabilities
- You are welcome to explore all the features
- If you need help call technical support at:
 - 310-781-9500, or
 - Email to support@alicosystems.com

Limited Warranty:

Alico Systems warrants that your device is free of defects in material and workmanship for a period of one year after initial purchase. Alico will, in this period of time, repair or replace, any Alico product returned to the factory, freight prepaid.

The Alico warranty covers repairs or replacement (at Alico's option) of the product only. Alico is not responsible for the cost of removal, reinstallation, or shipping to the place of repair. Alico does not extend or modify its warranty period as a result of repair or replacement.

Alico reserves the right to void a warranty and/or make reasonable charges for repair of a unit if the warranty seal is broken or the unit displays evidence of misuse, abuse, tampering or improper installation. We are not responsible for damage to this equipment due to acts of God and extreme forces of nature such as lightning, hurricanes or earthquakes.

Alico is not responsible for damage to any other equipment or property, or any other consequential or incidental damages of any kind, whether based on contract, negligence, or strict liability. Maximum liability shall not in any case exceed the purchase price of the unit.

Warranties give you (the buyer) specific legal rights. You may also have other rights that vary from state to state. This warranty is only extended to purchases made in the United States of America or its possessions.