ET40/45

Enterprise Tablet



Quick Start Guide

Copyright

ZEBRA and the stylized Zebra head are trademarks of Zebra Technologies Corporation, registered in many jurisdictions worldwide. All other trademarks are the property of their respective owners. ©2022 Zebra Technologies Corporation and/or its affiliates. All rights reserved.

Information in this document is subject to change without notice. The software described in this document is furnished under a license agreement or nondisclosure agreement. The software may be used or copied only in accordance with the terms of those agreements.

For further information regarding legal and proprietary statements, please go to:

SOFTWARE: zebra.com/linkoslegal. COPYRIGHTS: zebra.com/copyright. WARRANTY: zebra.com/warranty.

END USER LICENSE AGREEMENT: zebra.com/eula.

Terms of Use

Proprietary Statement

This manual contains proprietary information of Zebra Technologies Corporation and its subsidiaries ("Zebra Technologies"). It is intended solely for the information and use of parties operating and maintaining the equipment described herein. Such proprietary information may not be used, reproduced, or disclosed to any other parties for any other purpose without the express, written permission of Zebra Technologies.

Product Improvements

Continuous improvement of products is a policy of Zebra Technologies. All specifications and designs are subject to change without notice.

Liability Disclaimer

Zebra Technologies takes steps to ensure that its published Engineering specifications and manuals are correct; however, errors do occur. Zebra Technologies reserves the right to correct any such errors and disclaims liability resulting therefrom.

Limitation of Liability

In no event shall Zebra Technologies or anyone else involved in the creation, production, or delivery of the accompanying product (including hardware and software) be liable for any damages whatsoever (including, without limitation, consequential damages including loss of business profits, business interruption, or loss of business information) arising out of the use of, the results of use of, or inability to use such product, even if Zebra Technologies has been advised of the possibility of such damages. Some jurisdictions do not allow the exclusion or limitation of incidental or consequential damages, so the above limitation or exclusion may not apply to you.

Unpacking the Device

- **1.** Carefully remove all protective material from the device and save the shipping container for later storage and shipping.
- **2.** Verify the following items are in the box:
 - · Tablet with lithium-ion battery
 - · Regulatory Guide
- **3.** Inspect the equipment for damage. If any equipment is missing or damaged, contact the Global Customer Support Center immediately.
- **4.** Before using the device for the first time, remove the protective shipping film that covers the scan window, display, and camera window.

Device Features

Figure 1 Front View

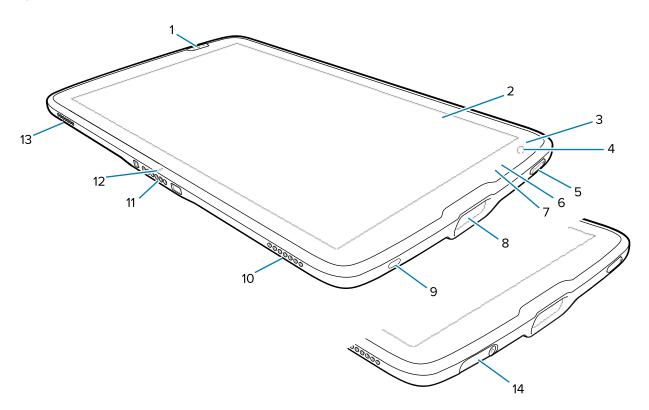


Table 1 Device Front View

Number	Item	Description
1	Front scan button	Initiates barcode data capture when a scan-enabled application is active.
2	Touch screen	Displays all information needed to operate the device.
3	Light sensor	Determines ambient light for controlling display back light intensity.

Table 1 Device Front View (Continued)

Number	Item	Description
4	Front camera	Use for video conferencing.
5	Power button	Turns the display on and off. Press and release to power on the device. Press and hold to reset the device or power off.
6	Data capture LED	Illuminates during data capture.
7	Charging indicator LED	Indicates power state and battery charging status while charging and application generated notifications.
8	Scan window	Provides data capture using the imager.
9	USB-C port	Provides USB host and client communications.
10	Right speaker	Provides audio output.
11	Interface connector	Provides communication to the device from the dock.
12	Cradle alignment indicator	Use to assist in aligning the tablet with a cradle.
13	Left speaker	Provides audio output.
14	USB port cover	Use to seal the USB port. Available on healthcare devices only.

Figure 2 Rear View

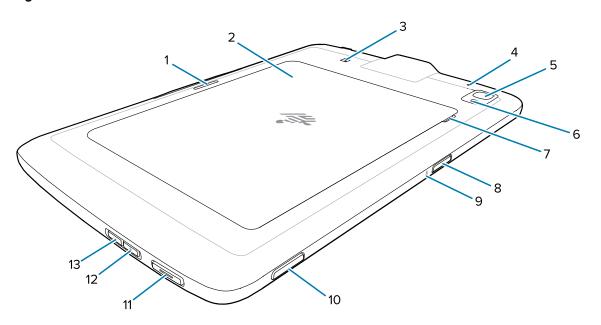


Table 2 Device Top View

Number	Item	Description
1	Cradle latching slot	Used by cradles to secure the tablet.
2	Battery cover	Provides access to the replaceable battery.

Table 2 Device Top View (Continued)

Number	ltem	Description
3	NFC antenna position	Use to read NFC cards.
4	Rear Microphone	Use for audio recordings.
5	Rear camera	Autofocus camera that takes photos.
6	Rear camera LED flash	Provides illumination for the camera.
7	Battery cover notch	Lift the notched section of the battery cover to remove the battery cover from the tablet.
8	Top scan button	Initiates barcode data capture when a scan-enabled application is active (programmable).
9	Top Microphone	Use for voice communications or audio recordings.
10	Programmable button	Button that is configurable for use with applications.
11	PTT button	Typically used for Push-to-Talk communications. Where regulatory restrictions exist, button is configurable for use with other applications.
12	Volume up button	Increases audio volume.
13	Volume down button	Decreases audio volume.

Setting Up the Device

Set up the device before using it for the first time.


- 1. Install the nano SIM Card. (ET45 only)
- 2. Charge the device.
- **3.** Power on the device.

Installing the nano SIM Card


The nano-SIM card is available only on ET45 devices.

1. Ensure the tablet is powered off.

2. Lift the corner of the battery cover up (1) from the notched area and carefully remove the battery cover from the device (2) as shown.

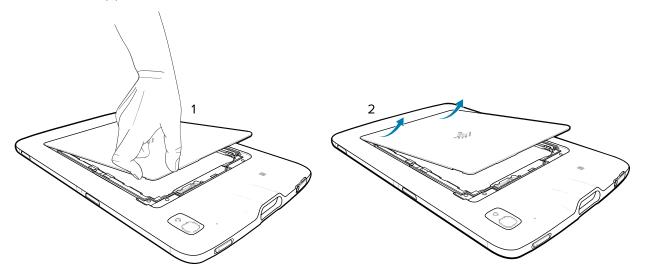


- 3. Slide and hold the battery lock switch in the unlock position (1).
- **4.** While the switch is in the unlock position, rotate the battery up (2) and then remove it from the battery well (3).

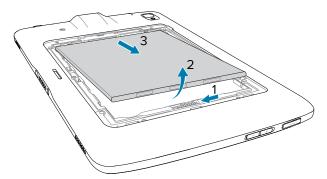


- **5.** After removing the battery from the tablet, release the battery lock switch.
- **6.** If replacing the nano SIM card, remove the existing card.
 - a) Push in the installed SIM card and release.
 - b) The card ejects slightly so that you can remove it.
 - c) Remove the SIM card from the card slot. The card should easily slide out. If not, the SIM card was not ejected correctly. Repeat step A.


7. Insert the nano SIM card with the contacts facing down.

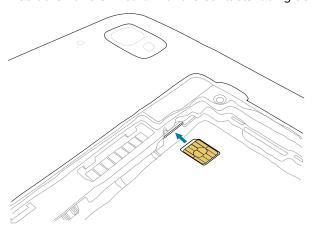

- **8.** Push the SIM card in and ensure that it locks into place.
- 9. Replace the battery, contacts side first.

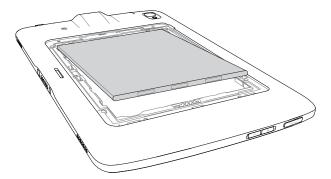

- 10. Slide and hold the battery lock switch in the unlock position (1).
- 11. Rotate the battery down into the battery well (2), ensuring it is seated properly.

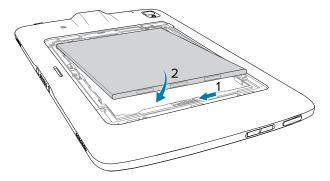


12. Release the battery lock switch into the lock position.




CAUTION: Be aware of the orientation of the battery cover. Failure to replace the battery cover properly may cause damage.

13. Insert the tabbed end of the battery cover into the slots in the battery well (1).

14. Rotate the cover down (2).

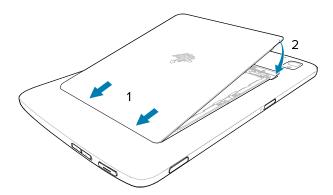

15. Carefully press down around the edges of the cover. Make sure that the cover is seated properly.

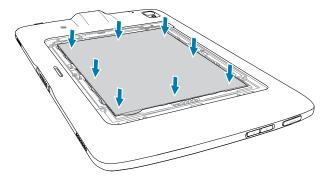

Device Charging

Before using the tablet for the first time, connect it to an external power source. Keep the tablet connected to the external power source until it is fully charged. The Charging Indicator LED turns green when the tablet is fully charged. You may use the tablet while it is charging.

For the best charging experience, use one of the following charging accessories:

- 1-Slot Charge Only Cradle (CRD-ET4X-1SCHRG1-01)
- 4-Slot Charge Only Cradle (CRD-ET4X-4SCHRG1-01)

The tablet's main battery charges from fully depleted to 90% in approximately 2 hours, and from fully depleted to 100% in approximately 3 hours.

Main Battery Charging

Charge the tablet's main battery before using the tablet.

The 8 in. tablet main battery charges from fully depleted to 80% in approximately 3 hours.

The 10 in. tablet main battery charges from fully depleted to 80% in approximately 4 hours.



NOTE: The Charging indicator only illuminates when the device is connected to AC power.

Table 3 Charging Indicators

LED	Indication
Off	Device is not in cradle; not seated properly; or cradle is not powered.
Slow blinking orange	Device is charging.
(1 blink every 4 seconds)	
Slow blinking red	Device is charging but the battery is at end of useful life.
(1 blink every 4 seconds)	
Fast blinking orange	Charging error. Possible charging errors include:
(2 blinks/second)	Temperature is too low or too high.
	Charging has gone on too long without completion (typically eight hours).
Fast blinking red	Charging error and the battery is at end of useful life. Possible charging errors include:
(2 blinks/second)	Temperature is too low or too high.
	Charging has gone on too long without completion (typically eight hours).
Solid Green	Charging complete.
Solid Red	Charging complete but the battery is at end of useful life.

Charging Temperature

Charge batteries in ambient temperatures from 0° C to $+40^{\circ}$ C (32° F to 104° F) as reported by the battery. Charging is intelligently controlled by the charger. To accomplish this, for small periods of time, the charger alternately enables and disables battery charging to keep the battery at acceptable temperatures.

Charging the Device


This section describes how to charge the device using any of the ET40/ET45 cradles.

1. Align the device with the alignment pins on the cradle.

2. Insert the device into the cradle.




NOTE: Ensure the tablet is flat on the cradle and all charging contacts are touching the charging base.

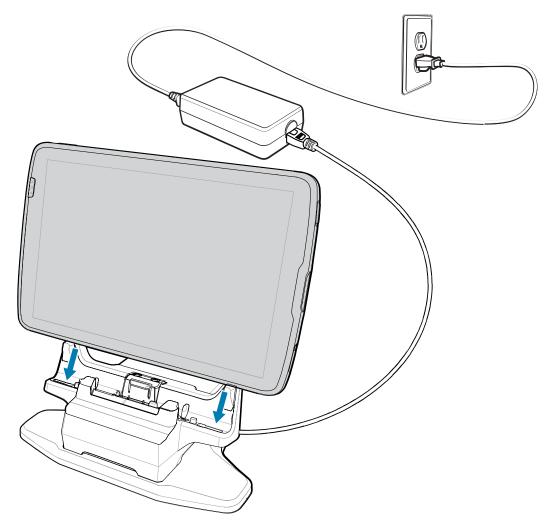

3. The device Charging LED indicates charging.

4. To remove the device from the cradle, rotate the device down slightly (1) and lift it out of the cradle (2).

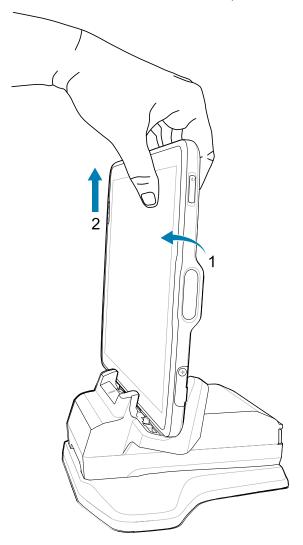

Powering on the Device

Press and hold the **Power** button until the menu appears.

1-Slot Charge Only Cradle

Use a 1-Slot Charge Only cradle to charge one 8" or 10" tablet.




CAUTION: Ensure that you follow the guidelines for battery safety described in Battery Safety Guidelines.

The 1-Slot Charge Only Cradle:


- Provides power for operating the device.
- Charges the device's battery and optional Power Pack installed in an Expansion Back.

Figure 3 1-Slot Charge Only Cradle - Front View

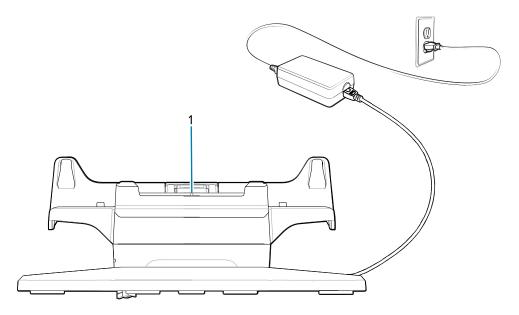

Number	ltem	Description
1	Cradle alignment indicator	Use to assist in aligning the cradle with the tablet.

Figure 4 1-Slot Charge Only Cradle - Rear View

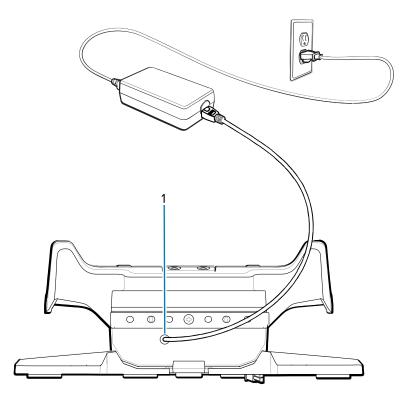

Number	Item	Description
1	Power input	Use to connect power to the cradle.

4-Slot Charge Only Cradle

Use the 4-Slot Charge Only Cradle to charge up to four 8" or 10" tablets.



CAUTION: Ensure that you follow the guidelines for battery safety described in Battery Safety Guidelines.

The 4-Slot Charge Only Cradle:

- Provides 12 VDC power for operating the device.
- Simultaneously charges up to four devices and up to four Power Packs using the optional Battery Charger Adapter.

Figure 5 4-Slot Charge Only Cradle



Need a drawing similar to the above with a power cable and power supply connected. Need a drawing of the back of the cradle.

Scanning with an Internal Scanner


Use the integrated scanner to capture barcode data.



NOTE: To read a barcode, a scan-enabled app is required. The device contains the DataWedge app that allows the user to enable the scanner to decode barcode data and display the barcode content.

- 1. Ensure that an app is open on the device and a text field is in focus (text cursor in the text field).
- 2. Point the device at a barcode.

3. Press and hold one of the triggers.

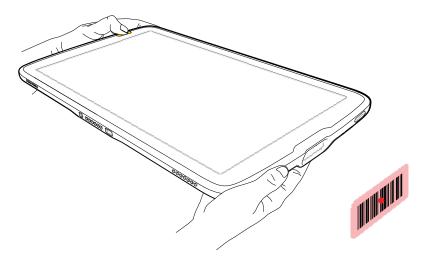


4. Ensure the barcode is within the area formed by the aiming pattern.

Reading NFC Cards

Read contactless cards using NFC.

- 1. Launch an NFC enabled application.
- 2. Hold device as shown.
- **3.** Move the card to the NFC antenna (1) on the back of the device.

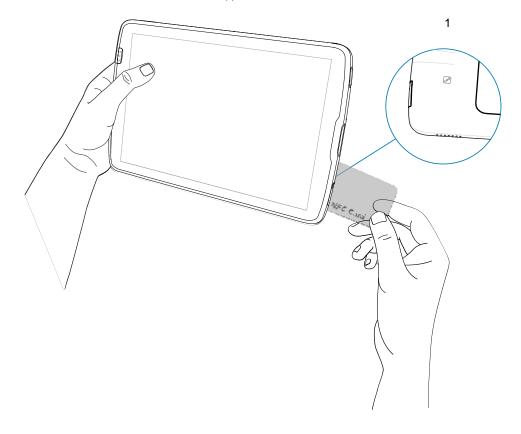

DRAFT - INTERNAL USE ONLY - 2022-05-03-05:00

ET40/45 Quick Start Guide

4. Hold the card steadily until the transaction is complete (usually indicated by the application).

