

USER GUIDE

WiMAX 802.16E INDOOR GATEWAY RG300



Notice:

WIFI Function is not available for this device (FCC ID: V8YFW181RG30002W).

You can buy our another higher level product if you need to use WIFI function. (FCC ID: V8YFW181RG30000W)

USER GUIDE

WiMAX 802.16E INDOOR GATEWAY RG300



Federal Communication Commission Interference Statement

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

FCC Caution: Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate this equipment.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

IMPORTANT NOTE:

Radiation Exposure Statement:

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 20cm between the radiator & your body.

This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.

Note: The country code selection is for non-US model only and is not available to all US model. Per FCC regulation, all WiFi product marketed in US must fixed to US operation channels only.

Europe – EU Declaration of Conformity

This device complies with the essential requirements of the R&TTE Directive 1999/5/EC. The following test methods have been applied in order to prove presumption of conformity with the essential requirements of the R&TTE Directive 1999/5/EC:

EN 60950-1 :2006 + A11:2009
Safety of Information Technology Equipment

EN 50385 : (2002-08)
Product standard to demonstrate the compliance of radio base stations and fixed terminal stations for wireless telecommunication systems with the basic restrictions or the reference levels related to human exposure to radio frequency electromagnetic fields (110MHz - 40 GHz) - General public

EN 300 328 V1.7.1: (2006-10)
Electromagnetic compatibility and Radio spectrum Matters (ERM); Wideband Transmission systems; Data transmission equipment operating in the 2,4 GHz ISM band and using spread spectrum modulation techniques; Harmonized EN covering essential requirements under article 3.2 of the R&TTE Directive

EN 301 489-1 V1.8.1: (2008-04)
Electromagnetic compatibility and Radio Spectrum Matters (ERM); ElectroMagnetic Compatibility (EMC) standard for radio equipment and services; Part 1: Common technical requirements

EN 301 489-17 V1.3.2 (2008-04)
Electromagnetic compatibility and Radio spectrum Matters (ERM); ElectroMagnetic Compatibility (EMC) standard for radio equipment and services; Part 17: Specific conditions for 2,4 GHz wideband transmission systems and 5 GHz high performance WLAN equipment

EN 302 326-2 V1.2.2(2007-06)
Fixed Radio Systems; Multipoint Equipment and Antennas; Part 2: Harmonized EN covering the essential requirements of article 3.2 of the R&TTE Directive for Digital Multipoint Radio Equipment

EN 302 544 V1.1.2: 2010
Broadband Data Transmission Systems operating in the 2 500 MHz to 2 690 MHz frequency band; Part 2: TDD User Equipment Stations; Harmonized EN covering the essential requirements of article 3.2 of the R&TTE Directive

EN 55022: 2006 A1:2007
Information technology equipment - Radio disturbance characteristics - Limits and methods of measurement

EN 55024: 2010



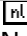
Information technology equipment — Immunity characteristics — Limits and methods of measurement

This device is a 2.3G & 2.5G Wimax + 2.4G Wifi wideband transmission system (transceiver), intended for use in all EU member states and EFTA countries, except in France and Italy where restrictive use applies.

In Italy the end-user should apply for a license at the national spectrum authorities in order to obtain authorization to use the device for setting up outdoor radio links and/or for supplying public access to telecommunications and/or network services.

This device may not be used for setting up outdoor radio links in France and in some areas the RF output power may be limited to 10 mW EIRP in the frequency range of 2454 – 2483.5 MHz. For detailed information the end-user should contact the national spectrum authority in France.

CE0560!

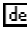 Český [Czech]	[Jméno výrobce] tímto prohlašuje, že tento [typ zařízení] je ve shodě se základními požadavky a dalšími příslušnými ustanoveními směrnice 1999/5/ES.
 Dansk [Danish]	Undertegnede [fabrikantens navn] erklærer herved, at følgende udstyr [udstyrets typebetegnelse] overholder de væsentlige krav og øvrige relevante krav i direktiv 1999/5/EF.
 Deutsch [German]	Hiermit erkläre [Name des Herstellers], dass sich das Gerät [Gerätetyp] in Übereinstimmung mit den grundlegenden Anforderungen und den übrigen einschlägigen Bestimmungen der Richtlinie 1999/5/EG befindet.
 Eesti [Estonian]	Kõesolevaga kinnitab [tootja nimi = name of manufacturer] seadme [seadme tüüp = type of equipment] vastavust direktiivi 1999/5/EÜ põhinõuetele ja nimetatud direktiivist tulenevatele teistele asjakohastele sätetele.
 English	Hereby, [name of manufacturer], declares that this [type of equipment] is in compliance with the essential requirements and other relevant provisions of Directive 1999/5/EC.
 Español [Spanish]	Por medio de la presente [nombre del fabricante] declara que el [clase de equipo] cumple con los requisitos esenciales y cualesquiera otras disposiciones aplicables o exigibles de la Directiva 1999/5/CE.
 Ελληνική [Greek]	ΜΕ ΤΗΝ ΠΑΡΟΥΣΑ [name of manufacturer] ΔΗΛΩΝΕΙ ΟΤΙ [type of equipment] ΣΥΜΜΟΡΦΩΝΕΤΑΙ ΠΡΟΣ ΤΙΣ ΟΥΣΙΩΔΕΙΣ ΑΠΑΙΤΗΣΕΙΣ ΚΑΙ ΤΙΣ ΛΟΙΠΕΣ ΣΧΕΤΙΚΕΣ ΔΙΑΤΑΞΕΙΣ ΤΗΣ ΟΔΗΓΙΑΣ 1999/5/ΕΚ.
 Français [French]	Par la présente [nom du fabricant] déclare que l'appareil [type d'appareil] est conforme aux exigences essentielles et aux autres dispositions pertinentes de la directive 1999/5/CE.
 Italiano [Italian]	Con la presente [nome del costruttore] dichiara che questo [tipo di apparecchio] è conforme ai requisiti essenziali ed alle altre disposizioni pertinenti stabilite dalla direttiva 1999/5/CE.
Latviski [Latvian]	Ar šo [name of manufacturer / izgatavotāja nosaukums] deklarē, ka [type of equipment / iekārtas tips] atbilst Direktīvas 1999/5/EK būtiskajām prasībām un citiem ar to saistītajiem noteikumiem.
Lietuvių [Lithuanian]	Šiuo [manufacturer name] deklaruoją, kad šis [equipment type] atitinka esminius reikalavimus ir kitas 1999/5/EB Direktyvos nuostatas.
 Nederlands [Dutch]	Hierbij verklaart [naam van de fabrikant] dat het toestel [type van toestel] in overeenstemming is met de essentiële eisen en de andere relevante bepalingen van richtlijn 1999/5/EG.
 Malti [Maltese]	Hawnhekk, [isem tal-manifattur], jiddikjara li dan [il-mudel tal-prodott] jikkonforma mal-ħtiġijiet essenzjali u ma provvedimenti oħrajn relevanti li hemm fid-Dirrettiva 1999/5/EC.
 Magyar [Hungarian]	Alulírott, [gyártó neve] nyilatkozom, hogy a [... típus] megfelel a vonatkozó alapvető követelményeknek és az 1999/5/EC irányelv egyéb előírásainak.

<p>[pl]Polski [Polish]</p>	<p>Niniejszym <i>[nazwa producenta]</i> oświadcza, że <i>[nazwa wyrobu]</i> jest zgodny z zasadniczymi wymogami oraz pozostałymi stosownymi postanowieniami Dyrektywy 1999/5/EC.</p>
<p>[pt]Português [Portuguese]</p>	<p><i>[Nome do fabricante]</i> declara que este <i>[tipo de equipamento]</i> está conforme com os requisitos essenciais e outras disposições da Directiva 1999/5/CE.</p>
<p>[sl]Slovensko [Slovenian]</p>	<p><i>[Ime proizvajalca]</i> izjavlja, da je ta <i>[tip opreme]</i> v skladu z bistvenimi zahtevami in ostalimi relevantnimi določili direktive 1999/5/ES.</p>
<p>Slovensky [Slovak]</p>	<p><i>[Meno výrobcu]</i> týmto vyhlasuje, že <i>[typ zariadenia]</i> spĺňa základné požiadavky a všetky príslušné ustanovenia Smernice 1999/5/ES.</p>
<p>[fi]Suomi [Finnish]</p>	<p><i>[Valmistaja = manufacturer]</i> vakuuttaa täten että <i>[type of equipment = laitteen tyyppimerkintä]</i> tyyppinen laite on direktiivin 1999/5/EY oleellisten vaatimusten ja sitä koskevien direktiivin muiden ehtojen mukainen.</p>
<p>[sv]Svenska [Swedish]</p>	<p>Härmed intygar <i>[företag]</i> att denna <i>[utrustningstyp]</i> står i överensstämmelse med de väsentliga egenskapskrav och övriga relevanta bestämmelser som framgår av direktiv 1999/5/EG.</p>

EC CONFORMANCE DECLARATION (CE)

Marking by the above symbol indicates compliance with the Essential Requirements of the R&TTE Directive of the European Union (1999/5/EC). This equipment meets the following conformance standards:

- ◆ EN 60950-1 (IEC 60950-1) - Product Safety
- ◆ EN 301 489-1, EN 301 489-4, EN 302 326-2 (V1.2.2), EN 302 326-3 (V1.2.2) - EMC requirements for radio equipment

This device is intended for use in all European Community countries.

NCC 警語**Wi-Fi:**

經型式認證合格之低功率射頻電機，非經許可，公司、商號或使用者均不得擅自變更頻率、加大功率或變更原設計之特性及功能。

低功率射頻電機之使用不得影響飛航安全及干擾合法通信；經發現有干擾現象時，應立即停用，並改善至無干擾時方得繼續使用。前項合法通信，指依電信法規定作業之無線電通信。低功率射頻電機須忍受合法通信或工業、科學及醫療用電波輻射性電機設備之干擾。

WiMAX:

減少電磁波影響，請妥適使用。

ABOUT THIS GUIDE

PURPOSE This guide details the hardware features of the RG300 WiMAX 802.16e Indoor Gateway, including its physical and performance-related characteristics, and how to install the device and use its configuration software.

AUDIENCE This guide is for PC users with a working knowledge of computers. You should be familiar with Windows operating system concepts.

CONVENTIONS The following conventions are used throughout this guide to show information:



NOTE: Emphasizes important information or calls your attention to related features or instructions.



CAUTION: Alerts you to a potential hazard that could cause loss of data, or damage the system or equipment.



WARNING: Alerts you to a potential hazard that could cause personal injury.

RELATED PUBLICATIONS The following publication gives basic information on how to install and use the WiMAX 802.16e Indoor Gateway.

Quick Installation Guide

Also, as part of the WiMAX 802.16e Indoor Gateway's configuration software, there is online help that describes all management features.

REVISION HISTORY This section summarizes the changes in each revision of this guide.

APRIL 2011 REVISION

This is the first revision of this guide. This guide is valid for software version 1.0.2.0.

CONTENTS

COMPLIANCES	3	
ABOUT THIS GUIDE	5	
CONTENTS	6	
FIGURES	10	
TABLES	12	
<hr/>		
SECTION I	GETTING STARTED	13
1	INTRODUCTION	14
	RG300 Hardware Description	15
	Wi-Fi Option	15
	Power Status LED	16
	Wi-Fi Status LED	17
	WiMAX Signal LEDs	17
	LAN Ports	17
	VoIP Phone Ports	18
	Power Adapter Socket	18
	Reset Button	18
2	INSTALLING THE RG300	20
	Package Checklist	20
	Installation Overview	20
	Select a Location	20
	Cable Connections	21
3	INITIAL CONFIGURATION	23
	Accessing the Web Management Interface	23
	Home Page	24
	Using the Basic Setup Wizard	25
	The Advanced Setup Menu	27

	Common Web Page Buttons	28
SECTION II	WEB CONFIGURATION	29
4	SYSTEM SETTINGS	30
	System Status	31
	Administrator Settings	32
	Firmware Upgrade	33
	Configuration Tools	34
	System Time	35
	System Log	36
	Reset	37
5	WAN CONFIGURATION	38
	WAN Settings	39
	Dynamic IP Address	40
	Static IP Settings	40
	L2TP Settings	41
	PPTP Settings	41
	DNS	42
	DDNS	43
6	LAN CONFIGURATION	44
	LAN Settings	45
	DHCP Client List	46
7	NAT CONFIGURATION	47
	NAT Settings	48
	Port Mapping	49
	DMZ	50
	ALG	51
8	FIREWALL CONFIGURATION	52
	Firewall Settings	53
	Client Filtering	54
	Port Filtering	55
	MAC Filtering	56
	URL Filtering	57

Host Filtering	58	
9 ROUTING CONFIGURATION	59	
Routing Table	60	
Static Route	61	
10 UPnP CONFIGURATION	62	
UPnP	63	
11 VOIP SETTINGS	64	
SIP Account	65	
SIP Settings	66	
Speed Dial	67	
Dial Plan	68	
Call Feature	70	
Phone Settings	72	
Codecs	73	
12 WI-FI SETTINGS	75	
Basic Wireless Settings	76	
Advanced Wireless Settings	78	
Wireless Security	79	
Wired Equivalent Privacy (WEP)	80	
WPA Pre-Shared Key	81	
ACL Settings	83	
13 QoS CONFIGURATION	84	
QoS Settings	85	
SECTION III	APPENDICES	86
A TROUBLESHOOTING	87	
Diagnosing LED Indicators	87	
Cannot Connect to the Internet	87	
Cannot Access Web Management	88	
Forgot or Lost the Password	88	
Resetting the Unit	88	
B HARDWARE SPECIFICATIONS	89	

Physical Specifications	89
WiMAX Specifications	90
VoIP Specifications	90
Wi-Fi Specifications	91
Compliances	92
C CABLES AND PINOUTS	93
Twisted-Pair Cable Assignments	93
10/100BASE-TX Pin Assignments	93
Straight-Through Wiring	94
Crossover Wiring	95
RJ-11 Port	96
GLOSSARY	97
INDEX	102

FIGURES

Figure 1: Front of the RG300	15
Figure 2: RG300 LED Indicators	16
Figure 3: Back of the RG300	18
Figure 4: Base of the RG300	19
Figure 5: RG300 Connections	21
Figure 6: Login Page	23
Figure 7: Home Page	24
Figure 8: WiMAX Account Login	25
Figure 9: Confirm Settings	26
Figure 10: Setup Wizard Finished	26
Figure 11: Advanced Setup	27
Figure 12: Common Web Page Buttons	28
Figure 13: System Status – Internet	31
Figure 14: System Status – Gateway	31
Figure 15: System Status – Information	32
Figure 16: Setting a Password	32
Figure 17: Firmware Upgrade	33
Figure 18: Configuration Tools	34
Figure 19: Restore Configuration Settings	34
Figure 20: System Time	35
Figure 21: System Log	36
Figure 22: Reset Unit	37
Figure 23: WAN Settings	39
Figure 24: Dynamic IP Address	40
Figure 25: Static IP Settings	40
Figure 26: L2TP Settings	41
Figure 27: PPTP Settings	41
Figure 28: DNS Settings	42
Figure 29: DDNS Settings	43
Figure 30: LAN Settings	45
Figure 31: DHCP Client List	46

Figure 32: NAT Settings	48
Figure 33: Port Mapping	49
Figure 34: DMZ Settings	50
Figure 35: ALG Settings	51
Figure 36: Firewall Settings	53
Figure 37: Client Filtering Settings	54
Figure 38: Port Filtering	55
Figure 39: MAC Filtering	56
Figure 40: URL Filtering	57
Figure 41: Host Filtering	58
Figure 42: Routing Table	60
Figure 43: Static Route	61
Figure 44: UPnP Setting	63
Figure 45: SIP Account Settings	65
Figure 46: SIP Settings	66
Figure 47: Speed Dial	67
Figure 48: Dial Plan Settings	68
Figure 49: Call Features	70
Figure 50: Phone Settings	72
Figure 51: VoIP Codecs	73
Figure 52: Wireless Settings	76
Figure 53: Advanced Wireless Settings	78
Figure 54: Security Mode Options	80
Figure 55: Security Mode - WEP	80
Figure 56: Security Mode - WPA-PSK	81
Figure 57: ACL Settings	83
Figure 58: QoS Settings	85
Figure 59: RJ-45 Connector	93
Figure 60: Straight Through Wiring	94
Figure 61: Crossover Wiring	95
Figure 62: RJ-11 Port Pinout	96

TABLES

Table 1: Power Status LED	16
Table 2: Wi-Fi Status LED	17
Table 3: WiMAX Signal Status LEDs	17
Table 4: LAN Port Status LED	18
Table 5: Dial Plan Elements	68
Table 6: Troubleshooting Chart	87
Table 7: 10/100BASE-TX MDI and MDI-X Port Pinouts	94
Table 8: RJ-11 Port Pinout	96

SECTION I

GETTING STARTED

This section provides an overview of the RG300, and describes how to install and mount the unit. It also describes the basic settings required to access the management interface and run the setup Wizard.

This section includes these chapters:

- ◆ ["Introduction" on page 14](#)
- ◆ ["Installing the RG300" on page 20](#)
- ◆ ["Initial Configuration" on page 23](#)

1

INTRODUCTION

The RG300 WiMAX 802.16e Indoor Gateway is a WiMAX subscriber station designed to provide Internet access for a home or small office. The unit provides a gateway function between a WiMAX service provider and a local Ethernet LAN. The device enables a service provider to deliver last mile broadband wireless access as an alternative to wired DSL or cable modems.

The RG300 includes up to four RJ-45 Ethernet ports for LAN connections and up to two RJ-11 Voice over IP (VoIP) phone ports. Units also support an IEEE 802.11b/g/n Wi-Fi module that provides a local Wi-Fi access point service.

The RG300 offers a user-friendly web-based management interface for the configuration of all the unit's features. Any PC directly attached to the unit can access the management interface using a web browser, such as Internet Explorer (version 6.0 or above) or Firefox (version 1.5 or above).

RG300 HARDWARE DESCRIPTION

The front of the RG300 provides an array of system status indicators. The back includes four LAN ports for 10/100 Mbps Ethernet connections, two RJ-11 VoIP phone ports, and a DC power jack.

Figure 1: Front of the RG300



Wi-Fi OPTION The RG300 includes an 802.11b/g/n Wi-Fi support. This unit includes internal antennas for local wireless connections to PCs.

POWER STATUS LED The RG300 includes a Power LED indicator that simplifies installation and WiMAX network troubleshooting. The LED, which is located on the front panel, is described in the following table.

Figure 2: RG300 LED Indicators

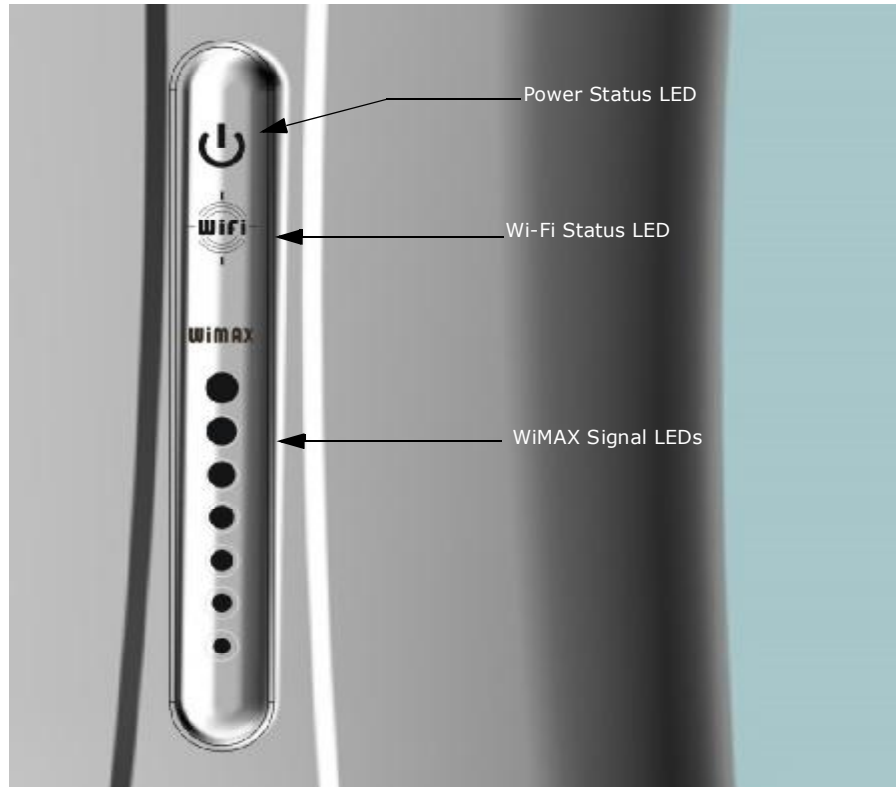


Table 1: Power Status LED

Status	Description
On Green	The unit has completed entry to a WiMAX network.
On Amber	Indicates one of the following conditions: <ul style="list-style-type: none"> ◆ After power on, indicates the unit is running its self test. ◆ Indicates that the network entry process is in progress or has restarted.
On Red	A system failure has occurred.
Off	No power is being supplied to the unit.

Wi-Fi STATUS LED The RG300 includes a Wi-Fi LED indicator that displays the Wi-Fi network status. The LED, which is located on the front panel, is described in the following table.

Table 2: Wi-Fi Status LED

Status	Description
On Green	The Wi-Fi radio is enabled and operating normally.
Flashing Green	Indicates data traffic in the Wi-Fi network.
Off	There is no Wi-Fi connection or the radio is disabled.

WiMAX SIGNAL LEDs The RG300 includes seven WiMAX signal strength LED indicators that display the current WiMAX receive signal status. The LEDs, which are located on the front panel, are described in the following table.


Table 3: WiMAX Signal Status LEDs

LED	Status	Description
1	On Blue	Indicates the receive signal is 5 dB or more.
2	On Blue	Indicates the receive signal is 8 dB or more.
3	On Blue	Indicates the receive signal is 12 dB or more.
4	On Blue	Indicates the receive signal is 15 dB or more.
5	On Blue	Indicates the receive signal is 18 dB or more.
6	On Blue	Indicates the receive signal is 20 dB or more.
7	On Blue	Indicates the receive signal is 25 dB or more.
1-7 in sequence	On Blue	The unit is scanning frequency channels.
All 7 LEDs	Off	No power is being supplied to the unit.

LAN PORTS The RG300 provides up to four 10BASE-T/100BASE-TX RJ-45 ports. The LAN ports are standard RJ-45 Ethernet network ports that connect directly to a PC. They can also be connected to an Ethernet switch or hub to support more users.

The RJ-45 ports support automatic MDI/MDI-X operation, so you can use straight-through cables for all network connections to PCs or servers, or to other switches or hubs. The port supports auto-negotiation, so the optimum transmission mode (half or full duplex), and data rate (10 or 100 Mbps) is selected automatically.

Figure 3: Back of the RG300

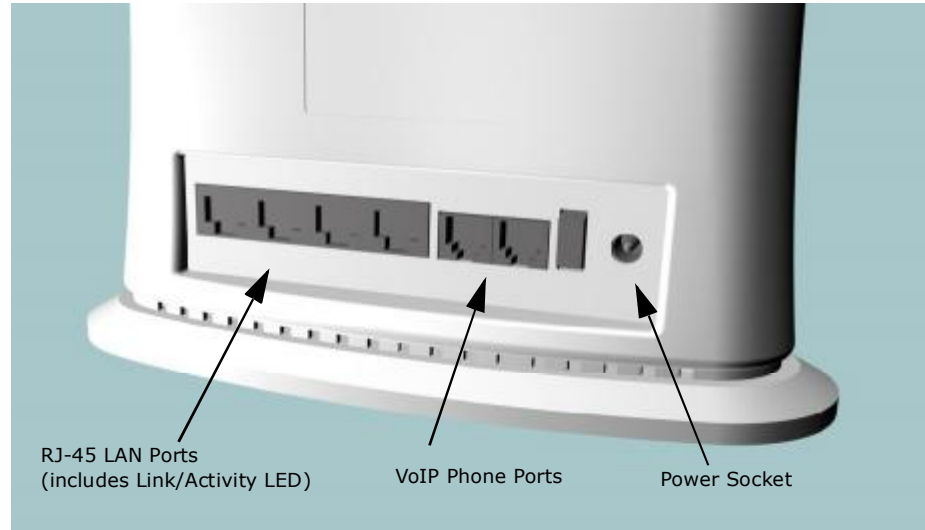

The RJ-45 ports include a built-in LED status indicator. This LED indicator is described in the following table.

Table 4: LAN Port Status LED

LED	Status	Description
Link/Activity	On Green	Ethernet port has a valid link with an attached device.
	Flashing Green	The port is transmitting or receiving data.
	Off	Ethernet port has no link with another device.

VOIP PHONE PORTS The RG300 also provides up to two RJ-11 telephone ports that connect directly to a standard (analog) telephone set. This allows a regular telephone to be used for making VoIP calls over the Internet.


POWER ADAPTER SOCKET The power socket is located on the rear panel of the RG300. The power socket is for the AC power adapter connection.

The unit is powered on when connected to its AC power adapter, and the power adapter is connected to an AC power source between 100-240 volts at 50-60Hz.

RESET BUTTON The Reset button is located on the base of the RG300 and is used to reset the unit or restore the factory default configuration. If you press the button for less than 1 second, the unit will perform a hardware reset. If you press and hold down the button for 5 seconds or more, any configuration

changes you may have made are removed, and the factory default configuration is restored to the unit.

Figure 4: Base of the RG300

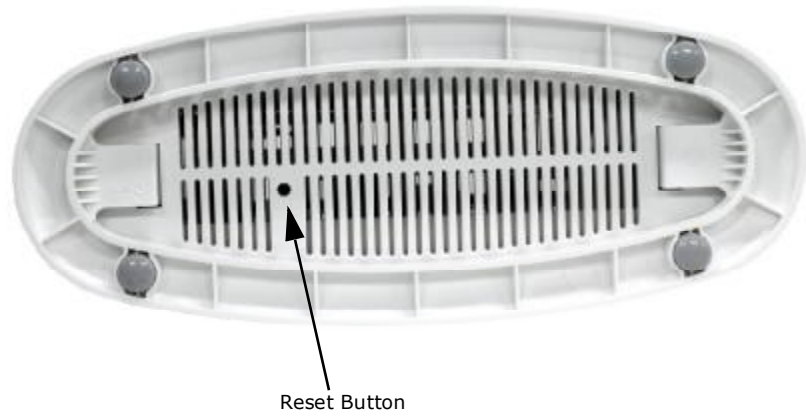

2

INSTALLING THE RG300

This section describes how to install and connect the RG300 WiMAX 802.16e Indoor Gateway.

PACKAGE CHECKLIST

The RG300 package includes:

- ◆ RG300 unit (RG300-2.3 or RG300-2.5)
- ◆ RJ-45 Category 5 network cable
- ◆ AC power adapter
- ◆ Quick Installation Guide
- ◆ User Guide CD

INSTALLATION OVERVIEW

Before installing the RG300, verify that you have all the items listed in the package checklist above. If any of the items are missing or damaged, contact your local dealer. Also, be sure you have all the necessary tools and cabling before installing the RG300.

SELECT A LOCATION

The RG300 can be installed indoors on any horizontal surface, such as a desktop or shelf.

When selecting a suitable location for the device, consider these guidelines:

- ◆ Select a cool, dry place, which is out of direct sunlight.
- ◆ The device should have adequate space (approximately two inches) on all sides for proper air flow.
- ◆ The device must be near an AC power outlet that provides 100 to 240 V, 50 to 60 Hz.

- ◆ The device should be accessible for network cabling and allow the status LED indicators to be clearly visible.




NOTE: If the RG300 displays a weak WiMAX receive signal, try moving it to another location.

CABLE CONNECTIONS

The RG300 is a plug-and-play device, so once it has been connected to your PC and powered up, it is fully operable.

Functioning as a gateway, the unit routes traffic between a WiMAX service provider's base station and PCs or notebooks in the local network.

Figure 5: RG300 Connections

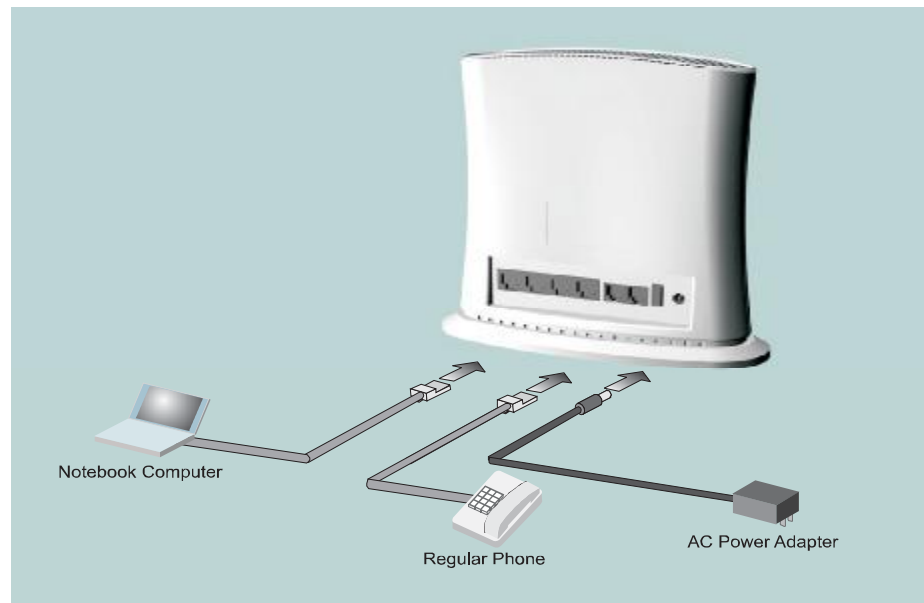

To connect the RG300, follow these steps:

1. Power on the RG300 by first connecting the AC power adapter to the unit's power socket, and then connecting the adapter to an AC power source.



CAUTION: Use ONLY the power adapter supplied with the RG300. Otherwise, the product may be damaged.

2. Observe the Indicator LEDs. When you power on the RG300, verify that the Power LED turns on and that the other LED indicators start functioning as described under "[RG300 Hardware Description](#)" on [page 15](#).
3. Connect Category 5 or better Ethernet cables from the RG300's LAN ports to the network ports of your PCs. Alternatively, you can connect the LAN port to an Ethernet switch or other device. Make sure the length of each cable does not exceed 100 meters (328 ft).

If a PC is powered on, the RJ-45 LAN port LED on the RG300 will turn on to indicate a valid link.

4. (Optional) Connect a standard (analog) telephone set to one of the RG300's VoIP ports using standard telephone cable with RJ-11 plugs.

The RG300 enables VoIP calls to be made through the unit using a standard (analog) telephone set connected to the VoIP port, or from PCs or other network devices connected to the LAN ports. Standard Session Initiation Protocol (SIP) technology is used to make VoIP calls. You must access the web interface and configure settings for your SIP service provider before being able to make VoIP calls.

5. Use your PC's web browser to access the unit's management interface and run the Setup Wizard to make any configuration changes. For more information, see Chapter 3, "[Initial Configuration](#)."

3

INITIAL CONFIGURATION

The RG300 initial configuration steps can be made through its web management interface using the Setup Wizard. It is recommended to make the initial changes by connecting a PC directly to one of the RG300's LAN ports.

ACCESSING THE WEB MANAGEMENT INTERFACE

The RG300 has a default IP address of 192.168.1.1 and a subnet mask of 255.255.255.0. If your PC is set to have an IP address assigned by DHCP (Dynamic Host Configuration Protocol), you can connect immediately to the web management interface. Otherwise, you must first check if your PC's IP address is set on the same subnet as the RG300 (that is, the PC's IP address starts 192.168.1.x).



NOTE: If your RG300 unit is not configured with the standard default IP address and login Username/Password, use the default values on the label affixed to the unit.

In the web browser's address bar, type the default IP address: `http://192.168.1.1`.

The web browser displays the RG300's login page.

Figure 6: Login Page

A screenshot of the web management interface's login page. At the top left is the 'AV3' logo. Below it, the text reads 'Please input the username and password of the device manager.' There are three input fields: 'Username', 'Password', and 'Language'. The 'Language' dropdown menu is currently set to 'English'. A 'LOGIN' button is positioned at the bottom center of the form area.

Logging In – Type the default User Name “admin” and Password “admin,” then click Login. The home page displays.

Language – Selects English or Traditional Chinese as the web interface language.




NOTE: It is recommended that you configure a user password as the first step under “Administrator Settings” on page 32 to control management access to the unit.

HOME PAGE The home page displays the current status of the WiMAX connection.

To configure basic settings for the current operating mode, click Basic Setup. For more information, see “Using the Basic Setup Wizard” on page 25.

Alternatively, to configure more detailed settings, click Advanced Setup. For more information, see “The Advanced Setup Menu” on page 27.

Figure 7: Home Page

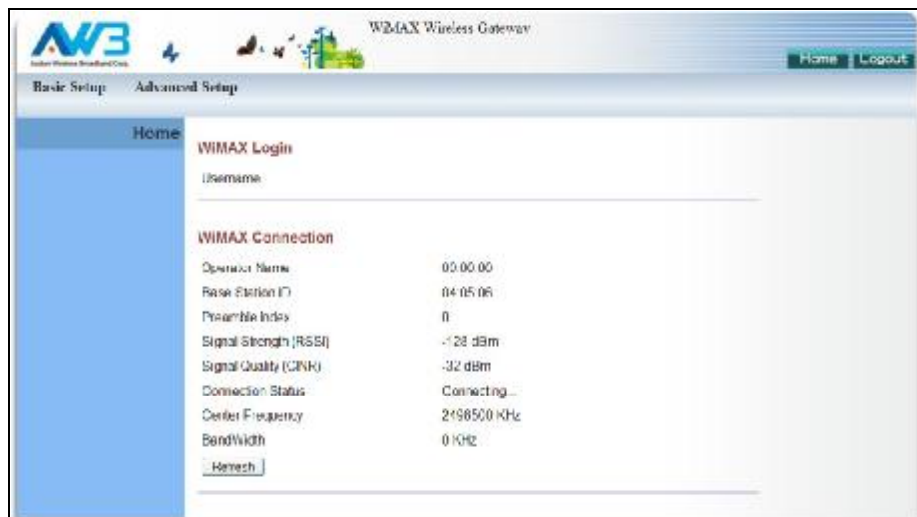

The following parameters are displayed on the home page:

- ◆ **Username** – Describes the WiMAX network login name.
- ◆ **Operator Name** – The identity of the operator network.
- ◆ **Base Station ID** – The identifier of the connected base station.
- ◆ **Preamble Index** – A number that identifies the sector on the connected base station.
- ◆ **Signal Strength** – The current signal strength value of the received WiMAX radio signal.

- ◆ **Signal Quality** – An indication of the carrier-to-interference-plus-noise-ratio (CINR), which measures the strength of the receive signal compared to other interference and noise.
- ◆ **Connection Status** – The current status of the WiMAX connection.
- ◆ **Central Frequency** – The center frequency of the WiMAX signal.
- ◆ **Bandwidth** – The bandwidth of the WiMAX signal.

USING THE BASIC SETUP WIZARD


The Basic Setup Wizard takes you through the basic configuration steps for the RG300.

Launching the Basic Setup Wizard – To perform basic configuration, click Basic Setup on the home page.

When configuring the unit through the Setup Wizard you will need to proceed through the following steps:

1. **WiMAX Account Login** – Configures user authentication settings for connection to the WiMAX network.

Figure 8: WiMAX Account Login

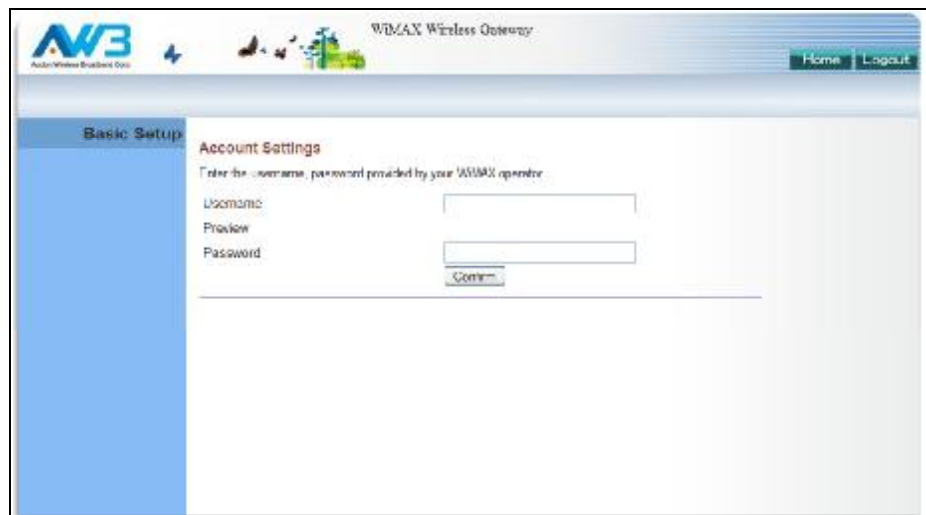

The screenshot shows a web interface for a WiMAX Wireless Gateway. At the top left is the logo for AW3 (Aster Wireless Broadband Co.). At the top right are 'Home' and 'Logout' links. A blue sidebar on the left is labeled 'Basic Setup'. The main content area is titled 'Account Settings' and contains the text 'Enter the username, password provided by your WIMAX operator'. Below this text are three input fields: 'Username', 'Preview', and 'Password'. A 'Continue' button is located below the 'Password' field.


The following parameters are displayed on this page:

- **Username** – The user name required for authentication as provided by the WiMAX operator.
- **Preview** – Displays the current user account that will be used.

- **Password** – The user password required for authentication as provided by the WiMAX operator.


2. **Apply Settings** – Click “Confirm” to apply the basic settings.

Figure 9: Confirm Settings

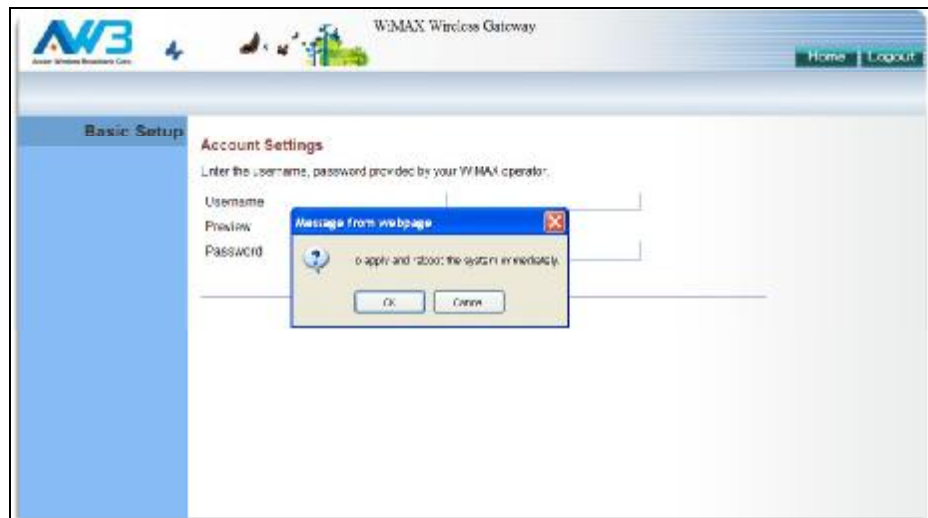

3. **Basic Setup Finished** – When the Basic Setup steps are completed the unit reboots and attempts to connect to the specified WiMAX network. Log in again to return to the Home page.

Figure 10: Setup Wizard Finished

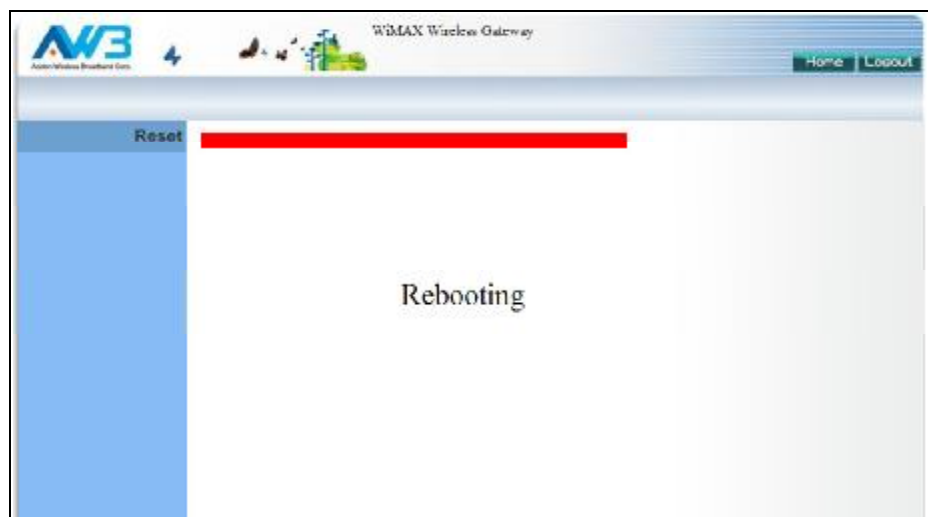

THE ADVANCED SETUP MENU

The Advanced Setup menu provides access to all the configuration settings available for the RG300.

Figure 11: Advanced Setup



Each primary menu item is summarized below with links to the relevant section in this guide where configuration parameters are described in detail:

- ◆ **System** – Configures general device settings. See [page 30](#).
- ◆ **WAN** – Configures WAN settings. See [page 38](#).
- ◆ **LAN** – Configures LAN settings. See [page 44](#).
- ◆ **NAT** – Configures Network Address Translation settings. See [page 47](#).
- ◆ **Firewall** – Configures firewall settings. See [page 52](#).
- ◆ **Route** – Configures static routing settings. See [page 59](#).
- ◆ **UPnP** – Enables UPnP. See [page 62](#).
- ◆ **VoIP** – Configures VoIP SIP settings. See [page 64](#).
- ◆ **Wi-Fi** – Configures Wi-Fi settings. See [page 75](#).
- ◆ **QoS** – Configures QoS settings. See [page 84](#).

COMMON WEB PAGE BUTTONS

The web management interface includes some common buttons that are displayed at the top of each page.

Figure 12: Common Web Page Buttons



The list below describes these common buttons:

- ◆ **Apply** — Applies all new configuration changes on the current page and saves them to memory.
- ◆ **Home** — Returns to the web management home page.
- ◆ **Logout** — Immediately closes the current web management session.
- ◆ **Reboot** — The Reboot button appears after some configuration changes that require the Gateway to be reset. You can make as many changes as you want before restarting the Gateway. All changes are saved as they are made, but do not become active until after a restart.

SECTION II

WEB CONFIGURATION

This section provides details on configuring the RG300 using the web browser interface.

This section includes these chapters:

- ◆ "System Settings" on page 30
- ◆ "WAN Configuration" on page 38
- ◆ "LAN Configuration" on page 44
- ◆ "NAT Configuration" on page 47
- ◆ "Firewall Configuration" on page 52
- ◆ "Routing Configuration" on page 59
- ◆ "UPnP Configuration" on page 62
- ◆ "VoIP Settings" on page 64
- ◆ "Wi-Fi Settings" on page 75
- ◆ "QoS Configuration" on page 84

4

SYSTEM SETTINGS

The RG300's System menu allows you to perform general management functions for the unit, including setting the system time, configuring an access password, and upgrading the system software.

The System configuration pages include the following options:

- ◆ "System Status" on page 31
- ◆ "Administrator Settings" on page 32
- ◆ "Firmware Upgrade" on page 33
- ◆ "Configuration Tools" on page 34
- ◆ "System Time" on page 35
- ◆ "System Log" on page 36
- ◆ "Reset" on page 37

SYSTEM STATUS

The system status page displays connectivity status information for the unit's WiMAX (WAN) and LAN interfaces, and the number of clients connected to the network.

Figure 13: System Status – Internet

Internet	WAN IP	0.0.0
	Subnet Mask	0.0.0
	Gateway	0.0.0
	Primary DNS	0.0.0
	Secondary DNS	0.0.0
	Connection Type	dhcp

Internet – Displays WAN (WiMAX) connection status:

- ◆ **WAN IP** – Displays the IP address assigned by the service provider.
- ◆ **Subnet Mask** – Displays the WAN subnet mask assigned by the service provider.
- ◆ **Gateway** – Displays the WAN gateway address assigned by the service provider.
- ◆ **Primary DNS** – Displays the WAN primary DNS address.
- ◆ **Secondary DNS** – Displays the WAN secondary DNS address.
- ◆ **Connection Type** – Displays the connection type for the WAN. Either “fixed” for a static IP setting, or “dhcp” for dynamic IP assignment.

Figure 14: System Status – Gateway

Gateway	IP Address	192.168.1.1
	Subnet Mask	255.255.255.0
	DHCP Server	Enable
	Firewall	Disable

Gateway – Display system IP settings, DHCP server, and firewall status:

- ◆ **IP Address** – Displays the unit's IP address.
- ◆ **Subnet Mask** – Displays the subnet mask.
- ◆ **DHCP Server** – Displays the DHCP server status.
- ◆ **Firewall** – Displays the firewall status.

Figure 15: System Status – Information

Information	Connected Clients	1
	LAN MAC Address	00:08:01:02:03:05
	LAN MTU Size	1500
	WAN MAC Address	00:08:01:02:03:04
	WAN MTU Size	1400
<input type="button" value="Refresh"/>		

Information – Displays the number of connected clients, as well as the unit’s LAN and WAN MAC addresses:

- ◆ **Connected Clients** – Displays the number of connected clients, if any.
- ◆ **LAN MAC Address** – Displays the LAN MAC address.
- ◆ **LAN MTU Size** – The maximum transmission unit size in bytes.
- ◆ **WAN MAC Address** – Displays WAN MAC address.
- ◆ **WAN MTU Size** – The maximum transmission unit size in bytes.

ADMINISTRATOR SETTINGS

The Administrator Settings page enables you to change the password for management access to the RG300.

Figure 16: Setting a Password

Admin	Set a password to restrict management access to the device.	
Password Setup	Current Password	<input type="password"/>
	New Password	<input type="password"/>
	Confirm New Password	<input type="password"/> (3-12 Characters)
Language Setup	Language English <input type="button" value="v"/>	

The following parameters are displayed on this page:

- ◆ **Current Password** – You need to first enter your current administrator password to be able to configure a new one. (Default: admin)



NOTE: If your RG300 unit is not configured with the standard default login Username/Password, use the default values on the label affixed to the unit.

- ◆ **New Password** – Enter a new administrator password. (Range: 3~12 characters)

- ◆ **Confirm New Password** – Enter the new password again for verification. (Range: 3~12 characters)
- ◆ **Language** – Selects English or Traditional Chinese as the web interface language.

FIRMWARE UPGRADE

The Firmware Upgrade page enables you to download new software to the unit.

Figure 17: Firmware Upgrade


The following parameters are displayed on this page:

- ◆ **Upgrade** – Downloads an operation code file from the web management station to the RG300 using HTTP. Use the Browse button to locate the code file locally on the management station and check the Reset Configuration to restore factory defaults. Click Apply to proceed.
- ◆ **Auto Upgrade** – Provides a method to automatically upgrade the Gateway when new code is available, as indicated by the contents of an information file provided by the WiMAX service operator. The Auto Upgrade information file and code file can be located on the same server or different servers.
 - **Enable** – Enables the automatic upgrade feature.
 - **Update Interval** – A time interval (in seconds) for checking the Info URL for new software information.
 - **Limit Rate** – Places a limit on the firmware download rate from the server.
 - **Info URL** – A text string that indicates the location of an Auto Upgrade information file on an FTP server. The file contains information on the version of software available, and the FTP server on which it is located. (For example: <ftp://192.168.1.16/autoupgrade/RG300-autoupgrade.info>)

CONFIGURATION TOOLS

The Configurations Tools page allows you to restore factory default settings, or save and restore the unit’s configuration settings to or from a file on the management station.

Figure 18: Configuration Tools

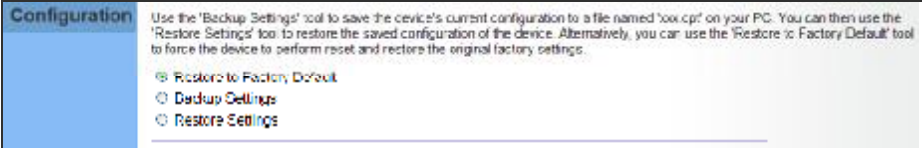

The following parameters are displayed on this page:

- ◆ **Restore Factory Default Configuration** – Resets the unit to its factory default settings. When you select "Restore Factory Default Configuration" and click Apply, a confirmation page displays. Click OK to continue.
- ◆ **Backup Settings** – Saves the current configuration settings to a file on the web management station.
- ◆ **Restore Settings** – Restores a saved configuration file to the unit. Configuration files are plain-text files that can be edited directly to modify settings (not all parameters need be defined). You can use the Browse button to locate the file on the web management station.
 - **Fully Restore Settings** – Restores all settings that are defined in the uploaded configuration file. Any undefined settings are returned to factory defaults.
 - **Merge Settings** – Restores defined settings in the uploaded configuration file. All other undefined settings are not changed.

Figure 19: Restore Configuration Settings



SYSTEM TIME

The RG300 uses the Simple Network Time Protocol (SNTP) to set its internal clock based on periodic updates from a time server. Maintaining an accurate time on the device enables the system log to record meaningful dates and times for event entries.

SNTP uses Coordinated Universal Time (or UTC, formerly Greenwich Mean Time, or GMT) based on the time at the Earth's prime meridian, zero degrees longitude. To display a time corresponding to your local time, you must select your time zone.

Figure 20: System Time


The following parameters are displayed on this page:

- ◆ **Enable** – Enables the unit to set its internal clock based on periodic updates from a time server. The unit acts as an SNTP client, periodically sending time synchronization requests to a specified time server. Alternatively, you can select “None” and set the time and date manually.
- ◆ **Time Server Address** – The IP address of a time server that the unit attempts to poll for a time update.
- ◆ **Current Time (hh:mm:ss)** – The current time of the system clock.
- ◆ **New Time (hh:mm:ss)** – Sets the system clock to the time specified.
- ◆ **Sync with host** – Sets the unit’s time from the web management PC’s system time.
- ◆ **Current Date (yyyy:mm:dd)** – The current date of the system clock.
- ◆ **New Date (yyyy:mm:dd)** – Sets the system clock date.
- ◆ **Set Time Zone** – SNTP uses Coordinated Universal Time (or UTC, formerly Greenwich Mean Time, or GMT) based on the time at the Earth’s prime meridian, zero degrees longitude. To display a time corresponding to your local time, you must select your time zone from the pull-down list.

RESET

The Reset page allows you to restart the device's software. If the unit stops responding correctly or in some way stops functioning, performing a reset can clear the condition.

Figure 22: Reset Unit

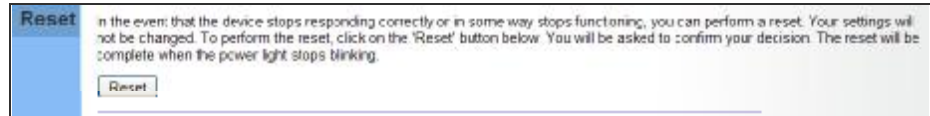

Reset – Resets the unit. All current settings are retained.

5

WAN CONFIGURATION

The information in this chapter covers the configuration options for the RG300's WAN connection.

The WAN configuration pages include the following options:

- ◆ ["WAN Settings" on page 39](#)
- ◆ ["DNS" on page 42](#)
- ◆ ["DDNS" on page 43](#)

WAN SETTINGS

Select the WAN connection type used by your service provider and specify DNS (Domain Name System) servers.

Figure 23: WAN Settings

The screenshot shows the WAN Settings configuration interface. It includes a sidebar with 'WAN Settings' and 'Connection Type' highlighted. The main content area contains the following elements:

- WAN Settings:** Title and subtitle: "To configure the WAN, select your WAN connection type from the drop-down menu."
- Connection Type:** Two radio buttons: "DHCP IP Address" (selected) and "Static IP Address".
- Retries:** A text input field with the value "1" and a range indicator "(1 - 10000)".
- Timeout:** A text input field with the value "1" and a range indicator "(1 - 3600 Seconds)".
- L2TP:** A section header followed by a description: "The Layer 2 Tunneling Protocol (L2TP) is a protocol for virtual private networks." Below it is an "Enable" checkbox that is unchecked.
- PPTP:** A section header followed by a description: "The Point-to-Point Tunneling Protocol (PPTP) is a protocol for virtual private networks." Below it is an "Enable" checkbox that is checked.

The unit can be connected to your ISP in one of the following ways:

- ◆ **DHCP IP Address** – Selects configuration for an Internet connection using DHCP for IP address assignment.
- ◆ **Static IP Address** – Selects configuration for an Internet connection using a fixed IP assignment.
- ◆ **Retries** – The maximum number of times the Gateway sends a DHCP request to a DHCP server. (Range: 1-10000)
- ◆ **Timeout** – The maximum time period (in seconds) the Gateway waits for a response from a DHCP server before it resends a request. (Range: 1-3600 seconds)
- ◆ **L2TP** – Selects configuration for an Internet connection using the Layer 2 Tunneling Protocol, an access protocol often used for virtual private networks.
- ◆ **PPTP** – Selects configuration for an Internet connection using the Point-to-Point Tunneling Protocol, an access protocol often used for virtual private networks.



NOTE: For the Dynamic IP Address (DHCP) option, the unit requires no further configuration. Selecting other WAN types displays the parameters that are required for configuring the connection.

DYNAMIC IP ADDRESS For dynamic IP assignment from the service provider, the unit functions as a Dynamic Host Configuration Protocol (DHCP) client. When enabled, no other settings are required.

Figure 24: Dynamic IP Address

The screenshot shows the WAN Settings page with the following configuration:

- WAN Settings:** To address the WAN, select a connection type from the following options.
- Connection Type:**
 - DHCP IP Address: Obtain an IP Address automatically from service provider.
 - Static IP Address: Use a Static IP Address. Your service provider gives a Static IP Address to access Internet service.
- Retries:** 1 (1 ~ 10000)
- Timeout:** 1 (1 ~ 3600 Seconds)
- L2TP:** To operate as a client for L2TP, select a protocol (PPTP) for the tunneling protocol.
 - Enable:**
- PPTP:** To operate as a client for PPTP, select a protocol (L2TP) for the tunneling protocol.
 - Enable:**

STATIC IP SETTINGS Selecting Static IP Address for the WAN type enables you to enter static IP settings as assigned by the service provider.

Figure 25: Static IP Settings

The screenshot shows the WAN Settings page with the following configuration:

- WAN Settings:** To address the WAN, select a connection type from the following options.
- Connection Type:**
 - DHCP IP Address: Obtain an IP Address automatically from service provider.
 - Static IP Address: Use a Static IP Address. Your service provider gives a Static IP Address to access Internet service.
- IP Address:** [] . [] . [] . []
- Netmask:** [] . [] . [] . []
- Gateway:** [] . [] . [] . []

The following parameters are displayed in this section on this page:

- ◆ **IP Address** – The IP address provided by your service provider. Valid IP addresses consist of four decimal numbers, 0 to 255, separated by periods.
- ◆ **Netmask** – Indicates the subnet mask, such as 255.255.255.0.
- ◆ **Gateway** – The gateway IP address provided by your service provider.

L2TP SETTINGS If your service provider supports Layer 2 Tunneling Protocol (L2TP) for your Internet connection, configure the settings described below.

Figure 26: L2TP Settings

The following parameters are displayed in this section on this page:

- ◆ **Enable** – Enables the L2TP settings.
- ◆ **Server IP** – The IP address of the L2TP server, as specified by the service provider.
- ◆ **Username** – Enter your user name for connecting to the L2TP service, as supplied by the service provider. (Range: 1-20 characters)
- ◆ **Password** – Specify the password for your connection, as supplied by the service provider. (Range: 1-20 characters)

PPTP SETTINGS If your service provider supports Point-to-Point Tunneling Protocol (PPTP) for your Internet connection, configure the settings described below.

Figure 27: PPTP Settings

The following parameters are displayed in this section on this page:

- ◆ **Enable** – Enables the PPTP settings.
- ◆ **Server IP** – The IP address of the PPTP server, as specified by the service provider.
- ◆ **Username** – Enter your user name for connecting to the PPTP service, as supplied by the service provider. (Range: 1-20 characters)
- ◆ **Password** – Specify the password for your PPTP connection, as supplied by the service provider. (Range: 1-20 characters)

DNS

DNS (Domain Name System) server addresses are usually provided by service providers, however if you want to specify certain servers, the DNS page enables you to enter primary and secondary DNS addresses.

Figure 28: DNS Settings

DNS	<p>At least one DNS server (Domain Name System) IP address and (optional) secondary DNS address must be specified in order to enable DNS. If you do not specify a DNS server, the system will use the default DNS server. If you specify a DNS server, you must specify a primary DNS server and a secondary DNS server. If you specify a secondary DNS server, you must also specify a primary DNS server. If you do not specify a primary DNS server, the system will use the default DNS server. If you specify a primary DNS server, you must also specify a secondary DNS server. If you specify a secondary DNS server, you must also specify a primary DNS server.</p> <p>Primary DNS Address <input type="text" value="."/><input type="text" value="."/><input type="text" value="."/><input type="text" value="."/></p> <p>Secondary DNS Address (optional) <input type="text" value="."/><input type="text" value="."/><input type="text" value="."/><input type="text" value="."/></p>
------------	--

The following parameters are displayed on this page:


- ◆ **Primary DNS Address** – Address of the primary DNS server, specified in the form of 0.0.0.0. (The address 0.0.0.0 disables the manual DNS setting.)
- ◆ **Secondary DNS Address (optional)** – Optional address of a secondary DNS server, specified in the form of 0.0.0.0.

DDNS

Dynamic DNS (DDNS) provides users on the Internet with a method to tie a specific domain name to the unit's dynamically assigned IP address. DDNS allows your domain name to follow your IP address automatically by changing your DNS records when your IP address changes.

The RG300 provides access to a number DDNS service providers, such as DynDns.org, Easydns.com, and ZoneEdit.com. To set up an DDNS account, visit the website of one of the supported service providers.

Figure 29: DDNS Settings

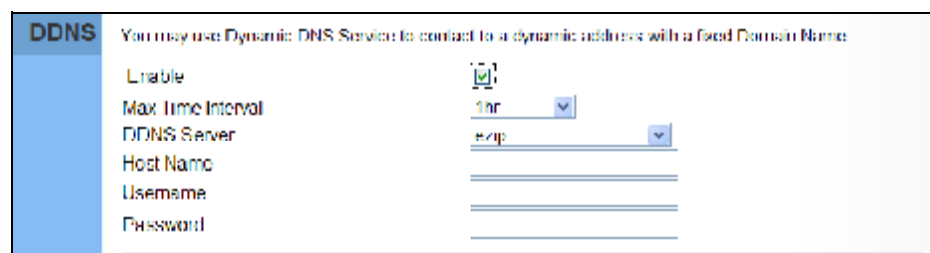

DDNS	You may use Dynamic DNS Service to contact to a dynamic address with a fixed Domain Name
Enable	<input checked="" type="checkbox"/>
Max Time Interval	1hr
DDNS Server	ezip
Host Name	
Username	
Password	

The following items are displayed in this section on this page:

- ◆ **Enable** — Enables the DDNS service.
- ◆ **Max Time Interval** — The maximum time period before the Gateway sends an update to the DDNS provider. (Options: 1hr, 3hr, 6hr, 8hr, 12hr, 1 day, 3 days, 1 week)
- ◆ **DDNS Server** — Specifies the DDNS service provider, DynDns.org, Freedns.afraid.org, ZoneEdit.com or Non-IP.com.
- ◆ **Host Name** — Specifies the URL of the DDNS service.
- ◆ **User Name** — Specifies your user name for the DDNS service.
- ◆ **Password** — Specifies your password for the DDNS service.

6

LAN CONFIGURATION

The information in this chapter covers the configuration options for the RG300's LAN functions.

The LAN configuration pages include the following options:

- ◆ "LAN Settings" on page 45
- ◆ "DHCP Client List" on page 46

LAN SETTINGS

The RG300 must have a valid IP address for management using a web browser and to support other features. The unit has a standard default IP address of 192.168.1.1. You can use this IP address or assign another address that is compatible with your existing local network. The unit can also be enabled as a Dynamic Host Configuration Protocol (DHCP) server to allocate IP addresses to local PCs.



NOTE: If your RG300 unit is not configured with the standard default IP address, use the default value on the label affixed to the unit.

The RG300 includes a DHCP server that can assign temporary IP addresses to any attached host requesting the service. Addresses are assigned to clients from a common address pool configured on the unit. Configure an address pool by specifying start and end IP addresses. Be sure not to include the unit's IP address in the address pool range.

Figure 30: LAN Settings

LAN Settings		You can disable DHCP to set static IP addresses to your client PCs			
IP Address		192	168	1	1
Subnet Mask		255	255	255	0
The Gateway acts as DHCP Server		<input checked="" type="checkbox"/>			
IP Pool Starting Address		192	168	1	100
IP Pool Ending Address		192	168	1	150
Lease Time		120m			

The following parameters are displayed on this page:

- ◆ **IP Address** – The IP address of the unit. Valid IP addresses consist of four decimal numbers, 0 to 255, separated by periods. The standard default setting is 192.168.1.1.
- ◆ **Subnet Mask** – Indicates the local IP subnet mask. The default setting is 255.255.255.0.
- ◆ **The Gateway acts as DHCP Server** – Check this box to enable the DHCP server.
- ◆ **IP Pool Starting/Ending Address** – Specifies the start and end IP address of a range that the DHCP server can allocate to DHCP clients. You can specify a single address or an address range. Note that the address pool range must be in the same subnet as the unit's IP setting.
- ◆ **Lease Time** – Selects a time limit for the use of an IP address from the IP pool. When the time limit expires, the client has to request a new IP address. (Options: 1hr, 3hr, 6hr, 8hr, 12hr, 1 day, 3 days, 1 week)

DHCP CLIENT LIST

The DHCP Client List page enables you to see the MAC address of devices that are currently connected to the unit and have been assigned an IP address by the DHCP server.

Figure 31: DHCP Client List



MAC Address	IP Address	Host Name
00:20:5A:00:20:34	192.168.1.100	?

The information in this chapter covers the configuration options for the RG300's Network Address Translation (NAT) functions.


The NAT configuration pages include the following options:

- ◆ "NAT Settings" on page 48
- ◆ "Port Mapping" on page 49
- ◆ "DMZ" on page 50
- ◆ "ALG" on page 51

NAT SETTINGS

Network Address Translation (NAT) is a standard method of mapping multiple "internal" IP addresses to one "external" IP address on devices at the edge of a network. For the RG300, the internal (local) IP addresses are the IP addresses assigned to local PCs by the DHCP server, and the external IP address is the IP address assigned to the WiMAX interface.

Figure 32: NAT Settings



The following item is displayed on this page:

- ◆ **Enable** – Enables NAT on the device.

PORT MAPPING

Using the NAT Port Mapping feature, remote users can access different servers on your local network using your single public IP address.

Remote users accessing services such as web or FTP at your local site through your public IP address, are redirected (mapped) to other local server IP addresses and TCP/UDP port numbers. For example, if you set Type/Public Port to TCP/80 (HTTP or web) and the Private IP/Port to 192.168.7.9/80, then all HTTP requests from outside users forwarded to 192.168.7.9 on port 80. Therefore, by just using your external IP address provided by your ISP, Internet users can access the services they need at the local addresses to which you redirect them.

The more common TCP service port numbers include: HTTP: 80, FTP: 21, Telnet: 23, and SSH: 22.

Figure 33: Port Mapping

The following parameters are displayed on this page:

- ◆ **Private IP** – The IP address of the server on the local Ethernet network. The specified address must be in the same subnet as the RG300 and its DHCP server address pool. Alternatively, the IP address can be set by selecting a PC from the DHCP client list.
- ◆ **Use Client List** – Allows the Private IP to be selected from the DHCP client list.
- ◆ **Private Port** – Specifies the TCP/UDP port number used on the local server for the service. (Range: 1-65535)
- ◆ **Public Port** – Specifies the public TCP/UDP port used for the service on the WAN interface. (Range: 1-65535)
- ◆ **Services** – Specifies port numbers for some of the more common services. (Options: FTP, SSH, Telnet, SMTP, HTTP, HTTPS)
- ◆ **Comment** – A text comment for the forwarding rule.
- ◆ **Add Rules** – Adds the defined rule to the port forwarding table. Use the Delete button next to a rule to remove it from the table.

DMZ

If you have a client PC that cannot run an Internet application properly from behind the NAT firewall, you can open the client up to unrestricted two-way internet access by defining a virtual-DMZ (virtual-demilitarized-zone) host.

Figure 34: DMZ Settings



The following parameters are displayed on this page:

- ◆ **Enable** – Enables the feature.
- ◆ **DMZ Host** – Specifies the IP address of the virtual DMZ host. Alternatively, the host IP can be set by selecting a PC from the DHCP client list.
- ◆ **Use Client List** – Allows the host IP to be selected from the DHCP client list.




NOTE: Adding a host to the DMZ may expose your local network to a variety of security risks, so only use this option as a last resort.

ALG

The RG300 supports the passthrough of three of the most commonly used VPN protocols; PPTP, L2TP, and IPsec, as well as VoIP SIP traffic. The VPN protocols allow remote users to establish a secure connection to their corporate network. If your service provider supports VPNs, then these protocols can be used to create an authenticated and encrypted tunnel for passing secure data over the Internet (that is, a traditionally shared data network).

Figure 35: ALG Settings

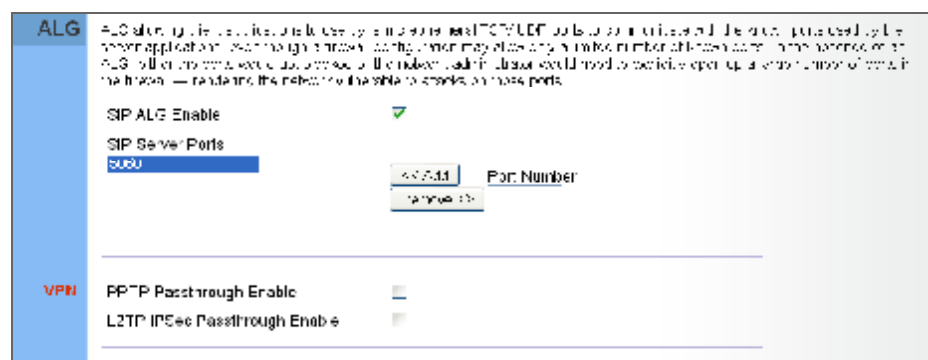

The following items are displayed on this page:

- ◆ **SIP ALG Enable** — Enables the passthrough of VoIP SIP traffic on the configured server port numbers.
- ◆ **SIP Server Ports** — Lists the SIP server ports used for VoIP traffic.
- ◆ **Port Number** — Adds a new SIP Server port number.
- ◆ **PPTP Passthrough** — PPTP (Point-to-Point Tunneling Protocol) provides a secure tunnel for remote client access to a PPTP security gateway. PPTP includes provisions for call origination and flow control required by ISPs.
- ◆ **L2TP IPsec Passthrough** — L2TP (Layer 2 Tunneling Protocol) merges the best features of PPTP and the Layer 2 Forwarding (L2F) protocol. Like PPTP, L2TP requires that the ISP's routers support the protocol. IPsec (Internet Protocol Security) encrypts and authenticates entire IP packets and encapsulates them into new IP packets for secure communications between networks.

The information in this chapter covers the configuration options for the RG300's firewall functions.


The Firewall configuration pages include the following options:

- ◆ "Firewall Settings" on page 53
- ◆ "Client Filtering" on page 54
- ◆ "Port Filtering" on page 55
- ◆ "MAC Filtering" on page 56
- ◆ "URL Filtering" on page 57
- ◆ "Host Filtering" on page 58

FIREWALL SETTINGS

The RG300 provides extensive firewall protection by restricting connection parameters to limit the risk of intrusion and defending against a wide array of common hacker attacks. You can also block access to the Internet from clients on the local network based on IP addresses and TCP/UDP port numbers, or specific MAC addresses.

Figure 36: Firewall Settings

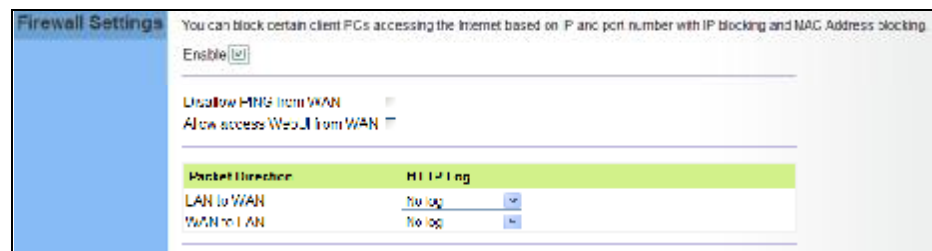

The following parameters are displayed on this page:

- ◆ **Enable** – Enables all firewall features.
- ◆ **Disallow PING from WAN side** – Prevents pings on the unit’s WiMAX interface from being routed to the network.
- ◆ **Allow Access WebUI from WAN** – Allows a user to be able to log into the Gateway web interface from a remote location.
- ◆ **HTTP Log** – Enables LAN-to-WAN and WAN-to-LAN HTTP traffic to be logged. The logged information can be viewed on the system log page.

CLIENT FILTERING

You can block access to the Internet from clients on the local network by specifying IP addresses and TCP/UDP port numbers. You can configure up to five IP filters on the unit.

Figure 37: Client Filtering Settings

Client Filtering You can set here to block certain client PCs accessing the Internet based on IP and port number with IP blocking

Target IP: []-[]-[]-[]-[] ~ Any

Destination Port Range: []-[] : Any

Protocol: tcp udp Any

This function need to enable firewall first.

Target IP	Destination Port Range	Protocol	Operation
empty data			


The following parameters are displayed on this page:

- ◆ **Target IP** – Specifies an IP address or range on the local network to filter.
- ◆ **Destination Port Range** – Specifies a TCP/UDP port number range to filter. (Range: 1-65535 or Any)
- ◆ **Protocol** – Specifies the the port type. (Options: TCP, UDP, Any)
- ◆ **Add** – Adds a new IP address to the filter table.
- ◆ **Remove** – Removes an IP address from the filter table.

PORT FILTERING

Port filtering restricts connections to limit the risk of intrusion and can defend against a wide array of common hacker attacks. The port filtering feature allows the Gateway to block traffic for a specified schedule based on TCP/UDP ports.

Figure 38: Port Filtering

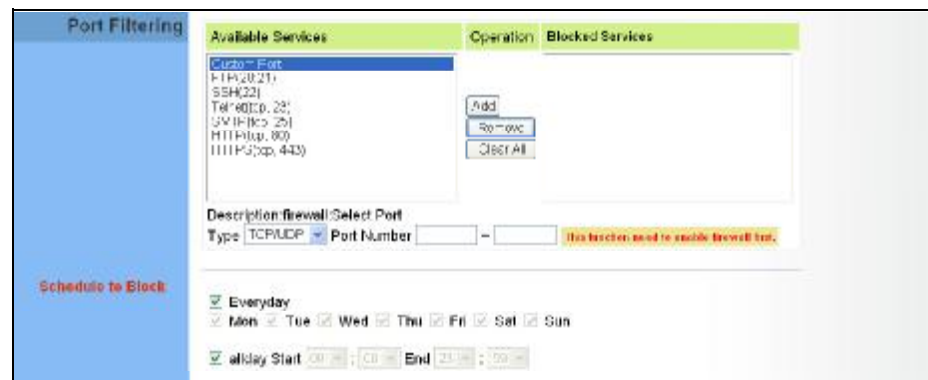

The following items are displayed on this page:

- ◆ **Available Services** — The TCP/UDP services allowed access to the Gateway. All TCP/UDP ports are open unless specified as blocked. Some common protocols are pre-defined and can be selected to “Add” to the Blocked Services. Select “Custom Port” to define other TCP/UDP port ranges to block.
- ◆ **Operation** — Adds, removes, or clears all blocked services.
- ◆ **Blocked Services** — Lists the TCP/UDP ports that are blocked
- ◆ **Type** — Specifies the port type, TCP, UDP, or TCP/UDP.
- ◆ **Port Number** — Specifies a custom-defined range of TCP/UDP ports to block.
- ◆ **Schedule to Block** — Configures the days of the week and times to block the defined traffic.

MAC FILTERING

You can block access to the Internet from clients on the local network based on MAC addresses. You can configure up to 20 MAC address filters on the unit.

Figure 39: MAC Filtering

MAC Filtering

You can set here to block certain client PCs accessing the Internet based MAC address blocking.

MAC Address: 00 : 11 : 22 : 33 : 44 : 55

Use Client List: Choose a PC

Add This function need to enable Firewall first.

Order	MAC Address	Operation
1	00:11:22:33:44:55	Remove


The following parameters are displayed on this page:

- ◆ **MAC Address** – Specifies a local PC MAC address.
- ◆ **Use Client List** – Selects a local PC MAC address from the Gateway’s DHCP client list table.
- ◆ **Add** – Adds a new MAC address to the filter table.
- ◆ **Remove** – Removes a MAC address from the filter table.

URL FILTERING

The RG300 provides a method for blocking Internet access based on Uniform Resource Locator (URL) keywords. By filtering URLs accessed from the network, users can be prevented from reaching prohibited online content.

Figure 40: URL Filtering

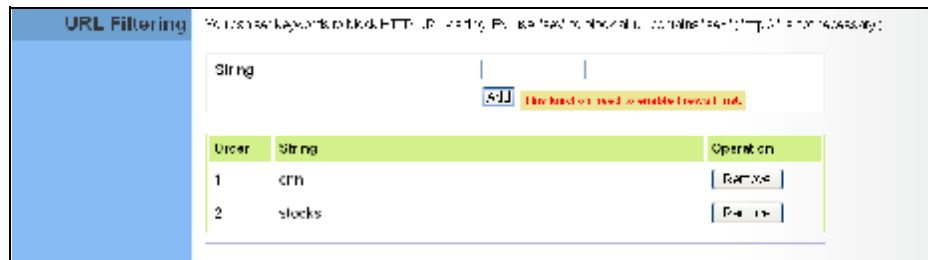


The following items are displayed on this page:

- ◆ **String** — Specifies text keyword contained in URLs that will be filtered. (Maximum 256 characters; invalid characters [\ " & ' # \].)
- ◆ **Add** — Adds a keyword string to the URL filter.
- ◆ **Remove** — Removes an entry from the filter table.

HOST FILTERING

The RG300 provides a method for blocking Internet access based on web domains. A domain name is the name of a particular web site. For example, www.fungames.com.

Figure 41: Host Filtering

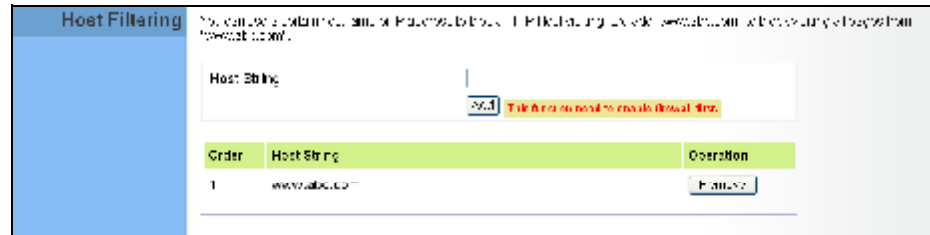

The following items are displayed on this page:

- ◆ **Host String** — Displays current Host filter. (Maximum 256 characters; invalid characters [` " & ' # \].)
- ◆ **Add** — Enters a domain name keyword for a host filtering. For example, myhost.example.com.
- ◆ **Remove** — Removes an entry from the filter table.

9

ROUTING CONFIGURATION

The information in this chapter covers the configuration options for the RG300's Routing functions.

The Routing configuration pages include the following options:

- ◆ ["Routing Table" on page 60](#)
- ◆ ["Static Route" on page 61](#)

ROUTING TABLE

The Routing Table displays the list of static routes on the unit.

Figure 42: Routing Table

Routing Table		The Routing table allows you to see how many routings on your device routing table and interface information		
Route	Gateway	Netmask	Interface	
192.168.1.0	0.0.0.0	255.255.255.0	LAN	
239.0.0.0	0.0.0.0	255.0.0.0	LAN	

The following parameters are displayed in this section on this page:

- ◆ **Route** – The IP address that identifies the IP subnet of the remote network.
- ◆ **Gateway** – The IP address of the router within the local IP subnet that forwards traffic to the remote IP subnet.
- ◆ **Netmask** – The mask that identifies the IP subnet of the remote network.
- ◆ **Interface** – Indicates the local network interface on the unit.

STATIC ROUTE

Static routes allow a manual method to set up routing between specific destination networks, subnetworks, or hosts. Static routes may be required to force the use of a specific route to a subnet. Static routes do not automatically change in response to changes in network topology, so only configure a small number of stable routes to ensure network accessibility.

Figure 43: Static Route

Route	Netmask	Gateway	Operation
empty data			

The following items are displayed on this page:

- ◆ **Enable** — Enables the configured routes in the Static Route table.
- ◆ **Destination** — A destination network or specific host to which packets can be routed.
- ◆ **Netmask** — Network mask for the associated IP subnet. This mask identifies the host address bits used for routing to specific subnets.
- ◆ **Gateway** — The IP address of the router at the next hop to which matching frames are forwarded.
- ◆ **Add** — Adds a new route to the table.

10

UPnP CONFIGURATION

The information in this chapter covers the configuration options for the RG300's Universal Plug and Play Forum (UPnP) feature.


The UPnP configuration pages include the following options:

- ◆ ["UPnP" on page 63](#)

UPnP

UPnP (Universal Plug and Play Forum) provides inter-connectivity between devices supported by the same standard.

Figure 44: UPnP Setting

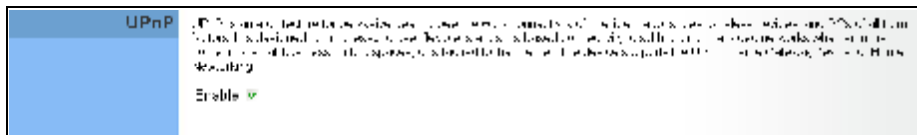

The following parameters are displayed in this section on this page:

- ◆ **UPnP** – Enables UpnP support on the unit.

Voice over Internet Protocol (VoIP) technology is a way of using the Internet to make phone calls. Phone calls can be transmitted over the Internet by encoding a voice call into data packets at one end and then decoding it back into voice calls at the other end. This encoding and decoding is from an analog signal (your voice) into a digital signal (data packets) and then back into an analog signal.

The RG300 uses Session Initiation Protocol (SIP) as the control mechanism that sets up, initiates, and terminates calls between a caller and a called party. The SIP messaging makes use of "Proxy," "Redirect," and "Registration" servers to process call requests and find the location of called parties across the Internet. When SIP has set up a call between two parties, the actual voice communication is a direct peer-to-peer connection using the standard Real-Time Protocol (RTP), which streams the encoded voice data across the network.

You can make VoIP calls by connecting a regular phone to one of the RG300's RJ-11 Phone ports. The RG300 allows up to two RJ-11 Phone ports to be configured separately with different settings.

The VoIP configuration pages include the following options:

- ◆ "SIP Account" on page 65
- ◆ "SIP Settings" on page 66
- ◆ "Speed Dial" on page 67
- ◆ "Dial Plan" on page 68
- ◆ "Call Feature" on page 70
- ◆ "Phone Settings" on page 72
- ◆ "Codecs" on page 73

SIP ACCOUNT

From the VoIP SIP Account page, you can view the SIP account numbers that have been provided by the service operator.

Figure 45: SIP Account Settings

SIP Account	
Properties of the SIP account used for VoIP service. The name of the SIP account is displayed.	
Proxy Enable <input type="checkbox"/>	
<hr/>	
Phone Line	1
Enable	<input checked="" type="checkbox"/>
Telephone Number	<input type="text"/>
The same with Telephone Number	<input type="checkbox"/>
Outgoing Display Name	<input type="text"/>
<hr/>	
The same with WiMAX Username and Password	<input type="checkbox"/>
SIP Username	<input type="text"/>
SIP Password	<input type="text"/>
Confirm Password	<input type="text"/>
<hr/>	
SIP Registrar / Domain Name	<input type="text"/>
SIP Registrar Port	<input type="text"/>
Reg Keep Live T/O Period (1 ~ 35000) Seconds	3000

The following parameters are displayed on this page:

- ◆ **Proxy Enable** — When enabled, forwards SIP messages to a SIP proxy instead of a SIP domain.
- ◆ **Enable** — Enables the VoIP ports on the Gateway.
- ◆ **Telephone Number** — The phone number that is assigned to this phone line.
- ◆ **The same with Telephone Number** — Uses the specified Telephone Number as the Outgoing Display Name.
- ◆ **Outgoing Display Name** — The name that is displayed to the other party during a call.
- ◆ **The same with WiMAX Username and Password** — Uses the WiMAX user name and password as the SIP user name and password.
- ◆ **SIP Username** — Enter your SIP user name.
- ◆ **SIP Password** — Enter your SIP password.
- ◆ **Confirm Password** — Re-enter your SIP password.

- ◆ **SIP Registrar/Domain Name** — Enter the IP address or server domain name of the SIP server.
- ◆ **SIP Registrar Port** — Enter the port associated with SIP server traffic.
- ◆ **SIP Proxy Address/Domain Name** — Address of the VoIP service provider SIP proxy server.
- ◆ **SIP Proxy Port** — The TCP port number used by the VoIP service provider's SIP proxy server.
- ◆ **Reg Keep Alive I/O Period** — The maximum time (in seconds) between keep-alive messages sent to the SIP register server.

SIP SETTINGS

The SIP Setting page allows you to configure RTP, DTMF, and FAX settings.

Figure 46: SIP Settings

Section	Setting	Value
DTMF	Phone Line	1
	DTMF Key Pad	In Band
FAX	Phone Line	1
	FAX	Disable
Session	Phone Line	1
	Session Timer Enable	<input checked="" type="checkbox"/>
	Session Timer Interval	90 ~ 65535 Seconds

The following items are displayed on this page:

- ◆ **RTP Port** — The Real-time Transport Protocol (RTP) and Real-time Control Protocol (RTCP) do not use specified port numbers. You can specify a port base that the RTP and RTCP traffic can use.
- ◆ **DTMF Key Pad** — Enables the sending of dual-tone multi-frequency (touch tone) phone signals over the VoIP connection. There are two methods to choose from:
 - **In-band** — The DTMF signals are sent over the RTP voice stream. In the case when low-bandwidth codecs are used, the DTMF signals may be distorted.
 - **RFC2833** — Uses the RFC 2833 method to relay the DTMF signals over the RTP voice stream without any distortion.

- ◆ **FAX** — Selects the method to use when sending fax messages over the VoIP network from a fax machine connected to one of the RJ-11 Phone ports on the Gateway.
 - **FAX T.38** — The SIP protocol sets up the VoIP call, then the T.38 Fax Relay protocol sends the fax data over the network.
 - **FAX Pass-Through** — Enables voice calls and faxes to be sent from the Phone port connection. For this option, fax signals are sent over the VoIP network using the voice codec, just as if it were a voice call.
- ◆ **Session Timer Enable** — Enables a limit on the duration of VoIP calls.
- ◆ **Session Timer Interval** — Sets the maximum time limit for VoIP calls.

SPEED DIAL

The Speed Dial page allows you to configure up to eight VoIP numbers that are immediately dialed when a user enters the Speed Dial Key sequence (as defined on the Dial Plan page) followed by a speed dial number.

Figure 47: Speed Dial

Speed Dial	
Order	Phone Line 1
1	_____
2	_____
3	_____
4	_____
5	_____
6	_____
7	_____
8	_____

DIAL PLAN

Dial-plan strings specify key sequences used for specific calling features (Transfer, New Call, 3-way conference), as well as defining call restriction filters.

A dial plan can filter the number and pattern of digits that a user dials to reach a particular telephone number. Access codes, area codes, specialized codes, and combinations of the number of digits dialed can all be part of a dial plan. This enables a user to predefine dialling sequences that are permitted.

The dial-plan string consists of a single digit rule. A typical example of a dial-plan string is: [0123]xxxxxx.t

Five standard dial plans are defined; Call Transfer Key, New Call Key, Set Speed Dial Key, Speed Dial Key, and 3-way Conference. Up to 10 other dial plans can be defined by the user.

Figure 48: Dial Plan Settings

Dial Plan		
Number	Action	Plan
1	Call Transfer Key	**
2	New Call Key	**
3	Set Speed Dial Key	**
4	Speed Dial Key	**
5	3-Way Conference Key	**
6	Dial Plan 1	
7	Dial Plan 2	
8	Dial Plan 3	
9	Dial Plan 4	
10	Dial Plan 5	
11	Dial Plan 6	
12	Dial Plan 7	
13	Dial Plan 8	
14	Dial Plan 9	
15	Dial Plan 10	

The function of elements allowed in a dial plan are described in the table below:

Table 5: Dial Plan Elements

Element	Example	Description
x	xxxx	Represents a digit of any value (0 to 9) that can be dialed on a phone. This example has a rule with four digits of any number.
.	xx.	Indicates zero or more occurrences of the previous symbol. The example acts like a wildcard, meaning any dialed phone number of two or more digits is allowed.
0-9	01xx	Indicates dialed digits that must be matched. This example only allows four-digit numbers starting "01."

Table 5: Dial Plan Elements

Element	Example	Description
[]	[125-8]	Limits a dialed digit to specified values or a range of values. The example specifies that only digits 1, 2, 5, 6, 7, and 8 are permitted.
t	xx.t	The timeout indicator that can be placed after dialed digits or at the end of the dial-plan string.

When a user dials a series of digits, the dial-plan rule is tested for a possible match. If a match is made, the dialed sequence is transmitted. If no match is made, the dialed number is blocked and the user will hear an error tone.

A dial-plan string cannot include spaces between elements. Dialed sequences that are longer than specified in a dial-plan rule are truncated after the number of specified digits. For example, if the dial-plan rule is "011x" and "0115678" is dialed, only the digit sequence "0115" is transmitted.

CALL FEATURE

The RG300 allows you to configure several call features, such as call waiting and call-forwarding. Other call features can be implemented by pressing specific phone buttons or entering dial patterns.



NOTE: Some call features may be dependent on support at the SIP server. Check with the SIP service provider.

Figure 49: Call Features

Call Feature	
Call Waiting	Phone Line 1 Call Waiting Enable <input type="checkbox"/>
Call Transfer	Phone Line 1 Blind Transfer <input type="checkbox"/> Early Transfer <input type="checkbox"/> Attended Transfer <input type="checkbox"/>
Call Forward	Phone Line 1 Always Forward Number <input type="text"/> On Busy Forward Number <input type="text"/> No Answer Forward Number <input type="text"/> No Answer Forward Timer (0 - 20) Seconds <input type="text"/>

The following items are displayed on this page:

- ◆ **Call Waiting** — Enables a call waiting alert. If during a call there is another incoming call, an alert tone is heard. You can place the active call on hold (press the “Flash” or “Flash Hook” button on the phone) and switch to the incoming call.
- ◆ **Call Transfer** — Transfers any received call to another number you specify.
 - **Blind Transfer** — During a call press the “Flash” button, which puts the caller on hold, then enter the transfer key sequence (as defined on the Dial Plan page; default “*#”). You can then dial the transfer number. The call is transferred immediately and you can hang up. The transferred call shows the caller ID of the original calling party and not your caller ID.
 - **Early Transfer** — During a call press the “Flash” button, which puts the caller on hold, then enter the new call key sequence (as defined on the Dial Plan page; default “**”). You can then dial the transfer number. When you hear the transfer number ringtone, enter the transfer key sequence (as defined on the Dial Plan page; default “*#”) and then hang up. The transferred call initially shows your


caller ID when the transferee phone is ringing, but then shows the original calling party ID as soon as you hang up.

- **Attended Transfer** — During a call press the “Flash” button, which puts the caller on hold, then enter the new call key sequence (as defined on the Dial Plan page; default “**”). You can then dial the transfer number and talk to the transferee. After speaking to the transferee, enter the transfer key sequence (as defined on the Dial Plan page; default “*#”) and then hang up to transfer the call. The transferred call shows your caller ID and not the caller ID of the original calling party.
- ◆ **Call Forward** — Configures settings that control various call forwarding features.
 - **Always Forward Number** — Forwards an incoming call to another number.
 - **On Busy Forward Number** — When Call Waiting is disabled, specifies another phone number to which incoming calls are forwarded when the phone is busy.
 - **No Answer Forward Number** — Another phone number to which incoming calls are forwarded when there is no answer.
 - **No Answer Forward Timer** — The time a call waits for an answer before being forwarded to the No Answer Forward Phone Number. (Must be less than or equal to the value of Answer Timeout; Range: 0~20 seconds)

PHONE SETTINGS

The Phone Settings page allows you to configure control features that affect a phone connected to a VoIP port.

Figure 50: Phone Settings

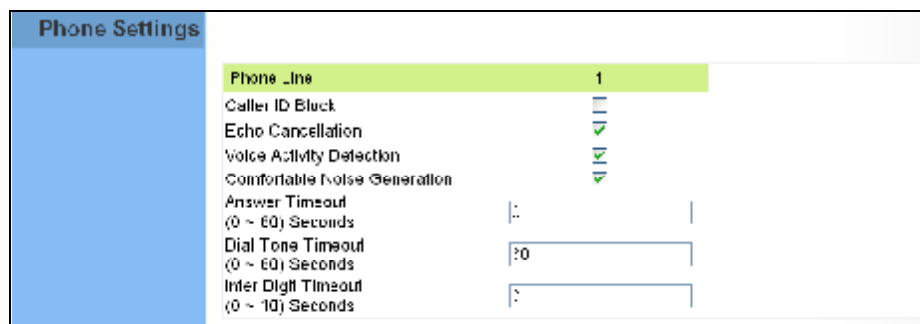

The following items are displayed on this page:


- ◆ **Caller ID Block** — Check this box to enable a block on the displayed ID of incoming calls.
- ◆ **Echo Cancellation** — Enables a time delay for voice echo cancellation. A voice echo can be created on some two-wire phone loops, which becomes increasingly louder and annoying when there is a long delay. If voice echo is a problem during a call, you can enable this parameter to try and reduce or remove it.
- ◆ **Voice Activation Detection** — Enables the detection of periods of silence in the audio stream so that they are not transmitted over the network.
- ◆ **Comfortable Noise Generation** — Creates artificial noise for the listener during detected silent intervals in the audio stream.
- ◆ **Answer Timeout** — The time after which a no answer message is sent to the caller. (Range: 0-60 seconds; Setting of zero disables the timeout)
- ◆ **Dial Tone Timeout** — The length of time a dial tone is heard on a connected phone. (Range: 0-60 seconds; Setting of zero disables the timeout)
- ◆ **Inter Digit Timeout** — The maximum time delay allowed between each dialed digit. When the time is exceeded, a call is made using the dialed digits. (Range: 0-10 seconds; Setting of zero disables the timeout)

CODECS

A codec (coder/decoder) is the way a voice analog signal is converted into a digital bitstream to send over the network, and how it is converted back into an analog signal at the receiving end. Codecs differ in the type of data compression that is used to save network bandwidth and in the time delay caused in the signal. This results in different voice quality experienced by the user.

The voice codecs in common use today have been standardized by the International Telecommunication Union Telecommunication Standardization Sector (ITU-T) and are identified by a standard number, such as G.711. The same codec must be supported at each end of a VoIP call to be able to encode and decode the signal. Since devices in other networks may want to use different codecs, the RG300 supports several common standards.

Figure 51: VoIP Codecs

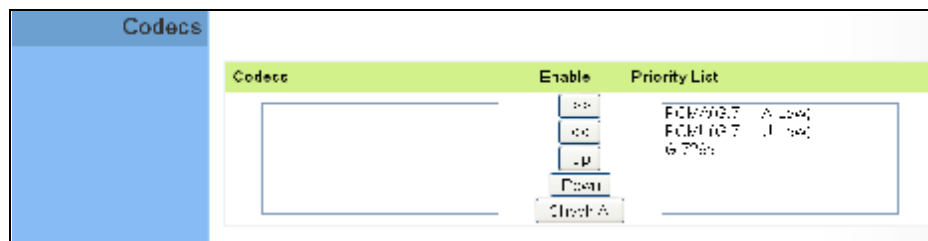

The following items are displayed on this page:

- ◆ **Codecs** — Lists the codecs supported by the Gateway. You can enable specific codecs to use, or enable all. Alternatively, you may want to disable certain codecs, such as high-bandwidth codecs, to preserve network bandwidth.
 - **PCMA (G.711 ALaw)** — The ITU-T G.711 with A-law standard codec that uses Pulse Code Modulation (PCM) to produce a 64 Kbps high-quality voice data stream. This standard is used in Europe and most other countries around the world.
 - **PCMU (G.711 ULaw)** — The ITU-T G.711 with mu-law standard codec that uses Pulse Code Modulation (PCM) to produce a 64 Kbps high-quality voice data stream. This standard is used in North America and Japan.
 - **G.729a** — The ITU-T G.729ab standard codec that uses Conjugate Structure Algebraic-Code Excited Linear Prediction (CS-ACELP) with silence suppression to produce a low-bandwidth data stream of 8 Kbps. Note that DTMF and fax tones do not transport reliably with this codec, it is better to use G.711 for these signals.
- ◆ **Priority List** — The Gateway automatically negotiates the codec to use for each called party. You can specify a priority for the codecs that you prefer to use. Select a codec in the list, then use the UP and DOWN

buttons to set the priority. The Gateway attempts to use the codec highest in the list before trying the next lower one.

The RG300 includes an IEEE 802.11n radio interface for local Wi-Fi communications. The Wi-Fi set up pages include configuration options for the radio signal characteristics and Wi-Fi security.

The Wi-Fi configuration pages include the following options:


- ◆ ["Basic Wireless Settings" on page 76](#)
- ◆ ["Advanced Wireless Settings" on page 78](#)
- ◆ ["Wireless Security" on page 79](#)
- ◆ ["ACL Settings" on page 83](#)

BASIC WIRELESS SETTINGS

From the WiFi menu, click on Basic to configure basic settings for the unit's Wi-Fi radio interface. The unit's radio can operate in six modes, IEEE 802.11b/g mixed, 802.11b only, 802.11g only, 802.11n only, 802.11g/n mixed, and 802.11b/g/n mixed.

Note that IEEE 802.11g is backward compatible with 802.11b, and 802.11n is backward compatible with 802.11b/g at slower data transmit rates.

Figure 52: Wireless Settings

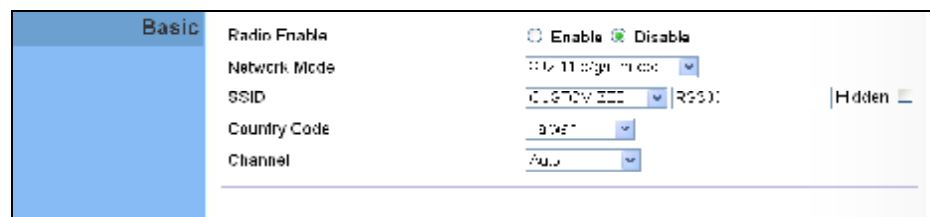

The following items are displayed on this page:

- ◆ **Radio Enable** — Enables or disables the radio.
- ◆ **Network Mode** — Defines the radio operating mode.
 - **11b/g mixed:** Both 802.11b and 802.11g clients can communicate with the Wi-Fi radio (up to 108 Mbps), but data transmission rates may be slowed to compensate for 802.11b clients. Any 802.11n clients will also be able to communicate with the Wi-Fi radio, but they will be limited to 802.11g protocols and data transmission rates.
 - **11b only:** All 802.11b, 802.11g, and 802.11n clients will be able to communicate with the Wi-Fi radio, but the 802.11g and 802.11n clients will be limited to 802.11b protocols and data transmission rates (up to 11 Mbps).
 - **11g only:** Both 802.11g and 802.11n clients will be able to communicate with the Wi-Fi radio, but the 802.11n clients will be limited to 802.11g protocols and data transmission rates (up to 54 Mbps). Any 802.11b clients will not be able to communicate with the Wi-Fi radio.
 - **11n only:** Only 802.11n clients will be able to communicate with the Wi-Fi radio (up to 150 Mbps).
 - **11g/n mixed:** Both 802.11g and 802.11n clients can communicate with the Wi-Fi radio (up to 150 Mbps), but data transmission rates may be slowed to compensate for 802.11g clients.

- **11b/g/n Mixed:** All 802.11b/g/n clients can communicate with the Wi-Fi radio (up to 150 Mbps), but data transmission rates may be slowed to compensate for 802.11b/g clients.
- ◆ **SSID** — The name of the wireless network service provided by the Wi-Fi radio. Clients that want to connect to the network must set their SSID to the same as that of the Wi-Fi radio. Select "CUSTOMIZED" to set a specific text string, or select "MAC" to use the device MAC address as the SSID. (Range: 1-32 characters)
- ◆ **Hidden** — By default, the Wi-Fi radio always broadcasts the SSID in its beacon signal. Disabling the SSID broadcast increases security of the network because wireless clients need to already know the SSID before attempting to connect.
- ◆ **Country Code** — The country code restricts operation of the Wi-Fi radio to the channels and transmit power levels permitted for Wi-Fi networks in the specified region. You must set the correct Country Code to be sure the radio conforms to local regulations. (Options: United States, Japan, France, Taiwan, Ireland)



CAUTION: You must set the country code to the country of operation. Setting the country code restricts operation of the access point to the radio channels and transmit power levels permitted for wireless networks in the specified country.

- ◆ **Channel** — The radio channel that the Wi-Fi radio uses to communicate with wireless clients. When multiple access points are deployed in the same area, set the channel on neighboring access points at least five channels apart to avoid interference with each other. For example, you can deploy up to three access points in the same area using channels 1, 6, 11. Note that wireless clients automatically set the channel to the same as that used by the Wi-Fi radio to which it is linked. Selecting Auto Select enables the Wi-Fi radio to automatically select an unoccupied radio channel.



NOTE: If you experience poor performance, you may be encountering interference from another wireless device. Try changing the channel, as this may eliminate interference and increase performance. Channels 1, 6, and 11, as the three non-overlapping channels in the 2.4 GHz band, are preferred.

ADVANCED WIRELESS SETTINGS

The Advanced Settings page includes additional parameters concerning the wireless network and Wi-Fi Multimedia settings.

Figure 53: Advanced Wireless Settings

Advanced	
Beacon Period	100 (20-999) ms
DTim Period	1 (1-255) ms
FragThreshold	2346 (256-2346)
RTSThreshold	2347 (1-2347)
TX Power	100 (1-100)
Short Slot	<input checked="" type="radio"/> Enable <input type="radio"/> Disable

The following items are displayed on this page:

- ◆ **Beacon Period** — The rate at which beacon signals are transmitted from the access point. The beacon signals allow wireless clients to maintain contact with the access point. They may also carry power-management information. (Range: 20-999 TUs)
- ◆ **DTIM Period** — The rate at which stations in sleep mode must wake up to receive broadcast/multicast transmissions.

Known also as the Delivery Traffic Indication Map (DTIM) interval, it indicates how often the MAC layer forwards broadcast/multicast traffic, which is necessary to wake up stations that are using Power Save mode. The value of one beacon indicates that the access point will save all broadcast/multicast frames for the Basic Service Set (BSS) and forward them after every beacon. Using smaller DTIM intervals delivers broadcast/multicast frames in a more timely manner, causing stations in Power Save mode to wake up more often and drain power faster. Using higher DTIM values reduces the power used by stations in Power Save mode, but delays the transmission of broadcast/multicast frames. (Range: 1-255 beacons)

- ◆ **Frag Threshold** – Configures the minimum packet size that can be fragmented when passing through the access point. Fragmentation of the PDUs (Package Data Unit) can increase the reliability of transmissions because it increases the probability of a successful transmission due to smaller frame size. If there is significant interference present, or collisions due to high network utilization, try setting the fragment size to send smaller fragments. This will speed up the retransmission of smaller frames. However, it is more efficient to set the fragment size larger if very little or no interference is present because it requires overhead to send multiple frames. (Range: 256-2346 bytes)
- ◆ **RTS Threshold** — Sets the packet size threshold at which a Request to Send (RTS) signal must be sent to a receiving station prior to the sending station starting communications. The access point sends RTS

frames to a receiving station to negotiate the sending of a data frame. After receiving an RTS frame, the station sends a CTS (clear to send) frame to notify the sending station that it can start sending data.

If the RTS threshold is set to 0, the access point always sends RTS signals. If set to 2347, the access point never sends RTS signals. If set to any other value, and the packet size equals or exceeds the RTS threshold, the RTS/CTS (Request to Send / Clear to Send) mechanism will be enabled.

The access points contending for the medium may not be aware of each other. The RTS/CTS mechanism can solve this "Hidden Node Problem." (Range: 1-2347 bytes)

- ◆ **TX Power** – Adjusts the power of the radio signals transmitted from the unit. The higher the transmission power, the farther the transmission range. Power selection is not just a trade off between coverage area and maximum supported clients. You also have to ensure that high-power signals do not interfere with the operation of other radio devices in the service area. (Range: 1 - 100)
- ◆ **Short Slot** — Sets the basic unit of time the access point uses for calculating waiting times before data is transmitted. A short slot time (9 microseconds) can increase data throughput on the access point, but requires that all clients can support a short slot time (that is, 802.11g-compliant clients must support a short slot time). A long slot time (20 microseconds) is required if the access point has to support 802.11b clients.

WIRELESS SECURITY

The RG300's Wi-Fi interface is configured by default as an "open system," which broadcasts a beacon signal including the configured SSID. Wireless clients with a configured SSID of "ANY" can read the SSID from the beacon, and automatically set their SSID to allow immediate connection to the wireless network.

To implement wireless network security, you have to employ two main functions:

- ◆ **Authentication** – It must be verified that clients attempting to connect to the network are authorized users.
- ◆ **Traffic Encryption** – Data passing between the unit and clients must be protected from interception and eavesdropping.

The RG300's Wi-Fi interface supports five different security mechanisms that provide various levels of authentication and encryption depending on the requirements of the network.

Click on "Wi-Fi," followed by "Security".

Figure 54: Security Mode Options



The supported security mechanisms and their configuration parameters are described in the following sections:


- ◆ **OPEN, SHARED** — See “Wired Equivalent Privacy (WEP)” on page 80.
- ◆ **WPAPSK, WPA2PSK, WPAPSK/WPA2PSK mixed mode** — See “WPA Pre-Shared Key” on page 81.

WIRED EQUIVALENT PRIVACY (WEP)

WEP provides a basic level of security, preventing unauthorized access to the network, and encrypting data transmitted between wireless clients and an access point. WEP uses static shared keys (fixed-length hexadecimal or alphanumeric strings) that are manually distributed to all clients that want to use the network.

When you select to use WEP, be sure to define at least one static WEP key for user authentication or data encryption. Also, be sure that the WEP shared keys are the same for each client in the wireless network.

Figure 55: Security Mode - WEP

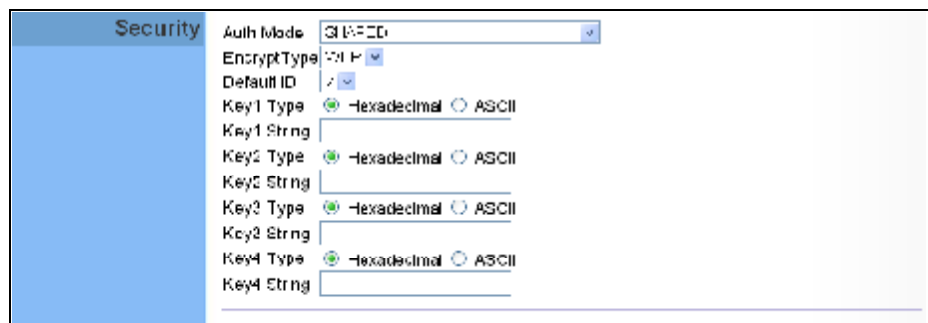

The following items are displayed in this section on this page:

- ◆ **Auth Mode** — Configures the WEP security mode used by clients. When using WEP, be sure to define at least one static WEP key for the RG300 and all its clients.
 - **OPEN** — Open-system authentication accepts any client attempting to connect the RG300 without verifying its identity. In this mode the default data encryption type is “WEP.”
 - **SHARED** — The shared-key security uses a WEP key to authenticate clients connecting to the network and for data encryption.


- ◆ **Encrypt Type** — Selects WEP for data encryption (OPEN mode only).
- ◆ **Default ID** — Selects the WEP key number to use for authentication or data encryption. If wireless clients have all four WEP keys configured to the same values, you can change the encryption key to any of the settings without having to update the client keys. (Range: 1~4)
- ◆ **Key 1~4 Type** — Sets WEP key type as ASCII or hexadecimal.
- ◆ **Key 1~4 String** — Sets WEP key values. The user must first select ASCII or hexadecimal keys. Each WEP key has an index number. Enter key values that match the key type and length settings. Enter 5 alphanumeric characters or 10 hexadecimal digits for 64-bit keys, or enter 13 alphanumeric characters or 26 hexadecimal digits for 128-bit keys.

WPA PRE-SHARED KEY

Wi-Fi Protected Access (WPA) was introduced as an interim solution for the vulnerability of WEP pending the adoption of a more robust wireless security standard. WPA2 includes the complete wireless security standard, but also offers backward compatibility with WPA. Both WPA and WPA2 provide an “enterprise” and “personal” mode of operation.

For small home or office networks, WPA and WPA2 provide a simple “personal” operating mode that uses just a pre-shared key for network access. The WPA Pre-Shared Key (WPA-PSK) mode uses a common password phrase for user authentication that is manually entered on the access point and all wireless clients. Data encryption keys are automatically generated by the access point and distributed to all clients connected to the network.

Figure 56: Security Mode - WPA-PSK

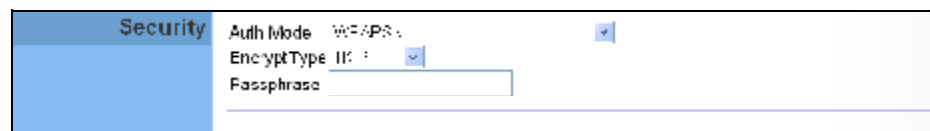

The following items are displayed in this section on this page:

- ◆ **Auth Mode** — Configures the WPA-PSK and WPA2-PSK security modes used by clients. When using WPA-PSK or WPA2-PSK, be sure to define the shared key for the RG300 and all its clients.
 - **WPAPSK** — Clients using WPA with a Pre-shared Key are accepted for authentication. The default data encryption type for WPA is TKIP.
 - **WPA2PSK** — Clients using WPA2 with a Pre-shared Key are accepted for authentication. The default data encryption type for WPA is AES.

- **WPAPSK/WPA2PSK mixed mode** — Clients using WPA or WPA2 with a Pre-shared Key are accepted for authentication. The default data encryption type is TKIP/AES.
- ◆ **EncryptType** — Selects the data encryption type to use. (Default is determined by the Security Mode selected.)
 - **TKIP** — Uses Temporal Key Integrity Protocol (TKIP) keys for encryption. WPA specifies TKIP as the data encryption method to replace WEP. TKIP avoids the problems of WEP static keys by dynamically changing data encryption keys.
 - **AES** — Uses Advanced Encryption Standard (AES) keys for encryption. WPA2 uses AES Counter-Mode encryption with Cipher Block Chaining Message Authentication Code (CBC-MAC) for message integrity. The AES Counter-Mode/CBCMAC Protocol (AES-CCMP) provides extremely robust data confidentiality using a 128-bit key. Use of AES-CCMP encryption is specified as a standard requirement for WPA2. Before implementing WPA2 in the network, be sure client devices are upgraded to WPA2-compliant hardware.
 - **TKIPAES** — Uses either TKIP or AES keys for encryption. WPA and WPA2 mixed modes allow both WPA and WPA2 clients to associate to a common SSID. In mixed mode, the unicast encryption type (TKIP or AES) is negotiated for each client.
- ◆ **Pass Phrase** — The WPA Preshared Key can be input as an ASCII string (an easy-to-remember form of letters and numbers that can include spaces) or Hexadecimal format. (Range: 8~63 ASCII characters, or exactly 64 Hexadecimal digits)

ACL SETTINGS

Wireless clients can be authenticated for network access by checking their MAC address against a local database configured on the RG300. You can configure a list of up to 32 wireless client MAC addresses in the filter list to allow network access.

Figure 57: ACL Settings

ACL

You can set here to allow certain client PCs accessing the Wi-Fi network based on MAC address filter.

Enable

MAC Address

Order	MAC Address	Operation
1	00:11:22:33:44:55	<input type="button" value="Remove"/>

The following items are displayed on this page:

- ◆ **Enable** — Enables the ACL feature.
- ◆ **MAC Address** — Physical address of a client. Enter six pairs of hexadecimal digits separated by colons; for example, 00:90:D1:12:AB:89.
- ◆ **Add** — Click to list a new specified MAC address in the MAC Authentication Table.
- ◆ **Operation** — Click the Remove button to delete the specified MAC address from the table.

The RG300 supports Quality of Service (QoS) settings that enable traffic rate limits to be set for all or specific LAN clients.

The QoS configuration pages include the following options:

- ◆ ["QoS Settings" on page 85](#)

QoS SETTINGS

From the QoS Settings page, you can set rate limits for outbound (WiMAX uplink) traffic from all or specified clients.

Figure 58: QoS Settings

The screenshot shows the QoS Settings page with two main sections: General and Rules. The General section includes an 'Enable' checkbox (checked), a 'Default Outbound Rate/Limit' field set to 0 (KB/s (0 is unlimited)), and a 'Description' field with the value 'Web server'. The Rules section includes a 'Source IP' field set to 192.168.1.50, a 'Use Client List' dropdown menu (set to 'Use Client List'), an 'Outbound Rate/Limit' field set to 0 (KB/s (0 is unlimited)), and a 'Description' field with the value 'Web server'. Below the Rules section is a table with the following data:

Source IP	Outbound Rate/Limit	Description	Operation
192.168.1.50	0	Web server	Remove

The following parameters are displayed on this page:

- ◆ **General** — Sets QoS parameters that apply to all LAN clients (except those listed in the QoS Rules table):
 - **Enable** — Enables the QoS settings on the Gateway.
 - **Default Outbound Rate/Limit** — Sets a rate limit for the outbound traffic from all clients not specified in the QoS Rules table. The rate is specified in kilobytes per second (0 means unlimited).
- ◆ **Rules** — Specifies the QoS rate limits for specified client source IPs:
 - **Source IP** — Specifies a source IP address on the local network. The IP address can also be selected from the DHCP client list, as indicated by "Use Client List."
 - **Use Client List** — Enables the Source IP to be selected from the DHCP client list.
 - **Outbound Rate/Limit** — Sets a rate limit for the outbound traffic from the specified source IP in kilobytes per second (0 means unlimited).
 - **Description** — A text string that identifies the rule.

SECTION III

APPENDICES

This section provides additional information and includes these items:

- ◆ ["Troubleshooting" on page 87](#)
- ◆ ["Hardware Specifications" on page 89](#)
- ◆ ["Cables and Pinouts" on page 93](#)

DIAGNOSING LED INDICATORS

Table 6: Troubleshooting Chart

Symptom	Action
Power LED is Off	<ul style="list-style-type: none"> ◆ AC power adapter may be disconnected. Check connections between the unit, the AC power adapter, and the wall outlet.
Power LED is Red	<ul style="list-style-type: none"> ◆ The unit has detected a system error. Reboot the unit to try and clear the condition. ◆ If the condition does not clear, contact your local dealer for assistance.
WiMAX Signal LEDs are Off	<ul style="list-style-type: none"> ◆ Move the location of the unit. ◆ Check with the WiMAX service provider for service coverage information.
LAN link LED is Off	<ul style="list-style-type: none"> ◆ Verify that the unit and attached device are powered on. ◆ Be sure the cable is plugged into both the unit and corresponding device. ◆ Verify that the proper cable type is used and its length does not exceed specified limits. ◆ Check the cable connections for possible defects. Replace the defective cable if necessary.

CANNOT CONNECT TO THE INTERNET

If you cannot access the Internet from the PC, check the following:

- ◆ If you cannot access the Internet, be sure your Windows system is correctly configured for TCP/IP. The IP settings should be set to "obtain an IP address automatically."
- ◆ You may be out of the service area of the WiMAX network. Check with the WiMAX service provider for service coverage information.
- ◆ If you cannot resolve the problem, check the System Status page of the web interface and contact your WiMAX service provider.

CANNOT ACCESS WEB MANAGEMENT

If the management interface cannot be accessed using a web browser:

- ◆ Be sure the management station is correctly configured for TCP/IP. The IP settings should be set to "obtain an IP address automatically."
- ◆ Try a Ping command from the management station to the unit's IP address to verify that the entire network path between the two devices is functioning correctly.
- ◆ Check that the management station has a valid network connection and that the Ethernet port that you are using has not been disabled.
- ◆ Check the network cabling between the management station and the unit. If the problem is not resolved, try using a different port or a different cable.

FORGOT OR LOST THE PASSWORD

Set the unit to its default configuration by pressing the reset button on the base for 5 seconds or more. Then use the default password to access the management interface.

RESETTING THE UNIT

If all other recovery measures fail and the unit is still not functioning properly, take either of these steps:

- ◆ Reset the unit using the web interface, or through a power reset.
- ◆ Reset the unit to its factory default configuration by pressing the reset button on the base for 5 seconds or more. Then use the default password to access the management interface.

B

HARDWARE SPECIFICATIONS

PHYSICAL SPECIFICATIONS

PORTS 1~4 LAN ports, 10/100BASE-TX with auto-negotiation, RJ-45 connector
1~2 FXS ports, RJ-11 connector

NETWORK INTERFACE RJ-45 connector, auto MDI/X:
10BASE-T: RJ-45 (100-ohm, UTP cable; Category 3 or better)
100BASE-TX: RJ-45 (100-ohm, UTP cable; Category 5 or better)

LED INDICATORS System: Power, WiMAX signal strength, WiFi,
Ports: Link/Activity

AC POWER ADAPTER Input: 100-240 VAC, 50-60 Hz, 0.5 A maximum
Output: 12 VDC, 1 A

UNIT POWER SUPPLY DC Input: 12 VDC, 1 A maximum
Power Consumption: 12 W maximum

PHYSICAL SIZE 181.5 x 198.5 x 79 mm (7.15 x 7.81 x 3.11 in)

WEIGHT 412 g (14.5 oz)

TEMPERATURE Operating: -5 to 45 °C (23 to 113 °F)
Storage: -40 to 75 °C (-40 to 167 °F)

HUMIDITY 5% to 95% (non-condensing)

WiMAX SPECIFICATIONS

ANTENNAS Pattern: Omnidirectional
Transmit and Receive: One transmit and two receive with Maximal-Ratio Combining (MRC). Support for transmitter diversity.
Gain: 6 dBi
Impedance: 50 Ohm

OPERATING FREQUENCY FCC-2.5 GHz: 2496-2690 MHz
Taiwan NCC-2.5 GHz: 2500-2690 MHz
2.3 GHz: 2300-2390 MHz
Support for Full Scan and Partial Scan

CHANNEL BANDWIDTH 2.5 GHz model: 5 and 10 MHz

MODULATION SCHEME Scaleable OFDMA employing Time-Division Duplex (TDD) mechanism
PRBS subcarrier randomization
Contains pilot, preamble, and ranging modulation

MODULATION AND CODING TYPES Down Link: QPSK, 16 QAM, 64 QAM
Up Link: QPSK, 16 QAM

RECEIVE SENSITIVITY -94 dBm maximum

VOIP SPECIFICATIONS

VOICE SIGNALING PROTOCOL SIP v2 (RFC 3261)

VOICE CODEC G.711 (a-law and u-law)
G.729a

VOICE QUALITY VAD (Voice Activity Detection)
CNG (Comfortable Noise Generation)
Echo cancellation

Adaptive jitter buffer, up to 200 milliseconds
DTMF tone detection and generation

CALL FEATURES Caller ID number and name
Caller ID Block
Call transfer
Call waiting/hold/retrieve
3-way conference call
Call blocking
T.38 fax relay
Dial plan
Speed dial
Call forwarding: No Answer/Busy/All

REN (RING EQUIVALENT NUMBER) 3 REN total in system

WI-FI SPECIFICATIONS

MAXIMUM 802.11B/G/N (20 MHz) CHANNELS FCC/NCC: 1-11
ETSI: 1-13
France: 10-13

OPERATING FREQUENCY 2.4 ~ 2.4835 GHz (FCC, ETSI)

MODULATION TYPE 802.11n: BPSK, QPSK, OFDM
802.11g: BPSK, QPSK, OFDM
802.11b: CCK, BPSK, QPSK

RF OUTPUT POWER 802.11b: 13 dBm
802.11g: 12 dBm
802.11n: 9 dBm

RF RECEIVE SENSITIVITY 802.11b: -85 dBm @ 11 Mbps
802.11g: -65 dBm @ 54 Mbps
802.11n: -61 dBm @ 150 Mbps

COMPLIANCES

EMISSIONS FCC CFR 47 Part 15 Class B
EN 55022 Class B

EMMUNITY EN 55024 Class B
EN 301 489-1/4/17

**WIMAX RADIO SIGNAL
CERTIFICATION** US: 2.5 GHz - FCC CFR 47 Part 27M
CE: 2.3 GHz - EN 302 326
2.5 GHz - EN 302 544
NCC: PLMN09

**WI-FI RADIO SIGNAL
CERTIFICATION** FCC CFR 47 Part 15 Subpart C
EN 300 328
NCC: LP0002

SAFETY IEC/UL 60950-1
CE: EN 60950-1 (LVD)
NCC: CNS14336
ErP EN 62301

STANDARDS IEEE 802.16e-2005 WAVE 1 and WAVE 2
IEEE 802.3-2005 10BASE-T and 100BASE-TX
IEEE 802.11b, 802.11g, and 802.11n

C

CABLES AND PINOUTS

TWISTED-PAIR CABLE ASSIGNMENTS

For 10/100BASE-TX connections, a twisted-pair cable must have two pairs of wires. Each wire pair is identified by two different colors. For example, one wire might be green and the other, green with white stripes. Also, an RJ-45 connector must be attached to both ends of the cable.




CAUTION: Each wire pair must be attached to the RJ-45 connectors in a specific orientation. (See ["Straight-Through Wiring" on page 94](#) and ["Crossover Wiring" on page 95](#) for an explanation.)

CAUTION: DO NOT plug a phone jack connector into the RJ-45 port. Use only twisted-pair cables with RJ-45 connectors that conform with FCC standards.

The following figure illustrates how the pins on the RJ-45 connector are numbered. Be sure to hold the connectors in the same orientation when attaching the wires to the pins.

Figure 59: RJ-45 Connector

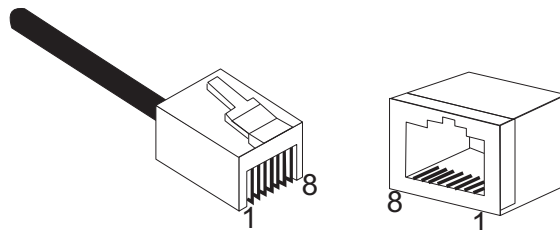

10/100BASE-TX PIN ASSIGNMENTS

Use unshielded twisted-pair (UTP) or shielded twisted-pair (STP) cable for RJ-45 connections: 100-ohm Category 3 or better cable for 10 Mbps connections, or 100-ohm Category 5 or better cable for 100 Mbps connections. Also be sure that the length of any twisted-pair connection does not exceed 100 meters (328 feet).

The RJ-45 ports on the unit supports automatic MDI/MDI-X operation, so you can use straight-through or crossover cables for all network connections to PCs, switches, or hubs. In straight-through cable, pins 1, 2, 3, and 6, at one end of the cable, are connected straight through to pins 1, 2, 3, and 6 at the other end of the cable.


Table 7: 10/100BASE-TX MDI and MDI-X Port Pinouts

PIN	MDI Signal Name ^a	MDI-X Signal Name
1	Transmit Data plus (TD+)	Receive Data plus (RD+)
2	Transmit Data minus (TD-)	Receive Data minus (RD-)
3	Receive Data plus (RD+)	Transmit Data plus (TD+)
6	Receive Data minus (RD-)	Transmit Data minus (TD-)
4, 5, 7, 8	Not used	Not used

a. The "+" and "-" signs represent the polarity of the wires that make up each wire pair.

STRAIGHT-THROUGH WIRING If the twisted-pair cable is to join two ports and only one of the ports has an internal crossover (MDI-X), the two pairs of wires must be straight-through.


Figure 60: Straight Through Wiring

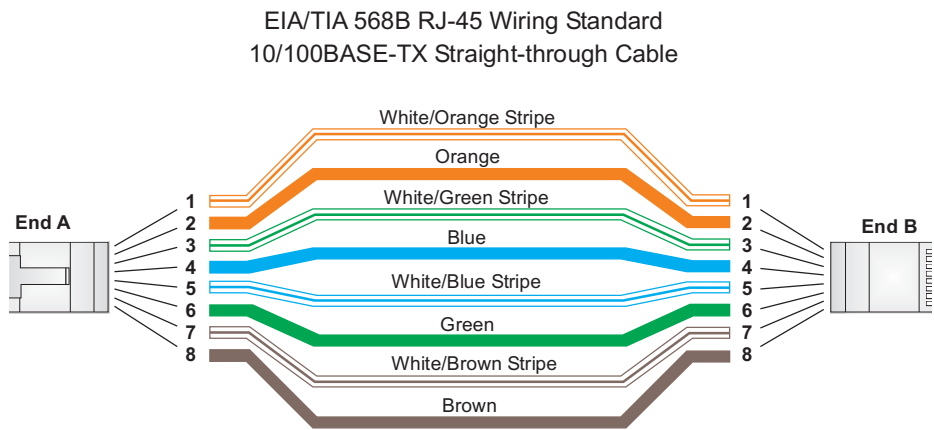

CROSSOVER WIRING If the twisted-pair cable is to join two ports and either both ports are labeled with an "X" (MDI-X) or neither port is labeled with an "X" (MDI), a crossover must be implemented in the wiring.

Figure 61: Crossover Wiring

EIA/TIA 568B RJ-45 Wiring Standard
10/100BASE-TX Crossover Cable

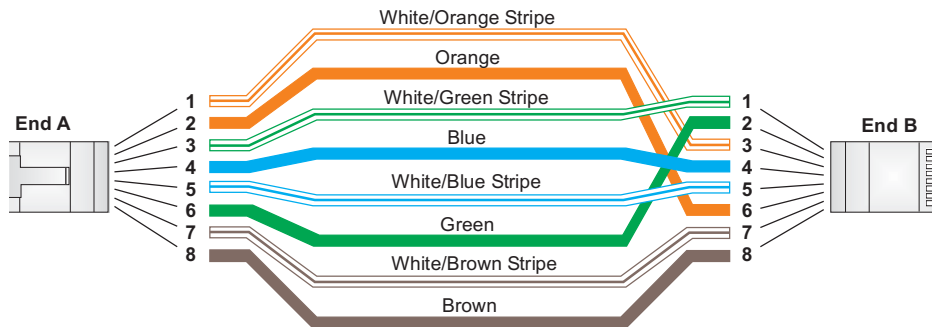

RJ-11 PORT

Standard telephone RJ-11 connectors and cabling can be found in several common wiring patterns. These six-pin connectors can accommodate up to three wire pairs (three telephone lines), but usually only one or two pairs of conductor pins and wires are implemented.

The RJ-11 port on this device contains only one wire pair on the inner pins (3 and 4).

Figure 62: RJ-11 Port Pinout

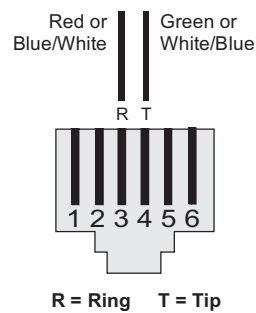


Table 8: RJ-11 Port Pinout

Pin	Signal Name	Wire Color
1	Not used	
2	Not used	
3	Line 1 Ring	Red or Blue/White
4	Line 1 Tip	Green or White/Blue
5	Not used	
6	Not used	

GLOSSARY

- 10BASE-T** IEEE 802.3-2005 specification for 10 Mbps Ethernet over two pairs of Category 3 or better UTP cable.
- 100BASE-TX** IEEE 802.3-2005 specification for 100 Mbps Fast Ethernet over two pairs of Category 5 or better UTP cable.
- ACCESS POINT** An Wi-Fi internetworking device that seamlessly connects wired and wireless networks.
- AUTHENTICATION** The process to verify the identity of a client requesting network access.
- AUTO-NEGOTIATION** Signalling method allowing each node to select its optimum operational mode (speed and duplex mode) based on the capabilities of the node to which it is connected.
- BASE STATION** A WiMAX service provider's equipment that is installed at a fixed location to provide network connectivity for subscriber stations within a defined service area.
- BEACON** A signal periodically transmitted from a Wi-Fi access point that is used to identify the network and maintain contact with wireless clients.
- CINR** Carrier-to-Interference-Plus-Noise Ratio. A measurement of the channel quality in a WiMAX link. Subscriber stations measure the received CINR and send the information back to the base station. The base station can then adjust modulation and coding for the link to optimize throughput.
- CENTER FREQUENCY** The radio frequency at the center of a WiMAX channel. WiMAX channels can be of different widths (the channel bandwidth) and the transmitted radio signal is spread across the full width of the channel.
- CHANNEL BANDWIDTH** The range of frequencies occupied by a WiMAX radio signal. The amount of information that can be transmitted in a radio signal is related to the channel bandwidth, which is measured in Megahertz (MHz). WiMAX supports a range of channel bandwidths that can be defined by the service

operator depending on performance requirements, operating preferences, and regulatory constraints.

CPE Customer-Premises Equipment. Terminal equipment provided by a service provider that is located at a subscriber's premises and supports a communication channel between a customer and the service provider.

DNS Domain Name System. A system used for translating host names for network nodes into IP addresses.

DHCP Dynamic Host Configuration Protocol. Provides a framework for passing configuration information to hosts on a TCP/IP network. DHCP is based on the Bootstrap Protocol (BOOTP), adding the capability of automatic allocation of reusable network addresses and additional configuration options.

ENCRYPTION Data passing between a base station and subscribers uses encryption to protect from interception and eavesdropping.

ETHERNET A popular local area data communications network, which accepts transmission from computers and terminals.

EAP Extensible Authentication Protocol. An authentication protocol used to authenticate subscribers. EAP is used with TLS or TTLS authentication to provide "mutual authentication" between a subscriber and a WiMAX network.

HTTP Hypertext Transfer Protocol. HTTP is a standard used to transmit and receive all data over the World Wide Web.

ICMP Internet Control Message Protocol. A network layer protocol that reports errors in processing IP packets. ICMP is also used by routers to feed back information about better routing choices.

IEEE 802.11B The Wi-Fi wireless standard that supports communications in the 2.4 GHz band using Direct Sequence Spread Spectrum (DSSS). The standard provides for data rates of 1, 2, 5.5, and 11 Mbps.

IEEE 802.11G The Wi-Fi wireless standard that supports communications in the 2.4 GHz band using Orthogonal Frequency Division Multiplexing (OFDM). The standard provides for data rates of 6, 9, 11, 12, 18, 24, 36, 48, 54 Mbps. IEEE 802.11g is also backward compatible with IEEE 802.11b.

- IEEE 802.16E** The WiMAX standard that provides mobile broadband wireless access using Scalable Orthogonal Frequency Division Multiple Access (SOFDMA).
- IP ADDRESS** The Internet Protocol (IP) address is a numerical identification assigned to a device that communicates in a network using the Internet Protocol.
- ISP** Internet Service Provider. A company that offers an access service that connects customers to the Internet.
- LED** Light emitting diode. Used for indicating a device or network condition.
- LAN** Local Area Network. A group of interconnected computer and support devices.
- MAC ADDRESS** The physical layer address used to uniquely identify network nodes.
- MS-CHAPV2** Microsoft's version 2 of the Challenge-Handshake Authentication Protocol. Introduced by Microsoft with Windows 2000, MS-CHAPV2 (defined in RFC 2759) provides mutual authentication between peers using user names and passwords.
- ODFM** Orthogonal Frequency Division Multiplexing. The air interface defined for IEEE 802.11g Wi-Fi. OFDM allows multiple users to transmit in an allocated band by dividing the bandwidth into many narrow bandwidth carriers.
- RJ-45 CONNECTOR** A connector for twisted-pair wiring.
- RSSI** Receive Signal Strength Indicator. A measurement of the strength of a received wireless signal. The higher the RSSI value, the stronger the received signal from the antenna.
- ROAMING** The process where a WiMAX subscriber can move onto another operator's network while maintaining a continuous connection.
- SOFDMA** Scalable Orthogonal Frequency Division Multiple Access. The air interface defined for mobile WiMAX. SOFDMA is a multiple access method that allows simultaneous transmissions to and from several users, employing a subchannel structure that scales with bandwidth.
- SERVICE PROVIDER** See *Internet Service Provider*.

- SSID** Service Set Identifier. A name that is sent in packets over a Wi-Fi network, which functions as a password for clients connecting to the network. The SSID differentiates one Wi-Fi network from another.
- SNTP** Simple Network Time Protocol. SNTP allows a device to set its internal clock based on periodic updates from a Network Time Protocol (NTP) server. Updates can be requested from a specific NTP server, or can be received via broadcasts sent by NTP servers.
- SIM** Subscriber Identity Module. A standard for a small removable integrated circuit card that securely stores information used to identify a mobile wireless subscriber.
- SUBSCRIBER STATION** A general term for a customer's WIMAX terminal equipment that provides connectivity with a base station.
- TCP/IP** Transmission Control Protocol/Internet Protocol. Protocol suite that includes TCP as the primary transport protocol, and IP as the network layer protocol.
- TLS** Transport Layer Security. An standard defined in RFC 5246, EAP-TLS is an authentication protocol that provides strong security through the use of client-side certificates.
- TTLS** Tunneled Transport Layer Security. EAP-TTLS is a protocol extension of EAP-TLS. The authentication server is authenticated to the client using its Certification Authority certificate, this establishes a secure "tunnel" through which the client is then authenticated.
- URL** Uniform Resource Locator. An easy-to-read character string that is used to represent a resource available on the Internet. For example, "http://www.url-example.com/."
- UTP** Unshielded twisted-pair cable.
- WEP** Wired Equivalent Privacy. WEP is the Wi-Fi security based on the use of RC4 encryption keys. Wi-Fi devices without a valid WEP key are excluded from the network.
- PSK** WPA Pre-shared Key. PSK security can be used for small Wi-Fi networks that may not have the resources to configure and maintain a RADIUS

server. WPA provides a simple operating mode that uses just a pre-shared password for network access.

WiMAX The IEEE 802.16 standard for Worldwide Interoperability for Microwave Access. The IEEE 802.16-2004 standard, known as “fixed WiMAX,” supports only point-to-point links and has no support for mobility. The IEEE 802.16e-2005 standard, known as “mobile WiMAX,” is an amendment to IEEE 802.16-2004 and supports mobility. Note that mobile WiMAX standard is not backward compatible with the fixed WiMAX standard.

INDEX

A

AC power adapter 18
administrator password, setting 32
administrator settings 32
Advanced Setup menu 27
AES encryption 82
authentication
 type 79
authentication options 80
auto-logout time 33

B

beacon interval 78
button, Reset 18

C

cable assignments 93
cable connections 21
channel setting 77
channels, maximum 91
checklist 20
client filter, enable 54
Codec 73
configuration, basic 25
contents, package 20

D

data beacon rate 78
default Key, WEP 81
default settings, restore 34
defaults, factory 34
DHCP server 45
discard ping 53
downloading software 33
DTIM setting 78
dynamic DNS 43
dynamic IP, cable modem 39

E

encryption 79
encryption options 80
Ethernet ports 17

F

factory defaults, restoring 34
firewall protection 53
firmware update 33
fixed-IP xDSL 39
fragmentation threshold 78
frequency setting 77

G

Gateway address 40, 60
gateway function 21

H

hacker attack, prevention 53
hardware, description 15

I

IEEE 802.11g 75
 configuring interface 76
initial configuration 23
installation, connecting cables 21
installing the device 20
IP address 40, 45
IP filters 54
IPsec 51

L

L2TP 39, 51
LAN status information 31
language selection 24, 33
LEDs 16, 17
logging, system 36
login, web 23
lost password, recovery 88

M

MAC address filters 56
MDI/MDI-X, automatic 17
messages, logging 36

N

NAT setting 48
network name, wireless 77

O

open system 79
operating frequency 90, 91

P

package checklist 20
panels, front and rear 15
password, setting 32
phone settings 72
ping discard 53
port indicators 16, 17
power socket 18
power supply, specifications 89
PPTP 39, 51
private IP 49
private port 49
proxy server port 66

R

radio mode 76
rear panel sockets 18
reboot unit 37, 88
Reset button 18
resetting the unit 37, 88
RJ-45 ports 17
RTS threshold 78

S

security, options 79
Setup Wizard
 launching 25
Simple Network Time Protocol See SNTP
SIP settings 66
slot time 79
SNTP 35
 enabling client 35
software update 33
SSID 77
static routing table 61
subnet mask 40, 45, 60
subscriber station 14
system clock, setting 35
system indicators 16, 17
system information 32
system log 36
system time 35

T

time updates 35
TKIP encryption 82

U

upgrading software 33

W

WAN connection type 31
web management interface
 access 23
 login 23
 troubleshooting 88
WEP security 80
wireless network mode 76
Wizard, setup 25
WPA pre-shared key 81

Europe – EU Declaration of Conformity

This device complies with the essential requirements of the R&TTE Directive 1999/5/EC. The following test methods have been applied in order to prove presumption of conformity with the essential requirements of the R&TTE Directive 1999/5/EC:

EN 60950-1 :2006 + A11:2009
Safety of Information Technology Equipment

EN 50385 : (2002-08)
Product standard to demonstrate the compliance of radio base stations and fixed terminal stations for wireless telecommunication systems with the basic restrictions or the reference levels related to human exposure to radio frequency electromagnetic fields (110MHz - 40 GHz) - General public

EN 300 328 V1.7.1: (2006-10)
Electromagnetic compatibility and Radio spectrum Matters (ERM); Wideband Transmission systems; Data transmission equipment operating in the 2,4 GHz ISM band and using spread spectrum modulation techniques; Harmonized EN covering essential requirements under article 3.2 of the R&TTE Directive

EN 301 489-1 V1.8.1: (2008-04)
Electromagnetic compatibility and Radio Spectrum Matters (ERM); ElectroMagnetic Compatibility (EMC) standard for radio equipment and services; Part 1: Common technical requirements

EN 301 489-17 V1.3.2 (2008-04)
Electromagnetic compatibility and Radio spectrum Matters (ERM); ElectroMagnetic Compatibility (EMC) standard for radio equipment and services; Part 17: Specific conditions for 2,4 GHz wideband transmission systems and 5 GHz high performance WLAN equipment

EN 302 326-2 V1.2.2(2007-06)
Fixed Radio Systems; Multipoint Equipment and Antennas; Part 2: Harmonized EN covering the essential requirements of article 3.2 of the R&TTE Directive for Digital Multipoint Radio Equipment

EN 302 544 V1.1.2: 2010
Broadband Data Transmission Systems operating in the 2 500 MHz to 2 690 MHz frequency band; Part 2: TDD User Equipment Stations; Harmonized EN covering the essential requirements of article 3.2 of the R&TTE Directive

EN 55022: 2006 A1:2007
Information technology equipment - Radio disturbance characteristics - Limits and methods of measurement

EN 55024: 2010



Information technology equipment — Immunity characteristics — Limits and methods of measurement

This device is a 2.3G & 2.5G Wimax + 2.4G Wifi wideband transmission system (transceiver), intended for use in all EU member states and EFTA countries, except in France and Italy where restrictive use applies.

In Italy the end-user should apply for a license at the national spectrum authorities in order to obtain authorization to use the device for setting up outdoor radio links and/or for supplying public access to telecommunications and/or network services.

This device may not be used for setting up outdoor radio links in France and in some areas the RF output power may be limited to 10 mW EIRP in the frequency range of 2454 – 2483.5 MHz. For detailed information the end-user should contact the national spectrum authority in France.

CE0560!

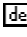 Český [Czech]	<i>[Jméno výrobce]</i> tímto prohlašuje, že tento <i>[typ zařízení]</i> je ve shodě se základními požadavky a dalšími příslušnými ustanoveními směrnice 1999/5/ES.
 Dansk [Danish]	Undertegnede <i>[fabrikantens navn]</i> erklærer herved, at følgende udstyr <i>[udstyrets typebetegnelse]</i> overholder de væsentlige krav og øvrige relevante krav i direktiv 1999/5/EF.
 Deutsch [German]	Hiermit erkläre <i>[Name des Herstellers]</i> , dass sich das Gerät <i>[Gerätetyp]</i> in Übereinstimmung mit den grundlegenden Anforderungen und den übrigen einschlägigen Bestimmungen der Richtlinie 1999/5/EG befindet.
 Eesti [Estonian]	Kõesolevaga kinnitab <i>[tootja nimi = name of manufacturer]</i> seadme <i>[seadme tüüp = type of equipment]</i> vastavust direktiivi 1999/5/EÜ põhinõuetele ja nimetatud direktiivist tulenevatele teistele asjakohastele sätetele.
 English	Hereby, <i>[name of manufacturer]</i> , declares that this <i>[type of equipment]</i> is in compliance with the essential requirements and other relevant provisions of Directive 1999/5/EC.
 Español [Spanish]	Por medio de la presente <i>[nombre del fabricante]</i> declara que el <i>[clase de equipo]</i> cumple con los requisitos esenciales y cualesquiera otras disposiciones aplicables o exigibles de la Directiva 1999/5/CE.
 Ελληνική [Greek]	ΜΕ ΤΗΝ ΠΑΡΟΥΣΑ <i>[name of manufacturer]</i> ΔΗΛΩΝΕΙ ΟΤΙ <i>[type of equipment]</i> ΣΥΜΜΟΡΦΩΝΕΤΑΙ ΠΡΟΣ ΤΙΣ ΟΥΣΙΩΔΕΙΣ ΑΠΑΙΤΗΣΕΙΣ ΚΑΙ ΤΙΣ ΛΟΙΠΕΣ ΣΧΕΤΙΚΕΣ ΔΙΑΤΑΞΕΙΣ ΤΗΣ ΟΔΗΓΙΑΣ 1999/5/ΕΚ.
 Français [French]	Par la présente <i>[nom du fabricant]</i> déclare que l'appareil <i>[type d'appareil]</i> est conforme aux exigences essentielles et aux autres dispositions pertinentes de la directive 1999/5/CE.
 Italiano [Italian]	Con la presente <i>[nome del costruttore]</i> dichiara che questo <i>[tipo di apparecchio]</i> è conforme ai requisiti essenziali ed alle altre disposizioni pertinenti stabilite dalla direttiva 1999/5/CE.
Latviski [Latvian]	Ar šo <i>[name of manufacturer / izgatavotāja nosaukums]</i> deklarē, ka <i>[type of equipment / iekārtas tips]</i> atbilst Direktīvas 1999/5/EK būtiskajām prasībām un citiem ar to saistītajiem noteikumiem.
Lietuvių [Lithuanian]	Šiuo <i>[manufacturer name]</i> deklaruoją, kad šis <i>[equipment type]</i> atitinka esminius reikalavimus ir kitas 1999/5/EB Direktyvos nuostatas.
 Nederlands [Dutch]	Hierbij verklaart <i>[naam van de fabrikant]</i> dat het toestel <i>[type van toestel]</i> in overeenstemming is met de essentiële eisen en de andere relevante bepalingen van richtlijn 1999/5/EG.
 Malti [Maltese]	Hawnhekk, <i>[isem tal-manifattur]</i> , jiddikjara li dan <i>[il-mudel tal-prodott]</i> jikkonforma mal-ħtiġijiet essenzjali u ma provvedimenti oħrajn relevanti li hemm fid-Dirrettiva 1999/5/EC.
 Magyar [Hungarian]	Alulírott, <i>[gyártó neve]</i> nyilatkozom, hogy a <i>[... típus]</i> megfelel a vonatkozó alapvető követelményeknek és az 1999/5/EC irányelv egyéb előírásainak.

<p>[pl]Polski [Polish]</p>	<p>Niniejszym <i>[nazwa producenta]</i> oświadcza, że <i>[nazwa wyrobu]</i> jest zgodny z zasadniczymi wymogami oraz pozostałymi stosownymi postanowieniami Dyrektywy 1999/5/EC.</p>
<p>[pt]Português [Portuguese]</p>	<p><i>[Nome do fabricante]</i> declara que este <i>[tipo de equipamento]</i> está conforme com os requisitos essenciais e outras disposições da Directiva 1999/5/CE.</p>
<p>[sl]Slovensko [Slovenian]</p>	<p><i>[Ime proizvajalca]</i> izjavlja, da je ta <i>[tip opreme]</i> v skladu z bistvenimi zahtevami in ostalimi relevantnimi določili direktive 1999/5/ES.</p>
<p>Slovensky [Slovak]</p>	<p><i>[Meno výrobcu]</i> týmto vyhlasuje, že <i>[typ zariadenia]</i> spĺňa základné požiadavky a všetky príslušné ustanovenia Smernice 1999/5/ES.</p>
<p>[fi]Suomi [Finnish]</p>	<p><i>[Valmistaja = manufacturer]</i> vakuuttaa täten että <i>[type of equipment = laitteen tyyppimerkintä]</i> tyyppinen laite on direktiivin 1999/5/EY oleellisten vaatimusten ja sitä koskevien direktiivin muiden ehtojen mukainen.</p>
<p>[sv]Svenska [Swedish]</p>	<p>Härmed intygar <i>[företag]</i> att denna <i>[utrustningstyp]</i> står i överensstämmelse med de väsentliga egenskapskrav och övriga relevanta bestämmelser som framgår av direktiv 1999/5/EG.</p>

RG300

*WiMAX IEEE 802.16e Indoor Gateway
with 2.3 and 2.5 GHz Frequency Band Support,
Up to Four LAN (RJ-45) Ports,
Up to Two VoIP (RJ-11) Ports,
and Optional 802.11n Wi-Fi*

Models with Wi-Fi

<i>RG300</i>	
<i>RG300-2.5</i>	<i>RG300-2.3</i>
<i>RG300-2.5-4D2V1W</i>	<i>RG300-2.3-4D2V1W</i>
<i>RG300-2.5-4D1W</i>	<i>RG300-2.3-4D1W</i>
<i>RG300-2.5-1D2V1W</i>	<i>RG300-2.3-1D2V1W</i>
<i>RG300-2.5-1D1V1W</i>	<i>RG300-2.3-1D1V1W</i>
<i>RG300-2.5-1D1W</i>	<i>RG300-2.3-1D1W</i>

Models without Wi-Fi

<i>RG300</i>	
<i>RG300-2.5</i>	<i>RG300-2.3</i>
<i>RG300-2.5-4D2V</i>	<i>RG300-2.3-4D2V</i>
<i>RG300-2.5-4D</i>	<i>RG300-2.3-4D</i>
<i>RG300-2.5-1D1V</i>	<i>RG300-2.3-1D1V</i>
<i>RG300-2.5-1D</i>	<i>RG300-2.3-1D</i>

(where D=LAN ports, V=VoIP ports, W=Wi-Fi)

COMPLIANCES

FEDERAL COMMUNICATION COMMISSION INTERFERENCE STATEMENT

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one of the following measures:

- ◆ Reorient or relocate the receiving antenna
- ◆ Increase the separation between the equipment and receiver
- ◆ Connect the equipment into an outlet on a circuit different from that to which the receiver is connected
- ◆ Consult the dealer or an experienced radio/TV technician for help

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

FCC Caution: Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate this equipment.

IMPORTANT NOTE: FCC RADIATION EXPOSURE STATEMENT

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 20 cm between the radiator and your body.

This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.

Due to the essential high output power nature of WiMAX devices, use of this device with other transmitters at the same time may exceed the FCC RF exposure limit and such usage must be prohibited (unless such co-transmission has been approved by FCC in the future).

EC CONFORMANCE DECLARATION (CE)

Marking by the above symbol indicates compliance with the Essential Requirements of the R&TTE Directive of the European Union (1999/5/EC). This equipment meets the following conformance standards:

- ◆ EN 60950-1 (IEC 60950-1) - Product Safety
- ◆ EN 301 489-1, EN 301 489-4, EN 302 326-2 (V1.2.2), EN 302 326-3 (V1.2.2) - EMC requirements for radio equipment

This device is intended for use in all European Community countries.

NCC 警語**Wi-Fi:**

經型式認證合格之低功率射頻電機，非經許可，公司、商號或使用者均不得擅自變更頻率、加大功率或變更原設計之特性及功能。

低功率射頻電機之使用不得影響飛航安全及干擾合法通信；經發現有干擾現象時，應立即停用，並改善至無干擾時方得繼續使用。前項合法通信，指依電信法規定作業之無線電通信。低功率射頻電機須忍受合法通信或工業、科學及醫療用電波輻射性電機設備之干擾。

WiMAX:

減少電磁波影響，請妥適使用。

ABOUT THIS GUIDE

PURPOSE This guide details the hardware features of the RG300 WiMAX 802.16e Indoor Gateway, including its physical and performance-related characteristics, and how to install the device and use its configuration software.

AUDIENCE This guide is for PC users with a working knowledge of computers. You should be familiar with Windows operating system concepts.

CONVENTIONS The following conventions are used throughout this guide to show information:



NOTE: Emphasizes important information or calls your attention to related features or instructions.



CAUTION: Alerts you to a potential hazard that could cause loss of data, or damage the system or equipment.



WARNING: Alerts you to a potential hazard that could cause personal injury.

RELATED PUBLICATIONS The following publication gives basic information on how to install and use the WiMAX 802.16e Indoor Gateway.

Quick Installation Guide

Also, as part of the WiMAX 802.16e Indoor Gateway's configuration software, there is online help that describes all management features.

REVISION HISTORY This section summarizes the changes in each revision of this guide.

APRIL 2011 REVISION

This is the first revision of this guide. This guide is valid for software version 1.0.2.0.

CONTENTS

COMPLIANCES	3	
ABOUT THIS GUIDE	5	
CONTENTS	6	
FIGURES	10	
TABLES	12	
<hr/>		
SECTION I	GETTING STARTED	13
1	INTRODUCTION	14
	RG300 Hardware Description	15
	Wi-Fi Option	15
	Power Status LED	16
	Wi-Fi Status LED	17
	WiMAX Signal LEDs	17
	LAN Ports	17
	VoIP Phone Ports	18
	Power Adapter Socket	18
	Reset Button	18
2	INSTALLING THE RG300	20
	Package Checklist	20
	Installation Overview	20
	Select a Location	20
	Cable Connections	21
3	INITIAL CONFIGURATION	23
	Accessing the Web Management Interface	23
	Home Page	24
	Using the Basic Setup Wizard	25
	The Advanced Setup Menu	27

	Common Web Page Buttons	28
SECTION II	WEB CONFIGURATION	29
4	SYSTEM SETTINGS	30
	System Status	31
	Administrator Settings	32
	Firmware Upgrade	33
	Configuration Tools	34
	System Time	35
	System Log	36
	Reset	37
5	WAN CONFIGURATION	38
	WAN Settings	39
	Dynamic IP Address	40
	Static IP Settings	40
	L2TP Settings	41
	PPTP Settings	41
	DNS	42
	DDNS	43
6	LAN CONFIGURATION	44
	LAN Settings	45
	DHCP Client List	46
7	NAT CONFIGURATION	47
	NAT Settings	48
	Port Mapping	49
	DMZ	50
	ALG	51
8	FIREWALL CONFIGURATION	52
	Firewall Settings	53
	Client Filtering	54
	Port Filtering	55
	MAC Filtering	56
	URL Filtering	57

Host Filtering	58	
9 ROUTING CONFIGURATION	59	
Routing Table	60	
Static Route	61	
10 UPnP CONFIGURATION	62	
UPnP	63	
11 VOIP SETTINGS	64	
SIP Account	65	
SIP Settings	66	
Speed Dial	67	
Dial Plan	68	
Call Feature	70	
Phone Settings	72	
Codecs	73	
12 WI-FI SETTINGS	75	
Basic Wireless Settings	76	
Advanced Wireless Settings	78	
Wireless Security	79	
Wired Equivalent Privacy (WEP)	80	
WPA Pre-Shared Key	81	
ACL Settings	83	
13 QoS CONFIGURATION	84	
QoS Settings	85	
SECTION III	APPENDICES	86
A TROUBLESHOOTING	87	
Diagnosing LED Indicators	87	
Cannot Connect to the Internet	87	
Cannot Access Web Management	88	
Forgot or Lost the Password	88	
Resetting the Unit	88	
B HARDWARE SPECIFICATIONS	89	

Physical Specifications	89
WiMAX Specifications	90
VoIP Specifications	90
Wi-Fi Specifications	91
Compliances	92
C CABLES AND PINOUTS	93
Twisted-Pair Cable Assignments	93
10/100BASE-TX Pin Assignments	93
Straight-Through Wiring	94
Crossover Wiring	95
RJ-11 Port	96
GLOSSARY	97
INDEX	102

FIGURES

Figure 1: Front of the RG300	15
Figure 2: RG300 LED Indicators	16
Figure 3: Back of the RG300	18
Figure 4: Base of the RG300	19
Figure 5: RG300 Connections	21
Figure 6: Login Page	23
Figure 7: Home Page	24
Figure 8: WiMAX Account Login	25
Figure 9: Confirm Settings	26
Figure 10: Setup Wizard Finished	26
Figure 11: Advanced Setup	27
Figure 12: Common Web Page Buttons	28
Figure 13: System Status – Internet	31
Figure 14: System Status – Gateway	31
Figure 15: System Status – Information	32
Figure 16: Setting a Password	32
Figure 17: Firmware Upgrade	33
Figure 18: Configuration Tools	34
Figure 19: Restore Configuration Settings	34
Figure 20: System Time	35
Figure 21: System Log	36
Figure 22: Reset Unit	37
Figure 23: WAN Settings	39
Figure 24: Dynamic IP Address	40
Figure 25: Static IP Settings	40
Figure 26: L2TP Settings	41
Figure 27: PPTP Settings	41
Figure 28: DNS Settings	42
Figure 29: DDNS Settings	43
Figure 30: LAN Settings	45
Figure 31: DHCP Client List	46

Figure 32: NAT Settings	48
Figure 33: Port Mapping	49
Figure 34: DMZ Settings	50
Figure 35: ALG Settings	51
Figure 36: Firewall Settings	53
Figure 37: Client Filtering Settings	54
Figure 38: Port Filtering	55
Figure 39: MAC Filtering	56
Figure 40: URL Filtering	57
Figure 41: Host Filtering	58
Figure 42: Routing Table	60
Figure 43: Static Route	61
Figure 44: UPnP Setting	63
Figure 45: SIP Account Settings	65
Figure 46: SIP Settings	66
Figure 47: Speed Dial	67
Figure 48: Dial Plan Settings	68
Figure 49: Call Features	70
Figure 50: Phone Settings	72
Figure 51: VoIP Codecs	73
Figure 52: Wireless Settings	76
Figure 53: Advanced Wireless Settings	78
Figure 54: Security Mode Options	80
Figure 55: Security Mode - WEP	80
Figure 56: Security Mode - WPA-PSK	81
Figure 57: ACL Settings	83
Figure 58: QoS Settings	85
Figure 59: RJ-45 Connector	93
Figure 60: Straight Through Wiring	94
Figure 61: Crossover Wiring	95
Figure 62: RJ-11 Port Pinout	96

TABLES

Table 1: Power Status LED	16
Table 2: Wi-Fi Status LED	17
Table 3: WiMAX Signal Status LEDs	17
Table 4: LAN Port Status LED	18
Table 5: Dial Plan Elements	68
Table 6: Troubleshooting Chart	87
Table 7: 10/100BASE-TX MDI and MDI-X Port Pinouts	94
Table 8: RJ-11 Port Pinout	96

SECTION I

GETTING STARTED

This section provides an overview of the RG300, and describes how to install and mount the unit. It also describes the basic settings required to access the management interface and run the setup Wizard.

This section includes these chapters:

- ◆ ["Introduction" on page 14](#)
- ◆ ["Installing the RG300" on page 20](#)
- ◆ ["Initial Configuration" on page 23](#)

1

INTRODUCTION

The RG300 WiMAX 802.16e Indoor Gateway is a WiMAX subscriber station designed to provide Internet access for a home or small office. The unit provides a gateway function between a WiMAX service provider and a local Ethernet LAN. The device enables a service provider to deliver last mile broadband wireless access as an alternative to wired DSL or cable modems.

The RG300 includes up to four RJ-45 Ethernet ports for LAN connections and up to two RJ-11 Voice over IP (VoIP) phone ports. Units also support an IEEE 802.11b/g/n Wi-Fi module that provides a local Wi-Fi access point service.

The RG300 offers a user-friendly web-based management interface for the configuration of all the unit's features. Any PC directly attached to the unit can access the management interface using a web browser, such as Internet Explorer (version 6.0 or above) or Firefox (version 1.5 or above).

RG300 HARDWARE DESCRIPTION

The front of the RG300 provides an array of system status indicators. The back includes four LAN ports for 10/100 Mbps Ethernet connections, two RJ-11 VoIP phone ports, and a DC power jack.

Figure 1: Front of the RG300



Wi-Fi OPTION The RG300 includes an 802.11b/g/n Wi-Fi support. This unit includes internal antennas for local wireless connections to PCs.

POWER STATUS LED The RG300 includes a Power LED indicator that simplifies installation and WiMAX network troubleshooting. The LED, which is located on the front panel, is described in the following table.

Figure 2: RG300 LED Indicators

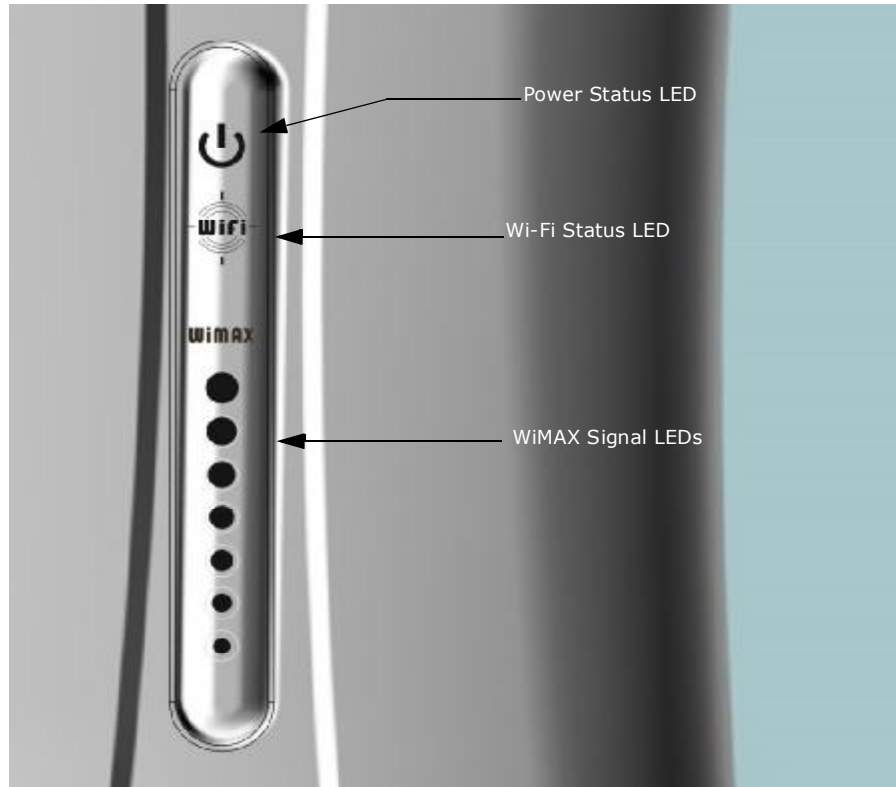


Table 1: Power Status LED

Status	Description
On Green	The unit has completed entry to a WiMAX network.
On Amber	Indicates one of the following conditions: <ul style="list-style-type: none"> ◆ After power on, indicates the unit is running its self test. ◆ Indicates that the network entry process is in progress or has restarted.
On Red	A system failure has occurred.
Off	No power is being supplied to the unit.

Wi-Fi STATUS LED The RG300 includes a Wi-Fi LED indicator that displays the Wi-Fi network status. The LED, which is located on the front panel, is described in the following table.

Table 2: Wi-Fi Status LED

Status	Description
On Green	The Wi-Fi radio is enabled and operating normally.
Flashing Green	Indicates data traffic in the Wi-Fi network.
Off	There is no Wi-Fi connection or the radio is disabled.

WiMAX SIGNAL LEDs The RG300 includes seven WiMAX signal strength LED indicators that display the current WiMAX receive signal status. The LEDs, which are located on the front panel, are described in the following table.


Table 3: WiMAX Signal Status LEDs

LED	Status	Description
1	On Blue	Indicates the receive signal is 5 dB or more.
2	On Blue	Indicates the receive signal is 8 dB or more.
3	On Blue	Indicates the receive signal is 12 dB or more.
4	On Blue	Indicates the receive signal is 15 dB or more.
5	On Blue	Indicates the receive signal is 18 dB or more.
6	On Blue	Indicates the receive signal is 20 dB or more.
7	On Blue	Indicates the receive signal is 25 dB or more.
1-7 in sequence	On Blue	The unit is scanning frequency channels.
All 7 LEDs	Off	No power is being supplied to the unit.

LAN PORTS The RG300 provides up to four 10BASE-T/100BASE-TX RJ-45 ports. The LAN ports are standard RJ-45 Ethernet network ports that connect directly to a PC. They can also be connected to an Ethernet switch or hub to support more users.

The RJ-45 ports support automatic MDI/MDI-X operation, so you can use straight-through cables for all network connections to PCs or servers, or to other switches or hubs. The port supports auto-negotiation, so the optimum transmission mode (half or full duplex), and data rate (10 or 100 Mbps) is selected automatically.

Figure 3: Back of the RG300

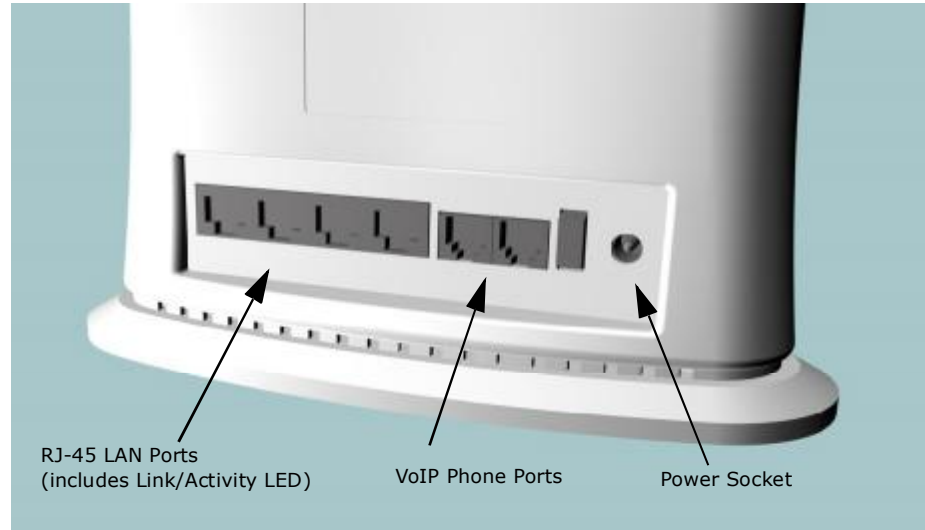

The RJ-45 ports include a built-in LED status indicator. This LED indicator is described in the following table.

Table 4: LAN Port Status LED

LED	Status	Description
Link/Activity	On Green	Ethernet port has a valid link with an attached device.
	Flashing Green	The port is transmitting or receiving data.
	Off	Ethernet port has no link with another device.

VOIP PHONE PORTS The RG300 also provides up to two RJ-11 telephone ports that connect directly to a standard (analog) telephone set. This allows a regular telephone to be used for making VoIP calls over the Internet.


POWER ADAPTER SOCKET The power socket is located on the rear panel of the RG300. The power socket is for the AC power adapter connection.

The unit is powered on when connected to its AC power adapter, and the power adapter is connected to an AC power source between 100-240 volts at 50-60Hz.

RESET BUTTON The Reset button is located on the base of the RG300 and is used to reset the unit or restore the factory default configuration. If you press the button for less than 1 second, the unit will perform a hardware reset. If you press and hold down the button for 5 seconds or more, any configuration

changes you may have made are removed, and the factory default configuration is restored to the unit.

Figure 4: Base of the RG300

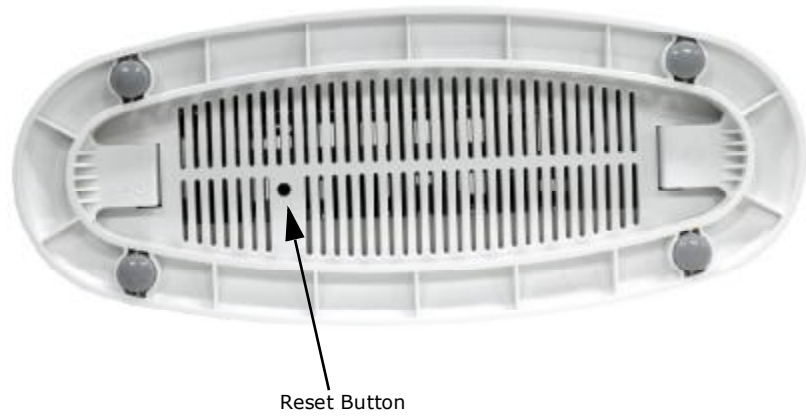

2

INSTALLING THE RG300

This section describes how to install and connect the RG300 WiMAX 802.16e Indoor Gateway.

PACKAGE CHECKLIST

The RG300 package includes:

- ◆ RG300 unit (RG300-2.3 or RG300-2.5)
- ◆ RJ-45 Category 5 network cable
- ◆ AC power adapter
- ◆ Quick Installation Guide
- ◆ User Guide CD

INSTALLATION OVERVIEW

Before installing the RG300, verify that you have all the items listed in the package checklist above. If any of the items are missing or damaged, contact your local dealer. Also, be sure you have all the necessary tools and cabling before installing the RG300.

SELECT A LOCATION

The RG300 can be installed indoors on any horizontal surface, such as a desktop or shelf.

When selecting a suitable location for the device, consider these guidelines:

- ◆ Select a cool, dry place, which is out of direct sunlight.
- ◆ The device should have adequate space (approximately two inches) on all sides for proper air flow.
- ◆ The device must be near an AC power outlet that provides 100 to 240 V, 50 to 60 Hz.

- ◆ The device should be accessible for network cabling and allow the status LED indicators to be clearly visible.




NOTE: If the RG300 displays a weak WiMAX receive signal, try moving it to another location.

CABLE CONNECTIONS

The RG300 is a plug-and-play device, so once it has been connected to your PC and powered up, it is fully operable.

Functioning as a gateway, the unit routes traffic between a WiMAX service provider's base station and PCs or notebooks in the local network.

Figure 5: RG300 Connections

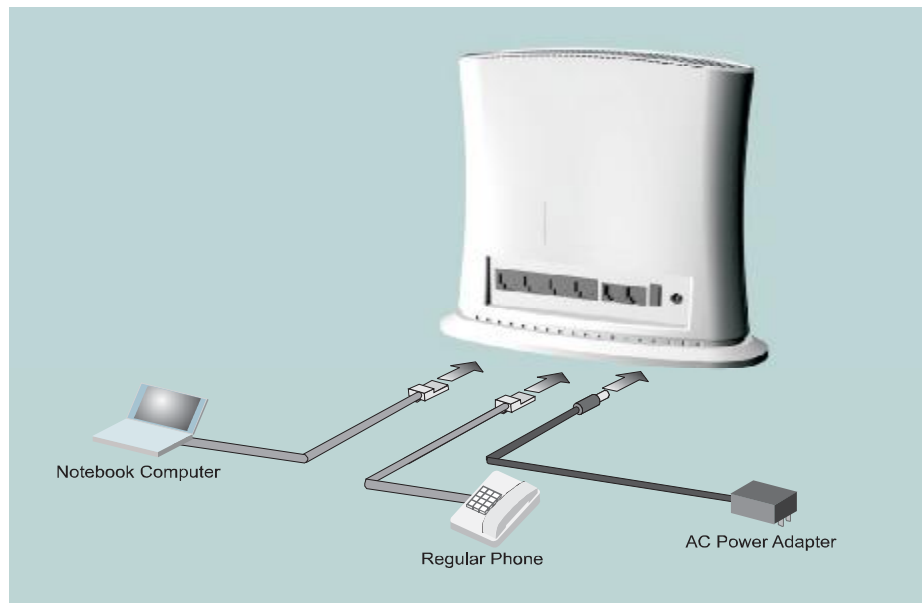

To connect the RG300, follow these steps:

1. Power on the RG300 by first connecting the AC power adapter to the unit's power socket, and then connecting the adapter to an AC power source.



CAUTION: Use ONLY the power adapter supplied with the RG300. Otherwise, the product may be damaged.

2. Observe the Indicator LEDs. When you power on the RG300, verify that the Power LED turns on and that the other LED indicators start functioning as described under "[RG300 Hardware Description](#)" on [page 15](#).
3. Connect Category 5 or better Ethernet cables from the RG300's LAN ports to the network ports of your PCs. Alternatively, you can connect the LAN port to an Ethernet switch or other device. Make sure the length of each cable does not exceed 100 meters (328 ft).

If a PC is powered on, the RJ-45 LAN port LED on the RG300 will turn on to indicate a valid link.

4. (Optional) Connect a standard (analog) telephone set to one of the RG300's VoIP ports using standard telephone cable with RJ-11 plugs.

The RG300 enables VoIP calls to be made through the unit using a standard (analog) telephone set connected to the VoIP port, or from PCs or other network devices connected to the LAN ports. Standard Session Initiation Protocol (SIP) technology is used to make VoIP calls. You must access the web interface and configure settings for your SIP service provider before being able to make VoIP calls.

5. Use your PC's web browser to access the unit's management interface and run the Setup Wizard to make any configuration changes. For more information, see Chapter 3, "[Initial Configuration](#)."

3

INITIAL CONFIGURATION

The RG300 initial configuration steps can be made through its web management interface using the Setup Wizard. It is recommended to make the initial changes by connecting a PC directly to one of the RG300's LAN ports.

ACCESSING THE WEB MANAGEMENT INTERFACE

The RG300 has a default IP address of 192.168.1.1 and a subnet mask of 255.255.255.0. If your PC is set to have an IP address assigned by DHCP (Dynamic Host Configuration Protocol), you can connect immediately to the web management interface. Otherwise, you must first check if your PC's IP address is set on the same subnet as the RG300 (that is, the PC's IP address starts 192.168.1.x).



NOTE: If your RG300 unit is not configured with the standard default IP address and login Username/Password, use the default values on the label affixed to the unit.

In the web browser's address bar, type the default IP address: `http://192.168.1.1`.

The web browser displays the RG300's login page.

Figure 6: Login Page

Please input the username and password of the device manager.

Username

Password

Language

LOGIN

Logging In – Type the default User Name “admin” and Password “admin,” then click Login. The home page displays.

Language – Selects English or Traditional Chinese as the web interface language.




NOTE: It is recommended that you configure a user password as the first step under “Administrator Settings” on page 32 to control management access to the unit.

HOME PAGE The home page displays the current status of the WiMAX connection.

To configure basic settings for the current operating mode, click Basic Setup. For more information, see “Using the Basic Setup Wizard” on page 25.

Alternatively, to configure more detailed settings, click Advanced Setup. For more information, see “The Advanced Setup Menu” on page 27.

Figure 7: Home Page

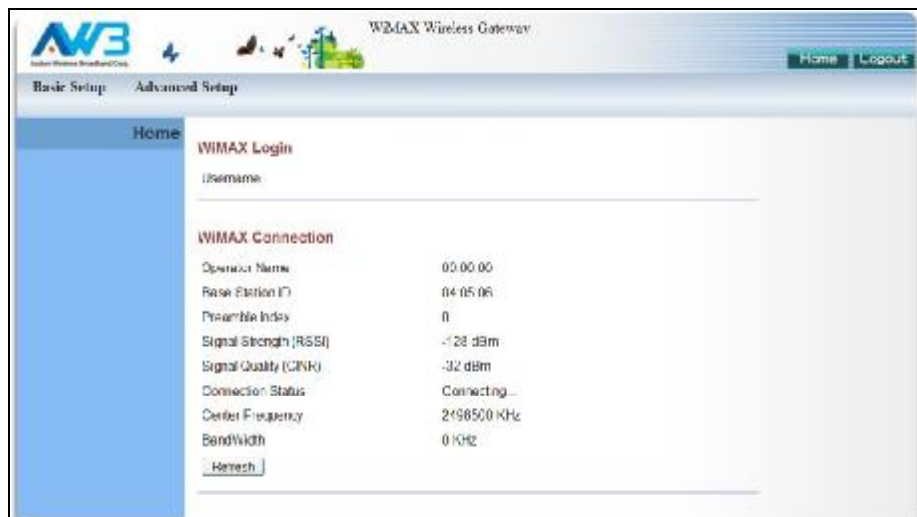

The following parameters are displayed on the home page:

- ◆ **Username** – Describes the WiMAX network login name.
- ◆ **Operator Name** – The identity of the operator network.
- ◆ **Base Station ID** – The identifier of the connected base station.
- ◆ **Preamble Index** – A number that identifies the sector on the connected base station.
- ◆ **Signal Strength** – The current signal strength value of the received WiMAX radio signal.

- ◆ **Signal Quality** – An indication of the carrier-to-interference-plus-noise-ratio (CINR), which measures the strength of the receive signal compared to other interference and noise.
- ◆ **Connection Status** – The current status of the WiMAX connection.
- ◆ **Central Frequency** – The center frequency of the WiMAX signal.
- ◆ **Bandwidth** – The bandwidth of the WiMAX signal.

USING THE BASIC SETUP WIZARD


The Basic Setup Wizard takes you through the basic configuration steps for the RG300.

Launching the Basic Setup Wizard – To perform basic configuration, click Basic Setup on the home page.

When configuring the unit through the Setup Wizard you will need to proceed through the following steps:

1. **WiMAX Account Login** – Configures user authentication settings for connection to the WiMAX network.

Figure 8: WiMAX Account Login

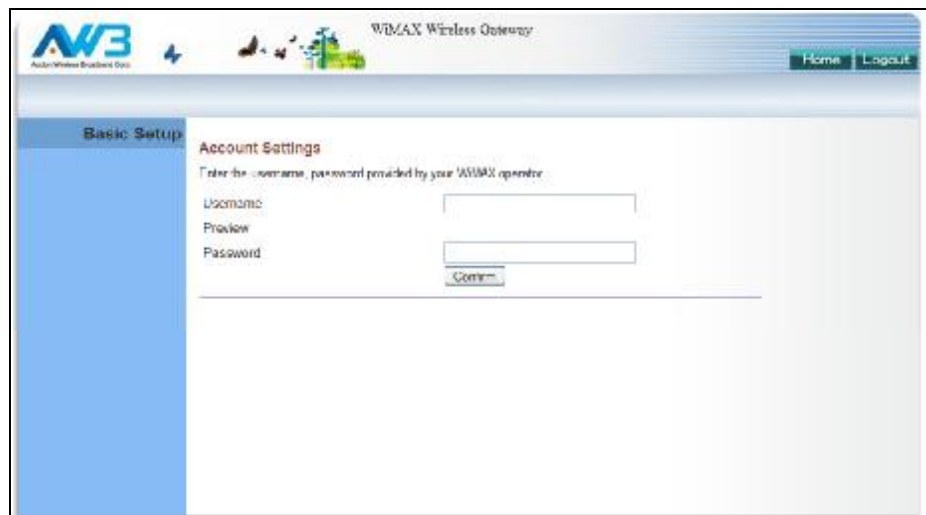

The screenshot shows a web interface for the 'WIMAX Wireless Gateway'. At the top left is the 'AW3' logo. The page title is 'WIMAX Wireless Gateway'. In the top right corner, there are 'Home' and 'Logout' links. A blue sidebar on the left is labeled 'Basic Setup'. The main content area is titled 'Account Settings' and contains the instruction 'Enter the username, password provided by your WIMAX operator'. Below this instruction are three input fields: 'Username', 'Preview', and 'Password'. A 'Continue' button is located below the 'Password' field.


The following parameters are displayed on this page:

- **Username** – The user name required for authentication as provided by the WiMAX operator.
- **Preview** – Displays the current user account that will be used.

- **Password** – The user password required for authentication as provided by the WiMAX operator.


2. **Apply Settings** – Click “Confirm” to apply the basic settings.

Figure 9: Confirm Settings

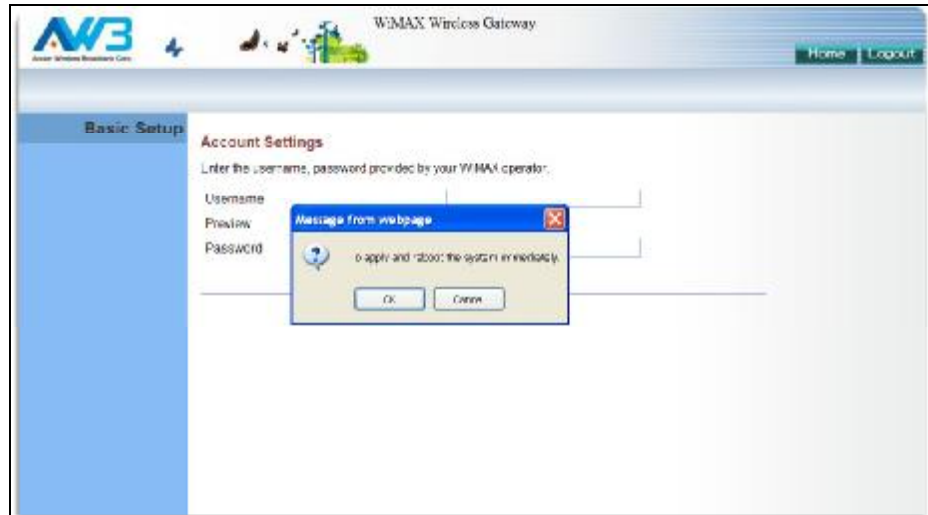

3. **Basic Setup Finished** – When the Basic Setup steps are completed the unit reboots and attempts to connect to the specified WiMAX network. Log in again to return to the Home page.


Figure 10: Setup Wizard Finished

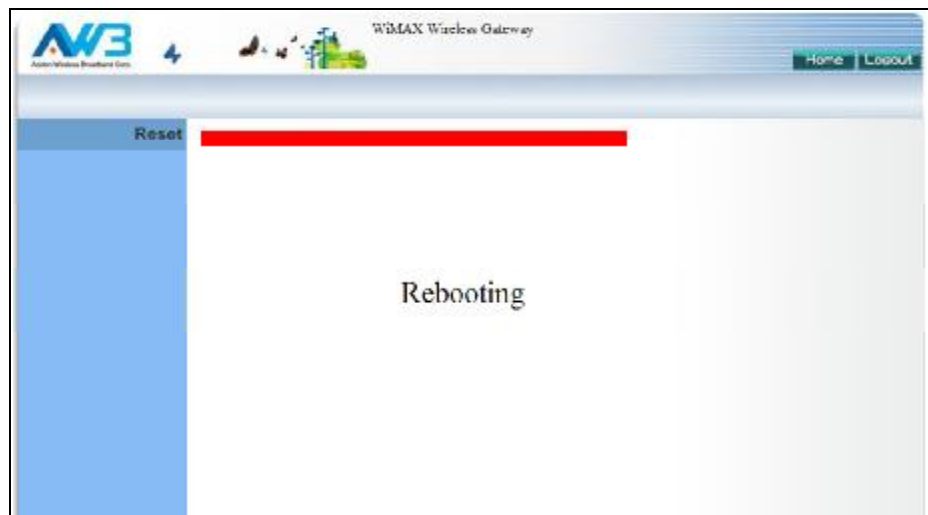

THE ADVANCED SETUP MENU

The Advanced Setup menu provides access to all the configuration settings available for the RG300.

Figure 11: Advanced Setup

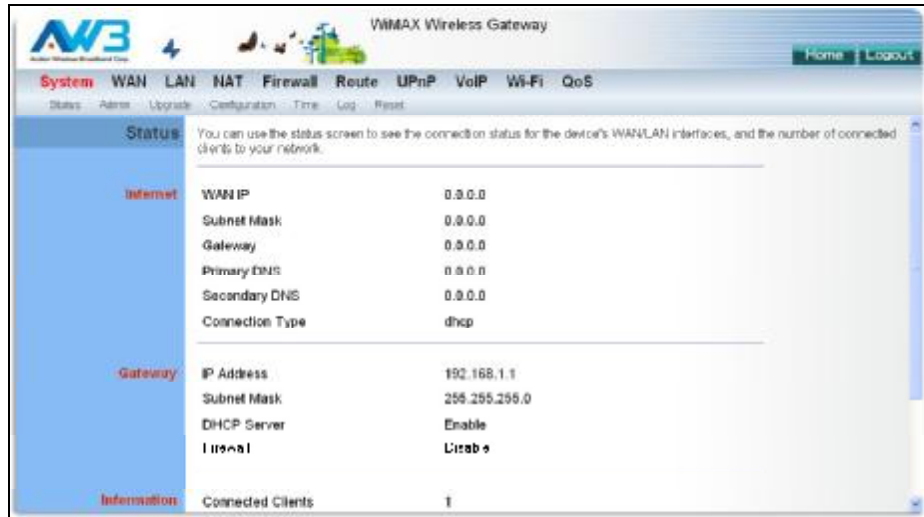

Each primary menu item is summarized below with links to the relevant section in this guide where configuration parameters are described in detail:

- ◆ **System** – Configures general device settings. See [page 30](#).
- ◆ **WAN** – Configures WAN settings. See [page 38](#).
- ◆ **LAN** – Configures LAN settings. See [page 44](#).
- ◆ **NAT** – Configures Network Address Translation settings. See [page 47](#).
- ◆ **Firewall** – Configures firewall settings. See [page 52](#).
- ◆ **Route** – Configures static routing settings. See [page 59](#).
- ◆ **UPnP** – Enables UPnP. See [page 62](#).
- ◆ **VoIP** – Configures VoIP SIP settings. See [page 64](#).
- ◆ **Wi-Fi** – Configures Wi-Fi settings. See [page 75](#).
- ◆ **QoS** – Configures QoS settings. See [page 84](#).

COMMON WEB PAGE BUTTONS

The web management interface includes some common buttons that are displayed at the top of each page.

Figure 12: Common Web Page Buttons



The list below describes these common buttons:

- ◆ **Apply** — Applies all new configuration changes on the current page and saves them to memory.
- ◆ **Home** — Returns to the web management home page.
- ◆ **Logout** — Immediately closes the current web management session.
- ◆ **Reboot** — The Reboot button appears after some configuration changes that require the Gateway to be reset. You can make as many changes as you want before restarting the Gateway. All changes are saved as they are made, but do not become active until after a restart.

SECTION II

WEB CONFIGURATION

This section provides details on configuring the RG300 using the web browser interface.

This section includes these chapters:

- ◆ "System Settings" on page 30
- ◆ "WAN Configuration" on page 38
- ◆ "LAN Configuration" on page 44
- ◆ "NAT Configuration" on page 47
- ◆ "Firewall Configuration" on page 52
- ◆ "Routing Configuration" on page 59
- ◆ "UPnP Configuration" on page 62
- ◆ "VoIP Settings" on page 64
- ◆ "Wi-Fi Settings" on page 75
- ◆ "QoS Configuration" on page 84

4

SYSTEM SETTINGS

The RG300's System menu allows you to perform general management functions for the unit, including setting the system time, configuring an access password, and upgrading the system software.

The System configuration pages include the following options:

- ◆ "System Status" on page 31
- ◆ "Administrator Settings" on page 32
- ◆ "Firmware Upgrade" on page 33
- ◆ "Configuration Tools" on page 34
- ◆ "System Time" on page 35
- ◆ "System Log" on page 36
- ◆ "Reset" on page 37

SYSTEM STATUS

The system status page displays connectivity status information for the unit's WiMAX (WAN) and LAN interfaces, and the number of clients connected to the network.

Figure 13: System Status – Internet

Internet	WAN IP	0.0.0.0
	Subnet Mask	0.0.0.0
	Gateway	0.0.0.0
	Primary DNS	0.0.0.0
	Secondary DNS	0.0.0.0
	Connection Type	dhcp

Internet – Displays WAN (WiMAX) connection status:

- ◆ **WAN IP** – Displays the IP address assigned by the service provider.
- ◆ **Subnet Mask** – Displays the WAN subnet mask assigned by the service provider.
- ◆ **Gateway** – Displays the WAN gateway address assigned by the service provider.
- ◆ **Primary DNS** – Displays the WAN primary DNS address.
- ◆ **Secondary DNS** – Displays the WAN secondary DNS address.
- ◆ **Connection Type** – Displays the connection type for the WAN. Either “fixed” for a static IP setting, or “dhcp” for dynamic IP assignment.

Figure 14: System Status – Gateway

Gateway	IP Address	192.168.1.1
	Subnet Mask	255.255.255.0
	DHCP Server	Enable
	Firewall	Disable

Gateway – Display system IP settings, DHCP server, and firewall status:

- ◆ **IP Address** – Displays the unit's IP address.
- ◆ **Subnet Mask** – Displays the subnet mask.
- ◆ **DHCP Server** – Displays the DHCP server status.
- ◆ **Firewall** – Displays the firewall status.

Figure 15: System Status – Information

Information	Connected Clients	1
	LAN MAC Address	00:08:01:02:03:05
	LAN MTU Size	1500
	WAN MAC Address	00:08:01:02:03:04
	WAN MTU Size	1400
	<input type="button" value="Refresh"/>	

Information – Displays the number of connected clients, as well as the unit’s LAN and WAN MAC addresses:

- ◆ **Connected Clients** – Displays the number of connected clients, if any.
- ◆ **LAN MAC Address** – Displays the LAN MAC address.
- ◆ **LAN MTU Size** – The maximum transmission unit size in bytes.
- ◆ **WAN MAC Address** – Displays WAN MAC address.
- ◆ **WAN MTU Size** – The maximum transmission unit size in bytes.

ADMINISTRATOR SETTINGS

The Administrator Settings page enables you to change the password for management access to the RG300.

Figure 16: Setting a Password

Admin	Set a password to restrict management access to the device.	
Password Setup	Current Password	<input type="password"/>
	New Password	<input type="password"/>
	Confirm New Password	<input type="password"/> (3-12 Characters)
Language Setup	Language English <input type="button" value="v"/>	

The following parameters are displayed on this page:

- ◆ **Current Password** – You need to first enter your current administrator password to be able to configure a new one. (Default: admin)



NOTE: If your RG300 unit is not configured with the standard default login Username/Password, use the default values on the label affixed to the unit.

- ◆ **New Password** – Enter a new administrator password. (Range: 3~12 characters)

- ◆ **Confirm New Password** – Enter the new password again for verification. (Range: 3~12 characters)
- ◆ **Language** – Selects English or Traditional Chinese as the web interface language.

FIRMWARE UPGRADE

The Firmware Upgrade page enables you to download new software to the unit.

Figure 17: Firmware Upgrade


The following parameters are displayed on this page:

- ◆ **Upgrade** – Downloads an operation code file from the web management station to the RG300 using HTTP. Use the Browse button to locate the code file locally on the management station and check the Reset Configuration to restore factory defaults. Click Apply to proceed.
- ◆ **Auto Upgrade** – Provides a method to automatically upgrade the Gateway when new code is available, as indicated by the contents of an information file provided by the WiMAX service operator. The Auto Upgrade information file and code file can be located on the same server or different servers.
 - **Enable** – Enables the automatic upgrade feature.
 - **Update Interval** – A time interval (in seconds) for checking the Info URL for new software information.
 - **Limit Rate** – Places a limit on the firmware download rate from the server.
 - **Info URL** – A text string that indicates the location of an Auto Upgrade information file on an FTP server. The file contains information on the version of software available, and the FTP server on which it is located. (For example: <ftp://192.168.1.16/autoupgrade/RG300-autoupgrade.info>)

CONFIGURATION TOOLS

The Configurations Tools page allows you to restore factory default settings, or save and restore the unit’s configuration settings to or from a file on the management station.

Figure 18: Configuration Tools

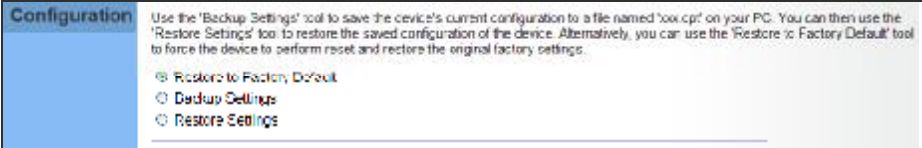

The following parameters are displayed on this page:

- ◆ **Restore Factory Default Configuration** – Resets the unit to its factory default settings. When you select "Restore Factory Default Configuration" and click Apply, a confirmation page displays. Click OK to continue.
- ◆ **Backup Settings** – Saves the current configuration settings to a file on the web management station.
- ◆ **Restore Settings** – Restores a saved configuration file to the unit. Configuration files are plain-text files that can be edited directly to modify settings (not all parameters need be defined). You can use the Browse button to locate the file on the web management station.
 - **Fully Restore Settings** – Restores all settings that are defined in the uploaded configuration file. Any undefined settings are returned to factory defaults.
 - **Merge Settings** – Restores defined settings in the uploaded configuration file. All other undefined settings are not changed.

Figure 19: Restore Configuration Settings



SYSTEM TIME

The RG300 uses the Simple Network Time Protocol (SNTP) to set its internal clock based on periodic updates from a time server. Maintaining an accurate time on the device enables the system log to record meaningful dates and times for event entries.

SNTP uses Coordinated Universal Time (or UTC, formerly Greenwich Mean Time, or GMT) based on the time at the Earth's prime meridian, zero degrees longitude. To display a time corresponding to your local time, you must select your time zone.

Figure 20: System Time


The following parameters are displayed on this page:

- ◆ **Enable** – Enables the unit to set its internal clock based on periodic updates from a time server. The unit acts as an SNTP client, periodically sending time synchronization requests to a specified time server. Alternatively, you can select “None” and set the time and date manually.
- ◆ **Time Server Address** – The IP address of a time server that the unit attempts to poll for a time update.
- ◆ **Current Time (hh:mm:ss)** – The current time of the system clock.
- ◆ **New Time (hh:mm:ss)** – Sets the system clock to the time specified.
- ◆ **Sync with host** – Sets the unit’s time from the web management PC’s system time.
- ◆ **Current Date (yyyy:mm:dd)** – The current date of the system clock.
- ◆ **New Date (yyyy:mm:dd)** – Sets the system clock date.
- ◆ **Set Time Zone** – SNTP uses Coordinated Universal Time (or UTC, formerly Greenwich Mean Time, or GMT) based on the time at the Earth’s prime meridian, zero degrees longitude. To display a time corresponding to your local time, you must select your time zone from the pull-down list.

RESET

The Reset page allows you to restart the device's software. If the unit stops responding correctly or in some way stops functioning, performing a reset can clear the condition.

Figure 22: Reset Unit

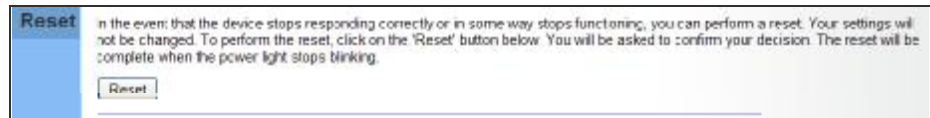

Reset – Resets the unit. All current settings are retained.

5

WAN CONFIGURATION

The information in this chapter covers the configuration options for the RG300's WAN connection.

The WAN configuration pages include the following options:

- ◆ ["WAN Settings" on page 39](#)
- ◆ ["DNS" on page 42](#)
- ◆ ["DDNS" on page 43](#)

WAN SETTINGS

Select the WAN connection type used by your service provider and specify DNS (Domain Name System) servers.

Figure 23: WAN Settings

WAN Settings
To configure the WAN, select your WAN connection type from the drop-down menu.

Connection Type

DHCP IP Address Obtain an IP Address automatically from service provider

Static IP Address Use a Static IP Address. Your service provider gives a Static IP Address to access Internet services.

Retries: (1 ~ 10000)

Timeout: (1 ~ 3600 Seconds)

L2TP
To configure the WAN connection using the Layer 2 Tunneling Protocol (L2TP), an access protocol often used for virtual private networks.

Enable:

PPTP
To configure the WAN connection using the Point-to-Point Tunneling Protocol (PPTP), an access protocol often used for virtual private networks.

Enable:

The unit can be connected to your ISP in one of the following ways:

- ◆ **DHCP IP Address** – Selects configuration for an Internet connection using DHCP for IP address assignment.
- ◆ **Static IP Address** – Selects configuration for an Internet connection using a fixed IP assignment.
- ◆ **Retries** – The maximum number of times the Gateway sends a DHCP request to a DHCP server. (Range: 1-10000)
- ◆ **Timeout** – The maximum time period (in seconds) the Gateway waits for a response from a DHCP server before it resends a request. (Range: 1-3600 seconds)
- ◆ **L2TP** – Selects configuration for an Internet connection using the Layer 2 Tunneling Protocol, an access protocol often used for virtual private networks.
- ◆ **PPTP** – Selects configuration for an Internet connection using the Point-to-Point Tunneling Protocol, an access protocol often used for virtual private networks.



NOTE: For the Dynamic IP Address (DHCP) option, the unit requires no further configuration. Selecting other WAN types displays the parameters that are required for configuring the connection.

DYNAMIC IP ADDRESS For dynamic IP assignment from the service provider, the unit functions as a Dynamic Host Configuration Protocol (DHCP) client. When enabled, no other settings are required.

Figure 24: Dynamic IP Address

The screenshot shows the WAN Settings page with the following configuration:

- WAN Settings:** To address the WAN, select a connection type from the following options.
- Connection Type:**
 - DHCP IP Address: Obtain an IP Address automatically from service provider.
 - Static IP Address: Use a Static IP Address. Your service provider gives a Static IP Address to access Internet service.
- Retries:** 1 (1 ~ 10000)
- Timeout:** 1 (1 ~ 3600 Seconds)
- L2TP:** L2TP operates as a link to remote networks over IPsec tunnels.
 - Enable:**
- PPTP:** PPTP operates as a link to remote networks over IPsec tunnels.
 - Enable:**

STATIC IP SETTINGS Selecting Static IP Address for the WAN type enables you to enter static IP settings as assigned by the service provider.

Figure 25: Static IP Settings

The screenshot shows the WAN Settings page with the following configuration:

- WAN Settings:** To address the WAN, select a connection type from the following options.
- Connection Type:**
 - DHCP IP Address: Obtain an IP Address automatically from service provider.
 - Static IP Address: Use a Static IP Address. Your service provider gives a Static IP Address to access Internet service.
- IP Address:** [] . [] . [] . []
- Netmask:** [] . [] . [] . []
- Gateway:** [] . [] . [] . []

The following parameters are displayed in this section on this page:

- ◆ **IP Address** – The IP address provided by your service provider. Valid IP addresses consist of four decimal numbers, 0 to 255, separated by periods.
- ◆ **Netmask** – Indicates the subnet mask, such as 255.255.255.0.
- ◆ **Gateway** – The gateway IP address provided by your service provider.

L2TP SETTINGS If your service provider supports Layer 2 Tunneling Protocol (L2TP) for your Internet connection, configure the settings described below.

Figure 26: L2TP Settings

The following parameters are displayed in this section on this page:

- ◆ **Enable** – Enables the L2TP settings.
- ◆ **Server IP** – The IP address of the L2TP server, as specified by the service provider.
- ◆ **Username** – Enter your user name for connecting to the L2TP service, as supplied by the service provider. (Range: 1-20 characters)
- ◆ **Password** – Specify the password for your connection, as supplied by the service provider. (Range: 1-20 characters)

PPTP SETTINGS If your service provider supports Point-to-Point Tunneling Protocol (PPTP) for your Internet connection, configure the settings described below.

Figure 27: PPTP Settings

The following parameters are displayed in this section on this page:


- ◆ **Enable** – Enables the PPTP settings.
- ◆ **Server IP** – The IP address of the PPTP server, as specified by the service provider.
- ◆ **Username** – Enter your user name for connecting to the PPTP service, as supplied by the service provider. (Range: 1-20 characters)
- ◆ **Password** – Specify the password for your PPTP connection, as supplied by the service provider. (Range: 1-20 characters)

DDNS

Dynamic DNS (DDNS) provides users on the Internet with a method to tie a specific domain name to the unit's dynamically assigned IP address. DDNS allows your domain name to follow your IP address automatically by changing your DNS records when your IP address changes.

The RG300 provides access to a number DDNS service providers, such as DynDns.org, Easydns.com, and ZoneEdit.com. To set up an DDNS account, visit the website of one of the supported service providers.

Figure 29: DDNS Settings

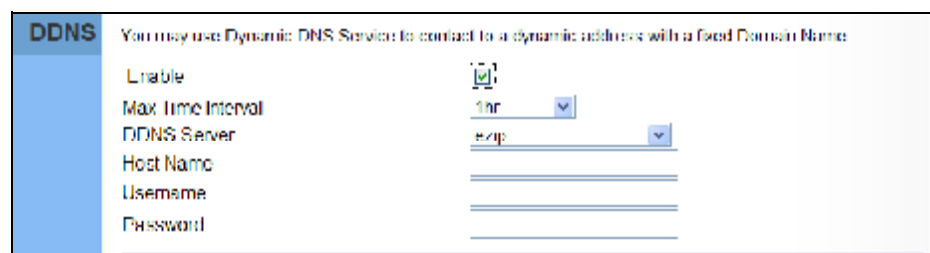

DDNS	
You may use Dynamic DNS Service to contact to a dynamic address with a fixed Domain Name	
Enable	<input checked="" type="checkbox"/>
Max Time Interval	1hr
DDNS Server	ezip
Host Name	
Username	
Password	

The following items are displayed in this section on this page:

- ◆ **Enable** — Enables the DDNS service.
- ◆ **Max Time Interval** — The maximum time period before the Gateway sends an update to the DDNS provider. (Options: 1hr, 3hr, 6hr, 8hr, 12hr, 1 day, 3 days, 1 week)
- ◆ **DDNS Server** — Specifies the DDNS service provider, DynDns.org, Freedns.afraid.org, ZoneEdit.com or Non-IP.com.
- ◆ **Host Name** — Specifies the URL of the DDNS service.
- ◆ **User Name** — Specifies your user name for the DDNS service.
- ◆ **Password** — Specifies your password for the DDNS service.

6

LAN CONFIGURATION

The information in this chapter covers the configuration options for the RG300's LAN functions.

The LAN configuration pages include the following options:

- ◆ "LAN Settings" on page 45
- ◆ "DHCP Client List" on page 46

LAN SETTINGS

The RG300 must have a valid IP address for management using a web browser and to support other features. The unit has a standard default IP address of 192.168.1.1. You can use this IP address or assign another address that is compatible with your existing local network. The unit can also be enabled as a Dynamic Host Configuration Protocol (DHCP) server to allocate IP addresses to local PCs.



NOTE: If your RG300 unit is not configured with the standard default IP address, use the default value on the label affixed to the unit.

The RG300 includes a DHCP server that can assign temporary IP addresses to any attached host requesting the service. Addresses are assigned to clients from a common address pool configured on the unit. Configure an address pool by specifying start and end IP addresses. Be sure not to include the unit's IP address in the address pool range.

Figure 30: LAN Settings

LAN Settings		You can disable DHCP to set static IP addresses to your client PCs			
IP Address		192	168	1	1
Subnet Mask		255	255	255	0
The Gateway acts as DHCP Server		<input checked="" type="checkbox"/>			
IP Pool Starting Address		192	168	1	100
IP Pool Ending Address		192	168	1	150
Lease Time		120m			

The following parameters are displayed on this page:

- ◆ **IP Address** – The IP address of the unit. Valid IP addresses consist of four decimal numbers, 0 to 255, separated by periods. The standard default setting is 192.168.1.1.
- ◆ **Subnet Mask** – Indicates the local IP subnet mask. The default setting is 255.255.255.0.
- ◆ **The Gateway acts as DHCP Server** – Check this box to enable the DHCP server.
- ◆ **IP Pool Starting/Ending Address** – Specifies the start and end IP address of a range that the DHCP server can allocate to DHCP clients. You can specify a single address or an address range. Note that the address pool range must be in the same subnet as the unit's IP setting.
- ◆ **Lease Time** – Selects a time limit for the use of an IP address from the IP pool. When the time limit expires, the client has to request a new IP address. (Options: 1hr, 3hr, 6hr, 8hr, 12hr, 1 day, 3 days, 1 week)

DHCP CLIENT LIST

The DHCP Client List page enables you to see the MAC address of devices that are currently connected to the unit and have been assigned an IP address by the DHCP server.

Figure 31: DHCP Client List



MAC Address	IP Address	Host Name
00:20:5A:00:20:34	192.168.1.100	?

The information in this chapter covers the configuration options for the RG300's Network Address Translation (NAT) functions.


The NAT configuration pages include the following options:

- ◆ "NAT Settings" on page 48
- ◆ "Port Mapping" on page 49
- ◆ "DMZ" on page 50
- ◆ "ALG" on page 51

NAT SETTINGS

Network Address Translation (NAT) is a standard method of mapping multiple "internal" IP addresses to one "external" IP address on devices at the edge of a network. For the RG300, the internal (local) IP addresses are the IP addresses assigned to local PCs by the DHCP server, and the external IP address is the IP address assigned to the WiMAX interface.

Figure 32: NAT Settings



The following item is displayed on this page:

- ◆ **Enable** – Enables NAT on the device.

PORT MAPPING

Using the NAT Port Mapping feature, remote users can access different servers on your local network using your single public IP address.

Remote users accessing services such as web or FTP at your local site through your public IP address, are redirected (mapped) to other local server IP addresses and TCP/UDP port numbers. For example, if you set Type/Public Port to TCP/80 (HTTP or web) and the Private IP/Port to 192.168.7.9/80, then all HTTP requests from outside users forwarded to 192.168.7.9 on port 80. Therefore, by just using your external IP address provided by your ISP, Internet users can access the services they need at the local addresses to which you redirect them.

The more common TCP service port numbers include: HTTP: 80, FTP: 21, Telnet: 23, and SSH: 22.

Figure 33: Port Mapping


The following parameters are displayed on this page:

- ◆ **Private IP** – The IP address of the server on the local Ethernet network. The specified address must be in the same subnet as the RG300 and its DHCP server address pool. Alternatively, the IP address can be set by selecting a PC from the DHCP client list.
- ◆ **Use Client List** – Allows the Private IP to be selected from the DHCP client list.
- ◆ **Private Port** – Specifies the TCP/UDP port number used on the local server for the service. (Range: 1-65535)
- ◆ **Public Port** – Specifies the public TCP/UDP port used for the service on the WAN interface. (Range: 1-65535)
- ◆ **Services** – Specifies port numbers for some of the more common services. (Options: FTP, SSH, Telnet, SMTP, HTTP, HTTPS)
- ◆ **Comment** – A text comment for the forwarding rule.
- ◆ **Add Rules** – Adds the defined rule to the port forwarding table. Use the Delete button next to a rule to remove it from the table.

DMZ

If you have a client PC that cannot run an Internet application properly from behind the NAT firewall, you can open the client up to unrestricted two-way internet access by defining a virtual-DMZ (virtual-demilitarized-zone) host.

Figure 34: DMZ Settings

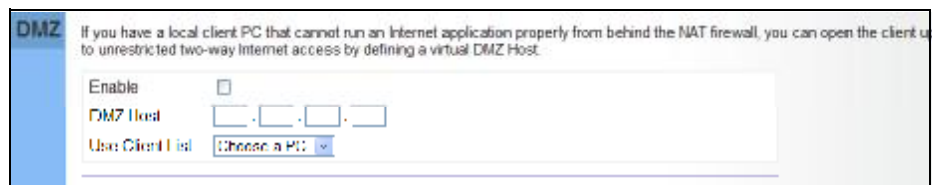

The following parameters are displayed on this page:

- ◆ **Enable** – Enables the feature.
- ◆ **DMZ Host** – Specifies the IP address of the virtual DMZ host. Alternatively, the host IP can be set by selecting a PC from the DHCP client list.
- ◆ **Use Client List** – Allows the host IP to be selected from the DHCP client list.




NOTE: Adding a host to the DMZ may expose your local network to a variety of security risks, so only use this option as a last resort.

ALG

The RG300 supports the passthrough of three of the most commonly used VPN protocols; PPTP, L2TP, and IPsec, as well as VoIP SIP traffic. The VPN protocols allow remote users to establish a secure connection to their corporate network. If your service provider supports VPNs, then these protocols can be used to create an authenticated and encrypted tunnel for passing secure data over the Internet (that is, a traditionally shared data network).

Figure 35: ALG Settings

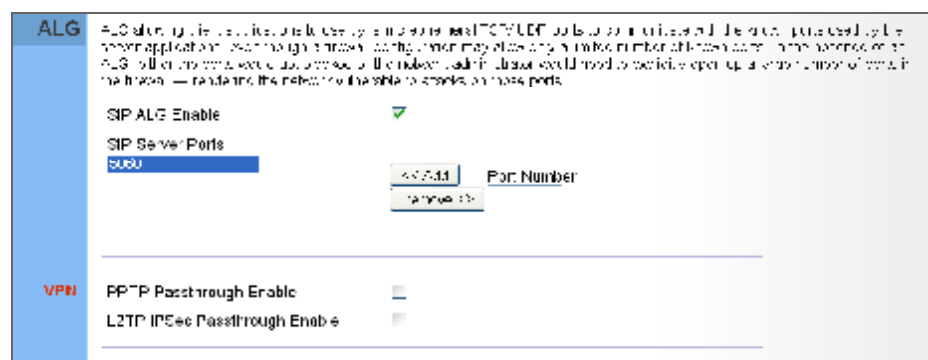

The following items are displayed on this page:

- ◆ **SIP ALG Enable** — Enables the passthrough of VoIP SIP traffic on the configured server port numbers.
- ◆ **SIP Server Ports** — Lists the SIP server ports used for VoIP traffic.
- ◆ **Port Number** — Adds a new SIP Server port number.
- ◆ **PPTP Passthrough** — PPTP (Point-to-Point Tunneling Protocol) provides a secure tunnel for remote client access to a PPTP security gateway. PPTP includes provisions for call origination and flow control required by ISPs.
- ◆ **L2TP IPsec Passthrough** — L2TP (Layer 2 Tunneling Protocol) merges the best features of PPTP and the Layer 2 Forwarding (L2F) protocol. Like PPTP, L2TP requires that the ISP's routers support the protocol. IPsec (Internet Protocol Security) encrypts and authenticates entire IP packets and encapsulates them into new IP packets for secure communications between networks.

The information in this chapter covers the configuration options for the RG300's firewall functions.


The Firewall configuration pages include the following options:

- ◆ "Firewall Settings" on page 53
- ◆ "Client Filtering" on page 54
- ◆ "Port Filtering" on page 55
- ◆ "MAC Filtering" on page 56
- ◆ "URL Filtering" on page 57
- ◆ "Host Filtering" on page 58

FIREWALL SETTINGS

The RG300 provides extensive firewall protection by restricting connection parameters to limit the risk of intrusion and defending against a wide array of common hacker attacks. You can also block access to the Internet from clients on the local network based on IP addresses and TCP/UDP port numbers, or specific MAC addresses.

Figure 36: Firewall Settings

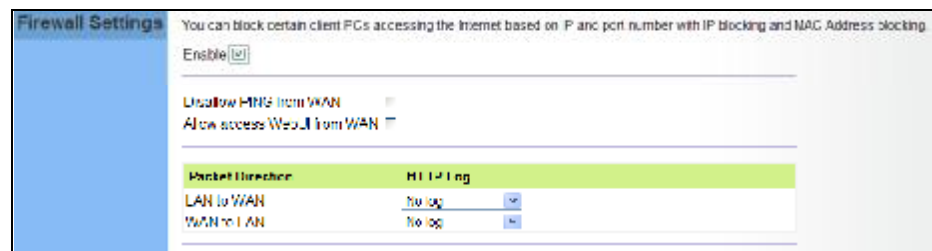

The following parameters are displayed on this page:

- ◆ **Enable** – Enables all firewall features.
- ◆ **Disallow PING from WAN side** – Prevents pings on the unit’s WiMAX interface from being routed to the network.
- ◆ **Allow Access WebUI from WAN** – Allows a user to be able to log into the Gateway web interface from a remote location.
- ◆ **HTTP Log** – Enables LAN-to-WAN and WAN-to-LAN HTTP traffic to be logged. The logged information can be viewed on the system log page.

CLIENT FILTERING

You can block access to the Internet from clients on the local network by specifying IP addresses and TCP/UDP port numbers. You can configure up to five IP filters on the unit.

Figure 37: Client Filtering Settings

Client Filtering You can set here to block certain client PCs accessing the Internet based on IP and port number with IP blocking

Target IP: - - - ~ Any

Destination Port Range: : Any

Protocol: tcp udp Any

This function need to enable firewall first.

Target IP	Destination Port Range	Protocol	Operation
empty data			

The following parameters are displayed on this page:

- ◆ **Target IP** – Specifies an IP address or range on the local network to filter.
- ◆ **Destination Port Range** – Specifies a TCP/UDP port number range to filter. (Range: 1-65535 or Any)
- ◆ **Protocol** – Specifies the the port type. (Options: TCP, UDP, Any)
- ◆ **Add** – Adds a new IP address to the filter table.
- ◆ **Remove** – Removes an IP address from the filter table.

PORT FILTERING

Port filtering restricts connections to limit the risk of intrusion and can defend against a wide array of common hacker attacks. The port filtering feature allows the Gateway to block traffic for a specified schedule based on TCP/UDP ports.

Figure 38: Port Filtering



The following items are displayed on this page:

- ◆ **Available Services** — The TCP/UDP services allowed access to the Gateway. All TCP/UDP ports are open unless specified as blocked. Some common protocols are pre-defined and can be selected to “Add” to the Blocked Services. Select “Custom Port” to define other TCP/UDP port ranges to block.
- ◆ **Operation** — Adds, removes, or clears all blocked services.
- ◆ **Blocked Services** — Lists the TCP/UDP ports that are blocked
- ◆ **Type** — Specifies the port type, TCP, UDP, or TCP/UDP.
- ◆ **Port Number** — Specifies a custom-defined range of TCP/UDP ports to block.
- ◆ **Schedule to Block** — Configures the days of the week and times to block the defined traffic.

MAC FILTERING

You can block access to the Internet from clients on the local network based on MAC addresses. You can configure up to 20 MAC address filters on the unit.

Figure 39: MAC Filtering

MAC Filtering

You can set here to block certain client PCs accessing the Internet based MAC address blocking.

MAC Address: 00 : 11 : 22 : 33 : 44 : 55

Use Client List: Choose a PC

Add This function need to enable Firewall first.

Order	MAC Address	Operation
1	00:11:22:33:44:55	Remove


The following parameters are displayed on this page:

- ◆ **MAC Address** – Specifies a local PC MAC address.
- ◆ **Use Client List** – Selects a local PC MAC address from the Gateway’s DHCP client list table.
- ◆ **Add** – Adds a new MAC address to the filter table.
- ◆ **Remove** – Removes a MAC address from the filter table.

URL FILTERING

The RG300 provides a method for blocking Internet access based on Uniform Resource Locator (URL) keywords. By filtering URLs accessed from the network, users can be prevented from reaching prohibited online content.

Figure 40: URL Filtering

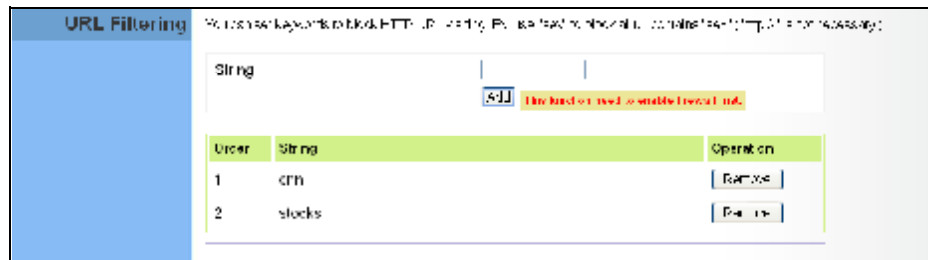


The following items are displayed on this page:

- ◆ **String** — Specifies text keyword contained in URLs that will be filtered. (Maximum 256 characters; invalid characters [\ " & ' # \].)
- ◆ **Add** — Adds a keyword string to the URL filter.
- ◆ **Remove** — Removes an entry from the filter table.

HOST FILTERING

The RG300 provides a method for blocking Internet access based on web domains. A domain name is the name of a particular web site. For example, www.fungames.com.

Figure 41: Host Filtering

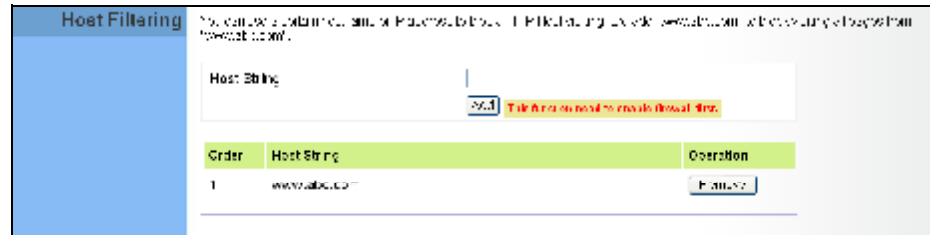

The following items are displayed on this page:

- ◆ **Host String** — Displays current Host filter. (Maximum 256 characters; invalid characters [` " & ' # \].)
- ◆ **Add** — Enters a domain name keyword for a host filtering. For example, myhost.example.com.
- ◆ **Remove** — Removes an entry from the filter table.

9

ROUTING CONFIGURATION

The information in this chapter covers the configuration options for the RG300's Routing functions.

The Routing configuration pages include the following options:

- ◆ ["Routing Table" on page 60](#)
- ◆ ["Static Route" on page 61](#)

ROUTING TABLE

The Routing Table displays the list of static routes on the unit.

Figure 42: Routing Table

Routing Table		The Routing table allows you to see how many routings on your device routing table and interface information		
Route	Gateway	Netmask	Interface	
192.168.1.0	0.0.0.0	255.255.255.0	LAN	
239.0.0.0	0.0.0.0	255.0.0.0	LAN	

The following parameters are displayed in this section on this page:

- ◆ **Route** – The IP address that identifies the IP subnet of the remote network.
- ◆ **Gateway** – The IP address of the router within the local IP subnet that forwards traffic to the remote IP subnet.
- ◆ **Netmask** – The mask that identifies the IP subnet of the remote network.
- ◆ **Interface** – Indicates the local network interface on the unit.

STATIC ROUTE

Static routes allow a manual method to set up routing between specific destination networks, subnetworks, or hosts. Static routes may be required to force the use of a specific route to a subnet. Static routes do not automatically change in response to changes in network topology, so only configure a small number of stable routes to ensure network accessibility.

Figure 43: Static Route

Route	Netmask	Gateway	Operation
empty data			

The following items are displayed on this page:

- ◆ **Enable** — Enables the configured routes in the Static Route table.
- ◆ **Destination** — A destination network or specific host to which packets can be routed.
- ◆ **Netmask** — Network mask for the associated IP subnet. This mask identifies the host address bits used for routing to specific subnets.
- ◆ **Gateway** — The IP address of the router at the next hop to which matching frames are forwarded.
- ◆ **Add** — Adds a new route to the table.

10

UPnP CONFIGURATION

The information in this chapter covers the configuration options for the RG300's Universal Plug and Play Forum (UPnP) feature.


The UPnP configuration pages include the following options:

- ◆ ["UPnP" on page 63](#)

UPnP

UPnP (Universal Plug and Play Forum) provides inter-connectivity between devices supported by the same standard.

Figure 44: UPnP Setting

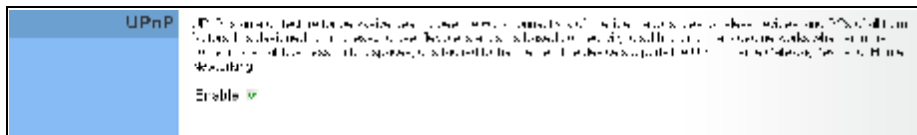

The following parameters are displayed in this section on this page:

- ◆ **UPnP** – Enables UpnP support on the unit.

Voice over Internet Protocol (VoIP) technology is a way of using the Internet to make phone calls. Phone calls can be transmitted over the Internet by encoding a voice call into data packets at one end and then decoding it back into voice calls at the other end. This encoding and decoding is from an analog signal (your voice) into a digital signal (data packets) and then back into an analog signal.

The RG300 uses Session Initiation Protocol (SIP) as the control mechanism that sets up, initiates, and terminates calls between a caller and a called party. The SIP messaging makes use of "Proxy," "Redirect," and "Registration" servers to process call requests and find the location of called parties across the Internet. When SIP has set up a call between two parties, the actual voice communication is a direct peer-to-peer connection using the standard Real-Time Protocol (RTP), which streams the encoded voice data across the network.

You can make VoIP calls by connecting a regular phone to one of the RG300's RJ-11 Phone ports. The RG300 allows up to two RJ-11 Phone ports to be configured separately with different settings.

The VoIP configuration pages include the following options:

- ◆ ["SIP Account" on page 65](#)
- ◆ ["SIP Settings" on page 66](#)
- ◆ ["Speed Dial" on page 67](#)
- ◆ ["Dial Plan" on page 68](#)
- ◆ ["Call Feature" on page 70](#)
- ◆ ["Phone Settings" on page 72](#)
- ◆ ["Codecs" on page 73](#)

SIP ACCOUNT

From the VoIP SIP Account page, you can view the SIP account numbers that have been provided by the service operator.

Figure 45: SIP Account Settings

SIP Account	
Properties of the SIP account used for VoIP service. The name of the SIP account is displayed.	
Proxy Enable <input type="checkbox"/>	
<hr/>	
Phone Line	1
Enable	<input checked="" type="checkbox"/>
Telephone Number	<input type="text"/>
The same with Telephone Number	<input type="checkbox"/>
Outgoing Display Name	<input type="text"/>
<hr/>	
The same with WiMAX Username and Password	<input type="checkbox"/>
SIP Username	<input type="text"/>
SIP Password	<input type="text"/>
Confirm Password	<input type="text"/>
<hr/>	
SIP Registrar / Domain Name	<input type="text"/>
SIP Registrar Port	<input type="text"/>
Reg Keep Live TAO Period (1 ~ 35000) Seconds	3000

The following parameters are displayed on this page:

- ◆ **Proxy Enable** — When enabled, forwards SIP messages to a SIP proxy instead of a SIP domain.
- ◆ **Enable** — Enables the VoIP ports on the Gateway.
- ◆ **Telephone Number** — The phone number that is assigned to this phone line.
- ◆ **The same with Telephone Number** — Uses the specified Telephone Number as the Outgoing Display Name.
- ◆ **Outgoing Display Name** — The name that is displayed to the other party during a call.
- ◆ **The same with WiMAX Username and Password** — Uses the WiMAX user name and password as the SIP user name and password.
- ◆ **SIP Username** — Enter your SIP user name.
- ◆ **SIP Password** — Enter your SIP password.
- ◆ **Confirm Password** — Re-enter your SIP password.

- ◆ **SIP Registrar/Domain Name** — Enter the IP address or server domain name of the SIP server.
- ◆ **SIP Registrar Port** — Enter the port associated with SIP server traffic.
- ◆ **SIP Proxy Address/Domain Name** — Address of the VoIP service provider SIP proxy server.
- ◆ **SIP Proxy Port** — The TCP port number used by the VoIP service provider's SIP proxy server.
- ◆ **Reg Keep Alive I/O Period** — The maximum time (in seconds) between keep-alive messages sent to the SIP register server.

SIP SETTINGS

The SIP Setting page allows you to configure RTP, DTMF, and FAX settings.

Figure 46: SIP Settings

Section	Field	Value
DTMF	Phone Line	1
	DTMF Key Pad	In Band
FAX	Phone Line	1
	FAX	Disable
Session	Phone Line	1
	Session Timer Enable	<input checked="" type="checkbox"/>
	Session Timer Interval	90 ~ 65535) Seconds

The following items are displayed on this page:

- ◆ **RTP Port** — The Real-time Transport Protocol (RTP) and Real-time Control Protocol (RTCP) do not use specified port numbers. You can specify a port base that the RTP and RTCP traffic can use.
- ◆ **DTMF Key Pad** — Enables the sending of dual-tone multi-frequency (touch tone) phone signals over the VoIP connection. There are two methods to choose from:
 - **In-band** — The DTMF signals are sent over the RTP voice stream. In the case when low-bandwidth codecs are used, the DTMF signals may be distorted.
 - **RFC2833** — Uses the RFC 2833 method to relay the DTMF signals over the RTP voice stream without any distortion.

- ◆ **FAX** — Selects the method to use when sending fax messages over the VoIP network from a fax machine connected to one of the RJ-11 Phone ports on the Gateway.
 - **FAX T.38** — The SIP protocol sets up the VoIP call, then the T.38 Fax Relay protocol sends the fax data over the network.
 - **FAX Pass-Through** — Enables voice calls and faxes to be sent from the Phone port connection. For this option, fax signals are sent over the VoIP network using the voice codec, just as if it were a voice call.
- ◆ **Session Timer Enable** — Enables a limit on the duration of VoIP calls.
- ◆ **Session Timer Interval** — Sets the maximum time limit for VoIP calls.

SPEED DIAL

The Speed Dial page allows you to configure up to eight VoIP numbers that are immediately dialed when a user enters the Speed Dial Key sequence (as defined on the Dial Plan page) followed by a speed dial number.

Figure 47: Speed Dial

Speed Dial	
Order	Phone Line 1
1	<input type="text"/>
2	<input type="text"/>
3	<input type="text"/>
4	<input type="text"/>
5	<input type="text"/>
6	<input type="text"/>
7	<input type="text"/>
8	<input type="text"/>

DIAL PLAN

Dial-plan strings specify key sequences used for specific calling features (Transfer, New Call, 3-way conference), as well as defining call restriction filters.

A dial plan can filter the number and pattern of digits that a user dials to reach a particular telephone number. Access codes, area codes, specialized codes, and combinations of the number of digits dialed can all be part of a dial plan. This enables a user to predefine dialling sequences that are permitted.

The dial-plan string consists of a single digit rule. A typical example of a dial-plan string is: [0123]xxxxxx.t

Five standard dial plans are defined; Call Transfer Key, New Call Key, Set Speed Dial Key, Speed Dial Key, and 3-way Conference. Up to 10 other dial plans can be defined by the user.

Figure 48: Dial Plan Settings

Dial Plan		
Number	Action	Plan
1	Call Transfer Key	*#
2	New Call Key	**
3	Set Speed Dial Key	*#
4	Speed Dial Key	*#
5	3-Way Conference Key	*#
6	Dial Plan 1	
7	Dial Plan 2	
8	Dial Plan 3	
9	Dial Plan 4	
10	Dial Plan 5	
11	Dial Plan 6	
12	Dial Plan 7	
13	Dial Plan 8	
14	Dial Plan 9	
15	Dial Plan 10	

The function of elements allowed in a dial plan are described in the table below:

Table 5: Dial Plan Elements

Element	Example	Description
x	xxxx	Represents a digit of any value (0 to 9) that can be dialed on a phone. This example has a rule with four digits of any number.
.	xx.	Indicates zero or more occurrences of the previous symbol. The example acts like a wildcard, meaning any dialed phone number of two or more digits is allowed.
0-9	01xx	Indicates dialed digits that must be matched. This example only allows four-digit numbers starting "01."

Table 5: Dial Plan Elements

Element	Example	Description
[]	[125-8]	Limits a dialed digit to specified values or a range of values. The example specifies that only digits 1, 2, 5, 6, 7, and 8 are permitted.
t	xx.t	The timeout indicator that can be placed after dialed digits or at the end of the dial-plan string.

When a user dials a series of digits, the dial-plan rule is tested for a possible match. If a match is made, the dialed sequence is transmitted. If no match is made, the dialed number is blocked and the user will hear an error tone.

A dial-plan string cannot include spaces between elements. Dialed sequences that are longer than specified in a dial-plan rule are truncated after the number of specified digits. For example, if the dial-plan rule is "011x" and "0115678" is dialed, only the digit sequence "0115" is transmitted.

CALL FEATURE

The RG300 allows you to configure several call features, such as call waiting and call-forwarding. Other call features can be implemented by pressing specific phone buttons or entering dial patterns.



NOTE: Some call features may be dependent on support at the SIP server. Check with the SIP service provider.

Figure 49: Call Features

Call Feature	
Call Waiting	Phone Line 1 Call Waiting Enable <input type="checkbox"/>
Call Transfer	Phone Line 1 Blind Transfer <input type="checkbox"/> Early Transfer <input type="checkbox"/> Attended Transfer <input type="checkbox"/>
Call Forward	Phone Line 1 Always Forward Number <input type="text"/> On Busy Forward Number <input type="text"/> No Answer Forward Number <input type="text"/> No Answer Forward Timer (0 - 20) Seconds <input type="text"/>

The following items are displayed on this page:

- ◆ **Call Waiting** — Enables a call waiting alert. If during a call there is another incoming call, an alert tone is heard. You can place the active call on hold (press the “Flash” or “Flash Hook” button on the phone) and switch to the incoming call.
- ◆ **Call Transfer** — Transfers any received call to another number you specify.
 - **Blind Transfer** — During a call press the “Flash” button, which puts the caller on hold, then enter the transfer key sequence (as defined on the Dial Plan page; default “*#”). You can then dial the transfer number. The call is transferred immediately and you can hang up. The transferred call shows the caller ID of the original calling party and not your caller ID.
 - **Early Transfer** — During a call press the “Flash” button, which puts the caller on hold, then enter the new call key sequence (as defined on the Dial Plan page; default “**”). You can then dial the transfer number. When you hear the transfer number ringtone, enter the transfer key sequence (as defined on the Dial Plan page; default “*#”) and then hang up. The transferred call initially shows your


caller ID when the transferee phone is ringing, but then shows the original calling party ID as soon as you hang up.

- **Attended Transfer** — During a call press the “Flash” button, which puts the caller on hold, then enter the new call key sequence (as defined on the Dial Plan page; default “**”). You can then dial the transfer number and talk to the transferee. After speaking to the transferee, enter the transfer key sequence (as defined on the Dial Plan page; default “*#”) and then hang up to transfer the call. The transferred call shows your caller ID and not the caller ID of the original calling party.
- ◆ **Call Forward** — Configures settings that control various call forwarding features.
 - **Always Forward Number** — Forwards an incoming call to another number.
 - **On Busy Forward Number** — When Call Waiting is disabled, specifies another phone number to which incoming calls are forwarded when the phone is busy.
 - **No Answer Forward Number** — Another phone number to which incoming calls are forwarded when there is no answer.
 - **No Answer Forward Timer** — The time a call waits for an answer before being forwarded to the No Answer Forward Phone Number. (Must be less than or equal to the value of Answer Timeout; Range: 0~20 seconds)

PHONE SETTINGS

The Phone Settings page allows you to configure control features that affect a phone connected to a VoIP port.

Figure 50: Phone Settings

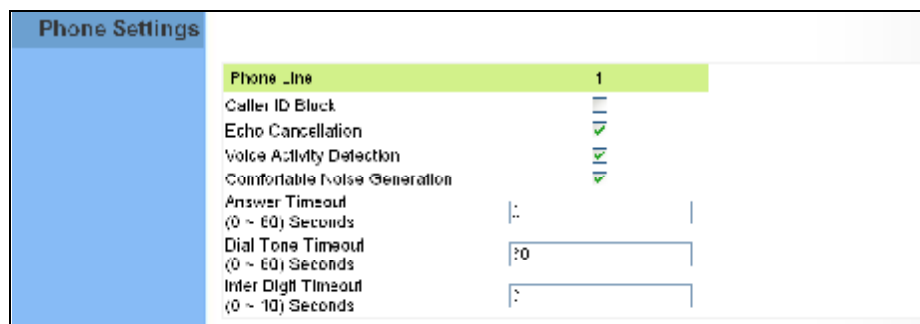

The following items are displayed on this page:


- ◆ **Caller ID Block** — Check this box to enable a block on the displayed ID of incoming calls.
- ◆ **Echo Cancellation** — Enables a time delay for voice echo cancellation. A voice echo can be created on some two-wire phone loops, which becomes increasingly louder and annoying when there is a long delay. If voice echo is a problem during a call, you can enable this parameter to try and reduce or remove it.
- ◆ **Voice Activation Detection** — Enables the detection of periods of silence in the audio stream so that they are not transmitted over the network.
- ◆ **Comfortable Noise Generation** — Creates artificial noise for the listener during detected silent intervals in the audio stream.
- ◆ **Answer Timeout** — The time after which a no answer message is sent to the caller. (Range: 0-60 seconds; Setting of zero disables the timeout)
- ◆ **Dial Tone Timeout** — The length of time a dial tone is heard on a connected phone. (Range: 0-60 seconds; Setting of zero disables the timeout)
- ◆ **Inter Digit Timeout** — The maximum time delay allowed between each dialed digit. When the time is exceeded, a call is made using the dialed digits. (Range: 0-10 seconds; Setting of zero disables the timeout)

CODECS

A codec (coder/decoder) is the way a voice analog signal is converted into a digital bitstream to send over the network, and how it is converted back into an analog signal at the receiving end. Codecs differ in the type of data compression that is used to save network bandwidth and in the time delay caused in the signal. This results in different voice quality experienced by the user.

The voice codecs in common use today have been standardized by the International Telecommunication Union Telecommunication Standardization Sector (ITU-T) and are identified by a standard number, such as G.711. The same codec must be supported at each end of a VoIP call to be able to encode and decode the signal. Since devices in other networks may want to use different codecs, the RG300 supports several common standards.

Figure 51: VoIP Codecs

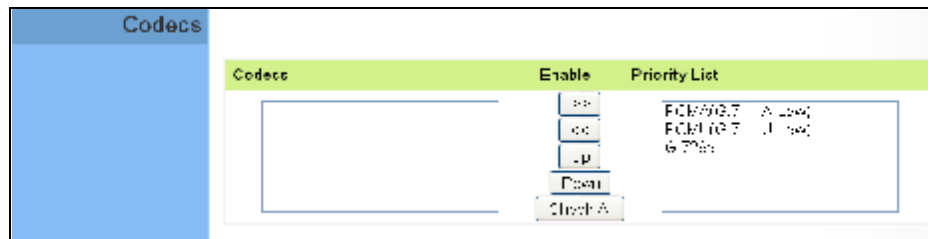

The following items are displayed on this page:

- ◆ **Codecs** — Lists the codecs supported by the Gateway. You can enable specific codecs to use, or enable all. Alternatively, you may want to disable certain codecs, such as high-bandwidth codecs, to preserve network bandwidth.
 - **PCMA (G.711 ALaw)** — The ITU-T G.711 with A-law standard codec that uses Pulse Code Modulation (PCM) to produce a 64 Kbps high-quality voice data stream. This standard is used in Europe and most other countries around the world.
 - **PCMU (G.711 ULaw)** — The ITU-T G.711 with mu-law standard codec that uses Pulse Code Modulation (PCM) to produce a 64 Kbps high-quality voice data stream. This standard is used in North America and Japan.
 - **G.729a** — The ITU-T G.729ab standard codec that uses Conjugate Structure Algebraic-Code Excited Linear Prediction (CS-ACELP) with silence suppression to produce a low-bandwidth data stream of 8 Kbps. Note that DTMF and fax tones do not transport reliably with this codec, it is better to use G.711 for these signals.
- ◆ **Priority List** — The Gateway automatically negotiates the codec to use for each called party. You can specify a priority for the codecs that you prefer to use. Select a codec in the list, then use the UP and DOWN

buttons to set the priority. The Gateway attempts to use the codec highest in the list before trying the next lower one.

The RG300 includes an IEEE 802.11n radio interface for local Wi-Fi communications. The Wi-Fi set up pages include configuration options for the radio signal characteristics and Wi-Fi security.

The Wi-Fi configuration pages include the following options:

- ◆ ["Basic Wireless Settings" on page 76](#)
- ◆ ["Advanced Wireless Settings" on page 78](#)
- ◆ ["Wireless Security" on page 79](#)
- ◆ ["ACL Settings" on page 83](#)

- **11b/g/n Mixed:** All 802.11b/g/n clients can communicate with the Wi-Fi radio (up to 150 Mbps), but data transmission rates may be slowed to compensate for 802.11b/g clients.
- ◆ **SSID** — The name of the wireless network service provided by the Wi-Fi radio. Clients that want to connect to the network must set their SSID to the same as that of the Wi-Fi radio. Select "CUSTOMIZED" to set a specific text string, or select "MAC" to use the device MAC address as the SSID. (Range: 1-32 characters)
- ◆ **Hidden** — By default, the Wi-Fi radio always broadcasts the SSID in its beacon signal. Disabling the SSID broadcast increases security of the network because wireless clients need to already know the SSID before attempting to connect.
- ◆ **Country Code** — The country code restricts operation of the Wi-Fi radio to the channels and transmit power levels permitted for Wi-Fi networks in the specified region. You must set the correct Country Code to be sure the radio conforms to local regulations. (Options: United States, Japan, France, Taiwan, Ireland)



CAUTION: You must set the country code to the country of operation. Setting the country code restricts operation of the access point to the radio channels and transmit power levels permitted for wireless networks in the specified country.

- ◆ **Channel** — The radio channel that the Wi-Fi radio uses to communicate with wireless clients. When multiple access points are deployed in the same area, set the channel on neighboring access points at least five channels apart to avoid interference with each other. For example, you can deploy up to three access points in the same area using channels 1, 6, 11. Note that wireless clients automatically set the channel to the same as that used by the Wi-Fi radio to which it is linked. Selecting Auto Select enables the Wi-Fi radio to automatically select an unoccupied radio channel.



NOTE: If you experience poor performance, you may be encountering interference from another wireless device. Try changing the channel, as this may eliminate interference and increase performance. Channels 1, 6, and 11, as the three non-overlapping channels in the 2.4 GHz band, are preferred.

ADVANCED WIRELESS SETTINGS

The Advanced Settings page includes additional parameters concerning the wireless network and Wi-Fi Multimedia settings.

Figure 53: Advanced Wireless Settings

Advanced	
Beacon Period	100 (20-999) ms
DTim Period	1 (1-255) ms
FragThreshold	2346 (256-2346)
RTSThreshold	2347 (1-2347)
TX Power	100 (1-100)
Short Slot	<input checked="" type="radio"/> Enable <input type="radio"/> Disable

The following items are displayed on this page:

- ◆ **Beacon Period** — The rate at which beacon signals are transmitted from the access point. The beacon signals allow wireless clients to maintain contact with the access point. They may also carry power-management information. (Range: 20-999 TUs)
- ◆ **DTIM Period** — The rate at which stations in sleep mode must wake up to receive broadcast/multicast transmissions.

Known also as the Delivery Traffic Indication Map (DTIM) interval, it indicates how often the MAC layer forwards broadcast/multicast traffic, which is necessary to wake up stations that are using Power Save mode. The value of one beacon indicates that the access point will save all broadcast/multicast frames for the Basic Service Set (BSS) and forward them after every beacon. Using smaller DTIM intervals delivers broadcast/multicast frames in a more timely manner, causing stations in Power Save mode to wake up more often and drain power faster. Using higher DTIM values reduces the power used by stations in Power Save mode, but delays the transmission of broadcast/multicast frames. (Range: 1-255 beacons)

- ◆ **Frag Threshold** – Configures the minimum packet size that can be fragmented when passing through the access point. Fragmentation of the PDUs (Package Data Unit) can increase the reliability of transmissions because it increases the probability of a successful transmission due to smaller frame size. If there is significant interference present, or collisions due to high network utilization, try setting the fragment size to send smaller fragments. This will speed up the retransmission of smaller frames. However, it is more efficient to set the fragment size larger if very little or no interference is present because it requires overhead to send multiple frames. (Range: 256-2346 bytes)
- ◆ **RTS Threshold** — Sets the packet size threshold at which a Request to Send (RTS) signal must be sent to a receiving station prior to the sending station starting communications. The access point sends RTS

frames to a receiving station to negotiate the sending of a data frame. After receiving an RTS frame, the station sends a CTS (clear to send) frame to notify the sending station that it can start sending data.

If the RTS threshold is set to 0, the access point always sends RTS signals. If set to 2347, the access point never sends RTS signals. If set to any other value, and the packet size equals or exceeds the RTS threshold, the RTS/CTS (Request to Send / Clear to Send) mechanism will be enabled.

The access points contending for the medium may not be aware of each other. The RTS/CTS mechanism can solve this "Hidden Node Problem." (Range: 1-2347 bytes)

- ◆ **TX Power** – Adjusts the power of the radio signals transmitted from the unit. The higher the transmission power, the farther the transmission range. Power selection is not just a trade off between coverage area and maximum supported clients. You also have to ensure that high-power signals do not interfere with the operation of other radio devices in the service area. (Range: 1 - 100)
- ◆ **Short Slot** — Sets the basic unit of time the access point uses for calculating waiting times before data is transmitted. A short slot time (9 microseconds) can increase data throughput on the access point, but requires that all clients can support a short slot time (that is, 802.11g-compliant clients must support a short slot time). A long slot time (20 microseconds) is required if the access point has to support 802.11b clients.

WIRELESS SECURITY

The RG300's Wi-Fi interface is configured by default as an "open system," which broadcasts a beacon signal including the configured SSID. Wireless clients with a configured SSID of "ANY" can read the SSID from the beacon, and automatically set their SSID to allow immediate connection to the wireless network.


To implement wireless network security, you have to employ two main functions:

- ◆ **Authentication** – It must be verified that clients attempting to connect to the network are authorized users.
- ◆ **Traffic Encryption** – Data passing between the unit and clients must be protected from interception and eavesdropping.

The RG300's Wi-Fi interface supports five different security mechanisms that provide various levels of authentication and encryption depending on the requirements of the network.

Click on "Wi-Fi," followed by "Security".

Figure 54: Security Mode Options

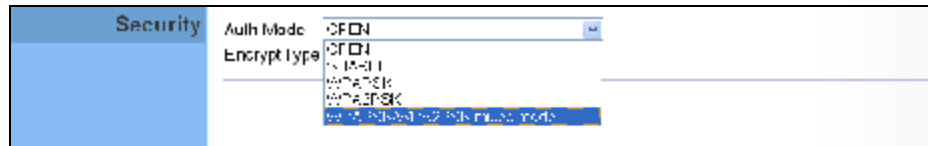

The supported security mechanisms and their configuration parameters are described in the following sections:


- ◆ **OPEN, SHARED** — See “Wired Equivalent Privacy (WEP)” on page 80.
- ◆ **WPAPSK, WPA2PSK, WPAPSK/WPA2PSK mixed mode** — See “WPA Pre-Shared Key” on page 81.

WIRED EQUIVALENT PRIVACY (WEP)

WEP provides a basic level of security, preventing unauthorized access to the network, and encrypting data transmitted between wireless clients and an access point. WEP uses static shared keys (fixed-length hexadecimal or alphanumeric strings) that are manually distributed to all clients that want to use the network.

When you select to use WEP, be sure to define at least one static WEP key for user authentication or data encryption. Also, be sure that the WEP shared keys are the same for each client in the wireless network.

Figure 55: Security Mode - WEP

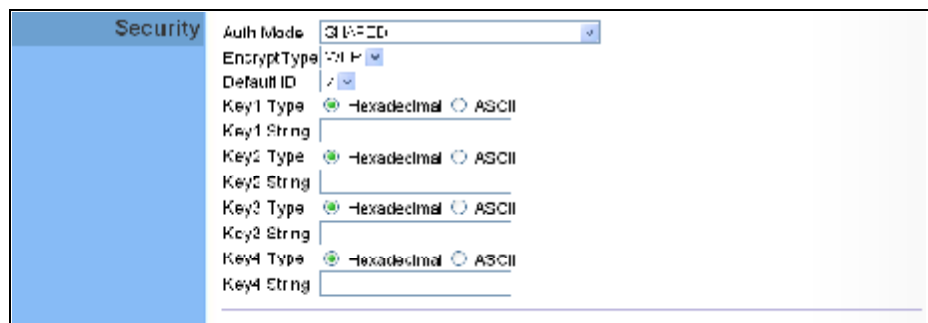

The following items are displayed in this section on this page:

- ◆ **Auth Mode** — Configures the WEP security mode used by clients. When using WEP, be sure to define at least one static WEP key for the RG300 and all its clients.
 - **OPEN** — Open-system authentication accepts any client attempting to connect the RG300 without verifying its identity. In this mode the default data encryption type is “WEP.”
 - **SHARED** — The shared-key security uses a WEP key to authenticate clients connecting to the network and for data encryption.


- ◆ **Encrypt Type** — Selects WEP for data encryption (OPEN mode only).
- ◆ **Default ID** — Selects the WEP key number to use for authentication or data encryption. If wireless clients have all four WEP keys configured to the same values, you can change the encryption key to any of the settings without having to update the client keys. (Range: 1~4)
- ◆ **Key 1~4 Type** — Sets WEP key type as ASCII or hexadecimal.
- ◆ **Key 1~4 String** — Sets WEP key values. The user must first select ASCII or hexadecimal keys. Each WEP key has an index number. Enter key values that match the key type and length settings. Enter 5 alphanumeric characters or 10 hexadecimal digits for 64-bit keys, or enter 13 alphanumeric characters or 26 hexadecimal digits for 128-bit keys.

WPA PRE-SHARED KEY

Wi-Fi Protected Access (WPA) was introduced as an interim solution for the vulnerability of WEP pending the adoption of a more robust wireless security standard. WPA2 includes the complete wireless security standard, but also offers backward compatibility with WPA. Both WPA and WPA2 provide an “enterprise” and “personal” mode of operation.

For small home or office networks, WPA and WPA2 provide a simple “personal” operating mode that uses just a pre-shared key for network access. The WPA Pre-Shared Key (WPA-PSK) mode uses a common password phrase for user authentication that is manually entered on the access point and all wireless clients. Data encryption keys are automatically generated by the access point and distributed to all clients connected to the network.

Figure 56: Security Mode - WPA-PSK

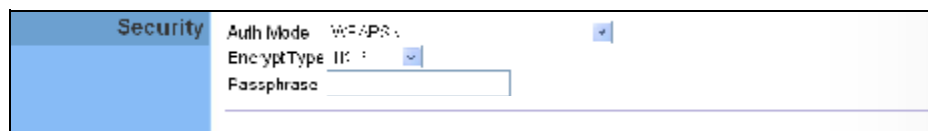

The following items are displayed in this section on this page:

- ◆ **Auth Mode** — Configures the WPA-PSK and WPA2-PSK security modes used by clients. When using WPA-PSK or WPA2-PSK, be sure to define the shared key for the RG300 and all its clients.
 - **WPAPSK** — Clients using WPA with a Pre-shared Key are accepted for authentication. The default data encryption type for WPA is TKIP.
 - **WPA2PSK** — Clients using WPA2 with a Pre-shared Key are accepted for authentication. The default data encryption type for WPA is AES.

- **WPAPSK/WPA2PSK mixed mode** — Clients using WPA or WPA2 with a Pre-shared Key are accepted for authentication. The default data encryption type is TKIP/AES.
- ◆ **EncryptType** — Selects the data encryption type to use. (Default is determined by the Security Mode selected.)
 - **TKIP** — Uses Temporal Key Integrity Protocol (TKIP) keys for encryption. WPA specifies TKIP as the data encryption method to replace WEP. TKIP avoids the problems of WEP static keys by dynamically changing data encryption keys.
 - **AES** — Uses Advanced Encryption Standard (AES) keys for encryption. WPA2 uses AES Counter-Mode encryption with Cipher Block Chaining Message Authentication Code (CBC-MAC) for message integrity. The AES Counter-Mode/CBCMAC Protocol (AES-CCMP) provides extremely robust data confidentiality using a 128-bit key. Use of AES-CCMP encryption is specified as a standard requirement for WPA2. Before implementing WPA2 in the network, be sure client devices are upgraded to WPA2-compliant hardware.
 - **TKIPAES** — Uses either TKIP or AES keys for encryption. WPA and WPA2 mixed modes allow both WPA and WPA2 clients to associate to a common SSID. In mixed mode, the unicast encryption type (TKIP or AES) is negotiated for each client.
- ◆ **Pass Phrase** — The WPA Preshared Key can be input as an ASCII string (an easy-to-remember form of letters and numbers that can include spaces) or Hexadecimal format. (Range: 8~63 ASCII characters, or exactly 64 Hexadecimal digits)

ACL SETTINGS

Wireless clients can be authenticated for network access by checking their MAC address against a local database configured on the RG300. You can configure a list of up to 32 wireless client MAC addresses in the filter list to allow network access.

Figure 57: ACL Settings

ACL

You can set here to allow certain client PCs accessing the Wi-Fi network based on MAC address filtering.

Enable

MAC Address

Order	MAC Address	Operation
1	00:11:22:33:44:55	<input type="button" value="Remove"/>

The following items are displayed on this page:

- ◆ **Enable** — Enables the ACL feature.
- ◆ **MAC Address** — Physical address of a client. Enter six pairs of hexadecimal digits separated by colons; for example, 00:90:D1:12:AB:89.
- ◆ **Add** — Click to list a new specified MAC address in the MAC Authentication Table.
- ◆ **Operation** — Click the Remove button to delete the specified MAC address from the table.

The RG300 supports Quality of Service (QoS) settings that enable traffic rate limits to be set for all or specific LAN clients.

The QoS configuration pages include the following options:

- ◆ ["QoS Settings" on page 85](#)

QoS SETTINGS

From the QoS Settings page, you can set rate limits for outbound (WiMAX uplink) traffic from all or specified clients.

Figure 58: QoS Settings

The screenshot shows the QoS Settings page with two main sections: General and Rules. The General section includes an 'Enable' checkbox (checked), a 'Default Outbound Rate/Limit' field set to '0' (kilobytes per second), and a 'Rules' section with fields for 'Source IP' (192.168.1.50), 'Use Client List' (checked), 'Outbound Rate/Limit' (0), and 'Description' (Web server). Below the form is a table with columns for Source IP, Outbound Rate/Limit, Description, and Operation.

Source IP	Outbound Rate/Limit	Description	Operation
192.168.1.50	0	Web server	Remove

The following parameters are displayed on this page:

- ◆ **General** — Sets QoS parameters that apply to all LAN clients (except those listed in the QoS Rules table):
 - **Enable** — Enables the QoS settings on the Gateway.
 - **Default Outbound Rate/Limit** — Sets a rate limit for the outbound traffic from all clients not specified in the QoS Rules table. The rate is specified in kilobytes per second (0 means unlimited).
- ◆ **Rules** — Specifies the QoS rate limits for specified client source IPs:
 - **Source IP** — Specifies a source IP address on the local network. The IP address can also be selected from the DHCP client list, as indicated by "Use Client List."
 - **Use Client List** — Enables the Source IP to be selected from the DHCP client list.
 - **Outbound Rate/Limit** — Sets a rate limit for the outbound traffic from the specified source IP in kilobytes per second (0 means unlimited).
 - **Description** — A text string that identifies the rule.

SECTION III

APPENDICES

This section provides additional information and includes these items:

- ◆ ["Troubleshooting" on page 87](#)
- ◆ ["Hardware Specifications" on page 89](#)
- ◆ ["Cables and Pinouts" on page 93](#)

DIAGNOSING LED INDICATORS

Table 6: Troubleshooting Chart

Symptom	Action
Power LED is Off	<ul style="list-style-type: none"> ◆ AC power adapter may be disconnected. Check connections between the unit, the AC power adapter, and the wall outlet.
Power LED is Red	<ul style="list-style-type: none"> ◆ The unit has detected a system error. Reboot the unit to try and clear the condition. ◆ If the condition does not clear, contact your local dealer for assistance.
WiMAX Signal LEDs are Off	<ul style="list-style-type: none"> ◆ Move the location of the unit. ◆ Check with the WiMAX service provider for service coverage information.
LAN link LED is Off	<ul style="list-style-type: none"> ◆ Verify that the unit and attached device are powered on. ◆ Be sure the cable is plugged into both the unit and corresponding device. ◆ Verify that the proper cable type is used and its length does not exceed specified limits. ◆ Check the cable connections for possible defects. Replace the defective cable if necessary.

CANNOT CONNECT TO THE INTERNET

If you cannot access the Internet from the PC, check the following:

- ◆ If you cannot access the Internet, be sure your Windows system is correctly configured for TCP/IP. The IP settings should be set to "obtain an IP address automatically."
- ◆ You may be out of the service area of the WiMAX network. Check with the WiMAX service provider for service coverage information.
- ◆ If you cannot resolve the problem, check the System Status page of the web interface and contact your WiMAX service provider.

CANNOT ACCESS WEB MANAGEMENT

If the management interface cannot be accessed using a web browser:

- ◆ Be sure the management station is correctly configured for TCP/IP. The IP settings should be set to "obtain an IP address automatically."
- ◆ Try a Ping command from the management station to the unit's IP address to verify that the entire network path between the two devices is functioning correctly.
- ◆ Check that the management station has a valid network connection and that the Ethernet port that you are using has not been disabled.
- ◆ Check the network cabling between the management station and the unit. If the problem is not resolved, try using a different port or a different cable.

FORGOT OR LOST THE PASSWORD

Set the unit to its default configuration by pressing the reset button on the base for 5 seconds or more. Then use the default password to access the management interface.

RESETTING THE UNIT

If all other recovery measures fail and the unit is still not functioning properly, take either of these steps:

- ◆ Reset the unit using the web interface, or through a power reset.
- ◆ Reset the unit to its factory default configuration by pressing the reset button on the base for 5 seconds or more. Then use the default password to access the management interface.

B

HARDWARE SPECIFICATIONS

PHYSICAL SPECIFICATIONS

PORTS 1~4 LAN ports, 10/100BASE-TX with auto-negotiation, RJ-45 connector
1~2 FXS ports, RJ-11 connector

NETWORK INTERFACE RJ-45 connector, auto MDI/X:
10BASE-T: RJ-45 (100-ohm, UTP cable; Category 3 or better)
100BASE-TX: RJ-45 (100-ohm, UTP cable; Category 5 or better)

LED INDICATORS System: Power, WiMAX signal strength, WiFi,
Ports: Link/Activity

AC POWER ADAPTER Input: 100-240 VAC, 50-60 Hz, 0.5 A maximum
Output: 12 VDC, 1 A

UNIT POWER SUPPLY DC Input: 12 VDC, 1 A maximum
Power Consumption: 12 W maximum

PHYSICAL SIZE 181.5 x 198.5 x 79 mm (7.15 x 7.81 x 3.11 in)

WEIGHT 412 g (14.5 oz)

TEMPERATURE Operating: -5 to 45 °C (23 to 113 °F)
Storage: -40 to 75 °C (-40 to 167 °F)

HUMIDITY 5% to 95% (non-condensing)

WiMAX SPECIFICATIONS

ANTENNAS Pattern: Omnidirectional
Transmit and Receive: One transmit and two receive with Maximal-Ratio Combining (MRC). Support for transmitter diversity.
Gain: 6 dBi
Impedance: 50 Ohm

OPERATING FREQUENCY FCC-2.5 GHz: 2496-2690 MHz
Taiwan NCC-2.5 GHz: 2500-2690 MHz
2.3 GHz: 2300-2390 MHz
Support for Full Scan and Partial Scan

CHANNEL BANDWIDTH 2.5 GHz model: 5 and 10 MHz

MODULATION SCHEME Scaleable OFDMA employing Time-Division Duplex (TDD) mechanism
PRBS subcarrier randomization
Contains pilot, preamble, and ranging modulation

MODULATION AND CODING TYPES Down Link: QPSK, 16 QAM, 64 QAM
Up Link: QPSK, 16 QAM

RECEIVE SENSITIVITY -94 dBm maximum

VOIP SPECIFICATIONS

VOICE SIGNALING PROTOCOL SIP v2 (RFC 3261)

VOICE CODEC G.711 (a-law and u-law)
G.729a

VOICE QUALITY VAD (Voice Activity Detection)
CNG (Comfortable Noise Generation)
Echo cancellation

Adaptive jitter buffer, up to 200 milliseconds
DTMF tone detection and generation

CALL FEATURES Caller ID number and name
Caller ID Block
Call transfer
Call waiting/hold/retrieve
3-way conference call
Call blocking
T.38 fax relay
Dial plan
Speed dial
Call forwarding: No Answer/Busy/All

REN (RING EQUIVALENT NUMBER) 3 REN total in system

WI-FI SPECIFICATIONS

MAXIMUM 802.11B/G/N (20 MHz) CHANNELS FCC/NCC: 1-11
ETSI: 1-13
France: 10-13

OPERATING FREQUENCY 2.4 ~ 2.4835 GHz (FCC, ETSI)

MODULATION TYPE 802.11n: BPSK, QPSK, OFDM
802.11g: BPSK, QPSK, OFDM
802.11b: CCK, BPSK, QPSK

RF OUTPUT POWER 802.11b: 13 dBm
802.11g: 12 dBm
802.11n: 9 dBm

RF RECEIVE SENSITIVITY 802.11b: -85 dBm @ 11 Mbps
802.11g: -65 dBm @ 54 Mbps
802.11n: -61 dBm @ 150 Mbps

COMPLIANCES

EMISSIONS FCC CFR 47 Part 15 Class B
EN 55022 Class B

EMMUNITY EN 55024 Class B
EN 301 489-1/4/17

**WIMAX RADIO SIGNAL
CERTIFICATION** US: 2.5 GHz - FCC CFR 47 Part 27M
CE: 2.3 GHz - EN 302 326
2.5 GHz - EN 302 544
NCC: PLMN09

**WI-FI RADIO SIGNAL
CERTIFICATION** FCC CFR 47 Part 15 Subpart C
EN 300 328
NCC: LP0002

SAFETY IEC/UL 60950-1
CE: EN 60950-1 (LVD)
NCC: CNS14336
ErP EN 62301

STANDARDS IEEE 802.16e-2005 WAVE 1 and WAVE 2
IEEE 802.3-2005 10BASE-T and 100BASE-TX
IEEE 802.11b, 802.11g, and 802.11n

C

CABLES AND PINOUTS

TWISTED-PAIR CABLE ASSIGNMENTS

For 10/100BASE-TX connections, a twisted-pair cable must have two pairs of wires. Each wire pair is identified by two different colors. For example, one wire might be green and the other, green with white stripes. Also, an RJ-45 connector must be attached to both ends of the cable.




CAUTION: Each wire pair must be attached to the RJ-45 connectors in a specific orientation. (See ["Straight-Through Wiring" on page 94](#) and ["Crossover Wiring" on page 95](#) for an explanation.)

CAUTION: DO NOT plug a phone jack connector into the RJ-45 port. Use only twisted-pair cables with RJ-45 connectors that conform with FCC standards.

The following figure illustrates how the pins on the RJ-45 connector are numbered. Be sure to hold the connectors in the same orientation when attaching the wires to the pins.

Figure 59: RJ-45 Connector

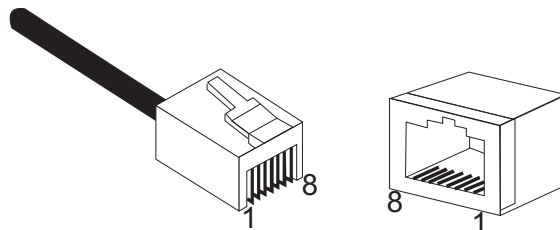

10/100BASE-TX PIN ASSIGNMENTS

Use unshielded twisted-pair (UTP) or shielded twisted-pair (STP) cable for RJ-45 connections: 100-ohm Category 3 or better cable for 10 Mbps connections, or 100-ohm Category 5 or better cable for 100 Mbps connections. Also be sure that the length of any twisted-pair connection does not exceed 100 meters (328 feet).

The RJ-45 ports on the unit supports automatic MDI/MDI-X operation, so you can use straight-through or crossover cables for all network connections to PCs, switches, or hubs. In straight-through cable, pins 1, 2, 3, and 6, at one end of the cable, are connected straight through to pins 1, 2, 3, and 6 at the other end of the cable.

Table 7: 10/100BASE-TX MDI and MDI-X Port Pinouts

PIN	MDI Signal Name ^a	MDI-X Signal Name
1	Transmit Data plus (TD+)	Receive Data plus (RD+)
2	Transmit Data minus (TD-)	Receive Data minus (RD-)
3	Receive Data plus (RD+)	Transmit Data plus (TD+)
6	Receive Data minus (RD-)	Transmit Data minus (TD-)
4, 5, 7, 8	Not used	Not used


a. The "+" and "-" signs represent the polarity of the wires that make up each wire pair.

**STRAIGHT-THROUGH
WIRING**

If the twisted-pair cable is to join two ports and only one of the ports has an internal crossover (MDI-X), the two pairs of wires must be straight-through.

Figure 60: Straight Through Wiring


EIA/TIA 568B RJ-45 Wiring Standard
10/100BASE-TX Straight-through Cable

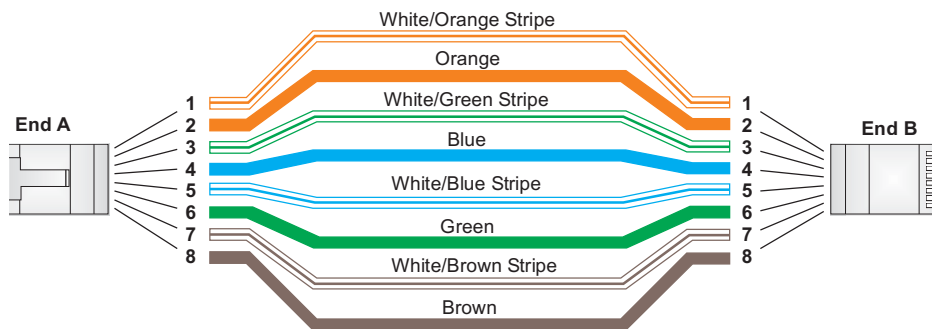

CROSSOVER WIRING If the twisted-pair cable is to join two ports and either both ports are labeled with an "X" (MDI-X) or neither port is labeled with an "X" (MDI), a crossover must be implemented in the wiring.

Figure 61: Crossover Wiring

EIA/TIA 568B RJ-45 Wiring Standard
10/100BASE-TX Crossover Cable

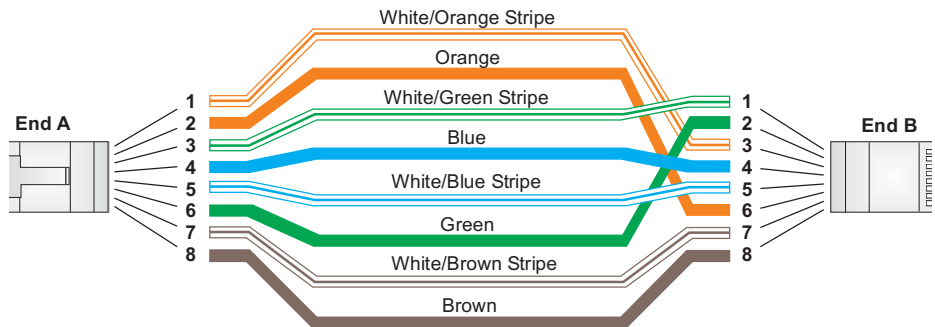

RJ-11 PORT

Standard telephone RJ-11 connectors and cabling can be found in several common wiring patterns. These six-pin connectors can accommodate up to three wire pairs (three telephone lines), but usually only one or two pairs of conductor pins and wires are implemented.

The RJ-11 port on this device contains only one wire pair on the inner pins (3 and 4).

Figure 62: RJ-11 Port Pinout

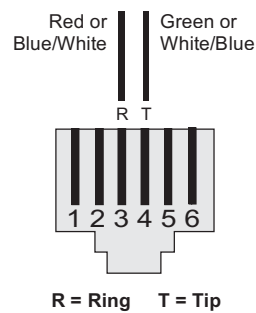


Table 8: RJ-11 Port Pinout

Pin	Signal Name	Wire Color
1	Not used	
2	Not used	
3	Line 1 Ring	Red or Blue/White
4	Line 1 Tip	Green or White/Blue
5	Not used	
6	Not used	

GLOSSARY

- 10BASE-T** IEEE 802.3-2005 specification for 10 Mbps Ethernet over two pairs of Category 3 or better UTP cable.
- 100BASE-TX** IEEE 802.3-2005 specification for 100 Mbps Fast Ethernet over two pairs of Category 5 or better UTP cable.
- ACCESS POINT** An Wi-Fi internetworking device that seamlessly connects wired and wireless networks.
- AUTHENTICATION** The process to verify the identity of a client requesting network access.
- AUTO-NEGOTIATION** Signalling method allowing each node to select its optimum operational mode (speed and duplex mode) based on the capabilities of the node to which it is connected.
- BASE STATION** A WiMAX service provider's equipment that is installed at a fixed location to provide network connectivity for subscriber stations within a defined service area.
- BEACON** A signal periodically transmitted from a Wi-Fi access point that is used to identify the network and maintain contact with wireless clients.
- CINR** Carrier-to-Interference-Plus-Noise Ratio. A measurement of the channel quality in a WiMAX link. Subscriber stations measure the received CINR and send the information back to the base station. The base station can then adjust modulation and coding for the link to optimize throughput.
- CENTER FREQUENCY** The radio frequency at the center of a WiMAX channel. WiMAX channels can be of different widths (the channel bandwidth) and the transmitted radio signal is spread across the full width of the channel.
- CHANNEL BANDWIDTH** The range of frequencies occupied by a WiMAX radio signal. The amount of information that can be transmitted in a radio signal is related to the channel bandwidth, which is measured in Megahertz (MHz). WiMAX supports a range of channel bandwidths that can be defined by the service

operator depending on performance requirements, operating preferences, and regulatory constraints.

CPE Customer-Premises Equipment. Terminal equipment provided by a service provider that is located at a subscriber's premises and supports a communication channel between a customer and the service provider.

DNS Domain Name System. A system used for translating host names for network nodes into IP addresses.

DHCP Dynamic Host Configuration Protocol. Provides a framework for passing configuration information to hosts on a TCP/IP network. DHCP is based on the Bootstrap Protocol (BOOTP), adding the capability of automatic allocation of reusable network addresses and additional configuration options.

ENCRYPTION Data passing between a base station and subscribers uses encryption to protect from interception and eavesdropping.

ETHERNET A popular local area data communications network, which accepts transmission from computers and terminals.

EAP Extensible Authentication Protocol. An authentication protocol used to authenticate subscribers. EAP is used with TLS or TTLS authentication to provide "mutual authentication" between a subscriber and a WiMAX network.

HTTP Hypertext Transfer Protocol. HTTP is a standard used to transmit and receive all data over the World Wide Web.

ICMP Internet Control Message Protocol. A network layer protocol that reports errors in processing IP packets. ICMP is also used by routers to feed back information about better routing choices.

IEEE 802.11B The Wi-Fi wireless standard that supports communications in the 2.4 GHz band using Direct Sequence Spread Spectrum (DSSS). The standard provides for data rates of 1, 2, 5.5, and 11 Mbps.

IEEE 802.11G The Wi-Fi wireless standard that supports communications in the 2.4 GHz band using Orthogonal Frequency Division Multiplexing (OFDM). The standard provides for data rates of 6, 9, 11, 12, 18, 24, 36, 48, 54 Mbps. IEEE 802.11g is also backward compatible with IEEE 802.11b.

- IEEE 802.16E** The WiMAX standard that provides mobile broadband wireless access using Scalable Orthogonal Frequency Division Multiple Access (SOFDMA).
- IP ADDRESS** The Internet Protocol (IP) address is a numerical identification assigned to a device that communicates in a network using the Internet Protocol.
- ISP** Internet Service Provider. A company that offers an access service that connects customers to the Internet.
- LED** Light emitting diode. Used for indicating a device or network condition.
- LAN** Local Area Network. A group of interconnected computer and support devices.
- MAC ADDRESS** The physical layer address used to uniquely identify network nodes.
- MS-CHAPV2** Microsoft's version 2 of the Challenge-Handshake Authentication Protocol. Introduced by Microsoft with Windows 2000, MS-CHAPV2 (defined in RFC 2759) provides mutual authentication between peers using user names and passwords.
- ODFM** Orthogonal Frequency Division Multiplexing. The air interface defined for IEEE 802.11g Wi-Fi. OFDM allows multiple users to transmit in an allocated band by dividing the bandwidth into many narrow bandwidth carriers.
- RJ-45 CONNECTOR** A connector for twisted-pair wiring.
- RSSI** Receive Signal Strength Indicator. A measurement of the strength of a received wireless signal. The higher the RSSI value, the stronger the received signal from the antenna.
- ROAMING** The process where a WiMAX subscriber can move onto another operator's network while maintaining a continuous connection.
- SOFDMA** Scalable Orthogonal Frequency Division Multiple Access. The air interface defined for mobile WiMAX. SOFDMA is a multiple access method that allows simultaneous transmissions to and from several users, employing a subchannel structure that scales with bandwidth.
- SERVICE PROVIDER** See *Internet Service Provider*.

- SSID** Service Set Identifier. A name that is sent in packets over a Wi-Fi network, which functions as a password for clients connecting to the network. The SSID differentiates one Wi-Fi network from another.
- SNTP** Simple Network Time Protocol. SNTP allows a device to set its internal clock based on periodic updates from a Network Time Protocol (NTP) server. Updates can be requested from a specific NTP server, or can be received via broadcasts sent by NTP servers.
- SIM** Subscriber Identity Module. A standard for a small removable integrated circuit card that securely stores information used to identify a mobile wireless subscriber.
- SUBSCRIBER STATION** A general term for a customer's WIMAX terminal equipment that provides connectivity with a base station.
- TCP/IP** Transmission Control Protocol/Internet Protocol. Protocol suite that includes TCP as the primary transport protocol, and IP as the network layer protocol.
- TLS** Transport Layer Security. An standard defined in RFC 5246, EAP-TLS is an authentication protocol that provides strong security through the use of client-side certificates.
- TTLS** Tunneled Transport Layer Security. EAP-TTLS is a protocol extension of EAP-TLS. The authentication server is authenticated to the client using its Certification Authority certificate, this establishes a secure "tunnel" through which the client is then authenticated.
- URL** Uniform Resource Locator. An easy-to-read character string that is used to represent a resource available on the Internet. For example, "http://www.url-example.com/."
- UTP** Unshielded twisted-pair cable.
- WEP** Wired Equivalent Privacy. WEP is the Wi-Fi security based on the use of RC4 encryption keys. Wi-Fi devices without a valid WEP key are excluded from the network.
- PSK** WPA Pre-shared Key. PSK security can be used for small Wi-Fi networks that may not have the resources to configure and maintain a RADIUS

server. WPA provides a simple operating mode that uses just a pre-shared password for network access.

WiMAX The IEEE 802.16 standard for Worldwide Interoperability for Microwave Access. The IEEE 802.16-2004 standard, known as “fixed WiMAX,” supports only point-to-point links and has no support for mobility. The IEEE 802.16e-2005 standard, known as “mobile WiMAX,” is an amendment to IEEE 802.16-2004 and supports mobility. Note that mobile WiMAX standard is not backward compatible with the fixed WiMAX standard.

INDEX

A

AC power adapter 18
administrator password, setting 32
administrator settings 32
Advanced Setup menu 27
AES encryption 82
authentication
 type 79
authentication options 80
auto-logout time 33

B

beacon interval 78
button, Reset 18

C

cable assignments 93
cable connections 21
channel setting 77
channels, maximum 91
checklist 20
client filter, enable 54
Codec 73
configuration, basic 25
contents, package 20

D

data beacon rate 78
default Key, WEP 81
default settings, restore 34
defaults, factory 34
DHCP server 45
discard ping 53
downloading software 33
DTIM setting 78
dynamic DNS 43
dynamic IP, cable modem 39

E

encryption 79
encryption options 80
Ethernet ports 17

F

factory defaults, restoring 34
firewall protection 53
firmware update 33
fixed-IP xDSL 39
fragmentation threshold 78
frequency setting 77

G

Gateway address 40, 60
gateway function 21

H

hacker attack, prevention 53
hardware, description 15

I

IEEE 802.11g 75
 configuring interface 76
initial configuration 23
installation, connecting cables 21
installing the device 20
IP address 40, 45
IP filters 54
IPsec 51

L

L2TP 39, 51
LAN status information 31
language selection 24, 33
LEDs 16, 17
logging, system 36
login, web 23
lost password, recovery 88

M

MAC address filters 56
MDI/MDI-X, automatic 17
messages, logging 36

N

NAT setting 48
network name, wireless 77

O

open system 79
operating frequency 90, 91

P

package checklist 20
panels, front and rear 15
password, setting 32
phone settings 72
ping discard 53
port indicators 16, 17
power socket 18
power supply, specifications 89
PPTP 39, 51
private IP 49
private port 49
proxy server port 66

R

radio mode 76
rear panel sockets 18
reboot unit 37, 88
Reset button 18
resetting the unit 37, 88
RJ-45 ports 17
RTS threshold 78

S

security, options 79
Setup Wizard
 launching 25
Simple Network Time Protocol See SNTP
SIP settings 66
slot time 79
SNTP 35
 enabling client 35
software update 33
SSID 77
static routing table 61
subnet mask 40, 45, 60
subscriber station 14
system clock, setting 35
system indicators 16, 17
system information 32
system log 36
system time 35

T

time updates 35
TKIP encryption 82

U

upgrading software 33

W

WAN connection type 31
web management interface
 access 23
 login 23
 troubleshooting 88
WEP security 80
wireless network mode 76
Wizard, setup 25
WPA pre-shared key 81

