



LG

Life's Good

LG-P875

User Guide

All screen shots in this guide are simulated.

Actual displays and the color of the phone may vary.

Some of the contents in this manual may differ from your phone depending on the software of the phone or your service provider.

LIMITED WARRANTY STATEMENT

1. WHAT THIS WARRANTY COVERS :

LG offers you a limited warranty that the enclosed subscriber unit and its enclosed accessories will be free from defects in material and workmanship, according to the following terms and conditions:

1. The limited warranty for the product extends for TWELVE (12) MONTHS beginning on the date of purchase of the product with valid proof of purchase, or absent valid proof of purchase, FIFTEEN (15) MONTHS from date of manufacture as determined by the unit's manufacture date code.
2. The limited warranty extends only to the original purchaser of the product and is not assignable or transferable to any subsequent purchaser/end user.
3. This warranty is good only to the original purchaser of the product during the warranty period as long as it is in the U.S, including Alaska, Hawaii, U.S. Territories and Canada.
4. The external housing and cosmetic parts shall be free of defects at the time of shipment and, therefore, shall not be covered under these limited warranty terms.
5. Upon request from LG, the consumer must provide information to reasonably prove the date of purchase.
6. The customer shall bear the cost of shipping the product to the Customer Service Department of LG. LG shall bear the cost of shipping the product back to the consumer after the completion of service under this limited warranty.

2. WHAT THIS WARRANTY DOES NOT COVER :

1. Defects or damages resulting from use of the product in other than its normal and customary manner.
2. Defects or damages from abnormal use, abnormal conditions, improper storage, exposure to moisture or dampness, unauthorized modifications, unauthorized connections, unauthorized repair, misuse, neglect, abuse, accident, alteration, improper installation, or other acts which are not the fault of LG, including damage caused by shipping, blown fuses, spills of food or liquid.
3. Breakage or damage to antennas unless caused directly by defects in material or workmanship.
4. That the Customer Service Department at LG was not notified by consumer of the alleged defect or malfunction of the product during the applicable limited warranty period.
5. Products which have had the serial number removed or made illegible.
6. This limited warranty is in lieu of all other warranties, express or implied either in fact or by operations of law, statutory or otherwise, including, but not limited to any implied warranty of marketability or fitness for a particular use.
7. Damage resulting from use of non-LG approved accessories.
8. All plastic surfaces and all other externally exposed parts that are scratched or damaged due to normal customer use.

9. Products operated outside published maximum ratings.
10. Products used or obtained in a rental program.
11. Consumables (such as fuses).

3. WHAT LG WILL DO:

LG will, at its sole discretion, either repair, replace or refund the purchase price of any unit that does not conform to this limited warranty. LG may choose at its discretion to use functionally equivalent reconditioned, refurbished or new units or parts or any units. In addition, LG will not re-install or back-up any data, applications or software that you have added to your phone. It is therefore recommended that you back-up any such data or information prior to sending the unit to LG to avoid the permanent loss of such information.

4. STATE LAW RIGHTS :

No other ex warranty is applicable to this product. THE DURATION OF ANY IMPLIED WARRANTIES, INCLUDING THE IMPLIED WARRANTY OF MARKETABILITY, IS LIMITED TO THE DURATION OF THE EXPRESS WARRANTY HEREIN. LG INFOCOMM INC. SHALL NOT BE LIABLE FOR THE LOSS OF THE USE OF THE PRODUCT, INCONVENIENCE, LOSS OR ANY OTHER DAMAGES, DIRECT OR CONSEQUENTIAL, ARISING OUT OF THE USE OF, OR INABILITY TO USE, THIS PRODUCT OR FOR ANY BREACH OF ANY EXPRESS OR IMPLIED WARRANTY, INCLUDING THE IMPLIED WARRANTY OF MARKETABILITY APPLICABLE TO THIS PRODUCT.

Some states do not allow the exclusive of limitation of incidental or consequential damages or limitations on how long an implied warranty lasts; so these limitations or exclusions may not apply to you. This warranty gives you specific legal rights and you may also have other rights which vary from state to state.

5. HOW TO GET WARRANTY SERVICE :

To obtain warranty service, please call or fax to the following telephone numbers from anywhere in the continental United States:

Tel. 1-800-793-8896 or Fax. 1-800-448-4026

Or visit www.lg.com.

Correspondence may also be mailed to:

LG Electronics MobileComm U.S.A., Inc.

201 James Record Road Huntsville, AL 35824

DO NOT RETURN YOUR PRODUCT TO THE ABOVE ADDRESS.

Please call or write for the location of the LG authorized service center nearest you and for the procedures for obtaining warranty claims.

Table of Contents

Important Notice	7	Entering Accented Letters.....	26
Your Phone	12	Google Account Setup	27
Getting Started	14	Creating your Google account.....	27
Installing the SIM card and battery ..	14	Signing into your Google account.....	27
Charging your phone.....	15	Calls	29
Inserting a microSD card.....	15	Making a call.....	29
Removing the microSD card.....	16	Calling your contacts.....	29
Formatting the microSD card.....	17	Answering and rejecting a call.....	29
Switching between and exiting applications.....	17	Adjusting the in-call volume.....	29
Your Home screen	18	Making a second call.....	30
Touch screen tips.....	18	Viewing your call logs.....	30
Proximity sensor.....	18	Call settings.....	30
Lock your phone.....	19	Contacts	31
Quick Switch to Silent Mode.....	19	Searching for a contact.....	31
Home screen panels.....	20	Adding a new contact.....	31
Customizing your Home screen.....	20	Favorite Contacts.....	31
Customizing App Icons on the Home screen.....	21	AT&T Address Book (AAB).....	32
Getting back to a recently used application.....	21	Messaging/Email	33
Home screen clean view.....	22	Messaging.....	33
Notifications Panel.....	22	Email.....	34
Viewing the Status Bar.....	22	Adding an account to your phone.....	37
On-screen Keyboard.....	24	Social Networking	37
123 Mode.....	26	Adding a social networking widget on the Home screen.....	37

Viewing and updating your status ...	38	Playing a song	47
Syncing accounts on your phone	38	Working with Playlists	48
Removing accounts on your phone ...	38	To add a song to a playlist	48
Camera.....	39	To remove a song from a playlist.....	48
Getting to know the viewfinder	39	To rename or delete a playlist	48
Taking a photo	40	Using SmartShare	49
Once you've taken the photo	40	Google Applications	51
Using the advanced settings.....	40	About Google applications.....	51
Viewing your saved photos	42	Google Maps™.....	51
Setting a photo as wallpaper.....	42	Searching For Locations and Places	51
Video Camera	43	Getting Directions	52
Getting to know the viewfinder	43	Clear Map.....	53
Recording a video.....	44	Latitude	53
After recording a video	44	Places	53
Using the advanced settings.....	44	Play Store™	54
Watching your saved videos.....	45	Gmail™	54
Adjusting the volume when viewing a video.....	45	Google Talk™	55
Multimedia.....	46	Utilities	57
Gallery	46	QuickMemo™	57
Video Wiz	46	Setting the alarm	58
Music.....	47	Using the calculator	58
How to save music/video files to the phone.....	47	Adding an event to your calendar.....	58
How to play music/video files on the phone.....	47	Polaris Office	59
		Voice Dialer	60
		Voice Recorder	60
		Tasks.....	61

Table of Contents

The Web	62	Location access	72
Browser	62	Security	73
Using options	62	Language & input	74
Adding bookmarks.....	63	Backup & reset.....	74
Changing the Browser settings.....	63	SYSTEM	75
Settings	64	Date & time	75
WIRELESS & NETWORKS	64	Accessibility	75
Airplane mode	64	PC Connection	75
Wi-Fi.....	64	LG On-Screen Phone 2.1	77
Bluetooth.....	65	Developer options	78
Mobile data	67	About phone.....	80
Mobile Hotspot	67	Software Update	81
NFC.....	67	Phone Software Update.....	81
Android Beam.....	68	LG Mobile Phone Software update via	
VPN.....	68	Over-the-Air (OTA).....	81
Mobile networks	68	Trademarks	82
DEVICE.....	69	Trademarks	82
Sound	69	DivX Mobile	82
Display.....	69	DTS.....	82
Home screen	70	Dolby Mobile.....	82
Lock screen.....	70	Q&A	83
Gestures	71	Accessories	84
Storage.....	71	For Your Safety	85
Power saver.....	71	Safety Guidelines	90
Apps	72		
PERSONAL	72		
Accounts & sync.....	72		


Important Notice

Please check to see if any problems you have encountered with your phone are described in this section before taking the phone in for service or calling a service representative.

1. Phone Memory

In order to make more memory available, you will have to manage your applications and delete some data, such as applications or messages.

Managing Applications

- 1 From the Home screen, tap the **Menu Key**  and tap **Settings > Apps**.
- 2 Tap one of the available tabs at the top of the screen and select the application you want to uninstall.
- 3 Tap **Uninstall** and then tap **OK** to confirm that you want to uninstall the desired application.


2. Optimizing Battery Life

You can extend your battery's life between charges by turning off features that you don't need to run constantly in the background. You can also monitor how applications and system resources consume battery power.

To extend the life of your battery

- Turn off radio communications that you aren't using, such as Wi-Fi, Bluetooth, or GPS. Wi-Fi will be set to On the first time you use your newly purchased phone.
- Lower screen brightness and set a shorter screen timeout.
- Turn off automatic syncing for Gmail™, Calendar, Contacts, and other applications.
- Some applications you have downloaded may cause your battery power to be reduced.
- While using downloaded applications, check the battery charge level.

To view the battery charge level

- 1 From the Home screen, tap the **Menu Key**  and tap **Settings > About phone > Battery**.
- 2 The battery status (charging or discharging) and level are displayed.

To monitor and control what uses the battery

- 1 From the Home screen, tap the **Menu Key**  and tap **Settings > Power saver > Battery use**.

Important notice

- 2 The top of the screen displays battery usage time. It lists all of the applications or services using battery power from the greatest amount of energy used to the least amount.

3. Installing an Open Source Operating System


Installing an open source operating system on your phone and not using the operating system provided by the manufacturer can cause your phone to malfunction.

! Warning

- If you install and use an operating system other than the one provided by the manufacturer, your phone is no longer covered by the warranty.
- To protect your phone and personal data, download applications only from trusted sources, such as Play Store. If some applications are not properly installed on your phone, your phone may not work properly- or serious errors may occur. You will need to uninstall those applications and all of its data and settings from the phone.

4. Using the Swipe, Face Unlock, Pattern, PIN, or Password

Set Swipe, Face unlock, Pattern, PIN, or Password to secure your phone. To set the screen lock, follow the process below.

From the Home screen, tap the **Menu Key** , tap **Lock screen settings** > **Select screen lock** and select a desired screen lock from **Swipe, Face Unlock, Pattern, PIN** and **Password**.

! NOTE

In case that you have trouble with Face Unlock, you can unlock the screen with a PIN as a backup. Please note that this feature is only available after you set up your Google account on your device.

! Warning

Take precautions when using an unlock Pattern, PIN, or Password. It is very important that you remember the screen unlock information you set. You are allowed 5 attempts to enter your screen unlock information. If you used up all 5 opportunities, you will have to wait 30 seconds to attempt

unlocking the phone again.

When you can't recall your Unlock Pattern, PIN, or Password:

If you logged into a Google account on the phone and failed to use the correct pattern 5 times, tap **Forgot pattern?** You will be required to sign in with your Google account and prompted to create a new unlock pattern.

If you have set a backup PIN, you can unlock the screen by entering the backup PIN.

If you haven't created a Google account on the phone or you forgot your PIN, Password, and the backup PIN, you need to perform a hard reset.

⚠ Caution

If you perform a hard reset, all user applications and user data will be deleted. Please remember to back up any important data before performing a hard reset.

Read ALL steps before attempting.

- 1 Turn the phone off.
- 2 At the same time press and hold **Volume Down Key** + **Power/Lock Key**.
- 3 Release the keys when the **FACTORY HARD RESET** screen appears.
- 4 Read the warning and press the **Power/Lock Key** to confirm. Press any other key to cancel.
- 5 Press the **Power/Lock Key** to confirm once more or press any other key to cancel.
- 6 Your device will perform a hard reset.

5. Using Safe Mode

To recover your phone when malfunctioning.

- 1 Turn off your phone and reboot. When you see the booting animation (Rethink PossibleSM) press and hold the **Volume Down Key**. Your main screen will then be displayed with the words "Safe mode" in lower left corner.
- 2 From the Home screen, tap the **Menu Key** and tap **Settings > Apps**.
- 3 Tap one of the available tabs at the top of the screen and select the application you wish to uninstall.


Important notice

- 4 Tap **Uninstall** and **OK** to confirm.
- 5 After uninstalling the application, turn off and reboot your phone.

6. Using a microSD Card

Pictures, Music and Video files, can be saved to external memory. Before saving these files to external memory, you need to insert a microSD card. If you have not inserted a microSD card, you will not be able to save these items on external memory.

⚠ Warning

Do not remove the microSD card without unmounting it first. Otherwise, it may damage the microSD card as well as your phone, and the data stored on the microSD card may be corrupted. To unmount the microSD card, from the Home screen, tap the **Menu Key**  and tap **Settings > Storage > Unmount SD card > OK**.

7. Connecting your phone to a computer via USB



- 1 Use the USB cable that was provided with your phone to connect the phone to a USB port on your computer. You'll receive a notification that the USB is connected and can see USB connection mode screen.
- 2 Tap **Media sync (MTP)** or **Camera (PTP)** to confirm that you want to transfer files between your phone and the computer.

When the phone is connected as USB storage, you receive a notification. Your phone is recognized as a device on your computer. You can now copy files to and from the phone.

⚠ TIP

You can access your phone's storages including the microSD card from your phone while connected as USB storage. So you cannot use applications that rely on the storages, such as Music.

8. Unlock screen when using data connection

Your screen will go dark if untouched for a period of time. To turn on your LCD screen, press the **Power/Lock Key** . To change the length of time the screen takes to turn off, tap the **Menu Key**  > **All Settings** > **Display** > **Screen timeout** and select the desired amount.



9. Hold the phone straight up

Please hold the mobile phone straight up as a regular phone.

While making/receiving calls or sending/receiving data, try to avoid holding the lower part of the phone where the antenna is located. It may affect call quality.

10. When the screen freezes

If the phone does not respond to user input or the screen freezes:

Press and hold the **Power/Lock Key**  for 10 seconds to turn it off. Then, press and hold the **Power/Lock Key**  again for 3 seconds to reboot the phone.

11. Do not connect your phone when you power on/off your PC

Make sure to disconnect your phone from the PC when powering your PC on or off as it might result in PC errors.

Your Phone

To turn on the phone, press and hold the **Power/Lock Key**  on the right side of the phone for 3 seconds.

To turn off the phone, press the **Power/Lock Key**  on the right side of the phone for 3 seconds and tap **Power off** and **OK** to confirm.

Front view

Earpiece

Front Camera Lens

- Use to take a picture of yourself or to video chat on supported applications.

Quick Keys


- Gives you quick access to your most used applications.
- To add an icon, drag and drop it in the bar.
- To remove an icon, touch and hold it and remove it from the bar.

Back Key

- Returns to the previous screen.
- Closes pop-up menus and dialog boxes.

Warning

Placing a heavy object on the phone or sitting on it can damage its LCD and touch screen functionalities. Do not cover the LCD's proximity sensor with a protective film. This can cause the sensor to malfunction.

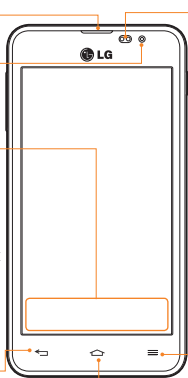

Proximity Sensor

- Senses proximity toward other objects, such as your head during a call, so that you do not accidentally activate unwanted features.

Power/Lock Key

- Powers your phone on/off.
- Turns your screen on and off and locks it.


Menu Key

- Displays available options for the current screen or application.
- Touch and hold to search within the current application (not available for all applications).

Home Key

- Returns to the Home screen from any screen.
- Touch and hold to display a list of your most recently used apps, or access **Google Now** and **Task Manager**.

TIPS


- Tap the **Menu Key**  whenever you open an application to check what options are available.
- If your phone has errors when you use it or you cannot turn it on, remove the battery, install it again and turn it on after 5 seconds.

Side view**3.5mm Headset Jack****Volume Keys**

- Allows you to adjust the ringer and media volumes, or to adjust the in-call volume during a call.
- Press and hold the Volume Down Key to switch to the silent mode.
- Press and hold both Volume Keys at the same time to access the QuickMemo™ feature.

**Power/Lock Key****Microphone****Charger/Accessory Port****Rear view****Micro SIM Card slot****Rear Camera Lens****microSD Card Slot**

- Accommodates the microSD™ card (expandable up to 32GB).

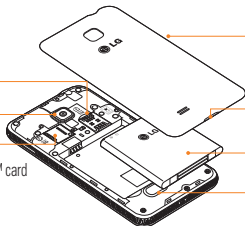**Back Cover****Fingertip cutout****Battery****Speaker****Notice**


The NFC antenna for this model is on the back cover. This back cover is the only one that is offered with the model.

Getting Started

Installing the SIM card and battery

Before you can start exploring your new phone, you'll need to set it up. To insert the SIM card and battery:


- 1 Hold the phone on your hand firmly. With the other hand, lift the back cover using the fingertip cutout located on the bottom of the cover and remove it.

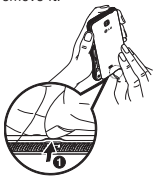


- 2 Slide the SIM card into the SIM card slot. Make sure the gold contact area on the card is facing downwards.

NOTE


Please insert the notched side of the SIM card first. Refer to the image inscribed above the SIM card slot.

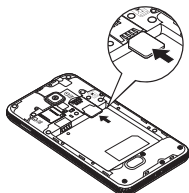

- 3 Insert the battery into place by aligning the gold contacts on the phone and the battery 1 and press the battery down until it clicks into place 2.

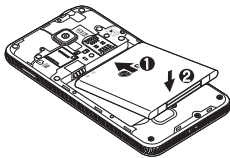


- 4 Replace the back cover of the phone 1. Apply a steady downward pressure until the battery cover clicks into place 2.

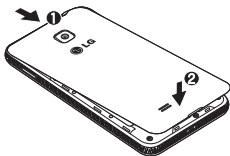


Charging your phone

- 1 Connect the wall adapter and USB cable as shown below. The USB symbol on the USB cable should face toward you.



- 2 Plug the USB cable (as shown below) into the phone's Charger/Accessory Port. Make sure the USB symbol is facing upwards.

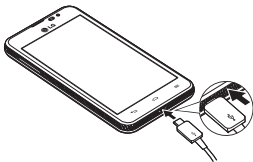

Always unplug the charger from the wall socket after the phone is fully charged to save unnecessary power consumption of the charger.

NOTE

The battery must be fully charged initially to improve battery lifetime.

NOTE

Your phone has an internal antenna. Be careful not to scratch or damage this rear area, as that will cause loss of performance.

When the battery becomes fully discharged and you connect the phone to a charger, the LED lights for the keys at the bottom of the phone will blink. This is normal operation for a completely discharged battery to prevent overflowing current because the phone is designed to provide reasonable protection against damage to the battery. Once the battery has enough charge, the screen will turn on and display a battery image.


Inserting a microSD card

NOTE

This device supports up to a 32GB microSD card.

- 1 Remove the back cover.



Getting Started

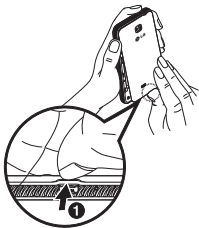

- 2 Gently insert the microSD card into the slot. Make sure the gold contact area is facing downwards.

NOTE

Please insert the notched side of the microSD card first. Refer to the image above the microSD card slot.

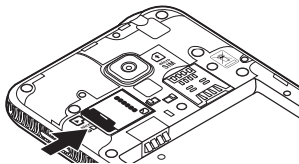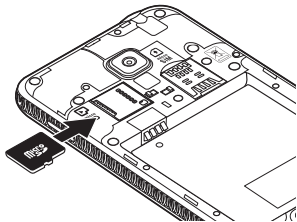


NOTE

Some downloaded applications store data on the microSD card as well as on the phone. Due to this feature, if you skip the unmount procedure, it can cause an error because information between the microSD card and the phone is not accorded properly. In the worst case, the microSD card can be corrupted or damaged.

Removing the microSD card

To safely remove the microSD card from your phone, you must first unmount it.

- 1 From the Home screen, tap the **Menu Key**  and tap **All Settings > Storage > Unmount SD card > OK**.
- 2 Remove the battery cover and gently pull the microSD card from the slot.

⚠ Warning


Do not remove the microSD card without unmounting it first. Otherwise, it may damage the microSD card as well as your phone, and the data stored on the microSD card may be corrupted.

Formatting the microSD card

Your microSD card may already be formatted. If it isn't, you must format it before you can use it.

⚠ NOTE

All files on the card are deleted when you format the microSD card.

- 1 From the Home screen, tap the **Menu Key**  and tap **All Settings > Storage > Unmount SD card > OK**.
- 2 Tap **Erase SD card** twice.
- 3 If you set an unlock pattern, enter it and tap **Erase everything**. The card will then be formatted and ready to use.


⚠ NOTE

If there is content on your microSD card, the folder structure may be different after formatting since all the files will have been deleted.


Switching between and exiting applications

Multi-tasking is easy with Android because open applications keep running even when you open another application. There is no need to quit an application before opening another. Use and switch among several open applications. Android manages each application, stopping and starting them as needed, to ensure that idle applications don't consume resources unnecessarily.

Switching between applications

- Touch and hold the **Home Key** . A list of recently used applications will be displayed. Then tap the application you want to access.
- To remove an application from the list, swipe the app preview to the left or right.

To stop/exit an application

- 1 From the Home screen, tap the **Menu Key**  and tap **All Settings > Apps**.
- 2 Tap one of the tabs at the top of the screen, choose the desired application and tap **Force stop** to stop the application.

Your Home screen

Touch screen tips

With the touch of your finger, you can access available applications, make menu selections, and access data saved to your phone. The following terms are used for describing the different available actions using the touchscreen:

Tap - A single finger tap selects items, links, shortcuts and letters on the on-screen keyboard.

Touch and hold - Touch and hold an item on the screen by touching it and not lifting your finger until an action occurs. For example, to open a contact's available options, touch and hold the contact in the Contacts list until the context menu opens.

Drag - Touch and hold an item for a moment and then, without lifting your finger, move your finger on the screen until you reach the target position. You can drag items on the Home screen to reposition them.

Swipe or slide - To swipe or slide, quickly move your finger across the surface of the screen, without pausing when you first touch it (so you don't drag an item instead). For example, you can slide the screen up or down to scroll through a list, or browse through the different Home screens by swiping from left to right (and vice versa).

Double-tap - Double-tap to zoom on a web page or a map. For example, quickly double-tap a section of a web page to adjust that section to fit the width of the screen. You can also double-tap to zoom in and out when using Maps.

Pinch-to-Zoom - Use your index finger and thumb in a pinch or spread motion to zoom in or out when using the Browser, Maps, or browsing pictures.

Rotate the screen - From many applications and menus, the orientation of the screen adjusts to the device's physical orientation.


! NOTE

- To select an item, tap the center of the icon.
- Do not to press too hard; the touch screen is sensitive enough to pick up a light, firm touch.
- Use the tip of your finger to tap the option you want. Be careful not to tap any other keys or icons.


Proximity sensor

When receiving and making calls, this sensor automatically turns the backlight off and locks the touch keypad by sensing when the phone is near your ear. This extends battery life and prevents the touch keypad from activating unintentionally during calls.


Lock your phone

When you are not using the LG Escape™ press the **Power/Lock Key**  to lock your phone. This helps prevent accidental presses and saves battery power.

Also, if you do not use the phone for a while, the Home screen, or other screen you are viewing, is automatically replaced with the lock screen after 30 seconds of inactivity to conserve the battery and prevent pocket dialing.

To wake up your phone, press the **Power/Lock Key** . The lock screen will appear. Swipe the screen in any direction to unlock. The last screen you were working on opens.

! NOTE

- The automatic screen timeout can be configured manually in Settings. To change it, tap the **Menu Key**  > **All Settings** > **Display** > **Screen timeout** and select the desired amount.
- If there are any programs running when you lock the phone, they may still be running in lock mode. It is recommended that you exit all programs before entering the lock mode to avoid unnecessary charges (e.g., phone call, web access and data communications).

Setting Swipe, Face Unlock, Pattern, PIN, Password to unlock your phone

You can slide the screen without entering any information, utilize facial recognition, draw your own unlock Pattern or enter a PIN or Password to add more security to your device. To set Swipe, Face Unlock, Pattern, PIN, or Password, from the Home screen tap the **Menu Key**  > **Lock screen settings** > **Select screen lock**. Then choose from **Swipe, Face Unlock, Pattern, PIN, or Password** and enter the desired information.

! Caution

You are allowed 5 attempts to enter your screen unlock information. If you used up all 5 opportunities, you will have to wait 30 seconds to attempt unlocking the phone again.

! NOTE

The Face Unlock feature is only available after you set up your Google account on your device.

Quick Switch to Silent Mode

To quickly set your phone to silent mode, press and hold the **Volume Down Key**  until you see  on the screen.

Home screen panels

Simply swipe your finger to the left or right to view the different panels.

You can also customize each panel with shortcuts, folders, and widgets, which are shortcuts to your favorite applications.

NOTE


On the Home screen, you can view the Quick Keys at the bottom of the screen. The Quick Keys provide easy, one-tap access to the functions you use the most.

Customizing your Home screen

You can customize your Home screen by adding quick access elements, such as shortcuts to an application, widgets, or changing the wallpaper.

- **Apps:** Add shortcuts to applications on the Home screen.
- **Downloads:** Add shortcuts to downloaded applications on the Home screen.
- **Widgets:** Add dynamically updating widgets to your Home screen to allow quick access to applications without opening the full application.
- **Wallpapers:** Change the Home screen wallpaper.

To add shortcuts to apps or Widgets on the Home screen:




- 1 Select a location (Home screen panels) to add an item by swiping the Home screen from left to right or vice versa.
- 2 Tap . Or touch and hold an empty part of the Home screen.
- 3 Tap the type of item you want to add on the screen: **Apps, Downloads, Widgets, or Wallpapers.**
- 4 Tap the desired app or widget.
- 5 You will see a new icon on the Home screen. To place it on a different panel, touch and hold it to drag it to the desired location on the desired panel and release your finger from the screen.

TIP

To add a preloaded application or an application you have downloaded from Play Store to the Home screen, simply touch and hold the icon you want in the Apps Screen.

NOTE


If there is no available space on a particular Home screen panel, you must delete or remove an item before you can add another item. In this case, you have the option of switching to another Home screen panel.

To delete an application icon from the Home screen, touch and hold the shortcut icon you want to delete and drag to **Remove**  at the top of the screen. When  changes to , lift your finger.

You cannot delete the preloaded applications. (Only their icons can be deleted from the screen).

Customizing App Icons on the Home screen

You can customize each application icon.



- 1 Touch and hold an application icon until it's unlocked from its current position. Then drop it on the screen. The editing icon  will appear in the upper right corner of the application.



- 2 Tap the application icon again and select the a desired icon design. Or tap **Create photo icon** to take a new picture or select a picture from the Gallery.



Getting back to a recently used application

- 1 Touch and hold the **Home Key** . The screen will display the icons of applications that you have used recently.
- 2 Tap an icon to open its application or tap the **Back Key**  to return to the current application.

Your Home screen

Home screen clean view


You can see the wallpaper without items on the Home screen by pinching out. Pinch in or tap the **Back Key** to see applications and widgets again.



Notifications Panel

Notification icons on the Status Bar report the arrival of new messages, calendar events, alarms, as well as ongoing events, such as when you are in a call. You can view a list of all recent notifications.

The Status Bar runs across the top of your screen.

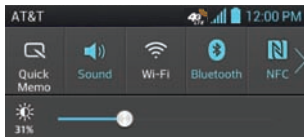

Touch and hold the Status Bar and slide it down with your finger to open the Notifications Panel. From here, you can check and quickly turn on and off Sound, Wi-Fi, Bluetooth, GPS, and any other options you add. You can also quickly adjust the screen brightness.

Viewing the Status Bar













The Status Bar uses different icons to display phone information, such as signal strength, new messages, battery life, and activate Bluetooth and data connections.














Below is a table explaining the meaning of icons you are likely to see in the Status Bar.

[Status Bar]





Icon	Description
	No SIM card inserted
	No network signal available
	Airplane mode is on

Icon	Description
	Connected to a Wi-Fi network
	Wired headset connected
	Call in progress
	Call on hold
	Speakerphone is on
	Phone microphone is muted
	Missed call
	Bluetooth is on
	System warning
	An alarm is set
	New voicemail available
	Ringer is silenced
	Vibrate mode is on

Icon	Description
	Battery fully charged
	Battery is charging
	Phone is connected to PC via USB cable
	Downloading data
	Uploading data
	GPS is on
	Receiving location data from GPS
	Data is synchronizing
	New Gmail message available
	New Google Talk message available
	New text or multimedia message
	A song is currently playing
	Portable Wi-Fi hotspot is active

Your Home screen


Icon	Description
	USB tethering and Portable Wi-Fi hotspot are active
	Choose input method

On-screen Keyboard

You can enter text using the on-screen keyboard. The on-screen keyboard displays automatically on the screen when you need to enter text. To manually display the keyboard, simply tap a text field where you want to enter text.

There are two types of keypads that you can use: **Android keyboard** and **LG keyboard**.


To select the keyboard:

- 1 Tap the **Menu Key**  > **All Settings** > **Language & input** > **Default** (Under **KEYBOARD & INPUT METHODS**).
- 2 Select the default keyboard between **Android keyboard** and **LG Keyboard**.

OR

- 1 While entering text, drag the Status Bar down and tap **Choose input method**.
- 2 Select the desired input method from **Android keyboard**, **Google voice typing** or **LG Keyboard**.

Android keyboard - Letters Entry

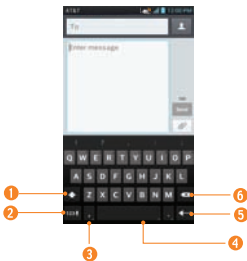

- 1 **Shift Key** - Tap once to capitalize the next letter you type. Double-tap for all caps.
- 2 **Number and Symbols Key** - Tap to change input to number and symbol entry.
- 3 **Comma/Settings Key** - Tap to enter a comma. Touch and hold to change the input language and the Android keyboard settings.
- 4 **Space Key** - Tap to enter a space.
- 5 **Enter Key** - Tap to move the cursor to the next line.
- 6 **Delete Key** - Tap to delete characters to the left of the cursor.