

尺寸:90*130mm, 105g铜版纸过哑油, 折页

主颜色标准值: C0 M90 Y82 K21
 C0 M30 Y32 K39


蓝色虚线为折痕线, 不印刷

PUREHEAL

User Manual

EyeFit

Gentle pressure applied to your eyes and temples to relieve tension whenever you feel the need to ease into comfort.

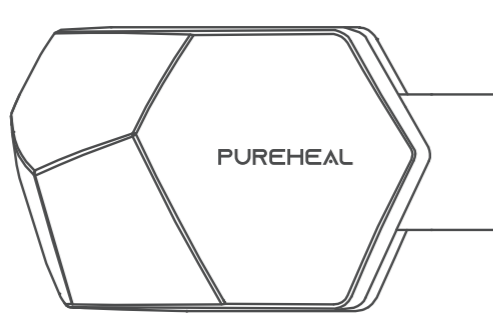

Model: PH-GO2

IMPORTANT SAFETY INSTRUCTIONS

READ ALL INSTRUCTIONS CAREFULLY BEFORE USE.

1. This device is intended for personal care use only and not for medical or commercial purposes.
2. Children over 8 and persons with reduced physical, sensory or cognitive capabilities should only use the device under supervision and after receiving instructions on safe use.
3. Children should not play with the device.
4. Cleaning and maintenance should not be made by children.

DANGER - To reduce the risk of electric shock:

1. Never use pins or other metallic fasteners with this device.
2. Do not use the device with wet hands or submerge the device into water or other liquid.

WARNING - To reduce the risk of burns, fire, electric shock, or injury to persons:

1. Please consult your doctor before use if you are any of the following persons:
 - Persons who had undergone eye surgery or eye conditions such as glaucoma, cataract and retinal detachment
 - The elderly
 - Pregnant or postpartum women
 - Persons allergic to leather material
 - Persons with skin infections, sensitivity, redness and/or burns on the skin
 - Persons with any swelling or wound around the eye area
 - Persons using a pacemaker or other implantable medical devices
 - Persons with a heart condition, malignant tumors, or other serious health conditions
 - Persons undergoing medical treatment
 - Persons with high or abnormal blood pressure

If you experience any discomfort, stop using the device immediately.

2. Remove contact lenses, glasses, false eyelashes, hairpins, and any other accessories before use.
3. Do not use the device under blankets, pillows, or any other object that can cause excessive heating.
4. Do not use the device if it is not working properly, has been damaged, or dropped into water. Return it to the service center for examination and repair.


01

WHAT'S INCLUDED

EyeFit x 1
Charging Cable x 1
User Manual x 1
Quick Guide x 1

CHARGING YOUR EYEFIT

Fully charge the device before the first use.

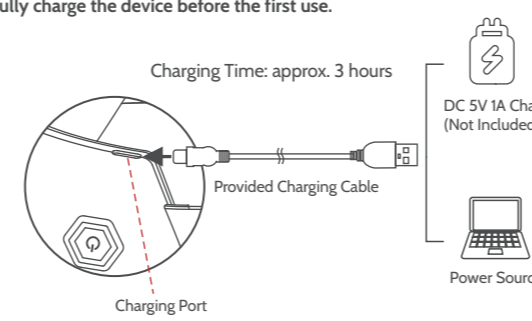

Charging Time: approx. 3 hours

DC 5V 1A Charger (Not Included)


Power Source

Note: Do not use the device while charging.


02

WEARING YOUR EYEFIT

1. Remove any eye accessories (e.g. eyeglasses, false eyelashes, etc.) before wearing.
2. Wear the device and adjust the elastic band for a proper fit using the adjustable buckle.

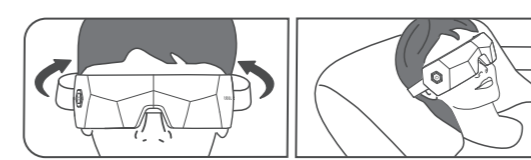

USING YOUR EYEFIT

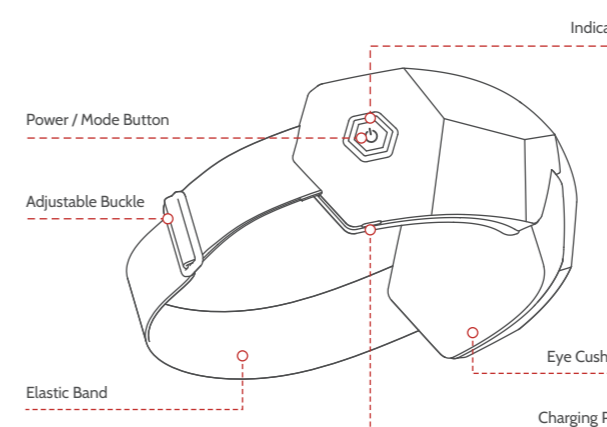

Indicator

Power / Mode Button

1. Press and hold to turn on/off the device. After power on, mode 1, built-in music and Bluetooth will be enabled by default, and the indicator turns white.
2. Short press to switch between 5 modes.
 - M 1: Soft Pressure + Heat
 - M 2: Strong Pressure + Heat
 - M 3: Heat
 - M 4: Soft Pressure
 - M 5: Strong Pressure
3. Press twice to switch between voice mode and silent mode. In silent mode, the voice broadcast and music will be disabled, and you can resume the Bluetooth music via your mobile device.

Note:

- For optimal results, it is recommended to use the device for 15 minutes every day.
- This device features a 15mins auto-off timer that automatically shuts the device off after 15 minutes of continuous use.

Indicator

Status	Indicator
Device turned on / Bluetooth disconnected	Turns solid white
Bluetooth connected	Turns solid blue
Low battery / Charging	Flashes red slowly
Fully charged	Turns solid red
Charging at a voltage higher than 5V	Keeps flashing red quickly for 1 minute and then turns off, indicating an improper charger is used.

04

PUREHEAL

CONNECTING TO BLUETOOTH

1. Turn on your device and enable Bluetooth on your mobile device.
2. Search for "PH-GO2" via your Bluetooth settings and connect to play your music playlist through the device.

Note:
Once paired successfully, the device will be automatically connected to Bluetooth each time turned on, followed by a voice prompt "Bluetooth connected".

CARE AND MAINTENANCE

1. Turn off the device and allow it to cool down before cleaning or storing.
2. Wipe the device surface with a soft cotton cloth slightly dampened with mild detergent. Do not use abrasive cleaners or solvents.
3. Always keep the device dry.
4. Store the device in a cool, dry place. Do not expose it to direct sunlight, moisture, heat, and corrosive gases.
5. If the device has not been used for over 3 months, charge it from time to time to prolong its lifespan.
6. Do not disassemble or repair the device by yourself as this may cause damage and void the manufacturer's warranty.

SPECIFICATIONS

Product Name: Eye Massager
Model: PH-GO2
Input: 5V --- 1A
Rated Power: 5W
Battery Capacity: 1200mAh

US Importer: JOICOM CORPORATION
14129 The Merge Street, Building 3 Unit A, Eastvale, CA 92880

Manufacturer: Shenzhen Ruiyi Business Technology Co., Ltd.
No. 810-C063, 8th Floor, Xiangbin International Financial Centre, No.18, West Free Trade Street, China Special Economic Zone, Qianhai Bay, Shenzhen, Guangdong Province, 518000 China

Made in China

NA1

TROUBLESHOOTING GUIDE

Problem	Possible Cause	Solution
Power-on failure	Out of power	Charge the device
	Short press the Power button	Long press the Power button to turn on the device
Low air pressure	Low battery	Charge the device
	The mode with soft pressure is selected	Select the mode with strong pressure
No air pressure	The mode without air pressure is selected	Select the mode with pressure
	The device shuts off suddenly	Out of power
Charging failure	The built-in auto-off timer is activated	Restart the device for another massage session if needed
	Use other types of charging cables	Use the provided charging cable only
Fail to play Bluetooth music through the device	Use a charger with a voltage higher than 5V	Use a DC 5V 1A charger (not included)
	Bluetooth is not connected or disconnected	Enable Bluetooth on your mobile device and connect to "PH-GO2"
	Silent mode is activated	Tap on your phone to play music or double press the Power button on the device to switch to voice mode
There is work noise	Connected to another mobile device	Ensure the device is disconnected from another mobile device
	For this type of massager, the consistent work noise is considered normal	No action is necessary

If you encounter any other problems, please contact our customer service.

06

WARRANTY POLICY (1-YEAR PERIOD)

The manufacturer's warranty is void under the following circumstances but not limited to:

- Improper or inadequate maintenance or modification.
- Accident, misuse, abuse, contamination, or other external causes.
- The use of unspecified accessories.
- Loss or damage in transit.
- Damages that occur as a result of one's failure to follow the instructions.

CUSTOMER SERVICE

We have an award-winning warranty, exchange, and customer service team that guarantees hassle-free solutions to any issue you might have within business hours.

+1(844) 417 0149
Monday-Friday 9:00AM-4:30PM

✉ support@pure-heal.com

* For defective products or the return of items, please contact us with your order number within the specified warranty period. DO NOT dispose of any product parts as they may be required for inspection/repair.

07

FCC Regulatory Compliance

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:
(1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Warning: Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:
- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

RF Exposure Compliance

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.

ISED Regulatory compliance

This device contains licence-exempt transmitters that comply with Innovation, Science and Economic Development Canada's licence-exempt RSS(s). Operation is subject to the following two conditions:
(1) This device must not cause interference.
(2) This device must accept any interference, including interference that may cause undesired operation of the device.

Le présent appareil est conforme aux CNR d'Industrie Canada applicables aux appareils radio exempts de licence. L'exploitation est autorisée aux deux conditions suivantes:
(1) l'appareil ne doit pas produire de brouillage, et (2) l'utilisateur de l'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.

This equipment complies with IC RSS-102 radiation exposure limits set forth for an uncontrolled environment. Cet équipement est conforme aux limites d'exposition aux radiations IC CNR-102 établies pour un environnement non contrôlé.

08