



# MoerLab

## SoundLinker

TX MICROPHONE

Model : AMP10

User Manual

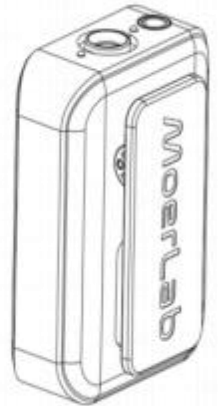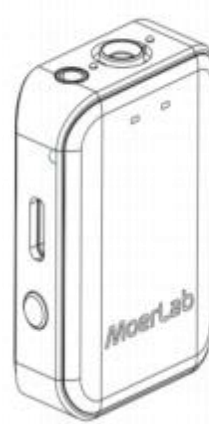

#### FCC Warning:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Caution: Any changes or modifications to this device not explicitly approved by manufacturer could void your authority to operate this equipment.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.

## WHAT'S IN THE BOX?

- Soundlinker Bluetooth Auracast Audio Transceiver\*1
- Mini microphone\*1
- User manual\*1
- TYPE-C cable\*1
- 3.5mm audio cable\*1



Soundlinker



User manual



Mini microphone



TYPE-C cable



3.5mm audio cable

## OVERVIEW



- ① Function key
- ② LED indicator (Power state)
- ③ Internal Microphone
- ④ LED indicator (Pairing state)
- ⑤ External Microphone
- ⑥ 3.5mm audio line-in/line-out
- ⑦ Back clip
- ⑧ Type-C charging/USB audio interface

# Introduction

Soundlinker leads the industry by providing Bluetooth solutions. Through its Bluetooth receiving/transmitting function, it supports Auracast CIS and BIS, ensuring high compatibility with a variety of Bluetooth devices.

Soundlinker sets a new industry standard for delivering high-quality audio with low energy and low latency. It takes full advantage of Bluetooth low energy audio technology, integrates the leading LC3 codec in Bluetooth V5.3. Soundlinker has passed the latest Auracast certification from the Bluetooth Technology Alliance (SIG).  
(QDID: 163117,DID:D061551).

## Transmitting mode

1. Press and hold the function key ① for three seconds until the LED light turns on.
3. Select the audio transmission mode:
  - Auracast CIS Mode (1 to 1): For CIS mode, double click the function key ①. The blue light flashes rapidly. Once the pairing is complete, the blue light will flashes twice every five seconds.
  - Auracast Broadcast Mode (1 to N): Click the function key ① three times, while the LED light flashes purple. Devices that support compatible Auracast Bluetooth audio devices.

# LED INDICATOR

Mode	Function	State	LED Indicated
Transmitting (TX)	Power status	Low battery	Red light flashes every 5 seconds
		Charging	Red light stays on
		Charging completed	Blue light stays on
	CIS Mode	Pairing	Blue light flashes rapidly
		Pairing completed	Blue light flashes twice every 3 seconds
		Disconnected	Blue light flashes once every 3 seconds
		Mute	Red light stays on
	Broadcast Mode	Pairing	Purple light flashes
		Mute	Red light stays on

## SPECIFICATION

Model: AMP10

Bluetooth version: BT V5.3

Bluetooth Encoder: SBC/AAC/LC3

Operation mode: CIS mode, broadcast mode

Audio input (TX): 3.5mm line in, USB, MIC.

Battery capacity/charging time: 350mAh/2H

DC input: 5V/100mA

Transmission distance: 30-50m (open space)

## WIDELY COMPATIBLE

It is compatible with Android, iOS, Windows, Mac, Linux and other operating software, and supports use on PC, MAC, mobile phones, Nintendo Switch, Sony PS5, Smart TV (with USB audio function), and other devices.

## PACKAGE CONTENTS

- Bluetooth Auracast Audio Transceiver\*1
- Mini microphone\*1
- User manual\*1
- TYPE-C cable\*1
- 3.5mm audio cable\*1