

Appendix Test Data

Report No.:	18220WC40089602	Test Sample No.:	1-2-2
Start Test Date:	2024.05.14	Finish Test Date:	2024.05.16
Test Engineer:	<i>Joker Wang</i>	Auditor:	<i>Zolward pan</i>
Temperature:	24.6°C	Relative Humidity:	46%
Pressure:	101kPa		

Appendix A1: 26dB Bandwidth

Test Result

TestMode	Antenna	Frequency[MHz]	26db EBW [MHz]	FL[MHz]	FH[MHz]	Limit[MHz]	Verdict
11A	Ant1	5180	20.960	5169.640	5190.600	---	---
11A	Ant2	5180	20.800	5169.840	5190.640	---	---
11A	Ant1	5200	21.200	5189.680	5210.880	---	---
11A	Ant2	5200	21.320	5189.440	5210.760	---	---
11A	Ant1	5240	21.000	5229.720	5250.720	---	---
11A	Ant2	5240	21.240	5229.520	5250.760	---	---
11A	Ant1	5260	21.120	5249.640	5270.760	---	---
11A	Ant2	5260	21.400	5249.320	5270.720	---	---
11A	Ant1	5300	20.840	5289.920	5310.760	---	---
11A	Ant2	5300	21.040	5289.680	5310.720	---	---
11A	Ant1	5320	21.280	5309.440	5330.720	---	---
11A	Ant2	5320	21.160	5309.400	5330.560	---	---
11A	Ant1	5500	21.240	5489.480	5510.720	---	---
11A	Ant2	5500	21.200	5489.520	5510.720	---	---
11A	Ant1	5580	21.280	5569.400	5590.680	---	---
11A	Ant2	5580	21.000	5569.640	5590.640	---	---
11A	Ant1	5700	21.280	5689.480	5710.760	---	---
11A	Ant2	5700	21.240	5689.520	5710.760	---	---
11A	Ant1	5745	21.280	5734.440	5755.720	---	---
11A	Ant2	5745	21.120	5734.720	5755.840	---	---
11A	Ant1	5785	21.080	5774.520	5795.600	---	---
11A	Ant2	5785	20.960	5774.680	5795.640	---	---
11A	Ant1	5825	21.160	5814.640	5835.800	---	---

Shenzhen Anbotek Compliance Laboratory Limited

Address: 1/F., Building D, Sogood Science and Technology Park, Sanwei Community,
 Hangcheng Street, Bao'an District, Shenzhen, Guangdong, China.
 Tel: (86) 0755-26066440 Fax: (86) 0755-26014772 Email: service@anbotek.com



Hotline

400-003-0500

www.anbotek.com.cn



11A	Ant2	5825	21.440	5814.520	5835.960	---	---
11N20MIMO	Ant1	5180	21.320	5169.560	5190.880	---	---
11N20MIMO	Ant2	5180	21.520	5169.520	5191.040	---	---
11N20MIMO	Ant1	5200	21.680	5189.440	5211.120	---	---
11N20MIMO	Ant2	5200	21.120	5189.560	5210.680	---	---
11N20MIMO	Ant1	5240	21.400	5229.440	5250.840	---	---
11N20MIMO	Ant2	5240	21.320	5229.560	5250.880	---	---
11N20MIMO	Ant1	5260	21.280	5249.600	5270.880	---	---
11N20MIMO	Ant2	5260	21.320	5249.280	5270.600	---	---
11N20MIMO	Ant1	5300	21.000	5289.640	5310.640	---	---
11N20MIMO	Ant2	5300	21.240	5289.600	5310.840	---	---
11N20MIMO	Ant1	5320	21.040	5309.600	5330.640	---	---
11N20MIMO	Ant2	5320	21.760	5309.160	5330.920	---	---
11N20MIMO	Ant1	5500	21.320	5489.520	5510.840	---	---
11N20MIMO	Ant2	5500	21.320	5489.480	5510.800	---	---
11N20MIMO	Ant1	5580	21.760	5569.320	5591.080	---	---
11N20MIMO	Ant2	5580	21.560	5569.360	5590.920	---	---
11N20MIMO	Ant1	5700	21.520	5689.480	5711.000	---	---
11N20MIMO	Ant2	5700	21.040	5689.560	5710.600	---	---
11N20MIMO	Ant1	5745	21.440	5734.520	5755.960	---	---
11N20MIMO	Ant2	5745	21.360	5734.480	5755.840	---	---
11N20MIMO	Ant1	5785	21.520	5774.360	5795.880	---	---
11N20MIMO	Ant2	5785	21.240	5774.480	5795.720	---	---
11N20MIMO	Ant1	5825	21.440	5814.600	5836.040	---	---
11N20MIMO	Ant2	5825	21.280	5814.520	5835.800	---	---
11N40MIMO	Ant1	5190	40.240	5170.240	5210.480	---	---
11N40MIMO	Ant2	5190	39.920	5170.320	5210.240	---	---
11N40MIMO	Ant1	5230	40.160	5209.920	5250.080	---	---
11N40MIMO	Ant2	5230	40.160	5210.320	5250.480	---	---
11N40MIMO	Ant1	5270	39.760	5250.400	5290.160	---	---
11N40MIMO	Ant2	5270	40.080	5250.160	5290.240	---	---
11N40MIMO	Ant1	5310	39.760	5290.320	5330.080	---	---
11N40MIMO	Ant2	5310	39.760	5290.320	5330.080	---	---
11N40MIMO	Ant1	5510	40.000	5490.160	5530.160	---	---
11N40MIMO	Ant2	5510	40.000	5490.160	5530.160	---	---
11N40MIMO	Ant1	5550	39.920	5530.400	5570.320	---	---
11N40MIMO	Ant2	5550	40.400	5530.000	5570.400	---	---
11N40MIMO	Ant1	5670	40.480	5650.160	5690.640	---	---
11N40MIMO	Ant2	5670	39.760	5650.320	5690.080	---	---
11N40MIMO	Ant1	5755	40.400	5735.000	5775.400	---	---
11N40MIMO	Ant2	5755	40.000	5735.160	5775.160	---	---
11N40MIMO	Ant1	5795	40.160	5775.320	5815.480	---	---

Shenzhen Anbotek Compliance Laboratory Limited

Address: 1/F., Building D, Sogood Science and Technology Park, Sanwei Community, Hangcheng Street, Bao'an District, Shenzhen, Guangdong, China.
 Tel: (86) 0755-26066440 Fax: (86) 0755-26014772 Email: service@anbotek.com

Hotline
 400-003-0500
www.anbotek.com.cn



11N40MIMO	Ant2	5795	41.040	5775.080	5816.120	---	---
11AC20MIMO	Ant1	5180	21.200	5169.600	5190.800	---	---
11AC20MIMO	Ant2	5180	21.200	5169.640	5190.840	---	---
11AC20MIMO	Ant1	5200	21.280	5189.440	5210.720	---	---
11AC20MIMO	Ant2	5200	21.160	5189.560	5210.720	---	---
11AC20MIMO	Ant1	5240	21.200	5229.520	5250.720	---	---
11AC20MIMO	Ant2	5240	21.560	5229.320	5250.880	---	---
11AC20MIMO	Ant1	5260	21.160	5249.560	5270.720	---	---
11AC20MIMO	Ant2	5260	21.080	5249.600	5270.680	---	---
11AC20MIMO	Ant1	5300	21.320	5289.440	5310.760	---	---
11AC20MIMO	Ant2	5300	21.480	5289.360	5310.840	---	---
11AC20MIMO	Ant1	5320	21.200	5309.680	5330.880	---	---
11AC20MIMO	Ant2	5320	21.400	5309.360	5330.760	---	---
11AC20MIMO	Ant1	5500	21.400	5489.400	5510.800	---	---
11AC20MIMO	Ant2	5500	21.400	5489.520	5510.920	---	---
11AC20MIMO	Ant1	5580	21.320	5569.520	5590.840	---	---
11AC20MIMO	Ant2	5580	21.320	5569.480	5590.800	---	---
11AC20MIMO	Ant1	5700	21.280	5689.480	5710.760	---	---
11AC20MIMO	Ant2	5700	21.480	5689.400	5710.880	---	---
11AC20MIMO	Ant1	5745	21.360	5734.560	5755.920	---	---
11AC20MIMO	Ant2	5745	21.400	5734.400	5755.800	---	---
11AC20MIMO	Ant1	5785	21.080	5774.600	5795.680	---	---
11AC20MIMO	Ant2	5785	21.520	5774.360	5795.880	---	---
11AC20MIMO	Ant1	5825	21.400	5814.440	5835.840	---	---
11AC20MIMO	Ant2	5825	21.360	5814.480	5835.840	---	---
11AC40MIMO	Ant1	5190	40.080	5170.000	5210.080	---	---
11AC40MIMO	Ant2	5190	40.240	5170.160	5210.400	---	---
11AC40MIMO	Ant1	5230	40.800	5209.840	5250.640	---	---
11AC40MIMO	Ant2	5230	40.320	5209.920	5250.240	---	---
11AC40MIMO	Ant1	5270	40.080	5250.240	5290.320	---	---
11AC40MIMO	Ant2	5270	40.240	5250.000	5290.240	---	---
11AC40MIMO	Ant1	5310	40.000	5290.320	5330.320	---	---
11AC40MIMO	Ant2	5310	39.760	5290.400	5330.160	---	---
11AC40MIMO	Ant1	5510	40.400	5489.920	5530.320	---	---
11AC40MIMO	Ant2	5510	40.160	5490.000	5530.160	---	---
11AC40MIMO	Ant1	5550	40.080	5530.000	5570.080	---	---
11AC40MIMO	Ant2	5550	40.400	5530.000	5570.400	---	---
11AC40MIMO	Ant1	5670	40.000	5650.080	5690.080	---	---
11AC40MIMO	Ant2	5670	40.160	5649.920	5690.080	---	---
11AC40MIMO	Ant1	5755	40.240	5734.840	5775.080	---	---
11AC40MIMO	Ant2	5755	39.920	5735.160	5775.080	---	---
11AC40MIMO	Ant1	5795	40.160	5775.160	5815.320	---	---

Shenzhen Anbotek Compliance Laboratory Limited

Address: 1/F., Building D, Sogood Science and Technology Park, Sanwei Community, Hangcheng Street, Bao'an District, Shenzhen, Guangdong, China.
Tel: (86) 0755-26066440 Fax: (86) 0755-26014772 Email: service@anbotek.com



Hotline

400-003-0500

www.anbotek.com.cn



11AC40MIMO	Ant2	5795	40.080	5775.080	5815.160	---	---
11AC80MIMO	Ant1	5210	81.600	5169.840	5251.440	---	---
11AC80MIMO	Ant2	5210	81.440	5169.680	5251.120	---	---
11AC80MIMO	Ant1	5290	81.920	5249.520	5331.440	---	---
11AC80MIMO	Ant2	5290	81.920	5249.520	5331.440	---	---
11AC80MIMO	Ant1	5530	82.080	5489.520	5571.600	---	---
11AC80MIMO	Ant2	5530	81.920	5489.200	5571.120	---	---
11AC80MIMO	Ant1	5610	81.600	5569.520	5651.120	---	---
11AC80MIMO	Ant2	5610	81.760	5569.360	5651.120	---	---
11AC80MIMO	Ant1	5775	82.240	5734.200	5816.440	---	---
11AC80MIMO	Ant2	5775	81.440	5734.840	5816.280	---	---
11AX20MIMO	Ant1	5180	21.040	5169.600	5190.640	---	---
11AX20MIMO	Ant2	5180	21.120	5169.600	5190.720	---	---
11AX20MIMO	Ant1	5200	21.200	5189.680	5210.880	---	---
11AX20MIMO	Ant2	5200	21.320	5189.720	5211.040	---	---
11AX20MIMO	Ant1	5240	21.000	5229.720	5250.720	---	---
11AX20MIMO	Ant2	5240	21.160	5229.680	5250.840	---	---
11AX20MIMO	Ant1	5260	21.160	5249.680	5270.840	---	---
11AX20MIMO	Ant2	5260	21.120	5249.440	5270.560	---	---
11AX20MIMO	Ant1	5300	21.120	5289.520	5310.640	---	---
11AX20MIMO	Ant2	5300	21.120	5289.600	5310.720	---	---
11AX20MIMO	Ant1	5320	21.040	5309.640	5330.680	---	---
11AX20MIMO	Ant2	5320	20.800	5309.880	5330.680	---	---
11AX20MIMO	Ant1	5500	21.000	5489.720	5510.720	---	---
11AX20MIMO	Ant2	5500	21.000	5489.680	5510.680	---	---
11AX20MIMO	Ant1	5580	21.040	5569.720	5590.760	---	---
11AX20MIMO	Ant2	5580	21.000	5569.640	5590.640	---	---
11AX20MIMO	Ant1	5700	21.320	5689.400	5710.720	---	---
11AX20MIMO	Ant2	5700	21.320	5689.440	5710.760	---	---
11AX20MIMO	Ant1	5745	21.000	5734.760	5755.760	---	---
11AX20MIMO	Ant2	5745	21.280	5734.480	5755.760	---	---
11AX20MIMO	Ant1	5785	21.200	5774.520	5795.720	---	---
11AX20MIMO	Ant2	5785	20.840	5774.800	5795.640	---	---
11AX20MIMO	Ant1	5825	21.360	5814.480	5835.840	---	---
11AX20MIMO	Ant2	5825	20.760	5814.680	5835.440	---	---
11AX40MIMO	Ant1	5190	40.000	5170.240	5210.240	---	---
11AX40MIMO	Ant2	5190	39.920	5170.240	5210.160	---	---
11AX40MIMO	Ant1	5230	40.320	5210.080	5250.400	---	---
11AX40MIMO	Ant2	5230	39.760	5210.400	5250.160	---	---
11AX40MIMO	Ant1	5270	40.160	5250.080	5290.240	---	---
11AX40MIMO	Ant2	5270	40.000	5250.400	5290.400	---	---
11AX40MIMO	Ant1	5310	39.600	5290.400	5330.000	---	---

Shenzhen Anbotek Compliance Laboratory Limited

Address: 1/F., Building D, Sogood Science and Technology Park, Sanwei Community, Hangcheng Street, Bao'an District, Shenzhen, Guangdong, China.
Tel: (86) 0755-26066440 Fax: (86) 0755-26014772 Email: service@anbotek.com



Hotline
400-003-0500
www.anbotek.com.cn



11AX40MIMO	Ant2	5310	39.920	5290.400	5330.320	---	---
11AX40MIMO	Ant1	5510	40.080	5490.080	5530.160	---	---
11AX40MIMO	Ant2	5510	40.240	5490.160	5530.400	---	---
11AX40MIMO	Ant1	5550	39.600	5530.400	5570.000	---	---
11AX40MIMO	Ant2	5550	40.240	5530.160	5570.400	---	---
11AX40MIMO	Ant1	5670	39.840	5650.160	5690.000	---	---
11AX40MIMO	Ant2	5670	39.840	5650.320	5690.160	---	---
11AX40MIMO	Ant1	5755	39.760	5735.400	5775.160	---	---
11AX40MIMO	Ant2	5755	40.240	5735.160	5775.400	---	---
11AX40MIMO	Ant1	5795	39.760	5775.560	5815.320	---	---
11AX40MIMO	Ant2	5795	39.920	5775.320	5815.240	---	---
11AX80MIMO	Ant1	5210	81.600	5169.680	5251.280	---	---
11AX80MIMO	Ant2	5210	80.960	5169.840	5250.800	---	---
11AX80MIMO	Ant1	5290	81.120	5249.680	5330.800	---	---
11AX80MIMO	Ant2	5290	81.120	5249.680	5330.800	---	---
11AX80MIMO	Ant1	5530	80.960	5490.000	5570.960	---	---
11AX80MIMO	Ant2	5530	80.960	5489.840	5570.800	---	---
11AX80MIMO	Ant1	5610	80.800	5569.840	5650.640	---	---
11AX80MIMO	Ant2	5610	80.640	5570.160	5650.800	---	---
11AX80MIMO	Ant1	5775	81.600	5734.200	5815.800	---	---
11AX80MIMO	Ant2	5775	80.960	5734.680	5815.640	---	---

Shenzhen Anbotek Compliance Laboratory Limited

Address: 1/F., Building D, Sogood Science and Technology Park, Sanwei Community, Hangcheng Street, Bao'an District, Shenzhen, Guangdong, China.
 Tel: (86) 0755-26066440 Fax: (86) 0755-26014772 Email: service@anbotek.com




Hotline
 400-003-0500
www.anbotek.com.cn



Test Graphs



11A-Ant1-5180

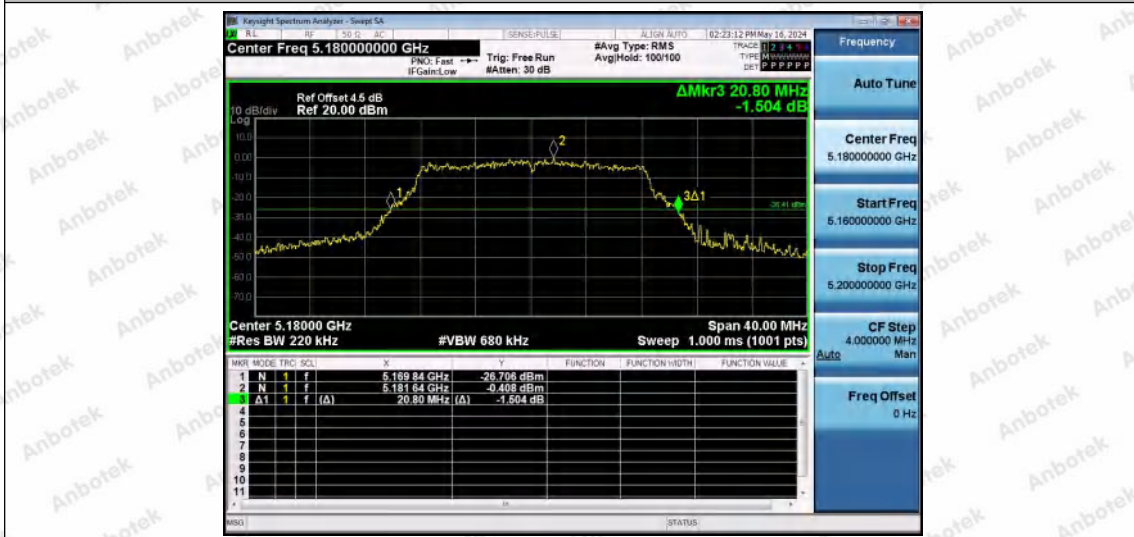

11A-Ant2-5180



Shenzhen Anbotek Compliance Laboratory Limited

Address: 1/F., Building D, Sogood Science and Technology Park, Sanwei Community, Hangcheng Street, Bao'an District, Shenzhen, Guangdong, China.
Tel: (86) 0755-26066440 Fax: (86) 0755-26014772 Email: service@anbotek.com


Hotline 400-003-0500
www.anbotek.com.cn



11A-Ant1-5200



11A-Ant2-5200

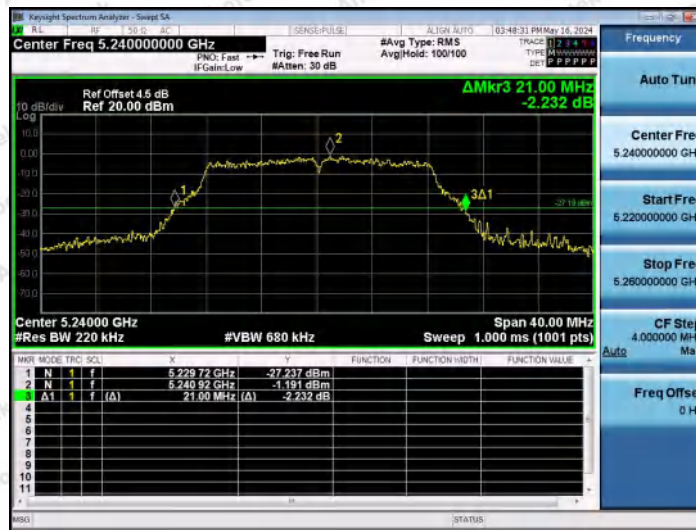

11A-Ant1-5240




11A-Ant2-5240

Shenzhen Anbotek Compliance Laboratory Limited

Address: 1/F., Building D, Sogood Science and Technology Park, Sanwei Community, Hangcheng Street, Bao'an District, Shenzhen, Guangdong, China.
 Tel: (86) 0755-26066440 Fax: (86) 0755-26014772 Email: service@anbotek.com

Hotline 400-003-0500
 www.anbotek.com.cn



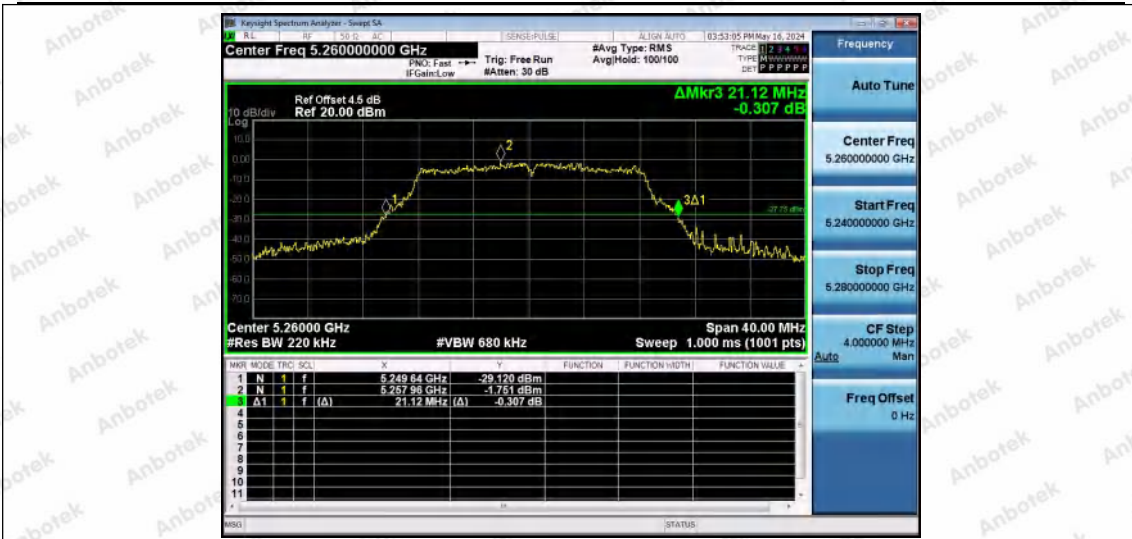

11A-Ant1-5260



11A-Ant2-5260




11A-Ant1-5300

Shenzhen Anbotek Compliance Laboratory Limited


Address: 1/F., Building D, Sogood Science and Technology Park, Sanwei Community, Hangcheng Street, Bao'an District, Shenzhen, Guangdong, China.
Tel: (86) 0755-26066440 Fax: (86) 0755-26014772 Email: service@anbotek.com

Hotline 400-003-0500
www.anbotek.com.cn



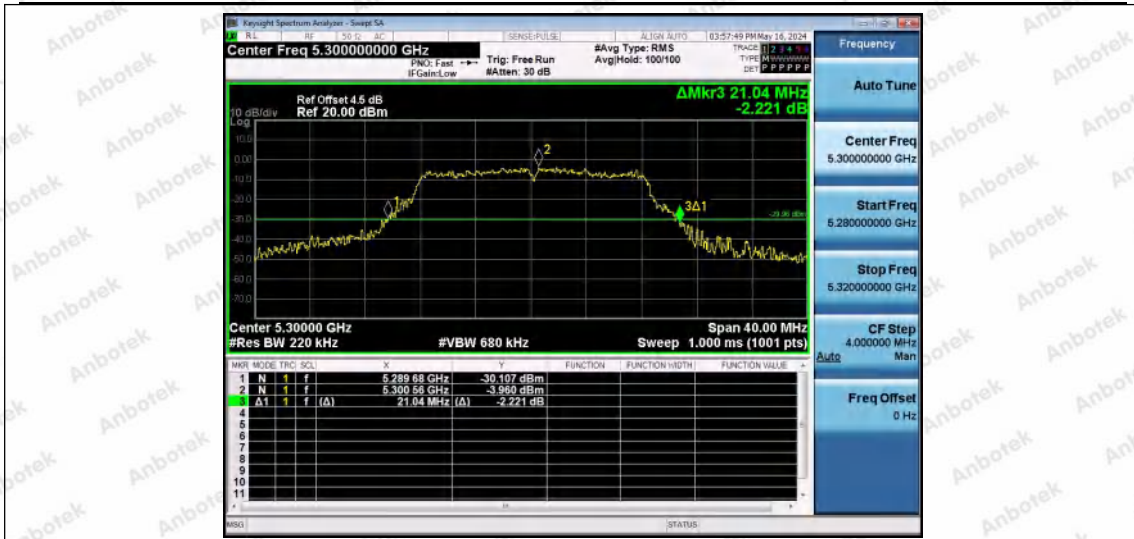

11A-Ant2-5300

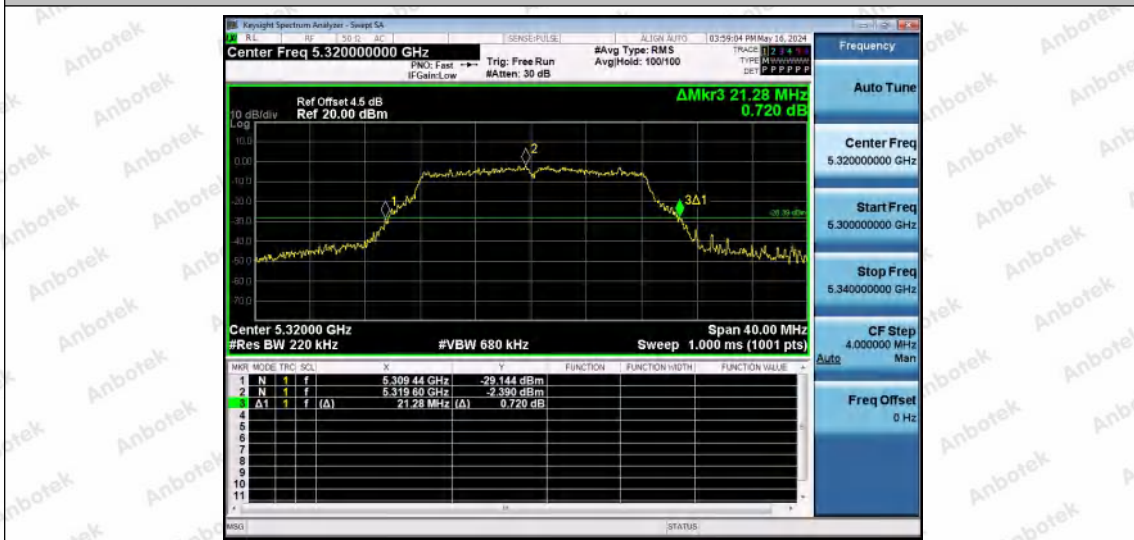

11A-Ant1-5320




11A-Ant2-5320

Shenzhen Anbotek Compliance Laboratory Limited


Address: 1/F., Building D, Sogood Science and Technology Park, Sanwei Community, Hangcheng Street, Bao'an District, Shenzhen, Guangdong, China.
Tel: (86) 0755-26066440 Fax: (86) 0755-26014772 Email: service@anbotek.com

Hotline 400-003-0500
www.anbotek.com.cn




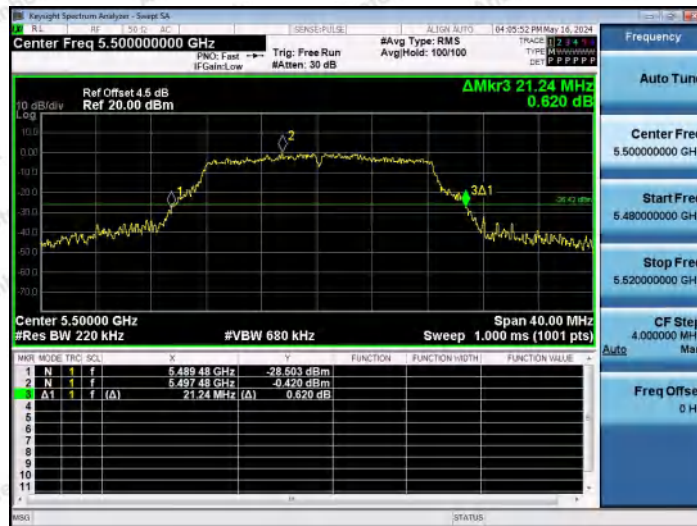

11A-Ant1-5500

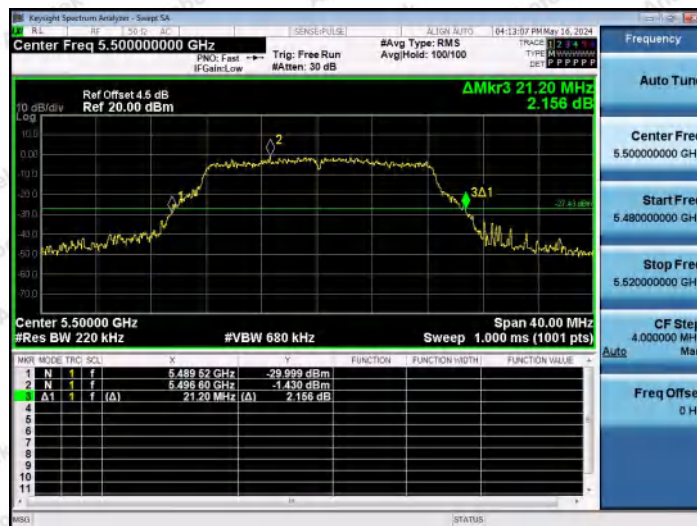

11A-Ant2-5500

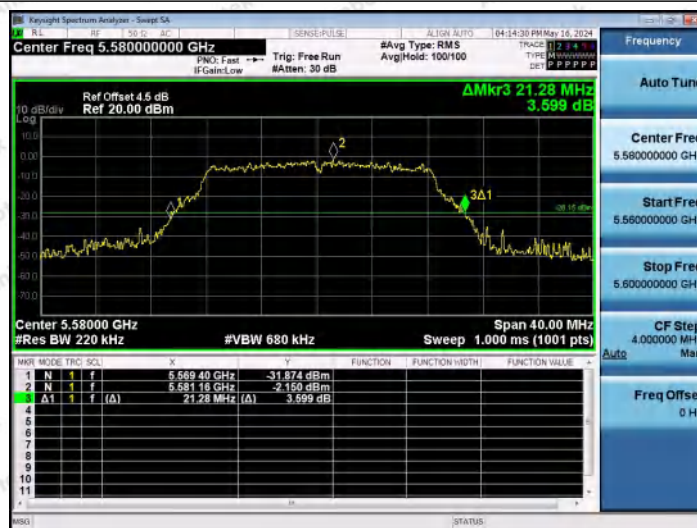


11A-Ant1-5580

Shenzhen Anbotek Compliance Laboratory Limited


Address: 1/F., Building D, Sogood Science and Technology Park, Sanwei Community, Hangcheng Street, Bao'an District, Shenzhen, Guangdong, China.
 Tel: (86) 0755-26066440 Fax: (86) 0755-26014772 Email: service@anbotek.com

Hotline 400-003-0500
 www.anbotek.com.cn




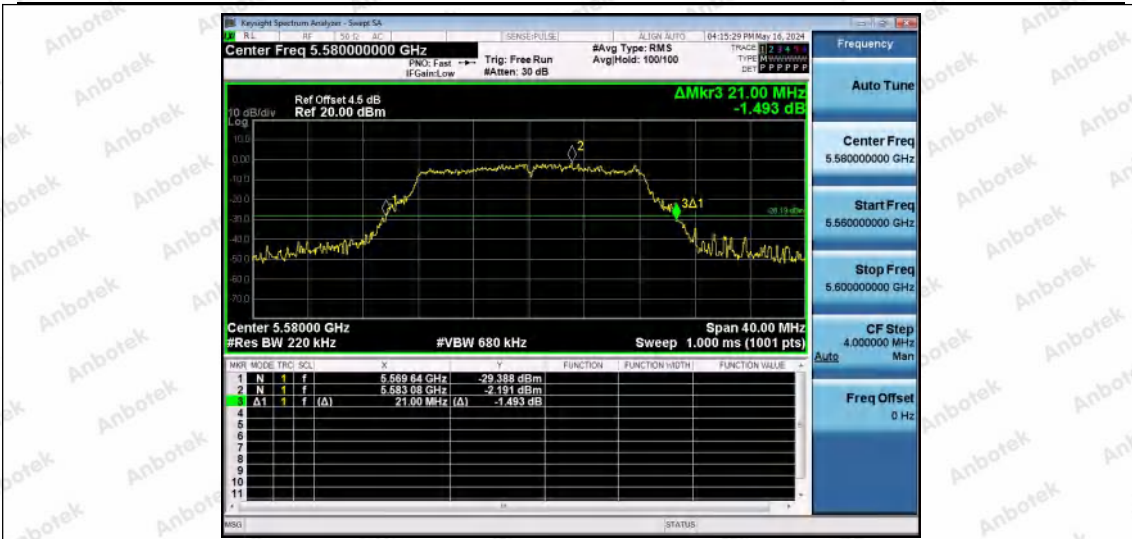

11A-Ant2-5580

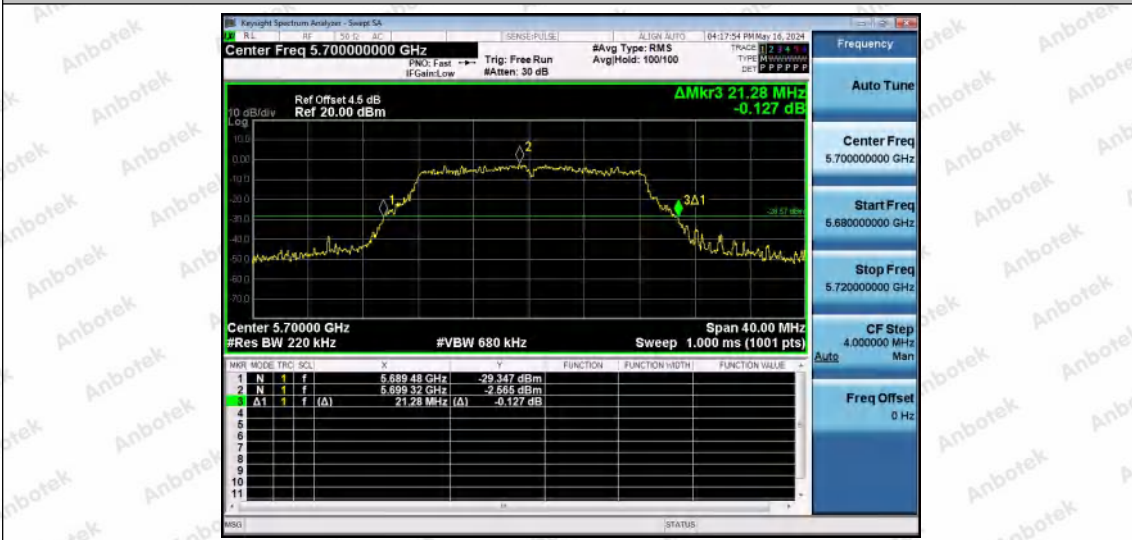

11A-Ant1-5700

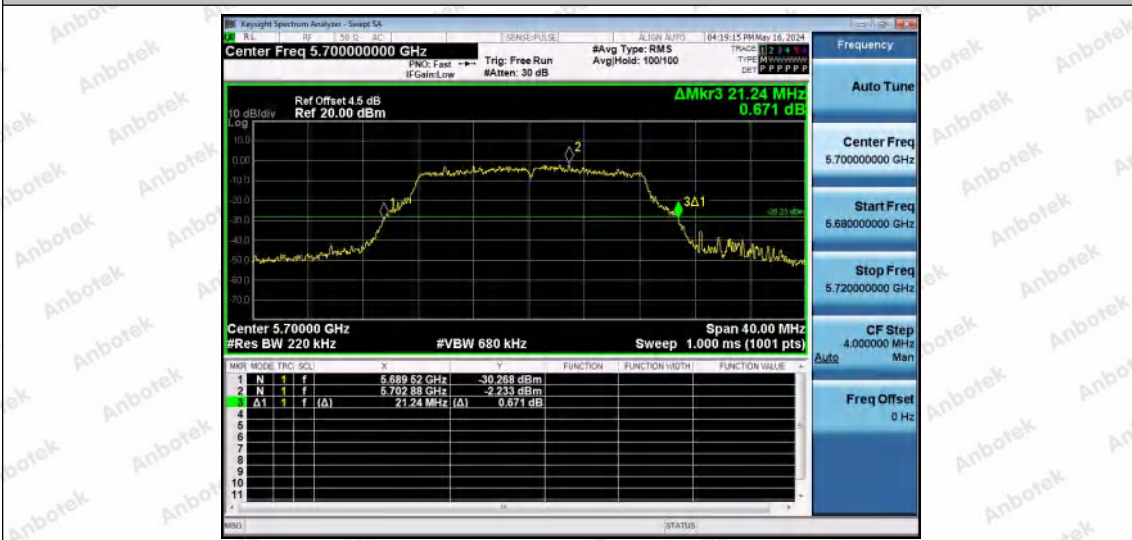


11A-Ant2-5700

Shenzhen Anbotek Compliance Laboratory Limited


Address: 1/F., Building D, Sogood Science and Technology Park, Sanwei Community, Hangcheng Street, Bao'an District, Shenzhen, Guangdong, China.
Tel: (86) 0755-26066440 Fax: (86) 0755-26014772 Email: service@anbotek.com

Hotline 400-003-0500
www.anbotek.com.cn



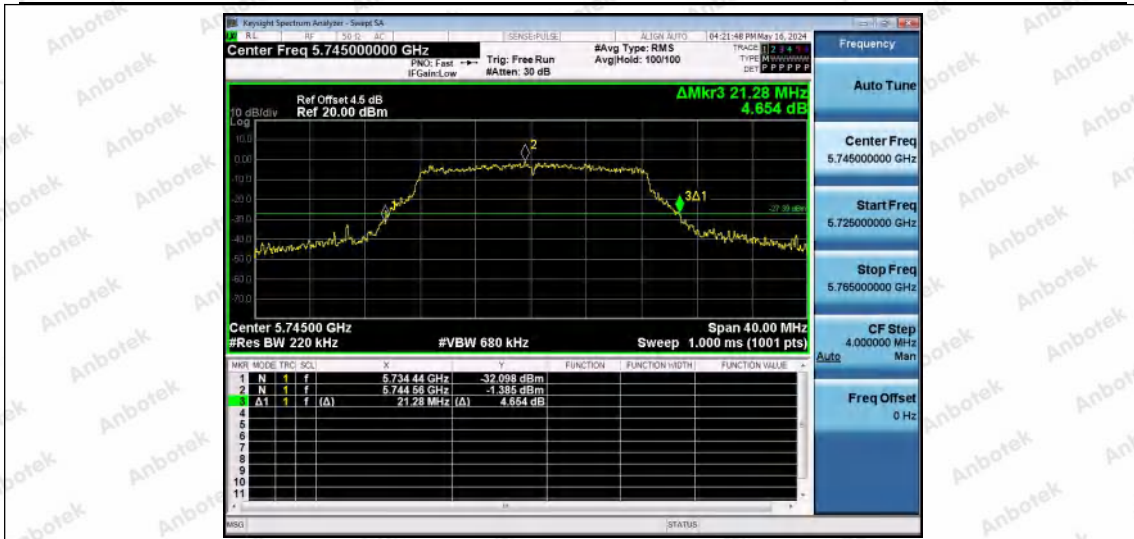

11A-Ant1-5745

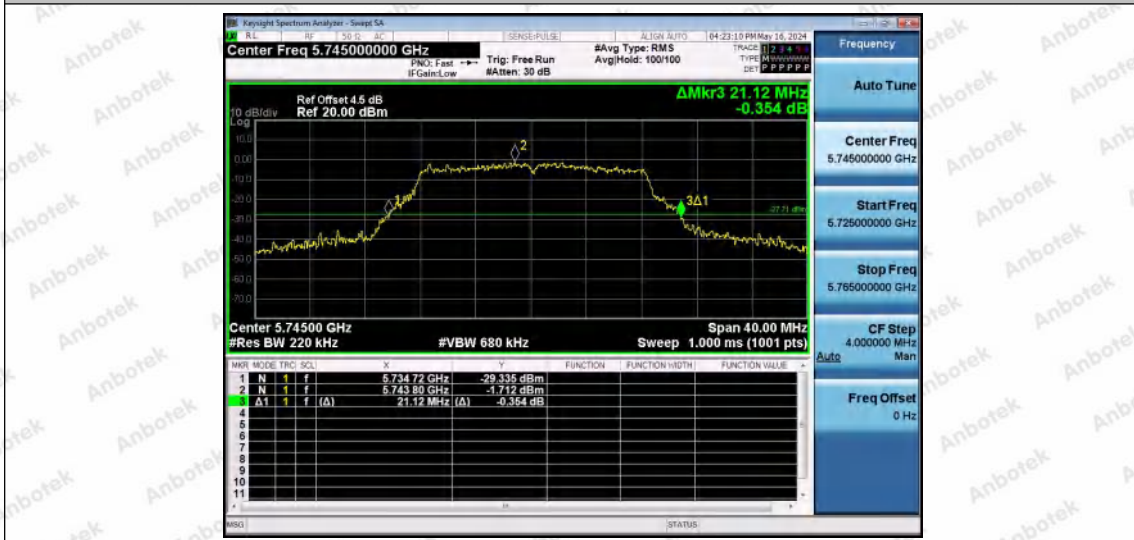

11A-Ant2-5745



11A-Ant1-5785

Shenzhen Anbotek Compliance Laboratory Limited

Address: 1/F., Building D, Sogood Science and Technology Park, Sanwei Community, Hangcheng Street, Bao'an District, Shenzhen, Guangdong, China.
 Tel: (86) 0755-26066440 Fax: (86) 0755-26014772 Email: service@anbotek.com

Hotline 400-003-0500
 www.anbotek.com.cn





11A-Ant2-5785



11A-Ant1-5825



11A-Ant2-5825

Shenzhen Anbotek Compliance Laboratory Limited


Address: 1/F., Building D, Sogood Science and Technology Park, Sanwei Community, Hangcheng Street, Bao'an District, Shenzhen, Guangdong, China.
Tel: (86) 0755-26066440 Fax: (86) 0755-26014772 Email: service@anbotek.com

Hotline 400-003-0500
www.anbotek.com.cn






11N20MIMO-Ant1-5180

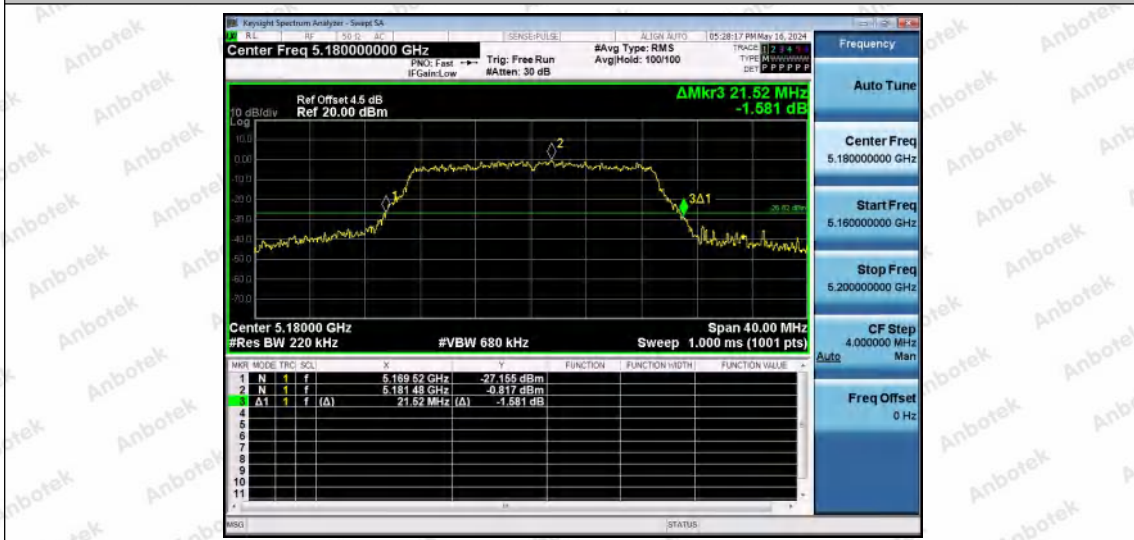

11N20MIMO-Ant2-5180

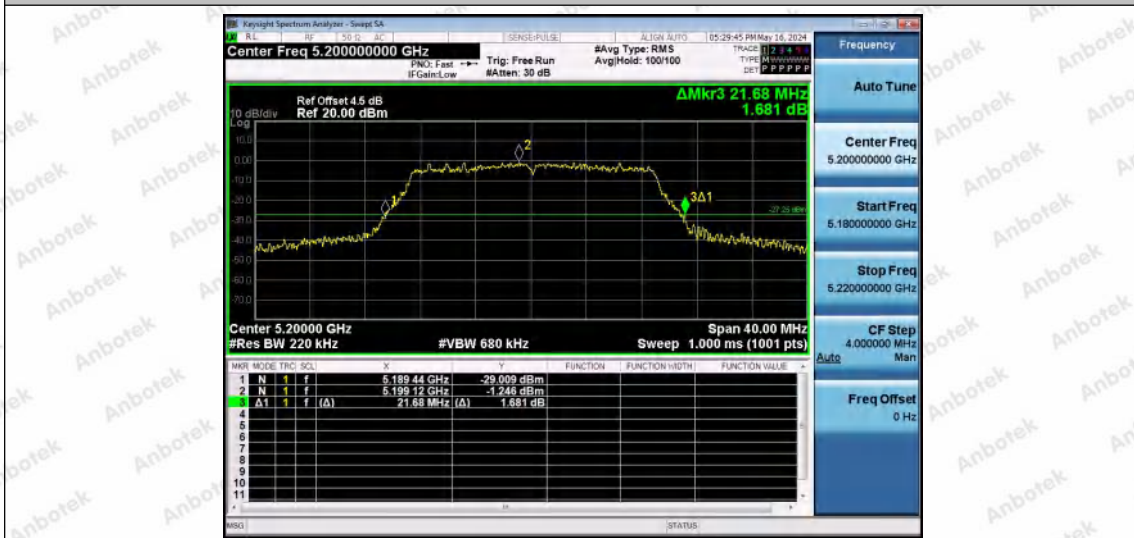

11N20MIMO-Ant1-5200

Shenzhen Anbotek Compliance Laboratory Limited


Address: 1/F., Building D, Sogood Science and Technology Park, Sanwei Community, Hangcheng Street, Bao'an District, Shenzhen, Guangdong, China.
Tel: (86) 0755-26066440 Fax: (86) 0755-26014772 Email: service@anbotek.com

Hotline 400-003-0500
www.anbotek.com.cn





11N20MIMO-Ant2-5200

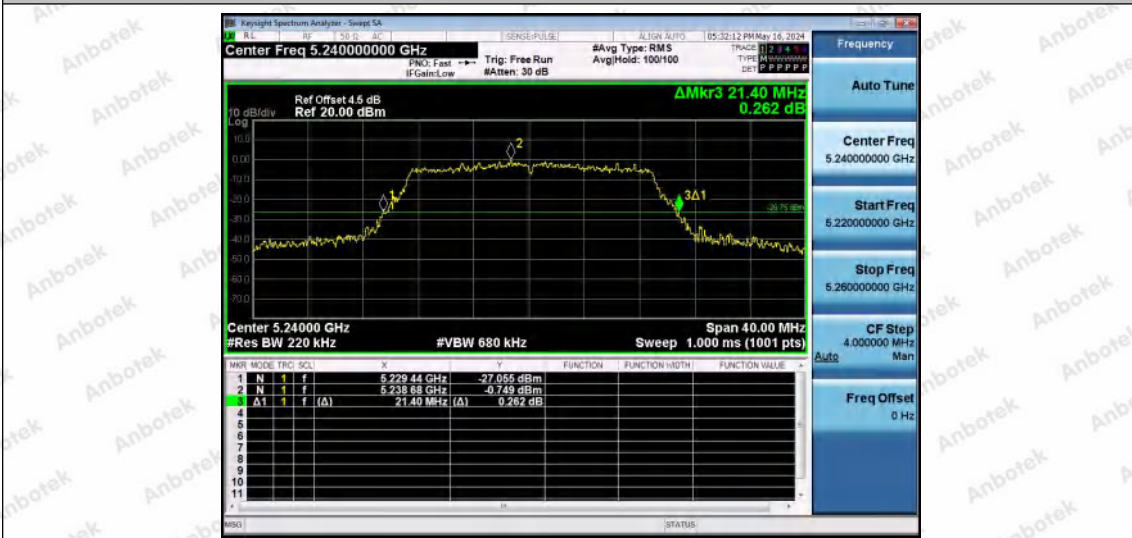

11N20MIMO-Ant1-5240



11N20MIMO-Ant2-5240

Shenzhen Anbotek Compliance Laboratory Limited


Address: 1/F., Building D, Sogood Science and Technology Park, Sanwei Community, Hangcheng Street, Bao'an District, Shenzhen, Guangdong, China.
 Tel: (86) 0755-26066440 Fax: (86) 0755-26014772 Email: service@anbotek.com

Hotline 400-003-0500
 www.anbotek.com.cn





11N20MIMO-Ant1-5260

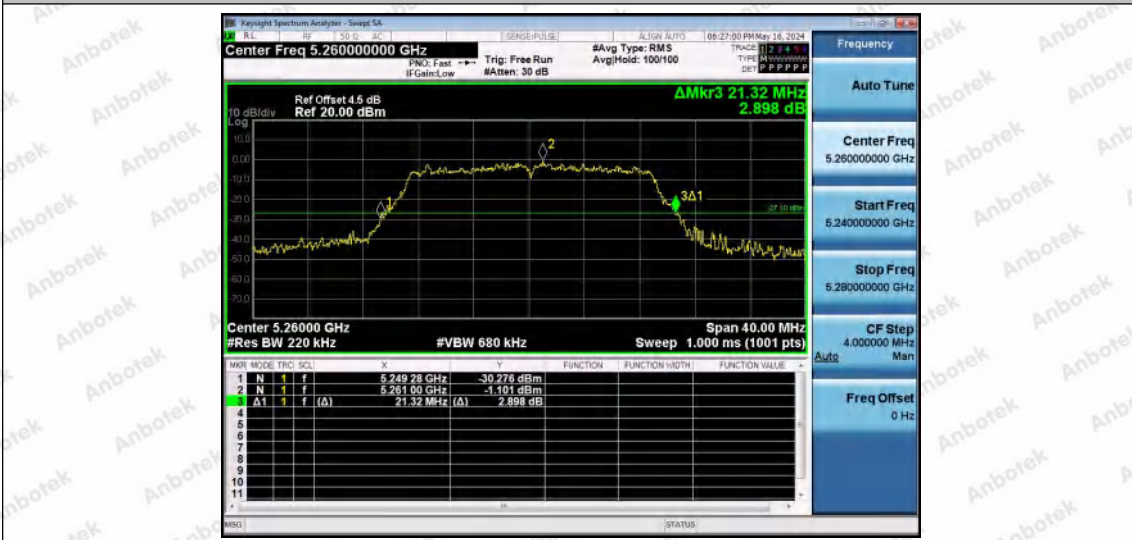

11N20MIMO-Ant2-5260




11N20MIMO-Ant1-5300

Shenzhen Anbotek Compliance Laboratory Limited


Address: 1/F., Building D, Sogood Science and Technology Park, Sanwei Community, Hangcheng Street, Bao'an District, Shenzhen, Guangdong, China.
Tel: (86) 0755-26066440 Fax: (86) 0755-26014772 Email: service@anbotek.com

Hotline 400-003-0500
www.anbotek.com.cn



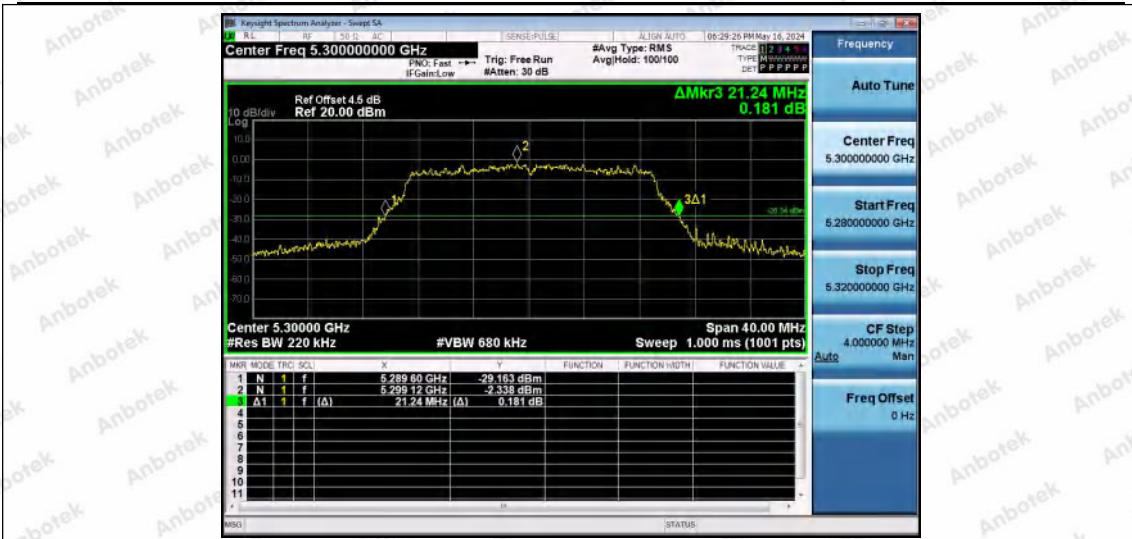

11N20MIMO-Ant2-5300

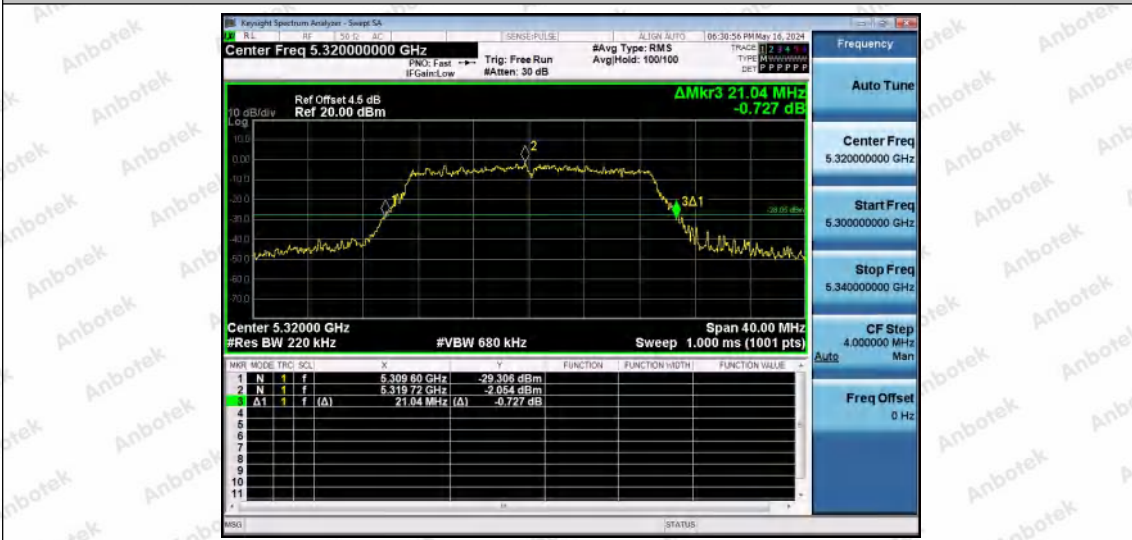

11N20MIMO-Ant1-5320




11N20MIMO-Ant2-5320

Shenzhen Anbotek Compliance Laboratory Limited


Address: 1/F., Building D, Sogood Science and Technology Park, Sanwei Community, Hangcheng Street, Bao'an District, Shenzhen, Guangdong, China.
Tel: (86) 0755-26066440 Fax: (86) 0755-26014772 Email: service@anbotek.com

Hotline
400-003-0500
www.anbotek.com.cn




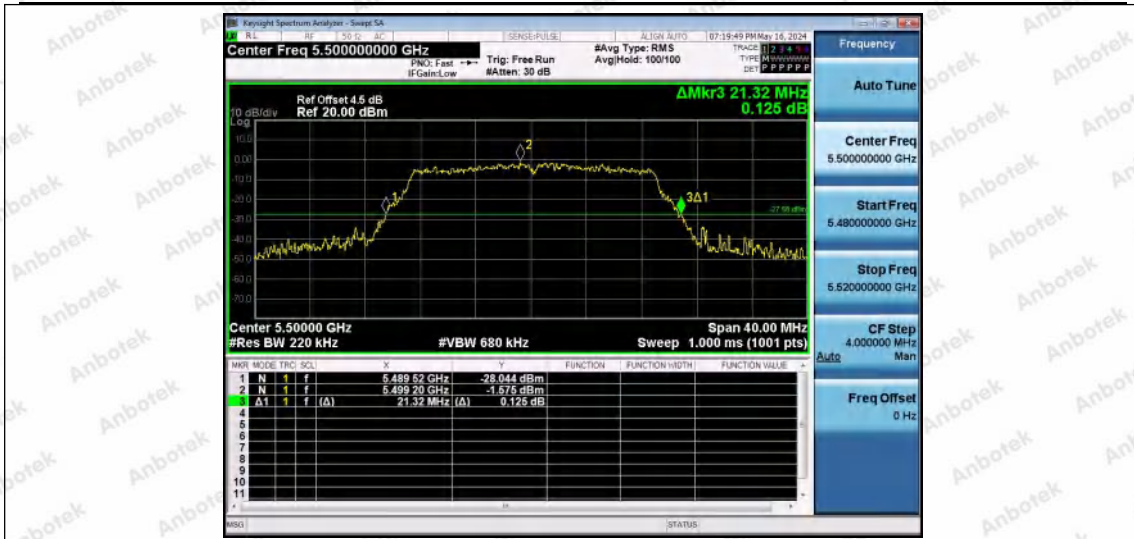

11N20MIMO-Ant1-5500

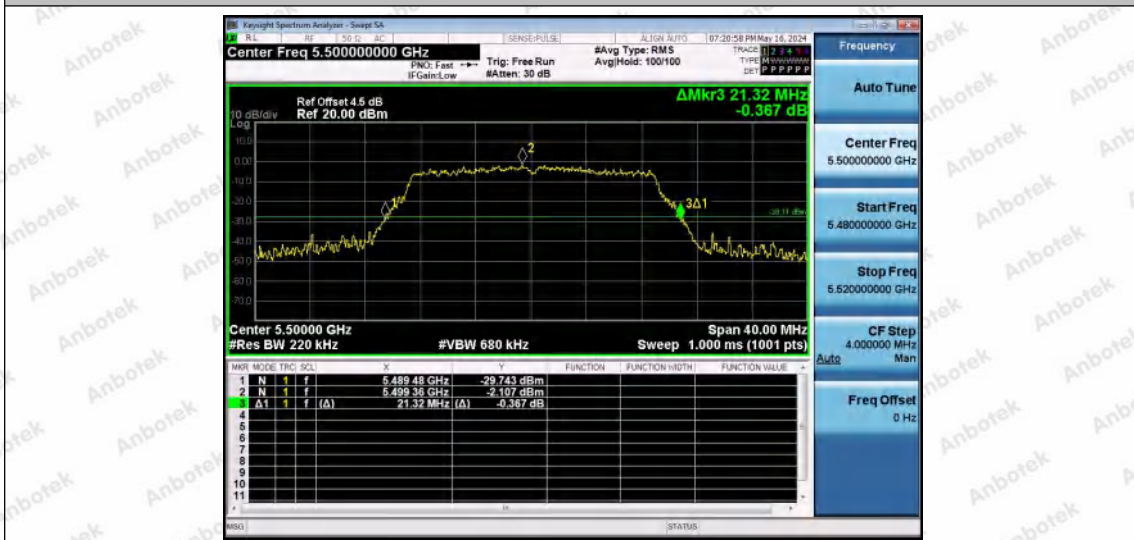

11N20MIMO-Ant2-5500

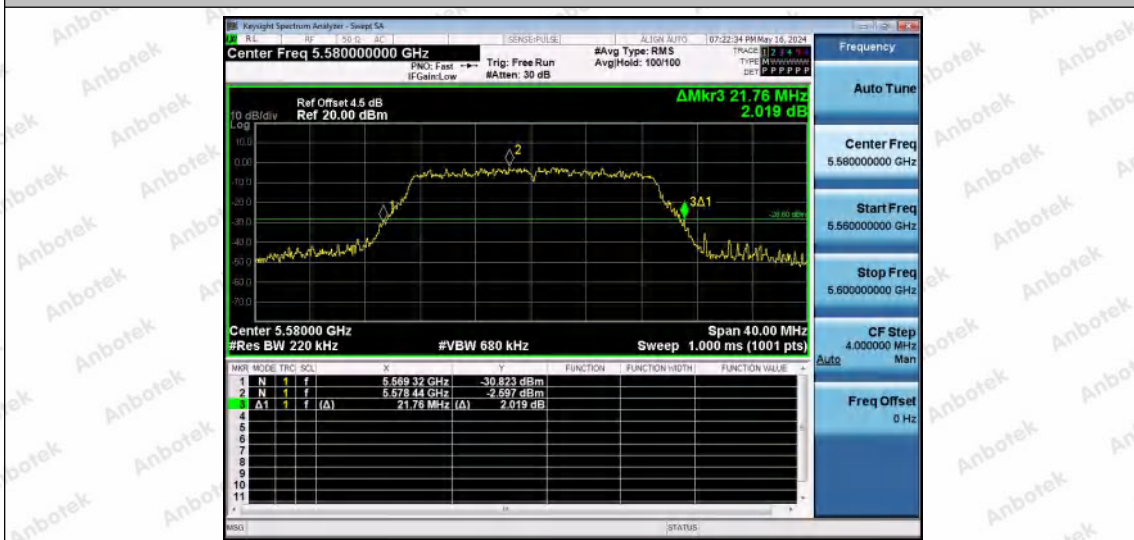


11N20MIMO-Ant1-5580

Shenzhen Anbotek Compliance Laboratory Limited


Address: 1/F., Building D, Sogood Science and Technology Park, Sanwei Community, Hangcheng Street, Bao'an District, Shenzhen, Guangdong, China.
 Tel: (86) 0755-26066440 Fax: (86) 0755-26014772 Email: service@anbotek.com

Hotline 400-003-0500
 www.anbotek.com.cn




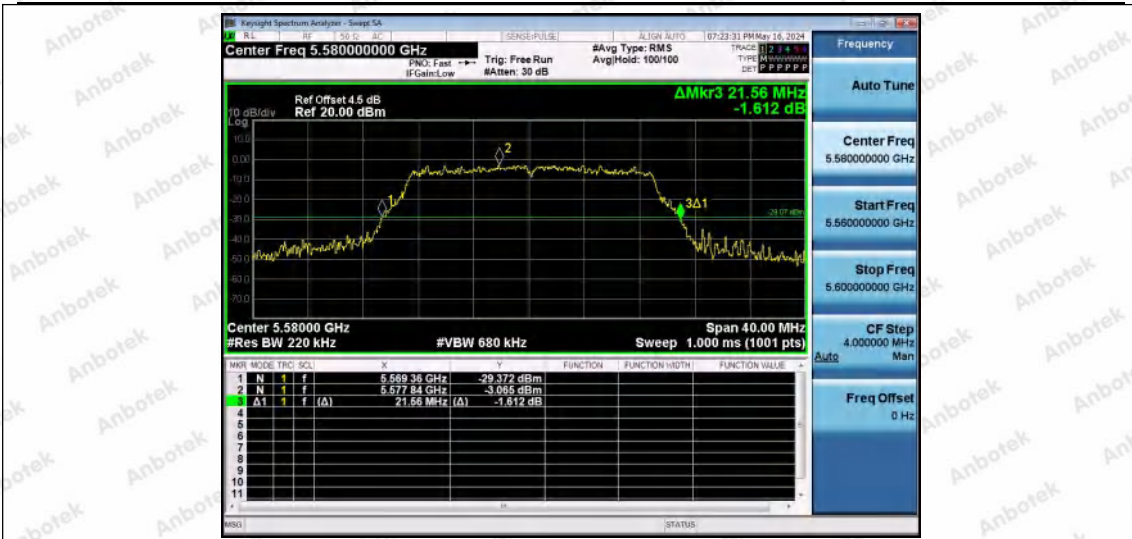

11N20MIMO-Ant2-5580

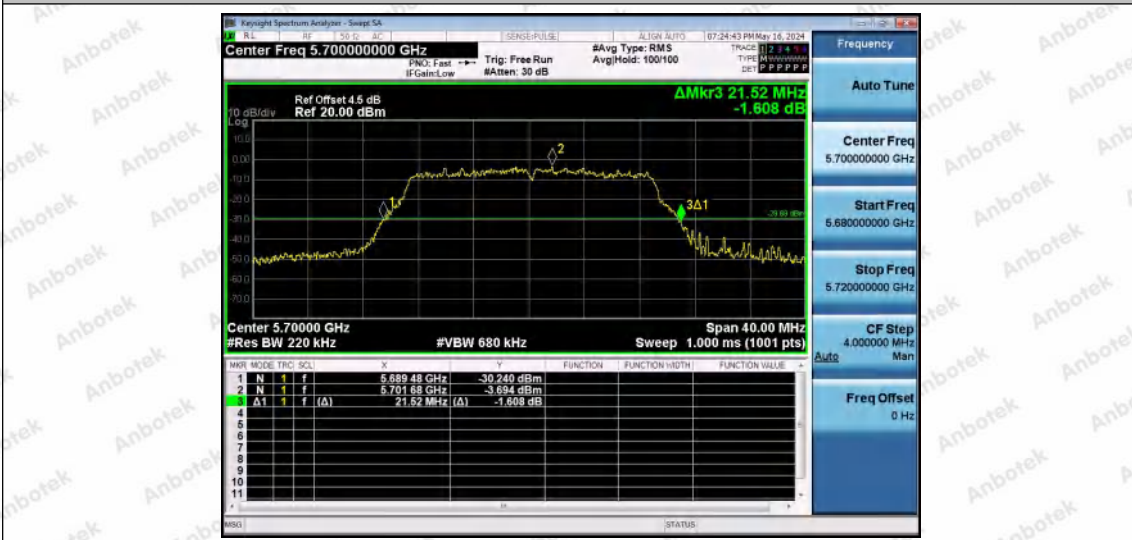

11N20MIMO-Ant1-5700

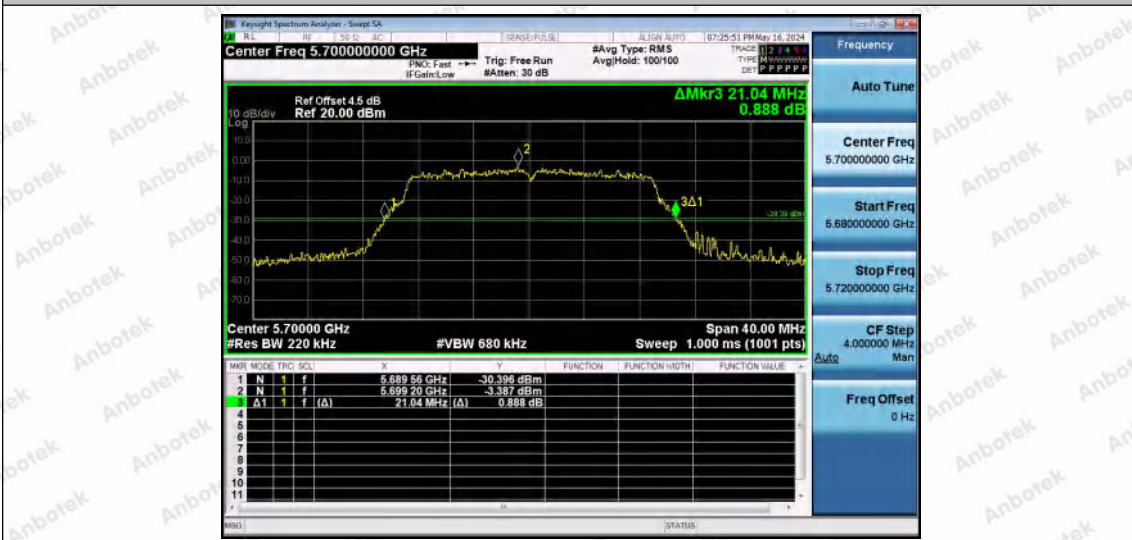

11N20MIMO-Ant2-5700

Shenzhen Anbotek Compliance Laboratory Limited

Address: 1/F., Building D, Sogood Science and Technology Park, Sanwei Community, Hangcheng Street, Bao'an District, Shenzhen, Guangdong, China.
 Tel: (86) 0755-26066440 Fax: (86) 0755-26014772 Email: service@anbotek.com

Hotline 400-003-0500
 www.anbotek.com.cn





11N20MIMO-Ant1-5745



11N20MIMO-Ant2-5745




11N20MIMO-Ant1-5785

Shenzhen Anbotek Compliance Laboratory Limited

Address: 1/F., Building D, Sogood Science and Technology Park, Sanwei Community, Hangcheng Street, Bao'an District, Shenzhen, Guangdong, China.
 Tel: (86) 0755-26066440 Fax: (86) 0755-26014772 Email: service@anbotek.com

Hotline 400-003-0500
 www.anbotek.com.cn



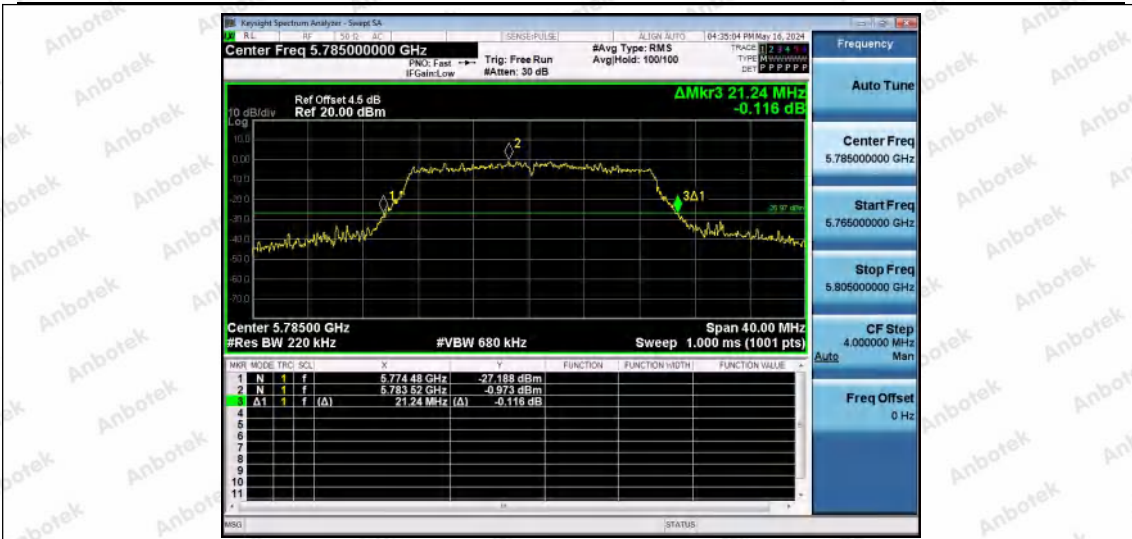

11N20MIMO-Ant2-5785



11N20MIMO-Ant1-5825




11N20MIMO-Ant2-5825

Shenzhen Anbotek Compliance Laboratory Limited

Address: 1/F., Building D, Sogood Science and Technology Park, Sanwei Community, Hangcheng Street, Bao'an District, Shenzhen, Guangdong, China.
Tel: (86) 0755-26066440 Fax: (86) 0755-26014772 Email: service@anbotek.com

Hotline 400-003-0500
www.anbotek.com.cn



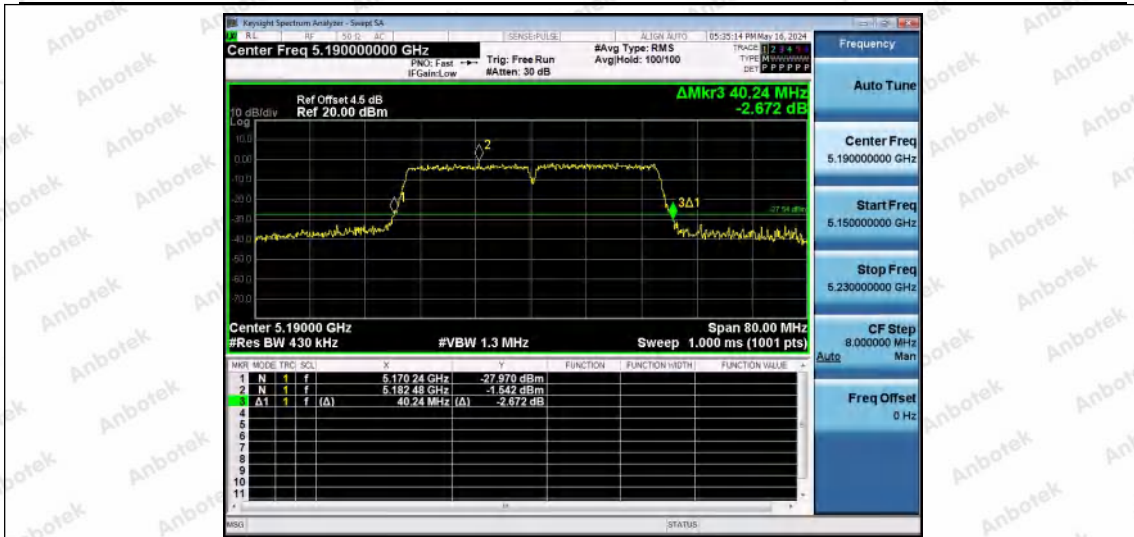

11N40MIMO-Ant1-5190



11N40MIMO-Ant2-5190



11N40MIMO-Ant1-5230

Shenzhen Anbotek Compliance Laboratory Limited

Address: 1/F., Building D, Sogood Science and Technology Park, Sanwei Community, Hangcheng Street, Bao'an District, Shenzhen, Guangdong, China.
Tel: (86) 0755-26066440 Fax: (86) 0755-26014772 Email: service@anbotek.com

Hotline 400-003-0500
www.anbotek.com.cn





11N40MIMO-Ant2-5230



11N40MIMO-Ant1-5270




11N40MIMO-Ant2-5270

Shenzhen Anbotek Compliance Laboratory Limited


Address: 1/F., Building D, Sogood Science and Technology Park, Sanwei Community, Hangcheng Street, Bao'an District, Shenzhen, Guangdong, China.
Tel: (86) 0755-26066440 Fax: (86) 0755-26014772 Email: service@anbotek.com

Hotline 400-003-0500
www.anbotek.com.cn




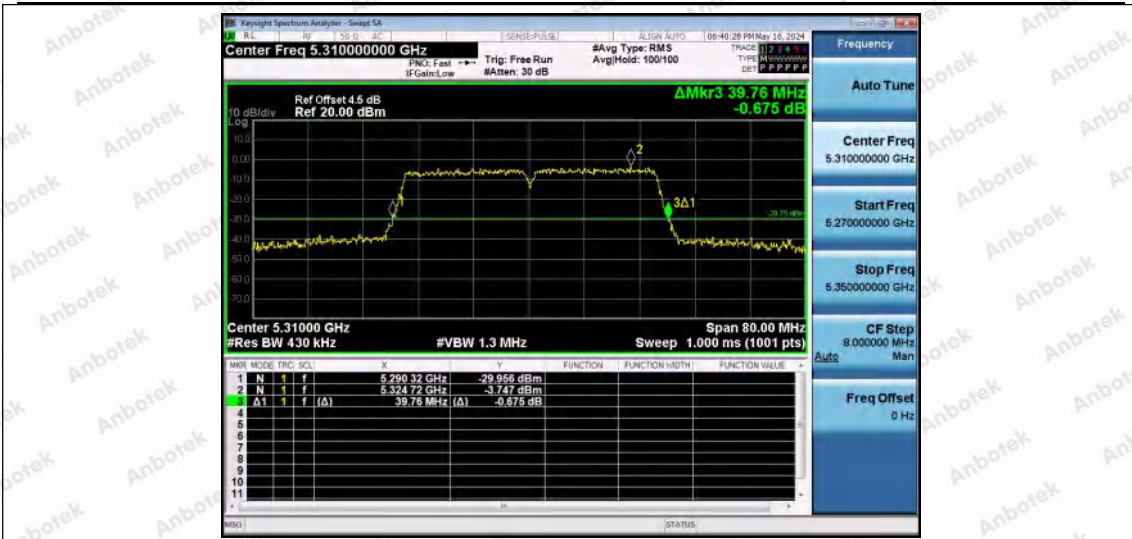

11N40MIMO-Ant1-5310

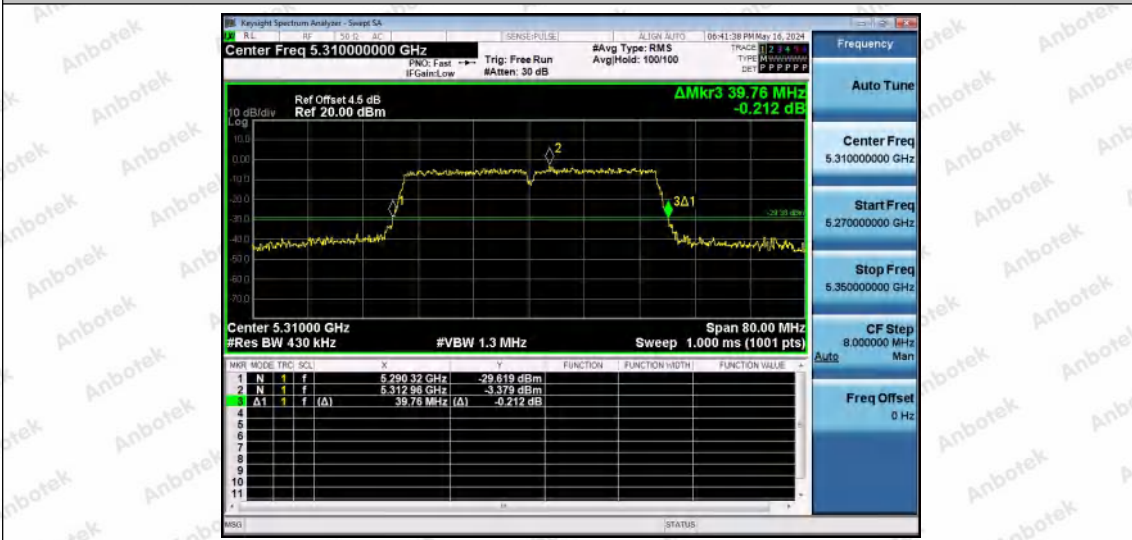

11N40MIMO-Ant2-5310

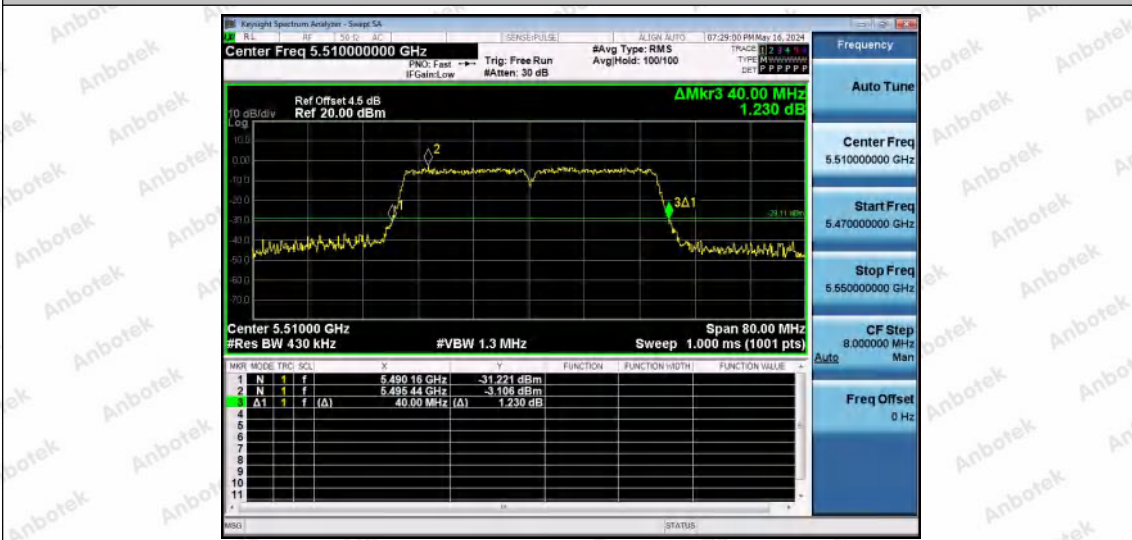


11N40MIMO-Ant1-5510

Shenzhen Anbotek Compliance Laboratory Limited


Address: 1/F., Building D, Sogood Science and Technology Park, Sanwei Community, Hangcheng Street, Bao'an District, Shenzhen, Guangdong, China.
 Tel: (86) 0755-26066440 Fax: (86) 0755-26014772 Email: service@anbotek.com

Hotline 400-003-0500
 www.anbotek.com.cn




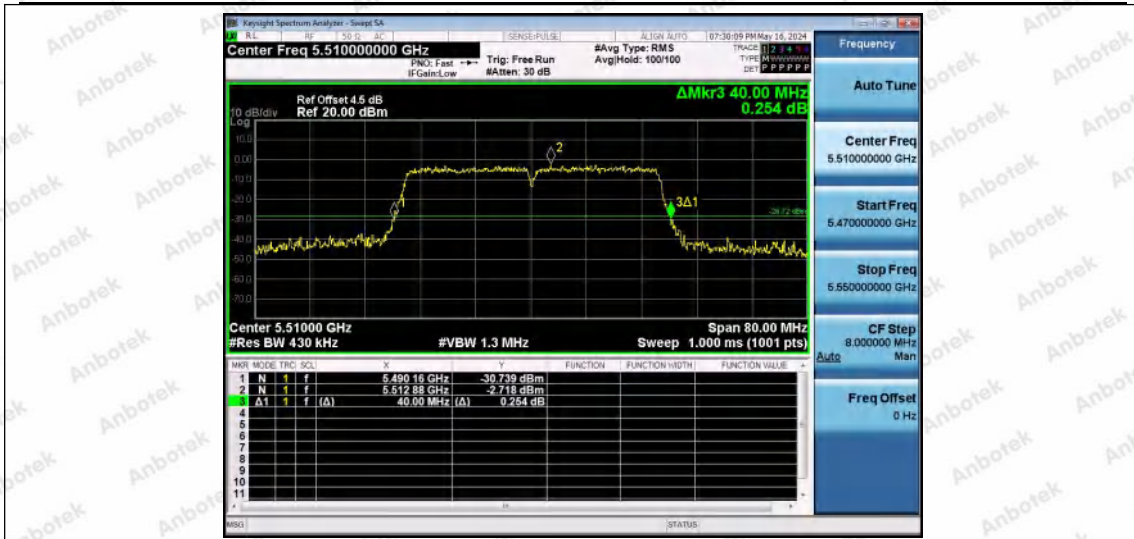

11N40MIMO-Ant2-5510

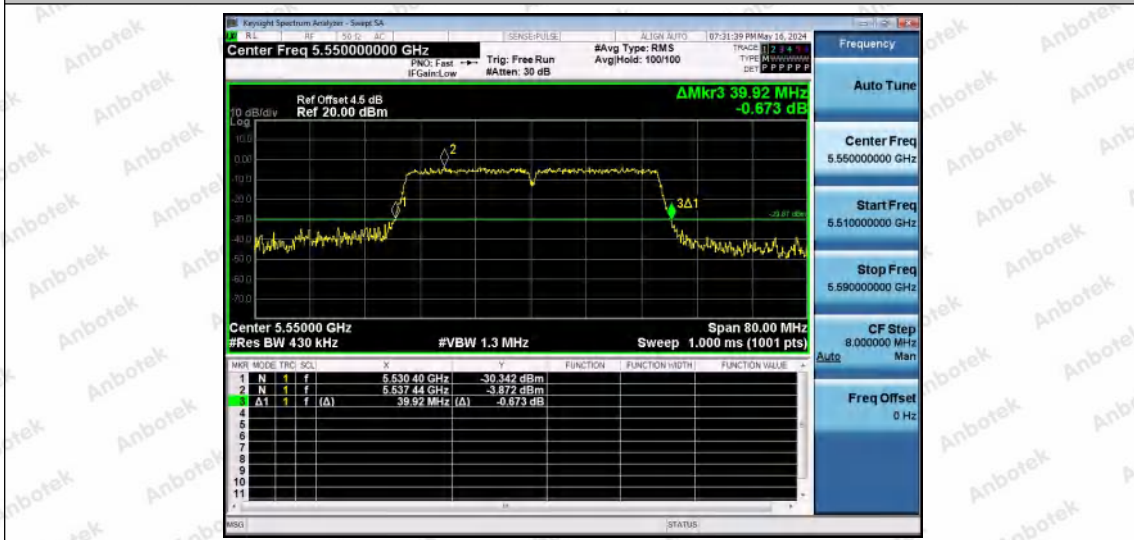

11N40MIMO-Ant1-5550

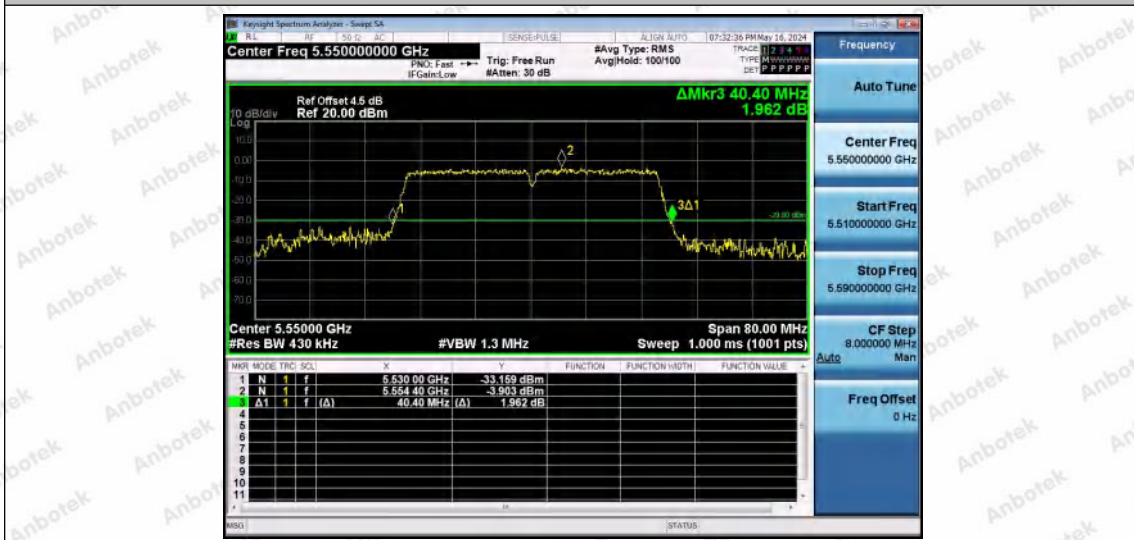


11N40MIMO-Ant2-5550

Shenzhen Anbotek Compliance Laboratory Limited

Address: 1/F., Building D, Sogood Science and Technology Park, Sanwei Community, Hangcheng Street, Bao'an District, Shenzhen, Guangdong, China.
 Tel: (86) 0755-26066440 Fax: (86) 0755-26014772 Email: service@anbotek.com

Hotline 400-003-0500
 www.anbotek.com.cn




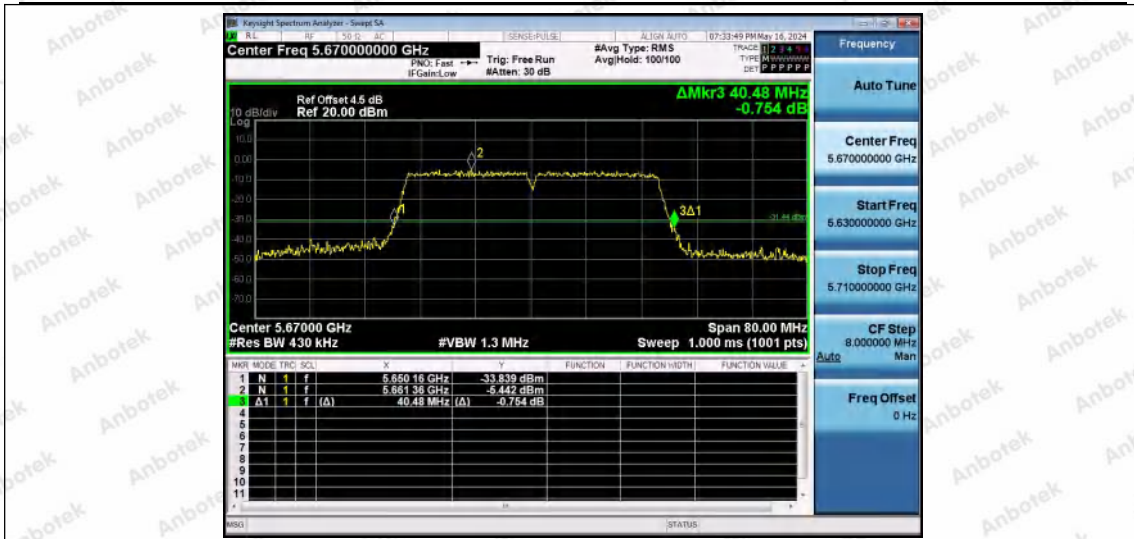

11N40MIMO-Ant1-5670



11N40MIMO-Ant2-5670

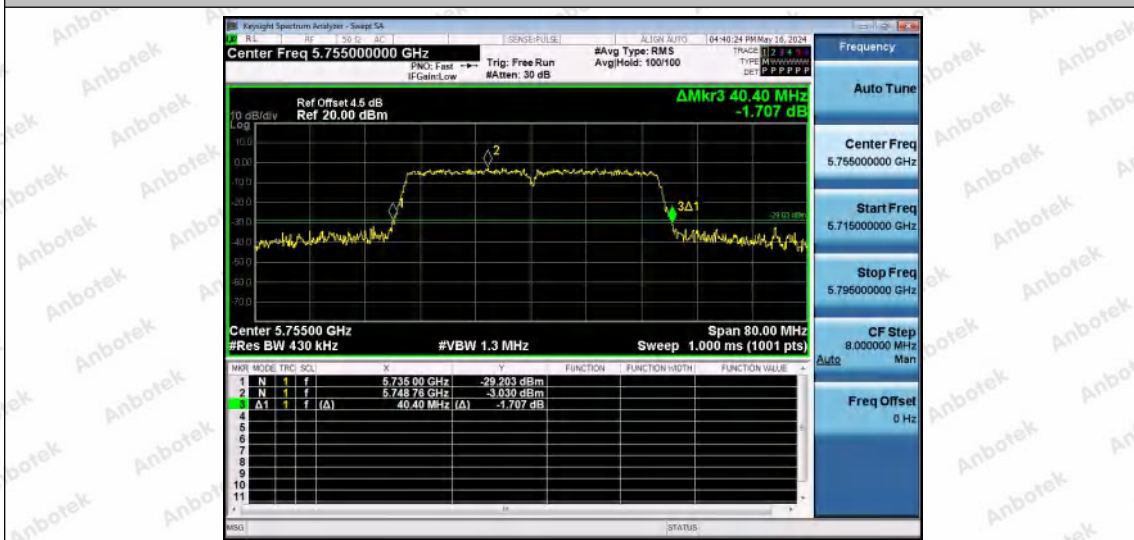

11N40MIMO-Ant1-5755

Shenzhen Anbotek Compliance Laboratory Limited


Address: 1/F., Building D, Sogood Science and Technology Park, Sanwei Community, Hangcheng Street, Bao'an District, Shenzhen, Guangdong, China.
 Tel: (86) 0755-26066440 Fax: (86) 0755-26014772 Email: service@anbotek.com

Hotline 400-003-0500
 www.anbotek.com.cn





11N40MIMO-Ant2-5755

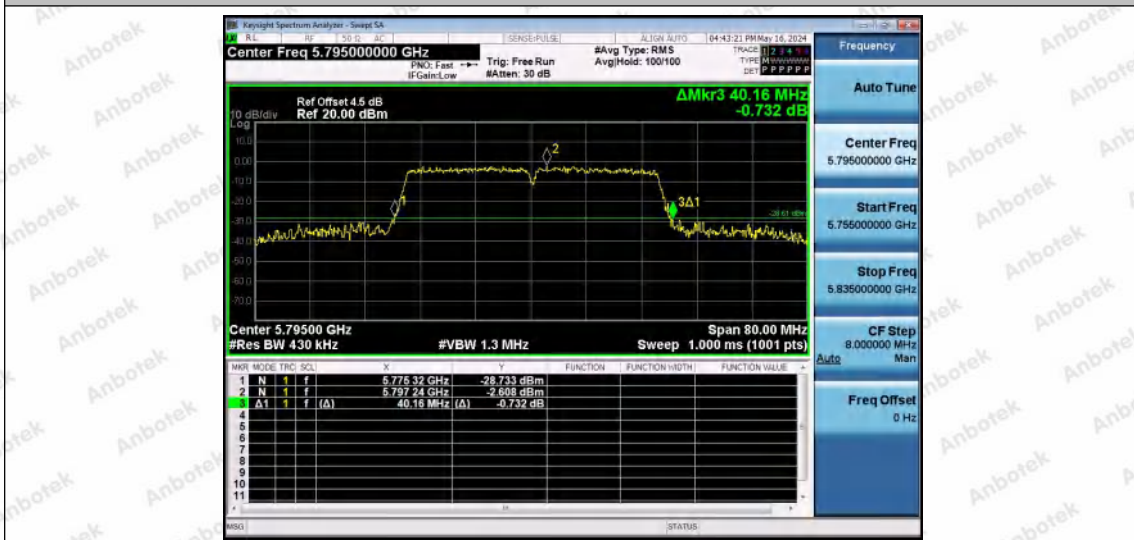

11N40MIMO-Ant1-5795



11N40MIMO-Ant2-5795

Shenzhen Anbotek Compliance Laboratory Limited

Address: 1/F., Building D, Sogood Science and Technology Park, Sanwei Community, Hangcheng Street, Bao'an District, Shenzhen, Guangdong, China.
Tel: (86) 0755-26066440 Fax: (86) 0755-26014772 Email: service@anbotek.com

Hotline 400-003-0500
www.anbotek.com.cn





11AC20MIMO-Ant1-5180



11AC20MIMO-Ant2-5180



11AC20MIMO-Ant1-5200

Shenzhen Anbotek Compliance Laboratory Limited


Address: 1/F., Building D, Sogood Science and Technology Park, Sanwei Community, Hangcheng Street, Bao'an District, Shenzhen, Guangdong, China.
Tel: (86) 0755-26066440 Fax: (86) 0755-26014772 Email: service@anbotek.com

Hotline 400-003-0500
www.anbotek.com.cn






11AC20MIMO-Ant2-5200

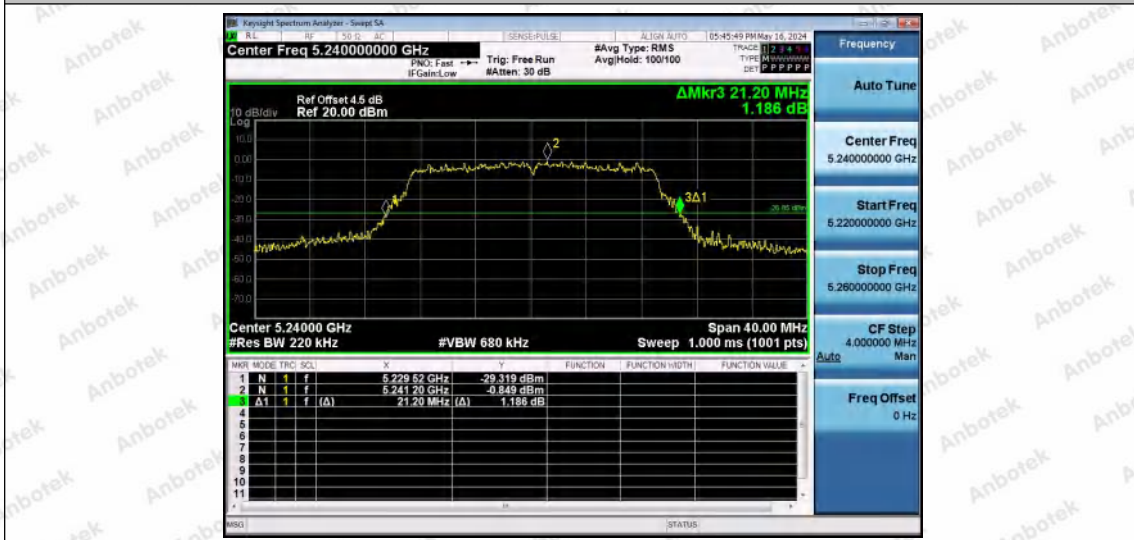

11AC20MIMO-Ant1-5240

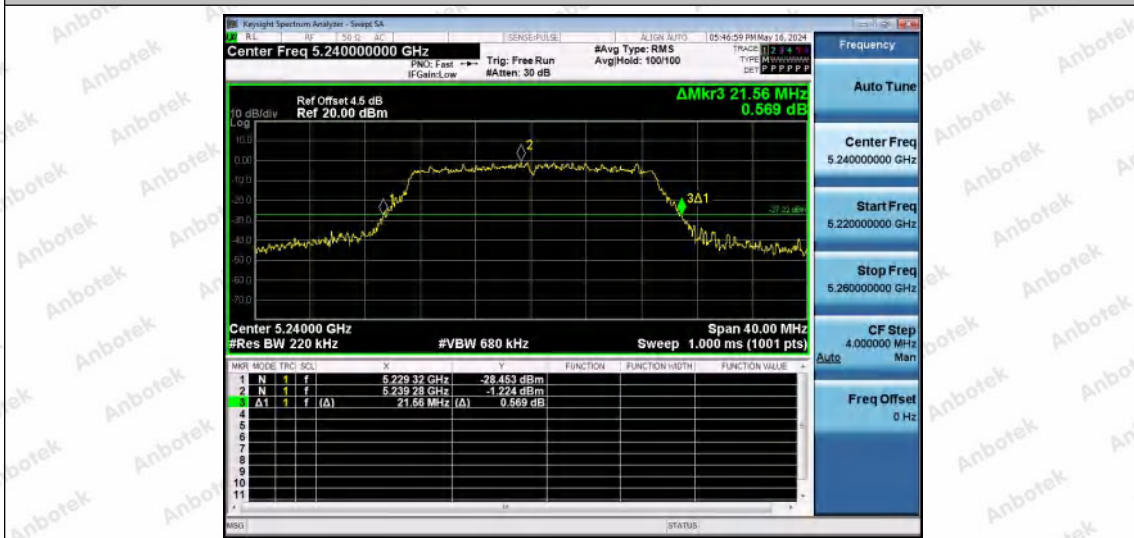


11AC20MIMO-Ant2-5240

Shenzhen Anbotek Compliance Laboratory Limited

Address: 1/F., Building D, Sogood Science and Technology Park, Sanwei Community, Hangcheng Street, Bao'an District, Shenzhen, Guangdong, China.
Tel: (86) 0755-26066440 Fax: (86) 0755-26014772 Email: service@anbotek.com

Hotline 400-003-0500
www.anbotek.com.cn




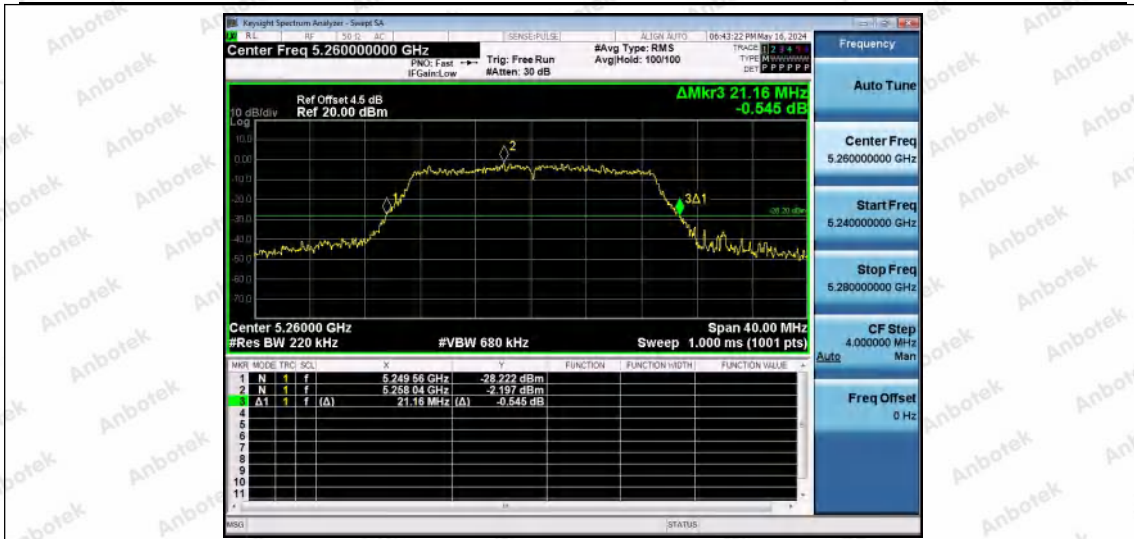

11AC20MIMO-Ant1-5260



11AC20MIMO-Ant2-5260

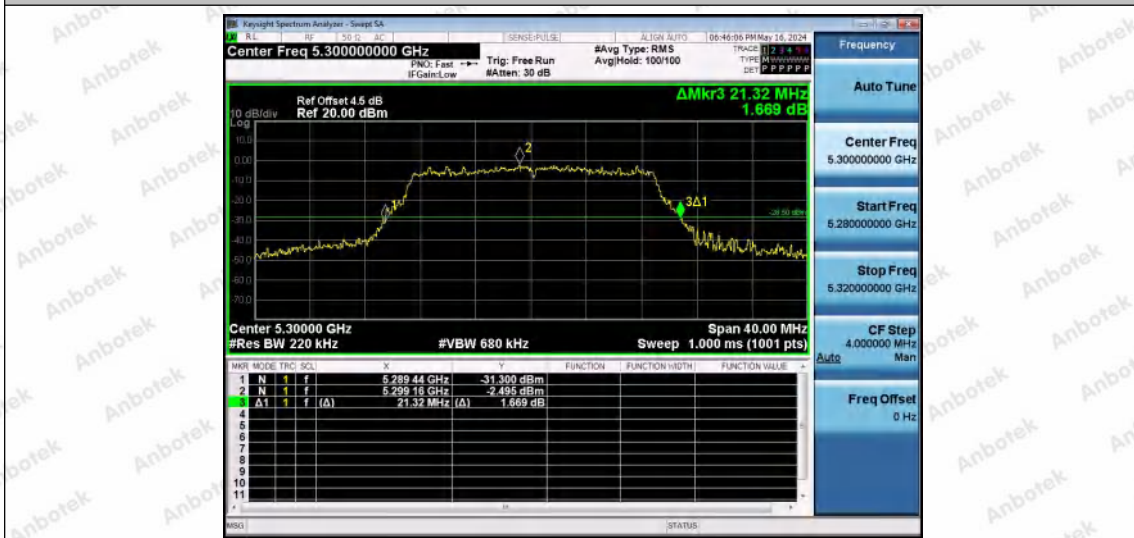


11AC20MIMO-Ant1-5300

Shenzhen Anbotek Compliance Laboratory Limited


Address: 1/F., Building D, Sogood Science and Technology Park, Sanwei Community, Hangcheng Street, Bao'an District, Shenzhen, Guangdong, China.
Tel: (86) 0755-26066440 Fax: (86) 0755-26014772 Email: service@anbotek.com

Hotline 400-003-0500
www.anbotek.com.cn




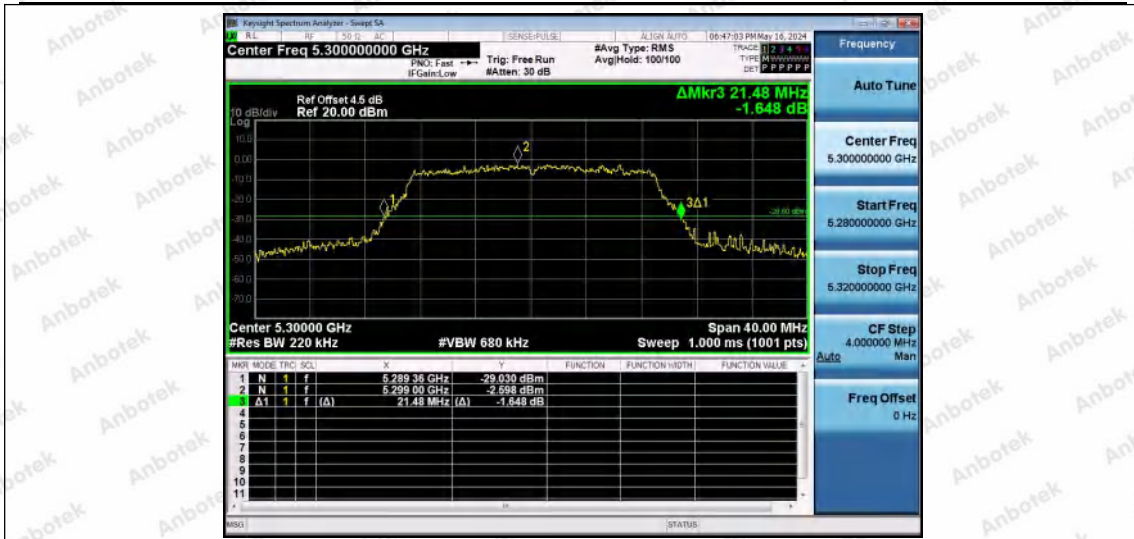

11AC20MIMO-Ant2-5300

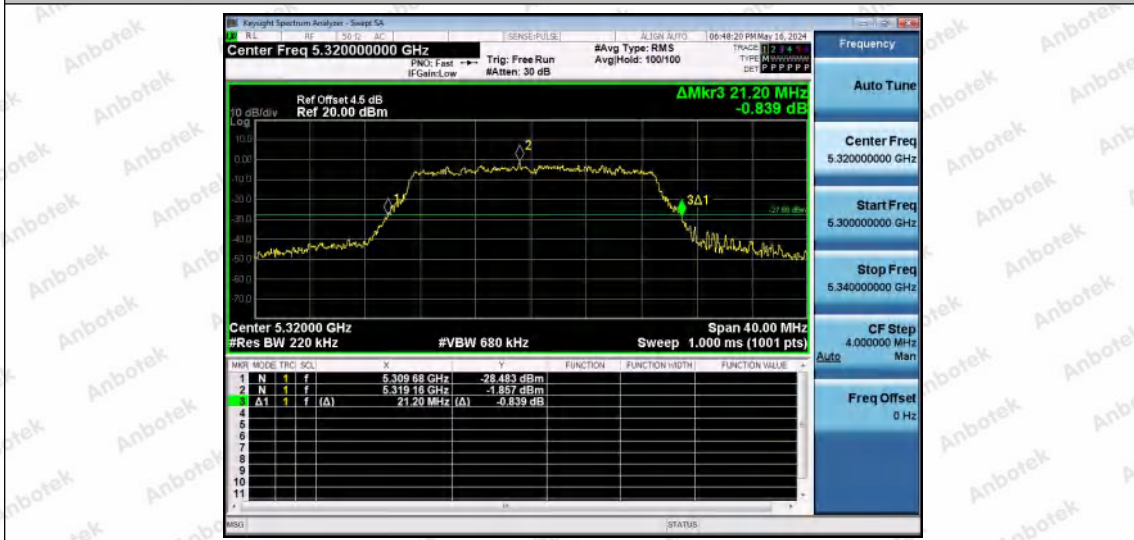

11AC20MIMO-Ant1-5320

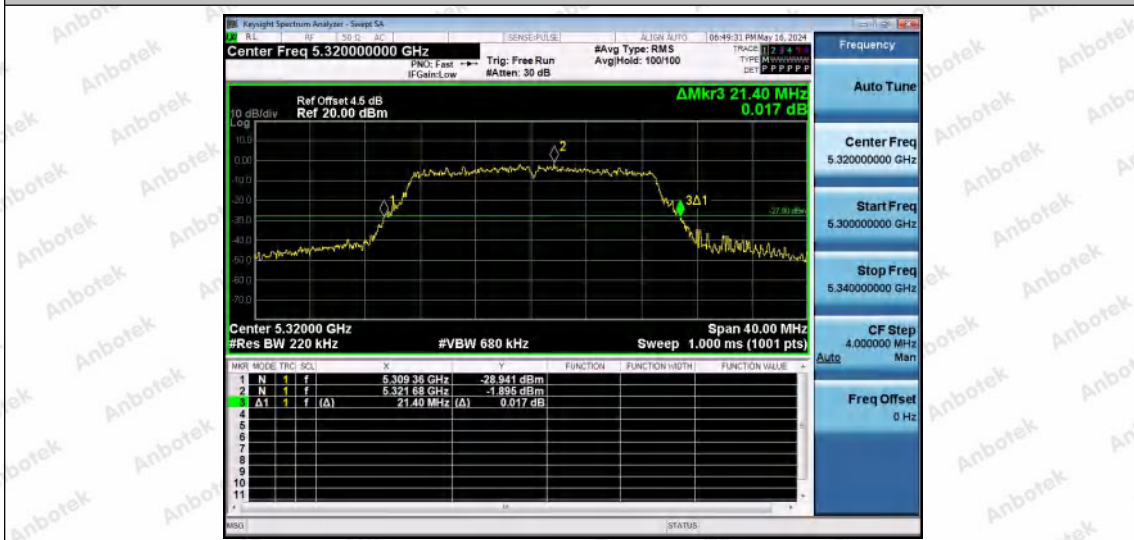


11AC20MIMO-Ant2-5320

Shenzhen Anbotek Compliance Laboratory Limited

Address: 1/F., Building D, Sogood Science and Technology Park, Sanwei Community, Hangcheng Street, Bao'an District, Shenzhen, Guangdong, China.
Tel: (86) 0755-26066440 Fax: (86) 0755-26014772 Email: service@anbotek.com

Hotline 400-003-0500
www.anbotek.com.cn



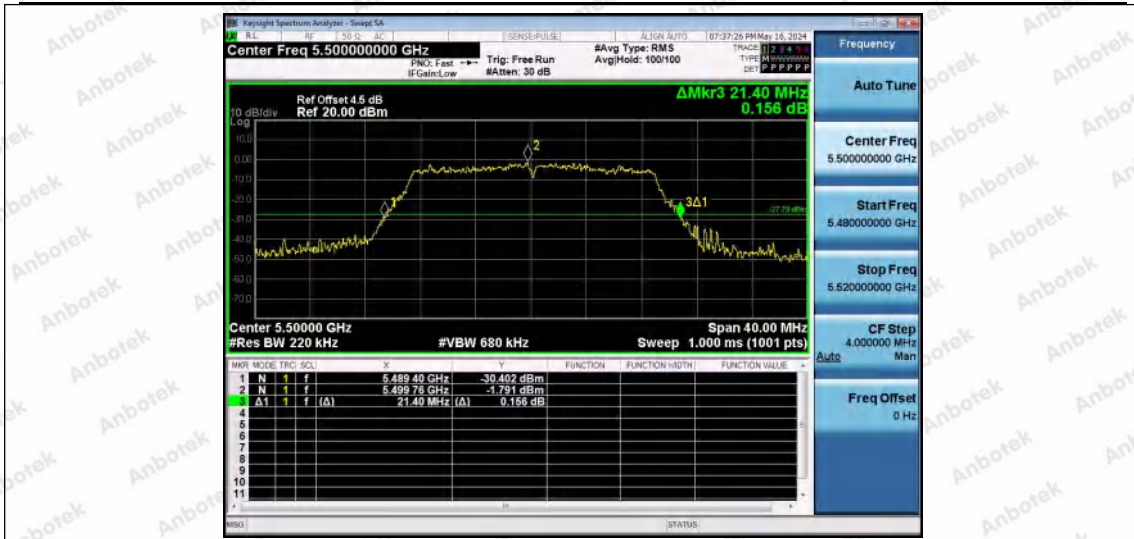

11AC20MIMO-Ant1-5500



11AC20MIMO-Ant2-5500



11AC20MIMO-Ant1-5580

Shenzhen Anbotek Compliance Laboratory Limited


Address: 1/F., Building D, Sogood Science and Technology Park, Sanwei Community, Hangcheng Street, Bao'an District, Shenzhen, Guangdong, China.
Tel: (86) 0755-26066440 Fax: (86) 0755-26014772 Email: service@anbotek.com

Hotline 400-003-0500
www.anbotek.com.cn






11AC20MIMO-Ant2-5580

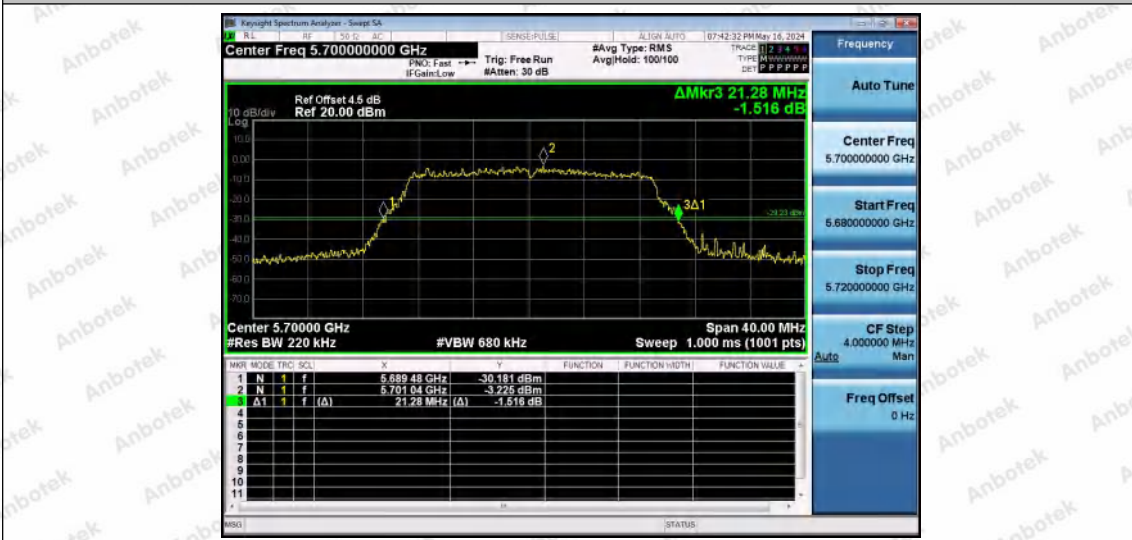

11AC20MIMO-Ant1-5700

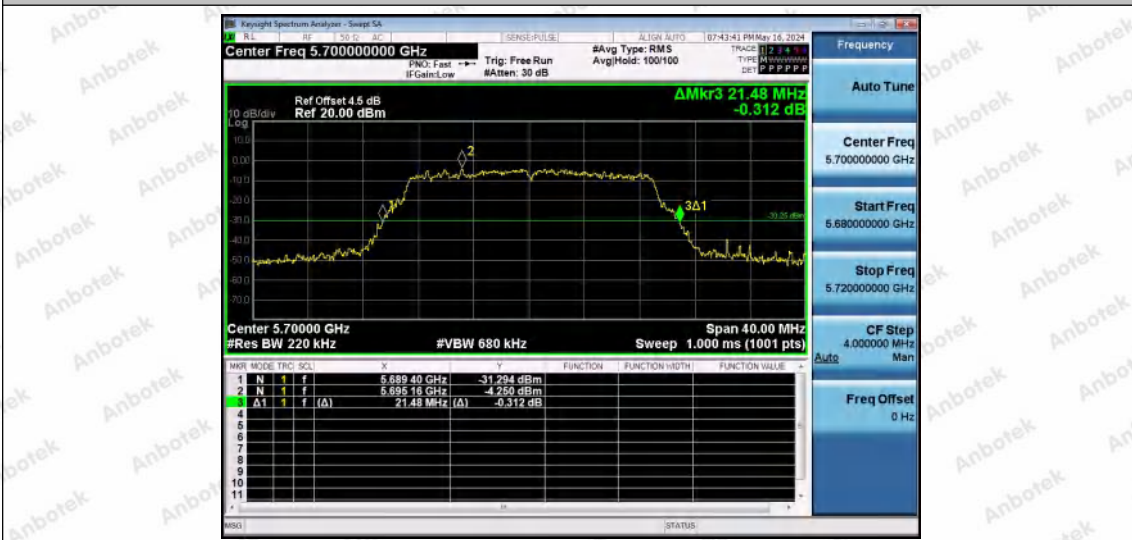


11AC20MIMO-Ant2-5700

Shenzhen Anbotek Compliance Laboratory Limited


Address: 1/F., Building D, Sogood Science and Technology Park, Sanwei Community, Hangcheng Street, Bao'an District, Shenzhen, Guangdong, China.
Tel: (86) 0755-26066440 Fax: (86) 0755-26014772 Email: service@anbotek.com

Hotline 400-003-0500
www.anbotek.com.cn



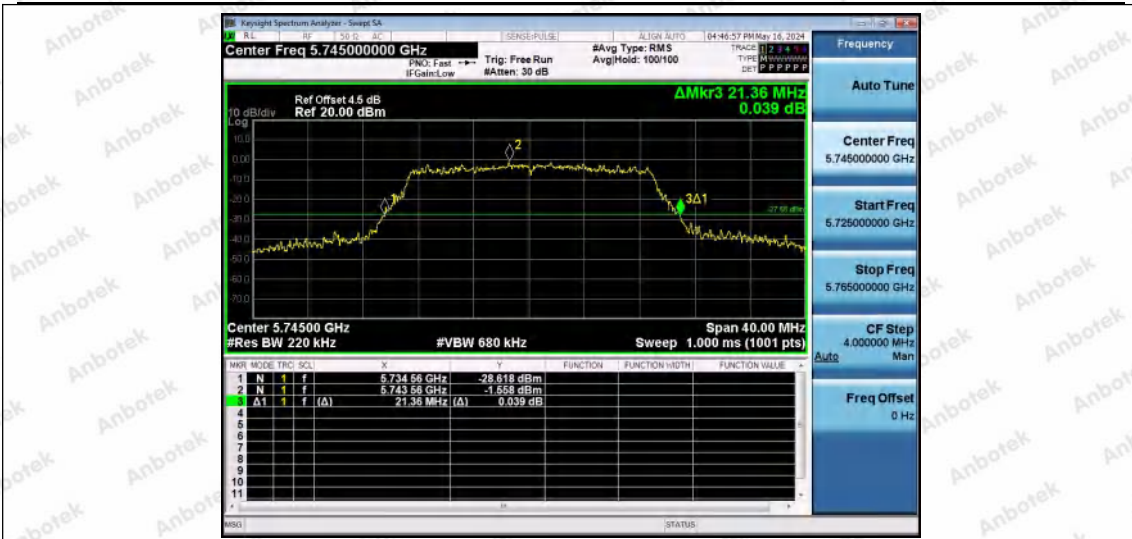

11AC20MIMO-Ant1-5745

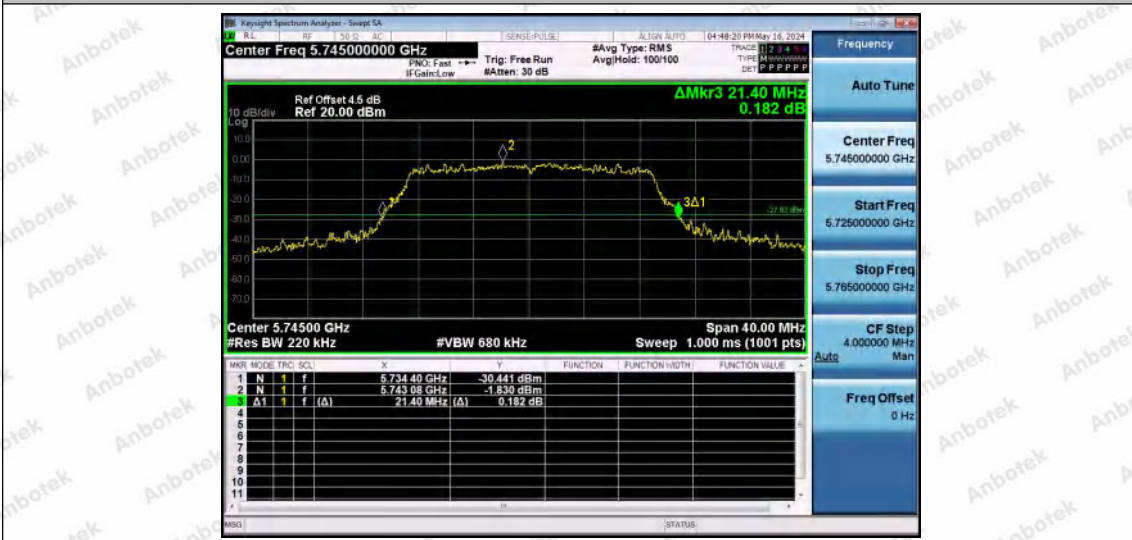

11AC20MIMO-Ant2-5745



11AC20MIMO-Ant1-5785

Shenzhen Anbotek Compliance Laboratory Limited

Address: 1/F., Building D, Sogood Science and Technology Park, Sanwei Community, Hangcheng Street, Bao'an District, Shenzhen, Guangdong, China.
 Tel: (86) 0755-26066440 Fax: (86) 0755-26014772 Email: service@anbotek.com

Hotline 400-003-0500
 www.anbotek.com.cn





11AC20MIMO-Ant2-5785



11AC20MIMO-Ant1-5825



11AC20MIMO-Ant2-5825

Shenzhen Anbotek Compliance Laboratory Limited


Address: 1/F., Building D, Sogood Science and Technology Park, Sanwei Community, Hangcheng Street, Bao'an District, Shenzhen, Guangdong, China.
 Tel: (86) 0755-26066440 Fax: (86) 0755-26014772 Email: service@anbotek.com

Hotline 400-003-0500
 www.anbotek.com.cn





11AC40MIMO-Ant1-5190

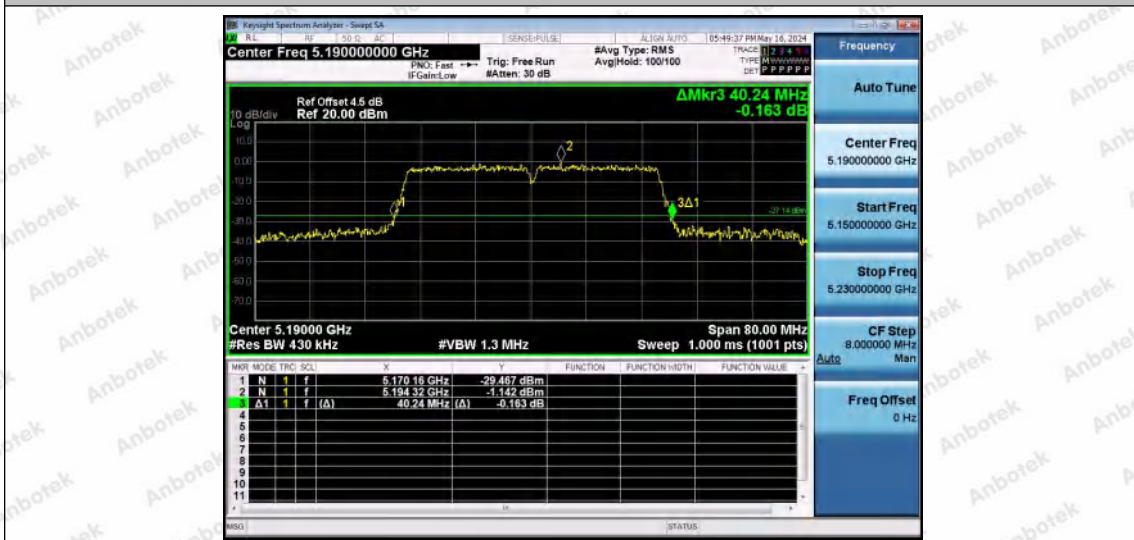

11AC40MIMO-Ant2-5190



11AC40MIMO-Ant1-5230

Shenzhen Anbotek Compliance Laboratory Limited

Address: 1/F., Building D, Sogood Science and Technology Park, Sanwei Community, Hangcheng Street, Bao'an District, Shenzhen, Guangdong, China.
 Tel: (86) 0755-26066440 Fax: (86) 0755-26014772 Email: service@anbotek.com

Hotline 400-003-0500
 www.anbotek.com.cn





11AC40MIMO-Ant2-5230



11AC40MIMO-Ant1-5270




11AC40MIMO-Ant2-5270

Shenzhen Anbotek Compliance Laboratory Limited


Address: 1/F., Building D, Sogood Science and Technology Park, Sanwei Community, Hangcheng Street, Bao'an District, Shenzhen, Guangdong, China.
 Tel: (86) 0755-26066440 Fax: (86) 0755-26014772 Email: service@anbotek.com

Hotline 400-003-0500
 www.anbotek.com.cn




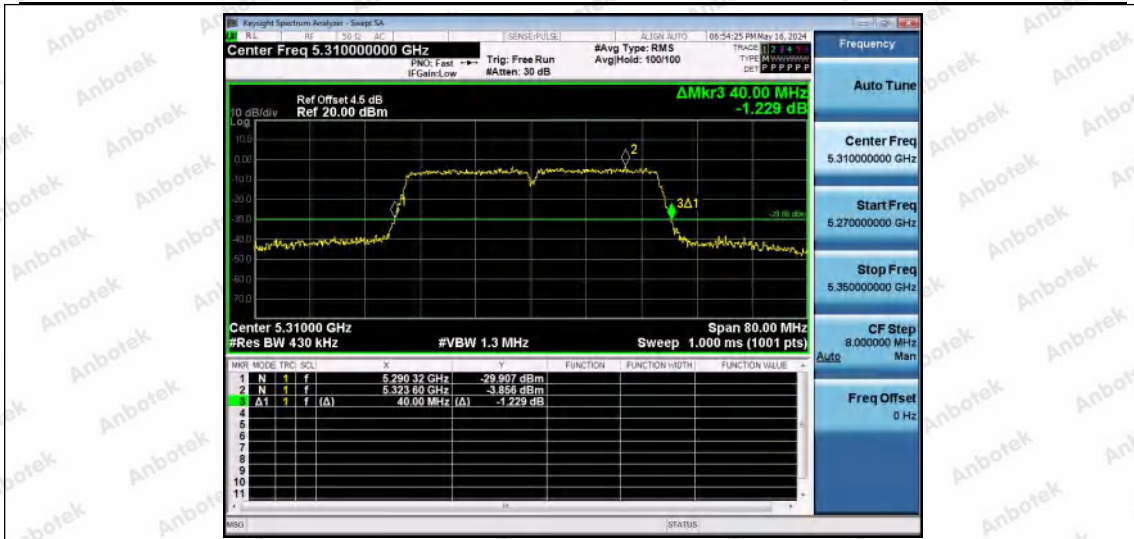

11AC40MIMO-Ant1-5310

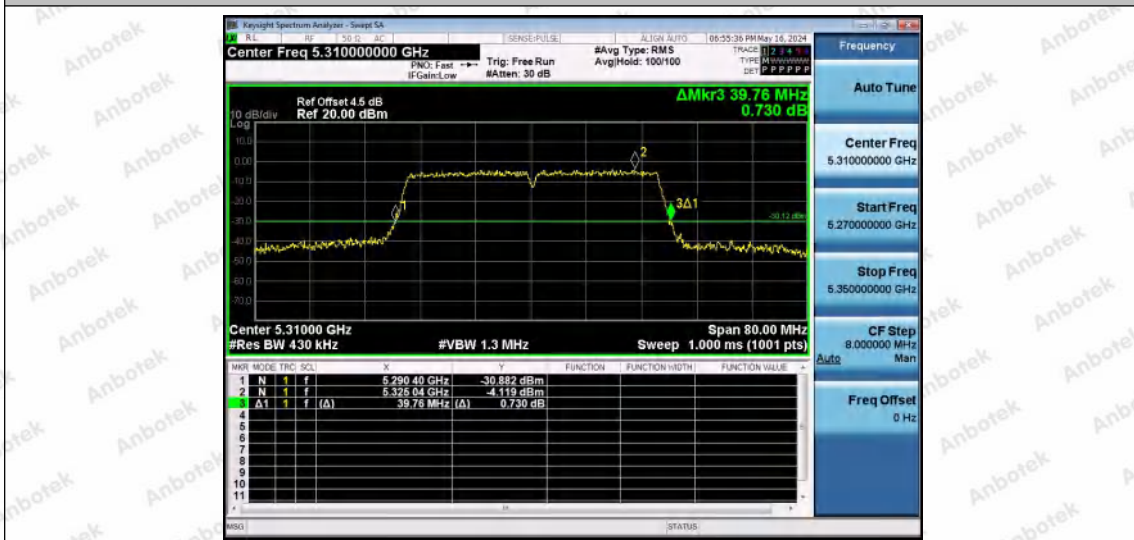

11AC40MIMO-Ant2-5310

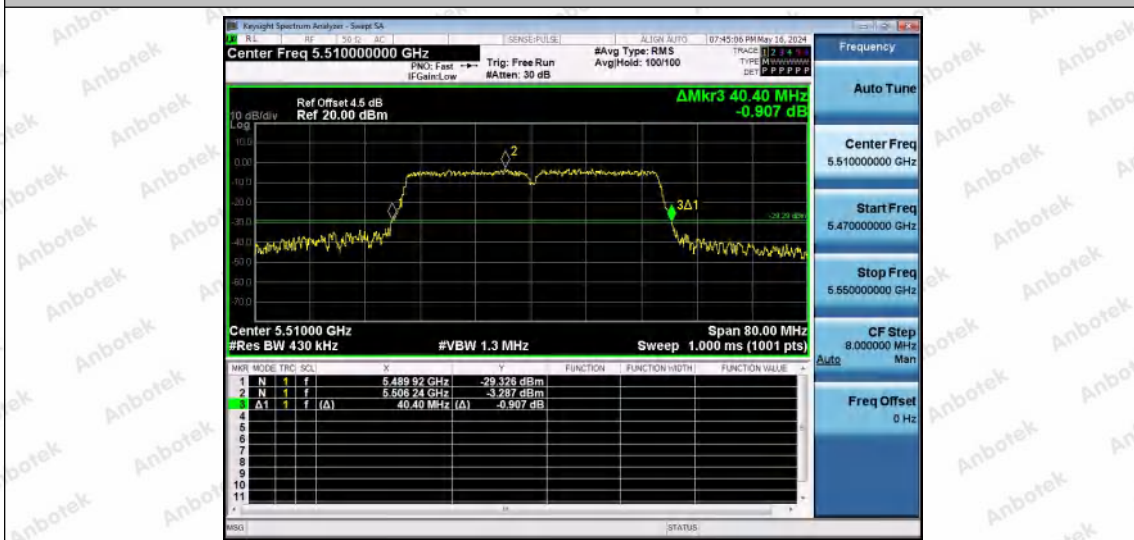


11AC40MIMO-Ant1-5510

Shenzhen Anbotek Compliance Laboratory Limited

Address: 1/F., Building D, Sogood Science and Technology Park, Sanwei Community, Hangcheng Street, Bao'an District, Shenzhen, Guangdong, China.
Tel: (86) 0755-26066440 Fax: (86) 0755-26014772 Email: service@anbotek.com

Hotline 400-003-0500
www.anbotek.com.cn




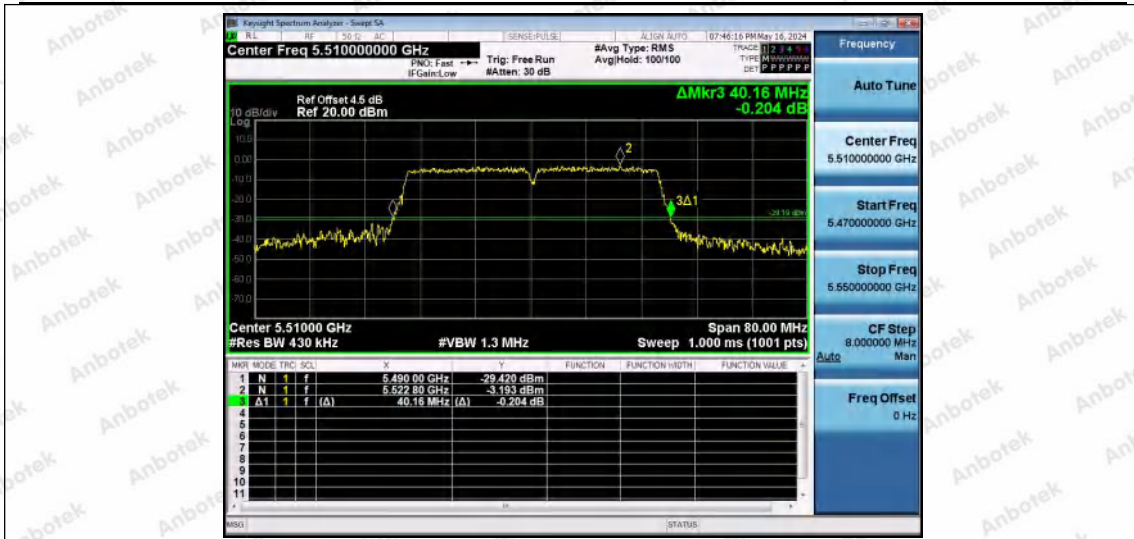

11AC40MIMO-Ant2-5510



11AC40MIMO-Ant1-5550

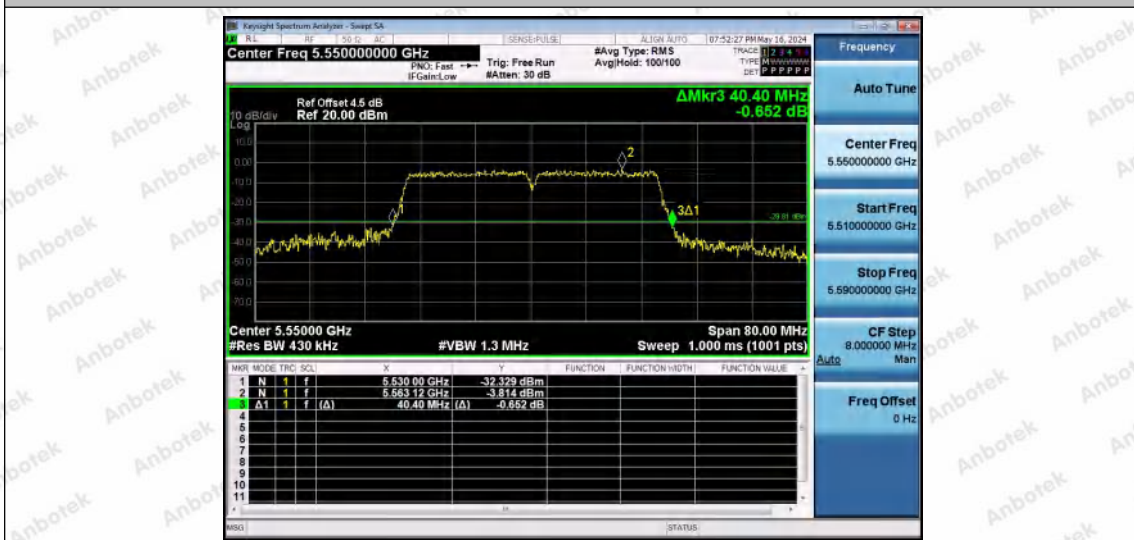

11AC40MIMO-Ant2-5550

Shenzhen Anbotek Compliance Laboratory Limited


Address: 1/F., Building D, Sogood Science and Technology Park, Sanwei Community, Hangcheng Street, Bao'an District, Shenzhen, Guangdong, China.
 Tel: (86) 0755-26066440 Fax: (86) 0755-26014772 Email: service@anbotek.com

Hotline 400-003-0500
 www.anbotek.com.cn






11AC40MIMO-Ant1-5670

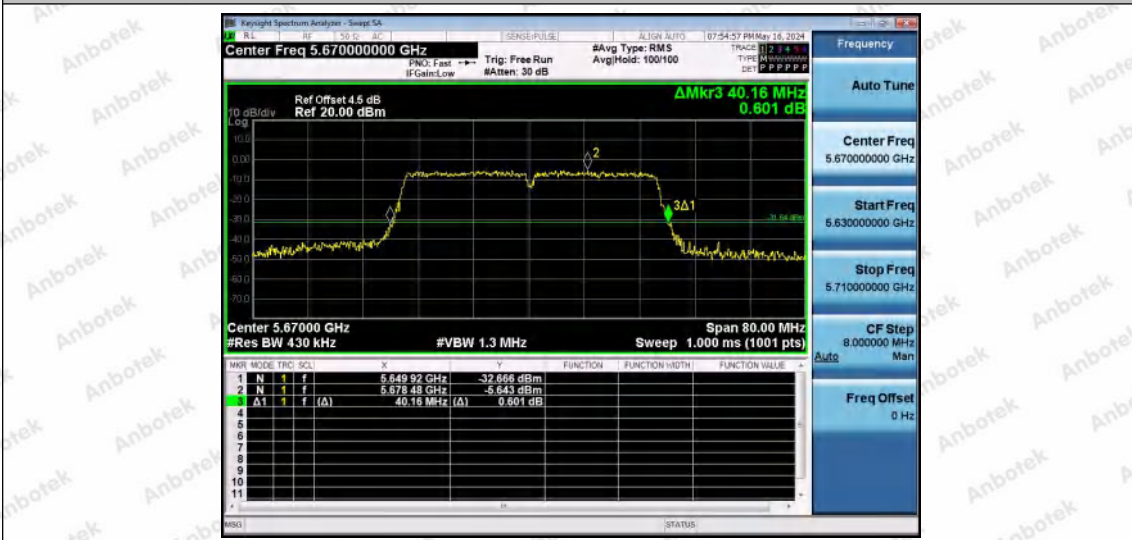

11AC40MIMO-Ant2-5670

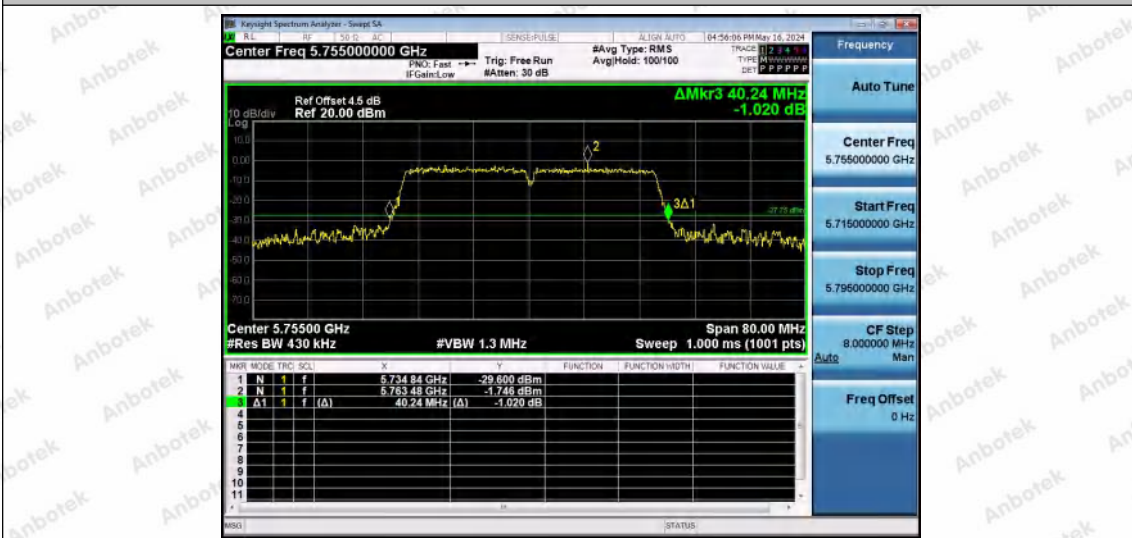

11AC40MIMO-Ant1-5755

Shenzhen Anbotek Compliance Laboratory Limited


Address: 1/F., Building D, Sogood Science and Technology Park, Sanwei Community, Hangcheng Street, Bao'an District, Shenzhen, Guangdong, China.
 Tel: (86) 0755-26066440 Fax: (86) 0755-26014772 Email: service@anbotek.com

Hotline 400-003-0500
 www.anbotek.com.cn





11AC40MIMO-Ant2-5755

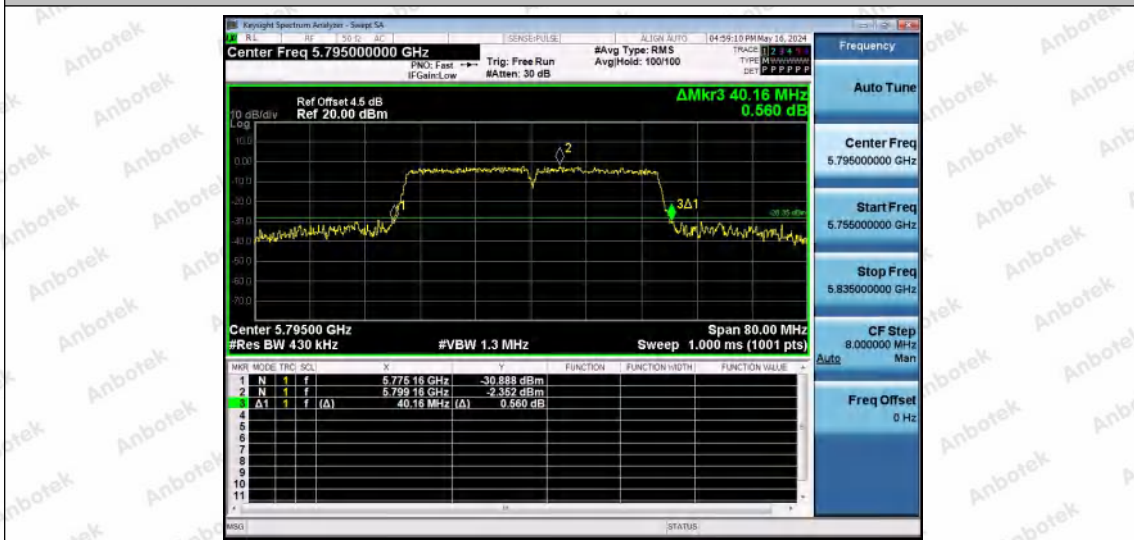

11AC40MIMO-Ant1-5795




11AC40MIMO-Ant2-5795

Shenzhen Anbotek Compliance Laboratory Limited

Address: 1/F., Building D, Sogood Science and Technology Park, Sanwei Community, Hangcheng Street, Bao'an District, Shenzhen, Guangdong, China.
Tel: (86) 0755-26066440 Fax: (86) 0755-26014772 Email: service@anbotek.com

Hotline 400-003-0500
www.anbotek.com.cn




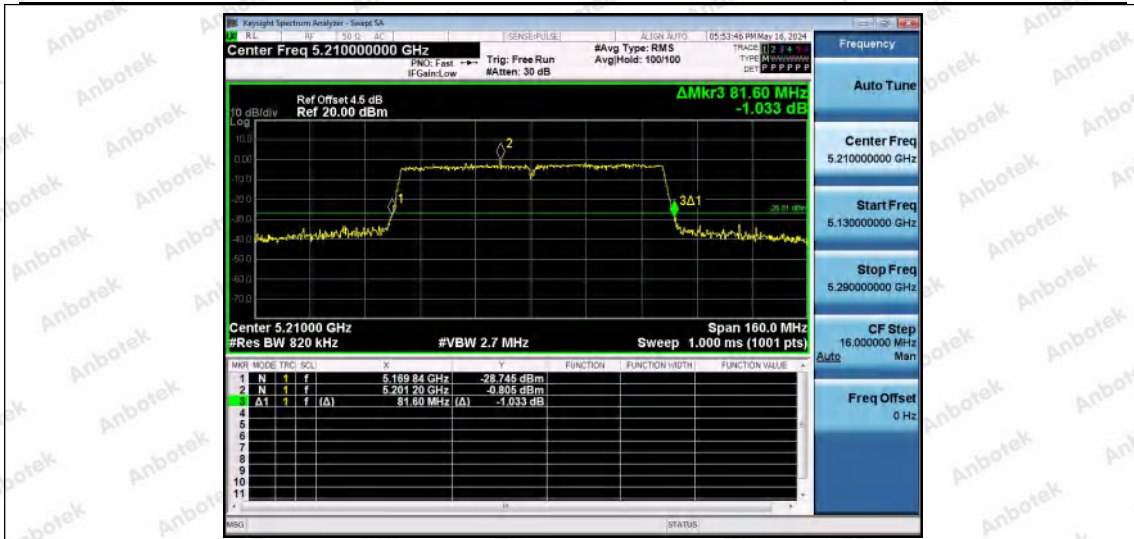

11AC80MIMO-Ant1-5210



11AC80MIMO-Ant2-5210

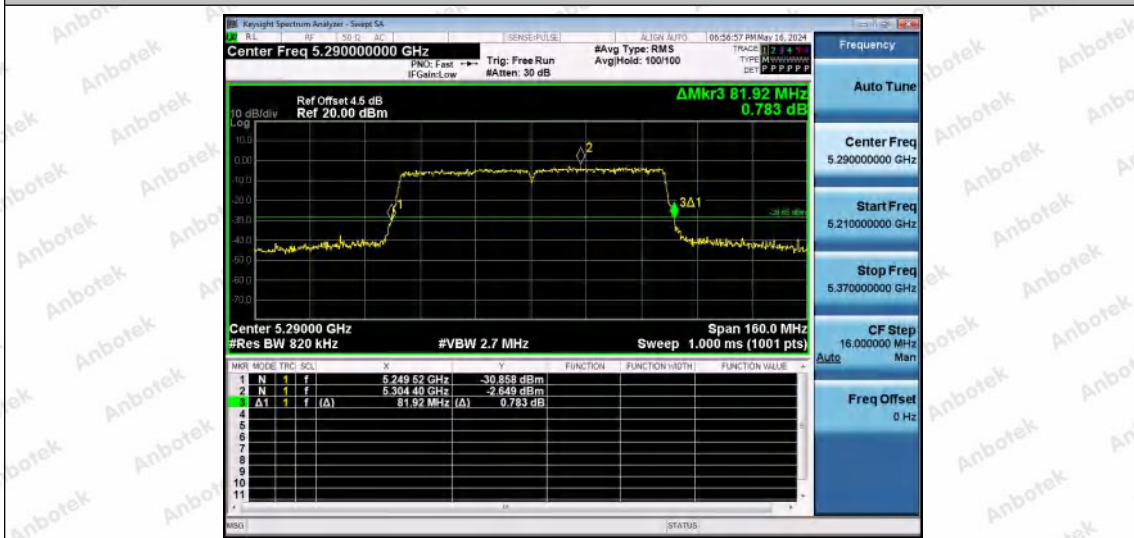


11AC80MIMO-Ant1-5290

Shenzhen Anbotek Compliance Laboratory Limited


Address: 1/F., Building D, Sogood Science and Technology Park, Sanwei Community, Hangcheng Street, Bao'an District, Shenzhen, Guangdong, China.
Tel: (86) 0755-26066440 Fax: (86) 0755-26014772 Email: service@anbotek.com

Hotline 400-003-0500
www.anbotek.com.cn



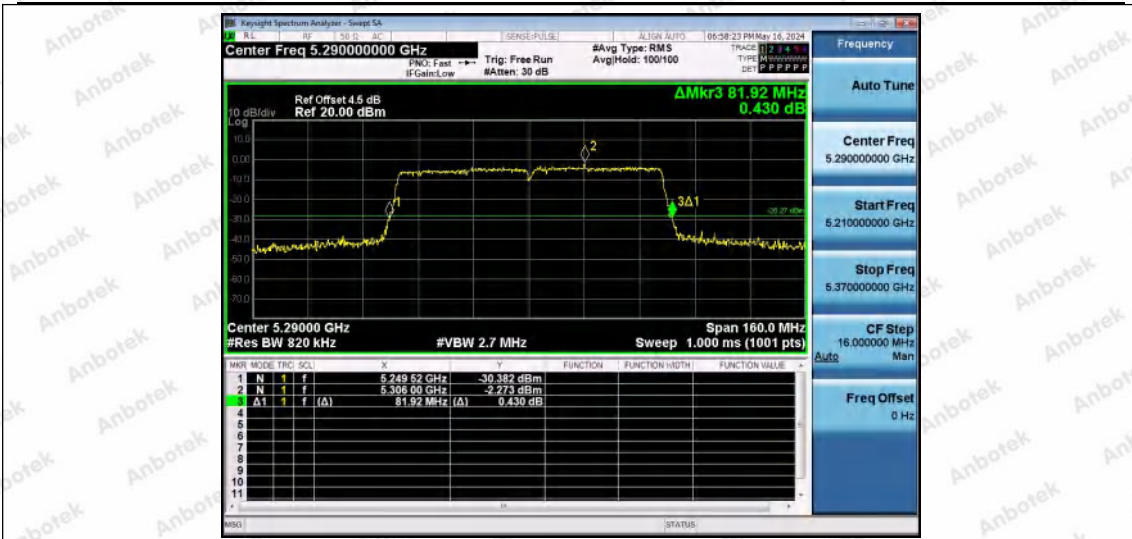

11AC80MIMO-Ant2-5290

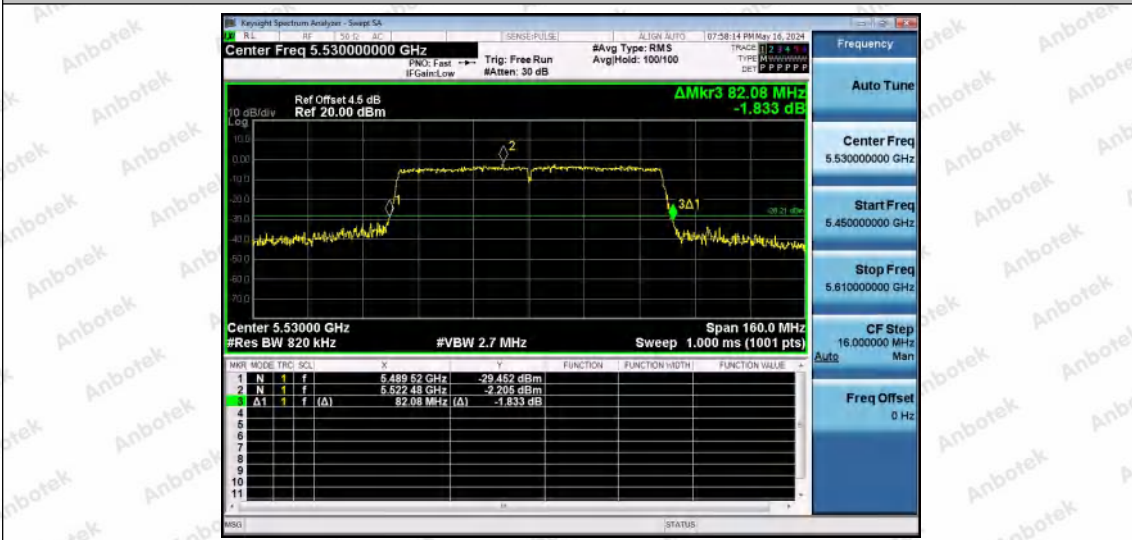

11AC80MIMO-Ant1-5530




11AC80MIMO-Ant2-5530

Shenzhen Anbotek Compliance Laboratory Limited


Address: 1/F., Building D, Sogood Science and Technology Park, Sanwei Community, Hangcheng Street, Bao'an District, Shenzhen, Guangdong, China.
 Tel: (86) 0755-26066440 Fax: (86) 0755-26014772 Email: service@anbotek.com

Hotline 400-003-0500
 www.anbotek.com.cn




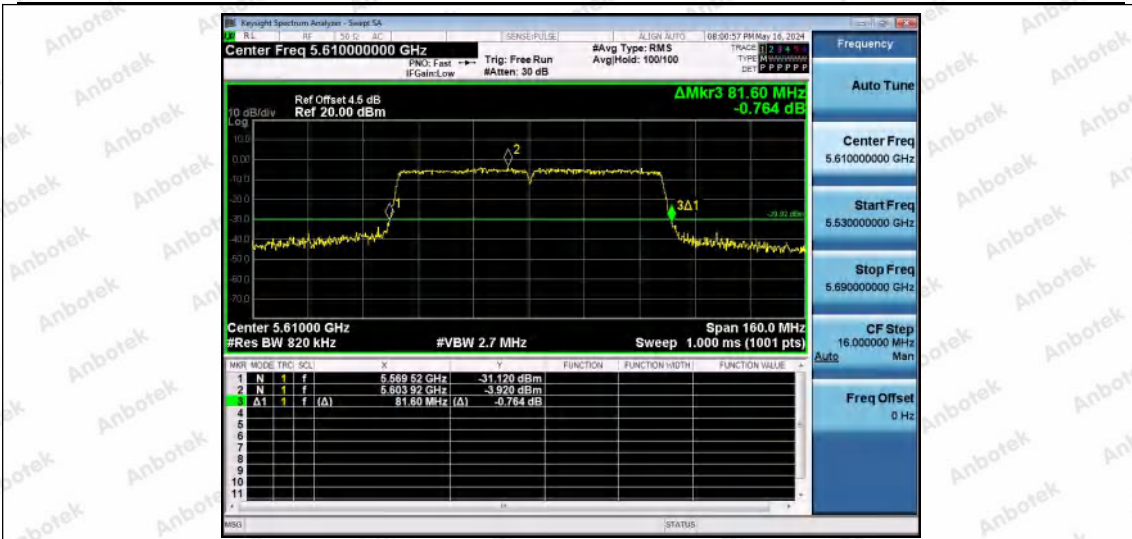

11AC80MIMO-Ant1-5610

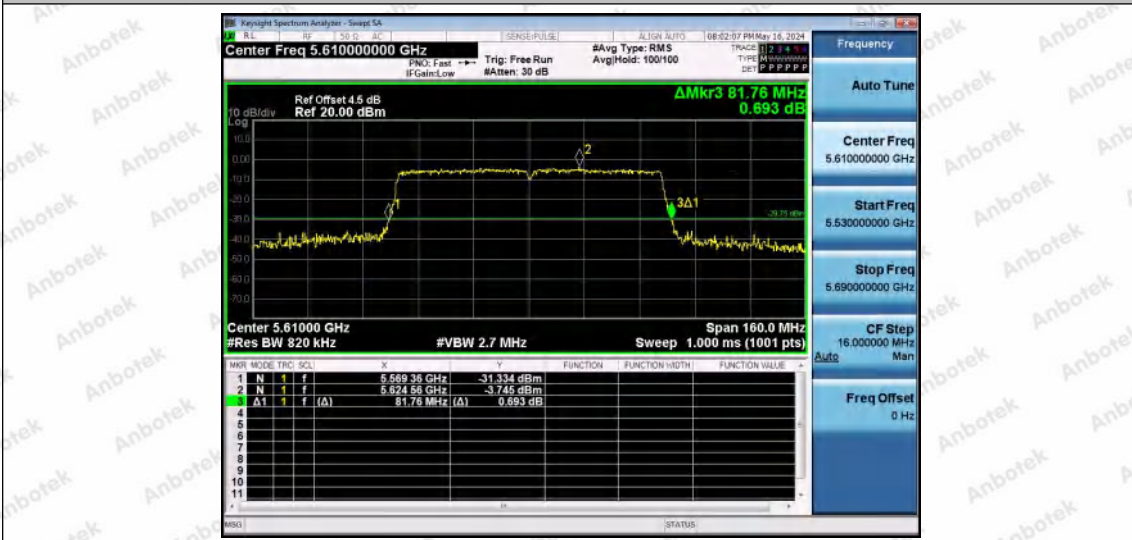

11AC80MIMO-Ant2-5610

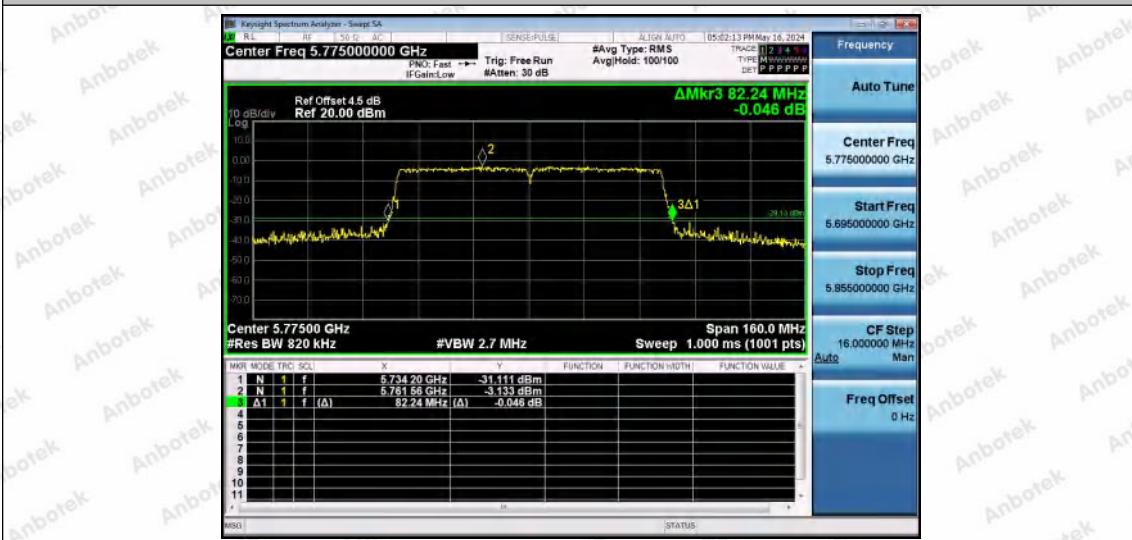


11AC80MIMO-Ant1-5775

Shenzhen Anbotek Compliance Laboratory Limited


Address: 1/F., Building D, Sogood Science and Technology Park, Sanwei Community, Hangcheng Street, Bao'an District, Shenzhen, Guangdong, China.
Tel: (86) 0755-26066440 Fax: (86) 0755-26014772 Email: service@anbotek.com

Hotline 400-003-0500
www.anbotek.com.cn



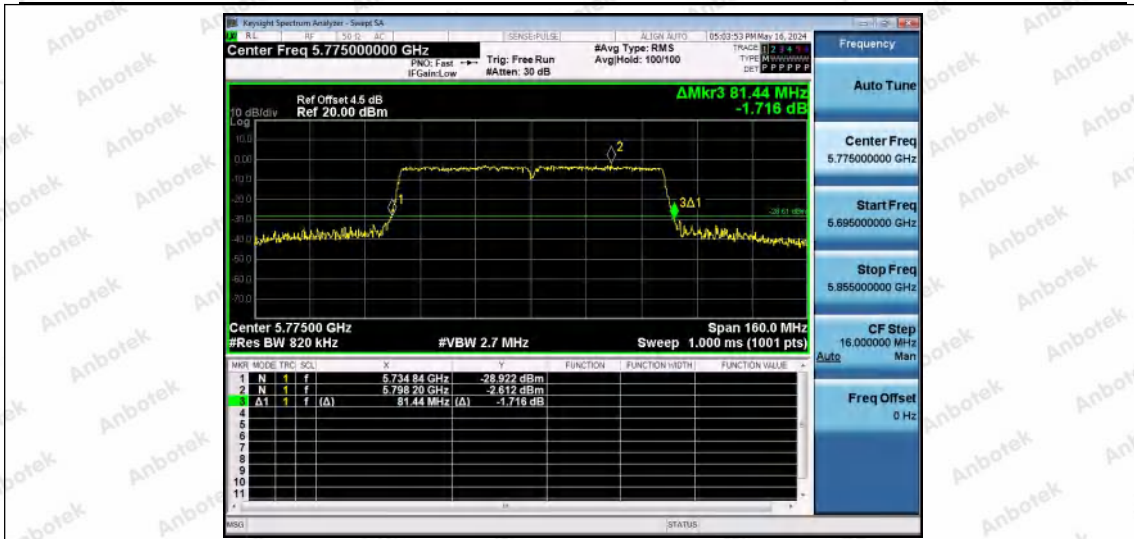

11AC80MIMO-Ant2-5775

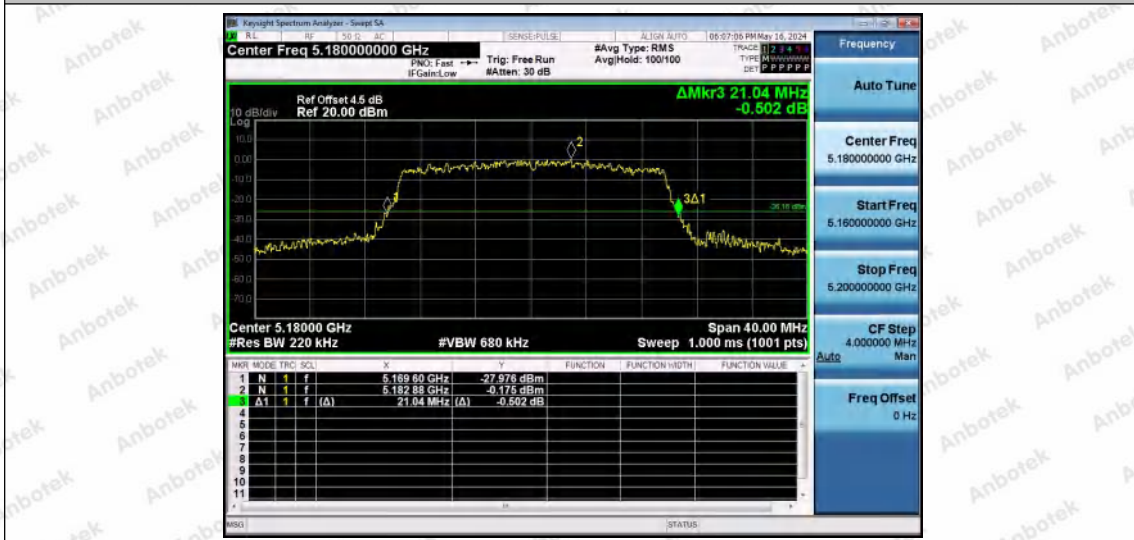

11AX20MIMO-Ant1-5180




11AX20MIMO-Ant2-5180

Shenzhen Anbotek Compliance Laboratory Limited

Address: 1/F., Building D, Sogood Science and Technology Park, Sanwei Community, Hangcheng Street, Bao'an District, Shenzhen, Guangdong, China.
Tel: (86) 0755-26066440 Fax: (86) 0755-26014772 Email: service@anbotek.com

Hotline 400-003-0500
www.anbotek.com.cn



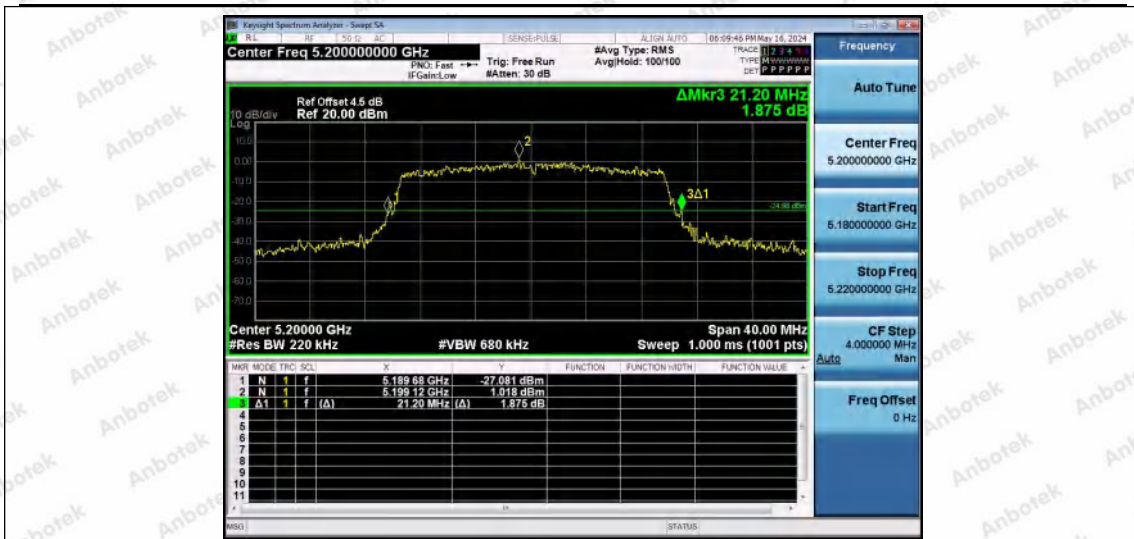

11AX20MIMO-Ant1-5200



11AX20MIMO-Ant2-5200




11AX20MIMO-Ant1-5240

Shenzhen Anbotek Compliance Laboratory Limited


Address: 1/F., Building D, Sogood Science and Technology Park, Sanwei Community, Hangcheng Street, Bao'an District, Shenzhen, Guangdong, China.
 Tel: (86) 0755-26066440 Fax: (86) 0755-26014772 Email: service@anbotek.com

Hotline 400-003-0500
 www.anbotek.com.cn




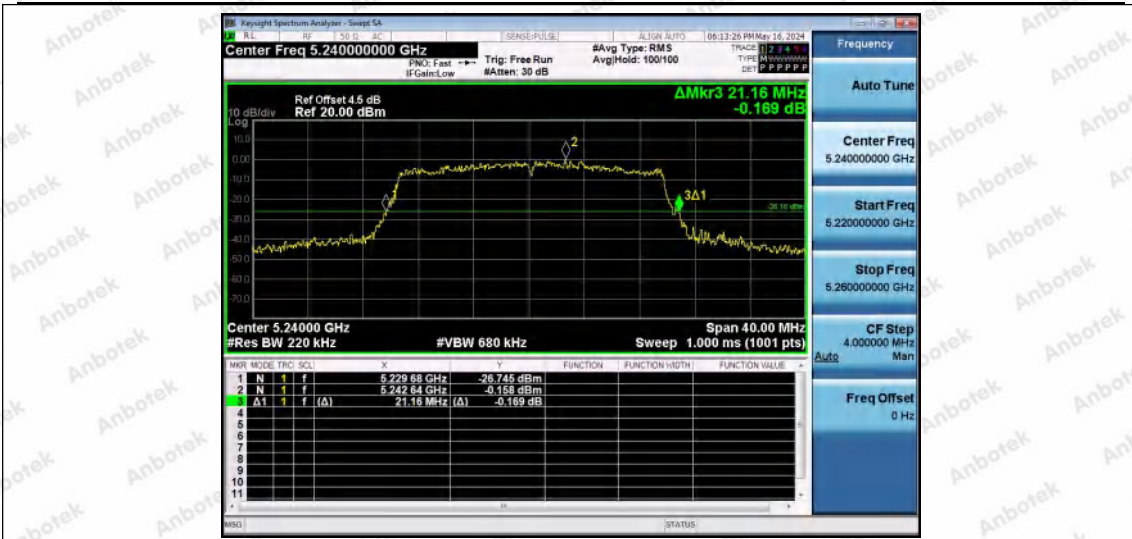

11AX20MIMO-Ant2-5240

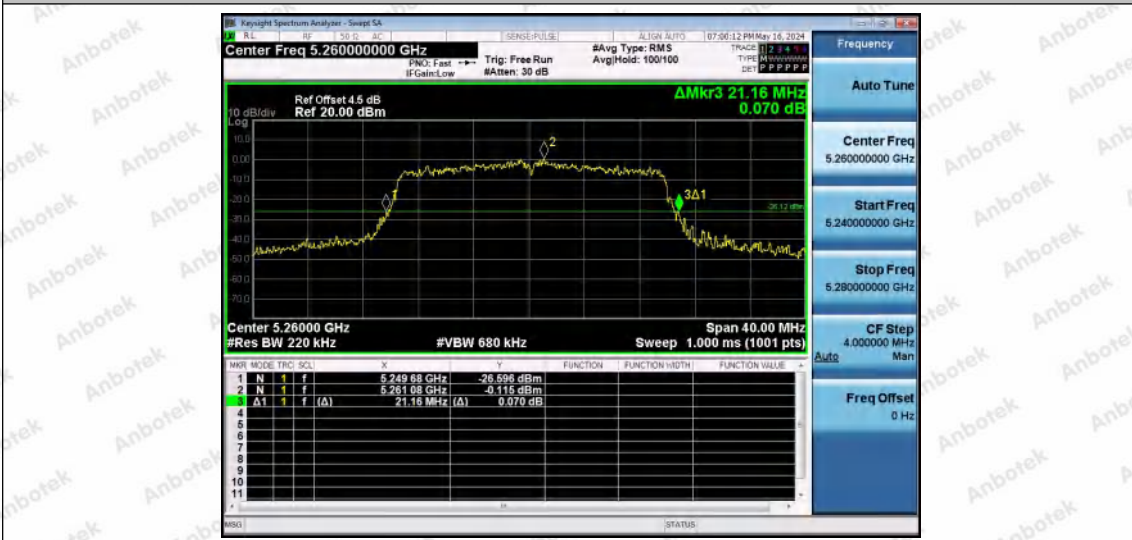

11AX20MIMO-Ant1-5260

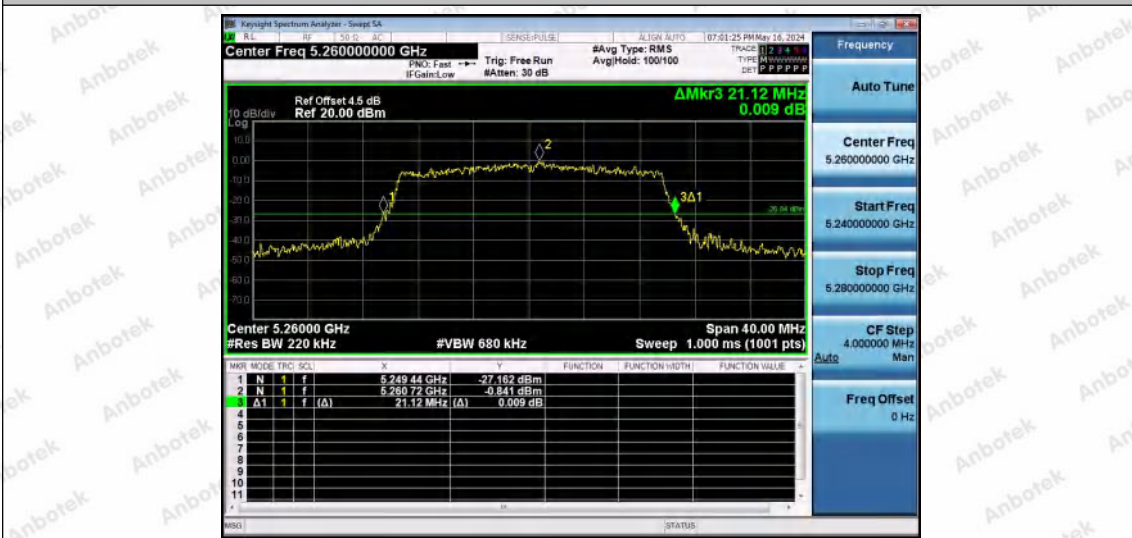

11AX20MIMO-Ant2-5260

Shenzhen Anbotek Compliance Laboratory Limited


Address: 1/F., Building D, Sogood Science and Technology Park, Sanwei Community, Hangcheng Street, Bao'an District, Shenzhen, Guangdong, China.
 Tel: (86) 0755-26066440 Fax: (86) 0755-26014772 Email: service@anbotek.com

Hotline 400-003-0500
 www.anbotek.com.cn





11AX20MIMO-Ant1-5300

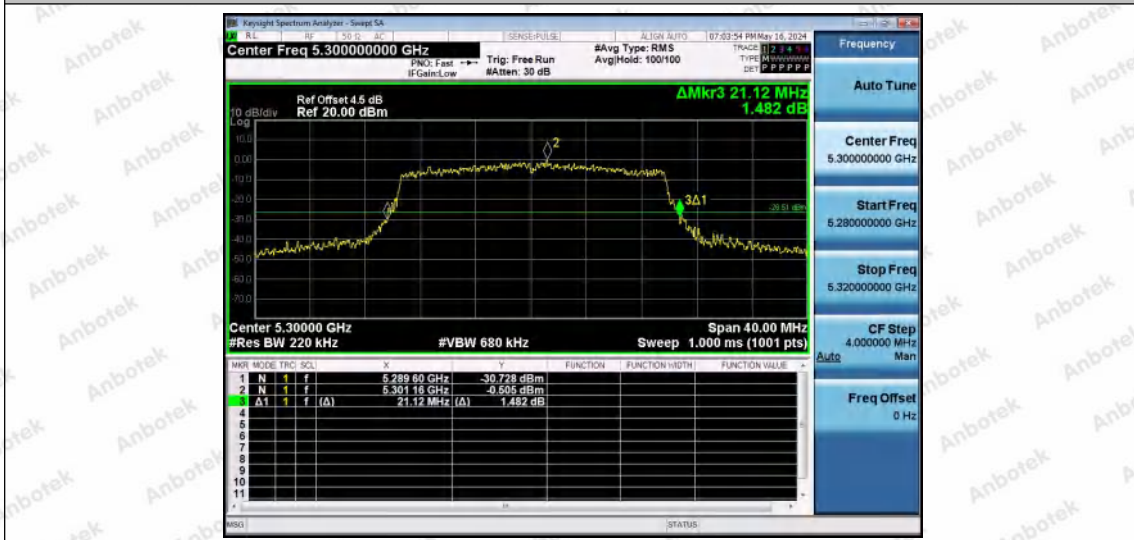

11AX20MIMO-Ant2-5300



11AX20MIMO-Ant1-5320

Shenzhen Anbotek Compliance Laboratory Limited


Address: 1/F., Building D, Sogood Science and Technology Park, Sanwei Community, Hangcheng Street, Bao'an District, Shenzhen, Guangdong, China.
Tel: (86) 0755-26066440 Fax: (86) 0755-26014772 Email: service@anbotek.com

Hotline 400-003-0500
www.anbotek.com.cn






11AX20MIMO-Ant2-5320

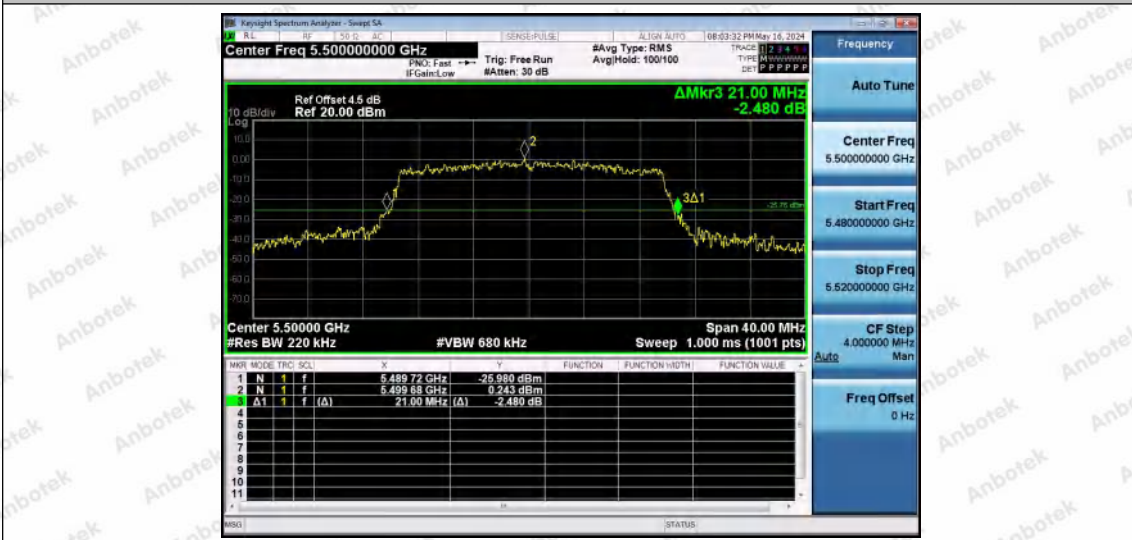

11AX20MIMO-Ant1-5500

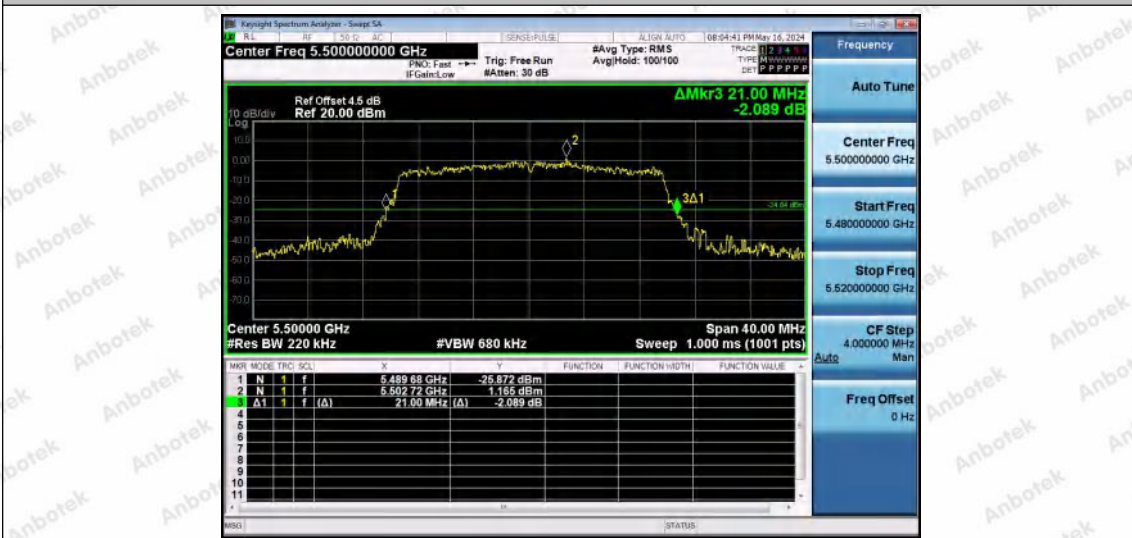


11AX20MIMO-Ant2-5500

Shenzhen Anbotek Compliance Laboratory Limited


Address: 1/F., Building D, Sogood Science and Technology Park, Sanwei Community, Hangcheng Street, Bao'an District, Shenzhen, Guangdong, China.
Tel: (86) 0755-26066440 Fax: (86) 0755-26014772 Email: service@anbotek.com

Hotline
400-003-0500
www.anbotek.com.cn



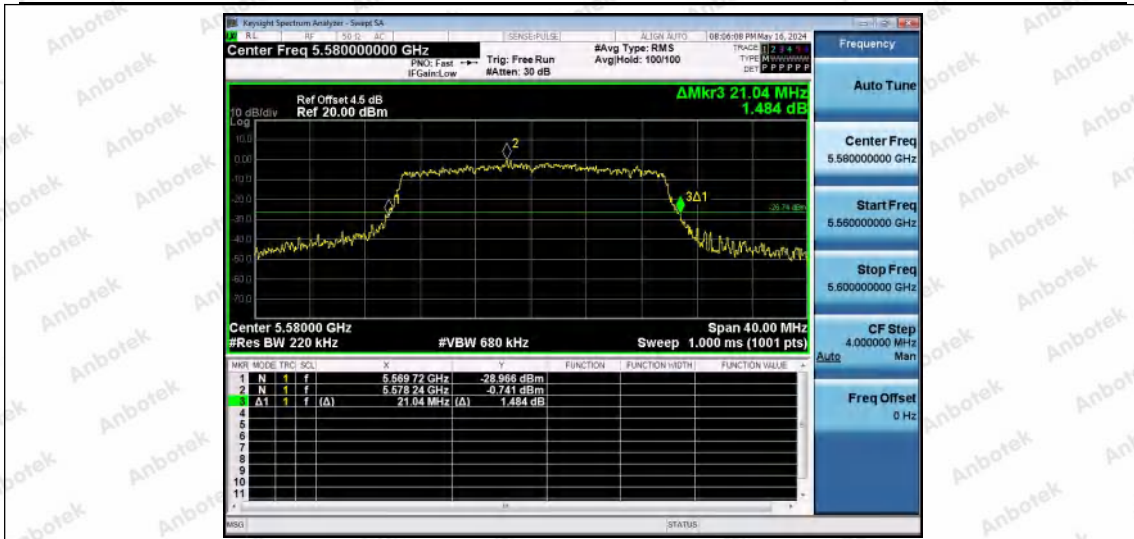

11AX20MIMO-Ant1-5580

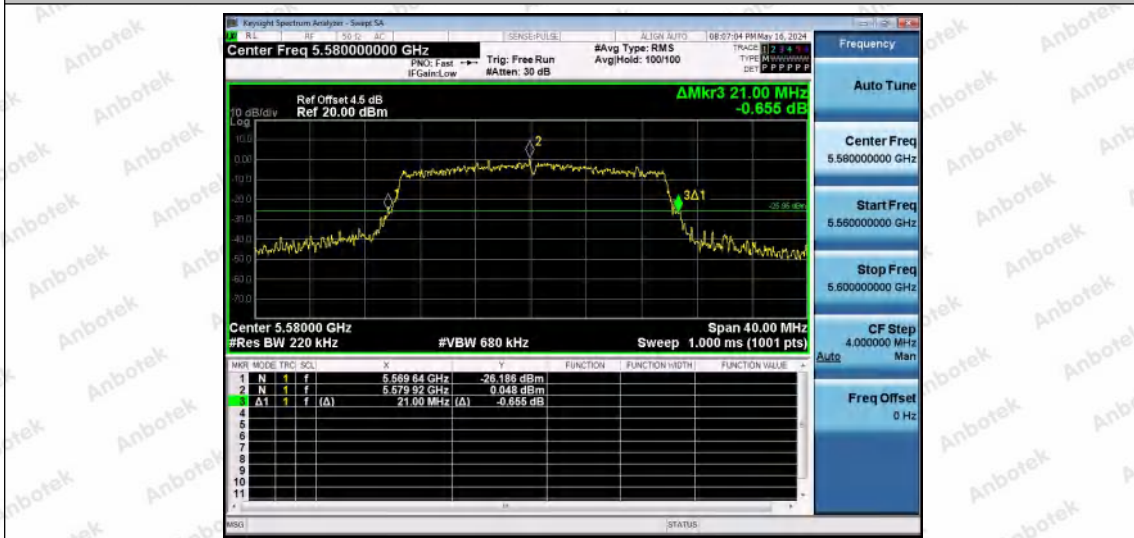

11AX20MIMO-Ant2-5580



11AX20MIMO-Ant1-5700

Shenzhen Anbotek Compliance Laboratory Limited


Address: 1/F., Building D, Sogood Science and Technology Park, Sanwei Community, Hangcheng Street, Bao'an District, Shenzhen, Guangdong, China.
Tel: (86) 0755-26066440 Fax: (86) 0755-26014772 Email: service@anbotek.com

Hotline
400-003-0500
www.anbotek.com.cn






11AX20MIMO-Ant2-5700

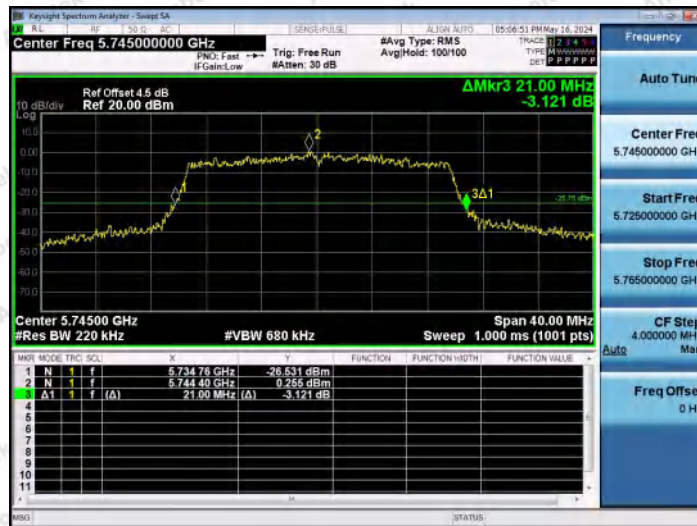

11AX20MIMO-Ant1-5745

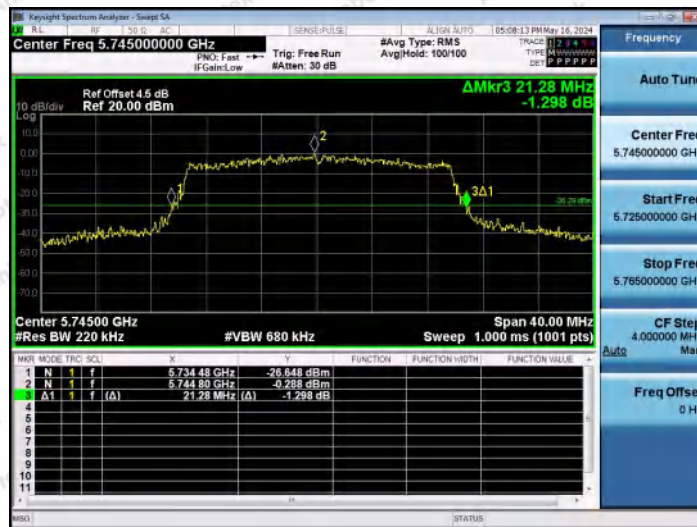

11AX20MIMO-Ant2-5745

Shenzhen Anbotek Compliance Laboratory Limited

Address: 1/F., Building D, Sogood Science and Technology Park, Sanwei Community, Hangcheng Street, Bao'an District, Shenzhen, Guangdong, China.
Tel: (86) 0755-26066440 Fax: (86) 0755-26014772 Email: service@anbotek.com

Hotline 400-003-0500
www.anbotek.com.cn





11AX20MIMO-Ant1-5785



11AX20MIMO-Ant2-5785



11AX20MIMO-Ant1-5825

Shenzhen Anbotek Compliance Laboratory Limited


Address: 1/F., Building D, Sogood Science and Technology Park, Sanwei Community, Hangcheng Street, Bao'an District, Shenzhen, Guangdong, China.
 Tel: (86) 0755-26066440 Fax: (86) 0755-26014772 Email: service@anbotek.com

Hotline 400-003-0500
 www.anbotek.com.cn






11AX20MIMO-Ant2-5825

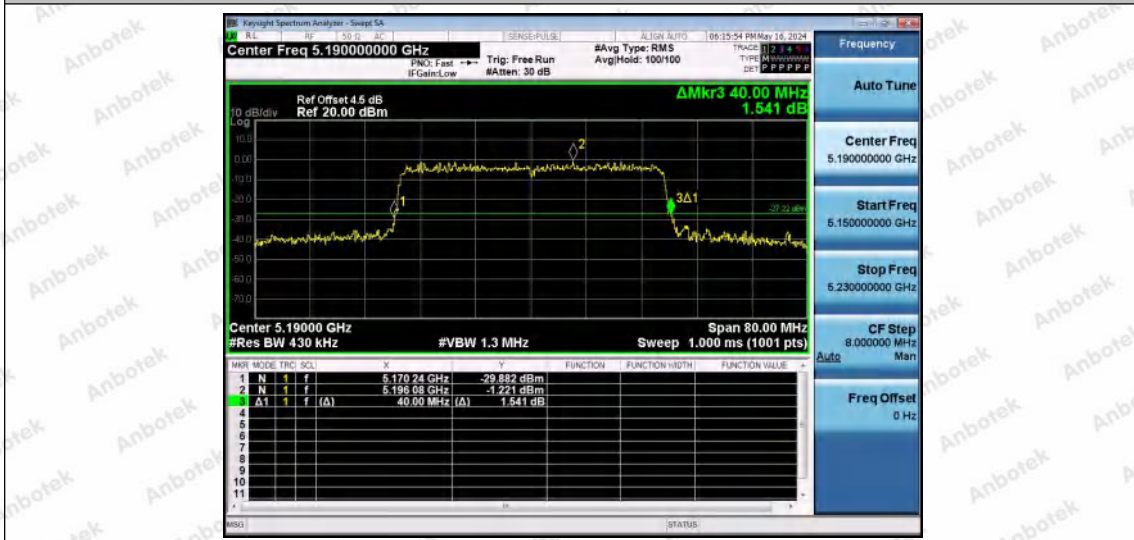

11AX40MIMO-Ant1-5190

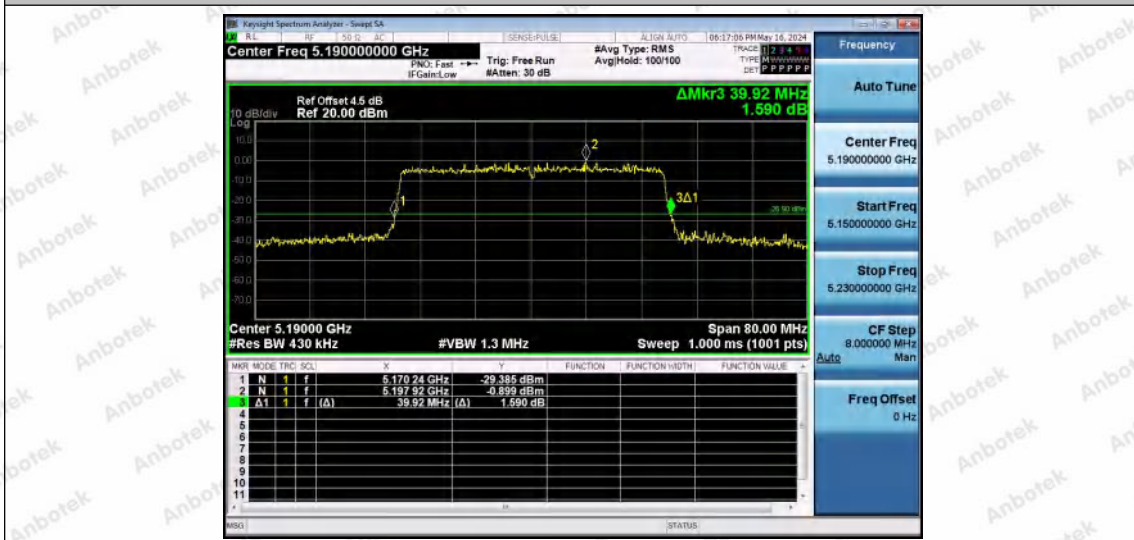


11AX40MIMO-Ant2-5190

Shenzhen Anbotek Compliance Laboratory Limited


Address: 1/F., Building D, Sogood Science and Technology Park, Sanwei Community, Hangcheng Street, Bao'an District, Shenzhen, Guangdong, China.
Tel: (86) 0755-26066440 Fax: (86) 0755-26014772 Email: service@anbotek.com

Hotline 400-003-0500
www.anbotek.com.cn




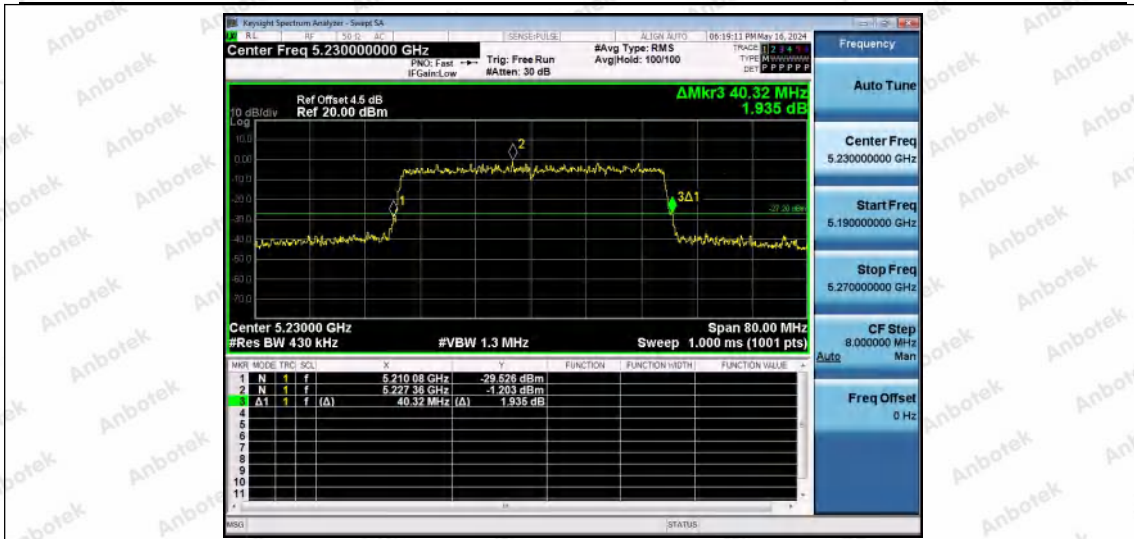

11AX40MIMO-Ant1-5230

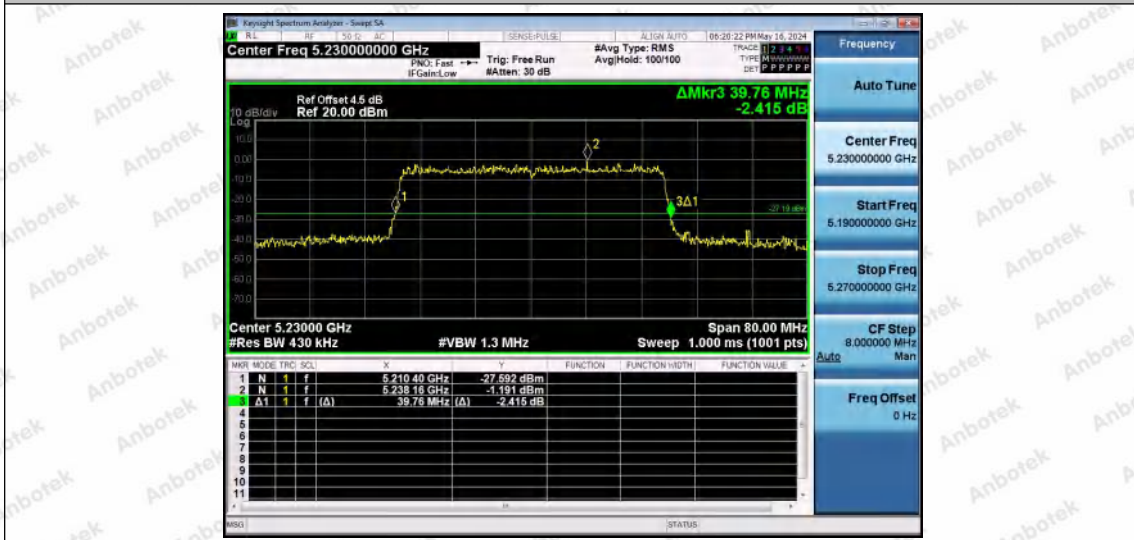

11AX40MIMO-Ant2-5230

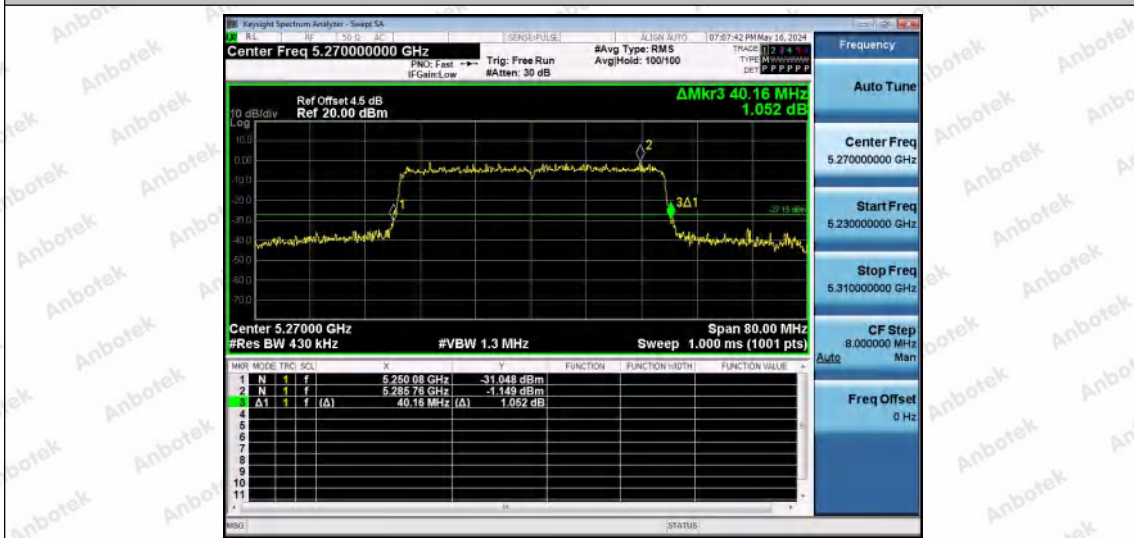

11AX40MIMO-Ant1-5270

Shenzhen Anbotek Compliance Laboratory Limited


Address: 1/F., Building D, Sogood Science and Technology Park, Sanwei Community, Hangcheng Street, Bao'an District, Shenzhen, Guangdong, China.
 Tel: (86) 0755-26066440 Fax: (86) 0755-26014772 Email: service@anbotek.com

Hotline 400-003-0500
 www.anbotek.com.cn






11AX40MIMO-Ant2-5270

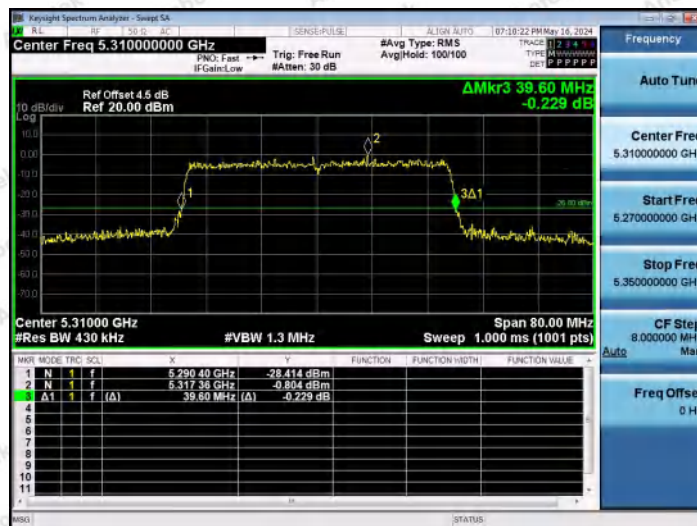

11AX40MIMO-Ant1-5310

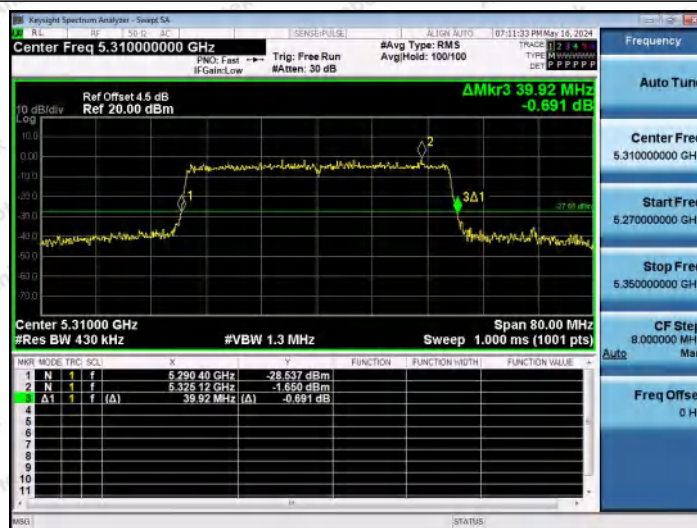


11AX40MIMO-Ant2-5310

Shenzhen Anbotek Compliance Laboratory Limited


Address: 1/F., Building D, Sogood Science and Technology Park, Sanwei Community, Hangcheng Street, Bao'an District, Shenzhen, Guangdong, China.
 Tel: (86) 0755-26066440 Fax: (86) 0755-26014772 Email: service@anbotek.com

Hotline 400-003-0500
 www.anbotek.com.cn




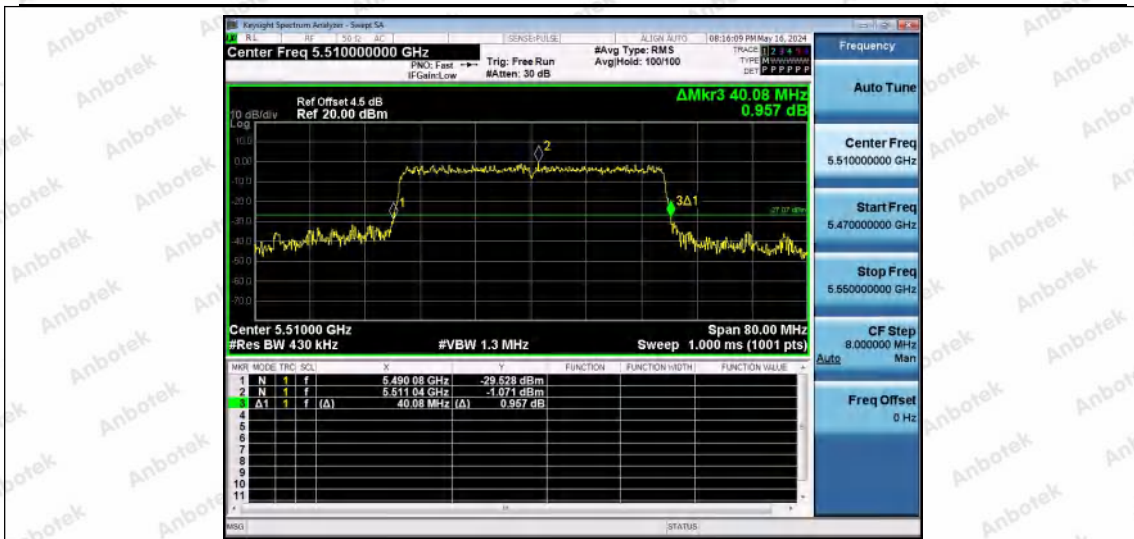

11AX40MIMO-Ant1-5510

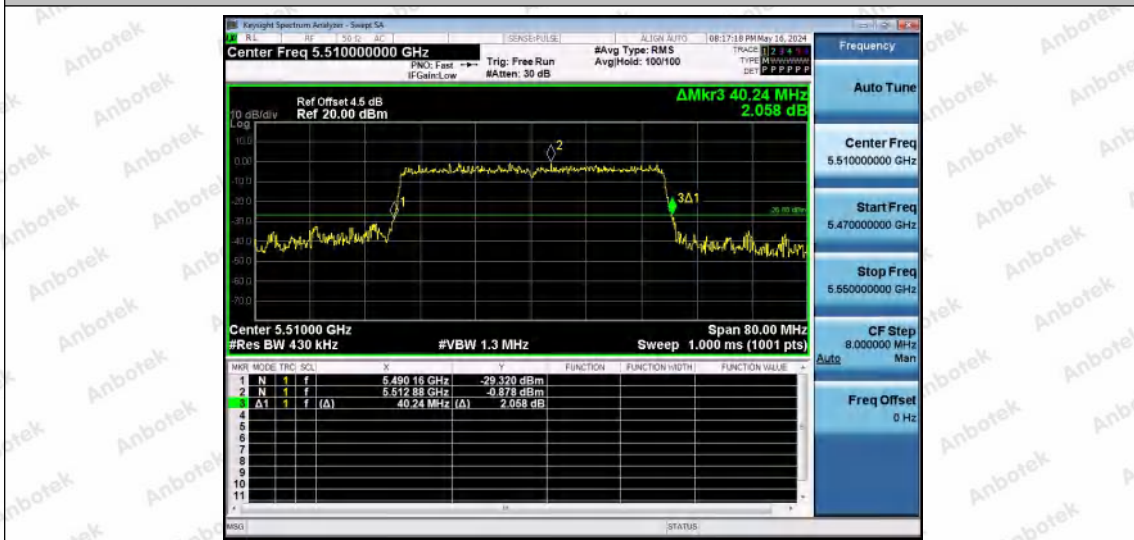

11AX40MIMO-Ant2-5510

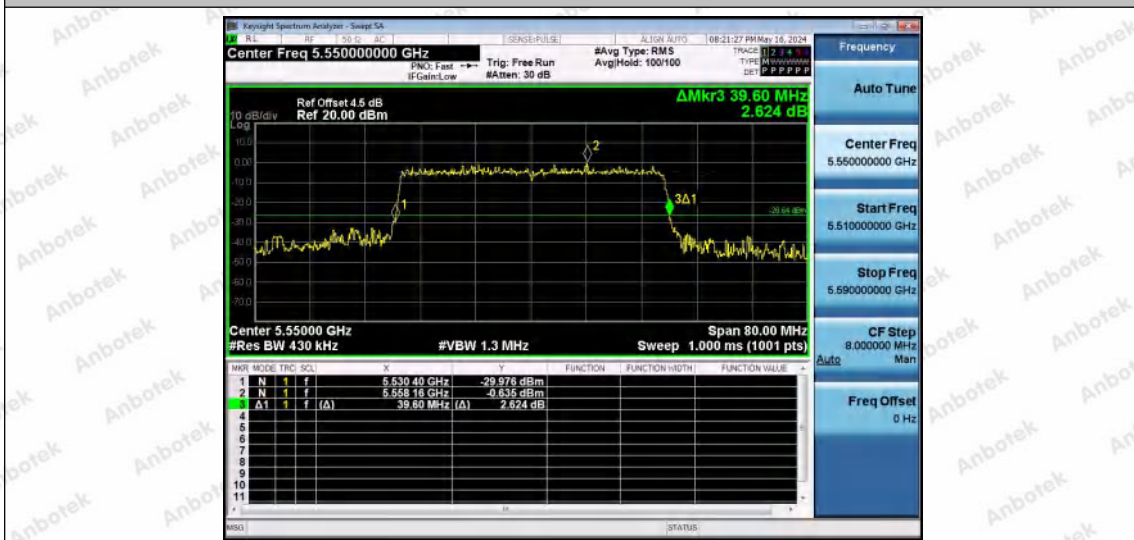


11AX40MIMO-Ant1-5550

Shenzhen Anbotek Compliance Laboratory Limited


Address: 1/F., Building D, Sogood Science and Technology Park, Sanwei Community, Hangcheng Street, Bao'an District, Shenzhen, Guangdong, China.
Tel: (86) 0755-26066440 Fax: (86) 0755-26014772 Email: service@anbotek.com

Hotline
400-003-0500
www.anbotek.com.cn




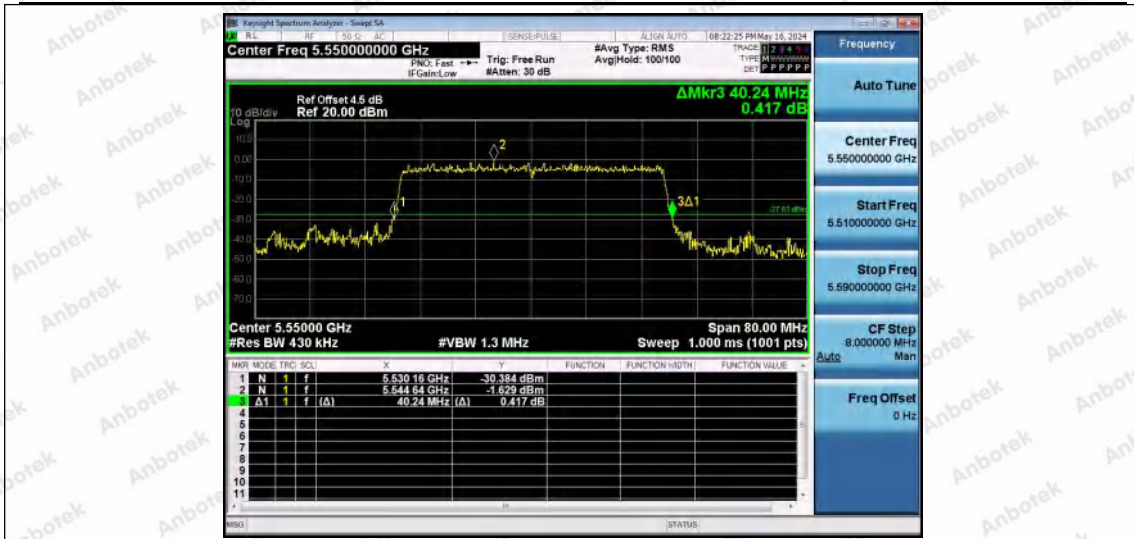

11AX40MIMO-Ant2-5550

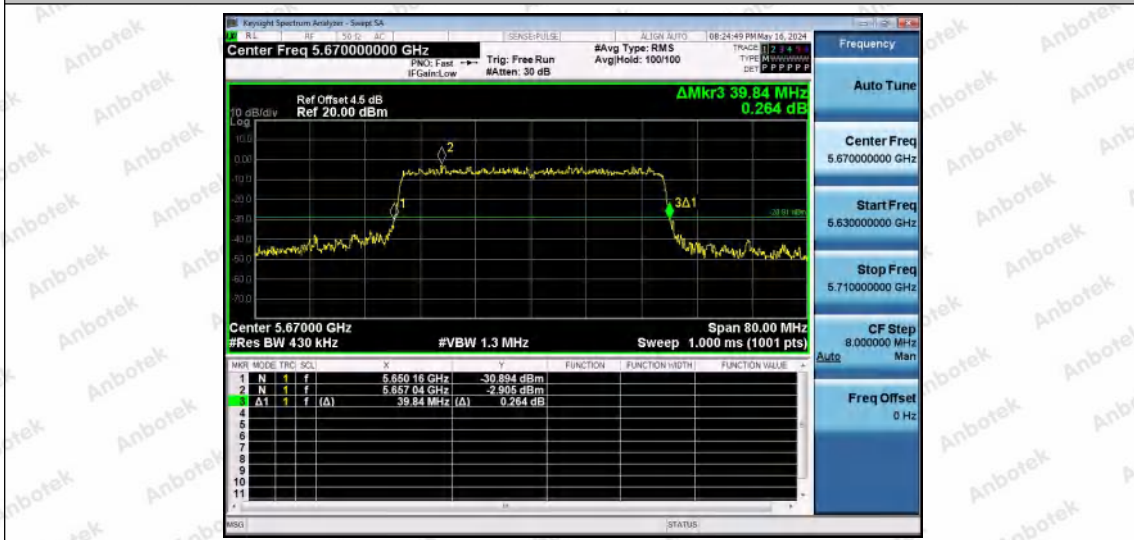

11AX40MIMO-Ant1-5670

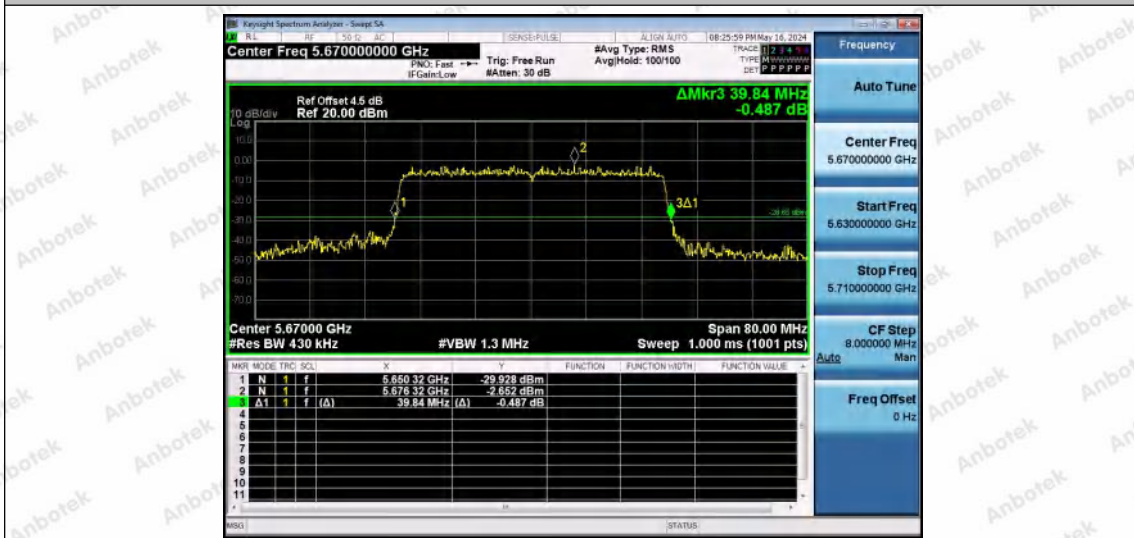


11AX40MIMO-Ant2-5670

Shenzhen Anbotek Compliance Laboratory Limited


Address: 1/F., Building D, Sogood Science and Technology Park, Sanwei Community, Hangcheng Street, Bao'an District, Shenzhen, Guangdong, China.
Tel: (86) 0755-26066440 Fax: (86) 0755-26014772 Email: service@anbotek.com

Hotline 400-003-0500
www.anbotek.com.cn




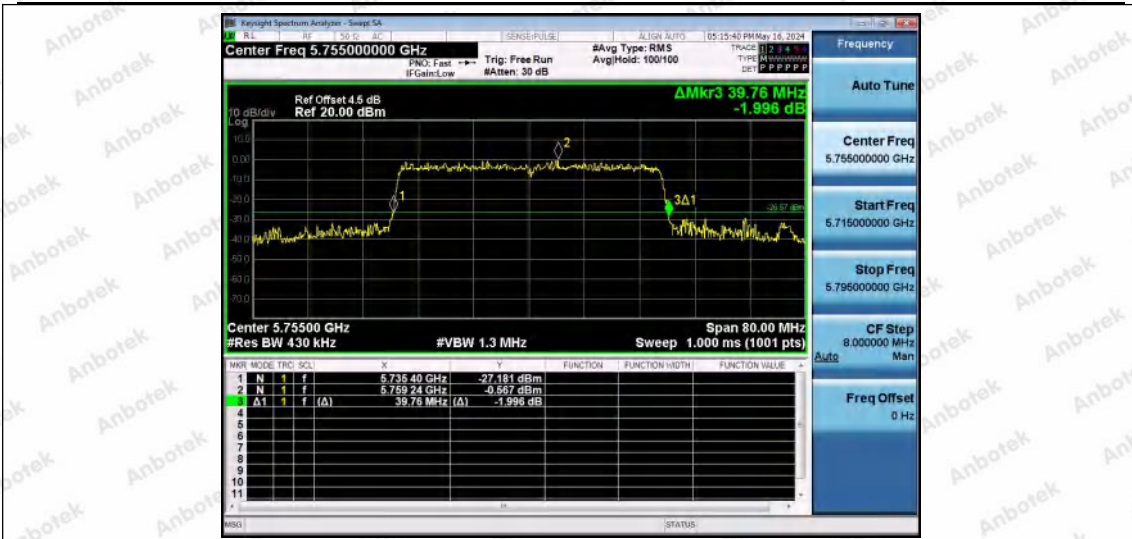

11AX40MIMO-Ant1-5755

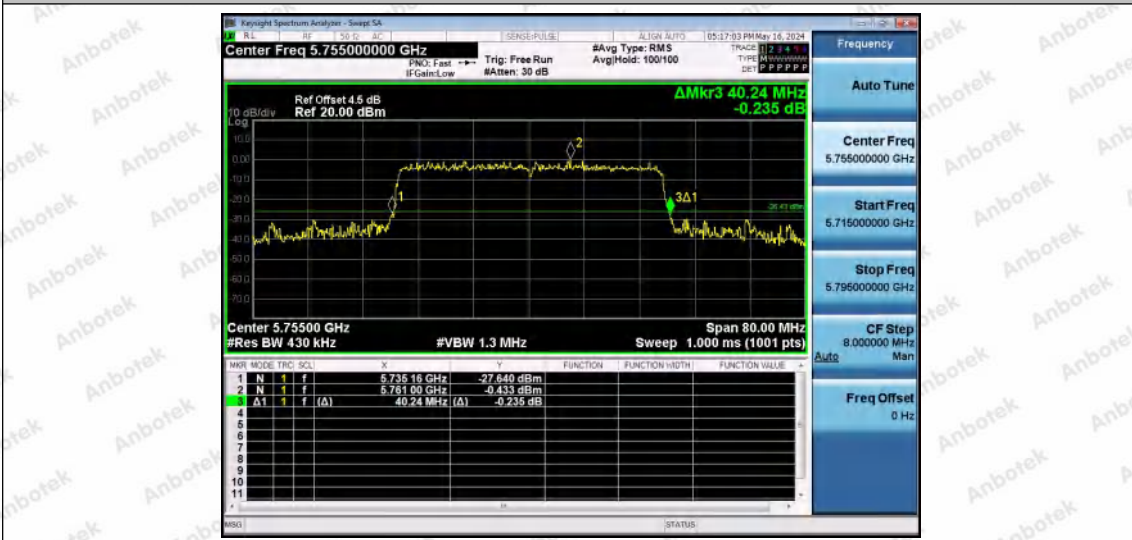

11AX40MIMO-Ant2-5755

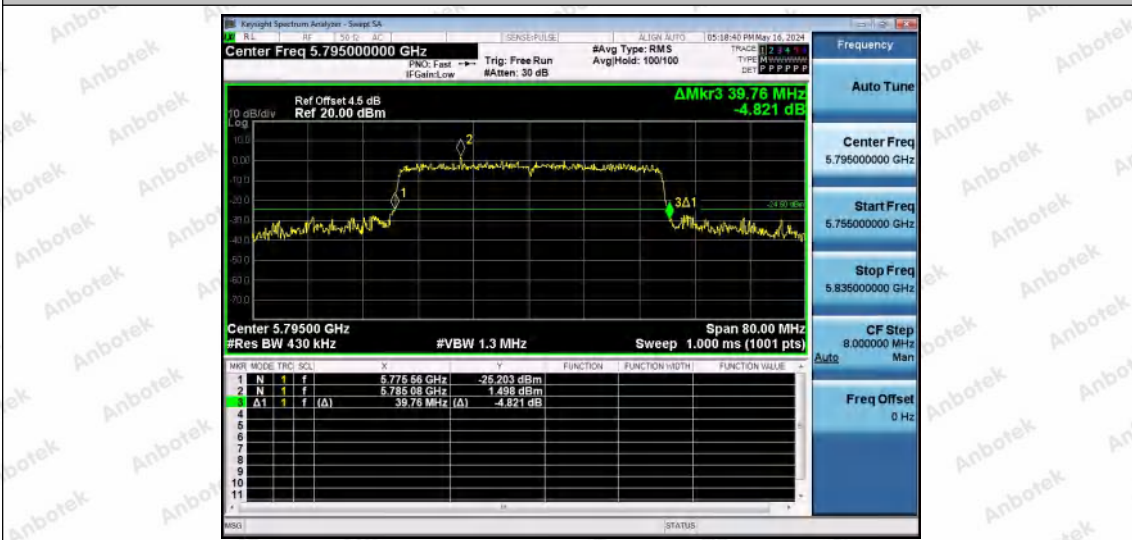

11AX40MIMO-Ant1-5795

Shenzhen Anbotek Compliance Laboratory Limited


Address: 1/F., Building D, Sogood Science and Technology Park, Sanwei Community, Hangcheng Street, Bao'an District, Shenzhen, Guangdong, China.
Tel: (86) 0755-26066440 Fax: (86) 0755-26014772 Email: service@anbotek.com

Hotline 400-003-0500
www.anbotek.com.cn





11AX40MIMO-Ant2-5795

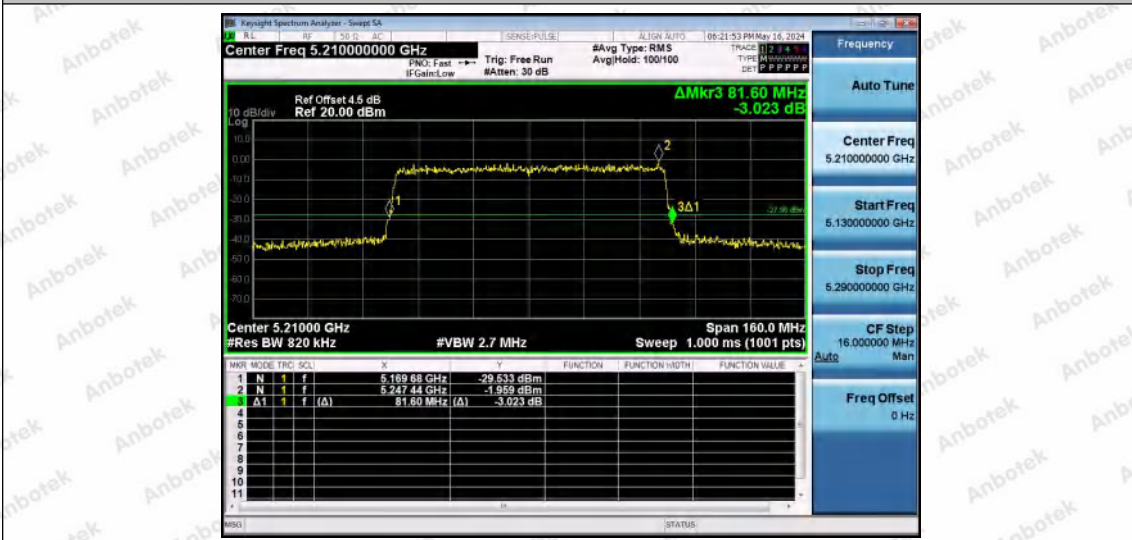

11AX80MIMO-Ant1-5210




11AX80MIMO-Ant2-5210

Shenzhen Anbotek Compliance Laboratory Limited


Address: 1/F., Building D, Sogood Science and Technology Park, Sanwei Community, Hangcheng Street, Bao'an District, Shenzhen, Guangdong, China.
Tel: (86) 0755-26066440 Fax: (86) 0755-26014772 Email: service@anbotek.com

Hotline 400-003-0500
www.anbotek.com.cn




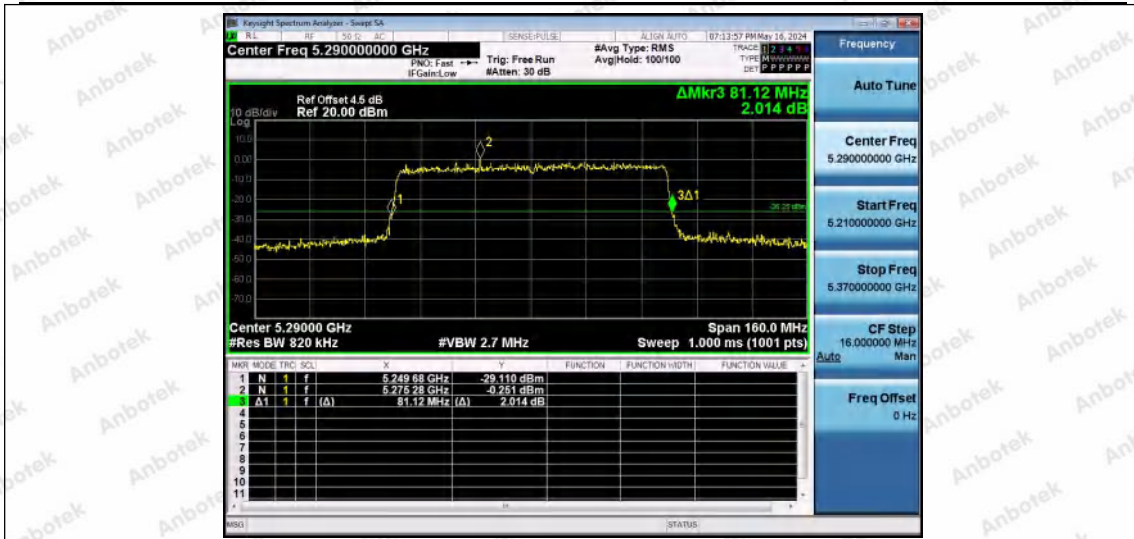

11AX80MIMO-Ant1-5290

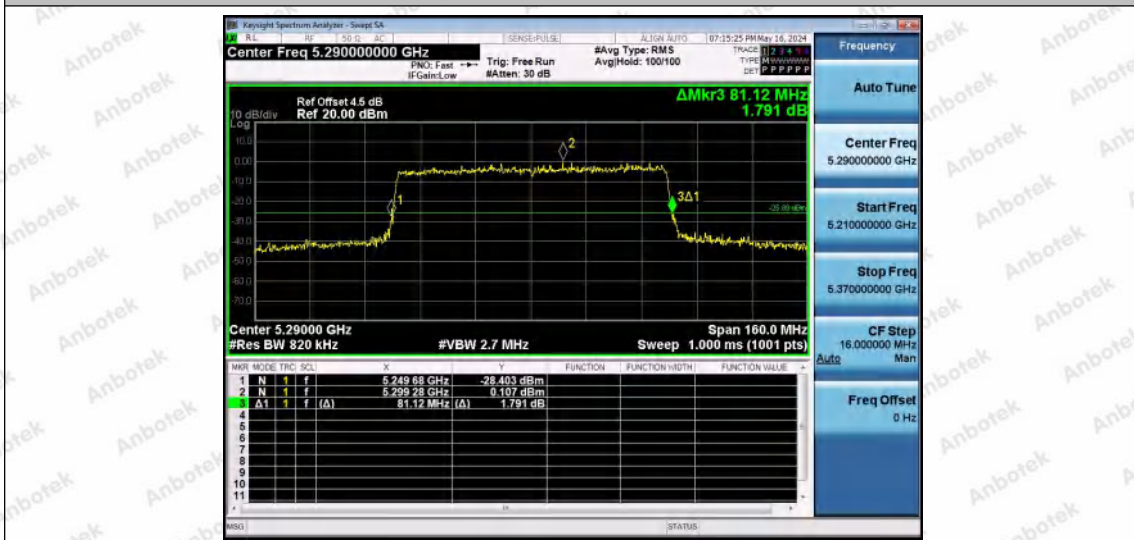

11AX80MIMO-Ant2-5290

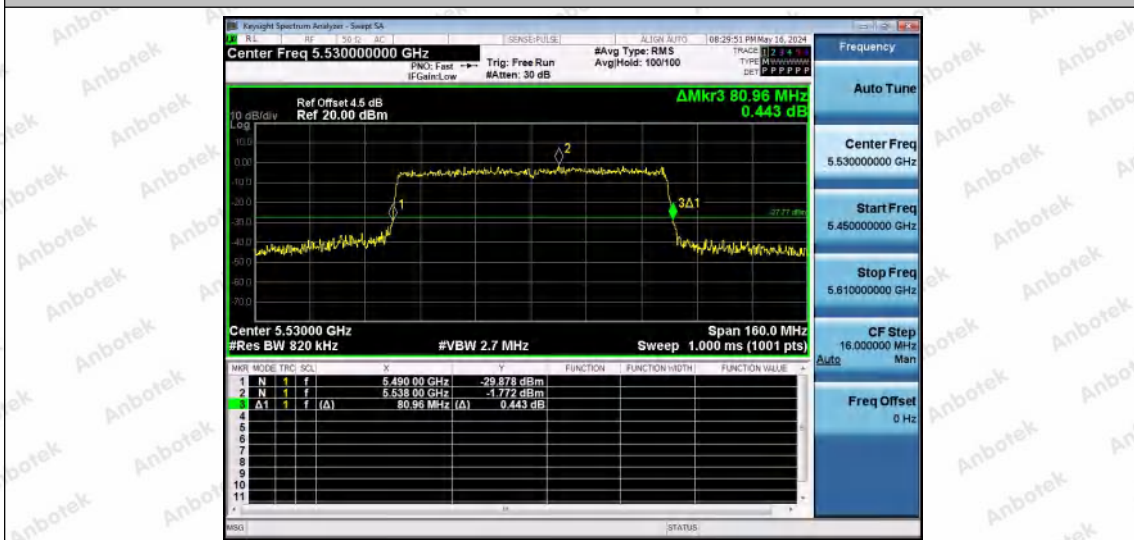


11AX80MIMO-Ant1-5530

Shenzhen Anbotek Compliance Laboratory Limited

Address: 1/F., Building D, Sogood Science and Technology Park, Sanwei Community, Hangcheng Street, Bao'an District, Shenzhen, Guangdong, China.
 Tel: (86) 0755-26066440 Fax: (86) 0755-26014772 Email: service@anbotek.com

Hotline 400-003-0500
 www.anbotek.com.cn




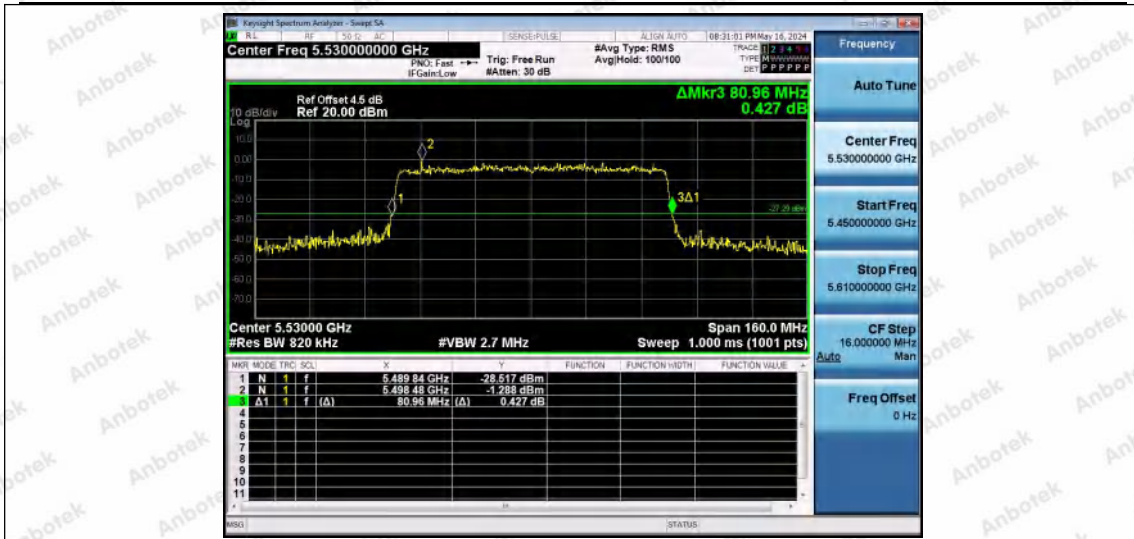

11AX80MIMO-Ant2-5530



11AX80MIMO-Ant1-5610

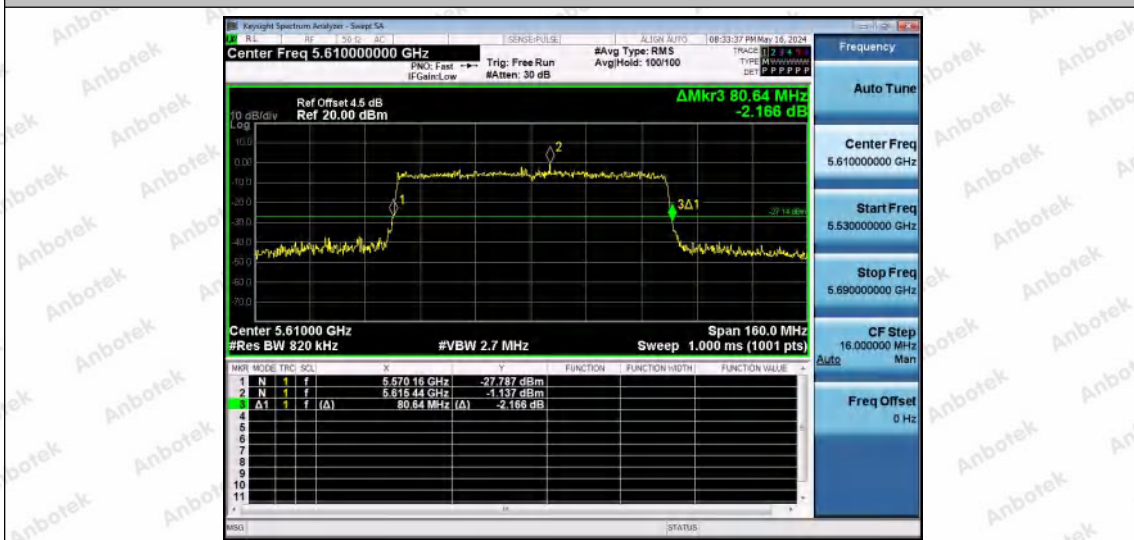

11AX80MIMO-Ant2-5610

Shenzhen Anbotek Compliance Laboratory Limited


Address: 1/F., Building D, Sogood Science and Technology Park, Sanwei Community, Hangcheng Street, Bao'an District, Shenzhen, Guangdong, China.
Tel: (86) 0755-26066440 Fax: (86) 0755-26014772 Email: service@anbotek.com

Hotline
400-003-0500
www.anbotek.com.cn





11AX80MIMO-Ant1-5775

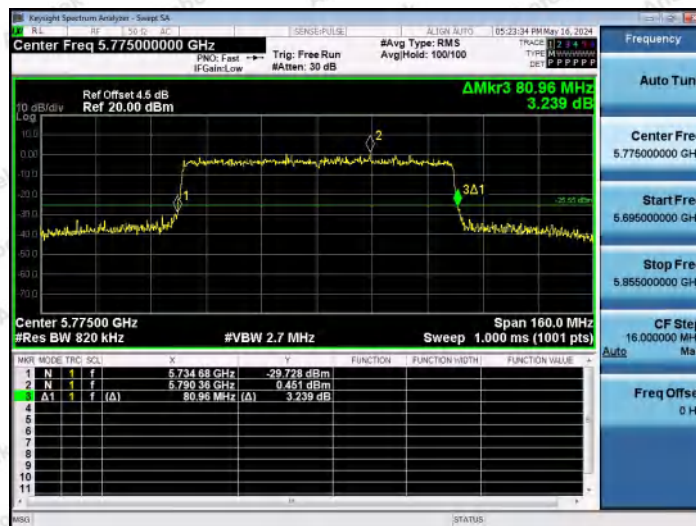

11AX80MIMO-Ant2-5775

Shenzhen Anbotek Compliance Laboratory Limited

Address: 1/F., Building D, Sogood Science and Technology Park, Sanwei Community, Hangcheng Street, Bao'an District, Shenzhen, Guangdong, China.
Tel: (86) 0755-26066440 Fax: (86) 0755-26014772 Email: service@anbotek.com

Hotline 400-003-0500
www.anbotek.com.cn



Appendix A2: 99% Occupied Bandwidth

Test Result

TestMode	Antenna	Frequency[MHz]	OCB [MHz]	FL[MHz]	FH[MHz]	Limit[MHz]	Verdict
11A	Ant1	5180	17.350	5171.4716	5188.8216	---	---
11A	Ant2	5180	17.333	5171.5083	5188.8413	---	---
11A	Ant1	5200	17.266	5191.5163	5208.7823	---	---
11A	Ant2	5200	17.362	5191.4740	5208.8360	---	---
11A	Ant1	5240	17.373	5231.5205	5248.8935	---	---
11A	Ant2	5240	17.366	5231.4740	5248.8400	---	---
11A	Ant1	5260	17.278	5251.5391	5268.8171	---	---
11A	Ant2	5260	17.297	5251.4696	5268.7666	---	---
11A	Ant1	5300	17.358	5291.5246	5308.8826	---	---
11A	Ant2	5300	17.304	5291.4749	5308.7789	---	---
11A	Ant1	5320	17.283	5311.5433	5328.8263	---	---
11A	Ant2	5320	17.348	5311.4350	5328.7830	---	---
11A	Ant1	5500	17.306	5491.5182	5508.8242	---	---
11A	Ant2	5500	17.261	5491.5411	5508.8021	---	---
11A	Ant1	5580	17.330	5571.4603	5588.7903	---	---
11A	Ant2	5580	17.360	5571.4775	5588.8375	---	---
11A	Ant1	5700	17.331	5691.4727	5708.8037	---	---
11A	Ant2	5700	17.302	5691.4695	5708.7715	---	---
11A	Ant1	5745	17.366	5736.4529	5753.8189	---	---
11A	Ant2	5745	17.354	5736.4995	5753.8535	---	---
11A	Ant1	5785	17.328	5776.5054	5793.8334	---	---
11A	Ant2	5785	17.339	5776.4692	5793.8082	---	---
11A	Ant1	5825	17.386	5816.4878	5833.8738	---	---
11A	Ant2	5825	17.373	5816.4838	5833.8568	---	---
11N20MIMO	Ant1	5180	18.346	5170.9981	5189.3441	---	---
11N20MIMO	Ant2	5180	18.405	5170.9720	5189.3770	---	---
11N20MIMO	Ant1	5200	18.328	5190.9925	5209.3205	---	---
11N20MIMO	Ant2	5200	18.292	5191.0359	5209.3279	---	---
11N20MIMO	Ant1	5240	18.292	5231.0290	5249.3210	---	---
11N20MIMO	Ant2	5240	18.306	5231.0149	5249.3209	---	---
11N20MIMO	Ant1	5260	18.272	5251.0281	5269.3001	---	---
11N20MIMO	Ant2	5260	18.361	5250.9960	5269.3570	---	---
11N20MIMO	Ant1	5300	18.421	5290.9635	5309.3845	---	---
11N20MIMO	Ant2	5300	18.272	5291.0329	5309.3049	---	---
11N20MIMO	Ant1	5320	18.291	5311.0052	5329.2962	---	---
11N20MIMO	Ant2	5320	18.349	5310.9909	5329.3399	---	---
11N20MIMO	Ant1	5500	18.304	5491.0131	5509.3171	---	---

Shenzhen Anbotek Compliance Laboratory Limited

Address: 1/F., Building D, Sogood Science and Technology Park, Sanwei Community, Hangcheng Street, Bao'an District, Shenzhen, Guangdong, China.
Tel: (86) 0755-26066440 Fax: (86) 0755-26014772 Email: service@anbotek.com



Hotline

400-003-0500

www.anbotek.com.cn



11N20MIMO	Ant2	5500	18.296	5491.0232	5509.3192	---	---
11N20MIMO	Ant1	5580	18.323	5570.9958	5589.3188	---	---
11N20MIMO	Ant2	5580	18.264	5571.0432	5589.3072	---	---
11N20MIMO	Ant1	5700	18.335	5690.9965	5709.3315	---	---
11N20MIMO	Ant2	5700	18.320	5690.9688	5709.2888	---	---
11N20MIMO	Ant1	5745	18.327	5735.9968	5754.3238	---	---
11N20MIMO	Ant2	5745	18.359	5736.0020	5754.3610	---	---
11N20MIMO	Ant1	5785	18.407	5775.9295	5794.3365	---	---
11N20MIMO	Ant2	5785	18.371	5776.0087	5794.3797	---	---
11N20MIMO	Ant1	5825	18.389	5815.9793	5834.3683	---	---
11N20MIMO	Ant2	5825	18.348	5815.9999	5834.3479	---	---
11N40MIMO	Ant1	5190	36.830	5171.8084	5208.6384	---	---
11N40MIMO	Ant2	5190	36.765	5171.8403	5208.6053	---	---
11N40MIMO	Ant1	5230	36.817	5211.8066	5248.6236	---	---
11N40MIMO	Ant2	5230	36.791	5211.8435	5248.6345	---	---
11N40MIMO	Ant1	5270	36.714	5251.8725	5288.5865	---	---
11N40MIMO	Ant2	5270	36.736	5251.8738	5288.6098	---	---
11N40MIMO	Ant1	5310	36.728	5291.8597	5328.5877	---	---
11N40MIMO	Ant2	5310	36.664	5291.9114	5328.5754	---	---
11N40MIMO	Ant1	5510	36.725	5491.8160	5528.5410	---	---
11N40MIMO	Ant2	5510	36.768	5491.8210	5528.5890	---	---
11N40MIMO	Ant1	5550	36.776	5531.8213	5568.5973	---	---
11N40MIMO	Ant2	5550	36.810	5531.7776	5568.5876	---	---
11N40MIMO	Ant1	5670	36.691	5651.8237	5688.5147	---	---
11N40MIMO	Ant2	5670	36.738	5651.7853	5688.5233	---	---
11N40MIMO	Ant1	5755	36.797	5736.7501	5773.5471	---	---
11N40MIMO	Ant2	5755	36.795	5736.7605	5773.5555	---	---
11N40MIMO	Ant1	5795	36.768	5776.7613	5813.5293	---	---
11N40MIMO	Ant2	5795	36.747	5776.8073	5813.5543	---	---
11AC20MIMO	Ant1	5180	18.348	5170.9796	5189.3276	---	---
11AC20MIMO	Ant2	5180	18.341	5171.0232	5189.3642	---	---
11AC20MIMO	Ant1	5200	18.317	5190.9914	5209.3084	---	---
11AC20MIMO	Ant2	5200	18.326	5190.9990	5209.3250	---	---
11AC20MIMO	Ant1	5240	18.333	5230.9891	5249.3221	---	---
11AC20MIMO	Ant2	5240	18.347	5230.9950	5249.3420	---	---
11AC20MIMO	Ant1	5260	18.344	5250.9692	5269.3132	---	---
11AC20MIMO	Ant2	5260	18.345	5250.9973	5269.3423	---	---
11AC20MIMO	Ant1	5300	18.278	5291.0484	5309.3264	---	---
11AC20MIMO	Ant2	5300	18.304	5291.0267	5309.3307	---	---
11AC20MIMO	Ant1	5320	18.307	5311.0238	5329.3308	---	---
11AC20MIMO	Ant2	5320	18.289	5311.0096	5329.2986	---	---
11AC20MIMO	Ant1	5500	18.353	5490.9774	5509.3304	---	---

Shenzhen Anbotek Compliance Laboratory Limited

Address: 1/F., Building D, Sogood Science and Technology Park, Sanwei Community, Hangcheng Street, Bao'an District, Shenzhen, Guangdong, China.
Tel: (86) 0755-26066440 Fax: (86) 0755-26014772 Email: service@anbotek.com

Hotline
400-003-0500
www.anbotek.com.cn



11AC20MIMO	Ant2	5500	18.318	5491.0016	5509.3196	---	---
11AC20MIMO	Ant1	5580	18.389	5570.9583	5589.3473	---	---
11AC20MIMO	Ant2	5580	18.364	5570.9597	5589.3237	---	---
11AC20MIMO	Ant1	5700	18.307	5690.9834	5709.2904	---	---
11AC20MIMO	Ant2	5700	18.321	5690.9635	5709.2845	---	---
11AC20MIMO	Ant1	5745	18.359	5735.9887	5754.3477	---	---
11AC20MIMO	Ant2	5745	18.325	5736.0040	5754.3290	---	---
11AC20MIMO	Ant1	5785	18.316	5775.9952	5794.3112	---	---
11AC20MIMO	Ant2	5785	18.317	5776.0140	5794.3310	---	---
11AC20MIMO	Ant1	5825	18.365	5815.9870	5834.3520	---	---
11AC20MIMO	Ant2	5825	18.370	5815.9704	5834.3404	---	---
11AC40MIMO	Ant1	5190	36.757	5171.8760	5208.6330	---	---
11AC40MIMO	Ant2	5190	36.693	5171.8875	5208.5805	---	---
11AC40MIMO	Ant1	5230	36.703	5211.8613	5248.5643	---	---
11AC40MIMO	Ant2	5230	36.674	5211.8905	5248.5645	---	---
11AC40MIMO	Ant1	5270	36.708	5251.8610	5288.5690	---	---
11AC40MIMO	Ant2	5270	36.703	5251.9273	5288.6303	---	---
11AC40MIMO	Ant1	5310	36.638	5291.9155	5328.5535	---	---
11AC40MIMO	Ant2	5310	36.719	5291.8906	5328.6096	---	---
11AC40MIMO	Ant1	5510	36.766	5491.8361	5528.6021	---	---
11AC40MIMO	Ant2	5510	36.767	5491.8515	5528.6185	---	---
11AC40MIMO	Ant1	5550	36.731	5531.8305	5568.5615	---	---
11AC40MIMO	Ant2	5550	36.716	5531.8335	5568.5495	---	---
11AC40MIMO	Ant1	5670	36.756	5651.8125	5688.5685	---	---
11AC40MIMO	Ant2	5670	36.728	5651.8179	5688.5459	---	---
11AC40MIMO	Ant1	5755	36.767	5736.8308	5773.5978	---	---
11AC40MIMO	Ant2	5755	36.804	5736.7928	5773.5968	---	---
11AC40MIMO	Ant1	5795	36.748	5776.7837	5813.5317	---	---
11AC40MIMO	Ant2	5795	36.763	5776.8433	5813.6063	---	---
11AC80MIMO	Ant1	5210	76.035	5172.4281	5248.4631	---	---
11AC80MIMO	Ant2	5210	76.067	5172.3845	5248.4515	---	---
11AC80MIMO	Ant1	5290	76.010	5252.5224	5328.5324	---	---
11AC80MIMO	Ant2	5290	76.065	5252.4986	5328.5636	---	---
11AC80MIMO	Ant1	5530	76.043	5492.3505	5568.3935	---	---
11AC80MIMO	Ant2	5530	75.962	5492.3706	5568.3326	---	---
11AC80MIMO	Ant1	5610	76.075	5572.2485	5648.3235	---	---
11AC80MIMO	Ant2	5610	76.025	5572.2816	5648.3066	---	---
11AC80MIMO	Ant1	5775	76.094	5737.2065	5813.3005	---	---
11AC80MIMO	Ant2	5775	76.257	5737.1431	5813.4001	---	---
11AX20MIMO	Ant1	5180	19.023	5170.6534	5189.6764	---	---
11AX20MIMO	Ant2	5180	19.077	5170.6436	5189.7206	---	---
11AX20MIMO	Ant1	5200	19.045	5190.6251	5209.6701	---	---

Shenzhen Anbotek Compliance Laboratory Limited

Address: 1/F., Building D, Sogood Science and Technology Park, Sanwei Community, Hangcheng Street, Bao'an District, Shenzhen, Guangdong, China.
Tel: (86) 0755-26066440 Fax: (86) 0755-26014772 Email: service@anbotek.com



Hotline
400-003-0500
www.anbotek.com.cn



11AX20MIMO	Ant2	5200	19.059	5190.6638	5209.7228	---	---
11AX20MIMO	Ant1	5240	19.021	5230.6415	5249.6625	---	---
11AX20MIMO	Ant2	5240	19.047	5230.6363	5249.6833	---	---
11AX20MIMO	Ant1	5260	19.006	5250.6615	5269.6675	---	---
11AX20MIMO	Ant2	5260	18.994	5250.6594	5269.6534	---	---
11AX20MIMO	Ant1	5300	19.015	5290.7008	5309.7158	---	---
11AX20MIMO	Ant2	5300	19.043	5290.6593	5309.7023	---	---
11AX20MIMO	Ant1	5320	19.007	5310.6732	5329.6802	---	---
11AX20MIMO	Ant2	5320	19.027	5310.6551	5329.6821	---	---
11AX20MIMO	Ant1	5500	19.072	5490.6355	5509.7075	---	---
11AX20MIMO	Ant2	5500	18.972	5490.6837	5509.6557	---	---
11AX20MIMO	Ant1	5580	19.088	5570.6260	5589.7140	---	---
11AX20MIMO	Ant2	5580	18.993	5570.6793	5589.6723	---	---
11AX20MIMO	Ant1	5700	19.027	5690.6380	5709.6650	---	---
11AX20MIMO	Ant2	5700	19.044	5690.6691	5709.7131	---	---
11AX20MIMO	Ant1	5745	19.019	5735.6770	5754.6960	---	---
11AX20MIMO	Ant2	5745	19.041	5735.6567	5754.6977	---	---
11AX20MIMO	Ant1	5785	19.068	5775.6291	5794.6971	---	---
11AX20MIMO	Ant2	5785	19.020	5775.6666	5794.6866	---	---
11AX20MIMO	Ant1	5825	19.038	5815.6239	5834.6619	---	---
11AX20MIMO	Ant2	5825	19.049	5815.6349	5834.6839	---	---
11AX40MIMO	Ant1	5190	37.703	5171.4321	5209.1351	---	---
11AX40MIMO	Ant2	5190	37.788	5171.3578	5209.1458	---	---
11AX40MIMO	Ant1	5230	37.713	5211.3774	5249.0904	---	---
11AX40MIMO	Ant2	5230	37.699	5211.4188	5249.1178	---	---
11AX40MIMO	Ant1	5270	37.714	5251.4260	5289.1400	---	---
11AX40MIMO	Ant2	5270	37.764	5251.3618	5289.1258	---	---
11AX40MIMO	Ant1	5310	37.767	5291.3415	5329.1085	---	---
11AX40MIMO	Ant2	5310	37.747	5291.3603	5329.1073	---	---
11AX40MIMO	Ant1	5510	37.685	5491.3940	5529.0790	---	---
11AX40MIMO	Ant2	5510	37.717	5491.3798	5529.0968	---	---
11AX40MIMO	Ant1	5550	37.732	5531.3766	5569.1086	---	---
11AX40MIMO	Ant2	5550	37.727	5531.3340	5569.0610	---	---
11AX40MIMO	Ant1	5670	37.769	5651.2972	5689.0662	---	---
11AX40MIMO	Ant2	5670	37.780	5651.3100	5689.0900	---	---
11AX40MIMO	Ant1	5755	37.807	5736.2808	5774.0878	---	---
11AX40MIMO	Ant2	5755	37.855	5736.2555	5774.1105	---	---
11AX40MIMO	Ant1	5795	37.744	5776.3224	5814.0664	---	---
11AX40MIMO	Ant2	5795	37.695	5776.3427	5814.0377	---	---
11AX80MIMO	Ant1	5210	77.477	5171.6785	5249.1555	---	---
11AX80MIMO	Ant2	5210	77.267	5171.7661	5249.0331	---	---
11AX80MIMO	Ant1	5290	77.409	5251.7531	5329.1621	---	---

Shenzhen Anbotek Compliance Laboratory Limited

Address: 1/F., Building D, Sogood Science and Technology Park, Sanwei Community, Hangcheng Street, Bao'an District, Shenzhen, Guangdong, China.
Tel: (86) 0755-26066440 Fax: (86) 0755-26014772 Email: service@anbotek.com

Hotline
400-003-0500
www.anbotek.com.cn



11AX80MIMO	Ant2	5290	77.385	5251.8345	5329.2195	---	---
11AX80MIMO	Ant1	5530	77.304	5491.6798	5568.9838	---	---
11AX80MIMO	Ant2	5530	77.209	5491.7220	5568.9310	---	---
11AX80MIMO	Ant1	5610	77.347	5571.5449	5648.8919	---	---
11AX80MIMO	Ant2	5610	77.363	5571.5932	5648.9562	---	---
11AX80MIMO	Ant1	5775	77.339	5736.5849	5813.9239	---	---
11AX80MIMO	Ant2	5775	77.346	5736.6043	5813.9503	---	---

Shenzhen Anbotek Compliance Laboratory Limited

Address: 1/F., Building D, Sogood Science and Technology Park, Sanwei Community, Hangcheng Street, Bao'an District, Shenzhen, Guangdong, China.
 Tel: (86) 0755-26066440 Fax: (86) 0755-26014772 Email: service@anbotek.com



Hotline
 400-003-0500
www.anbotek.com.cn

