




Test Graphs

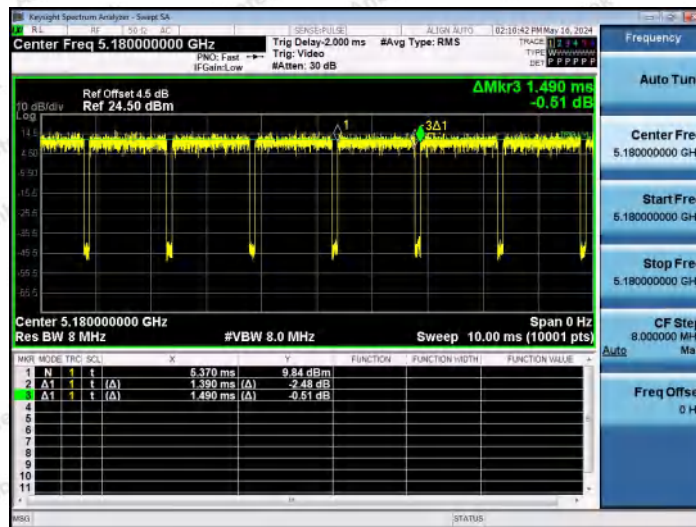

NTNV-11A-Ant1-5180

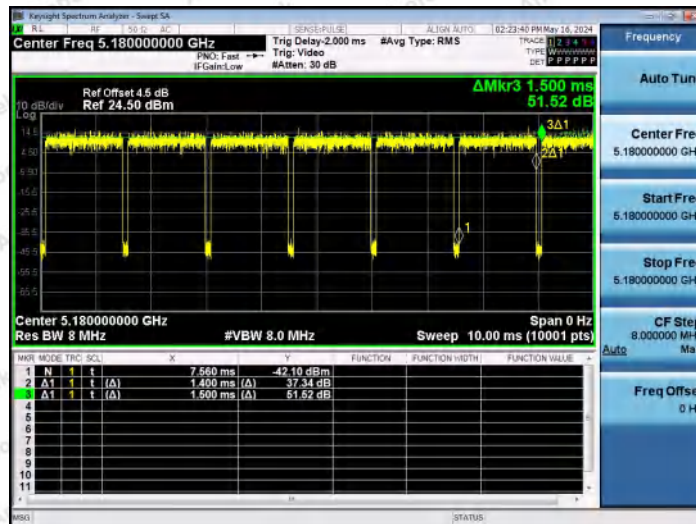

NTNV-11A-Ant2-5180

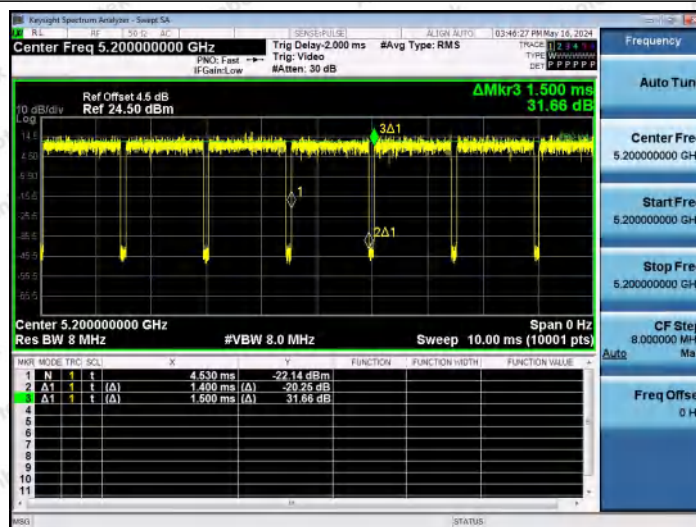


NTNV-11A-Ant1-5200

Shenzhen Anbotek Compliance Laboratory Limited


Address: 1/F., Building D, Sogood Science and Technology Park, Sanwei Community, Hangcheng Street, Bao'an District, Shenzhen, Guangdong, China.
 Tel: (86) 0755-26066440 Fax: (86) 0755-26014772 Email: service@anbotek.com

Hotline
 400-003-0500
www.anbotek.com.cn




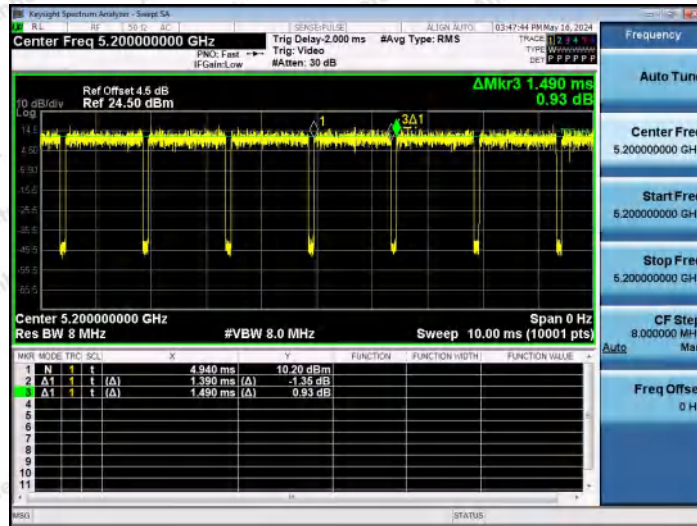

NTNV-11A-Ant2-5200

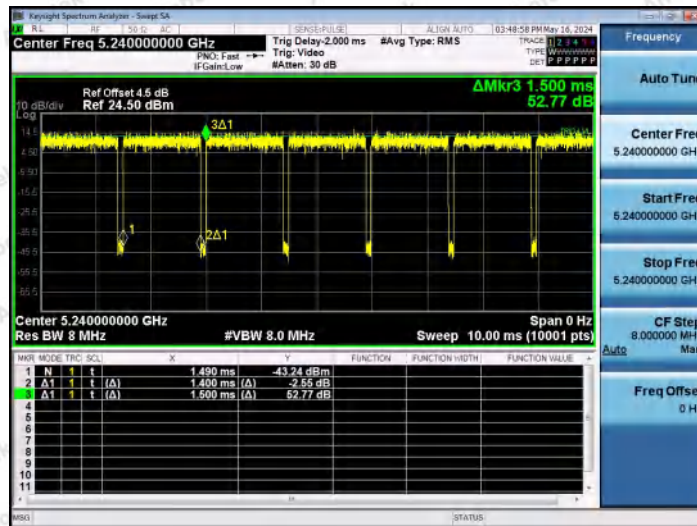

NTNV-11A-Ant1-5240

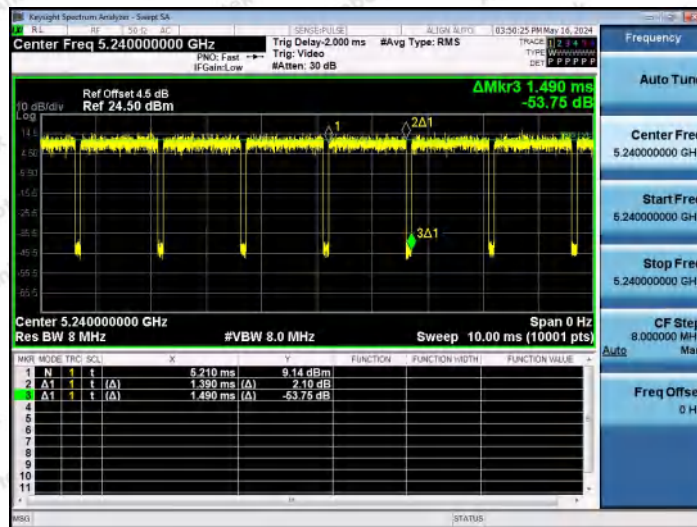


NTNV-11A-Ant2-5240

Shenzhen Anbotek Compliance Laboratory Limited


Address: 1/F., Building D, Sogood Science and Technology Park, Sanwei Community, Hangcheng Street, Bao'an District, Shenzhen, Guangdong, China.
 Tel: (86) 0755-26066440 Fax: (86) 0755-26014772 Email: service@anbotek.com

Hotline 400-003-0500
 www.anbotek.com.cn




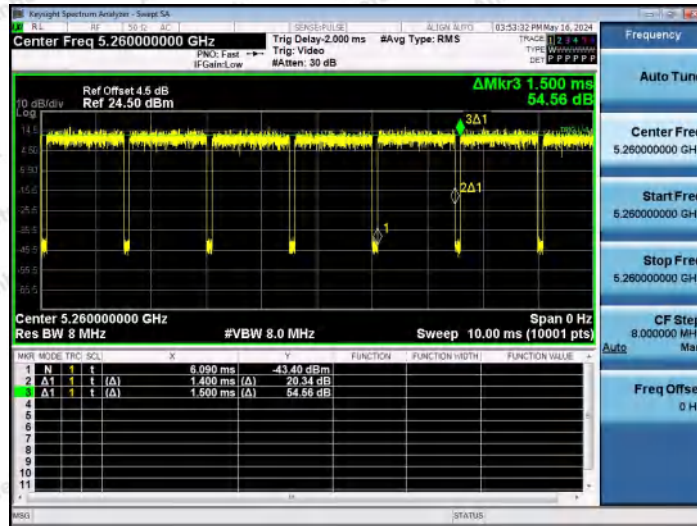

NTNV-11A-Ant1-5260

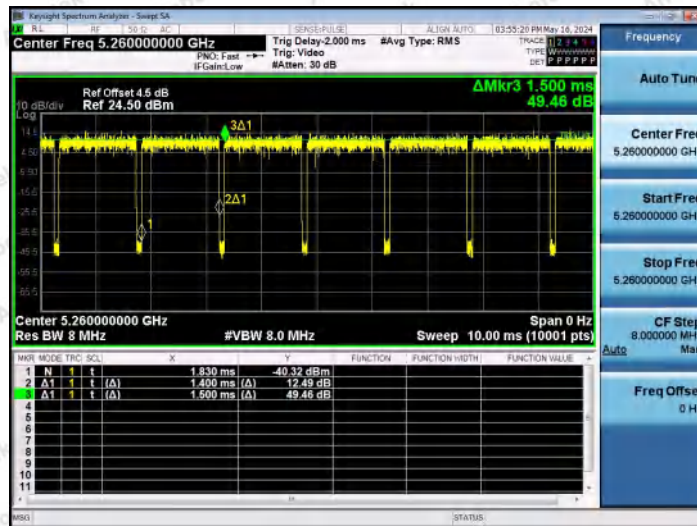

NTNV-11A-Ant2-5260

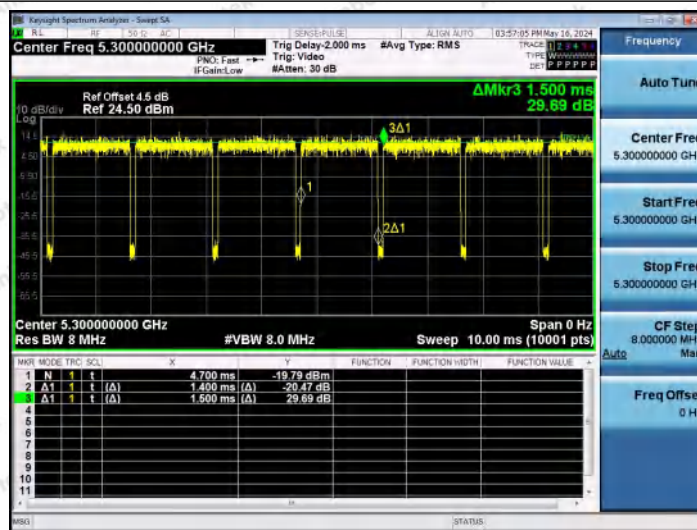


NTNV-11A-Ant1-5300

Shenzhen Anbotek Compliance Laboratory Limited


Address: 1/F., Building D, Sogood Science and Technology Park, Sanwei Community, Hangcheng Street, Bao'an District, Shenzhen, Guangdong, China.
 Tel: (86) 0755-26066440 Fax: (86) 0755-26014772 Email: service@anbotek.com

Hotline 400-003-0500
 www.anbotek.com.cn




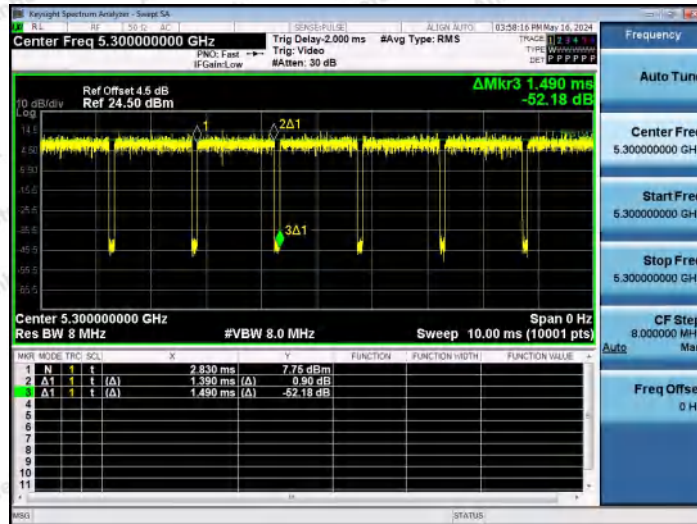

NTNV-11A-Ant2-5300

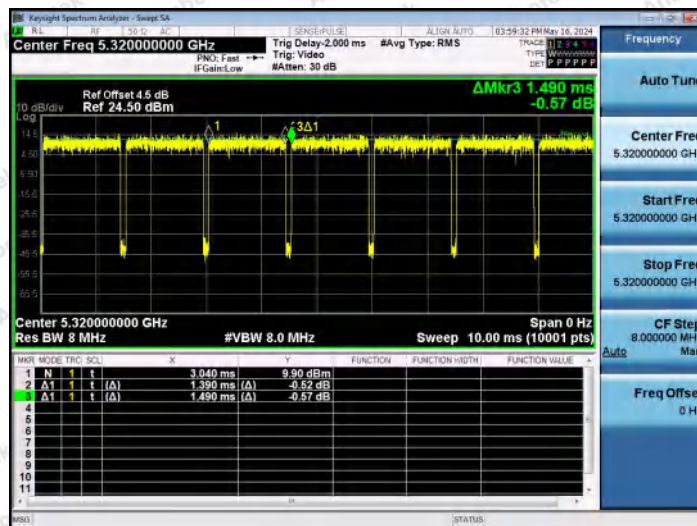

NTNV-11A-Ant1-5320

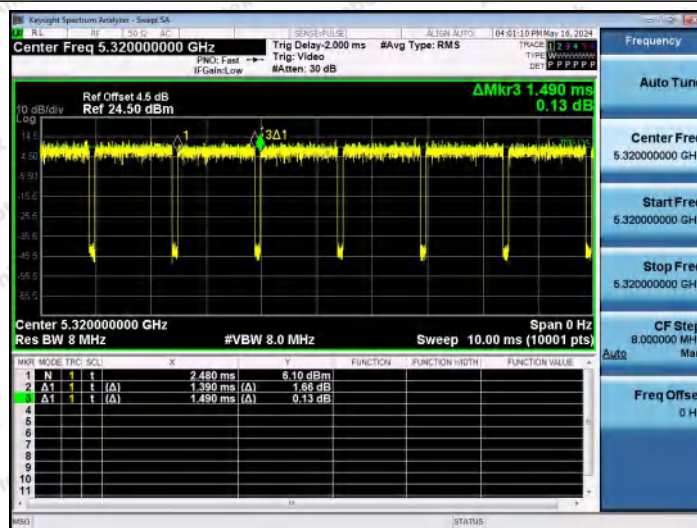


NTNV-11A-Ant2-5320

Shenzhen Anbotek Compliance Laboratory Limited


Address: 1/F., Building D, Sogood Science and Technology Park, Sanwei Community, Hangcheng Street, Bao'an District, Shenzhen, Guangdong, China.
Tel: (86) 0755-26066440 Fax: (86) 0755-26014772 Email: service@anbotek.com

Hotline 400-003-0500
www.anbotek.com.cn




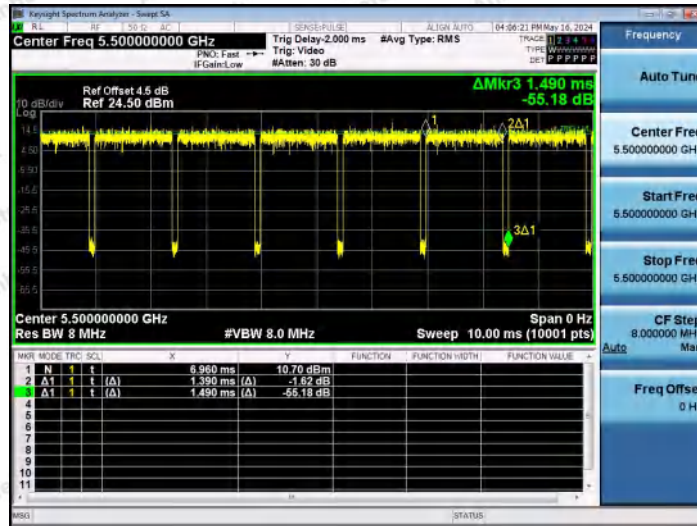

NTNV-11A-Ant1-5500

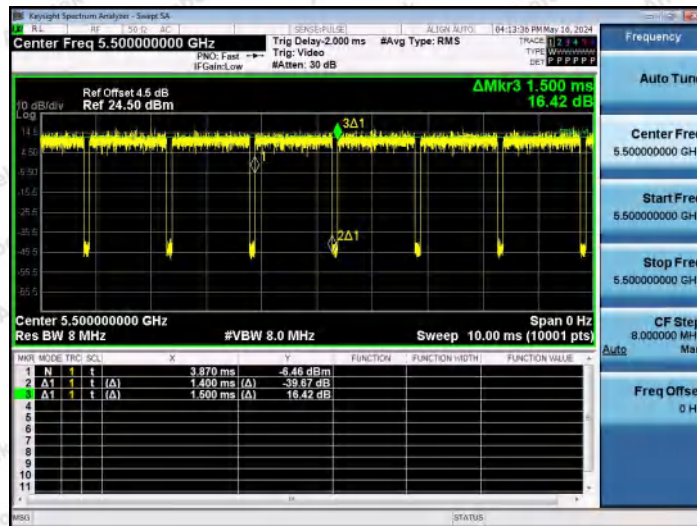

NTNV-11A-Ant2-5500

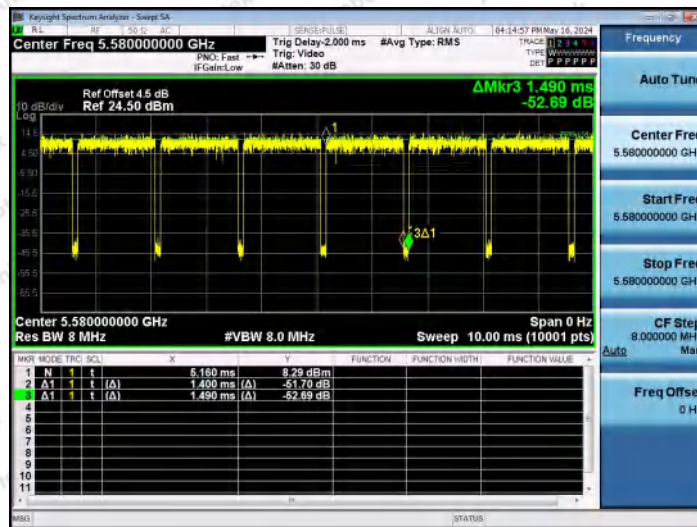


NTNV-11A-Ant1-5580

Shenzhen Anbotek Compliance Laboratory Limited


Address: 1/F., Building D, Sogood Science and Technology Park, Sanwei Community, Hangcheng Street, Bao'an District, Shenzhen, Guangdong, China.
 Tel: (86) 0755-26066440 Fax: (86) 0755-26014772 Email: service@anbotek.com

Hotline 400-003-0500
 www.anbotek.com.cn




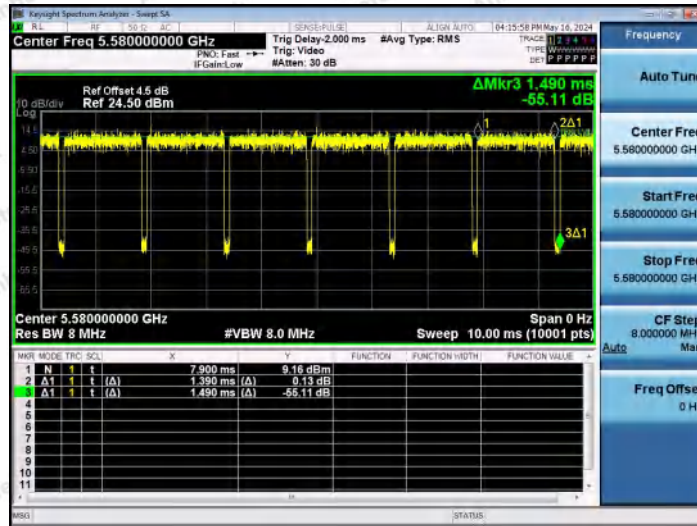

NTNV-11A-Ant2-5580

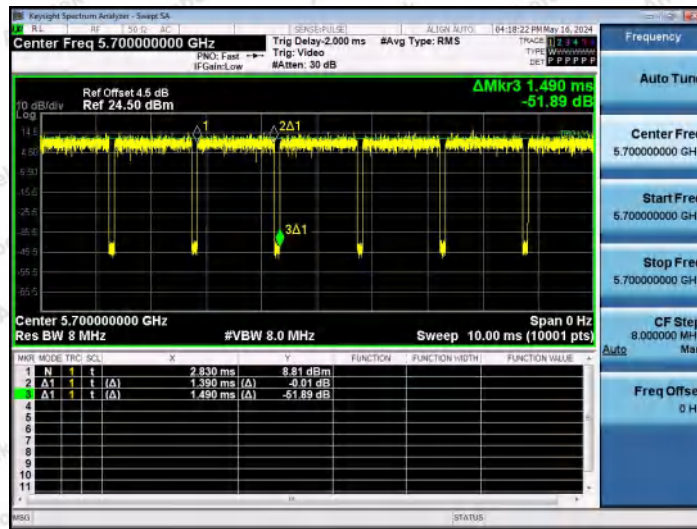

NTNV-11A-Ant1-5700

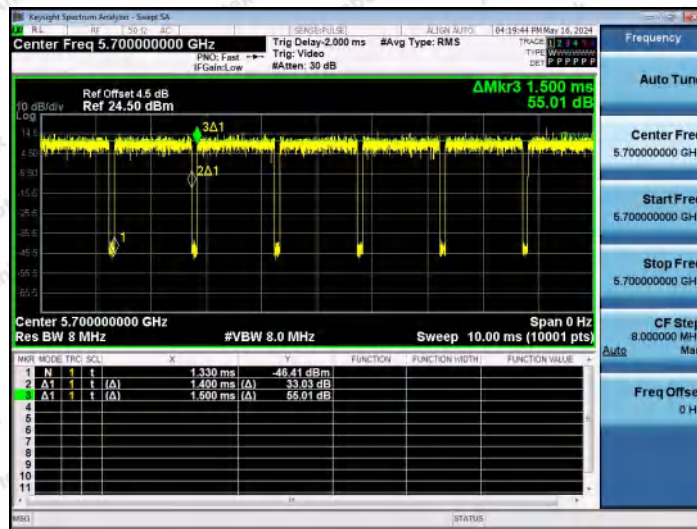


NTNV-11A-Ant2-5700

Shenzhen Anbotek Compliance Laboratory Limited


Address: 1/F., Building D, Sogood Science and Technology Park, Sanwei Community, Hangcheng Street, Bao'an District, Shenzhen, Guangdong, China.
 Tel: (86) 0755-26066440 Fax: (86) 0755-26014772 Email: service@anbotek.com

Hotline 400-003-0500
 www.anbotek.com.cn




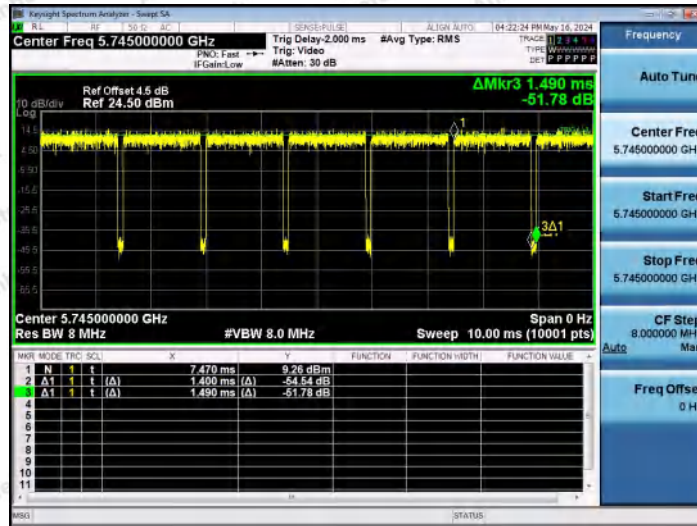

NTNV-11A-Ant1-5745

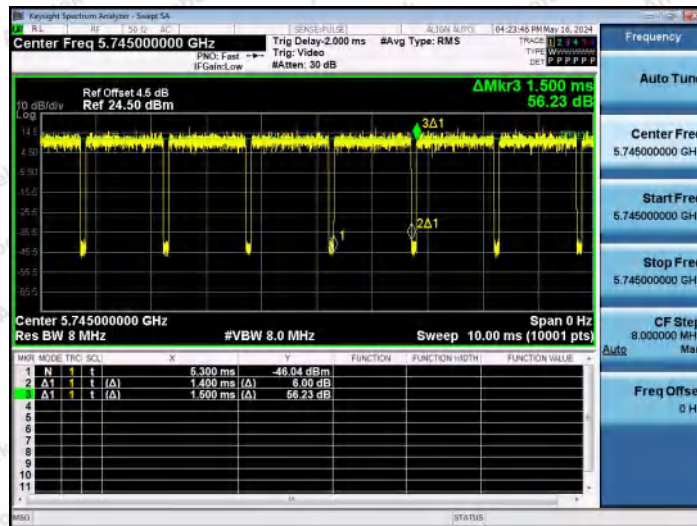

NTNV-11A-Ant2-5745

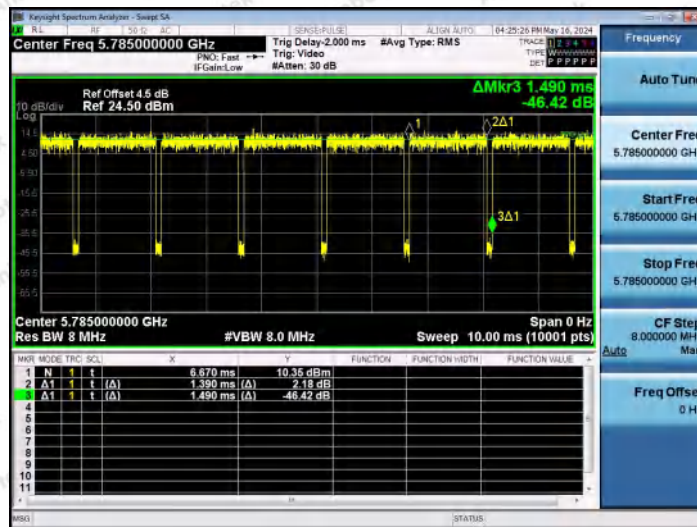


NTNV-11A-Ant1-5785

Shenzhen Anbotek Compliance Laboratory Limited


Address: 1/F., Building D, Sogood Science and Technology Park, Sanwei Community, Hangcheng Street, Bao'an District, Shenzhen, Guangdong, China.
 Tel: (86) 0755-26066440 Fax: (86) 0755-26014772 Email: service@anbotek.com

Hotline 400-003-0500
 www.anbotek.com.cn




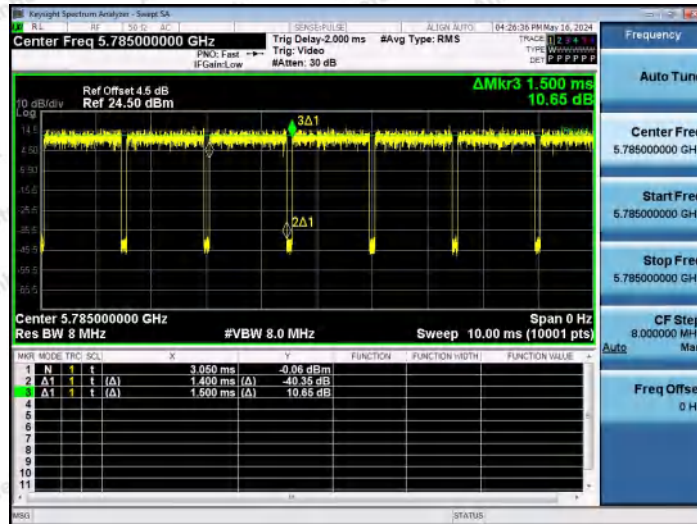

NTNV-11A-Ant2-5785

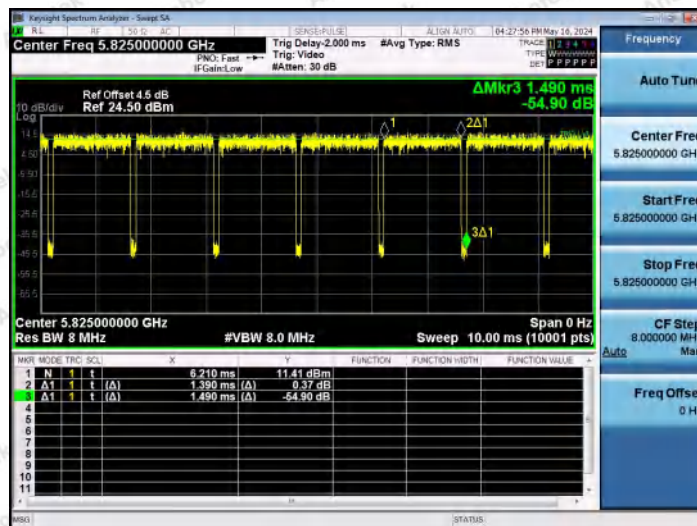

NTNV-11A-Ant1-5825

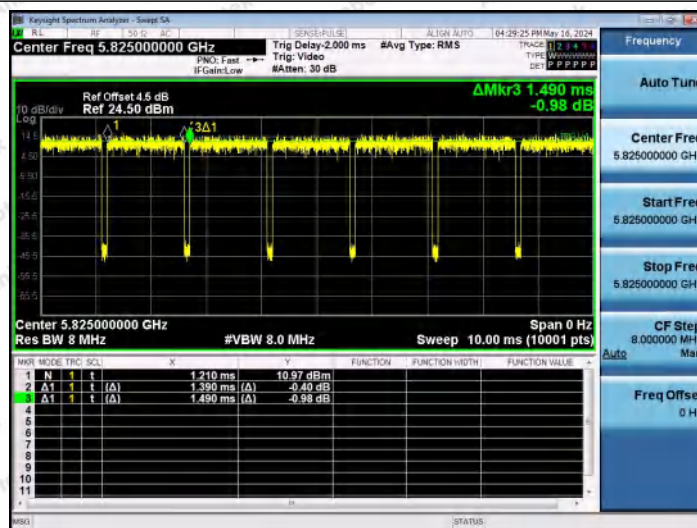


NTNV-11A-Ant2-5825

Shenzhen Anbotek Compliance Laboratory Limited


Address: 1/F., Building D, Sogood Science and Technology Park, Sanwei Community, Hangcheng Street, Bao'an District, Shenzhen, Guangdong, China.
 Tel: (86) 0755-26066440 Fax: (86) 0755-26014772 Email: service@anbotek.com

Hotline
 400-003-0500
 www.anbotek.com.cn




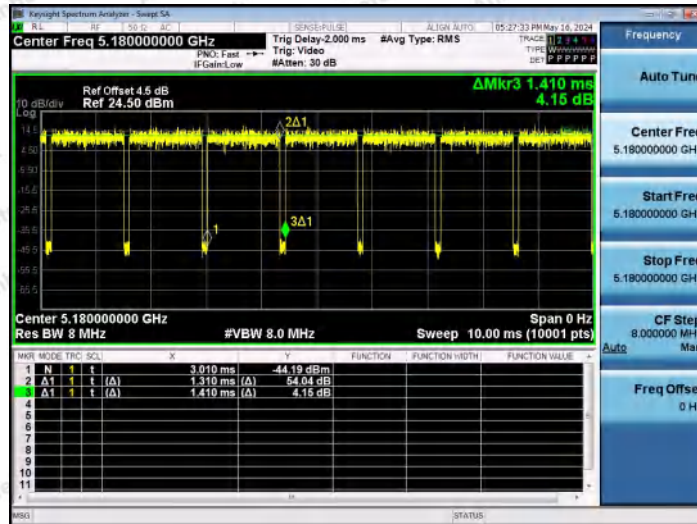

NTNV-11N20MIMO-Ant1-5180

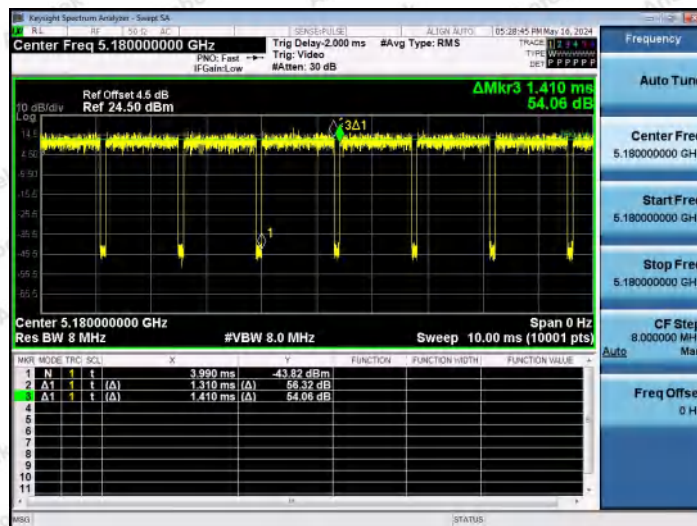

NTNV-11N20MIMO-Ant2-5180

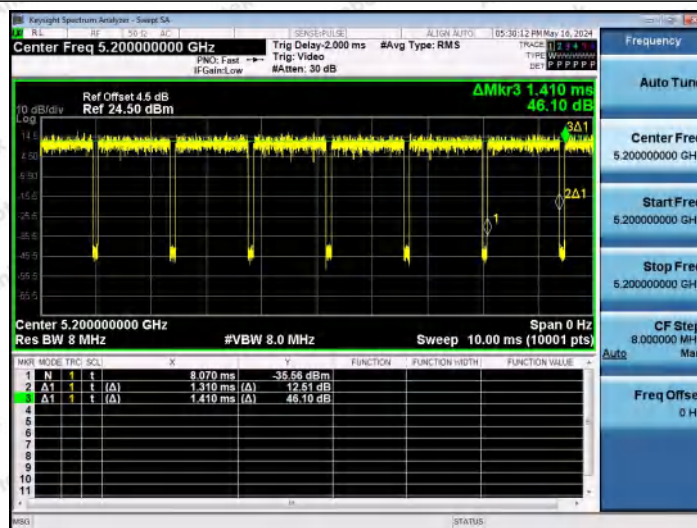


NTNV-11N20MIMO-Ant1-5200

Shenzhen Anbotek Compliance Laboratory Limited


Address: 1/F., Building D, Sogood Science and Technology Park, Sanwei Community, Hangcheng Street, Bao'an District, Shenzhen, Guangdong, China.
 Tel: (86) 0755-26066440 Fax: (86) 0755-26014772 Email: service@anbotek.com

Hotline 400-003-0500
 www.anbotek.com.cn




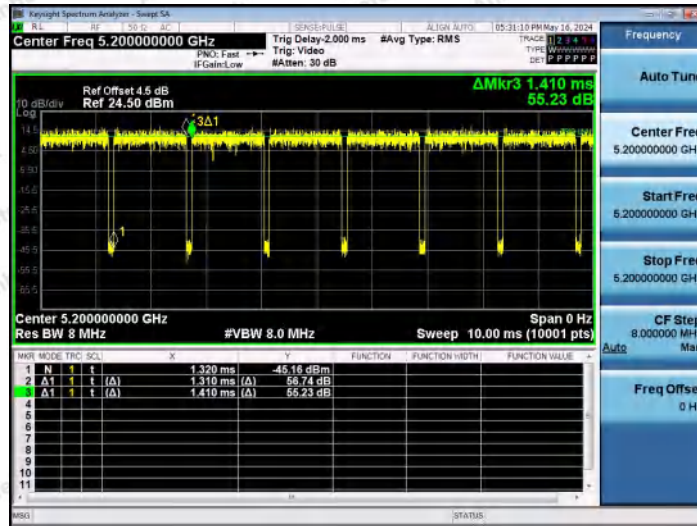

NTNV-11N20MIMO-Ant2-5200

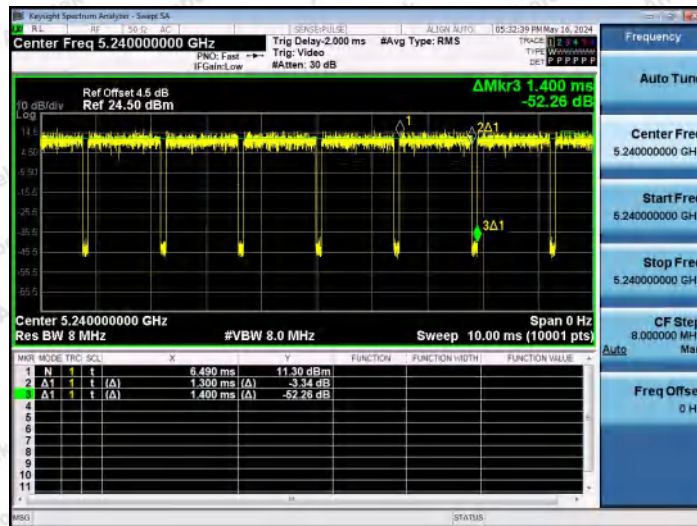

NTNV-11N20MIMO-Ant1-5240

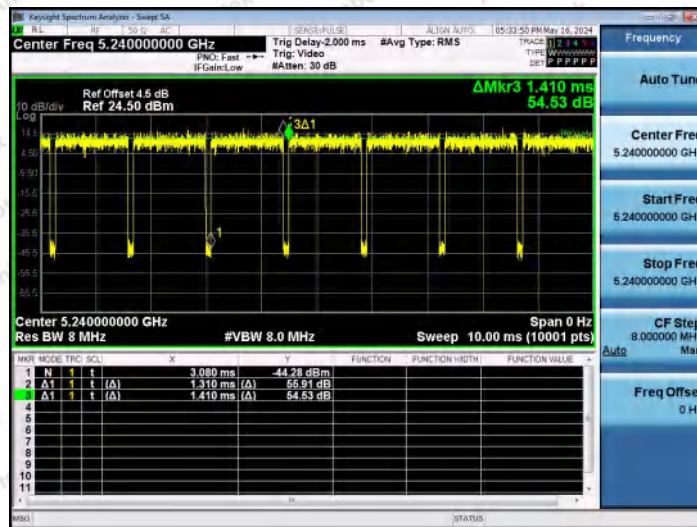


NTNV-11N20MIMO-Ant2-5240

Shenzhen Anbotek Compliance Laboratory Limited


Address: 1/F., Building D, Sogood Science and Technology Park, Sanwei Community, Hangcheng Street, Bao'an District, Shenzhen, Guangdong, China.
 Tel: (86) 0755-26066440 Fax: (86) 0755-26014772 Email: service@anbotek.com

Hotline 400-003-0500
 www.anbotek.com.cn




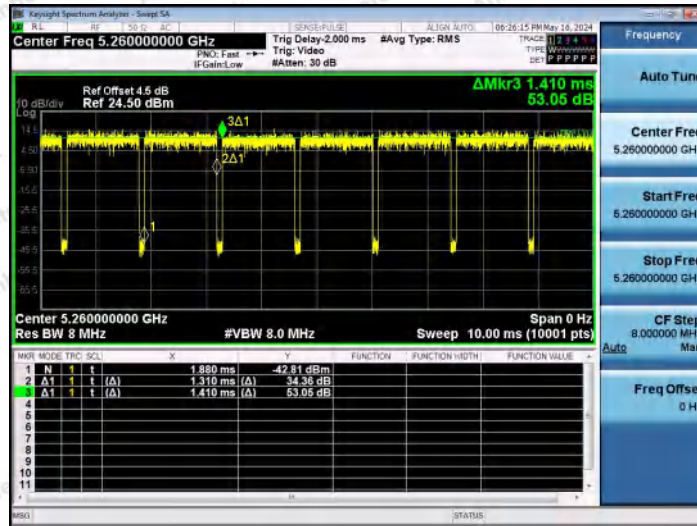

NTVN-11N20MIMO-Ant1-5260

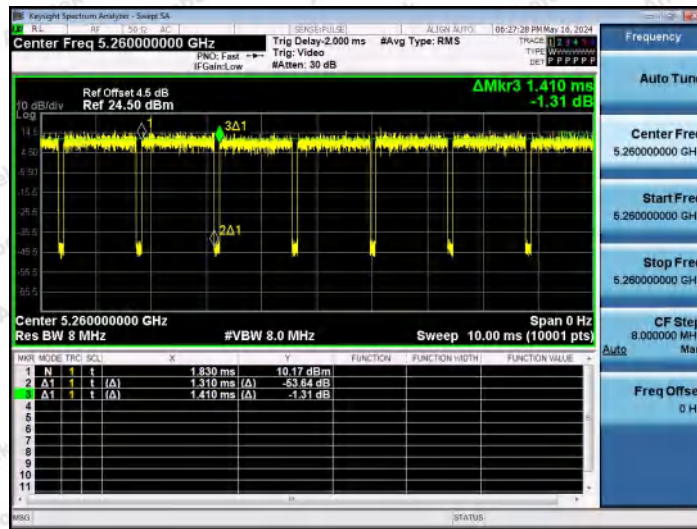

NTVN-11N20MIMO-Ant2-5260

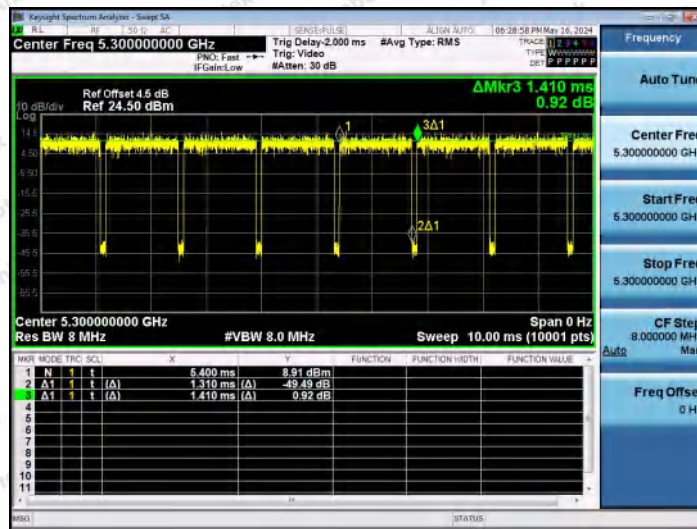


NTVN-11N20MIMO-Ant1-5300

Shenzhen Anbotek Compliance Laboratory Limited


Address: 1/F., Building D, Sogood Science and Technology Park, Sanwei Community, Hangcheng Street, Bao'an District, Shenzhen, Guangdong, China.
 Tel: (86) 0755-26066440 Fax: (86) 0755-26014772 Email: service@anbotek.com

Hotline 400-003-0500
 www.anbotek.com.cn




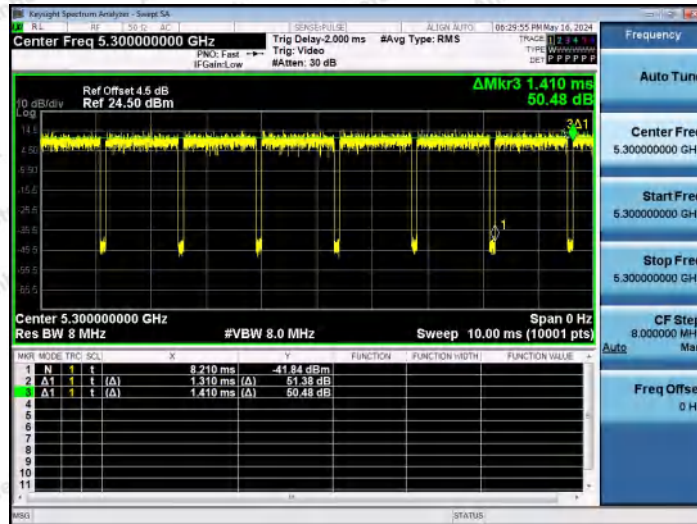

NTVN-11N20MIMO-Ant2-5300

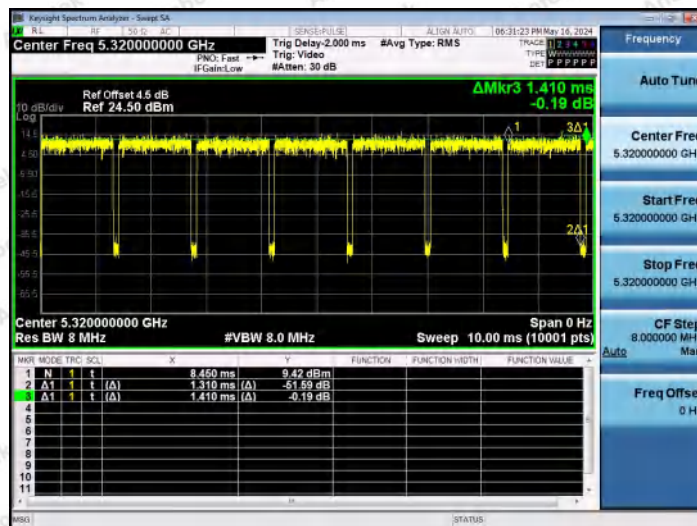

NTVN-11N20MIMO-Ant1-5320

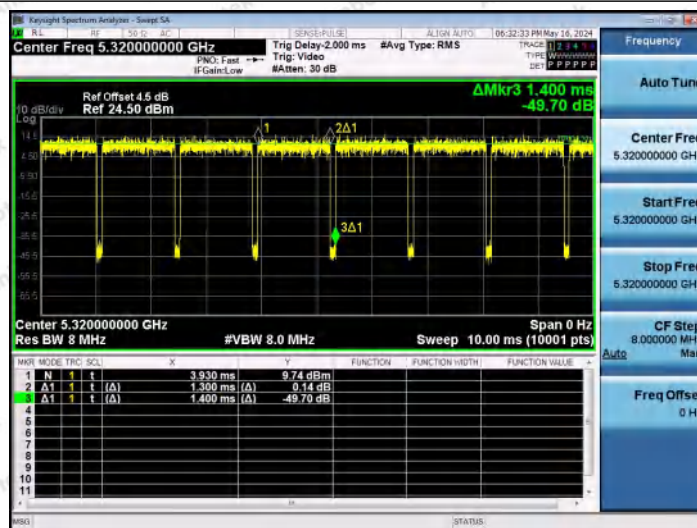


NTVN-11N20MIMO-Ant2-5320

Shenzhen Anbotek Compliance Laboratory Limited


Address: 1/F., Building D, Sogood Science and Technology Park, Sanwei Community, Hangcheng Street, Bao'an District, Shenzhen, Guangdong, China.
 Tel: (86) 0755-26066440 Fax: (86) 0755-26014772 Email: service@anbotek.com

Hotline 400-003-0500
 www.anbotek.com.cn




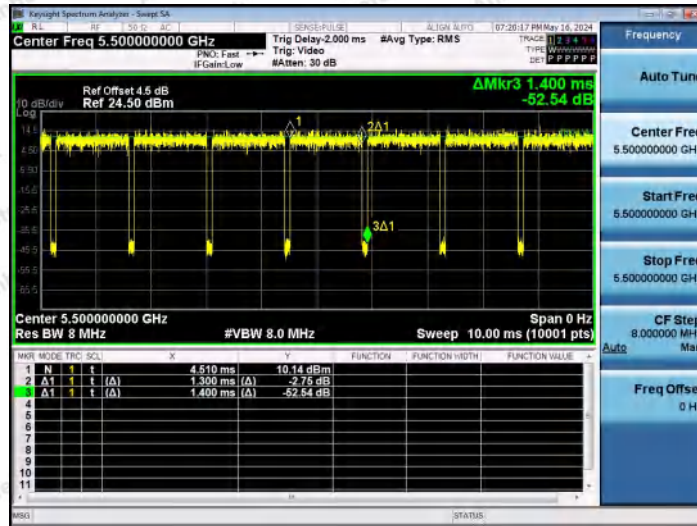

NTNV-11N20MIMO-Ant1-5500

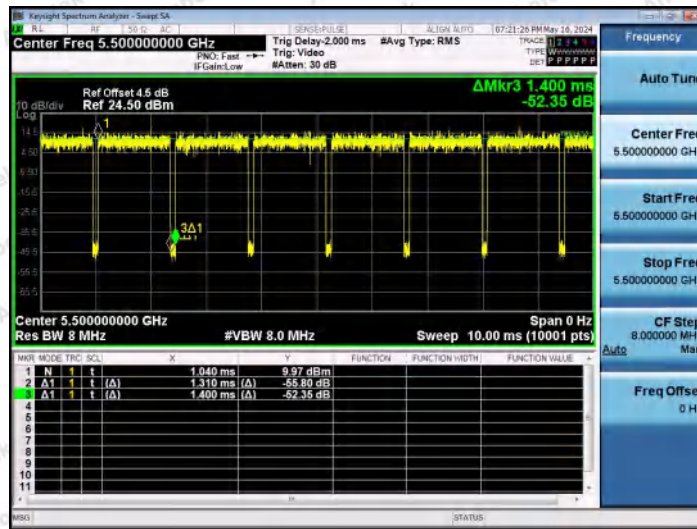

NTNV-11N20MIMO-Ant2-5500

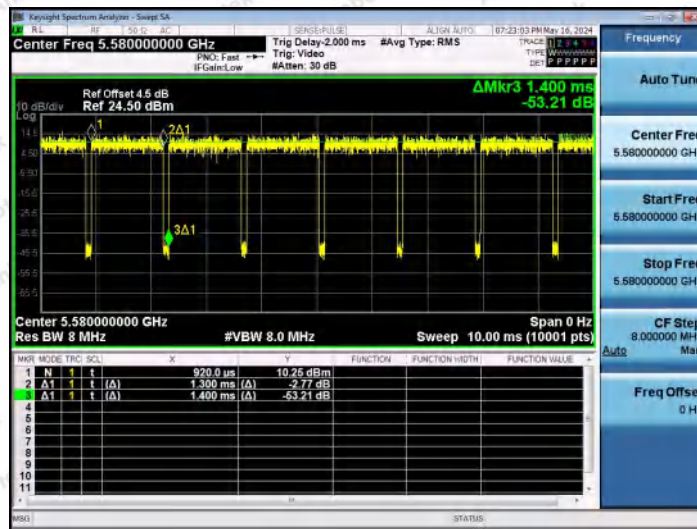


NTNV-11N20MIMO-Ant1-5580

Shenzhen Anbotek Compliance Laboratory Limited


Address: 1/F., Building D, Sogood Science and Technology Park, Sanwei Community, Hangcheng Street, Bao'an District, Shenzhen, Guangdong, China.
 Tel: (86) 0755-26066440 Fax: (86) 0755-26014772 Email: service@anbotek.com

Hotline 400-003-0500
 www.anbotek.com.cn




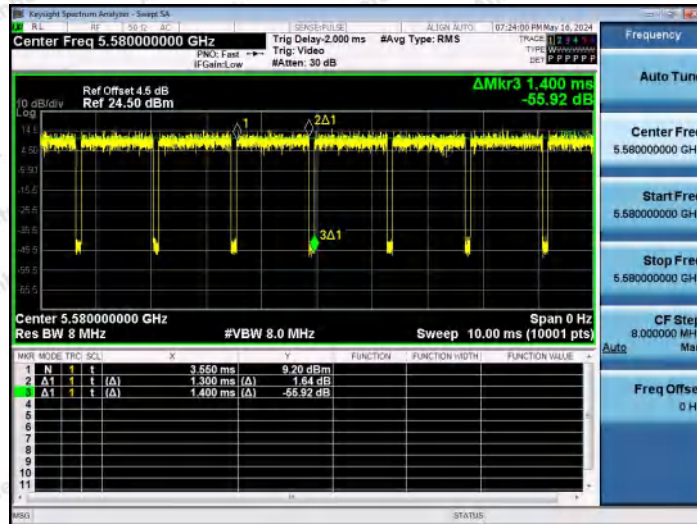

NTVN-11N20MIMO-Ant2-5580

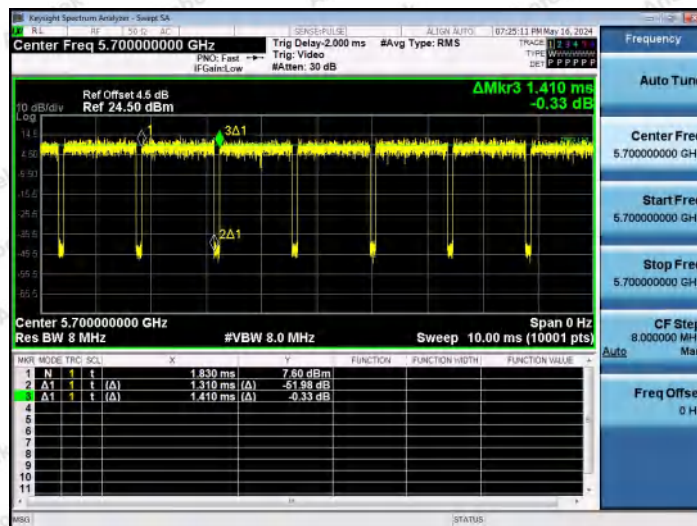

NTVN-11N20MIMO-Ant1-5700

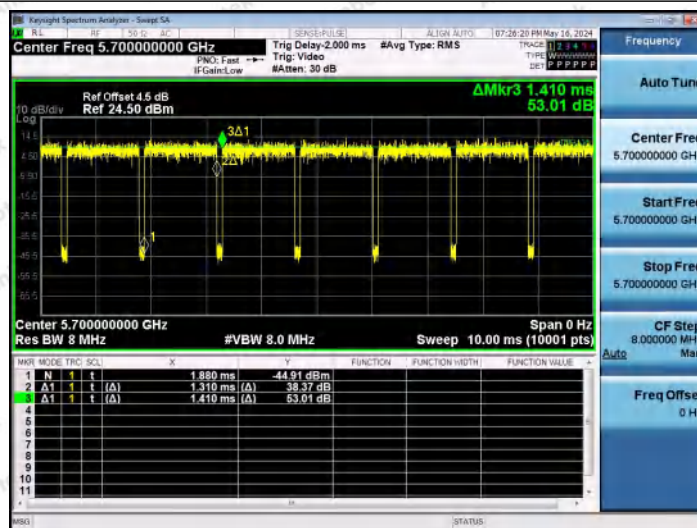


NTVN-11N20MIMO-Ant2-5700

Shenzhen Anbotek Compliance Laboratory Limited


Address: 1/F., Building D, Sogood Science and Technology Park, Sanwei Community, Hangcheng Street, Bao'an District, Shenzhen, Guangdong, China.
 Tel: (86) 0755-26066440 Fax: (86) 0755-26014772 Email: service@anbotek.com

Hotline 400-003-0500
 www.anbotek.com.cn




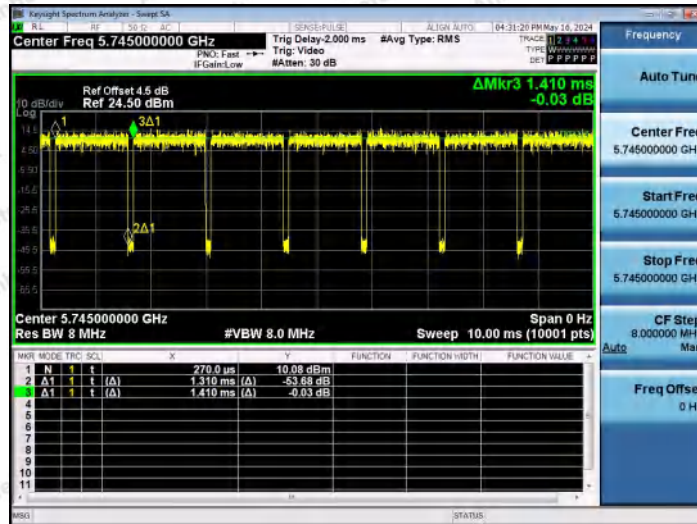

NTVN-11N20MIMO-Ant1-5745

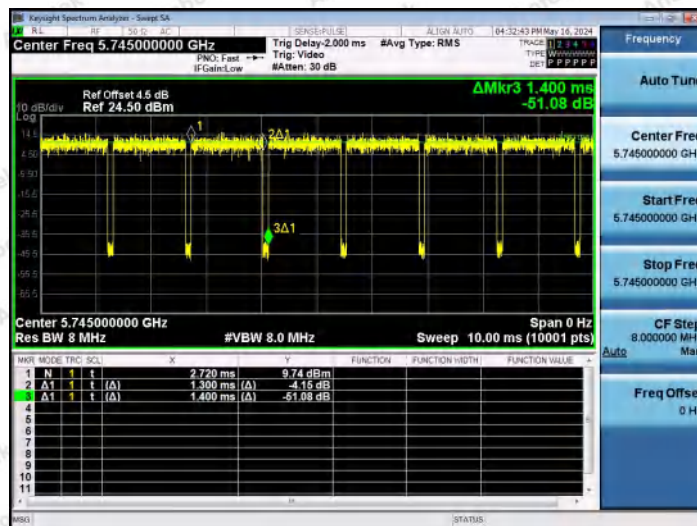

NTVN-11N20MIMO-Ant2-5745

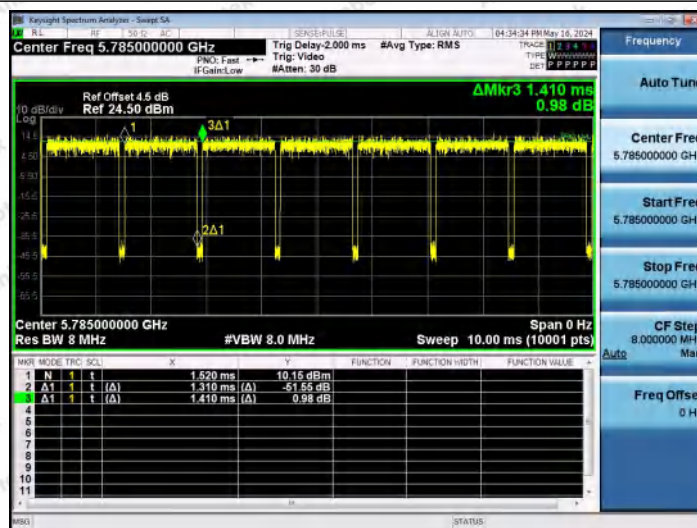


NTVN-11N20MIMO-Ant1-5785

Shenzhen Anbotek Compliance Laboratory Limited


Address: 1/F., Building D, Sogood Science and Technology Park, Sanwei Community, Hangcheng Street, Bao'an District, Shenzhen, Guangdong, China.
 Tel: (86) 0755-26066440 Fax: (86) 0755-26014772 Email: service@anbotek.com

Hotline 400-003-0500
 www.anbotek.com.cn




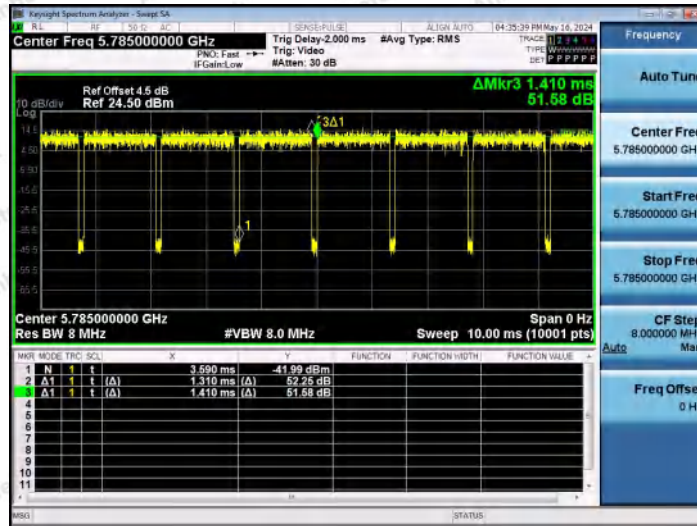

NTVN-11N20MIMO-Ant2-5785

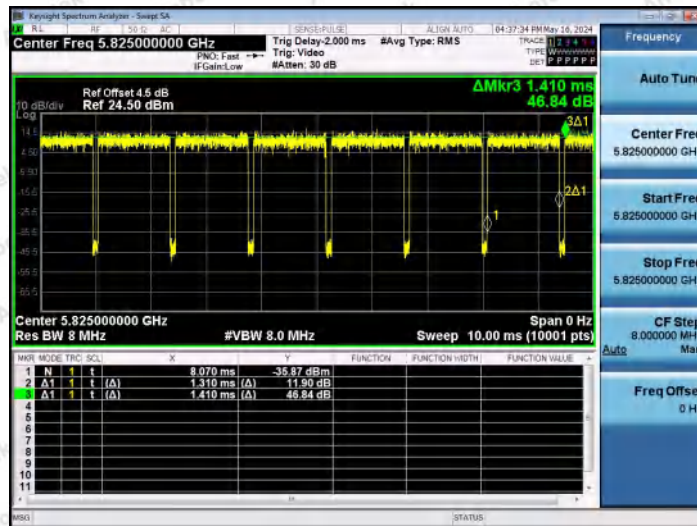

NTVN-11N20MIMO-Ant1-5825

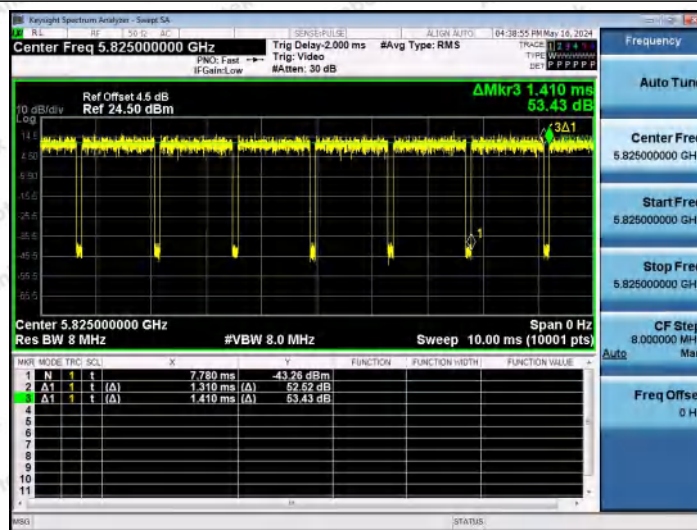


NTVN-11N20MIMO-Ant2-5825

Shenzhen Anbotek Compliance Laboratory Limited


Address: 1/F., Building D, Sogood Science and Technology Park, Sanwei Community, Hangcheng Street, Bao'an District, Shenzhen, Guangdong, China.
 Tel: (86) 0755-26066440 Fax: (86) 0755-26014772 Email: service@anbotek.com

Hotline 400-003-0500
 www.anbotek.com.cn




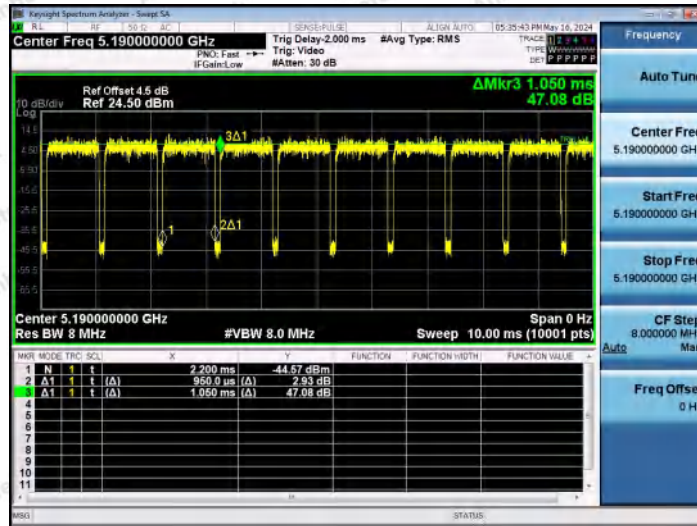

NTNV-11N40MIMO-Ant1-5190

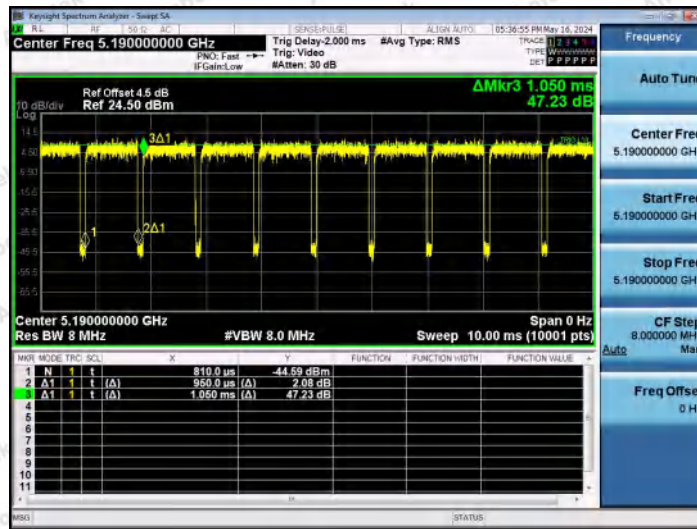

NTNV-11N40MIMO-Ant2-5190

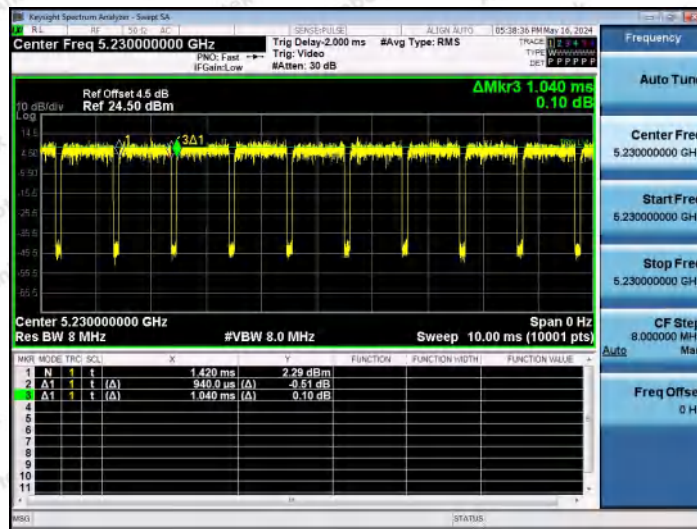


NTNV-11N40MIMO-Ant1-5230

Shenzhen Anbotek Compliance Laboratory Limited


Address: 1/F., Building D, Sogood Science and Technology Park, Sanwei Community, Hangcheng Street, Bao'an District, Shenzhen, Guangdong, China.
 Tel: (86) 0755-26066440 Fax: (86) 0755-26014772 Email: service@anbotek.com

Hotline
 400-003-0500
 www.anbotek.com.cn




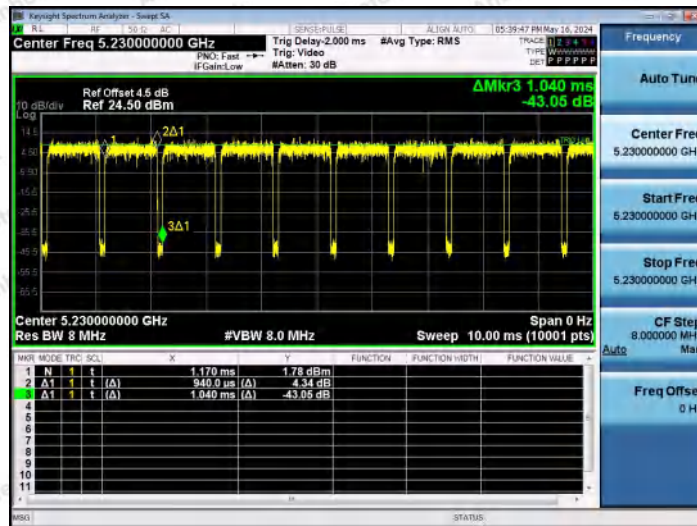

NTNV-11N40MIMO-Ant2-5230

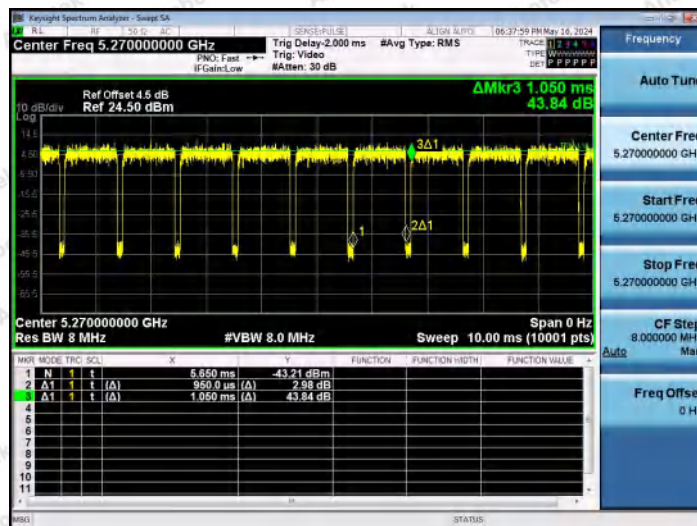

NTNV-11N40MIMO-Ant1-5270

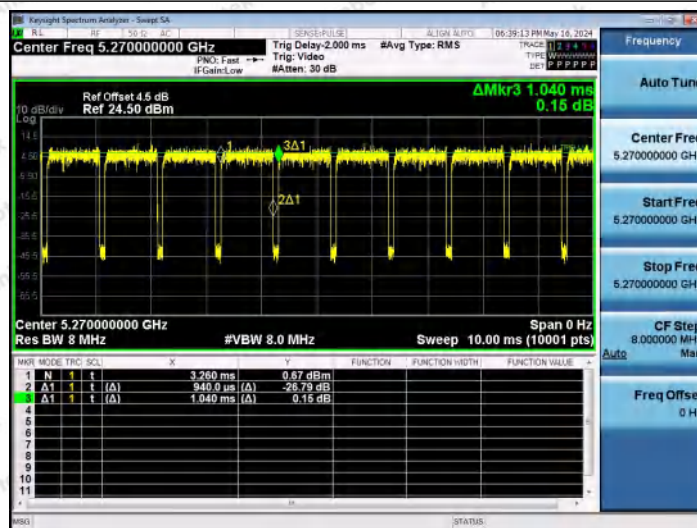


NTNV-11N40MIMO-Ant2-5270

Shenzhen Anbotek Compliance Laboratory Limited


Address: 1/F., Building D, Sogood Science and Technology Park, Sanwei Community, Hangcheng Street, Bao'an District, Shenzhen, Guangdong, China.
 Tel: (86) 0755-26066440 Fax: (86) 0755-26014772 Email: service@anbotek.com

Hotline 400-003-0500
 www.anbotek.com.cn




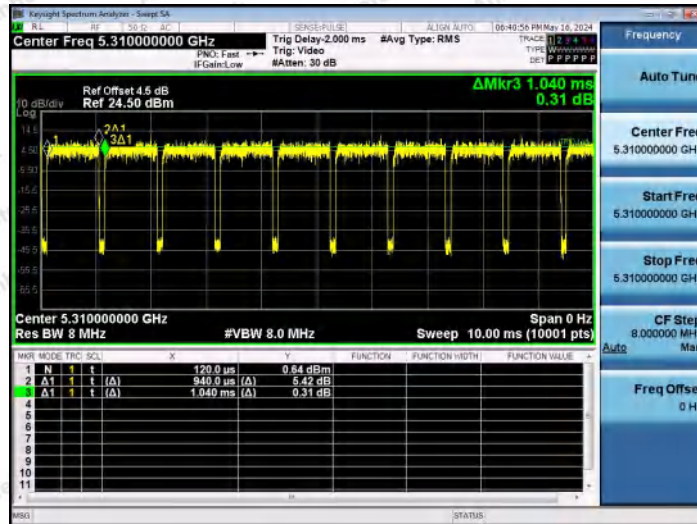

NTNV-11N40MIMO-Ant1-5310

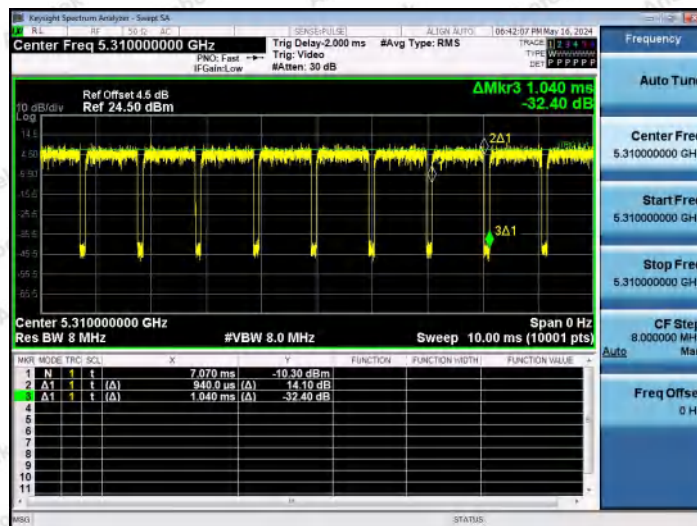

NTNV-11N40MIMO-Ant2-5310

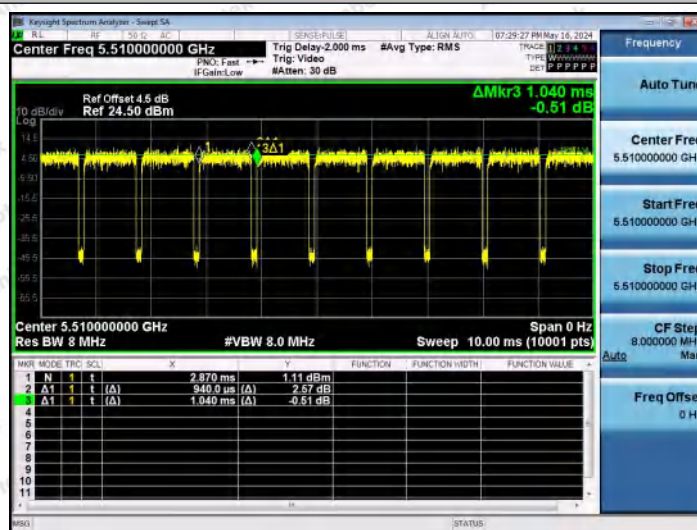


NTNV-11N40MIMO-Ant1-5510

Shenzhen Anbotek Compliance Laboratory Limited


Address: 1/F., Building D, Sogood Science and Technology Park, Sanwei Community, Hangcheng Street, Bao'an District, Shenzhen, Guangdong, China.
 Tel: (86) 0755-26066440 Fax: (86) 0755-26014772 Email: service@anbotek.com

Hotline 400-003-0500
 www.anbotek.com.cn




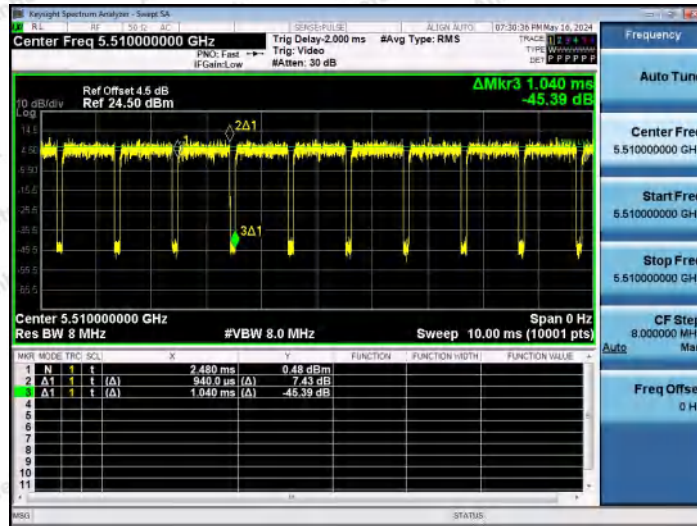

NTVN-11N40MIMO-Ant2-5510

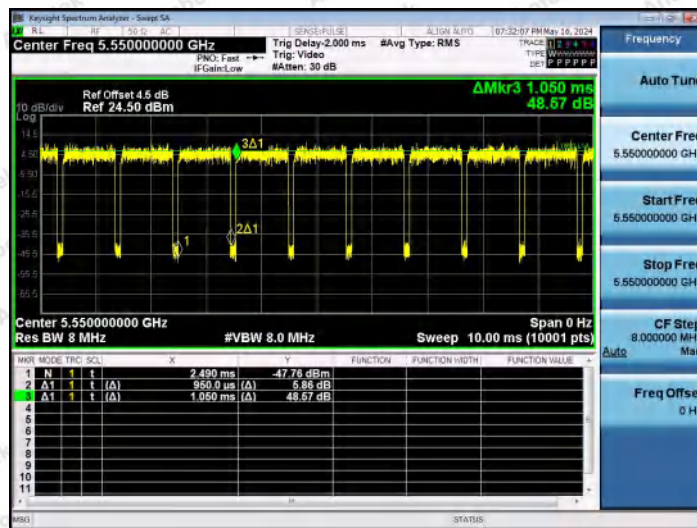

NTVN-11N40MIMO-Ant1-5550

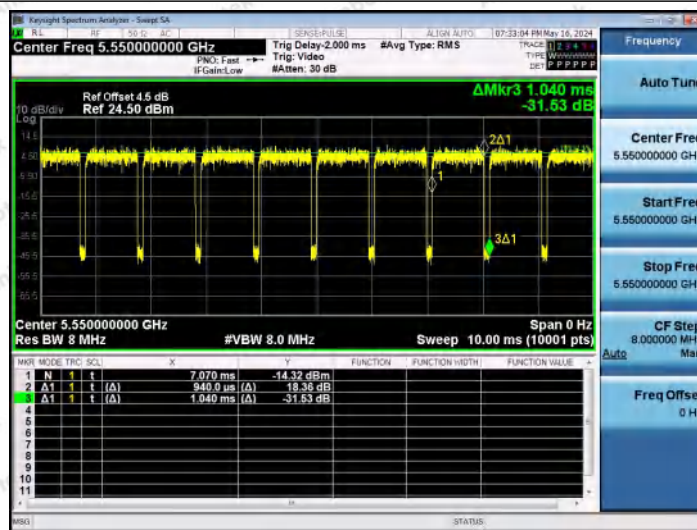


NTVN-11N40MIMO-Ant2-5550

Shenzhen Anbotek Compliance Laboratory Limited


Address: 1/F., Building D, Sogood Science and Technology Park, Sanwei Community, Hangcheng Street, Bao'an District, Shenzhen, Guangdong, China.
 Tel: (86) 0755-26066440 Fax: (86) 0755-26014772 Email: service@anbotek.com

Hotline 400-003-0500
 www.anbotek.com.cn




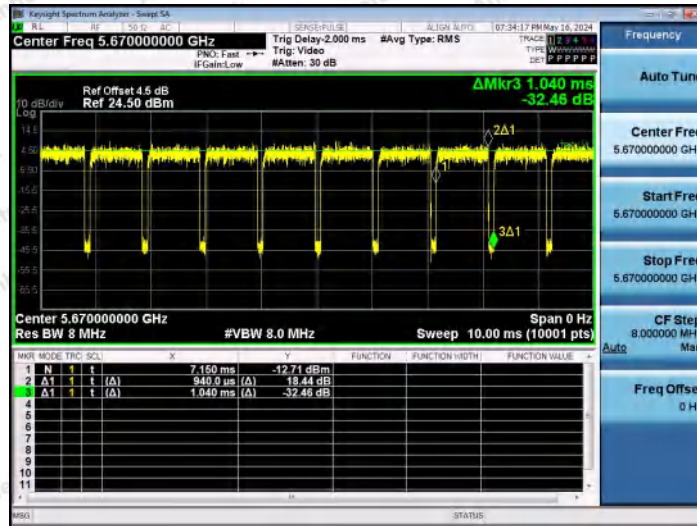

NTNV-11N40MIMO-Ant1-5670

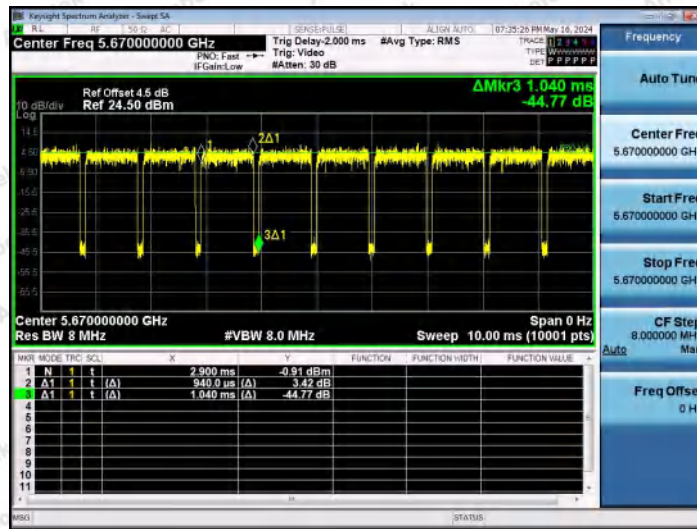

NTNV-11N40MIMO-Ant2-5670

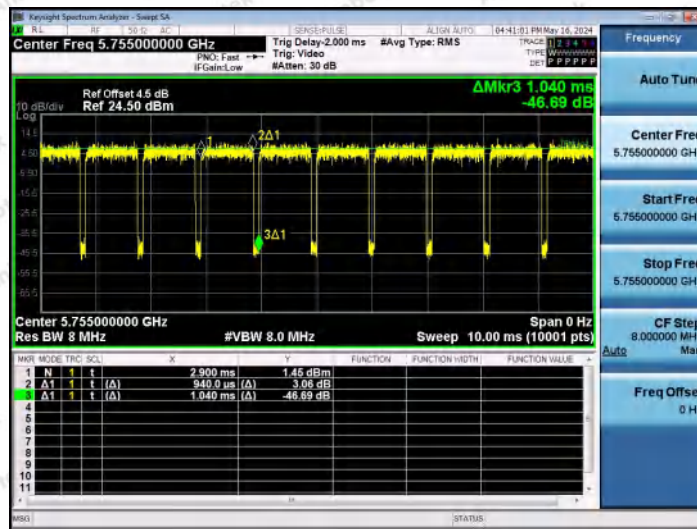


NTNV-11N40MIMO-Ant1-5755

Shenzhen Anbotek Compliance Laboratory Limited


Address: 1/F., Building D, Sogood Science and Technology Park, Sanwei Community, Hangcheng Street, Bao'an District, Shenzhen, Guangdong, China.
 Tel: (86) 0755-26066440 Fax: (86) 0755-26014772 Email: service@anbotek.com

Hotline 400-003-0500
 www.anbotek.com.cn




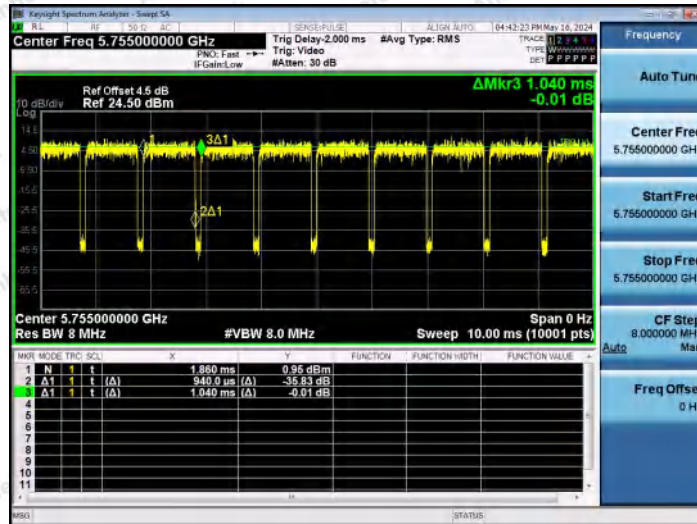

NTNV-11N40MIMO-Ant2-5755

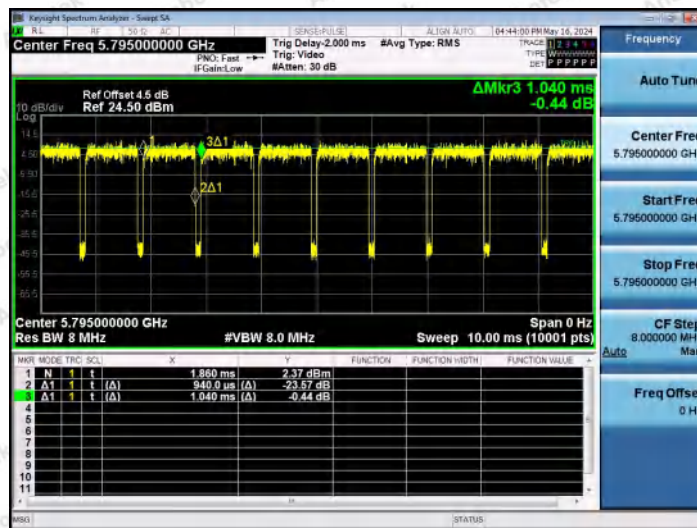

NTNV-11N40MIMO-Ant1-5795

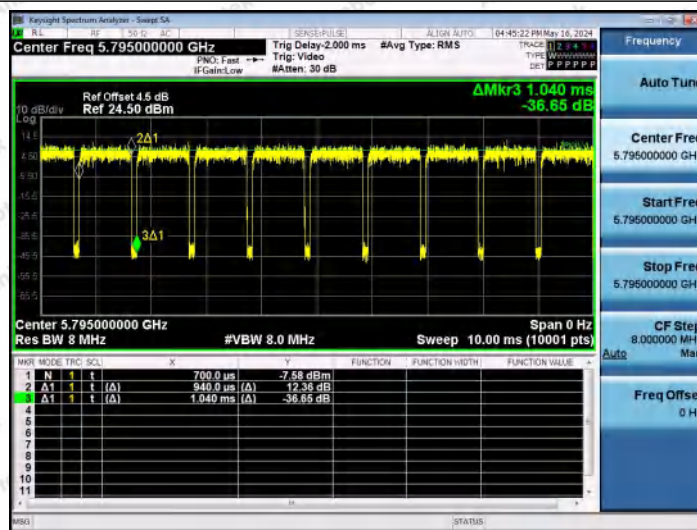


NTNV-11N40MIMO-Ant2-5795

Shenzhen Anbotek Compliance Laboratory Limited


Address: 1/F., Building D, Sogood Science and Technology Park, Sanwei Community, Hangcheng Street, Bao'an District, Shenzhen, Guangdong, China.
 Tel: (86) 0755-26066440 Fax: (86) 0755-26014772 Email: service@anbotek.com

Hotline 400-003-0500
 www.anbotek.com.cn




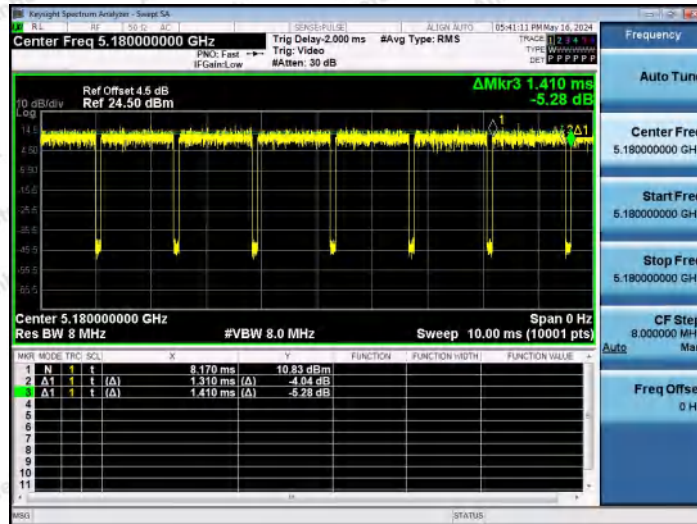

NTNV-11AC20MIMO-Ant1-5180

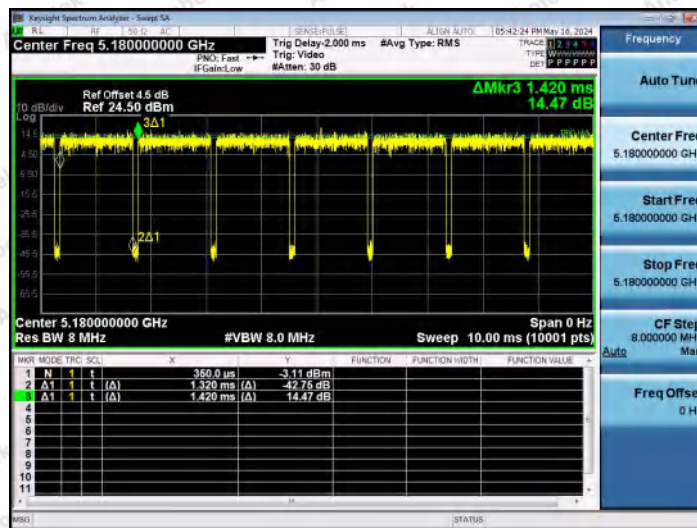

NTNV-11AC20MIMO-Ant2-5180

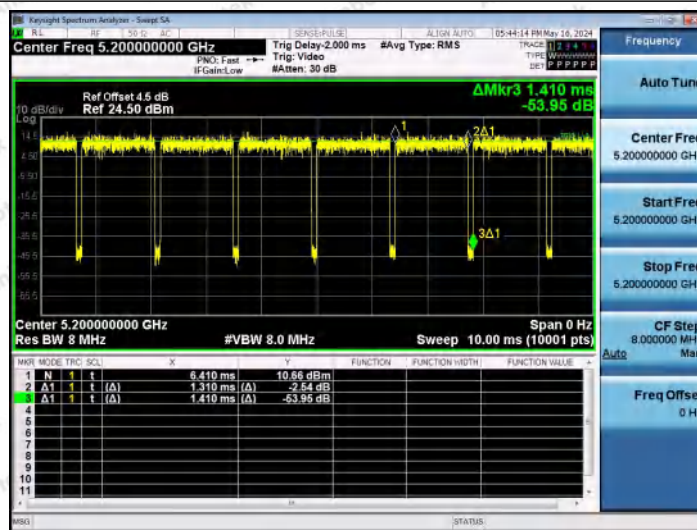


NTNV-11AC20MIMO-Ant1-5200

Shenzhen Anbotek Compliance Laboratory Limited


Address: 1/F., Building D, Sogood Science and Technology Park, Sanwei Community, Hangcheng Street, Bao'an District, Shenzhen, Guangdong, China.
 Tel: (86) 0755-26066440 Fax: (86) 0755-26014772 Email: service@anbotek.com

Hotline 400-003-0500
 www.anbotek.com.cn




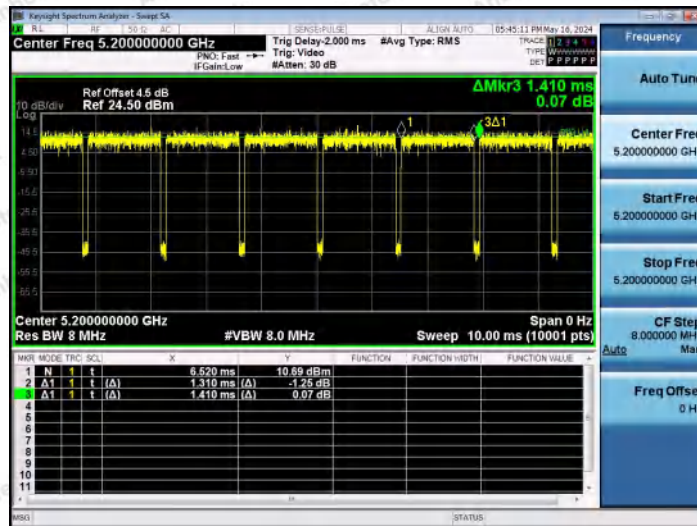

NTNV-11AC20MIMO-Ant2-5200

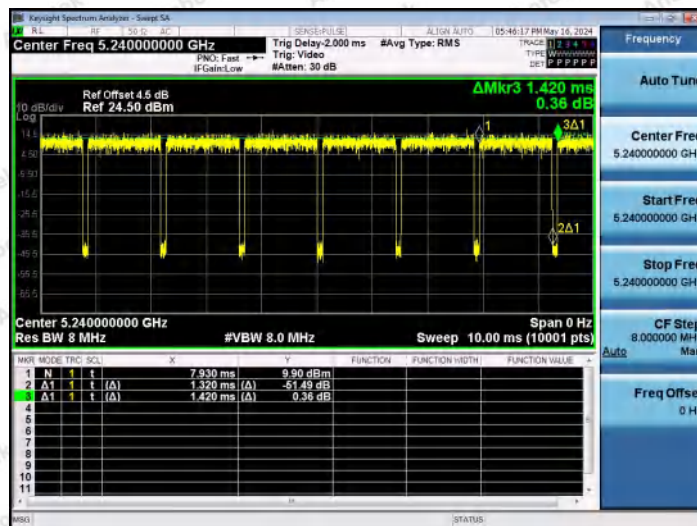

NTNV-11AC20MIMO-Ant1-5240

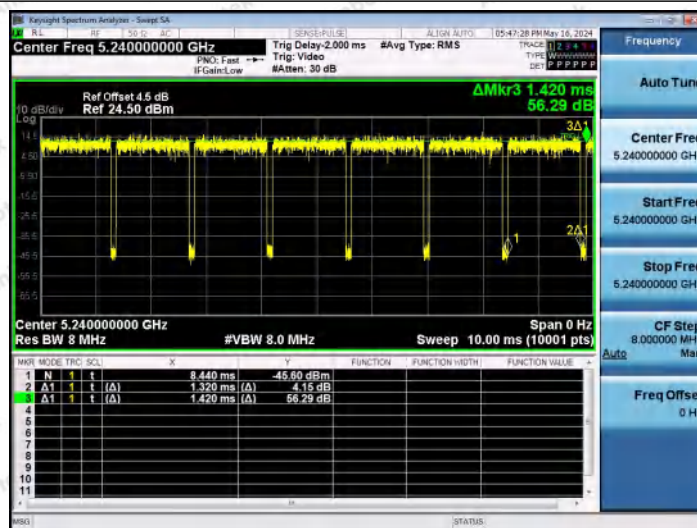


NTNV-11AC20MIMO-Ant2-5240

Shenzhen Anbotek Compliance Laboratory Limited


Address: 1/F., Building D, Sogood Science and Technology Park, Sanwei Community, Hangcheng Street, Bao'an District, Shenzhen, Guangdong, China.
 Tel: (86) 0755-26066440 Fax: (86) 0755-26014772 Email: service@anbotek.com

Hotline 400-003-0500
 www.anbotek.com.cn




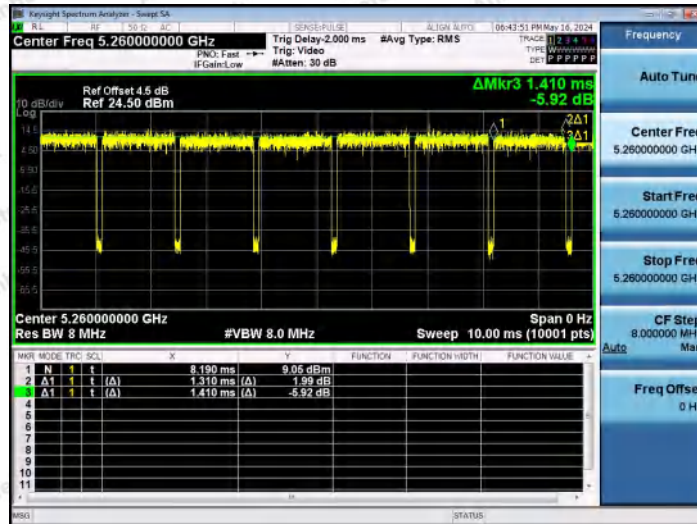

NTNV-11AC20MIMO-Ant1-5260

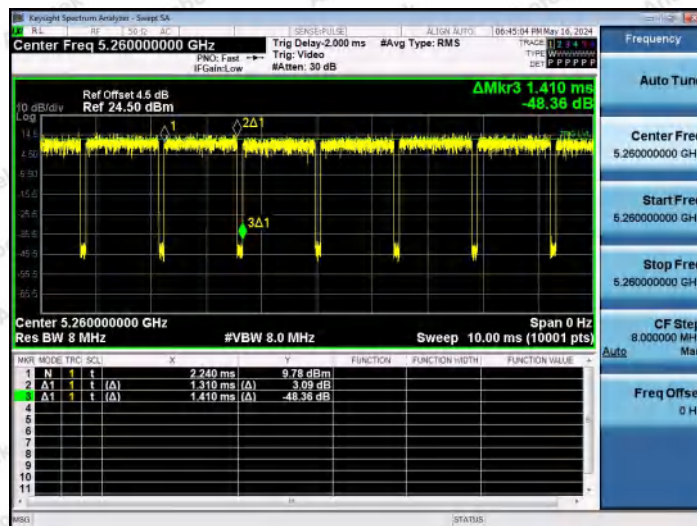

NTNV-11AC20MIMO-Ant2-5260

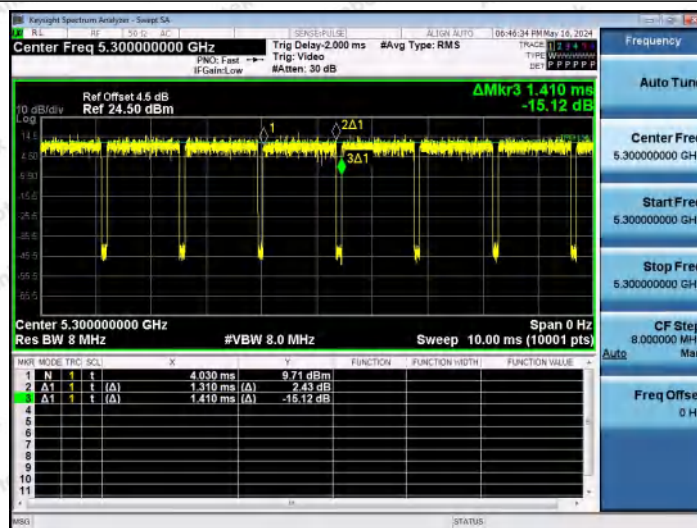


NTNV-11AC20MIMO-Ant1-5300

Shenzhen Anbotek Compliance Laboratory Limited


Address: 1/F., Building D, Sogood Science and Technology Park, Sanwei Community, Hangcheng Street, Bao'an District, Shenzhen, Guangdong, China.
 Tel: (86) 0755-26066440 Fax: (86) 0755-26014772 Email: service@anbotek.com

Hotline 400-003-0500
 www.anbotek.com.cn




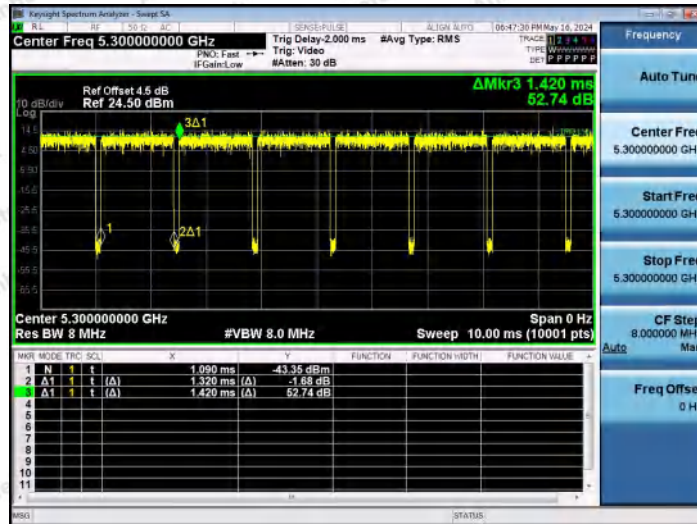

NTNV-11AC20MIMO-Ant2-5300

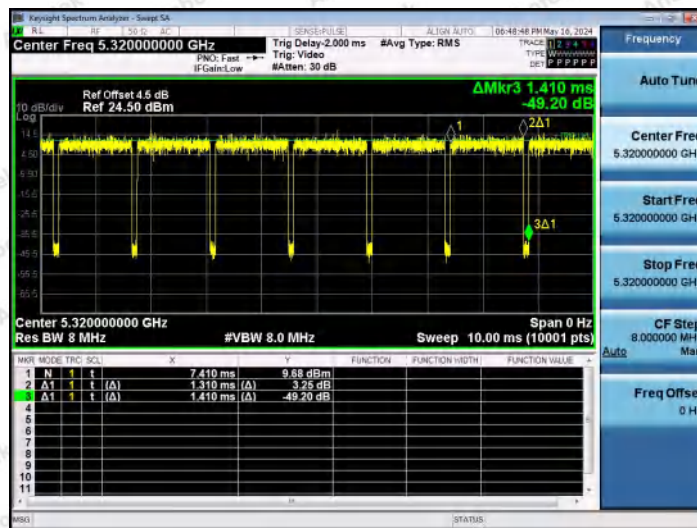

NTNV-11AC20MIMO-Ant1-5320

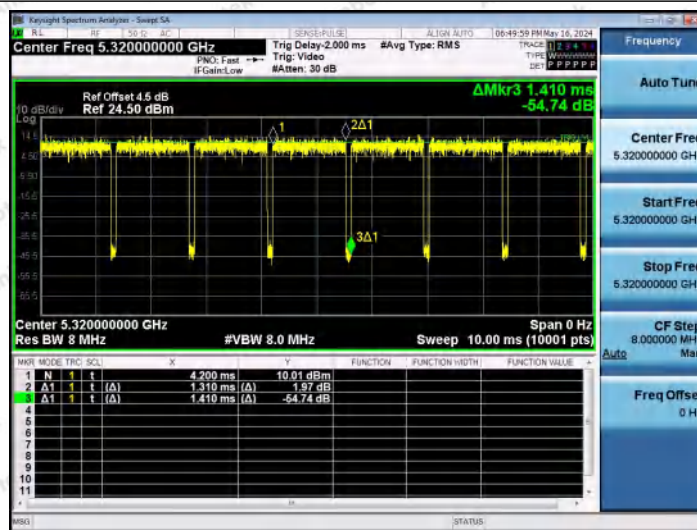


NTNV-11AC20MIMO-Ant2-5320

Shenzhen Anbotek Compliance Laboratory Limited


Address: 1/F., Building D, Sogood Science and Technology Park, Sanwei Community, Hangcheng Street, Bao'an District, Shenzhen, Guangdong, China.
 Tel: (86) 0755-26066440 Fax: (86) 0755-26014772 Email: service@anbotek.com

Hotline 400-003-0500
 www.anbotek.com.cn




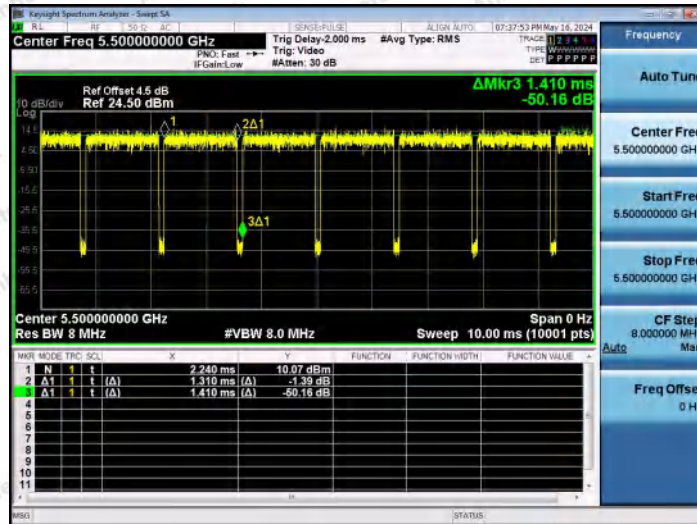

NTNV-11AC20MIMO-Ant1-5500

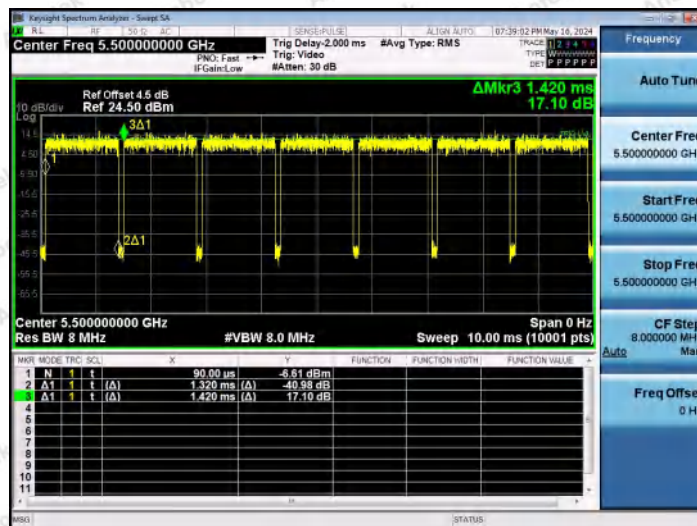

NTNV-11AC20MIMO-Ant2-5500

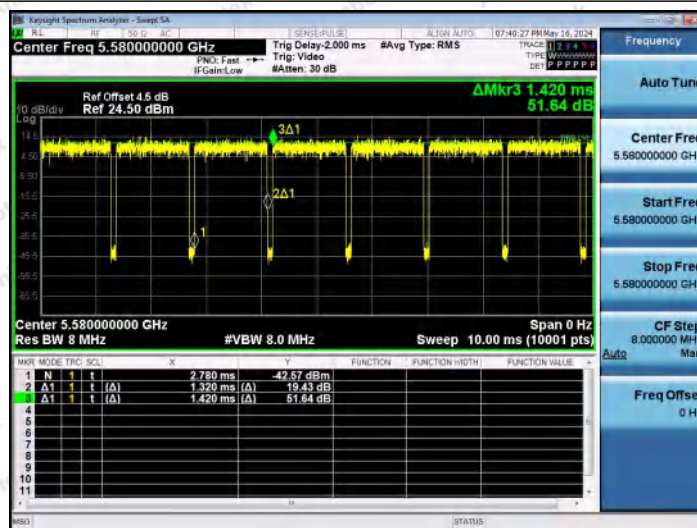


NTNV-11AC20MIMO-Ant1-5580

Shenzhen Anbotek Compliance Laboratory Limited


Address: 1/F., Building D, Sogood Science and Technology Park, Sanwei Community, Hangcheng Street, Bao'an District, Shenzhen, Guangdong, China.
 Tel: (86) 0755-26066440 Fax: (86) 0755-26014772 Email: service@anbotek.com

Hotline
 400-003-0500
 www.anbotek.com.cn




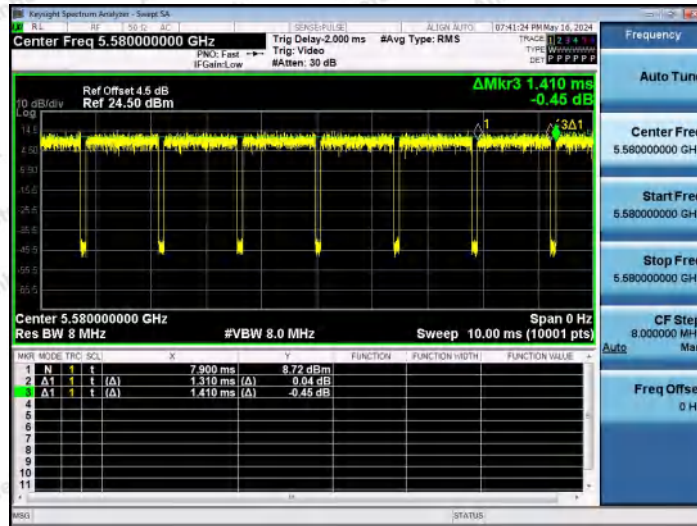

NTNV-11AC20MIMO-Ant2-5580

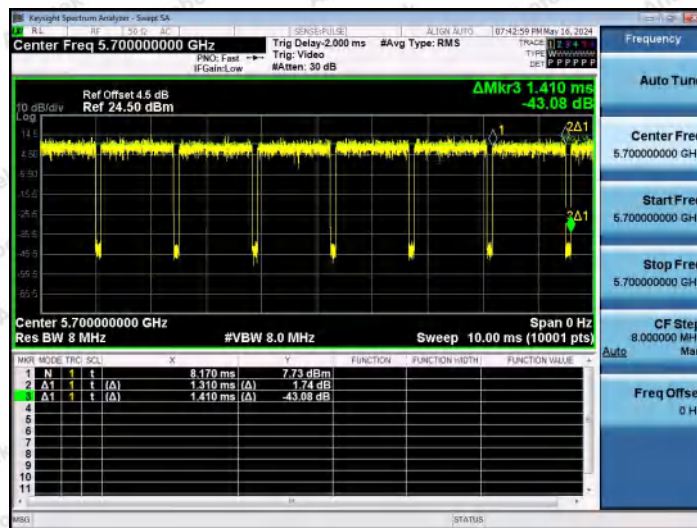

NTNV-11AC20MIMO-Ant1-5700

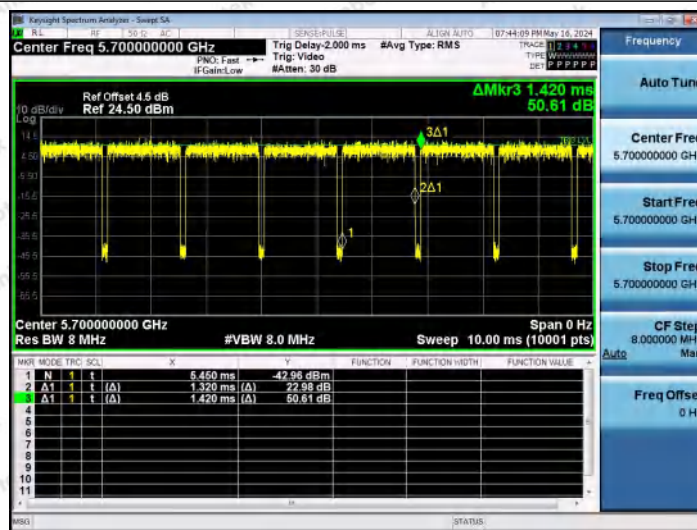


NTNV-11AC20MIMO-Ant2-5700

Shenzhen Anbotek Compliance Laboratory Limited


Address: 1/F., Building D, Sogood Science and Technology Park, Sanwei Community, Hangcheng Street, Bao'an District, Shenzhen, Guangdong, China.
 Tel: (86) 0755-26066440 Fax: (86) 0755-26014772 Email: service@anbotek.com

Hotline 400-003-0500
 www.anbotek.com.cn




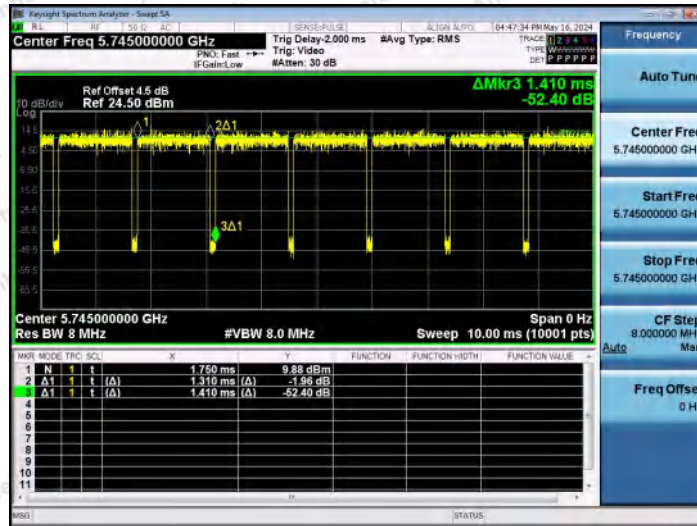

NTNV-11AC20MIMO-Ant1-5745

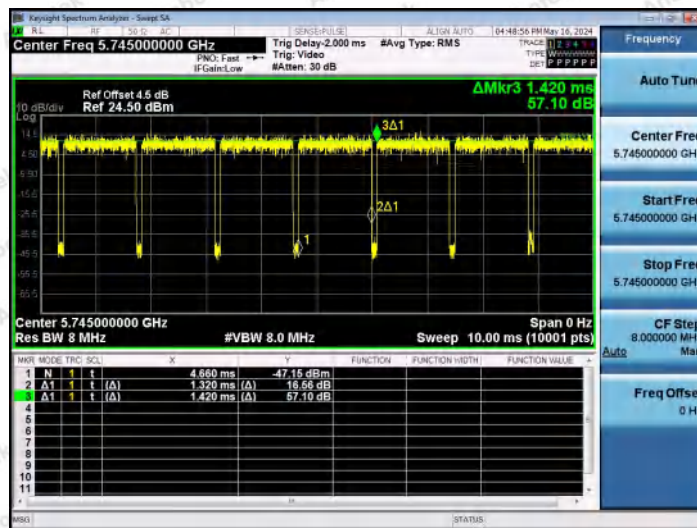

NTNV-11AC20MIMO-Ant2-5745

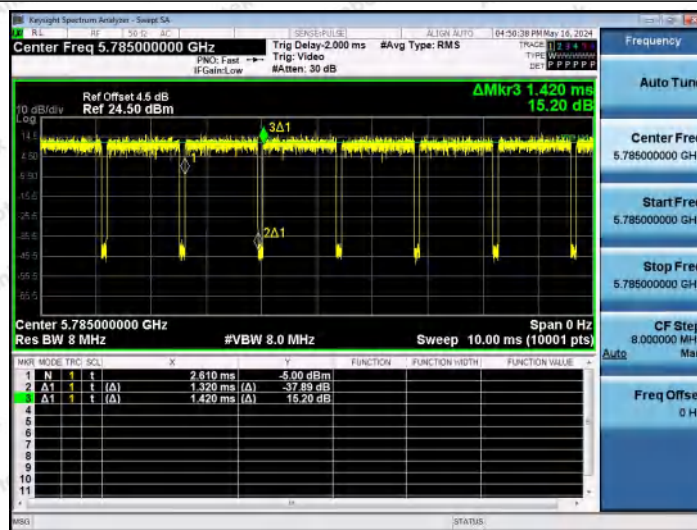


NTNV-11AC20MIMO-Ant1-5785

Shenzhen Anbotek Compliance Laboratory Limited


Address: 1/F., Building D, Sogood Science and Technology Park, Sanwei Community, Hangcheng Street, Bao'an District, Shenzhen, Guangdong, China.
 Tel: (86) 0755-26066440 Fax: (86) 0755-26014772 Email: service@anbotek.com

Hotline 400-003-0500
 www.anbotek.com.cn




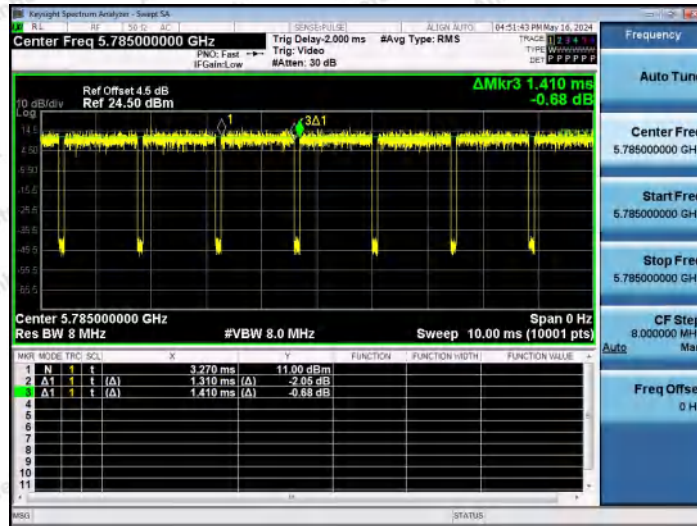

NTNV-11AC20MIMO-Ant2-5785

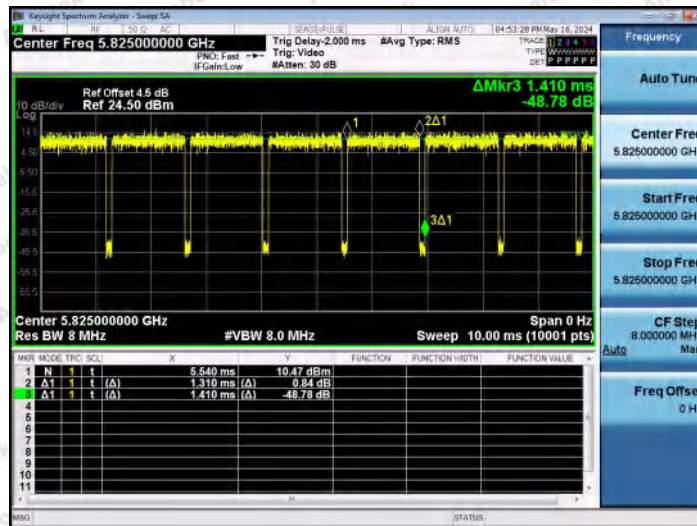

NTNV-11AC20MIMO-Ant1-5825

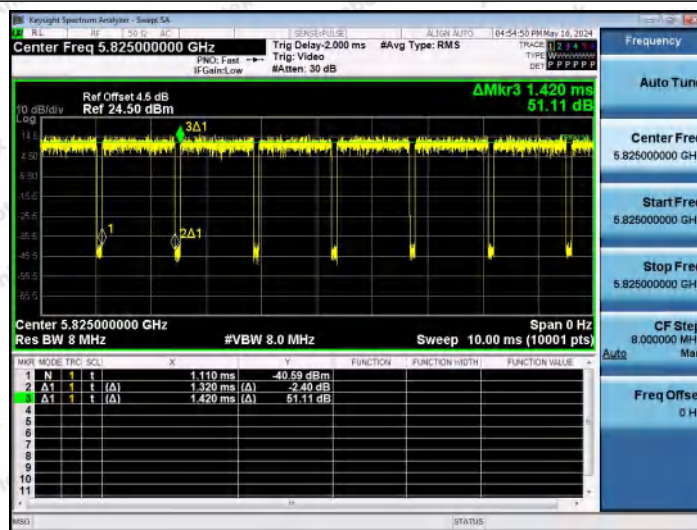


NTNV-11AC20MIMO-Ant2-5825

Shenzhen Anbotek Compliance Laboratory Limited


Address: 1/F., Building D, Sogood Science and Technology Park, Sanwei Community, Hangcheng Street, Bao'an District, Shenzhen, Guangdong, China.
 Tel: (86) 0755-26066440 Fax: (86) 0755-26014772 Email: service@anbotek.com

Hotline 400-003-0500
 www.anbotek.com.cn




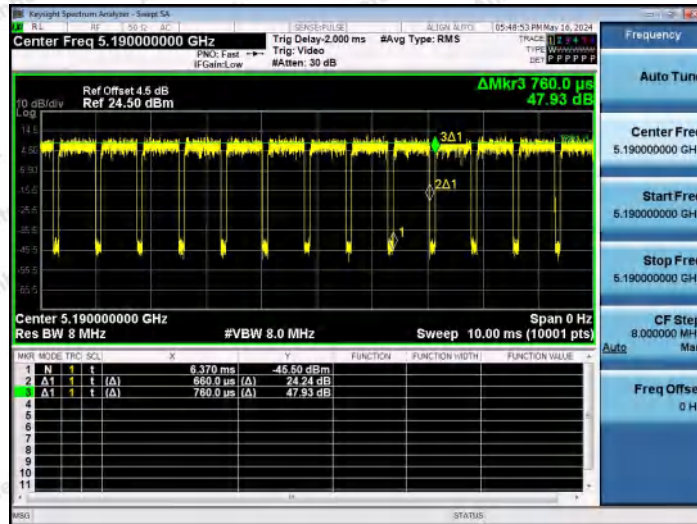

NTNV-11AC40MIMO-Ant1-5190

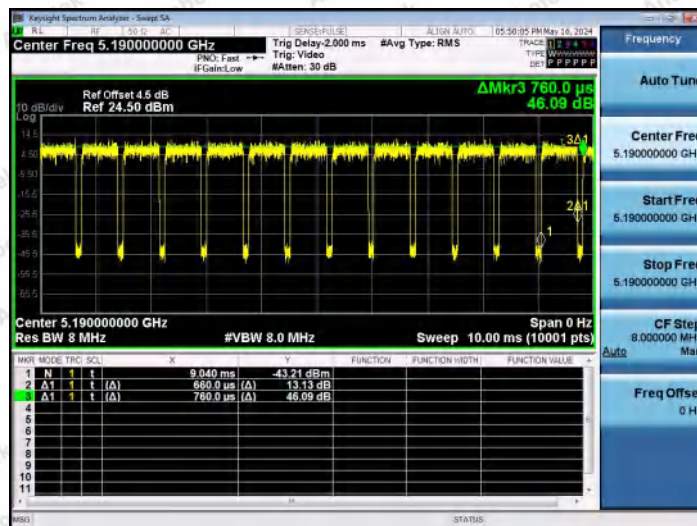

NTNV-11AC40MIMO-Ant2-5190

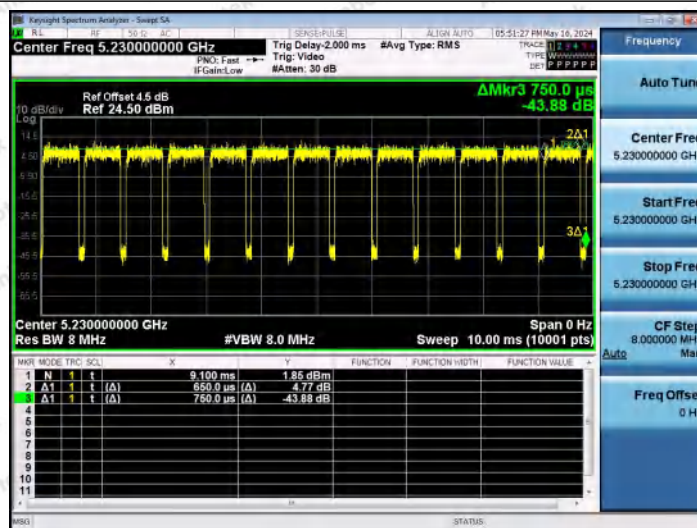


NTNV-11AC40MIMO-Ant1-5230

Shenzhen Anbotek Compliance Laboratory Limited


Address: 1/F., Building D, Sogood Science and Technology Park, Sanwei Community, Hangcheng Street, Bao'an District, Shenzhen, Guangdong, China.
 Tel: (86) 0755-26066440 Fax: (86) 0755-26014772 Email: service@anbotek.com

Hotline 400-003-0500
 www.anbotek.com.cn




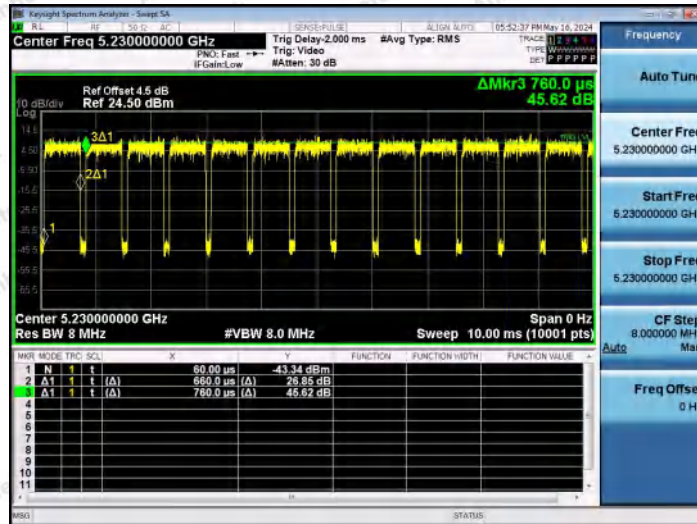

NTNV-11AC40MIMO-Ant2-5230

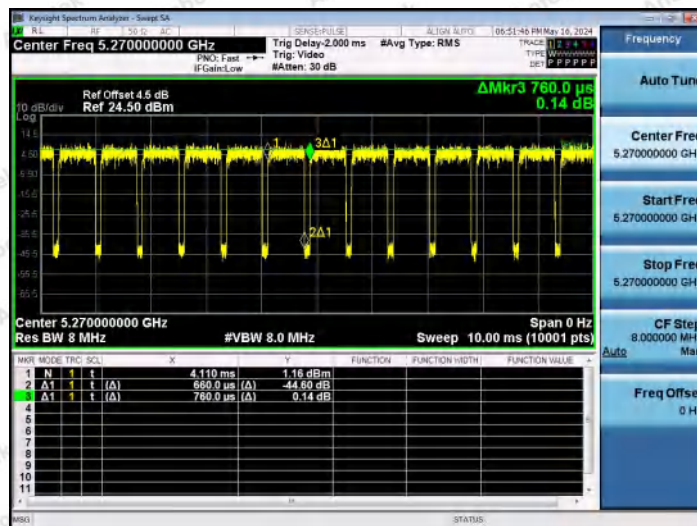

NTNV-11AC40MIMO-Ant1-5270

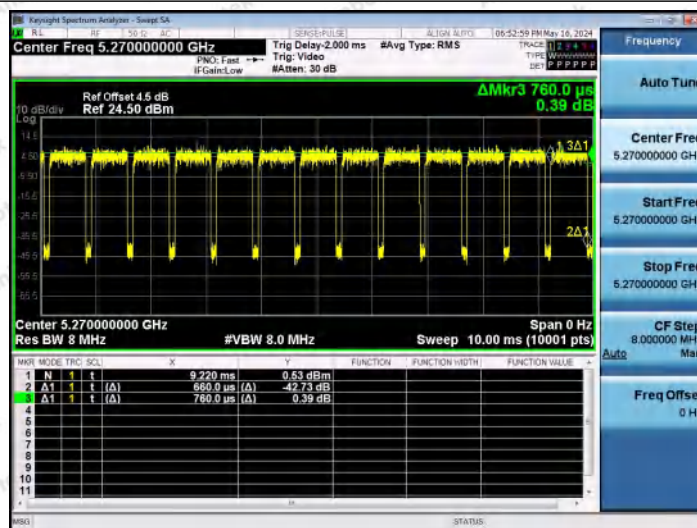


NTNV-11AC40MIMO-Ant2-5270

Shenzhen Anbotek Compliance Laboratory Limited


Address: 1/F., Building D, Sogood Science and Technology Park, Sanwei Community, Hangcheng Street, Bao'an District, Shenzhen, Guangdong, China.
 Tel: (86) 0755-26066440 Fax: (86) 0755-26014772 Email: service@anbotek.com

Hotline 400-003-0500
 www.anbotek.com.cn




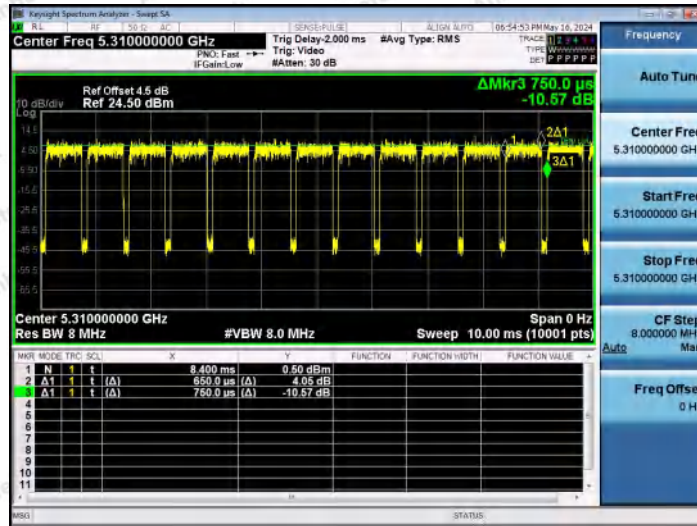

NTNV-11AC40MIMO-Ant1-5310

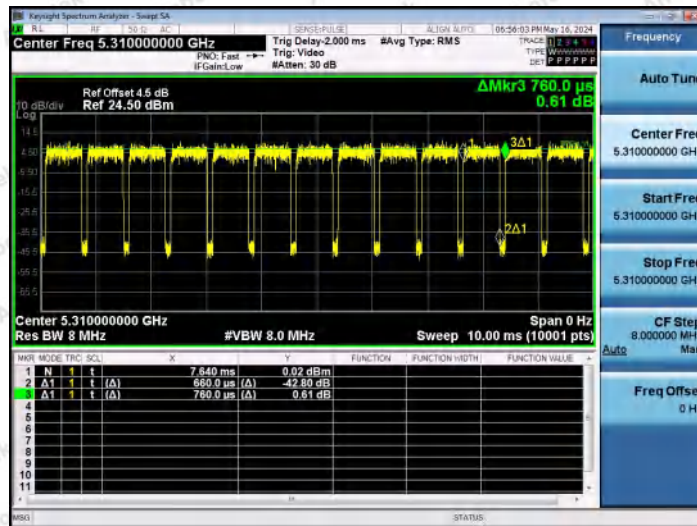

NTNV-11AC40MIMO-Ant2-5310

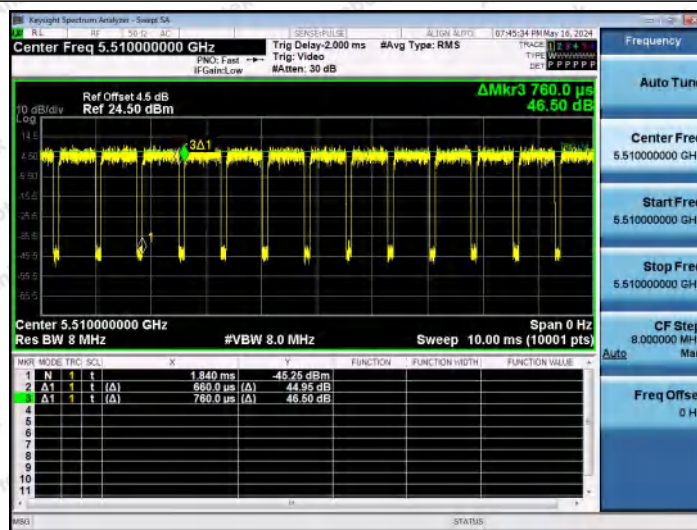


NTNV-11AC40MIMO-Ant1-5510

Shenzhen Anbotek Compliance Laboratory Limited


Address: 1/F., Building D, Sogood Science and Technology Park, Sanwei Community, Hangcheng Street, Bao'an District, Shenzhen, Guangdong, China.
 Tel: (86) 0755-26066440 Fax: (86) 0755-26014772 Email: service@anbotek.com

Hotline 400-003-0500
 www.anbotek.com.cn




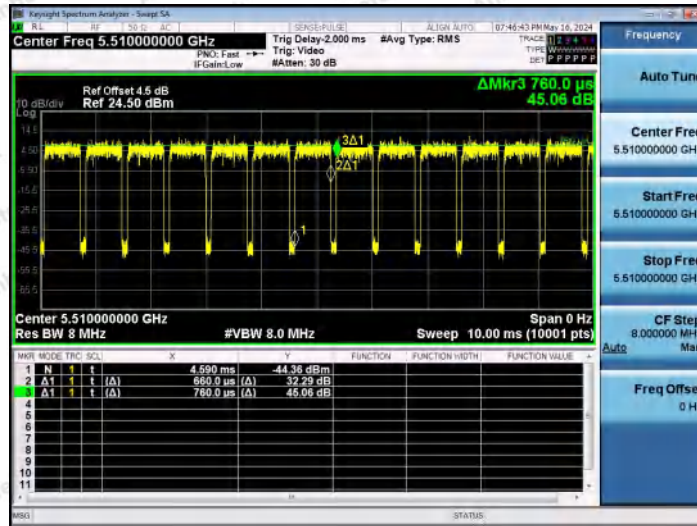

NTNV-11AC40MIMO-Ant2-5510

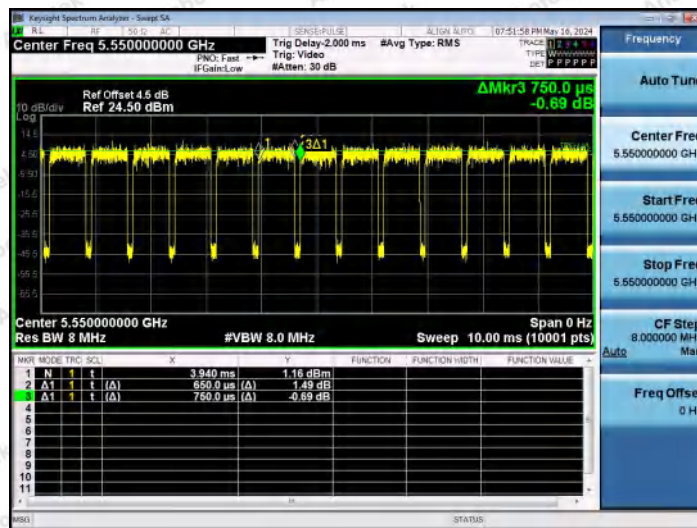

NTNV-11AC40MIMO-Ant1-5550

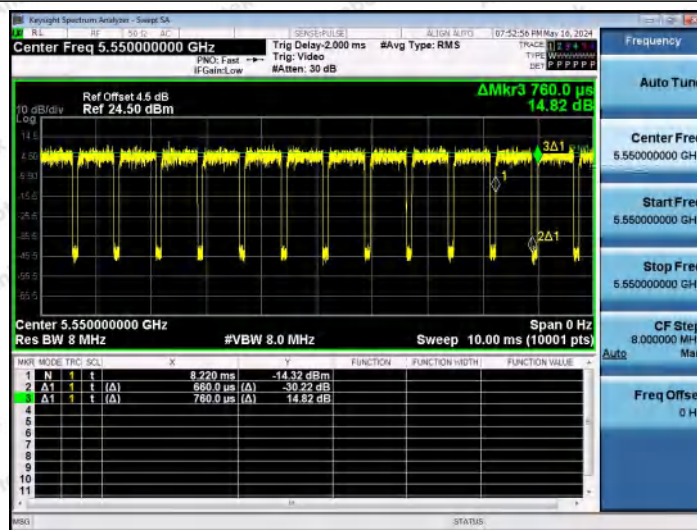


NTNV-11AC40MIMO-Ant2-5550

Shenzhen Anbotek Compliance Laboratory Limited


Address: 1/F., Building D, Sogood Science and Technology Park, Sanwei Community, Hangcheng Street, Bao'an District, Shenzhen, Guangdong, China.
 Tel: (86) 0755-26066440 Fax: (86) 0755-26014772 Email: service@anbotek.com

Hotline 400-003-0500
 www.anbotek.com.cn




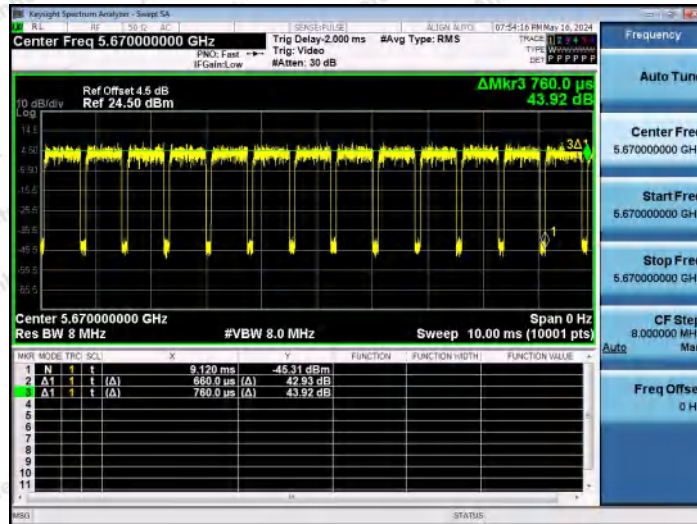

NTNV-11AC40MIMO-Ant1-5670

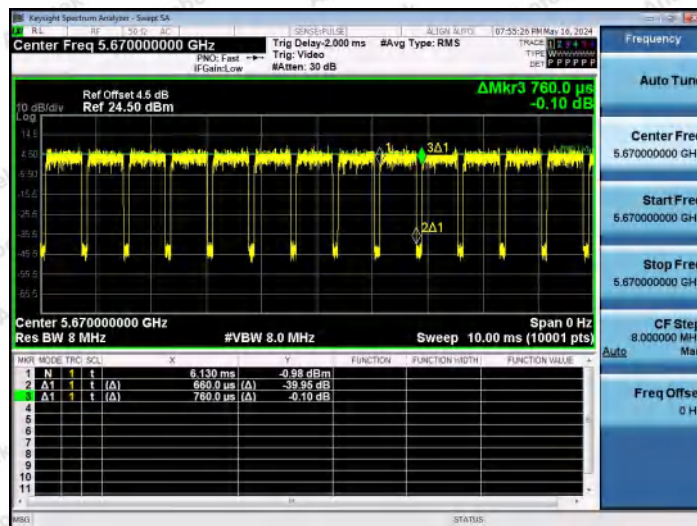

NTNV-11AC40MIMO-Ant2-5670

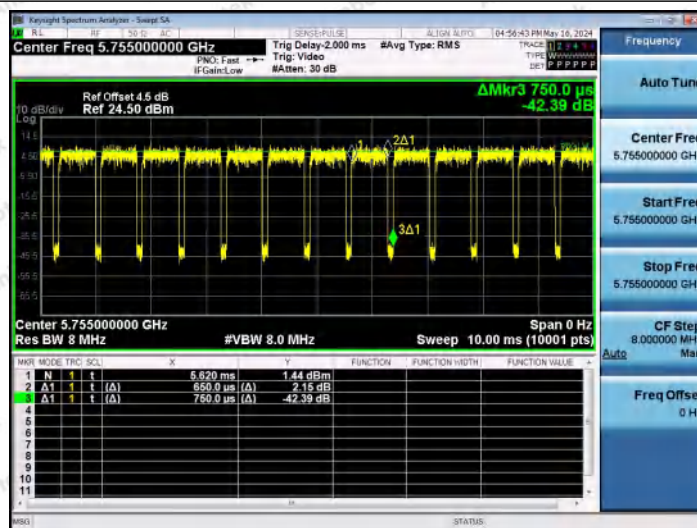


NTNV-11AC40MIMO-Ant1-5755

Shenzhen Anbotek Compliance Laboratory Limited


Address: 1/F., Building D, Sogood Science and Technology Park, Sanwei Community, Hangcheng Street, Bao'an District, Shenzhen, Guangdong, China.
 Tel: (86) 0755-26066440 Fax: (86) 0755-26014772 Email: service@anbotek.com

Hotline 400-003-0500
 www.anbotek.com.cn




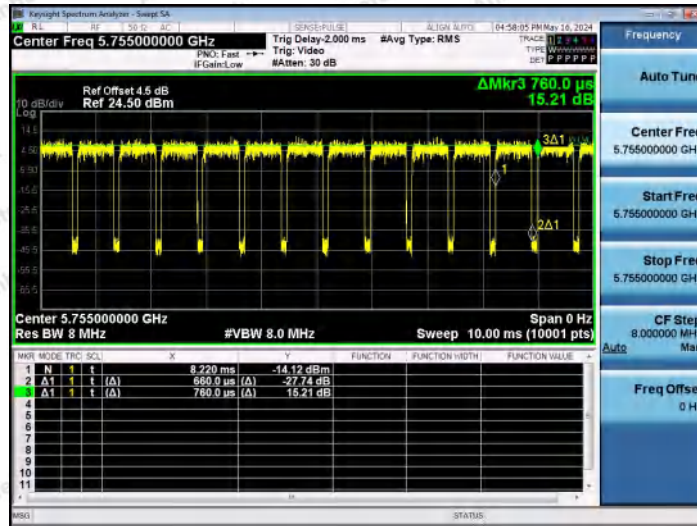

NTNV-11AC40MIMO-Ant2-5755

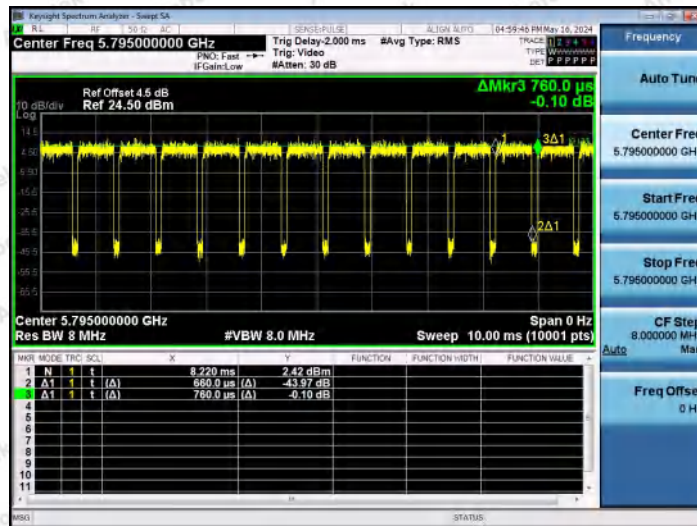

NTNV-11AC40MIMO-Ant1-5795

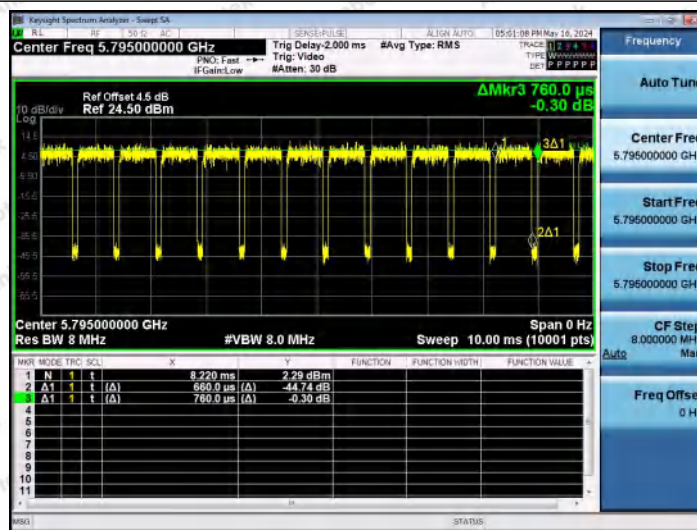


NTNV-11AC40MIMO-Ant2-5795

Shenzhen Anbotek Compliance Laboratory Limited


Address: 1/F., Building D, Sogood Science and Technology Park, Sanwei Community, Hangcheng Street, Bao'an District, Shenzhen, Guangdong, China.
 Tel: (86) 0755-26066440 Fax: (86) 0755-26014772 Email: service@anbotek.com

Hotline 400-003-0500
 www.anbotek.com.cn




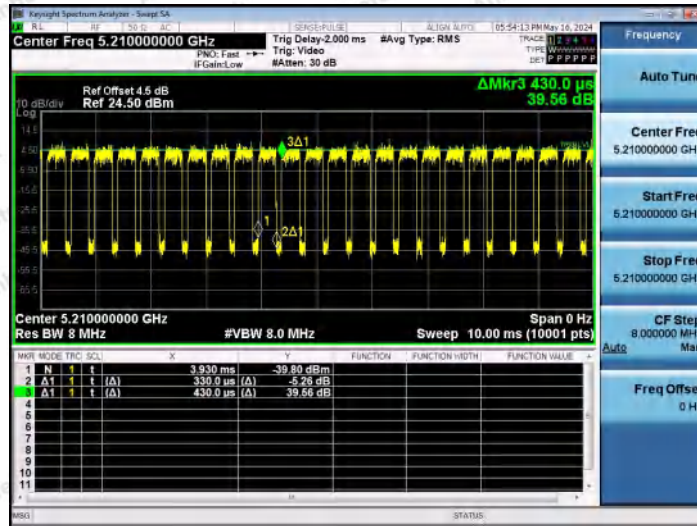

NTNV-11AC80MIMO-Ant1-5210

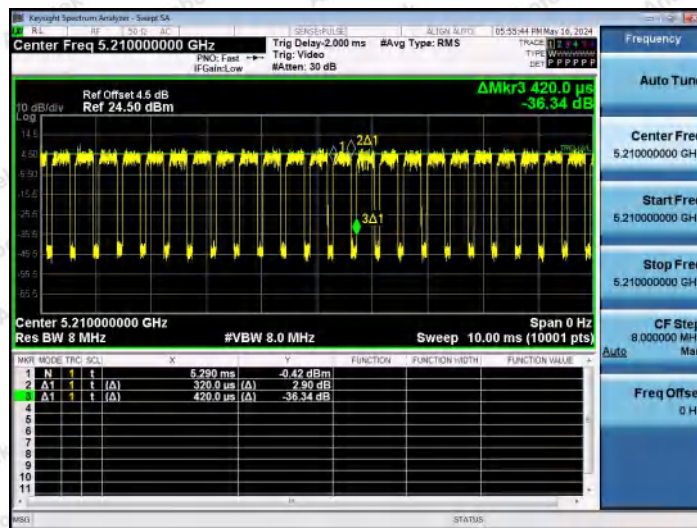

NTNV-11AC80MIMO-Ant2-5210

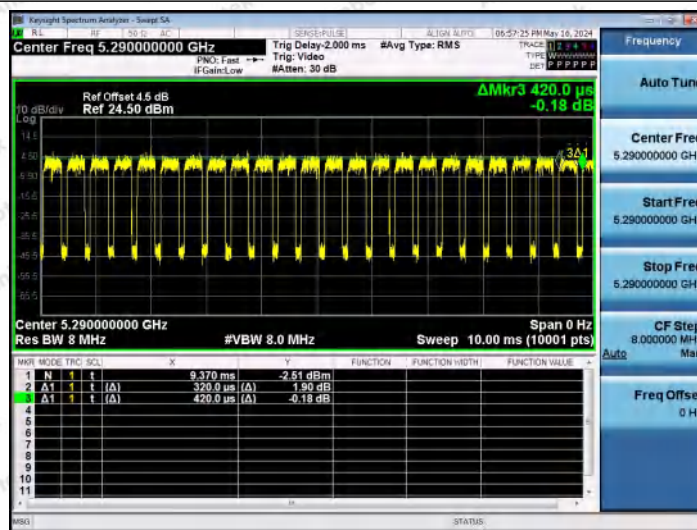


NTNV-11AC80MIMO-Ant1-5290

Shenzhen Anbotek Compliance Laboratory Limited


Address: 1/F., Building D, Sogood Science and Technology Park, Sanwei Community, Hangcheng Street, Bao'an District, Shenzhen, Guangdong, China.
 Tel: (86) 0755-26066440 Fax: (86) 0755-26014772 Email: service@anbotek.com

Hotline 400-003-0500
 www.anbotek.com.cn




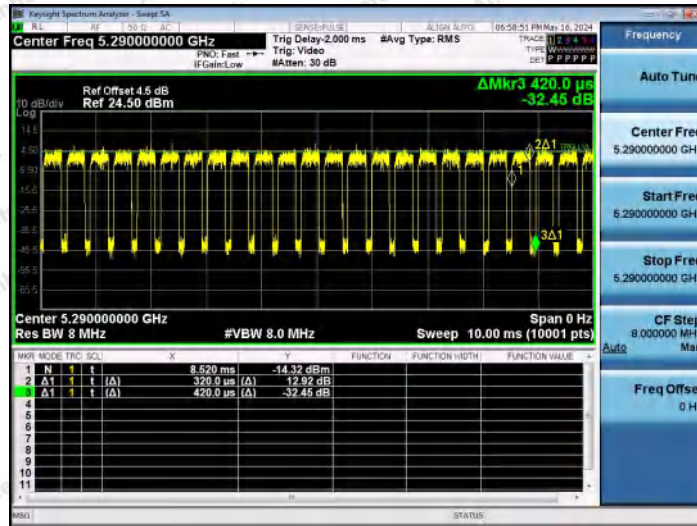

NTNV-11AC80MIMO-Ant2-5290

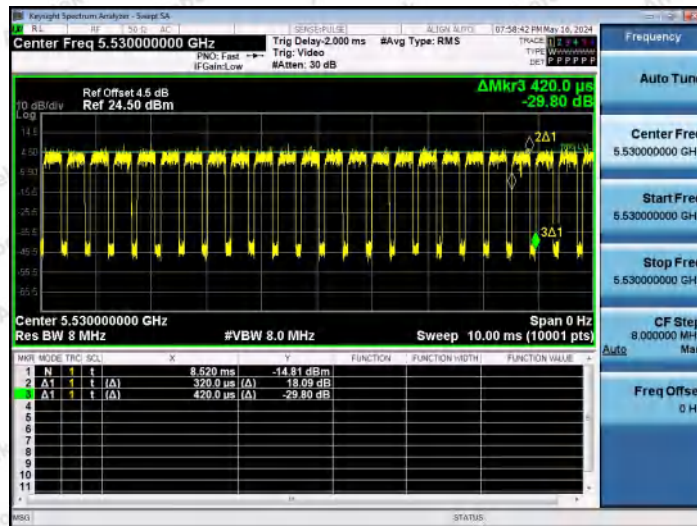

NTNV-11AC80MIMO-Ant1-5530

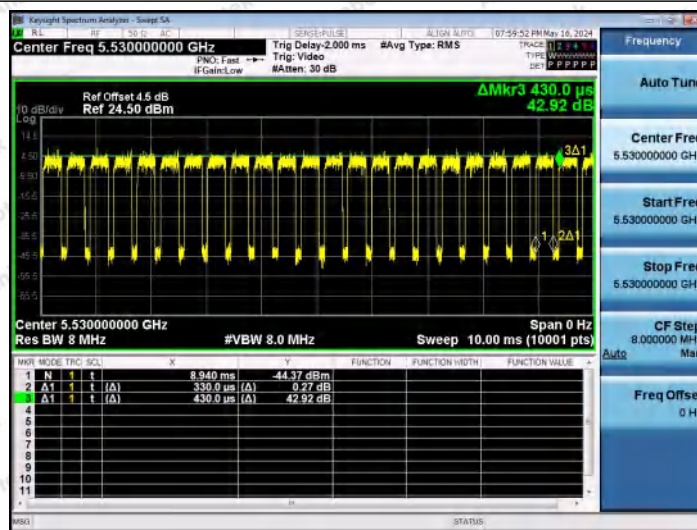


NTNV-11AC80MIMO-Ant2-5530

Shenzhen Anbotek Compliance Laboratory Limited


Address: 1/F., Building D, Sogood Science and Technology Park, Sanwei Community, Hangcheng Street, Bao'an District, Shenzhen, Guangdong, China.
 Tel: (86) 0755-26066440 Fax: (86) 0755-26014772 Email: service@anbotek.com

Hotline
 400-003-0500
 www.anbotek.com.cn




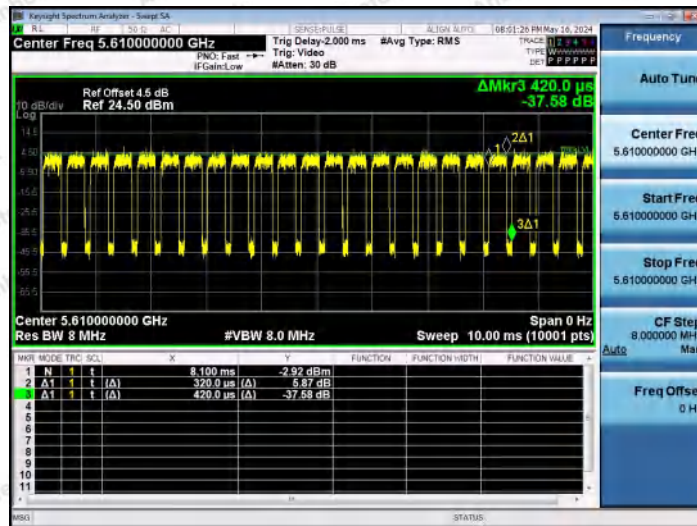

NTNV-11AC80MIMO-Ant1-5610

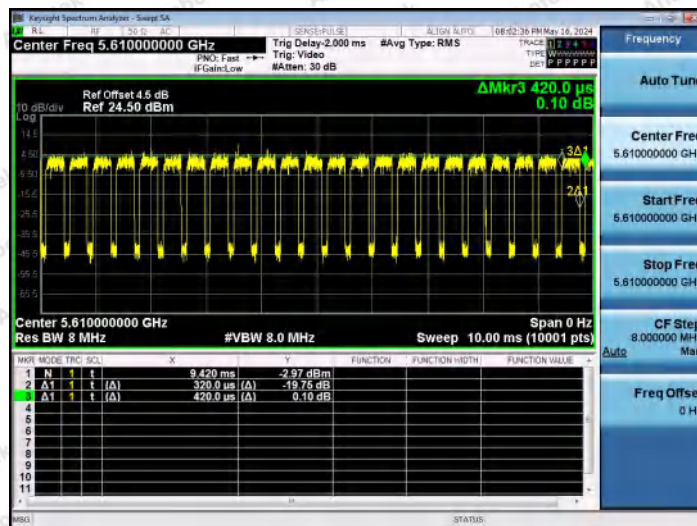

NTNV-11AC80MIMO-Ant2-5610

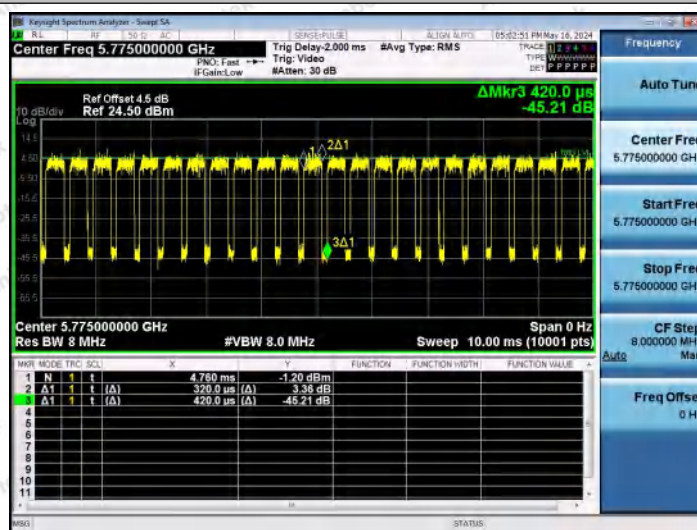


NTNV-11AC80MIMO-Ant1-5775

Shenzhen Anbotek Compliance Laboratory Limited


Address: 1/F., Building D, Sogood Science and Technology Park, Sanwei Community, Hangcheng Street, Bao'an District, Shenzhen, Guangdong, China.
 Tel: (86) 0755-26066440 Fax: (86) 0755-26014772 Email: service@anbotek.com

Hotline 400-003-0500
 www.anbotek.com.cn




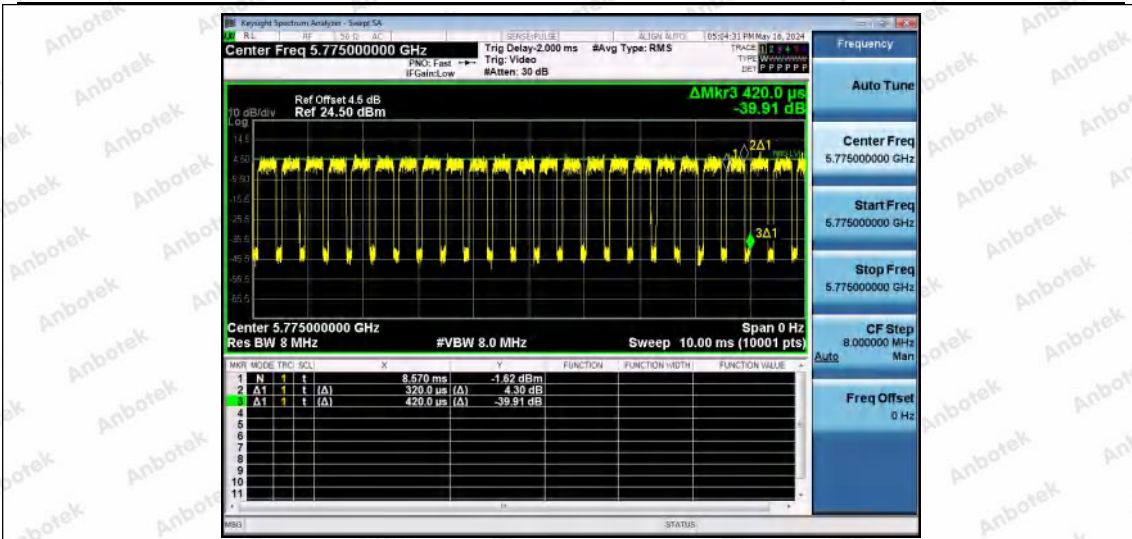

NTNV-11AC80MIMO-Ant2-5775

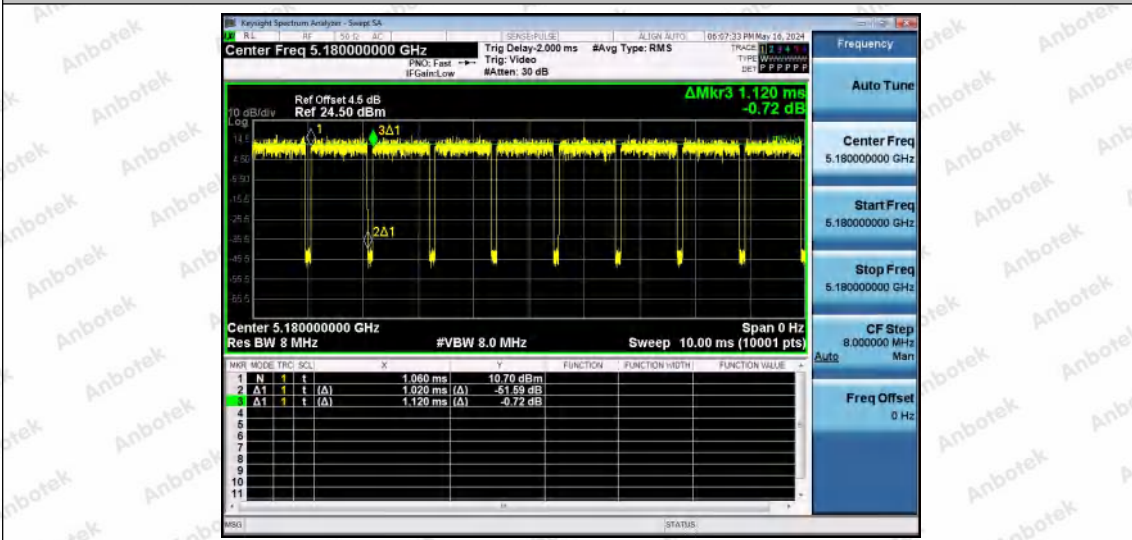

NTNV-11AX20MIMO-Ant1-5180

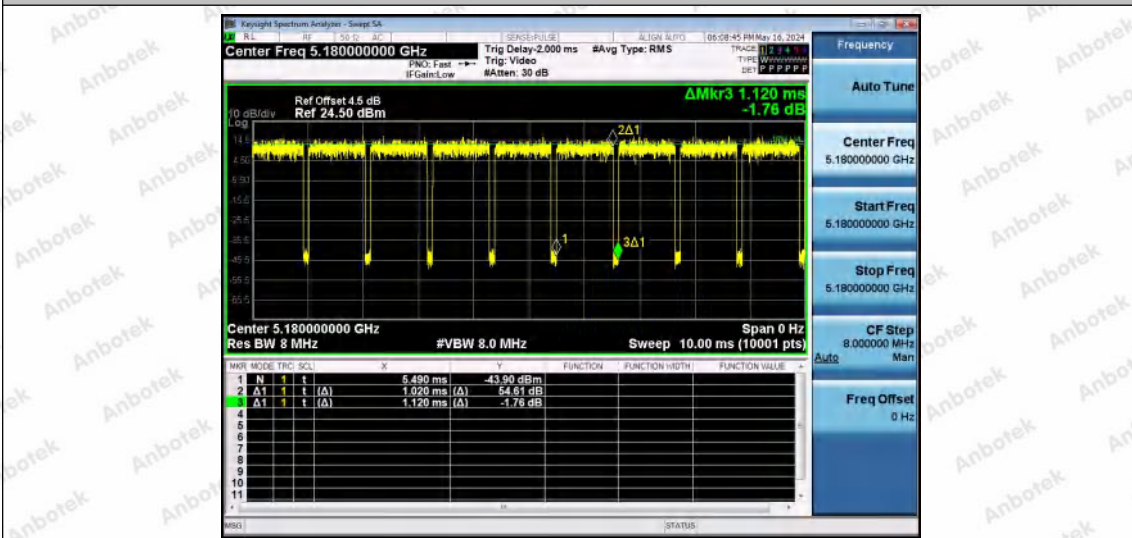


NTNV-11AX20MIMO-Ant2-5180

Shenzhen Anbotek Compliance Laboratory Limited


Address: 1/F., Building D, Sogood Science and Technology Park, Sanwei Community, Hangcheng Street, Bao'an District, Shenzhen, Guangdong, China.
 Tel: (86) 0755-26066440 Fax: (86) 0755-26014772 Email: service@anbotek.com

Hotline 400-003-0500
 www.anbotek.com.cn




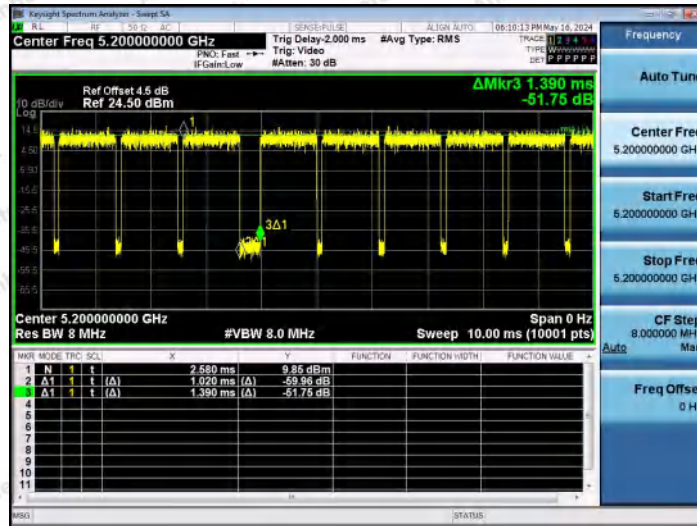

NTNV-11AX20MIMO-Ant1-5200

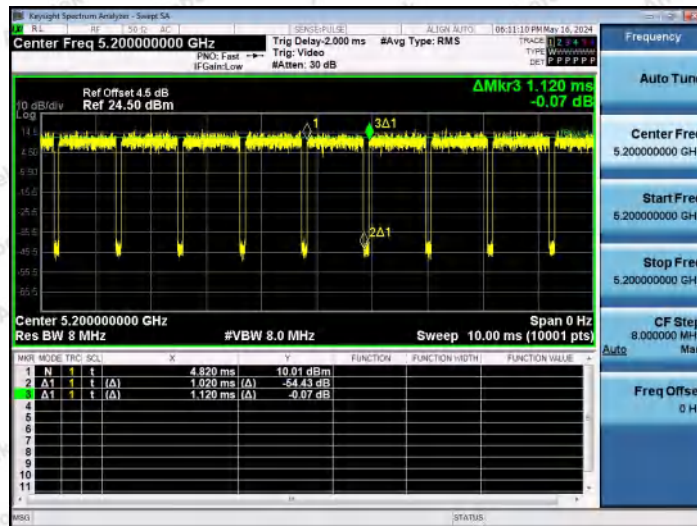

NTNV-11AX20MIMO-Ant2-5200

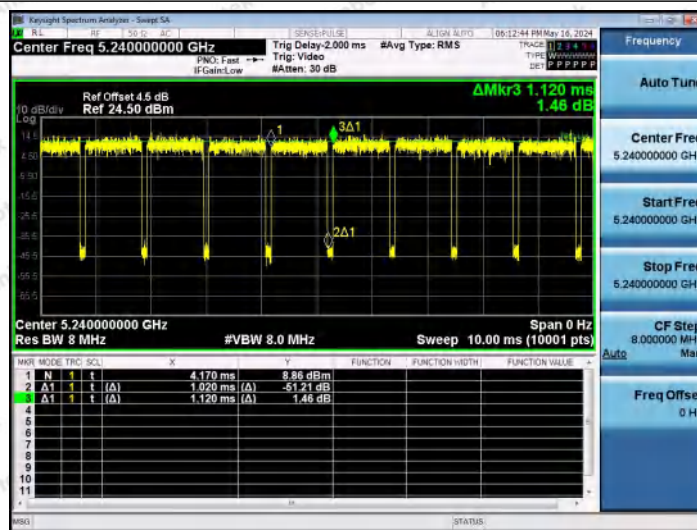


NTNV-11AX20MIMO-Ant1-5240

Shenzhen Anbotek Compliance Laboratory Limited


Address: 1/F., Building D, Sogood Science and Technology Park, Sanwei Community, Hangcheng Street, Bao'an District, Shenzhen, Guangdong, China.
 Tel: (86) 0755-26066440 Fax: (86) 0755-26014772 Email: service@anbotek.com

Hotline 400-003-0500
 www.anbotek.com.cn




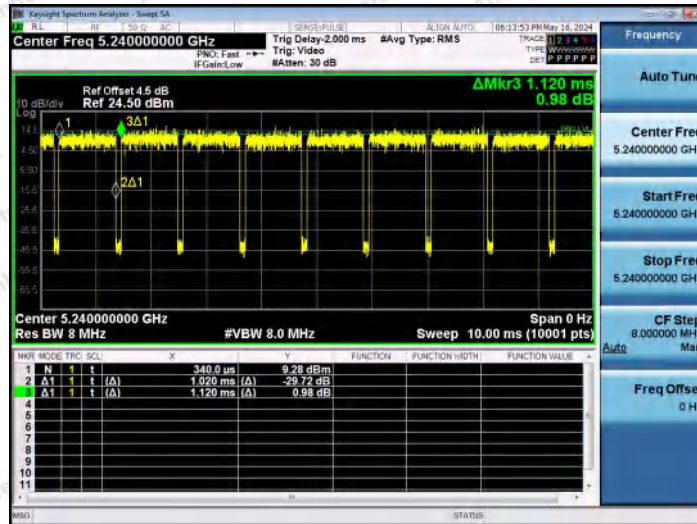

NTNV-11AX20MIMO-Ant2-5240

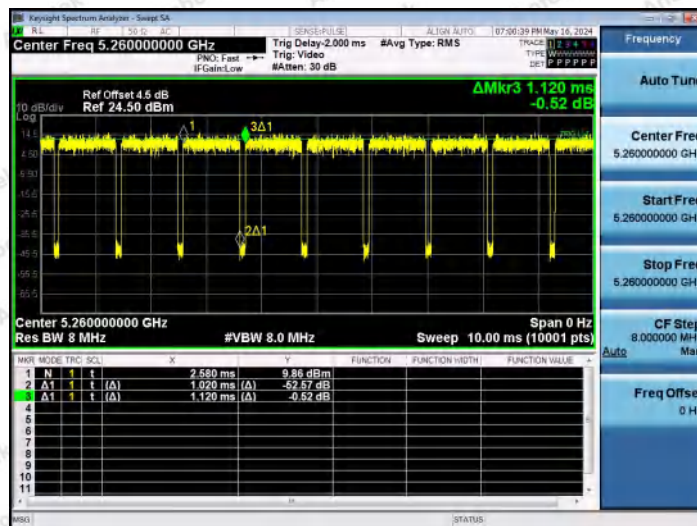

NTNV-11AX20MIMO-Ant1-5260

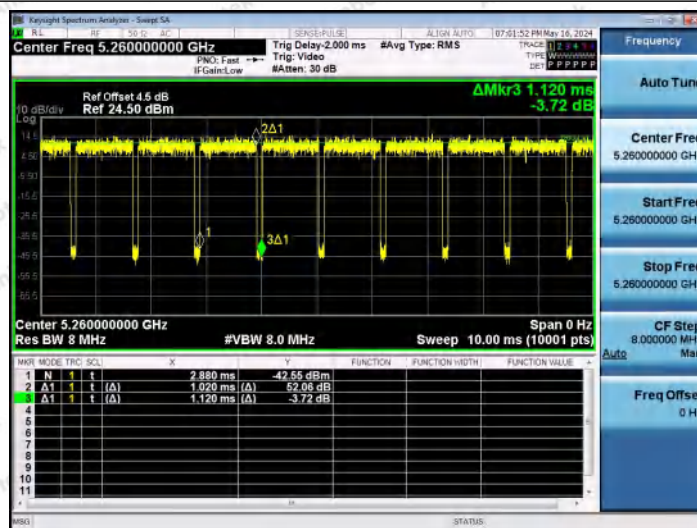


NTNV-11AX20MIMO-Ant2-5260

Shenzhen Anbotek Compliance Laboratory Limited


Address: 1/F., Building D, Sogood Science and Technology Park, Sanwei Community, Hangcheng Street, Bao'an District, Shenzhen, Guangdong, China.
 Tel: (86) 0755-26066440 Fax: (86) 0755-26014772 Email: service@anbotek.com

Hotline 400-003-0500
 www.anbotek.com.cn




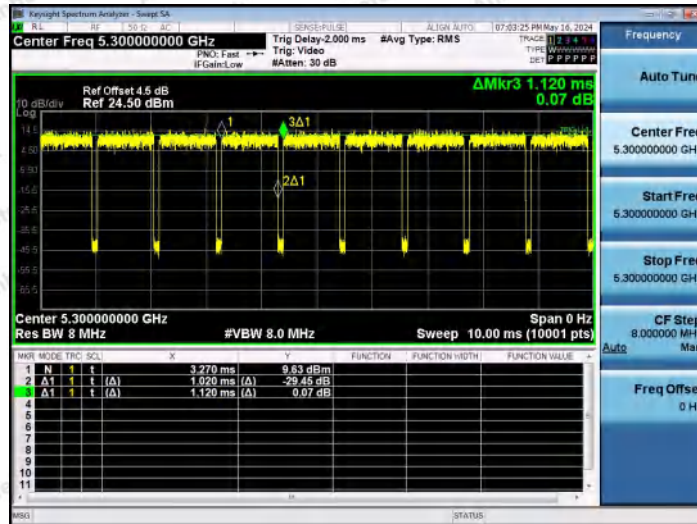

NTNV-11AX20MIMO-Ant1-5300

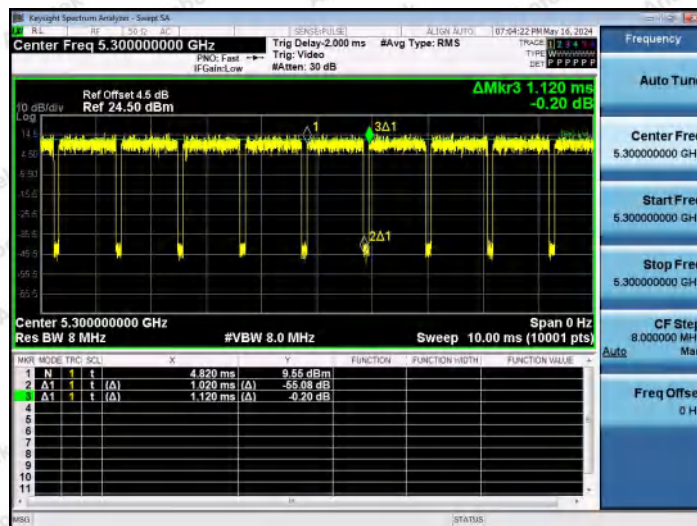

NTNV-11AX20MIMO-Ant2-5300

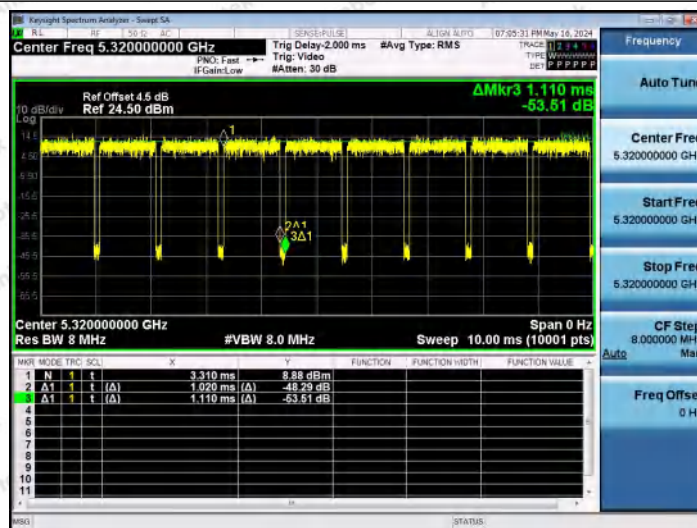


NTNV-11AX20MIMO-Ant1-5320

Shenzhen Anbotek Compliance Laboratory Limited


Address: 1/F., Building D, Sogood Science and Technology Park, Sanwei Community, Hangcheng Street, Bao'an District, Shenzhen, Guangdong, China.
 Tel: (86) 0755-26066440 Fax: (86) 0755-26014772 Email: service@anbotek.com

Hotline 400-003-0500
 www.anbotek.com.cn




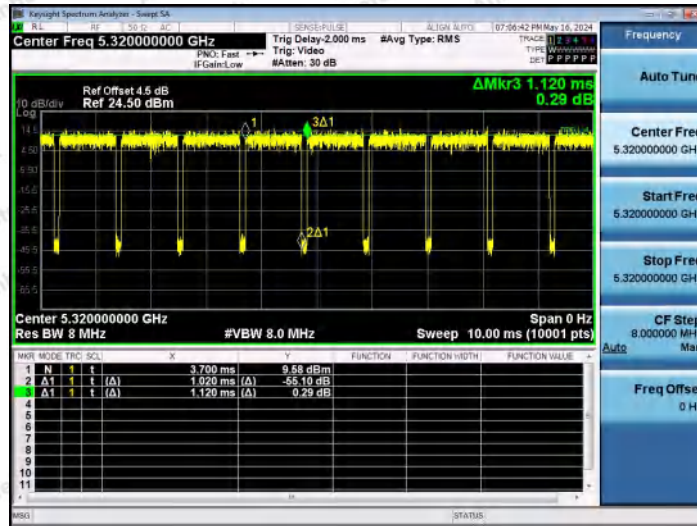

NTNV-11AX20MIMO-Ant2-5320

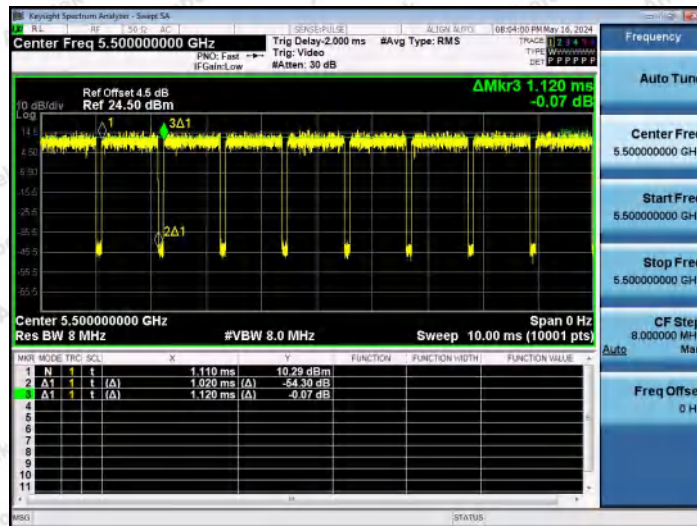

NTNV-11AX20MIMO-Ant1-5500

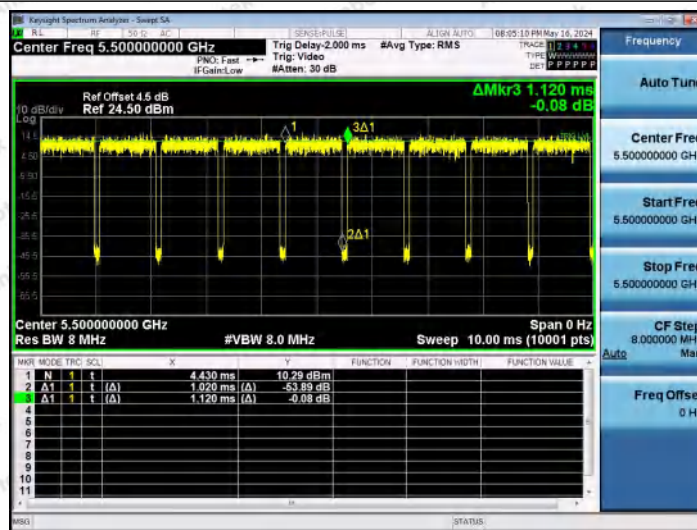


NTNV-11AX20MIMO-Ant2-5500

Shenzhen Anbotek Compliance Laboratory Limited


Address: 1/F., Building D, Sogood Science and Technology Park, Sanwei Community, Hangcheng Street, Bao'an District, Shenzhen, Guangdong, China.
 Tel: (86) 0755-26066440 Fax: (86) 0755-26014772 Email: service@anbotek.com

Hotline 400-003-0500
 www.anbotek.com.cn




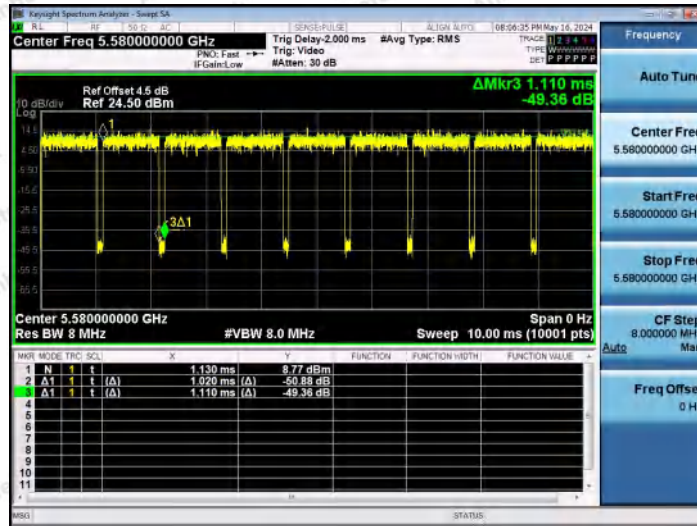

NTNV-11AX20MIMO-Ant1-5580

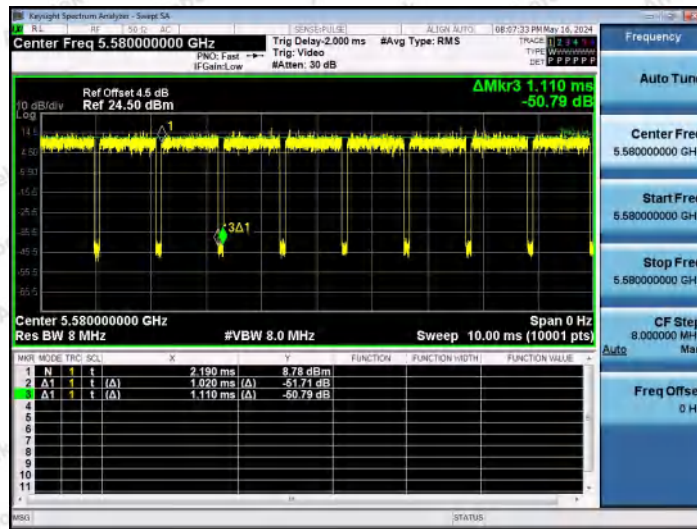

NTNV-11AX20MIMO-Ant2-5580

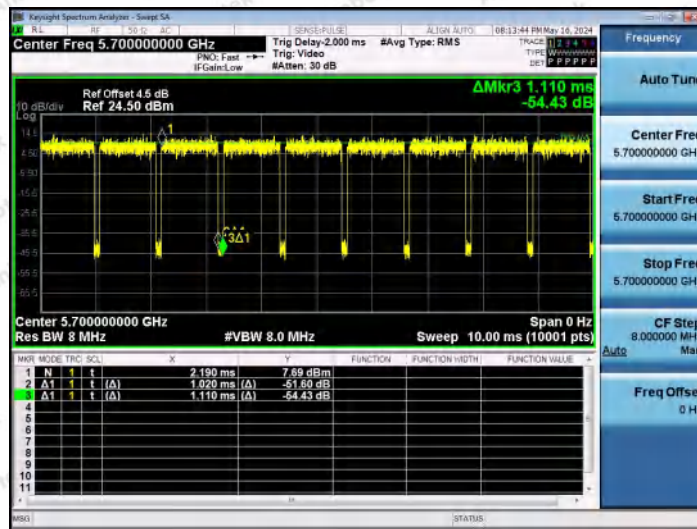


NTNV-11AX20MIMO-Ant1-5700

Shenzhen Anbotek Compliance Laboratory Limited


Address: 1/F., Building D, Sogood Science and Technology Park, Sanwei Community, Hangcheng Street, Bao'an District, Shenzhen, Guangdong, China.
 Tel: (86) 0755-26066440 Fax: (86) 0755-26014772 Email: service@anbotek.com

Hotline 400-003-0500
 www.anbotek.com.cn




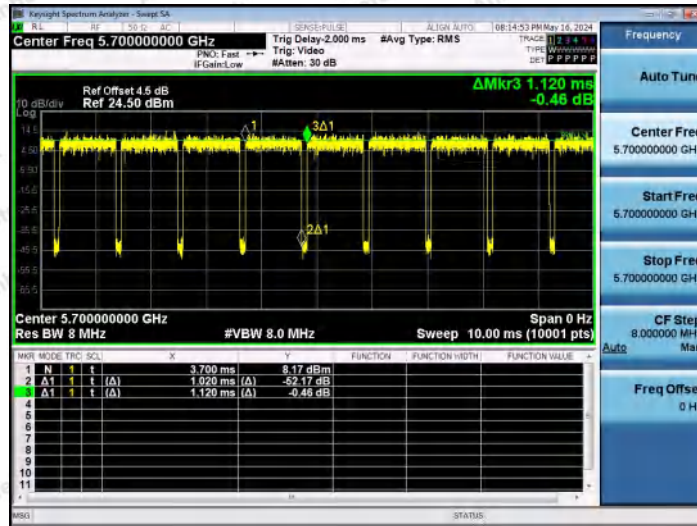

NTNV-11AX20MIMO-Ant2-5700

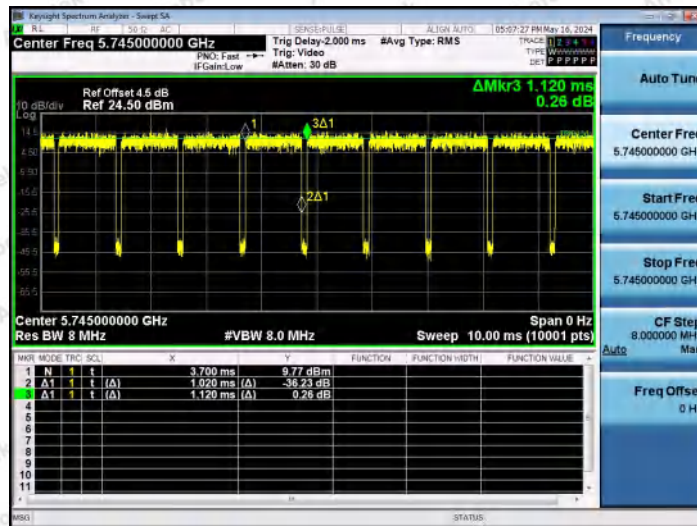

NTNV-11AX20MIMO-Ant1-5745

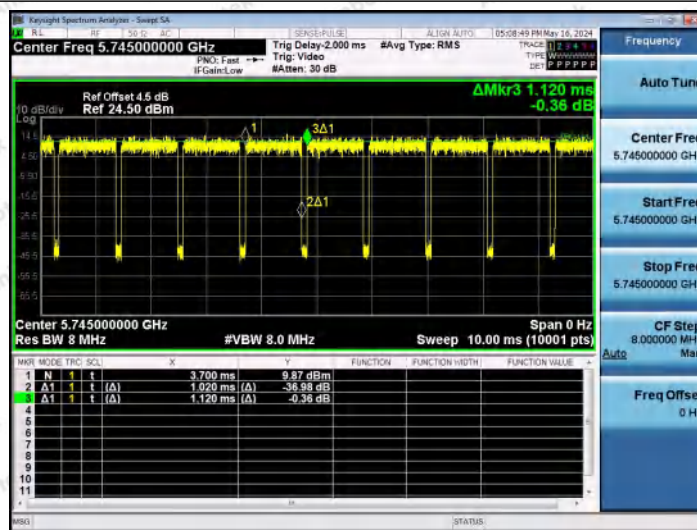


NTNV-11AX20MIMO-Ant2-5745

Shenzhen Anbotek Compliance Laboratory Limited


Address: 1/F., Building D, Sogood Science and Technology Park, Sanwei Community, Hangcheng Street, Bao'an District, Shenzhen, Guangdong, China.
 Tel: (86) 0755-26066440 Fax: (86) 0755-26014772 Email: service@anbotek.com

Hotline 400-003-0500
 www.anbotek.com.cn




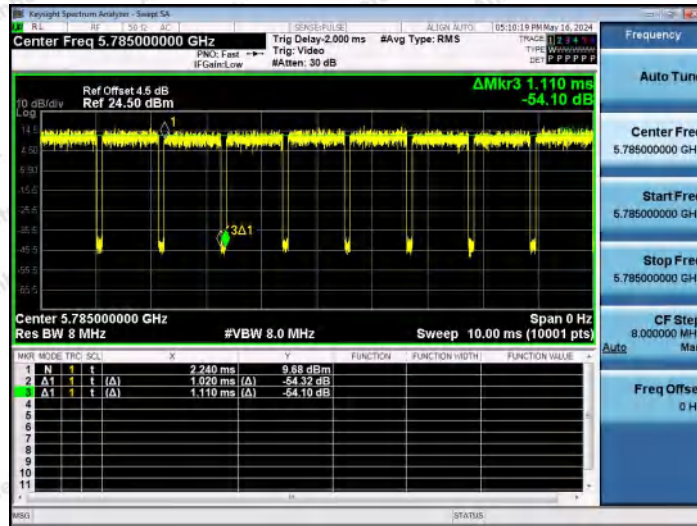

NTNV-11AX20MIMO-Ant1-5785

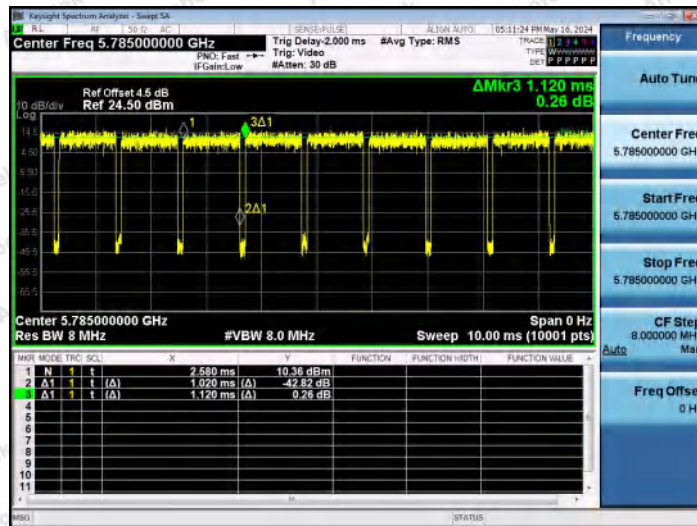

NTNV-11AX20MIMO-Ant2-5785

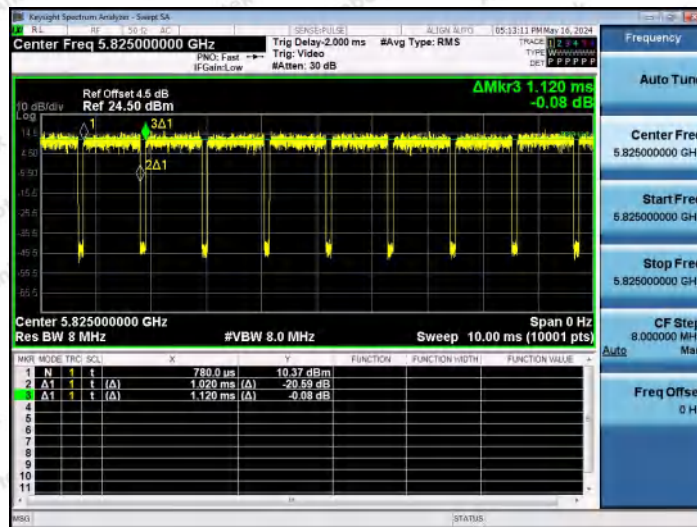


NTNV-11AX20MIMO-Ant1-5825

Shenzhen Anbotek Compliance Laboratory Limited


Address: 1/F., Building D, Sogood Science and Technology Park, Sanwei Community, Hangcheng Street, Bao'an District, Shenzhen, Guangdong, China.
 Tel: (86) 0755-26066440 Fax: (86) 0755-26014772 Email: service@anbotek.com

Hotline 400-003-0500
 www.anbotek.com.cn




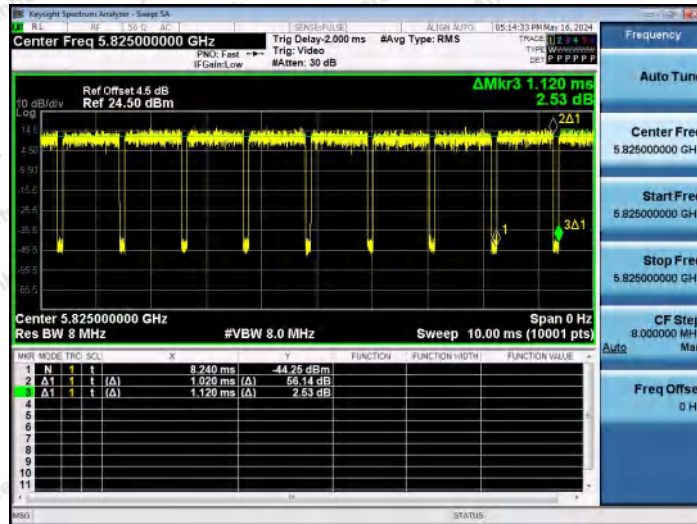

NTNV-11AX20MIMO-Ant2-5825

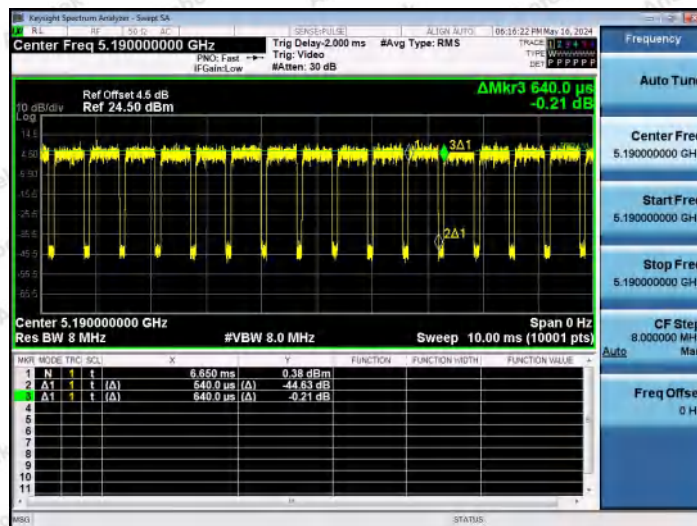

NTNV-11AX40MIMO-Ant1-5190

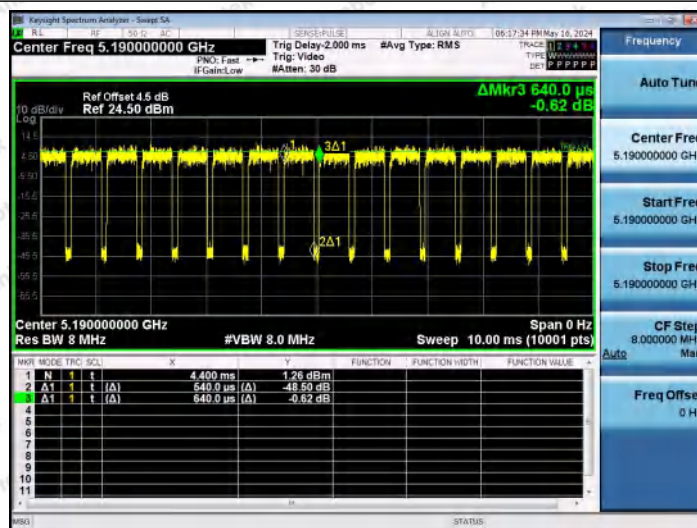


NTNV-11AX40MIMO-Ant2-5190

Shenzhen Anbotek Compliance Laboratory Limited


Address: 1/F., Building D, Sogood Science and Technology Park, Sanwei Community, Hangcheng Street, Bao'an District, Shenzhen, Guangdong, China.
Tel: (86) 0755-26066440 Fax: (86) 0755-26014772 Email: service@anbotek.com

Hotline 400-003-0500
www.anbotek.com.cn




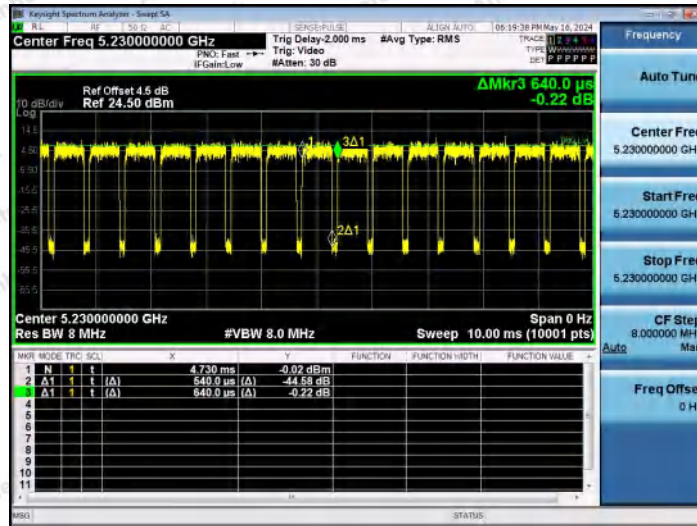

NTNV-11AX40MIMO-Ant1-5230

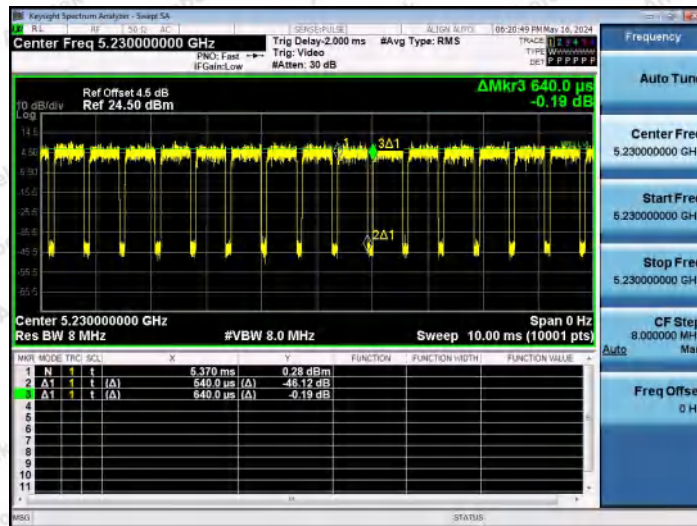

NTNV-11AX40MIMO-Ant2-5230

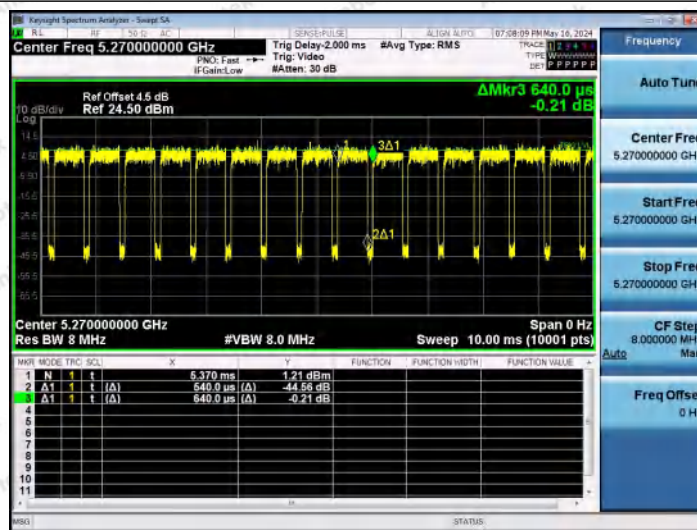


NTNV-11AX40MIMO-Ant1-5270

Shenzhen Anbotek Compliance Laboratory Limited


Address: 1/F., Building D, Sogood Science and Technology Park, Sanwei Community, Hangcheng Street, Bao'an District, Shenzhen, Guangdong, China.
Tel: (86) 0755-26066440 Fax: (86) 0755-26014772 Email: service@anbotek.com

Hotline
400-003-0500
www.anbotek.com.cn




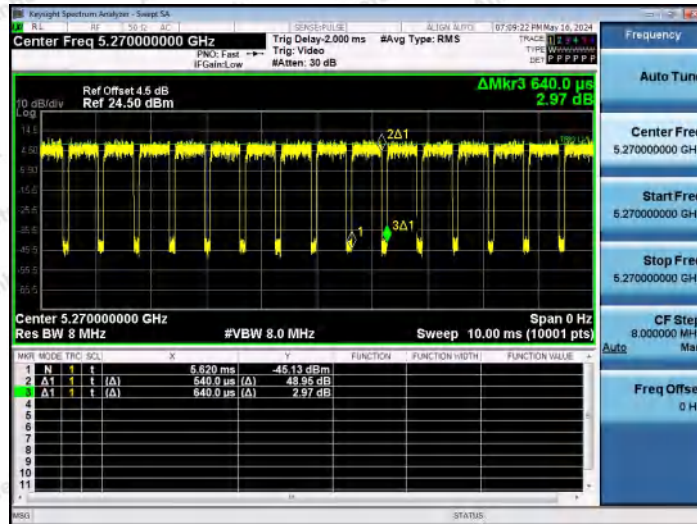

NTNV-11AX40MIMO-Ant2-5270

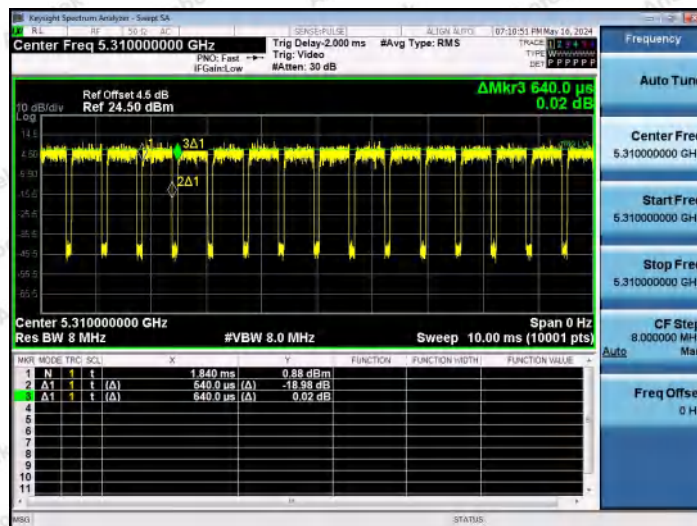

NTNV-11AX40MIMO-Ant1-5310

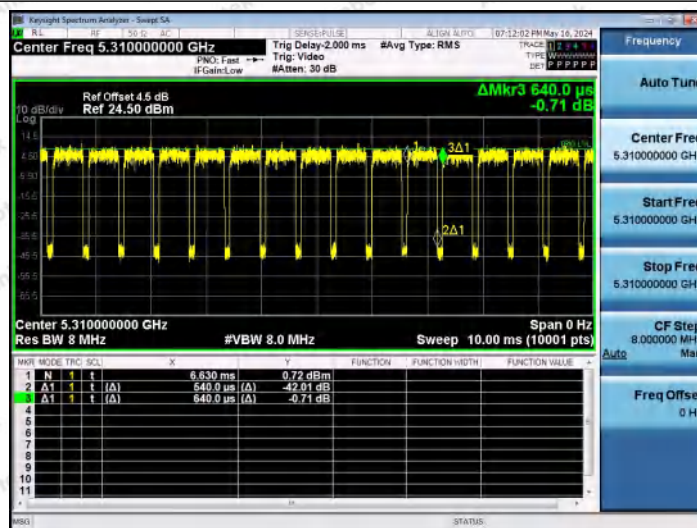


NTNV-11AX40MIMO-Ant2-5310

Shenzhen Anbotek Compliance Laboratory Limited


Address: 1/F., Building D, Sogood Science and Technology Park, Sanwei Community, Hangcheng Street, Bao'an District, Shenzhen, Guangdong, China.
 Tel: (86) 0755-26066440 Fax: (86) 0755-26014772 Email: service@anbotek.com

Hotline 400-003-0500
 www.anbotek.com.cn




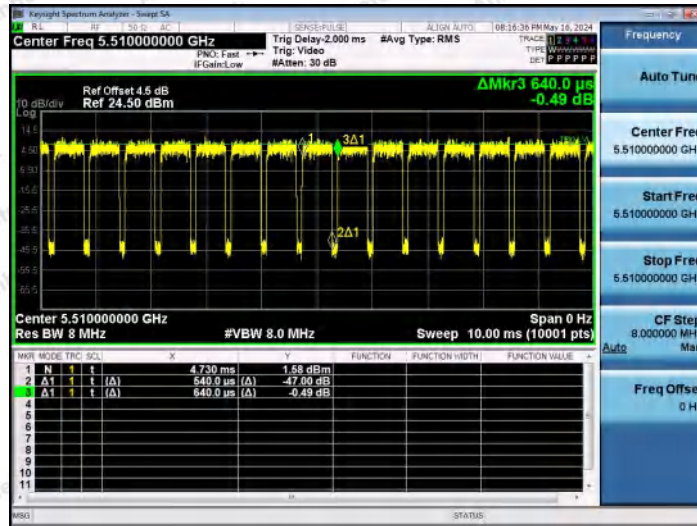

NTNV-11AX40MIMO-Ant1-5510

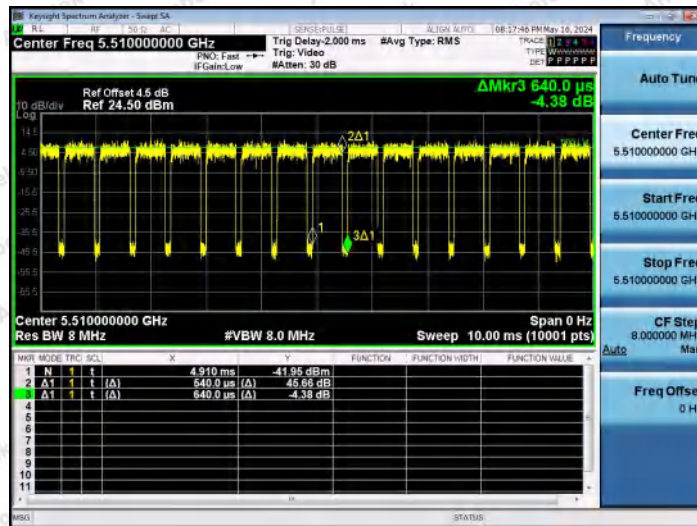

NTNV-11AX40MIMO-Ant2-5510

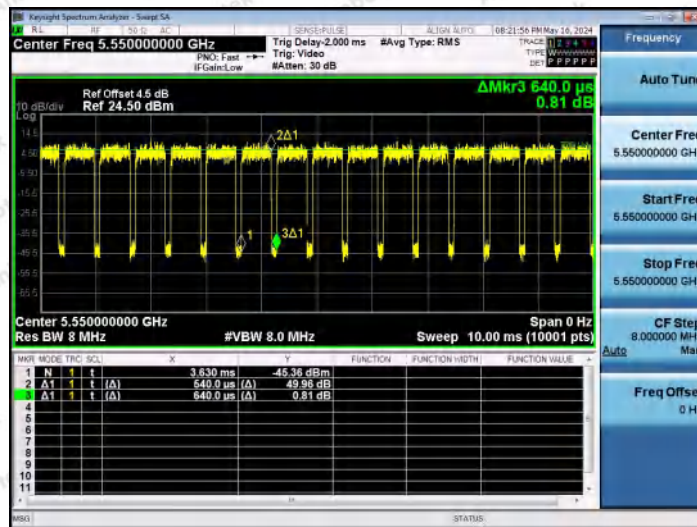


NTNV-11AX40MIMO-Ant1-5550

Shenzhen Anbotek Compliance Laboratory Limited


Address: 1/F., Building D, Sogood Science and Technology Park, Sanwei Community, Hangcheng Street, Bao'an District, Shenzhen, Guangdong, China.
 Tel: (86) 0755-26066440 Fax: (86) 0755-26014772 Email: service@anbotek.com

Hotline 400-003-0500
 www.anbotek.com.cn




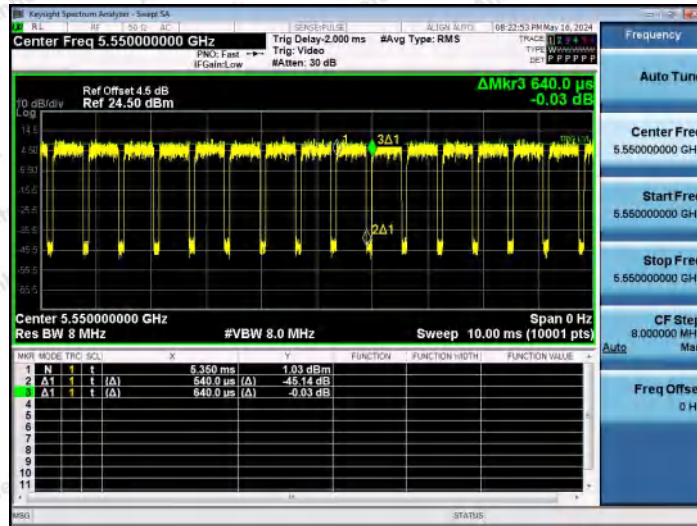

NTNV-11AX40MIMO-Ant2-5550

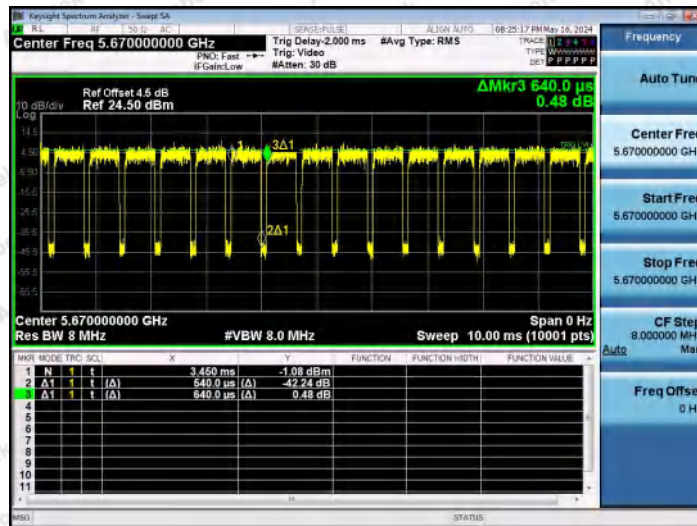

NTNV-11AX40MIMO-Ant1-5670

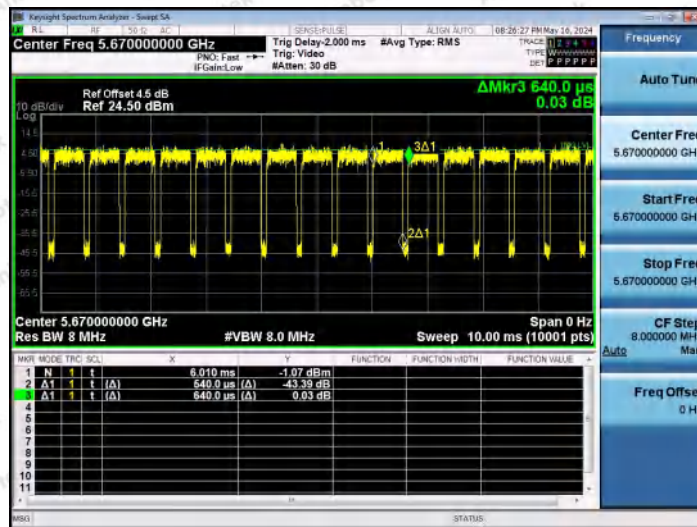


NTNV-11AX40MIMO-Ant2-5670

Shenzhen Anbotek Compliance Laboratory Limited


Address: 1/F., Building D, Sogood Science and Technology Park, Sanwei Community, Hangcheng Street, Bao'an District, Shenzhen, Guangdong, China.
 Tel: (86) 0755-26066440 Fax: (86) 0755-26014772 Email: service@anbotek.com

Hotline 400-003-0500
 www.anbotek.com.cn




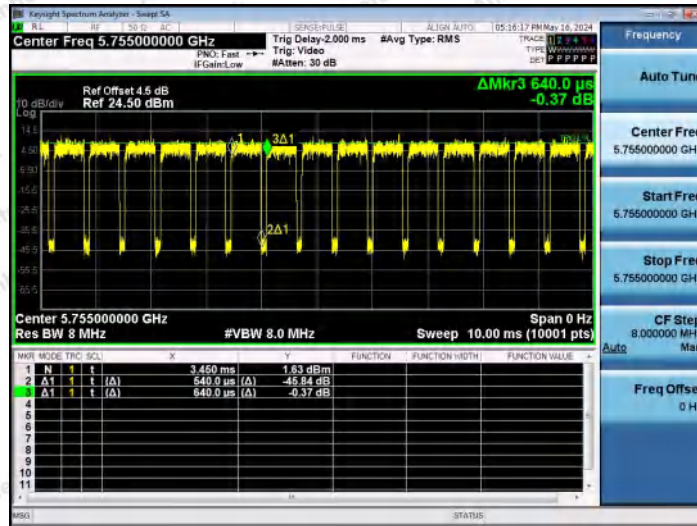

NTNV-11AX40MIMO-Ant1-5755

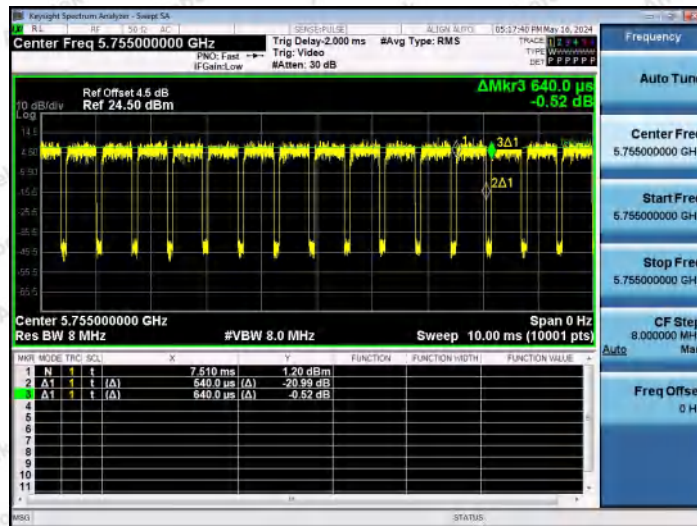

NTNV-11AX40MIMO-Ant2-5755

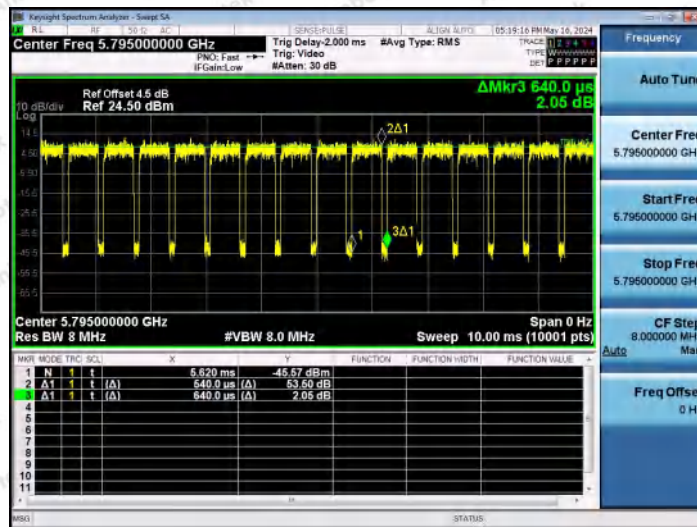


NTNV-11AX40MIMO-Ant1-5795

Shenzhen Anbotek Compliance Laboratory Limited


Address: 1/F., Building D, Sogood Science and Technology Park, Sanwei Community, Hangcheng Street, Bao'an District, Shenzhen, Guangdong, China.
 Tel: (86) 0755-26066440 Fax: (86) 0755-26014772 Email: service@anbotek.com

Hotline 400-003-0500
 www.anbotek.com.cn




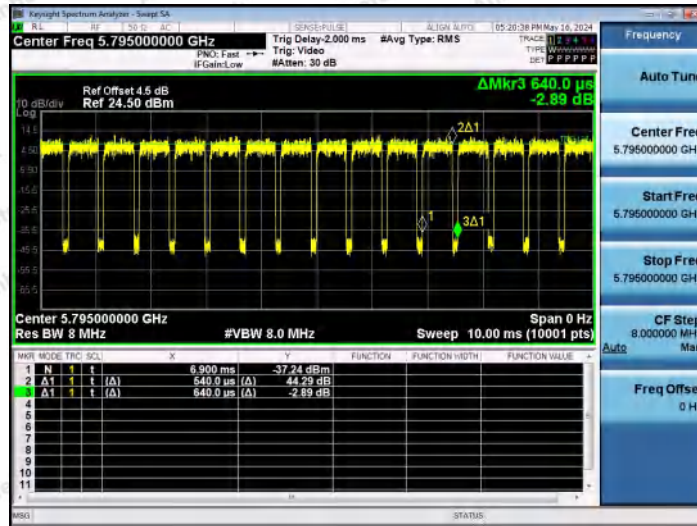

NTNV-11AX40MIMO-Ant2-5795

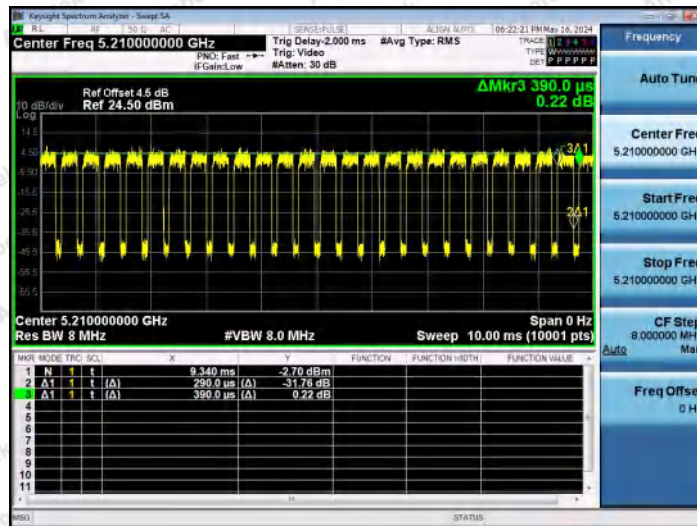

NTNV-11AX80MIMO-Ant1-5210

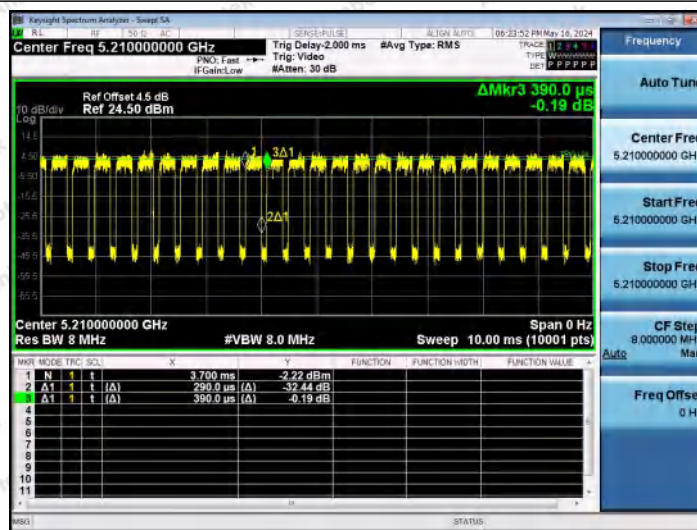


NTNV-11AX80MIMO-Ant2-5210

Shenzhen Anbotek Compliance Laboratory Limited


Address: 1/F., Building D, Sogood Science and Technology Park, Sanwei Community, Hangcheng Street, Bao'an District, Shenzhen, Guangdong, China.
Tel: (86) 0755-26066440 Fax: (86) 0755-26014772 Email: service@anbotek.com

Hotline 400-003-0500
www.anbotek.com.cn




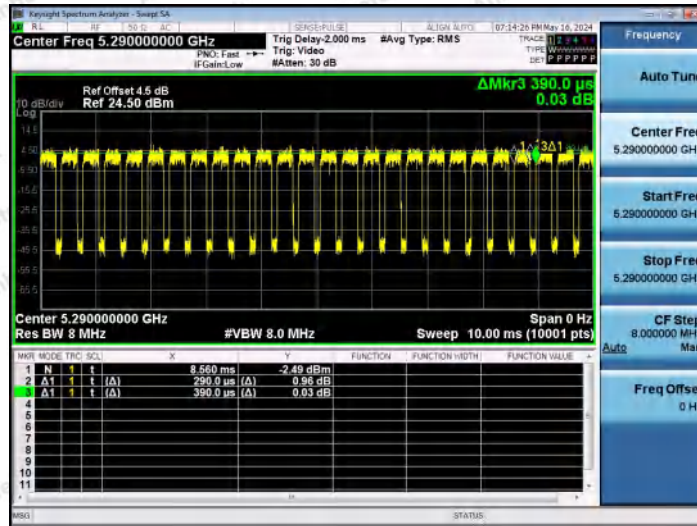

NTNV-11AX80MIMO-Ant1-5290

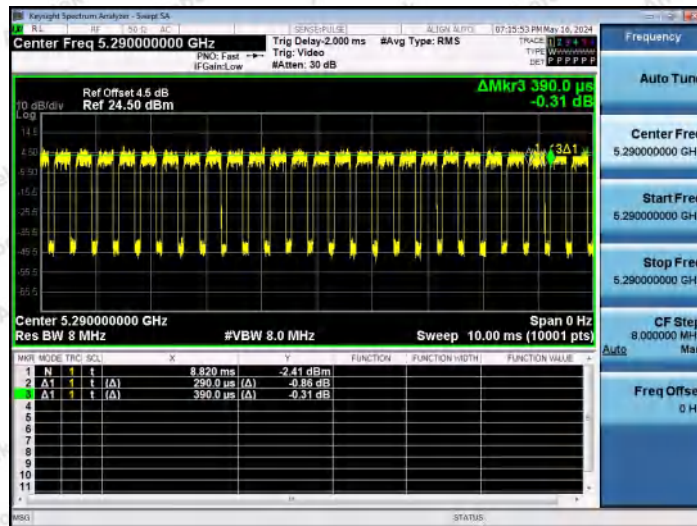

NTNV-11AX80MIMO-Ant2-5290

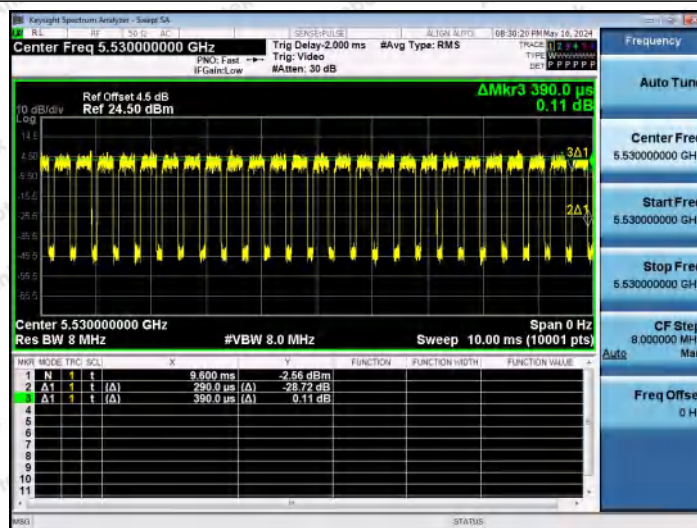


NTNV-11AX80MIMO-Ant1-5530

Shenzhen Anbotek Compliance Laboratory Limited


Address: 1/F., Building D, Sogood Science and Technology Park, Sanwei Community, Hangcheng Street, Bao'an District, Shenzhen, Guangdong, China.
 Tel: (86) 0755-26066440 Fax: (86) 0755-26014772 Email: service@anbotek.com

Hotline 400-003-0500
 www.anbotek.com.cn




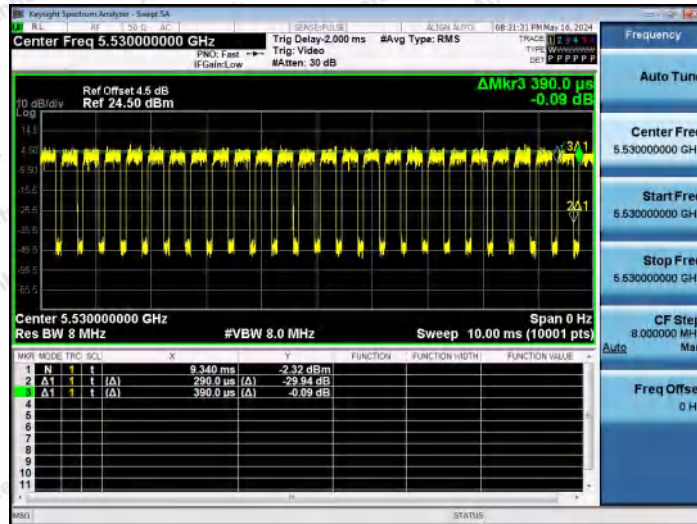

NTNV-11AX80MIMO-Ant2-5530

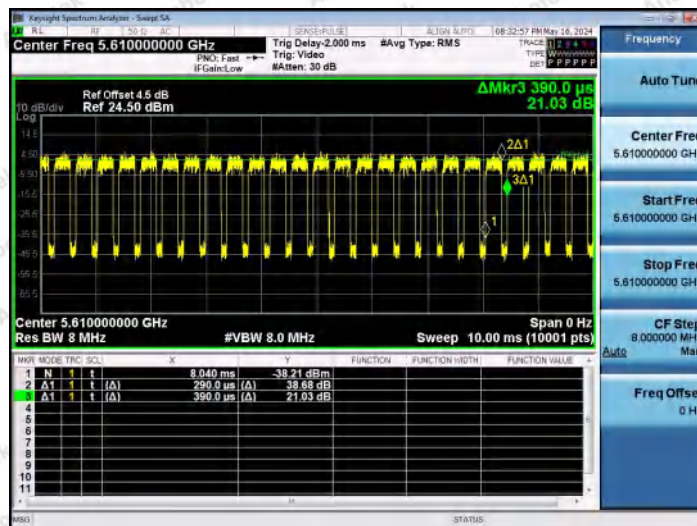

NTNV-11AX80MIMO-Ant1-5610

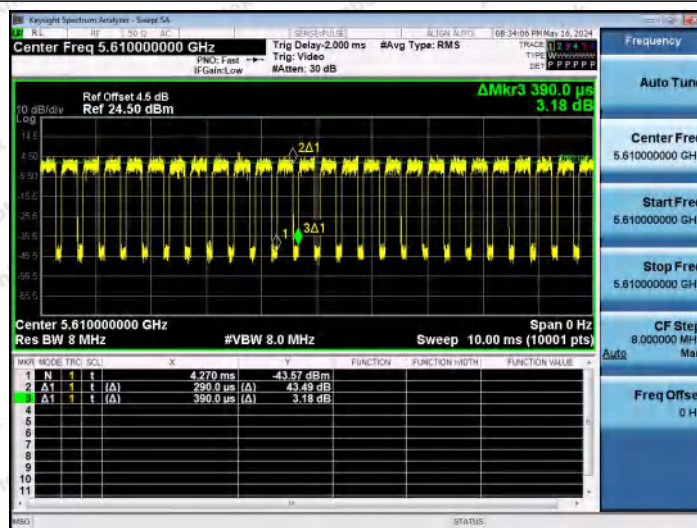


NTNV-11AX80MIMO-Ant2-5610

Shenzhen Anbotek Compliance Laboratory Limited


Address: 1/F., Building D, Sogood Science and Technology Park, Sanwei Community, Hangcheng Street, Bao'an District, Shenzhen, Guangdong, China.
 Tel: (86) 0755-26066440 Fax: (86) 0755-26014772 Email: service@anbotek.com

Hotline 400-003-0500
 www.anbotek.com.cn



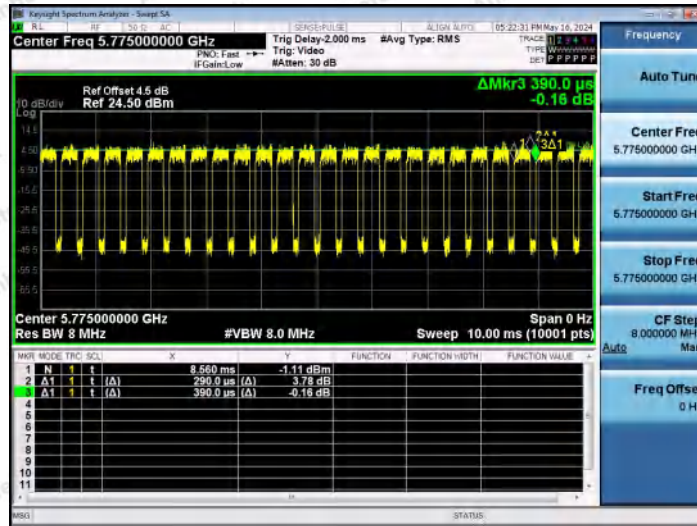

NTNV-11AX80MIMO-Ant1-5775

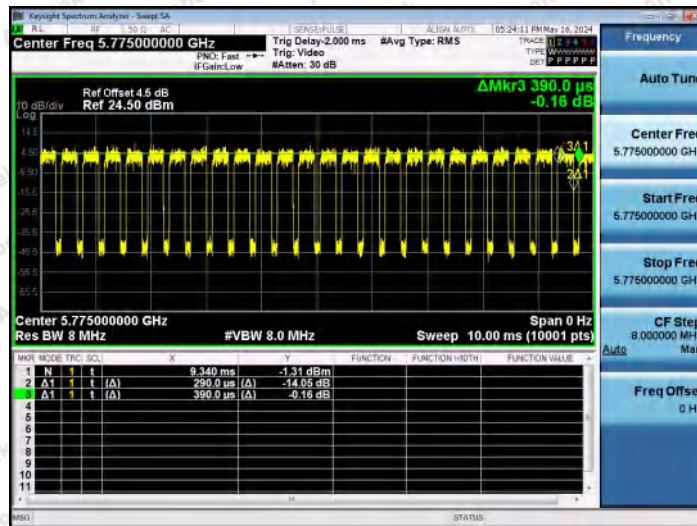

NTNV-11AX80MIMO-Ant2-5775

Shenzhen Anbotek Compliance Laboratory Limited

Address: 1/F., Building D, Sogood Science and Technology Park, Sanwei Community, Hangcheng Street, Bao'an District, Shenzhen, Guangdong, China.
 Tel: (86) 0755-26066440 Fax: (86) 0755-26014772 Email: service@anbotek.com

Hotline 400-003-0500
 www.anbotek.com.cn



Appendix C: Maximum Conducted Output Power

Test Result Channel Power

Test Mode	Antenna	Frequency[MHz]	Channel Power [dBm]	Duty Cycle [%]	DC Factor [dBm]	Result [dBm]	Limit [dBm]	Verdict
11A	Ant1	5180	13.31	93.29	0.30	13.61	≤23.98	PASS
11A	Ant2	5180	13.32	93.33	0.30	13.62	≤23.98	PASS
11A	Ant1	5200	13.08	93.33	0.30	13.38	≤23.98	PASS
11A	Ant2	5200	13.52	93.29	0.30	13.82	≤23.98	PASS
11A	Ant1	5240	13.12	93.33	0.30	13.42	≤23.98	PASS
11A	Ant2	5240	12.52	93.29	0.30	12.82	≤23.98	PASS
11A	Ant1	5260	13.23	93.33	0.30	13.53	≤23.98	PASS
11A	Ant2	5260	12.17	93.33	0.30	12.47	≤23.98	PASS
11A	Ant1	5300	12.68	93.33	0.30	12.98	≤23.98	PASS
11A	Ant2	5300	10.77	93.29	0.30	11.07	≤23.98	PASS
11A	Ant1	5320	12.45	93.29	0.30	12.75	≤23.98	PASS
11A	Ant2	5320	10.65	93.29	0.30	10.95	≤23.98	PASS
11A	Ant1	5500	14.28	93.29	0.30	14.58	≤23.98	PASS
11A	Ant2	5500	13.40	93.33	0.30	13.70	≤23.98	PASS
11A	Ant1	5580	12.47	93.96	0.27	12.74	≤23.98	PASS
11A	Ant2	5580	12.45	93.29	0.30	12.75	≤23.98	PASS
11A	Ant1	5700	12.11	93.29	0.30	12.41	≤23.98	PASS
11A	Ant2	5700	12.06	93.33	0.30	12.36	≤23.98	PASS
11A	Ant1	5745	13.24	93.96	0.27	13.51	≤30.00	PASS
11A	Ant2	5745	13.25	93.33	0.30	13.55	≤30.00	PASS
11A	Ant1	5785	13.68	93.29	0.30	13.98	≤30.00	PASS
11A	Ant2	5785	13.70	93.33	0.30	14.00	≤30.00	PASS
11A	Ant1	5825	13.90	93.29	0.30	14.20	≤30.00	PASS
11A	Ant2	5825	13.93	93.29	0.30	14.23	≤30.00	PASS
11N20MIMO	Ant1	5180	14.33	92.91	0.32	14.65	≤23.98	PASS
11N20MIMO	Ant2	5180	14.32	92.91	0.32	14.64	≤23.98	PASS
11N20MIMO	total	5180	---	---	---	17.66	≤23.05	PASS
11N20MIMO	Ant1	5200	14.14	92.91	0.32	14.46	≤23.98	PASS
11N20MIMO	Ant2	5200	14.19	92.91	0.32	14.51	≤23.98	PASS
11N20MIMO	total	5200	---	---	---	17.50	≤23.05	PASS
11N20MIMO	Ant1	5240	13.60	92.86	0.32	13.92	≤23.98	PASS
11N20MIMO	Ant2	5240	13.67	92.91	0.32	13.99	≤23.98	PASS
11N20MIMO	total	5240	---	---	---	16.97	≤23.05	PASS
11N20MIMO	Ant1	5260	12.82	92.91	0.32	13.14	≤23.98	PASS
11N20MIMO	Ant2	5260	12.83	92.91	0.32	13.15	≤23.98	PASS
11N20MIMO	total	5260	---	---	---	16.16	≤22.97	PASS

Shenzhen Anbotek Compliance Laboratory Limited

Address: 1/F., Building D, Sogood Science and Technology Park, Sanwei Community, Hangcheng Street, Bao'an District, Shenzhen, Guangdong, China.
Tel: (86) 0755-26066440 Fax: (86) 0755-26014772 Email: service@anbotek.com



Hotline

400-003-0500

www.anbotek.com.cn



11N20MIMO	Ant1	5300	12.54	92.91	0.32	12.86	≤23.98	PASS
11N20MIMO	Ant2	5300	12.48	92.91	0.32	12.80	≤23.98	PASS
11N20MIMO	total	5300	---	---	---	15.84	≤22.97	PASS
11N20MIMO	Ant1	5320	12.37	92.91	0.32	12.69	≤23.98	PASS
11N20MIMO	Ant2	5320	12.36	92.86	0.32	12.68	≤23.98	PASS
11N20MIMO	total	5320	---	---	---	15.70	≤22.97	PASS
11N20MIMO	Ant1	5500	13.11	92.86	0.32	13.43	≤23.98	PASS
11N20MIMO	Ant2	5500	13.10	93.57	0.29	13.39	≤23.98	PASS
11N20MIMO	total	5500	---	---	---	16.42	≤23.66	PASS
11N20MIMO	Ant1	5580	12.22	92.86	0.32	12.54	≤23.98	PASS
11N20MIMO	Ant2	5580	12.28	92.86	0.32	12.60	≤23.98	PASS
11N20MIMO	total	5580	---	---	---	15.58	≤23.66	PASS
11N20MIMO	Ant1	5700	10.95	92.91	0.32	11.27	≤23.98	PASS
11N20MIMO	Ant2	5700	10.94	92.91	0.32	11.26	≤23.98	PASS
11N20MIMO	total	5700	---	---	---	14.28	≤23.66	PASS
11N20MIMO	Ant1	5745	13.09	92.91	0.32	13.41	≤30.00	PASS
11N20MIMO	Ant2	5745	13.12	92.86	0.32	13.44	≤30.00	PASS
11N20MIMO	total	5745	---	---	---	16.44	≤29.64	PASS
11N20MIMO	Ant1	5785	13.59	92.91	0.32	13.91	≤30.00	PASS
11N20MIMO	Ant2	5785	13.60	92.91	0.32	13.92	≤30.00	PASS
11N20MIMO	total	5785	---	---	---	16.93	≤29.64	PASS
11N20MIMO	Ant1	5825	13.75	92.91	0.32	14.07	≤30.00	PASS
11N20MIMO	Ant2	5825	13.80	92.91	0.32	14.12	≤30.00	PASS
11N20MIMO	total	5825	---	---	---	17.11	≤29.64	PASS
11N40MIMO	Ant1	5190	13.99	90.48	0.43	14.42	≤23.98	PASS
11N40MIMO	Ant2	5190	14.30	90.48	0.43	14.73	≤23.98	PASS
11N40MIMO	total	5190	---	---	---	17.59	≤23.05	PASS
11N40MIMO	Ant1	5230	13.62	90.38	0.44	14.06	≤23.98	PASS
11N40MIMO	Ant2	5230	13.73	90.38	0.44	14.17	≤23.98	PASS
11N40MIMO	total	5230	---	---	---	17.13	≤23.05	PASS
11N40MIMO	Ant1	5270	12.29	90.48	0.43	12.72	≤23.98	PASS
11N40MIMO	Ant2	5270	12.29	90.38	0.44	12.73	≤23.98	PASS
11N40MIMO	total	5270	---	---	---	15.74	≤22.97	PASS
11N40MIMO	Ant1	5310	11.77	90.38	0.44	12.21	≤23.98	PASS
11N40MIMO	Ant2	5310	11.72	90.38	0.44	12.16	≤23.98	PASS
11N40MIMO	total	5310	---	---	---	15.20	≤22.97	PASS
11N40MIMO	Ant1	5510	12.60	90.38	0.44	13.04	≤23.98	PASS
11N40MIMO	Ant2	5510	12.58	90.38	0.44	13.02	≤23.98	PASS
11N40MIMO	total	5510	---	---	---	16.04	≤23.66	PASS
11N40MIMO	Ant1	5550	12.01	90.48	0.43	12.44	≤23.98	PASS
11N40MIMO	Ant2	5550	12.01	90.38	0.44	12.45	≤23.98	PASS
11N40MIMO	total	5550	---	---	---	15.46	≤23.66	PASS

Shenzhen Anbotek Compliance Laboratory Limited

Address: 1/F., Building D, Sogood Science and Technology Park, Sanwei Community, Hangcheng Street, Bao'an District, Shenzhen, Guangdong, China.
Tel: (86) 0755-26066440 Fax: (86) 0755-26014772 Email: service@anbotek.com

Hotline
400-003-0500
www.anbotek.com.cn



11N40MIMO	Ant1	5670	10.51	90.38	0.44	10.95	≤23.98	PASS
11N40MIMO	Ant2	5670	10.57	90.38	0.44	11.01	≤23.98	PASS
11N40MIMO	total	5670	---	---	---	13.99	≤23.66	PASS
11N40MIMO	Ant1	5755	12.87	90.38	0.44	13.31	≤30.00	PASS
11N40MIMO	Ant2	5755	12.84	90.38	0.44	13.28	≤30.00	PASS
11N40MIMO	total	5755	---	---	---	16.31	≤29.64	PASS
11N40MIMO	Ant1	5795	13.46	90.38	0.44	13.90	≤30.00	PASS
11N40MIMO	Ant2	5795	13.41	90.38	0.44	13.85	≤30.00	PASS
11N40MIMO	total	5795	---	---	---	16.89	≤29.64	PASS
11AC20MIMO	Ant1	5180	14.55	92.91	0.32	14.87	≤23.98	PASS
11AC20MIMO	Ant2	5180	14.51	92.96	0.32	14.83	≤23.98	PASS
11AC20MIMO	total	5180	---	---	---	17.86	≤23.05	PASS
11AC20MIMO	Ant1	5200	14.33	92.91	0.32	14.65	≤23.98	PASS
11AC20MIMO	Ant2	5200	14.31	92.91	0.32	14.63	≤23.98	PASS
11AC20MIMO	total	5200	---	---	---	17.65	≤23.05	PASS
11AC20MIMO	Ant1	5240	13.80	92.96	0.32	14.12	≤23.98	PASS
11AC20MIMO	Ant2	5240	13.81	92.96	0.32	14.13	≤23.98	PASS
11AC20MIMO	total	5240	---	---	---	17.14	≤23.05	PASS
11AC20MIMO	Ant1	5260	12.78	92.91	0.32	13.10	≤23.98	PASS
11AC20MIMO	Ant2	5260	12.80	92.91	0.32	13.12	≤23.98	PASS
11AC20MIMO	total	5260	---	---	---	16.12	≤22.97	PASS
11AC20MIMO	Ant1	5300	12.60	92.91	0.32	12.92	≤23.98	PASS
11AC20MIMO	Ant2	5300	12.61	92.96	0.32	12.93	≤23.98	PASS
11AC20MIMO	total	5300	---	---	---	15.94	≤22.97	PASS
11AC20MIMO	Ant1	5320	12.31	92.91	0.32	12.63	≤23.98	PASS
11AC20MIMO	Ant2	5320	12.33	92.91	0.32	12.65	≤23.98	PASS
11AC20MIMO	total	5320	---	---	---	15.65	≤22.97	PASS
11AC20MIMO	Ant1	5500	13.20	92.91	0.32	13.52	≤23.98	PASS
11AC20MIMO	Ant2	5500	13.07	92.96	0.32	13.39	≤23.98	PASS
11AC20MIMO	total	5500	---	---	---	16.47	≤23.66	PASS
11AC20MIMO	Ant1	5580	12.27	92.96	0.32	12.59	≤23.98	PASS
11AC20MIMO	Ant2	5580	12.26	92.91	0.32	12.58	≤23.98	PASS
11AC20MIMO	total	5580	---	---	---	15.60	≤23.66	PASS
11AC20MIMO	Ant1	5700	10.98	92.91	0.32	11.30	≤23.98	PASS
11AC20MIMO	Ant2	5700	10.97	92.96	0.32	11.29	≤23.98	PASS
11AC20MIMO	total	5700	---	---	---	14.31	≤23.66	PASS
11AC20MIMO	Ant1	5745	13.07	92.91	0.32	13.39	≤30.00	PASS
11AC20MIMO	Ant2	5745	13.10	92.96	0.32	13.42	≤30.00	PASS
11AC20MIMO	total	5745	---	---	---	16.42	≤29.64	PASS
11AC20MIMO	Ant1	5785	13.63	92.96	0.32	13.95	≤30.00	PASS
11AC20MIMO	Ant2	5785	13.69	92.91	0.32	14.01	≤30.00	PASS
11AC20MIMO	total	5785	---	---	---	16.99	≤29.64	PASS

Shenzhen Anbotek Compliance Laboratory Limited

Address: 1/F., Building D, Sogood Science and Technology Park, Sanwei Community, Hangcheng Street, Bao'an District, Shenzhen, Guangdong, China.
Tel: (86) 0755-26066440 Fax: (86) 0755-26014772 Email: service@anbotek.com



Hotline

400-003-0500

www.anbotek.com.cn



11AC20MIMO	Ant1	5825	13.72	92.91	0.32	14.04	≤30.00	PASS
11AC20MIMO	Ant2	5825	13.71	92.96	0.32	14.03	≤30.00	PASS
11AC20MIMO	total	5825	---	---	---	17.05	≤29.64	PASS
11AC40MIMO	Ant1	5190	14.32	86.84	0.61	14.93	≤23.98	PASS
11AC40MIMO	Ant2	5190	14.31	86.84	0.61	14.92	≤23.98	PASS
11AC40MIMO	total	5190	---	---	---	17.94	≤23.05	PASS
11AC40MIMO	Ant1	5230	13.67	86.67	0.62	14.29	≤23.98	PASS
11AC40MIMO	Ant2	5230	13.67	86.84	0.61	14.28	≤23.98	PASS
11AC40MIMO	total	5230	---	---	---	17.30	≤23.05	PASS
11AC40MIMO	Ant1	5270	12.41	86.84	0.61	13.02	≤23.98	PASS
11AC40MIMO	Ant2	5270	12.38	86.84	0.61	12.99	≤23.98	PASS
11AC40MIMO	total	5270	---	---	---	16.02	≤22.97	PASS
11AC40MIMO	Ant1	5310	11.79	86.67	0.62	12.41	≤23.98	PASS
11AC40MIMO	Ant2	5310	11.81	86.84	0.61	12.42	≤23.98	PASS
11AC40MIMO	total	5310	---	---	---	15.43	≤22.97	PASS
11AC40MIMO	Ant1	5510	12.57	86.84	0.61	13.18	≤23.98	PASS
11AC40MIMO	Ant2	5510	12.59	86.84	0.61	13.20	≤23.98	PASS
11AC40MIMO	total	5510	---	---	---	16.20	≤23.66	PASS
11AC40MIMO	Ant1	5550	12.12	86.67	0.62	12.74	≤23.98	PASS
11AC40MIMO	Ant2	5550	12.09	86.84	0.61	12.70	≤23.98	PASS
11AC40MIMO	total	5550	---	---	---	15.73	≤23.66	PASS
11AC40MIMO	Ant1	5670	10.56	86.84	0.61	11.17	≤23.98	PASS
11AC40MIMO	Ant2	5670	10.56	86.84	0.61	11.17	≤23.98	PASS
11AC40MIMO	total	5670	---	---	---	14.18	≤23.66	PASS
11AC40MIMO	Ant1	5755	12.90	86.67	0.62	13.52	≤30.00	PASS
11AC40MIMO	Ant2	5755	12.92	86.84	0.61	13.53	≤30.00	PASS
11AC40MIMO	total	5755	---	---	---	16.54	≤29.64	PASS
11AC40MIMO	Ant1	5795	13.46	86.84	0.61	14.07	≤30.00	PASS
11AC40MIMO	Ant2	5795	13.44	86.84	0.61	14.05	≤30.00	PASS
11AC40MIMO	total	5795	---	---	---	17.07	≤29.64	PASS
11AC80MIMO	Ant1	5210	13.85	76.74	1.15	15.00	≤23.98	PASS
11AC80MIMO	Ant2	5210	13.88	76.19	1.18	15.06	≤23.98	PASS
11AC80MIMO	total	5210	---	---	---	18.04	≤23.05	PASS
11AC80MIMO	Ant1	5290	12.31	76.19	1.18	13.49	≤23.98	PASS
11AC80MIMO	Ant2	5290	12.26	76.19	1.18	13.44	≤23.98	PASS
11AC80MIMO	total	5290	---	---	---	16.48	≤22.97	PASS
11AC80MIMO	Ant1	5530	12.80	76.19	1.18	13.98	≤23.98	PASS
11AC80MIMO	Ant2	5530	12.78	76.74	1.15	13.93	≤23.98	PASS
11AC80MIMO	total	5530	---	---	---	16.97	≤23.66	PASS
11AC80MIMO	Ant1	5610	11.45	76.19	1.18	12.63	≤23.98	PASS
11AC80MIMO	Ant2	5610	11.54	76.19	1.18	12.72	≤23.98	PASS
11AC80MIMO	total	5610	---	---	---	15.69	≤23.66	PASS

Shenzhen Anbotek Compliance Laboratory Limited

Address: 1/F., Building D, Sogood Science and Technology Park, Sanwei Community, Hangcheng Street, Bao'an District, Shenzhen, Guangdong, China.
Tel: (86) 0755-26066440 Fax: (86) 0755-26014772 Email: service@anbotek.com

Hotline
400-003-0500
www.anbotek.com.cn



11AC80MIMO	Ant1	5775	13.08	76.19	1.18	14.26	≤30.00	PASS
11AC80MIMO	Ant2	5775	13.04	76.19	1.18	14.22	≤30.00	PASS
11AC80MIMO	total	5775	---	---	---	17.25	≤29.64	PASS
11AX20MIMO	Ant1	5180	14.97	91.07	0.41	15.38	≤23.98	PASS
11AX20MIMO	Ant2	5180	14.94	91.07	0.41	15.35	≤23.98	PASS
11AX20MIMO	total	5180	---	---	---	18.38	≤23.05	PASS
11AX20MIMO	Ant1	5200	14.75	73.38	1.34	16.09	≤23.98	PASS
11AX20MIMO	Ant2	5200	14.64	91.07	0.41	15.05	≤23.98	PASS
11AX20MIMO	total	5200	---	---	---	18.61	≤23.05	PASS
11AX20MIMO	Ant1	5240	14.29	91.07	0.41	14.70	≤23.98	PASS
11AX20MIMO	Ant2	5240	14.40	91.07	0.41	14.81	≤23.98	PASS
11AX20MIMO	total	5240	---	---	---	17.77	≤23.05	PASS
11AX20MIMO	Ant1	5260	13.86	91.07	0.41	14.27	≤23.98	PASS
11AX20MIMO	Ant2	5260	13.87	91.07	0.41	14.28	≤23.98	PASS
11AX20MIMO	total	5260	---	---	---	17.29	≤22.97	PASS
11AX20MIMO	Ant1	5300	13.56	91.07	0.41	13.97	≤23.98	PASS
11AX20MIMO	Ant2	5300	13.57	91.07	0.41	13.98	≤23.98	PASS
11AX20MIMO	total	5300	---	---	---	16.99	≤22.97	PASS
11AX20MIMO	Ant1	5320	13.58	91.89	0.37	13.95	≤23.98	PASS
11AX20MIMO	Ant2	5320	13.51	91.07	0.41	13.92	≤23.98	PASS
11AX20MIMO	total	5320	---	---	---	16.95	≤22.97	PASS
11AX20MIMO	Ant1	5500	14.44	91.07	0.41	14.85	≤23.98	PASS
11AX20MIMO	Ant2	5500	14.41	91.07	0.41	14.82	≤23.98	PASS
11AX20MIMO	total	5500	---	---	---	17.85	≤23.66	PASS
11AX20MIMO	Ant1	5580	13.46	91.89	0.37	13.83	≤23.98	PASS
11AX20MIMO	Ant2	5580	13.56	91.89	0.37	13.93	≤23.98	PASS
11AX20MIMO	total	5580	---	---	---	16.89	≤23.66	PASS
11AX20MIMO	Ant1	5700	12.06	91.89	0.37	12.43	≤23.98	PASS
11AX20MIMO	Ant2	5700	12.12	91.07	0.41	12.53	≤23.98	PASS
11AX20MIMO	total	5700	---	---	---	15.49	≤23.66	PASS
11AX20MIMO	Ant1	5745	14.23	91.07	0.41	14.64	≤30.00	PASS
11AX20MIMO	Ant2	5745	14.31	91.07	0.41	14.72	≤30.00	PASS
11AX20MIMO	total	5745	---	---	---	17.69	≤29.64	PASS
11AX20MIMO	Ant1	5785	15.00	91.89	0.37	15.37	≤30.00	PASS
11AX20MIMO	Ant2	5785	14.98	91.07	0.41	15.39	≤30.00	PASS
11AX20MIMO	total	5785	---	---	---	18.39	≤29.64	PASS
11AX20MIMO	Ant1	5825	14.99	91.07	0.41	15.40	≤30.00	PASS
11AX20MIMO	Ant2	5825	15.02	91.07	0.41	15.43	≤30.00	PASS
11AX20MIMO	total	5825	---	---	---	18.43	≤29.64	PASS
11AX40MIMO	Ant1	5190	13.57	84.38	0.74	14.31	≤23.98	PASS
11AX40MIMO	Ant2	5190	13.69	84.38	0.74	14.43	≤23.98	PASS
11AX40MIMO	total	5190	---	---	---	17.38	≤23.05	PASS

Shenzhen Anbotek Compliance Laboratory Limited

Address: 1/F., Building D, Sogood Science and Technology Park, Sanwei Community, Hangcheng Street, Bao'an District, Shenzhen, Guangdong, China.
Tel: (86) 0755-26066440 Fax: (86) 0755-26014772 Email: service@anbotek.com



Hotline

400-003-0500

www.anbotek.com.cn



11AX40MIMO	Ant1	5230	12.75	84.38	0.74	13.49	≤23.98	PASS
11AX40MIMO	Ant2	5230	12.88	84.38	0.74	13.62	≤23.98	PASS
11AX40MIMO	total	5230	---	---	---	16.57	≤23.05	PASS
11AX40MIMO	Ant1	5270	13.55	84.38	0.74	14.29	≤23.98	PASS
11AX40MIMO	Ant2	5270	13.55	84.38	0.74	14.29	≤23.98	PASS
11AX40MIMO	total	5270	---	---	---	17.30	≤22.97	PASS
11AX40MIMO	Ant1	5310	12.93	84.38	0.74	13.67	≤23.98	PASS
11AX40MIMO	Ant2	5310	13.05	84.38	0.74	13.79	≤23.98	PASS
11AX40MIMO	total	5310	---	---	---	16.74	≤22.97	PASS
11AX40MIMO	Ant1	5510	13.92	84.38	0.74	14.66	≤23.98	PASS
11AX40MIMO	Ant2	5510	13.90	84.38	0.74	14.64	≤23.98	PASS
11AX40MIMO	total	5510	---	---	---	17.66	≤23.66	PASS
11AX40MIMO	Ant1	5550	13.37	84.38	0.74	14.11	≤23.98	PASS
11AX40MIMO	Ant2	5550	13.35	84.38	0.74	14.09	≤23.98	PASS
11AX40MIMO	total	5550	---	---	---	17.11	≤23.66	PASS
11AX40MIMO	Ant1	5670	11.80	84.38	0.74	12.54	≤23.98	PASS
11AX40MIMO	Ant2	5670	11.86	84.38	0.74	12.60	≤23.98	PASS
11AX40MIMO	total	5670	---	---	---	15.58	≤23.66	PASS
11AX40MIMO	Ant1	5755	14.19	84.38	0.74	14.93	≤30.00	PASS
11AX40MIMO	Ant2	5755	14.18	84.38	0.74	14.92	≤30.00	PASS
11AX40MIMO	total	5755	---	---	---	17.94	≤29.64	PASS
11AX40MIMO	Ant1	5795	14.71	84.38	0.74	15.45	≤30.00	PASS
11AX40MIMO	Ant2	5795	14.73	84.38	0.74	15.47	≤30.00	PASS
11AX40MIMO	total	5795	---	---	---	18.47	≤29.64	PASS
11AX80MIMO	Ant1	5210	12.97	74.36	1.29	14.26	≤23.98	PASS
11AX80MIMO	Ant2	5210	12.95	74.36	1.29	14.24	≤23.98	PASS
11AX80MIMO	total	5210	---	---	---	17.26	≤23.05	PASS
11AX80MIMO	Ant1	5290	13.54	74.36	1.29	14.83	≤23.98	PASS
11AX80MIMO	Ant2	5290	13.55	74.36	1.29	14.84	≤23.98	PASS
11AX80MIMO	total	5290	---	---	---	17.85	≤22.97	PASS
11AX80MIMO	Ant1	5530	12.98	74.36	1.29	14.27	≤23.98	PASS
11AX80MIMO	Ant2	5530	12.91	74.36	1.29	14.20	≤23.98	PASS
11AX80MIMO	total	5530	---	---	---	17.25	≤23.66	PASS
11AX80MIMO	Ant1	5610	11.64	74.36	1.29	12.93	≤23.98	PASS
11AX80MIMO	Ant2	5610	11.66	74.36	1.29	12.95	≤23.98	PASS
11AX80MIMO	total	5610	---	---	---	15.95	≤23.66	PASS
11AX80MIMO	Ant1	5775	14.23	74.36	1.29	15.52	≤30.00	PASS
11AX80MIMO	Ant2	5775	14.19	74.36	1.29	15.48	≤30.00	PASS
11AX80MIMO	total	5775	---	---	---	18.51	≤29.64	PASS

Note: 1.The Duty Cycle Factor and cable loss are compensated in the graph.

Shenzhen Anbotek Compliance Laboratory Limited

Address:1/F., Building D, Sogood Science and Technology Park, Sanwei Community, Hangcheng Street, Bao'an District, Shenzhen, Guangdong, China.
Tel: (86) 0755-26066440 Fax: (86) 0755-26014772 Email: service@anbotek.com



Hotline

400-003-0500

www.anbotek.com.cn

