

Report No.	: ES201028009W02
Applicant	: HENAN ESHOW ELECTRONIC COMMERCE CO., LTD
Address	: Room 722, Sanjiang Building, No.170 Nanyang Road, Huiji District, Zhengzhou, Henan, China
Product	: Wireless Transmission System
FCC ID	: 2AAR8TT122
Brand	: RETEKESS
Model No.	: TT122, TT123, TT124, TT125, TT126, TT127, TT128, TT129, TT130, TT131, TT132, TT133, TT134, TT135, TT136, TT137, TT138, TT139, TT140
Standards	: FCC 47 CFR Part 2 (2.1093) / IEEE C95.1:1992 / IEEE 1528:2013
	KDB 865664 D01 v01r04 / KDB 865664 D02 v01r02
	KDB 248227 D01 v02r02 / KDB 447498 D01 v06
Sample Received Date	: December 22, 2020
Date of Testing	: December 22, 2020 to December 23, 2020

CERTIFICATION: The above equipment have been tested by **EMTEK (SHENZHEN) CO., LTD. Bldg 69, Majialong Industry Zone, Nanshan District, Shenzhen, Guangdong, China**, and found compliance with the requirement of the above standards. The test record, data evaluation & Equipment Under Test (EUT) configurations represented herein are true and accurate accounts of the measurements of the sample's SAR characteristics under the conditions specified in this report. It should not be reproduced except in full, without the written approval of our laboratory. The client should not use it to claim product certification, approval, or endorsement by A2LA or any government agencies.

Prepared by :	LanceLi
	Lance Li/Editor
Reviewer :	for the
	Joe Xia/Superv sor
Approve & Authorized Signer :	- TOSTING
Approve a Admonized Digner .	Lisa Wang/Manager

This report is for your exclusive use. Any copying or replication of this report to or for any other person or entity, or use of our name or trademark, is permitted only with our prior written permission. This report sets forth our findings solely with respect to the test samples identified herein. The results set forth in this report are not indicative or representative of the quality or characteristics of the lot from which a test sample was taken or any similar or identical product unless specifically and expressly noted. Our report includes all of the tests requested by you and the results thereof based upon the information that you provided to us. You have 60 days from date of issuance of this report to notify us of any material error or or issue caused by our negligence, provided, however, that such notice shall be in writing and shall specifically address the issue you wish to raise. A failure to raise such issue within the prescribed time shall constitute your unqualified acceptance of the completeness of this report, the tests conducted and the correctness of the report contents. Unless specific mention, the uncertainty of measurement has been explicitly taken into account to declare the compliance or non-compliance to the specification.

深圳信测标准技术服务股份有限公司 地址:广东省深圳市南山区马家龙工业区69栋 网址:Http://www.emtek.com.cn 邮箱:cs.rep@emtek.com.cn

EMTEK (Shenzhen) Co., Ltd. Add: Building 69, Majialong Industry Zone, Nanshan District, Shenzhen, Guangdong, China Http://www.emtek.com.cn E-mail: cs.rep@emtek.com.cn



Table of Contents


Re	lease (Control Record	3
1.	Sum	mary of Maximum SAR Value	4
2.	Desc	ription of Equipment Under Test	5
3.	SAR	Measurement System	6
	3.1	Definition of SpecificAbsorptionRate (SAR)	
	3.2	SPEAG DASY System	
		3.2.1 Robot	7
		3.2.2 Probes	
		3.2.3 Data Acquisition Electronics (DAE)	
		3.2.4 Phantoms	
		3.2.5 Device Holder	
		3.2.6 System Validation Dipoles	
		3.2.7 Tissue Simulating Liquids	
	3.3	SAR System Verification	
	3.4	SAR Measurement Procedure	
		3.4.1 Area & Zoom Scan Procedure	
		3.4.2 VolumeScan Procedure	
		3.4.3 Power Drift Monitoring	
		3.4.4 Spatial Peak SAR Evaluation	
		3.4.5 SAR Averaged Methods	
4.	SAR	Measurement Evaluation	
	4.1	EUT Configuration and Setting	
	4.2	EUT Testing Position	
		4.2.1 Body Exposure Conditions	
		4.2.2 SAR Test Exclusion Evaluations	20
	4.3	Tissue Verification	21
	4.4	Impedance & Return-Loss Validation	21
	4.5	System Verification	21
	4.6	Maximum Output Power	
		4.6.1 Maximum Conducted Power	
		4.6.2 Measured Conducted Power Result	
	4.7	SAR Testing Results	24
		4.7.1 SAR Test Reduction Considerations	
		4.7.2 SAR Results for Body& Extremity Exposure Condition (Separation Distance is 0 cm Gap)	
		4.7.3 SAR Measurement Variability	
5.		ration of Test Equipment	
6.		surement Uncertainty	
7.	Infor	mation on the Testing Laboratories	31

Appendix A. SAR Plots of System Verification Appendix B. SAR Plots of SAR Measurement Appendix C. Calibration Certificate for Probe and Dipole Appendix D. Photographs of EUT and Setup



Release Control Record

Report No.	Reason for Change	Date Issued
ES201028009W02	Initial release	December 25, 2020





1. Summary of Maximum SAR Value

Equipment Class	Mode	Highest Reported Body SAR _{1g} (0 cm Gap) (W/kg)
DTS	ТХ	0.28

Note:

1. The SAR limit (Head & Body: SAR_{1g}1.6 W/kg, Extremity: SAR_{10g} 4.0 W/kg) for general population/uncontrolled exposure is specified in FCC 47 CFR part 2 (2.1093) and ANSI/IEEE C95.1-1992.





2. Description of Equipment Under Test

ЕИТ Туре	Wireless Transmission System
FCC ID	2AAR8TT122
Brand Name	RETEKESS
Model Name	TT122, TT123, TT124, TT125, TT126, TT127, TT128, TT129, TT130, TT131, TT132, TT133, TT134, TT135, TT136, TT137, TT138, TT139, TT140(All models covered in this report are the same with each other, except for different model No., remote controller(only for appearance) and appearance (for color, silk-screen only) for trading purpose. We choose TT122 as the final test prototype)
Tx Frequency Bands (Unit: MHz)	2405.377-2477.569
Modulations	FSK
Maximum Tune-up Conducted Power (Unit: dBm)	10.97
Antenna Gain:	0 dBi
Power supply:	DC 3.7V,1500mA from battery DC 5V from adapter
Adapter:	Model: DSA-5PF07-05 FUS 050100 Input: 100-240v~50/60Hz 0.2A Output: DC 5V 1A
Antenna Type	PCB Antenna
EUT Stage	Identical Prototype

Note:

1. The above EUT information is declared by manufacturer and for more detailed features description please refers to the manufacturer's specifications or User's Manual.



3. SAR Measurement System

3.1 Definition of SpecificAbsorptionRate (SAR)

SAR is related to the rate at which energy is absorbed per unit mass in an object exposed to a radio field. The SAR distribution in a biological body is complicated and is usually carried out by experimental techniques or numerical modeling. The standard recommends limits for two tiers of groups, occupational/controlled and general population/uncontrolled, based on a person's awareness and ability to exercise control over his or her exposure. In general, occupational/controlled exposure limits are higher than the limits for general population/uncontrolled.

The SAR definition is the time derivative (rate) of the incremental energy (dW) absorbed by (dissipated in) an incremental mass (dm) contained in a volume element (dv) of a given density (ρ). The equation description is as below:

$$SAR = \frac{d}{dt} \left(\frac{dW}{dm} \right) = \frac{d}{dt} \left(\frac{dW}{\rho dv} \right)$$

SAR is expressed in units of Watts per kilogram (W/kg)

SAR measurement can be related to the electrical field in the tissue by

$$SAR = \frac{\sigma |E|^2}{\rho}$$

Where: σ is the conductivity of the tissue, ρ is the mass density of the tissue and E is the RMS electrical field strength.

3.2 SPEAG DASY System

DASY system consists of high precision robot, probe alignment sensor, phantom, robot controller, controlled measurement server and near-field probe. The robot includes six axes that can move to the precision position of the DASY5 software defined. The DASYsoftware can define the area that is detected by the probe. The robot is connected to controlled box. Controlled measurement server is connected to the controlled robot box. The DAE includes amplifier, signal multiplexing, AD converter, offset measurement and surface detection. It is connected to the Electro-optical coupler (ECO). The ECO performs the conversion form the optical into digital electric signal of the DAE and transfers data to the PC.




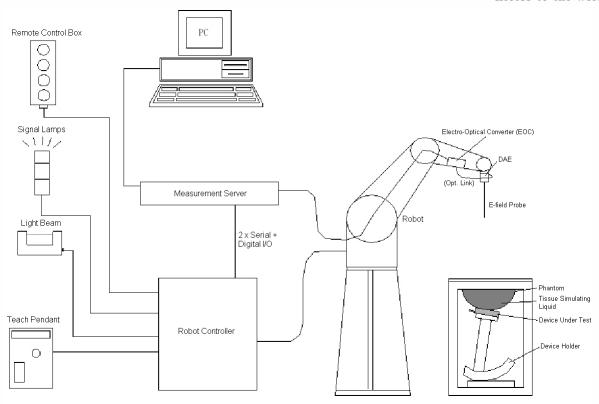


Fig-3.1 DASY System Setup

3.2.1 Robot

The DASYsystem uses the high precision robots from Stäubli SA (France). For the 6-axis controller system, the robot controller version (DASY5: CS8c) from Stäubli is used. The Stäubli robot series have many features that are important for our application:

- High precision (repeatability ±0.035 mm)
- High reliability (industrial design)
- · Jerk-free straight movements
- · Low ELF interference (the closed metallic construction shields against motor control fields)

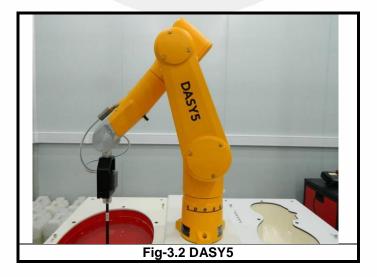



3.2.2 Probes

The SAR measurement is conducted with the dosimetric probe. The probe is specially designed and calibrated for use in liquid with high permittivity. The dosimetric probe has special calibration in liquid at different frequency.

Model	EX3DV4	
Construction	Symmetrical design with triangular core. Built-in shielding against static charges. PEEK enclosure material (resistant to organic solvents, e.g., DGBE).	
Frequency	10 MHz to 6 GHz Linearity: ± 0.2 dB	
Directivity	± 0.3 dB in HSL (rotation around probe axis) ± 0.5 dB in tissue material (rotation normal to probe axis)	
Dynamic Range	10 μ W/g to 100 mW/g Linearity: ± 0.2 dB (noise: typically < 1 μ W/g)	11
Dimensions	Overall length: 337 mm (Tip: 20 mm) Tip diameter: 2.5 mm (Body: 12 mm) Typical distance from probe tip to dipole centers: 1 mm	

Model	ES3DV3	
Construction	Symmetrical design with triangular core. Interleaved sensors. Built-in shielding against static charges. PEEK enclosure material (resistant to organic solvents, e.g., DGBE).	
Frequency	10 MHz to 4 GHz Linearity: ± 0.2 dB	
Directivity	\pm 0.2 dB in HSL (rotation around probe axis) \pm 0.3 dB in tissue material (rotation normal to probe axis)	
Dynamic Range	5 μW/g to 100 mW/g Linearity: ± 0.2 dB	
Dimensions	Overall length: 337 mm (Tip: 20 mm) Tip diameter: 3.9 mm (Body: 12 mm) Distance from probe tip to dipole centers: 2.0 mm	

3.2.3 Data Acquisition Electronics (DAE)

Model	DAE3, DAE4	
Construction	Signal amplifier, multiplexer, A/D converter and control logic. Serial optical link for communication with DASY embedded system (fully remote controlled). Two step probe touch detector for mechanical surface detection and emergency robot stop.	
Measurement	-100 to +300 mV (16 bit resolution and two range settings: 4mV,	
Range	400mV)	
Input Offset Voltage	< 5µV (with auto zero)	
Input Bias Current	< 50 fA	
Dimensions	60 x 60 x 68 mm	



3.2.4 Phantoms

Model	Twin SAM	
Construction	The shell corresponds to the specifications of the Specific Anthropomorphic Mannequin (SAM) phantom defined in IEEE 1528 and IEC 62209-1. It enables the dosimetric evaluation of left and right hand phone usage as well as body mounted usage at the flat phantom region. A cover prevents evaporation of the liquid. Reference markings on the phantom allow the complete setup of all predefined phantom positions and measurement grids by teaching three points with the robot.	
Material	Vinylester, glass fiber reinforced (VE-GF)	
Shell Thickness	2 ± 0.2 mm (6 ± 0.2 mm at ear point)	
Dimensions	Length: 1000mm Width: 500mm Height: adjustable feet	
Filling Volume	approx. 25 liters	

Model	ELI	
Construction	Phantom for compliance testing of handheld and body-mounted wireless devices in the frequency range of 30 MHz to 6 GHz. ELI is fully compatible with the IEC 62209-2 standard and all known tissue simulating liquids. ELI has been optimized regarding its performance and can be integrated into our standard phantom tables. A cover prevents evaporation of the liquid. Reference markings on the phantom allow installation of the complete setup, including all predefined phantom positions and measurement grids, by teaching three points. The phantom is compatible with all SPEAG dosimetric probes and dipoles.	
Material	Vinylester, glass fiber reinforced (VE-GF)	
Shell Thickness	2.0 ± 0.2 mm (bottom plate)	
Dimensions	Major axis: 600 mm Minor axis: 400 mm	
Filling Volume	approx. 30 liters	



3.2.5 Device Holder

Model	Mounting Device	
Construction	In combination with the Twin SAM Phantom or ELI4, the Mounting Device enables the rotation of the mounted transmitter device in spherical coordinates. Rotation point is the ear opening point. Transmitter devices can be easily and accurately positioned according to IEC, IEEE, FCC or other specifications. The device holder can be locked for positioning at different phantom sections (left head, right head, flat).	
Material	РОМ	

Model	Laptop Extensions Kit	
Construction	Simple but effective and easy-to-use extension for Mounting Device that facilitates the testing of larger devices according to IEC 62209-2 (e.g., laptops, cameras, etc.). It is lightweight and fits easily on the upper part of the Mounting Device in place of the phone positioner.	
Material	POM, Acrylic glass, Foam	


3.2.6 System Validation Dipoles

Model	D-Serial	
Construction	Symmetrical dipole with I/4 balun. Enables measurement of feedpoint impedance with NWA. Matched for use near flat phantoms filled with tissue simulating solutions.	
Frequency	750 MHz to 5800 MHz	
Return Loss	> 20 dB	
Power Capability	> 100 W (f < 1GHz),> 40 W (f > 1GHz)	



3.2.7 Tissue Simulating Liquids

For SAR measurement of the field distribution inside the phantom, the phantom must be filled with homogeneous tissue simulating liquid to a depth of at least 15 cm. For head SAR testing, the liquid height from the ear reference point (ERP) of the phantom to the liquid top surface is larger than 15 cm. For body SAR testing, the liquid height from the center of the flat phantom to the liquid top surface is larger than 15 cm. The nominal dielectric values of the tissue simulating liquids in the phantom and the tolerance of 5% are listed in Table-3.1.

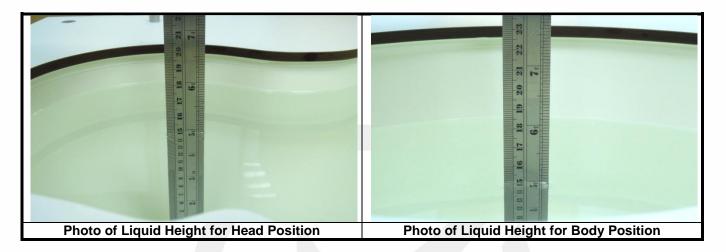

The dielectric properties of the head tissue simulating liquids are defined in IEEE1528, and KDB 865664 D01 Appendix A. For the body tissue simulating liquids, the dielectric properties are defined in KDB 865664 D01 Appendix A. The dielectric properties of the tissue simulating liquids were verified prior to the SAR evaluation using a dielectric assessment kit and a network analyzer.



Frequency	Target	Range of	Target	Range of
(MHz)	Permittivity	±5%	Conductivity	±5%
		For Head		
750	41.9	39.8 ~ 44.0	0.89	0.85 ~ 0.93
835	41.5	39.4 ~ 43.6	0.90	0.86 ~ 0.95
900	41.5	39.4 ~ 43.6	0.97	0.92 ~ 1.02
1450	40.5	38.5 ~ 42.5	1.20	1.14 ~ 1.26
1640	40.3	38.3 ~ 42.3	1.29	1.23 ~ 1.35
1750	40.1	38.1 ~ 42.1	1.37	1.30 ~ 1.44
1800	40.0	38.0 ~ 42.0	1.40	1.33 ~ 1.47
1900	40.0	38.0 ~ 42.0	1.40	1.33 ~ 1.47
2000	40.0	38.0 ~ 42.0	1.40	1.33 ~ 1.47
2300	39.5	37.5 ~ 41.5	1.67	1.59 ~ 1.75
2450	39.2	37.2 ~ 41.2	1.80	1.71 ~ 1.89
2600	39.0	37.1 ~ 41.0	1.96	1.86 ~ 2.06
3500	37.9	36.0 ~ 39.8	2.91	2.76 ~ 3.06
5200	36.0	34.2 ~ 37.8	4.66	4.43 ~ 4.89
5300	35.9	34.1 ~ 37.7	4.76	4.52 ~ 5.00
5500	35.6	33.8 ~ 37.4	4.96	4.71 ~ 5.21
5600	35.5	33.7 ~ 37.3	5.07	4.82 ~ 5.32
5800	35.3	33.5 ~ 37.1	5.27	5.01 ~ 5.53
		For Body		
750	55.5	52.7 ~ 58.3	0.96	0.91 ~ 1.01
835	55.2	52.4 ~ 58.0	0.97	0.92 ~ 1.02
900	55.0	52.3 ~ 57.8	1.05	1.00 ~ 1.10
1450	54.0	51.3 ~ 56.7	1.30	1.24 ~ 1.37
1640	53.8	51.1 ~ 56.5	1.40	1.33 ~ 1.47
1750	53.4	50.7 ~ 56.1	1.49	1.42 ~ 1.56
1800	53.3	50.6 ~ 56.0	1.52	1.44 ~ 1.60
1900	53.3	50.6 ~ 56.0	1.52	1.44 ~ 1.60
2000	53.3	50.6 ~ 56.0	1.52	1.44 ~ 1.60
2300	52.9	50.3 ~ 55.5	1.81	1.72 ~ 1.90
2450	52.7	50.1 ~ 55.3	1.95	1.85 ~ 2.05
2600	52.5	49.9 ~ 55.1	2.16	2.05 ~ 2.27
3500	51.3	48.7 ~ 53.9	3.31	3.14 ~ 3.48
5200	49.0	46.6 ~ 51.5	5.30	5.04 ~ 5.57
5300	48.9	46.5 ~ 51.3	5.42	5.15 ~ 5.69
5500	48.6	46.2 ~ 51.0	5.65	5.37 ~ 5.93
5600	48.5	46.1 ~ 50.9	5.77	5.48 ~ 6.06
5800	48.2	45.8 ~ 50.6	6.00	5.70 ~ 6.30

Table-3.1Targets of Tissue Simulating Liquid



The following table gives the recipes for tissue simulating liquids.


Tissue Type	Bactericide	DGBE	HEC	NaCl	Sucrose	Triton X-100	Water	Diethylene Glycol Mono- hexylether
H750	0.2	-	0.2	1.5	56.0	-	42.1	-
H835	0.2	-	0.2	1.5	57.0	-	41.1	-
H900	0.2	-	0.2	1.4	58.0	-	40.2	-
H1450	-	43.3	-	0.6	-	-	56.1	-
H1640	-	45.8	-	0.5	-	-	53.7	-
H1750	-	47.0	-	0.4	-	-	52.6	-
H1800	-	44.5	-	0.3	-	-	55.2	-
H1900	-	44.5	-	0.2	-	-	55.3	-
H2000	-	44.5	-	0.1	-	-	55.4	-
H2300	-	44.9	-	0.1	-	-	55.0	-
H2450	-	45.0	-	0.1	-	-	54.9	-
H2600	-	45.1	•	0.1	-	-	54.8	-
H3500	-	8.0	-	0.2	-	20.0	71.8	-
H5G	-	-	-	-	-	17.2	65.5	17.3
B750	0.2	-	0.2	0.8	48.8	-	50.0	-
B835	0.2	-	0.2	0.9	48.5	-	50.2	-
B900	0.2	- /	0.2	0.9	48.2	-	50.5	-
B1450	-	34.0	-	0.3	- /		65.7	-
B1640	-	32.5	-	0.3	- /	-	67.2	-
B1750	-	31.0	-	0.2	-	-	68.8	-
B1800	-	29.5	-	0.4	-	-	70.1	-
B1900	-	29.5	-	0.3	- // -	-	70.2	-
B2000	-	30.0	-	0.2	-	-	69.8	-
B2300	-	31.0	-	0.1	-	-	68.9	-
B2450	-	31.4	-	0.1	-	-	68.5	-
B2600	-	31.8	-	0.1	-	- / -	68.1	-
B3500	-	28.8	-	0.1	-	- /	71.1	-
B5G	-	-	-		-	10.7	78.6	10.7

Table-3.2Recipes of Tissue Simulating Liquid



3.3 SAR System Verification

The system check verifies that the system operates within its specifications. It is performed daily or before every SAR measurement. The system check uses normal SAR measurements in the flat section of the phantom with a matched dipole at a specified distance. The system verification setup is shown as below.

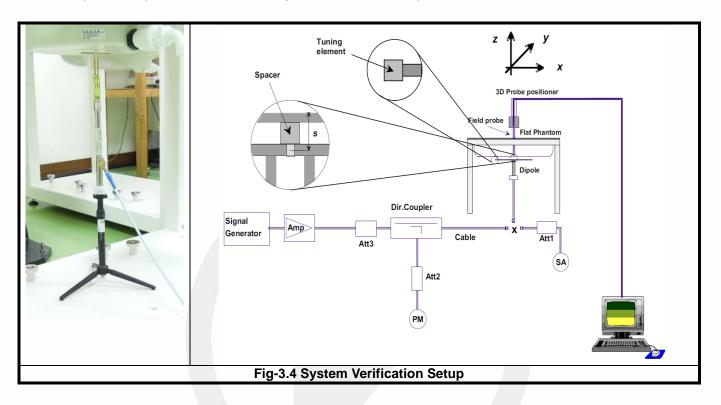

The validation dipole is placed beneath the flat phantom with the specific spacer in place. The distance spacer is touch the phantom surface with a light pressure at the reference marking and be oriented parallel to the long side of the phantom. The spectrum analyzer measures the forward power at the location of the system check dipole connector. The signal generator is adjusted for the desired forward power (250 mW is used for 700 MHz to 3 GHz, 100 mW is used for 3.5 GHz to 6 GHz) at the dipole connector and the power meter is read at that level. After connecting the cable to the dipole, the signal generator is readjusted for the same reading at power meter.

After system check testing, the SAR result will be normalized to 1W forward input power and compared with the reference SAR value derived from validation dipole certificate report. The deviation of system check should be within 10 %.



3.4 SAR Measurement Procedure

According to the SAR test standard, the recommended procedure for assessing the peak spatial-average SAR value consists of the following steps:

- (a) Power reference measurement
- (b) Area scan
- (c) Zoom scan
- (d) Power drift measurement

The SAR measurement procedures for each of test conditions are as follows:

- (a) Make EUT to transmit maximum output power
- (b) Measure conducted output power through RF cable
- (c) Place the EUT in the specific position of phantom
- (d) Perform SAR testing steps on the DASY system
- (e) Record the SAR value

3.4.1 Area & Zoom Scan Procedure

First Area Scan is used to locate the approximate location(s) of the local peak SAR value(s). The measurement grid within an Area Scan is defined by the grid extent, grid step size and grid offset. Next, in order to determine the EM field distribution in a three-dimensional spatial extension, Zoom Scan is required. The Zoom Scan is performed around the highest E-field value to determine the averaged SAR-distribution over 10 g. According to KDB 865664D01, the resolution for Area and Zoom scan is specified in the table below.

Items	<= 2 GHz	2-3 GHz	3-4 GHz	4-5 GHz	5-6 GHz
Area Scan (Δx, Δy)	<= 15 mm	<= 12 mm	<= 12 mm	<= 10 mm	<= 10 mm
Zoom Scan (Δx, Δy)	<= 8 mm	<= 5 mm	<= 5 mm	<= 4 mm	<= 4 mm
Zoom Scan (Δz)	<= 5 mm	<= 5 mm	<= 4 mm	<= 3 mm	<= 2 mm
Zoom Scan Volume	>= 30 mm	>= 30 mm	>= 28 mm	>= 25 mm	>= 22 mm

Note:

When zoom scan is required and report SAR is <=1.4 W/kg, the zoom scan resolution of $\Delta x / \Delta y$ (2-3GHz: <= 8 mm, 3-4GHz: <= 7 mm, 4-6GHz: <= 5 mm) may be applied.

3.4.2 VolumeScan Procedure

The volume scan is used for assess overlapping SAR distributions for antennas transmitting in different frequency bands. It is equivalent to an oversized zoom scan used in standalone measurements. The measurement volume will be used to enclose all the simultaneous transmitting antennas. For antennas transmitting simultaneously in different frequency bands, the volume scan is measured separately in each frequency band. In order to sum correctly to compute the 1g aggregate SAR, the EUT remain in the same test position for all measurements and all volume scan use the same spatial resolution and grid spacing. When all volume scan were completed, the software, SEMCAD postprocessor can combine and subsequently superpose these measurement data to calculating the multiband SAR.



3.4.3 Power Drift Monitoring

All SAR testing is under the EUT install full charged battery and transmit maximum output power. In DASY measurement software, the power reference measurement and power drift measurement procedures are used for monitoring the power drift of EUT during SAR test. Both these procedures measure the field at a specified reference position before and after the SAR testing. The software will calculate the field difference in dB. If the power drift more than 5%, the SAR will be retested.

3.4.4 Spatial Peak SAR Evaluation

The procedure for spatial peak SAR evaluation has been implemented according to the test standard. It can be conducted for 1g and 10g, as well as for user-specific masses. The DASY software includes all numerical procedures necessary to evaluate the spatial peak SAR value.

The base for the evaluation is a "cube" measurement. The measured volume must include the 1g and 10g cubes with the highest averaged SAR values. For that purpose, the center of the measured volume is aligned to the interpolated peak SAR value of a previously performed area scan.

The entire evaluation of the spatial peak values is performed within the post-processing engine (SEMCAD). The system always gives the maximum values for the 1g and 10g cubes. The algorithm to find the cube with highest averaged SAR is divided into the following stages:

- (a) Extraction of the measured data (grid and values) from the Zoom Scan
- (b) Calculation of the SAR value at every measurement point based on all stored data (A/D values and measurement parameters)
- (c) Generation of a high-resolution mesh within the measured volume
- (d) Interpolation of all measured values form the measurement grid to the high-resolution grid
- (e) Extrapolation of the entire 3-D field distribution to the phantom surface over the distance from sensor to surface
- (f) Calculation of the averaged SAR within masses of 1g and 10g

3.4.5 SAR Averaged Methods

In DASY, the interpolation and extrapolation are both based on the modified Quadratic Shepard's method. The interpolation scheme combines a least-square fitted function method and a weighted average method which are the two basic types of computational interpolation and approximation.

Extrapolation routines are used to obtain SAR values between the lowest measurement points and the inner phantom surface. The extrapolation distance is determined by the surface detection distance and the probe sensor offset. The uncertainty increases with the extrapolation distance. To keep the uncertainty within 1% for the 1 g and 10 g cubes, the extrapolation distance should not be larger than 5 mm.



4. SAR Measurement Evaluation

4.1 EUT Configuration and Setting

<Considerations Related to WLAN for Setup and Testing>

In general, various vendor specific external test software and chipset based internal test modes are typically used for SAR measurement. These chipset based test mode utilities are generally hardware and manufacturer dependent, and often include substantial flexibility to reconfigure or reprogram a device. A TX device must be configured to transmit continuously at the required data rate, channel bandwidth and signal modulation, using the highest transmission duty factor supported by the test mode tools for SAR measurement. The test frequencies established using test mode must correspond to the actual channel frequencies. When TX frame gaps are accounted for in the transmission, a maximum transmission duty factor of 92 - 96% is typically achievable in most test mode configurations. A minimum transmission duty factor of 85% is required to avoid certain hardware and device implementation issues related to wide range SAR scaling. In addition, a periodic transmission duty factor is required for current generation SAR systems to measure SAR correctly. The reported SAR must be scaled to 100% transmission duty factor to determine compliance at the maximum tune-up tolerance limit.

According to KDB 248227 D01,this device has installed TX engineering testing software which can provide continuous transmitting RF signal. During TX SAR testing, this device was operated to transmit continuously at the maximum transmission duty with specified transmission mode, operating frequency, lowest data rate, and maximum output power.

Subsequent Test Configuration

SAR measurement requirements for the remaining TX transmission mode configurations that have not been tested in the initial test configuration are determined separately for each standalone and aggregated frequency band, in each exposure condition, according to the maximum output power specified for production units. Additional power measurements may be required to determine if SAR measurements are required for subsequent highest output power channels in a subsequent test configuration. When the highest reported SAR for the initial test configuration according to the initial test position or fixed exposure position requirements, is adjusted by the ratio of the subsequent test configuration to initial test configuration specified maximum output power and the adjusted SAR is \leq 1.2 W/kg, SAR is not required for that subsequent test configuration.




4.2 EUT Testing Position

4.2.1 Body Exposure Conditions


The SAR evaluation shall be performed for all surfaces of the DUT that are accessible during intended use, as indicated in Figure-4.1. The separation distance in testing shall correspond to the intended use distance as specified in the user instructions provided by the manufacturer. If the intended use is not specified, all surfaces of the DUT shall be tested directly against the flat phantom.

The surface of the generic device (or the surface of the carry accessory holding the DUT) pointing towards the flat phantom shall be parallel to the surface of the phantom.

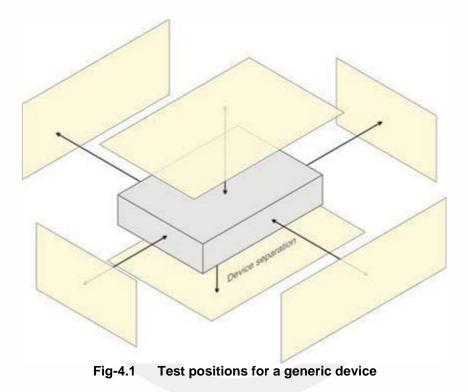



<Antenna Location>

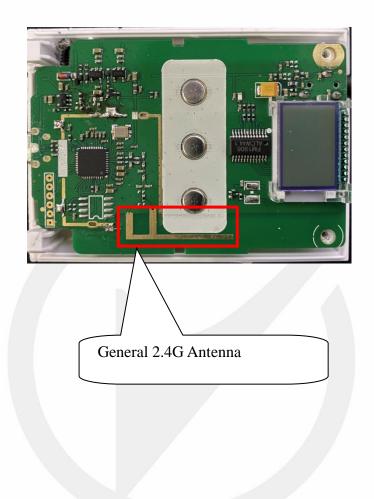

4.2.2 SAR Test Exclusion Evaluations

According to KDB 447498 D01, the SAR test exclusion condition is based on source-based time-averaged maximum conducted output power, adjusted for tune-up tolerance, and the minimum test separation distance required for the exposure conditions. The SAR exclusion threshold is determined by the following formula.

1. For the test separation distance <= 50 mm

 $\frac{\text{Max. Tune up Power}_{(\text{mW})}}{\text{Min. Test Separation Distance}_{(\text{mm})}} \times \sqrt{f_{(\text{GHz})}} \le 3.0 \text{ for SAR-1g, } \le 7.5 \text{ for SAR-10g}$

When the minimum test separation distance is < 5 mm, a distance of 5 mm is applied to determine SAR test exclusion.

2. For the test separation distance > 50 mm, and the frequency at 100 MHz to 1500 MHz

 $\left[\text{(Threshold at 50 mm in Step 1)} + \text{(Test Separation Distance} - 50 mm) \times \left(\frac{f_{\text{(MHz)}}}{150} \right) \right]_{(\text{mW)}}$

3. For the test separation distance > 50 mm, and the frequency at > 1500 MHz to 6 GHz

[(Threshold at 50 mm in Step 1) + (Test Separation Distance -50 mm) × 10]_(mW)

<For TX Antenna >

	Max. Max.		RearFace			LeftSide		RightSide			TopSide		BottomSide				
Mode	Tune-u Tune-u p p Power Power (dBm) (mW)	Ant. to Surfac e (mm)	Calculat ed Result	Requir e SAR Testing ?	Ant. to Surfac e (mm)	Ant. to Surfac e (mm)	Calculat ed Result	Requir e SAR Testing ?	Calculat ed Result	Requir e SAR Testing ?	Ant. to Surfac e (mm)	Calculat ed Result	Requir e SAR Testing ?	Ant. to Surfac e (mm)	Calculat ed Result	Requir e SAR Testing ?	
TX Antenn	11.5	14.1 3	5	4.4	Yes	45	0.5	No	5	4.4	Yes	30	0.7	No	23	1.0	No



4.3 Tissue Verification

The measuring results for tissue simulating liquid are shown as below.

Test Date	Tissue Type	Frequency (MHz)	Liquid Temp. (°Cs)	Measured Conductivity (σ)	Measured Permittivity (ε _r)	Target Conductivity (σ)	Target Permittivity (ε _r)	Conductivity Deviation (%)	Permittivity Deviation (%)
December 23, 2020	B2450	2450	21.6	2.028	52.823	1.95	52.70	4.00	0.23

Note:

The dielectric properties of the tissue simulating liquid must be measured within 24 hours before the SAR testing and within $\pm 5\%$ of the target values. Liquid temperature during the SAR testing must be within ± 2 °C.

4.4 Impedance & Return-Loss Validation

The Dipole calibration was validated according to procedures in KDB 865664 D01. The validation status in tabulated summary is as below.

Test Date	Dipole S/N	Calibrati	on Point	Measured Impedance (Ω)	Measured Return-Loss (dB)	Target Impedance (Ω)	Target Return-Loss (dB)	Δ Impedance (Ω)	Return-Loss Deviation (%)
December 07,2020	835	Body	2450	47.418	-20.424	49.816	-23.668	2.398	-13.71

Note:

According to the KDB 865664 D01 SAR Measurement 100 MHz to 6 GHz v01r04, Section 3.2.2, If the Verification time of the dipole is more than 1 year and less than 3 years, the impedance and return-loss of the dipole shall be verified:

a. The impedance difference shall not exceed 5 Ω

b. The change of return-loss is within ±20%

4.5 System Verification

The measuring result for system verification istabulated as below.

Test Date	Mode	Frequency (MHz)	1W Target SAR-1g (W/kg)	Measured SAR-1g (W/kg)	Normalized to 1W SAR-1g (W/kg)	Deviation (%)	Dipole S/N	Probe S/N	DAE S/N
December 23, 2020	Body	2450	50.40	12.7	50.8	0.79	835	3970	1418

Note:

Comparing to the reference SAR value provided by SPEAG, the validation data should be within its specification of 10 %. The result indicates the system check can meet the variation criterion and the plots can be referred to Appendix A of this report.

深圳信测标准技术服务股份有限公司地址:广东省深圳市南山区马家龙工业区69栋 网址:Http://www.emtek.com.cn邮箱:cs.rep@emtek.com.cn

EMTEK (Shenzhen) Co., Ltd. Add: Building 69, Majialong Industry Zone, Nanshan District, Shenzhen, Guangdong, China Http://www.emtek.com.cn E-mail: cs.rep@emtek.com.cn



4.6 Maximum Output Power

4.6.1 Maximum Conducted Power

The maximum conducted average power (Unit: dBm) including tune-up tolerance is shown as below.

Mode	ТХ
FSK	11.5





4.6.2 Measured Conducted Power Result

The measuring conducted average power (Unit: dBm) is shown as below.

<GENERAL 2.4G>

Operation Mode	Channel Number	Channel Frequency (MHz)	Measurement Level (dBm)	Limit (dBm)	Verdict
	1	2405.377	9.39	30	PASS
TX	17	2440.705	10.59	30	PASS
	36	2477.569	10.97	30	PASS





4.7 SAR Testing Results

4.7.1 SAR Test Reduction Considerations

<KDB 447498 D01, General RF Exposure Guidance>

Testing of other required channels within the operating mode of a frequency band is not required when the reported SAR for the mid-band or highest output power channel is:

- (1) ≤ 0.8 W/kg or 2.0 W/kg, for 1-g or 10-g respectively, when the transmission band is ≤ 100 MHz
- (2) ≤ 0.6 W/kg or 1.5 W/kg, for 1-g or 10-g respectively, when the transmission band is between 100 MHz and 200 MHz
- (3) ≤ 0.4 W/kg or 1.0 W/kg, for 1-g or 10-g respectively, when the transmission band is ≥ 200 MHz

4.7.2 SAR Results for Body& Extremity Exposure Condition (Separation Distance is 0 cm Gap)

Plot No.	Band	Mode	Test Position	Ch.	Max. Tune-up Power (dBm)	Measured Conducted Power (dBm)	Power Drift (dB)	Measured SAR-1g for body (W/kg)	Scaling Factor	Scaled SAR-1g (W/kg)
	FSK	-	Front Face	36	11.5	10.97	0.05	0.184	1.13	0.21
1	FSK	-	Rear Face	36	11.5	10.97	0.13	0.157	1.13	0.18
	FSK	-	Right Side	36	11.5	10.97	-0.09	0.252	1.13	<mark>0.28</mark>

Note:

According to KDB248227 D01 section 5.1.1 a, When the reported SAR of the initial test position is \leq 0.4 W/kg, further SAR measurement is not required for the other (remaining) test positions in that exposure configuration and TX transmission mode combinations within the frequency band or aggregated band. SAR is also not required for that exposure configuration in the subsequent test configuration.



4.7.3 SAR Measurement Variability

According to KDB 865664 D01, SAR measurement variability was assessed for each frequency band, which is determined by the SAR probecalibration point and tissue-equivalent medium used for the device measurements. When both head and bodytissue-equivalent media are required for SAR measurements in a frequency band, the variability measurementprocedures should be applied to the tissue medium with the highest measured SAR, using the highest measuredSAR configuration for that tissue-equivalent medium. Alternatively, if the highest measured SAR for both head and body tissue-equivalent media are ≤ 1.45 W/kg and the ratio of these highest SAR values, i.e., largest dividedby smallest value, is ≤ 1.10 , the highest SAR configuration for either head or body tissue-equivalent medium maybe used to perform the repeated measurement. These additional measurements are repeated after the completion all measurements requiring the same head or body tissue-equivalent medium in a frequency band. The testdevice should be returned to ambient conditions (normal room temperature) with the battery fully charged beforeit is re-mounted on the device holder for the repeated measurement(s) to minimize any unexpected variations inthe repeated results.

SAR repeated measurement procedure:

- 1. When the highest measured SAR is < 0.80 W/kg, repeated measurement is not required.
- 2. When the highest measured SAR is ≥ 0.80 W/kg, repeat that measurement once.
- 3. If the ratio of largest to smallest SAR for the original and first repeated measurements is > 1.20, or when the original or repeated measurement is >= 1.45 W/kg, perform a second repeated measurement.
- 4. If the ratio of largest to smallest SAR for the original, first and second repeated measurements is > 1.20, and the original, first or second repeated measurement is >= 1.5 W/kg, perform a third repeated measurement.

Band	Mode	Test Position	Ch.	Original Measured SAR-1g (W/kg)	1st Repeated SAR-1g (W/kg)	L/S Ratio	2nd Repeated SAR-1g (W/kg)	L/S Ratio	3rd Repeated SAR-1g (W/kg)	L/S Ratio
ΤX	FSK	Right Side	36	0.252	N/A	N/A	N/A	N/A	N/A	N/A



5. Calibration of Test Equipment

Equipment	Manufactu rer	Model	SN	Cal. Date	Cal. Interval
System Validation Dipole	SPEAG	D2450V2	835	Jun. 19, 2018	3 Year
Dosimetric E-Field Probe	SPEAG	EX3DV4	3970	Jan. 08, 2020	1 Year
Data Acquisition Electronics	SPEAG	DAE4	1418	Frb. 08, 2020	1 Year
ENA Series Network Analyzer	Agilent	E5071B	MY42404246	May. 16, 2020	1 Year
Signal Analyzer	Agilent	N9010A	My53470879	May. 16, 2020	1Year
Signal Generator	Agilent	N5181A	MY50145187	May. 17, 2020	1 Year
Power Meter	Agilent	N1918A	MY54180006	May. 17, 2020	1 Year
Power Sensor	Agilent	E9304A H18	MY52050011	May. 16, 2020	1 Year
Power Meter	BOONTON	4232A	10539	May. 17, 2020	1 Year
Power Sensor	BOONTON	51011EMC	34236/34238	May. 16, 2020	1 Year
Temp. &Humi. Recorder	CLOCK	HTC-1	EE-334	May. 16, 2020	1 Year
Electronic Thermometer	FeiHong	HY	TP101	May. 17, 2020	1 Year
Coupler	Woken	0110A056020	COM27RW1A3	May. 17, 2020	1 Year



6. Measurement Uncertainty

Source of Uncertainty	Toleranc e (± %)	Probability Distributio n	Divisor	Ci (1g)	Ci (10g)	Standard Uncertai nty (± %, 1g)	Standard Uncertai nty (± %, 10g)	Vi
Measurement System	-	-			-	-	_	
Probe Calibration	6.0	Normal	1	1	1	6.05	6.05	8
Axial Isotropy	4.7	Rectangul ar	√3	0.7	0.7	1.9	1.9	8
Hemispherical Isotropy	9.6	Rectangul ar	√3	0.7	0.7	3.9	3.9	8
Linearity	4.7	Rectangul ar	√3	1	1	2.7	2.7	8
Probe Modulation Response	2.4	Rectangul ar	√3	1	1	1.4	1.4	8
Detection Limits	0.25	Rectangul ar	√3	1	1	0.14	0.14	8
Boundary Effect	1.0	Rectangul ar	√3	1	1	0.6	0.6	8
Readout Electronics	0.3	Normal	1	1	1	0.3	0.3	∞
Response Time	0.0	Rectangul ar	√3	1	1	0.0	0.0	8
Integration Time	1.7	Rectangul ar	√3	1	1	1.0	1.0	8
RF Ambient Conditions – Noise	3.0	Rectangul ar	√3	1	1	1.7	1.7	∞
RF Ambient Conditions – Reflections	3.0	Rectangul ar	√3	1	1	1.7	1.7	∞
Probe Positioner Mech. Restrictions	0.4	Rectangul ar	√3	1	1	0.2	0.2	8
Probe Positioning with Respect to Phantom Shell	2.9	Rectangul ar	√3	1	1	1.7	1.7	∞
Post-processing	2.0	Rectangul ar	√3	1	1	1.2	1.2	8
Test Sample Related	-	-	_	_	-	-	-	
Device Holder Uncertainty	4.2 / 1.8	Normal	1	1	1	4.2	1.8	32
Test Sample Positioning	1.5 / 0.7	Normal	1	1	1	1.5	0.7	32
Power Scaling	0.0	Rectangul ar	√3	1	1	0.0	0.0	∞
Power Drift of Measured SAR	5.0	Rectangul ar	√3	1	1	2.9	2.9	8
Phantom and Setup								
Phantom Uncertainty (Shape and Thickness Tolerances)	7.2	Rectangul ar	√3	1	1	4.2	4.2	8
Algorithm for Correcting SAR for Deviations in Permittivity and Conductivity	1.2 / 0.97	Normal	1	1	0.84	1.2	0.8	8
Liquid Conductivity (Meas.)	1.0	Normal	1	0.78	0.71	0.8	0.7	25
Liquid Permittivity (Meas.)	0.5	Normal	1	0.23	0.26	0.1	0.1	25

深圳信测标准技术服务股份有限公司 地址:广东省深圳市南山区马家龙工业区69栋 网址:Http://www.emtek.com.cn 邮箱:cs.rep@emtek.com.cn

EMTEK (Shenzhen) Co., Ltd. Add: Building 69, Majialong Industry Zone, Nanshan District, Shenzhen, Guangdong, China Http://www.emtek.com.cn E-mail: cs.rep@emtek.com.cn



Access to t	he Wo	orld
-------------	-------	------

Liquid Conductivity– Temperature Uncertainty	2.2	Rectangul ar	√3	0.78	0.71	1.0	0.9	8
Liquid Permittivity– Temperature Uncertainty	1.9	Rectangul ar	√3	0.23	0.26	0.3	0.3	8
Combined Standard Uncertainty				±12.1%	± 11.4 %			
Expanded Uncertainty (K=2)					±24.2%	±22.8%		

Uncertainty budget for frequency range 300 MHz to 3 GHz



深圳信测标准技术服务股份有限公司地址:广东省深圳市南山区马家龙工业区69栋 网址:Http://www.emtek.com.cn 邮箱:cs.rep@emtek.com.cn EMTEK (Shenzhen) Co., Ltd. Add: Building 69, Majialong Industry Zone, Nanshan District, Shenzhen, Guangdong, China Http://www.emtek.com.cn E-mail: cs.rep@emtek.com.cn

Report No.ES201028009W02



Access to the World

Source of Uncertainty	Toleranc e (± %)	Probability Distributio n	Divisor	Ci (1g)	Ci (10g)	Standard Uncertai nty (± %, 1g)	Standard Uncertai nty (± %, 10g)	Vi
Measurement System		-				-		
Probe Calibration	6.55	Normal	1	1	1	6.65	6.65	8
Axial Isotropy	4.7	Rectangul ar	√3	0.7	0.7	1.9	1.9	∞
Hemispherical Isotropy	9.6	Rectangul ar	√3	0.7	0.7	3.9	3.9	8
Linearity	4.7	Rectangul ar	√3	1	1	2.7	2.7	8
Probe Modulation Response	2.4	Rectangul ar	√3	1	1	1.4	1.4	8
Detection Limits	0.25	Rectangul ar	√3	1	1	0.14	0.14	∞
Boundary Effect	2.0	Rectangul ar	√3	1	1	1.2	1.2	∞
Readout Electronics	0.3	Normal	1	1	1	0.3	0.3	∞
Response Time	0.0	Rectangul ar	√3	1	1	0.0	0.0	∞
Integration Time	1.7	Rectangul ar	√3	1	1	1.0	1.0	∞
RF Ambient Conditions – Noise	3.0	Rectangul ar	√3	1	1	1.7	1.7	∞
RF Ambient Conditions – Reflections	3.0	Rectangul ar	√3	1	1	1.7	1.7	∞
Probe Positioner Mech. Restrictions	0.4	Rectangul ar	√3	1	1	0.2	0.2	8
Probe Positioning with Respect to Phantom Shell	6.7	Rectangul ar	√3	1	1	3.9	3.9	8
Post-processing	4.0	Rectangul ar	√3	1	1	2.3	2.3	8
Test Sample Related								
Device Holder Uncertainty	4.2 / 1.8	Normal	1	1	1	4.2	1.8	32
Test Sample Positioning	1.5 / 0.7	Normal	1	1	1	1.5	0.7	32
Power Scaling	0.0	Rectangul ar	√3	1	1	0.0	0.0	8
Power Drift of Measured SAR	5.0	Rectangul ar	√3	1	1	2.9	2.9	8
Phantom and Setup								
Phantom Uncertainty (Shape and Thickness Tolerances)	7.6	Rectangul ar	√3	1	1	4.4	4.4	8
Algorithm for Correcting SAR for Deviations in Permittivity and Conductivity	1.2 / 0.97	Normal	1	1	0.84	1.2	0.8	8
Liquid Conductivity (Meas.)	1.0	Normal	1	0.78	0.71	0.8	0.7	25
Liquid Permittivity (Meas.)	0.5	Normal	1	0.23	0.26	0.1	0.1	25
Liquid Conductivity– Temperature	2.2	Rectangul	√3	0.78	0.71	1.0	0.9	∞

深圳信测标准技术服务股份有限公司地址:广东省深圳市南山区马家龙工业区69栋 网址:Http://www.emtek.com.cn 邮箱:cs.rep@emtek.com.cn

EMTEK (Shenzhen) Co., Ltd. Add: Building 69, Majialong Industry Zone, Nanshan District, Shenzhen, Guangdong, China Http://www.emtek.com.cn E-mail: cs.rep@emtek.com.cn



Access to the World

Uncertainty		ar						
Liquid Permittivity– Temperature	1.9	Rectangul	√3	0.23	0.26	0.3	0.3	~~~~~~~~~~~~~~~~~~~~~~~~~~~~~~~~~~~~~~~
Uncertainty	1.9	ar	٧3	0.25	0.20	0.5	0.5	~
Combined Standard Uncertainty		-		_		±13.2%	±12.5	
Expanded Uncertainty (K=2)				±26.4%	±25.0%			

Uncertainty budget for frequency range 3 GHz to 6 GHz



深圳信测标准技术服务股份有限公司地址:广东省深圳市南山区马家龙工业区69栋 网址:Http://www.emtek.com.cn 邮箱:cs.rep@emtek.com.cn EMTEK (Shenzhen) Co., Ltd. Add: Building 69, Majialong Industry Zone, Nanshan District, Shenzhen, Guangdong, China Http://www.emtek.com.cn E-mail: cs.rep@emtek.com.cn

Report No.ES201028009W02



7. Information on the Testing Laboratories

We, EMTEK (SHENZHEN) CO., LTD., were founded in 2000 to provide our best service in EMC, Radio, Telecom and Safety consultation. Our laboratories are accredited and approved according to ISO/IEC 17025.

Site Description EMC Lab.	: Accredited by CNAS,2018.11.30 The certificate is valid until 2022.10.28 The Laboratory has been assessed and proved to be in compliance with CNAS-CL01:2006 (identical to ISO/IEC 17025:2017) The Certificate Registration Number is L2291
	Accredited by FCC Designation Number: CN1204 Test Firm Registration Number: 882943 Accredited by A2LA, August 25, 2020 The Certificate Registration Number is 4321.01
	Accredited by Industry Canada, November 09, 2018 The Certificate Registration Number is CN0008
Name of Firm	: EMTEK (SHENZHEN) CO., LTD.
Site Location	: Building 69, Majialong Industry Zone, Nanshan District, Shenzhen, Guangdong, China

If you have any comments, please feel free to contact us at the following:

Add: Bldg 69, Majialong Industry Zone, Nanshan District, Shenzhen, Guangdong, China TEL: 86-755-26954280 FAX: 86-755-26954282

Email: csg@emtek.com.cn Web Site: www.emtek.com.cn

The road map of all our labs can be found in our web site also.

---END----



Appendix A. SAR Plots of System Verification

The plots for system verification with largest deviation for each SAR system combination are shown as follows.





Appendix B. SAR Plots of SAR Measurement

The SAR plots for highest measured SAR in each exposure configuration, wireless mode and frequency band combination, and measured SAR are shown as follows.



Appendix C. Calibration Certificate for Probe and Dipole

The calibration certificates are shown as follows.





Appendix D. Photographs of EUT and Setup

