

Edition  
(版本)

 Changing Description  
(变更说明)

 Design  
(设计)


 Date  
(日期)

# 1:1


35.3mm



23.2 mm

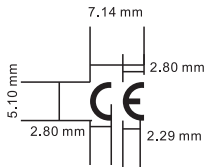

# 2:1

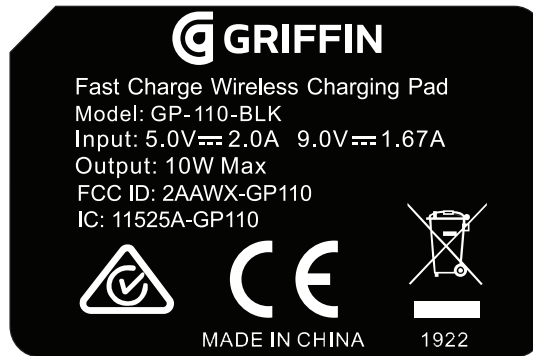
**备注:**

- 镭雕颜色为灰色。
- 按图纸内容镭雕。
- 镭雕内容匀称清晰,不可歪斜。
- 镭雕效果参考客户回签样品。
- 用纯棉布蘸满95%纯度医用酒精,包在500g专用法码上,以40-60次/分钟的速度,20mm左右的行程,在被测物表面来回擦拭200个循环;
- 以镭雕图形不掉色为合格;

**Remark:**

- The laser carving gray in color.
- The content according to the drawing of radium vulture.
- The content of radium vulture symmetry is clear, not skewed.
- Effect of radium vulture reference customers sign back samples.
- With pure cotton tank filled with 95% purity medical alcohol, wrapped in a 500 g Usage code to 40 to 60 times/min, the speed of about 20 mm Trip and analyte in a sample surface brush try 200 cycle back and forth;
- Radium vulture graphics do not rub off as qualified;

COSTOMER (客户)	1234	TITLE (图纸名称)	成品镭雕
PROVIDER (制作商)	/	PART NO. (物料编号)	/
UNIT (单位)	mm	M'ATL (材质)	/
DESIGNER (制作)		DATE (日期)	
CHECKED (确认)		DATE (日期)	
CHECKED (审核)		DATE (日期)	
APPROVAL (批准)		DATE (日期)	

Label Location

