

Appendix Test Data

| | | | |
|------------------|-------------------|--------------------|--------------------|
| Report No.: | 18220WC40042204 | Test Sample No.: | 1-2-2 |
| Start Test Date: | 2024.04.15 | Finish Test Date: | 2024.05.15 |
| Test Engineer: | <i>Joker Wang</i> | Auditor: | <i>Justin Feng</i> |
| Temperature: | 25.3°C | Relative Humidity: | 49% |
| Pressure: | 101kPa | | |

Appendix A1: 26dB Bandwidth

Test Result

| TestMode | Antenna | Frequency[MHz] | 26db EBW [MHz] | FL[MHz] | FH[MHz] | Limit[MHz] | Verdict |
|------------|---------|----------------|----------------------|----------|----------|------------|---------|
| 11A | Ant1 | 5180 | 21.360 | 5169.120 | 5190.480 | --- | --- |
| 11A | Ant1 | 5200 | 21.480 | 5189.200 | 5210.680 | --- | --- |
| 11A | Ant1 | 5240 | 21.200 | 5229.240 | 5250.440 | --- | --- |
| 11A | Ant1 | 5745 | 21.400 | 5734.160 | 5755.560 | --- | --- |
| 11A | Ant1 | 5785 | 21.440 | 5774.080 | 5795.520 | --- | --- |
| 11A | Ant1 | 5825 | 21.400 | 5814.200 | 5835.600 | --- | --- |
| 11N20SISO | Ant1 | 5180 | 21.560 | 5169.120 | 5190.680 | --- | --- |
| 11N20SISO | Ant1 | 5200 | 21.720 | 5189.080 | 5210.800 | --- | --- |
| 11N20SISO | Ant1 | 5240 | 21.640 | 5229.040 | 5250.680 | --- | --- |
| 11N20SISO | Ant1 | 5745 | 21.600 | 5734.120 | 5755.720 | --- | --- |
| 11N20SISO | Ant1 | 5785 | 21.840 | 5773.880 | 5795.720 | --- | --- |
| 11N20SISO | Ant1 | 5825 | 21.520 | 5814.240 | 5835.760 | --- | --- |
| 11N40SISO | Ant1 | 5190 | 41.040 | 5170.000 | 5211.040 | --- | --- |
| 11N40SISO | Ant1 | 5230 | 41.440 | 5209.840 | 5251.280 | --- | --- |
| 11N40SISO | Ant1 | 5755 | 41.520 | 5734.920 | 5776.440 | --- | --- |
| 11N40SISO | Ant1 | 5795 | 41.680 | 5775.000 | 5816.680 | --- | --- |
| 11AC20SISO | Ant1 | 5180 | 21.600 | 5169.000 | 5190.600 | --- | --- |
| 11AC20SISO | Ant1 | 5200 | 21.640 | 5189.200 | 5210.840 | --- | --- |
| 11AC20SISO | Ant1 | 5240 | 21.600 | 5229.160 | 5250.760 | --- | --- |
| 11AC20SISO | Ant1 | 5745 | 21.560 | 5734.080 | 5755.640 | --- | --- |
| 11AC20SISO | Ant1 | 5785 | 21.560 | 5774.040 | 5795.600 | --- | --- |
| 11AC20SISO | Ant1 | 5825 | 21.600 | 5814.040 | 5835.640 | --- | --- |

Shenzhen Anbotek Compliance Laboratory Limited

Address: 1/F., Building D, Sogood Science and Technology Park, Sanwei Community,
 Hangcheng Street, Bao'an District, Shenzhen, Guangdong, China.
 Tel: (86) 0755-26066440 Fax: (86) 0755-26014772 Email: service@anbotek.com



Hotline
 400-003-0500
 www.anbotek.com.cn



| | | | | | | | |
|------------|------|------|--------|----------|----------|-----|-----|
| 11AC40SISO | Ant1 | 5190 | 39.840 | 5170.160 | 5210.000 | --- | --- |
| 11AC40SISO | Ant1 | 5230 | 40.960 | 5209.680 | 5250.640 | --- | --- |
| 11AC40SISO | Ant1 | 5755 | 40.160 | 5734.760 | 5774.920 | --- | --- |
| 11AC40SISO | Ant1 | 5795 | 41.600 | 5774.840 | 5816.440 | --- | --- |
| 11AC80SISO | Ant1 | 5210 | 81.280 | 5169.680 | 5250.960 | --- | --- |
| 11AC80SISO | Ant1 | 5775 | 81.440 | 5734.200 | 5815.640 | --- | --- |
| 11AX20SISO | Ant1 | 5180 | 21.400 | 5169.040 | 5190.440 | --- | --- |
| 11AX20SISO | Ant1 | 5200 | 21.320 | 5189.280 | 5210.600 | --- | --- |
| 11AX20SISO | Ant1 | 5240 | 21.360 | 5229.160 | 5250.520 | --- | --- |
| 11AX20SISO | Ant1 | 5745 | 21.360 | 5734.160 | 5755.520 | --- | --- |
| 11AX20SISO | Ant1 | 5785 | 21.440 | 5774.200 | 5795.640 | --- | --- |
| 11AX20SISO | Ant1 | 5825 | 21.320 | 5814.320 | 5835.640 | --- | --- |
| 11AX40SISO | Ant1 | 5190 | 39.760 | 5170.080 | 5209.840 | --- | --- |
| 11AX40SISO | Ant1 | 5230 | 40.000 | 5210.000 | 5250.000 | --- | --- |
| 11AX40SISO | Ant1 | 5755 | 40.000 | 5735.000 | 5775.000 | --- | --- |
| 11AX40SISO | Ant1 | 5795 | 40.240 | 5774.840 | 5815.080 | --- | --- |
| 11AX80SISO | Ant1 | 5210 | 81.120 | 5169.520 | 5250.640 | --- | --- |
| 11AX80SISO | Ant1 | 5775 | 80.640 | 5734.840 | 5815.480 | --- | --- |

Shenzhen Anbotek Compliance Laboratory Limited

Address: 1/F., Building D, Sogood Science and Technology Park, Sanwei Community, Hangcheng Street, Bao'an District, Shenzhen, Guangdong, China.
 Tel: (86) 0755-26066440 Fax: (86) 0755-26014772 Email: service@anbotek.com



Hotline
 400-003-0500
www.anbotek.com.cn



Test Graphs



11A-Ant1-5180



11A-Ant1-5200




11A-Ant1-5240

Shenzhen Anbotek Compliance Laboratory Limited


Address: 1/F., Building D, Sogood Science and Technology Park, Sanwei Community, Hangcheng Street, Bao'an District, Shenzhen, Guangdong, China.
Tel: (86) 0755-26066440 Fax: (86) 0755-26014772 Email: service@anbotek.com

Hotline 400-003-0500
www.anbotek.com.cn



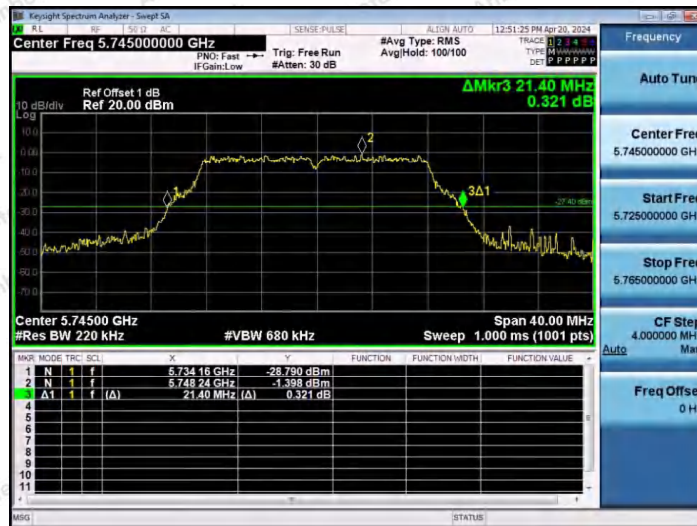

11A-Ant1-5745

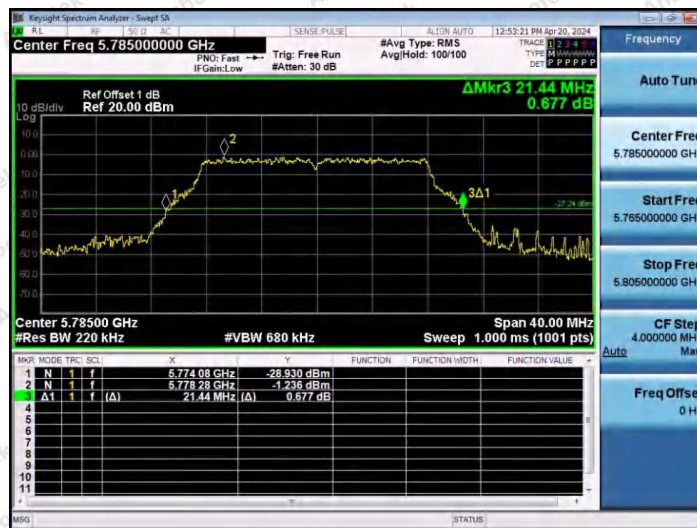

11A-Ant1-5785



11A-Ant1-5825

Shenzhen Anbotek Compliance Laboratory Limited


Address: 1/F., Building D, Sogood Science and Technology Park, Sanwei Community, Hangcheng Street, Bao'an District, Shenzhen, Guangdong, China.
Tel: (86) 0755-26066440 Fax: (86) 0755-26014772 Email: service@anbotek.com

Hotline 400-003-0500
www.anbotek.com.cn





11N20SISO-Ant1-5180

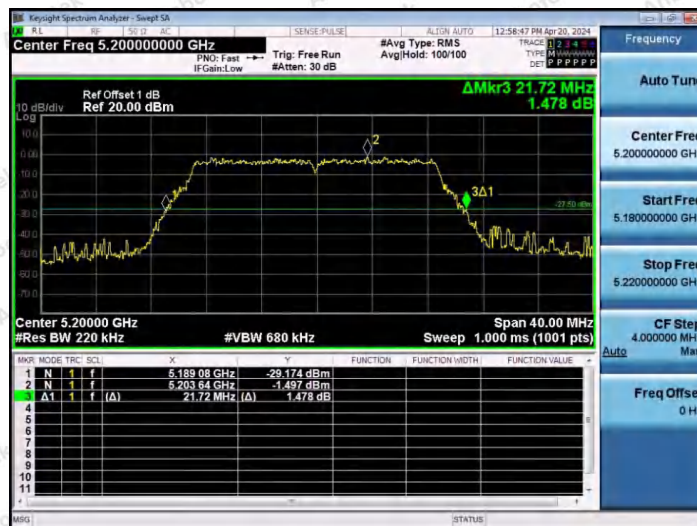

11N20SISO-Ant1-5200



11N20SISO-Ant1-5240

Shenzhen Anbotek Compliance Laboratory Limited


Address: 1/F., Building D, Sogood Science and Technology Park, Sanwei Community, Hangcheng Street, Bao'an District, Shenzhen, Guangdong, China.
 Tel: (86) 0755-26066440 Fax: (86) 0755-26014772 Email: service@anbotek.com

Hotline 400-003-0500
 www.anbotek.com.cn





11N20SISO-Ant1-5745

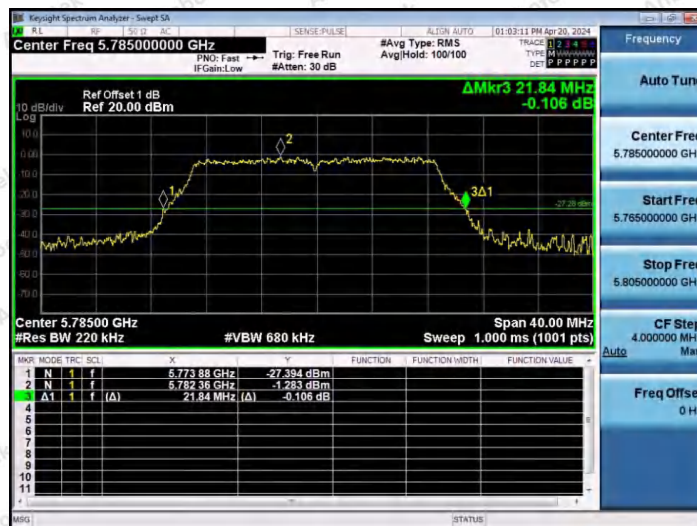

11N20SISO-Ant1-5785




11N20SISO-Ant1-5825

Shenzhen Anbotek Compliance Laboratory Limited

Address: 1/F., Building D, Sogood Science and Technology Park, Sanwei Community, Hangcheng Street, Bao'an District, Shenzhen, Guangdong, China.
 Tel: (86) 0755-26066440 Fax: (86) 0755-26014772 Email: service@anbotek.com

Hotline 400-003-0500
 www.anbotek.com.cn




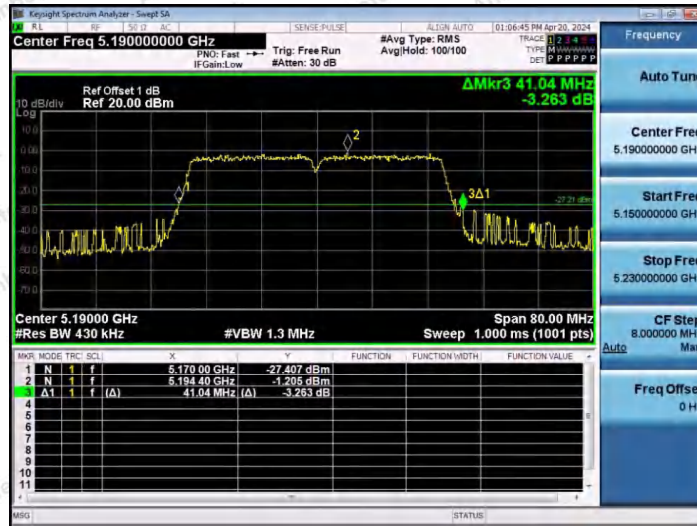

11N40SISO-Ant1-5190



11N40SISO-Ant1-5230

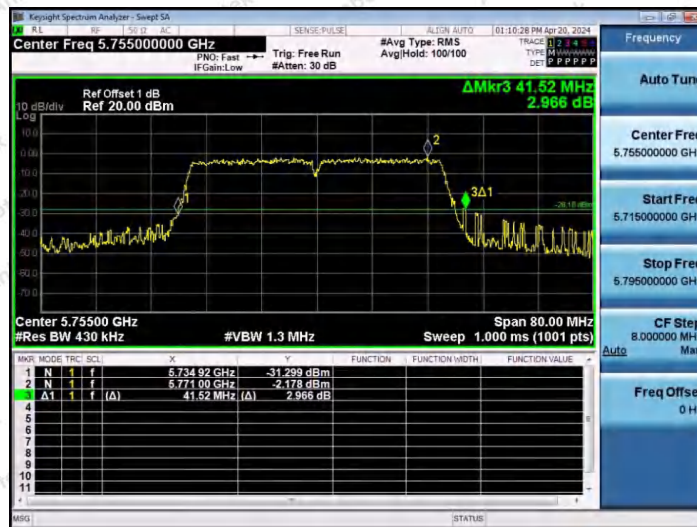

11N40SISO-Ant1-5755

Shenzhen Anbotek Compliance Laboratory Limited


Address: 1/F., Building D, Sogood Science and Technology Park, Sanwei Community, Hangcheng Street, Bao'an District, Shenzhen, Guangdong, China.
 Tel: (86) 0755-26066440 Fax: (86) 0755-26014772 Email: service@anbotek.com

Hotline 400-003-0500
 www.anbotek.com.cn





11N40SISO-Ant1-5795

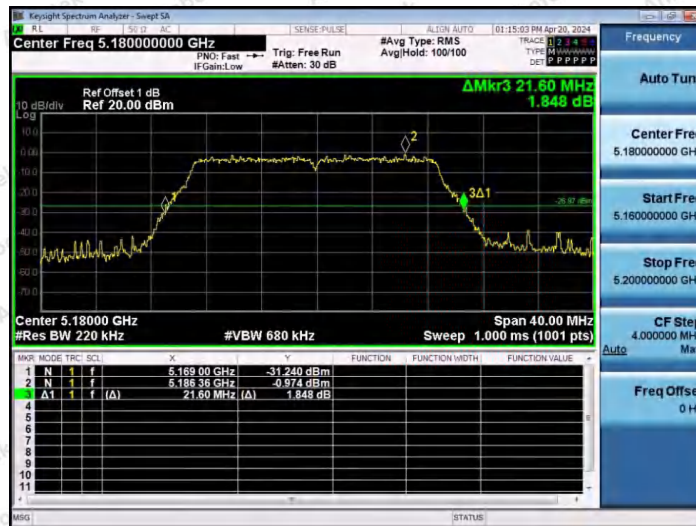

11AC20SISO-Ant1-5180



11AC20SISO-Ant1-5200

Shenzhen Anbotek Compliance Laboratory Limited

Address: 1/F., Building D, Sogood Science and Technology Park, Sanwei Community, Hangcheng Street, Bao'an District, Shenzhen, Guangdong, China.
 Tel: (86) 0755-26066440 Fax: (86) 0755-26014772 Email: service@anbotek.com

Hotline 400-003-0500
 www.anbotek.com.cn





11AC20SISO-Ant1-5240



11AC20SISO-Ant1-5745



11AC20SISO-Ant1-5785

Shenzhen Anbotek Compliance Laboratory Limited

Address: 1/F., Building D, Sogood Science and Technology Park, Sanwei Community, Hangcheng Street, Bao'an District, Shenzhen, Guangdong, China.
 Tel: (86) 0755-26066440 Fax: (86) 0755-26014772 Email: service@anbotek.com

Hotline 400-003-0500
 www.anbotek.com.cn





11AC20SISO-Ant1-5825



11AC40SISO-Ant1-5190




11AC40SISO-Ant1-5230

Shenzhen Anbotek Compliance Laboratory Limited

Address: 1/F., Building D, Sogood Science and Technology Park, Sanwei Community, Hangcheng Street, Bao'an District, Shenzhen, Guangdong, China.
 Tel: (86) 0755-26066440 Fax: (86) 0755-26014772 Email: service@anbotek.com

Hotline 400-003-0500
 www.anbotek.com.cn



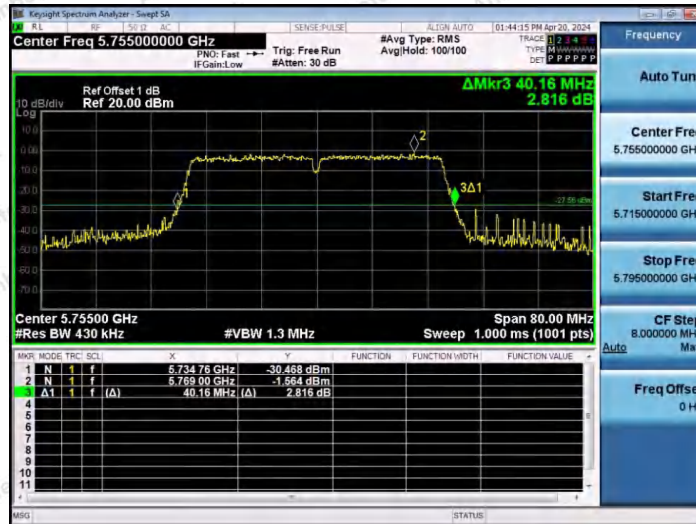

11AC40SISO-Ant1-5755



11AC40SISO-Ant1-5795




11AC80SISO-Ant1-5210

Shenzhen Anbotek Compliance Laboratory Limited

Address: 1/F., Building D, Sogood Science and Technology Park, Sanwei Community, Hangcheng Street, Bao'an District, Shenzhen, Guangdong, China.
 Tel: (86) 0755-26066440 Fax: (86) 0755-26014772 Email: service@anbotek.com

Hotline 400-003-0500
 www.anbotek.com.cn




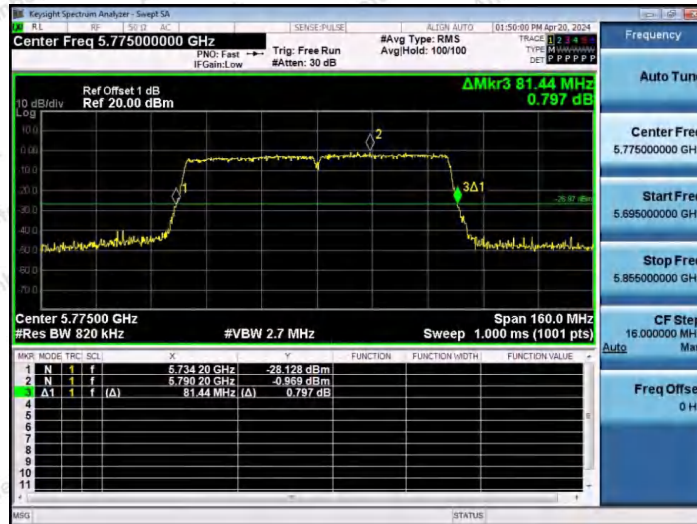

11AC80SISO-Ant1-5775



11AX20SISO-Ant1-5180

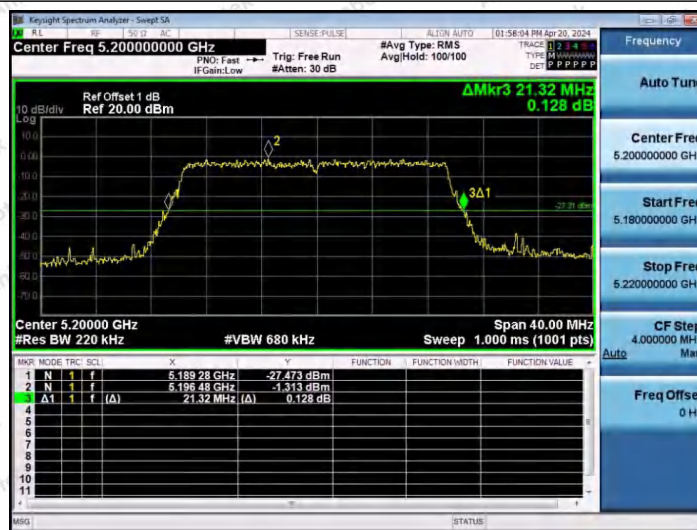

11AX20SISO-Ant1-5200

Shenzhen Anbotek Compliance Laboratory Limited

Address: 1/F., Building D, Sogood Science and Technology Park, Sanwei Community, Hangcheng Street, Bao'an District, Shenzhen, Guangdong, China.
Tel: (86) 0755-26066440 Fax: (86) 0755-26014772 Email: service@anbotek.com

Hotline 400-003-0500
www.anbotek.com.cn





11AX20SISO-Ant1-5240



11AX20SISO-Ant1-5745




11AX20SISO-Ant1-5785

Shenzhen Anbotek Compliance Laboratory Limited


Address: 1/F., Building D, Sogood Science and Technology Park, Sanwei Community, Hangcheng Street, Bao'an District, Shenzhen, Guangdong, China.
 Tel: (86) 0755-26066440 Fax: (86) 0755-26014772 Email: service@anbotek.com

Hotline 400-003-0500
 www.anbotek.com.cn



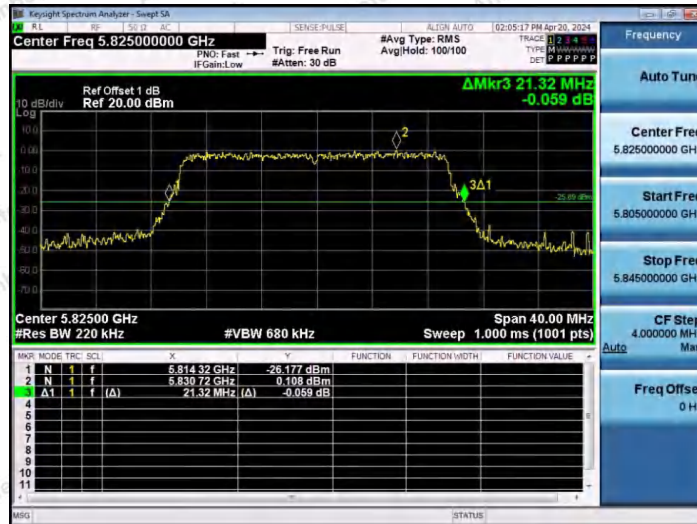

11AX20SISO-Ant1-5825

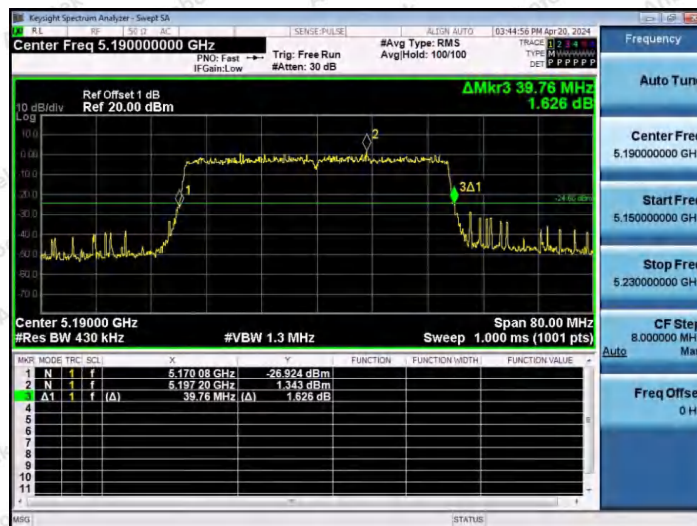

11AX40SISO-Ant1-5190




11AX40SISO-Ant1-5230

Shenzhen Anbotek Compliance Laboratory Limited


Address: 1/F., Building D, Sogood Science and Technology Park, Sanwei Community, Hangcheng Street, Bao'an District, Shenzhen, Guangdong, China.
Tel: (86) 0755-26066440 Fax: (86) 0755-26014772 Email: service@anbotek.com

Hotline 400-003-0500
www.anbotek.com.cn




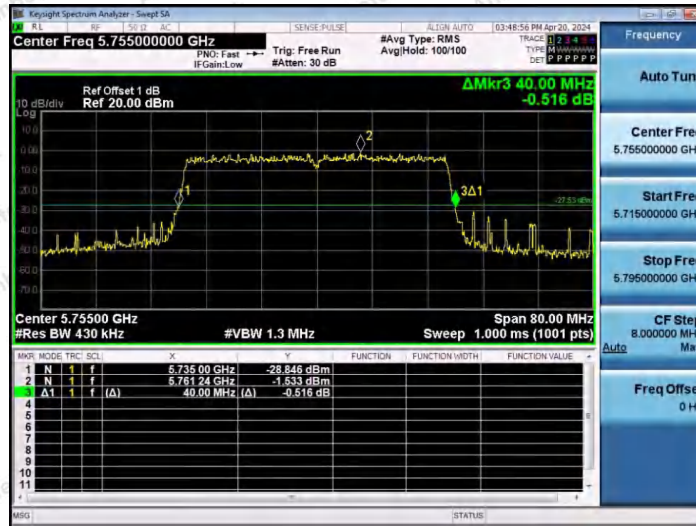

11AX40SISO-Ant1-5755

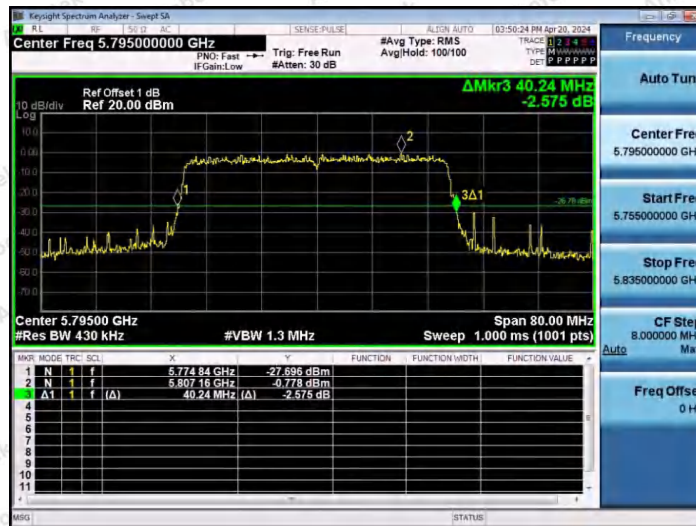

11AX40SISO-Ant1-5795

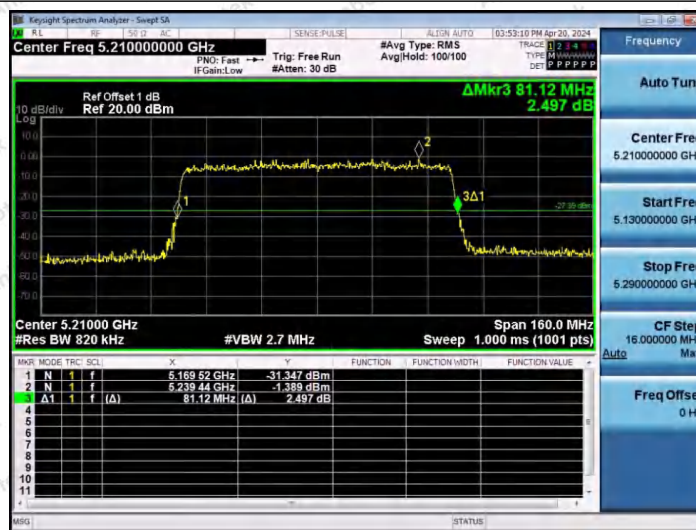


11AX80SISO-Ant1-5210

Shenzhen Anbotek Compliance Laboratory Limited

Address: 1/F., Building D, Sogood Science and Technology Park, Sanwei Community, Hangcheng Street, Bao'an District, Shenzhen, Guangdong, China.
Tel: (86) 0755-26066440 Fax: (86) 0755-26014772 Email: service@anbotek.com

Hotline 400-003-0500
www.anbotek.com.cn



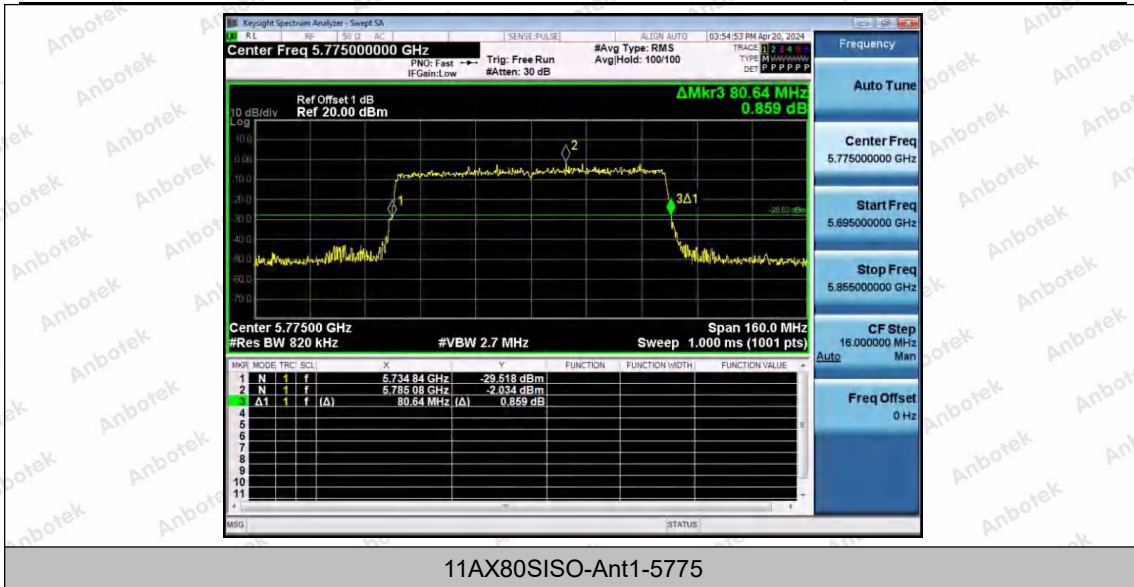

Shenzhen Anbotek Compliance Laboratory Limited

Address: 1/F., Building D, Sogood Science and Technology Park, Sanwei Community, Hangcheng Street, Bao'an District, Shenzhen, Guangdong, China.
Tel: (86) 0755-26066440 Fax: (86) 0755-26014772 Email: service@anbotek.com

Hotline
400-003-0500
www.anbotek.com.cn



Appendix A2: 99% Occupied Bandwidth

Test Result

| TestMode | Antenna | Frequency[MHz] | OCB [MHz] | FL[MHz] | FH[MHz] | Limit[MHz] | Verdict |
|------------|---------|----------------|-----------|-----------|-----------|------------|---------|
| 11A | Ant1 | 5180 | 17.434 | 5171.1247 | 5188.5587 | --- | --- |
| 11A | Ant1 | 5200 | 17.470 | 5191.1499 | 5208.6199 | --- | --- |
| 11A | Ant1 | 5240 | 17.480 | 5231.1644 | 5248.6444 | --- | --- |
| 11A | Ant1 | 5745 | 17.499 | 5736.1184 | 5753.6174 | --- | --- |
| 11A | Ant1 | 5785 | 17.531 | 5776.1345 | 5793.6655 | --- | --- |
| 11A | Ant1 | 5825 | 17.432 | 5816.1600 | 5833.5920 | --- | --- |
| 11N20SISO | Ant1 | 5180 | 18.474 | 5170.6424 | 5189.1164 | --- | --- |
| 11N20SISO | Ant1 | 5200 | 18.479 | 5190.6632 | 5209.1422 | --- | --- |
| 11N20SISO | Ant1 | 5240 | 18.490 | 5230.6534 | 5249.1434 | --- | --- |
| 11N20SISO | Ant1 | 5745 | 18.490 | 5735.6341 | 5754.1241 | --- | --- |
| 11N20SISO | Ant1 | 5785 | 18.502 | 5775.6124 | 5794.1144 | --- | --- |
| 11N20SISO | Ant1 | 5825 | 18.550 | 5815.6041 | 5834.1541 | --- | --- |
| 11N40SISO | Ant1 | 5190 | 36.787 | 5171.5946 | 5208.3816 | --- | --- |
| 11N40SISO | Ant1 | 5230 | 36.720 | 5211.6085 | 5248.3285 | --- | --- |
| 11N40SISO | Ant1 | 5755 | 36.761 | 5736.5893 | 5773.3503 | --- | --- |
| 11N40SISO | Ant1 | 5795 | 36.763 | 5776.6169 | 5813.3799 | --- | --- |
| 11AC20SISO | Ant1 | 5180 | 18.443 | 5170.6633 | 5189.1063 | --- | --- |
| 11AC20SISO | Ant1 | 5200 | 18.464 | 5190.6505 | 5209.1145 | --- | --- |
| 11AC20SISO | Ant1 | 5240 | 18.468 | 5230.6718 | 5249.1398 | --- | --- |
| 11AC20SISO | Ant1 | 5745 | 18.553 | 5735.6312 | 5754.1842 | --- | --- |
| 11AC20SISO | Ant1 | 5785 | 18.494 | 5775.6589 | 5794.1529 | --- | --- |
| 11AC20SISO | Ant1 | 5825 | 18.451 | 5815.6689 | 5834.1199 | --- | --- |
| 11AC40SISO | Ant1 | 5190 | 36.717 | 5171.5905 | 5208.3075 | --- | --- |
| 11AC40SISO | Ant1 | 5230 | 36.789 | 5211.5744 | 5248.3634 | --- | --- |
| 11AC40SISO | Ant1 | 5755 | 36.761 | 5736.5946 | 5773.3556 | --- | --- |
| 11AC40SISO | Ant1 | 5795 | 36.807 | 5776.5992 | 5813.4062 | --- | --- |
| 11AC80SISO | Ant1 | 5210 | 75.885 | 5172.1745 | 5248.0595 | --- | --- |
| 11AC80SISO | Ant1 | 5775 | 75.955 | 5737.1425 | 5813.0975 | --- | --- |
| 11AX20SISO | Ant1 | 5180 | 19.227 | 5170.2839 | 5189.5109 | --- | --- |
| 11AX20SISO | Ant1 | 5200 | 19.248 | 5190.2784 | 5209.5264 | --- | --- |
| 11AX20SISO | Ant1 | 5240 | 19.241 | 5230.2770 | 5249.5180 | --- | --- |
| 11AX20SISO | Ant1 | 5745 | 19.249 | 5735.2650 | 5754.5140 | --- | --- |
| 11AX20SISO | Ant1 | 5785 | 19.267 | 5775.2304 | 5794.4974 | --- | --- |
| 11AX20SISO | Ant1 | 5825 | 19.242 | 5815.2653 | 5834.5073 | --- | --- |
| 11AX40SISO | Ant1 | 5190 | 37.776 | 5171.0609 | 5208.8369 | --- | --- |
| 11AX40SISO | Ant1 | 5230 | 37.757 | 5211.0754 | 5248.8324 | --- | --- |
| 11AX40SISO | Ant1 | 5755 | 37.678 | 5736.0841 | 5773.7621 | --- | --- |

Shenzhen Anbotek Compliance Laboratory Limited

Address: 1/F., Building D, Sogood Science and Technology Park, Sanwei Community, Hangcheng Street, Bao'an District, Shenzhen, Guangdong, China.
Tel: (86) 0755-26066440 Fax: (86) 0755-26014772 Email: service@anbotek.com



Hotline
400-003-0500
www.anbotek.com.cn



| | | | | | | | |
|------------|------|------|--------|-----------|-----------|-----|-----|
| 11AX40SISO | Ant1 | 5795 | 37.663 | 5776.1239 | 5813.7869 | --- | --- |
| 11AX80SISO | Ant1 | 5210 | 77.074 | 5171.5443 | 5248.6183 | --- | --- |
| 11AX80SISO | Ant1 | 5775 | 77.121 | 5736.6331 | 5813.7541 | --- | --- |

Shenzhen Anbotek Compliance Laboratory Limited


Address: 1/F., Building D, Sogood Science and Technology Park, Sanwei Community, Hangcheng Street, Bao'an District, Shenzhen, Guangdong, China.
Tel: (86) 0755-26066440 Fax: (86) 0755-26014772 Email: service@anbotek.com



Hotline
400-003-0500
www.anbotek.com.cn



Test Graphs

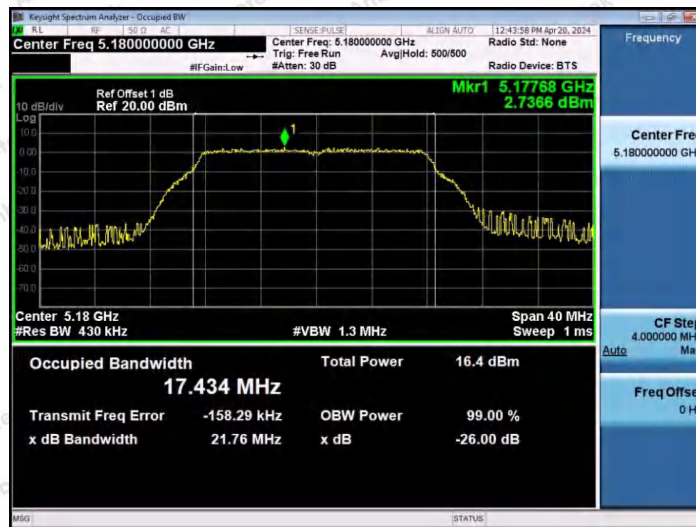

11A-Ant1-5180



11A-Ant1-5200




11A-Ant1-5240

Shenzhen Anbotek Compliance Laboratory Limited


Address: 1/F., Building D, Sogood Science and Technology Park, Sanwei Community, Hangcheng Street, Bao'an District, Shenzhen, Guangdong, China.
Tel: (86) 0755-26066440 Fax: (86) 0755-26014772 Email: service@anbotek.com

Hotline
400-003-0500
www.anbotek.com.cn




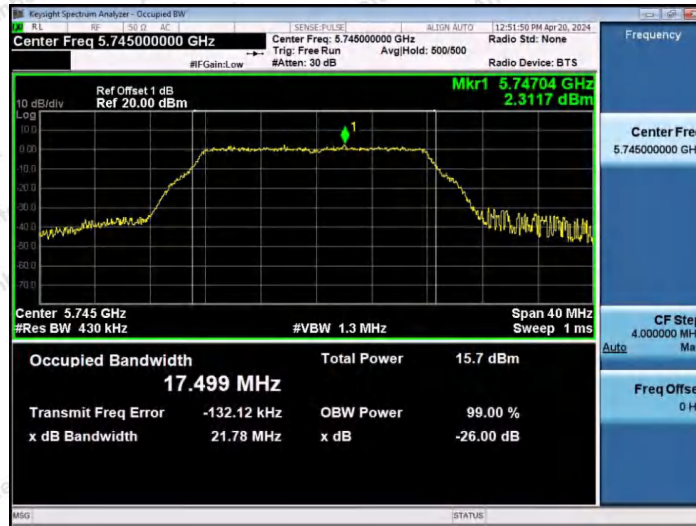

11A-Ant1-5745

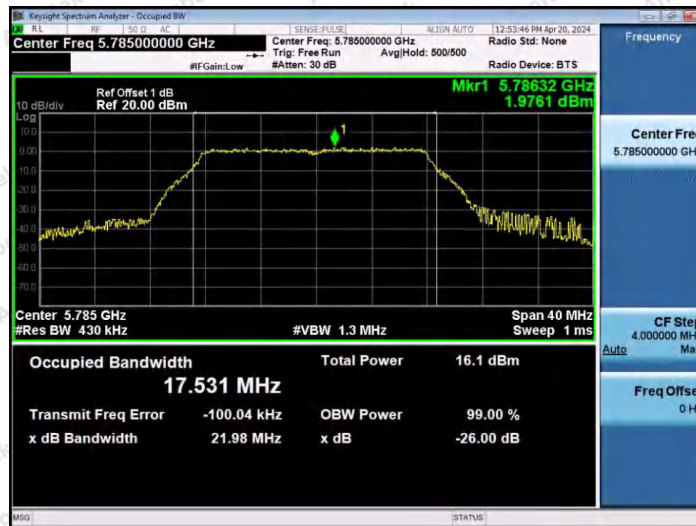

11A-Ant1-5785

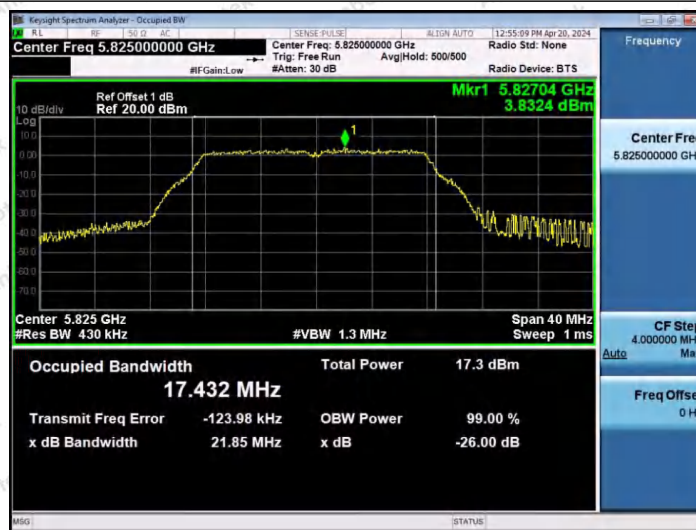


11A-Ant1-5825

Shenzhen Anbotek Compliance Laboratory Limited


Address: 1/F., Building D, Sogood Science and Technology Park, Sanwei Community, Hangcheng Street, Bao'an District, Shenzhen, Guangdong, China.
Tel: (86) 0755-26066440 Fax: (86) 0755-26014772 Email: service@anbotek.com

Hotline
400-003-0500
www.anbotek.com.cn




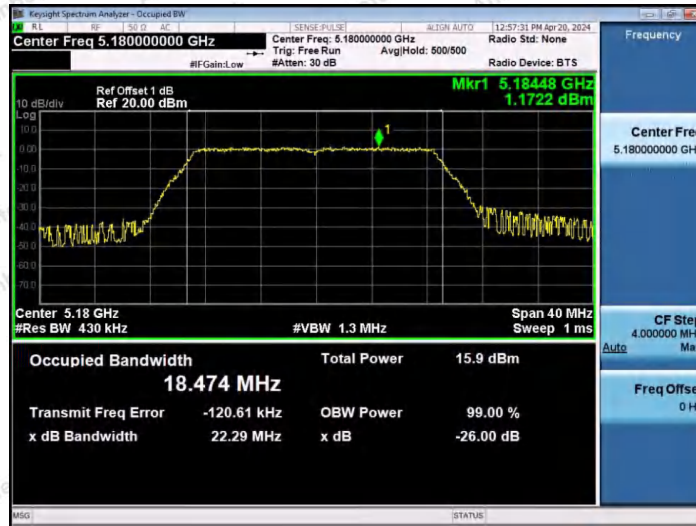

11N20SISO-Ant1-5180

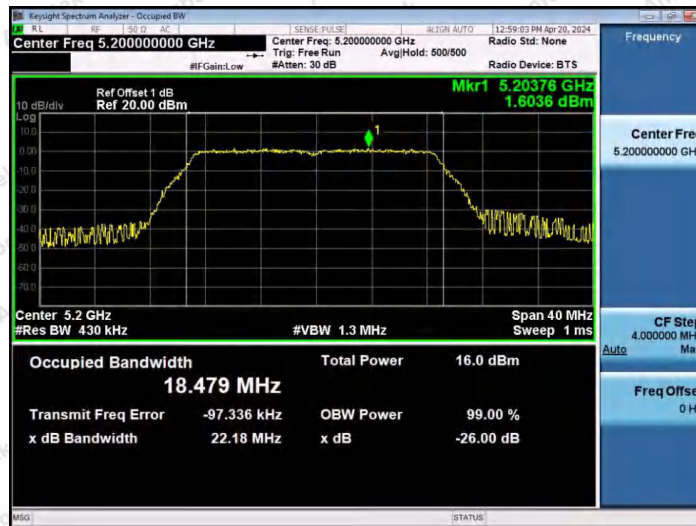

11N20SISO-Ant1-5200

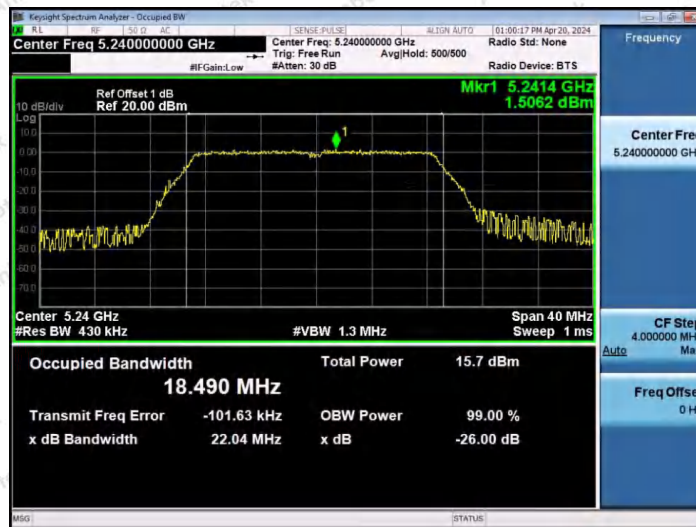


11N20SISO-Ant1-5240

Shenzhen Anbotek Compliance Laboratory Limited


Address: 1/F., Building D, Sogood Science and Technology Park, Sanwei Community, Hangcheng Street, Bao'an District, Shenzhen, Guangdong, China.
Tel: (86) 0755-26066440 Fax: (86) 0755-26014772 Email: service@anbotek.com

Hotline
400-003-0500
www.anbotek.com.cn



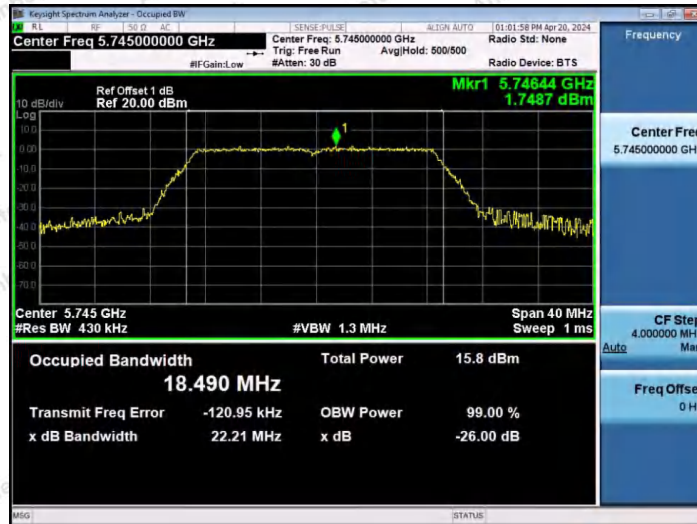

11N20SISO-Ant1-5745

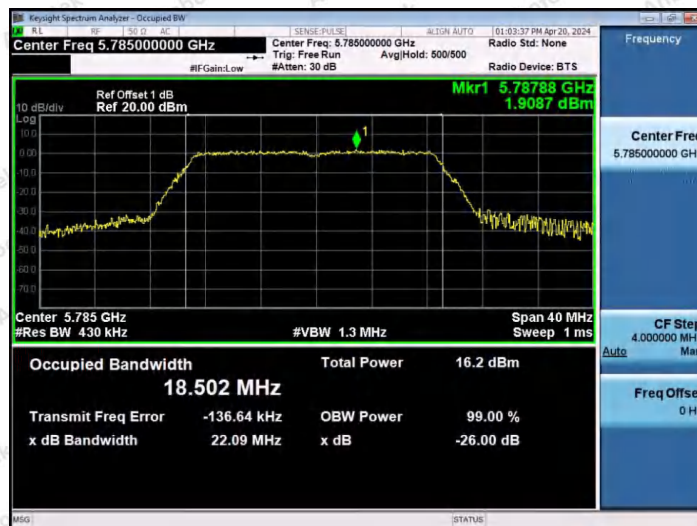

11N20SISO-Ant1-5785




11N20SISO-Ant1-5825

Shenzhen Anbotek Compliance Laboratory Limited

Address: 1/F., Building D, Sogood Science and Technology Park, Sanwei Community, Hangcheng Street, Bao'an District, Shenzhen, Guangdong, China.
Tel: (86) 0755-26066440 Fax: (86) 0755-26014772 Email: service@anbotek.com

Hotline
400-003-0500
www.anbotek.com.cn




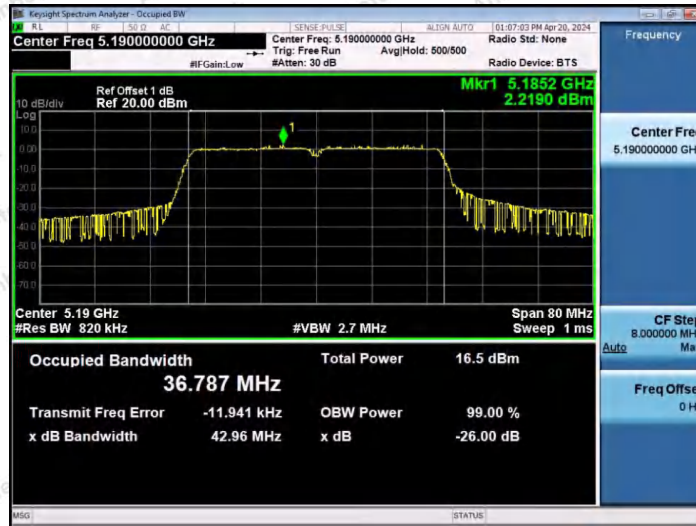

11N40SISO-Ant1-5190



11N40SISO-Ant1-5230

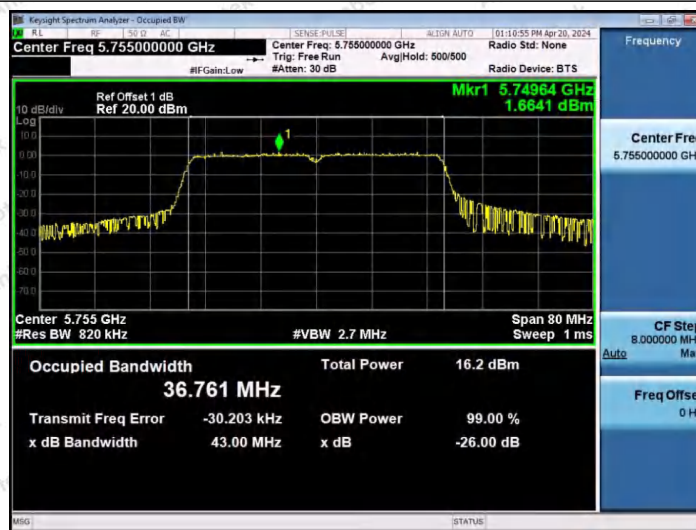


11N40SISO-Ant1-5755

Shenzhen Anbotek Compliance Laboratory Limited


Address: 1/F., Building D, Sogood Science and Technology Park, Sanwei Community, Hangcheng Street, Bao'an District, Shenzhen, Guangdong, China.
Tel: (86) 0755-26066440 Fax: (86) 0755-26014772 Email: service@anbotek.com

Hotline
400-003-0500
www.anbotek.com.cn



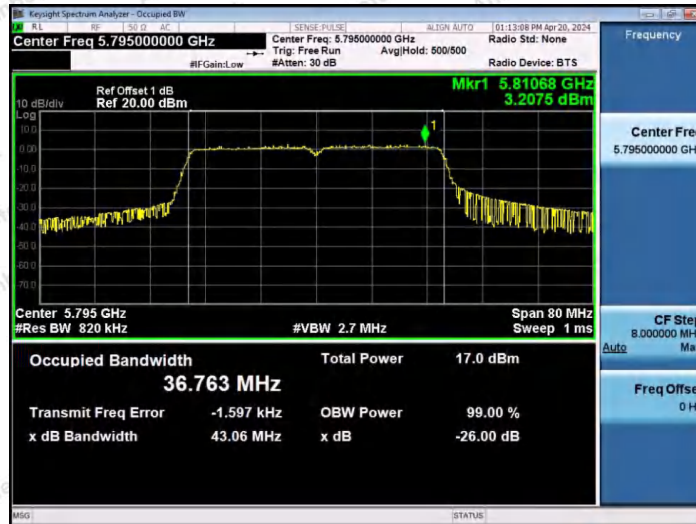

11N40SISO-Ant1-5795

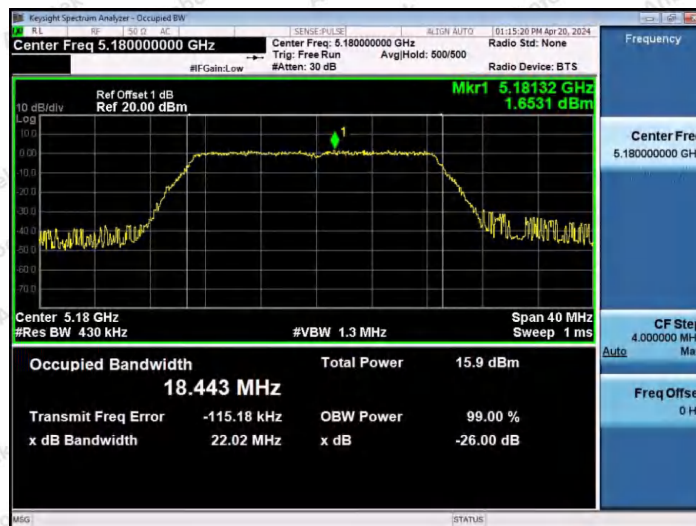

11AC20SISO-Ant1-5180




11AC20SISO-Ant1-5200

Shenzhen Anbotek Compliance Laboratory Limited


Address: 1/F., Building D, Sogood Science and Technology Park, Sanwei Community, Hangcheng Street, Bao'an District, Shenzhen, Guangdong, China.
Tel: (86) 0755-26066440 Fax: (86) 0755-26014772 Email: service@anbotek.com

Hotline
400-003-0500
www.anbotek.com.cn




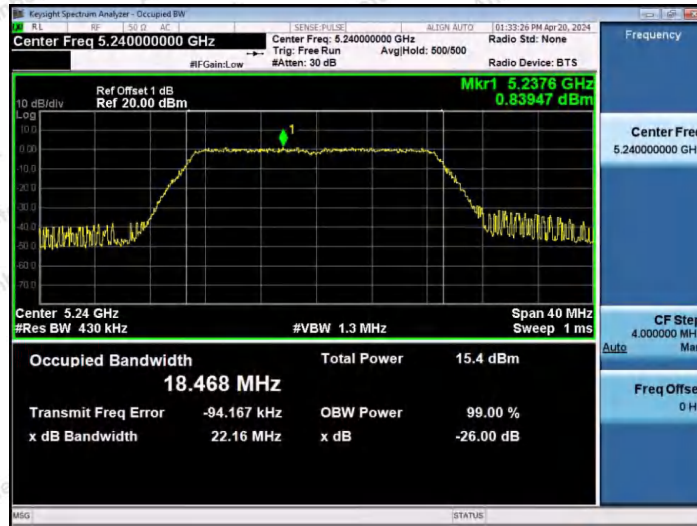

11AC20SISO-Ant1-5240

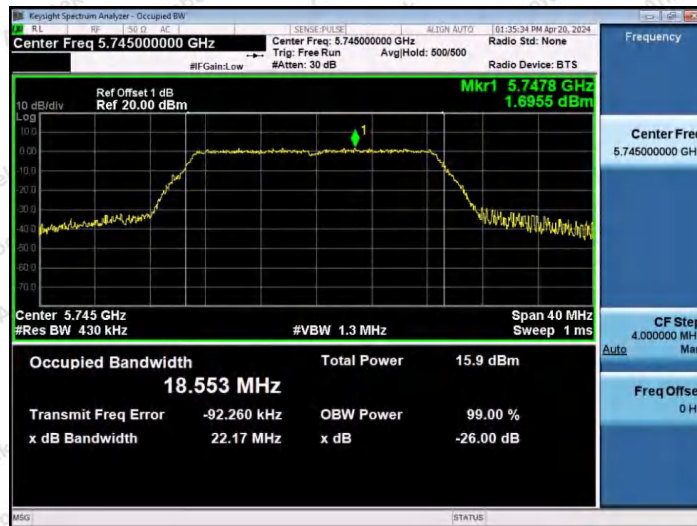

11AC20SISO-Ant1-5745

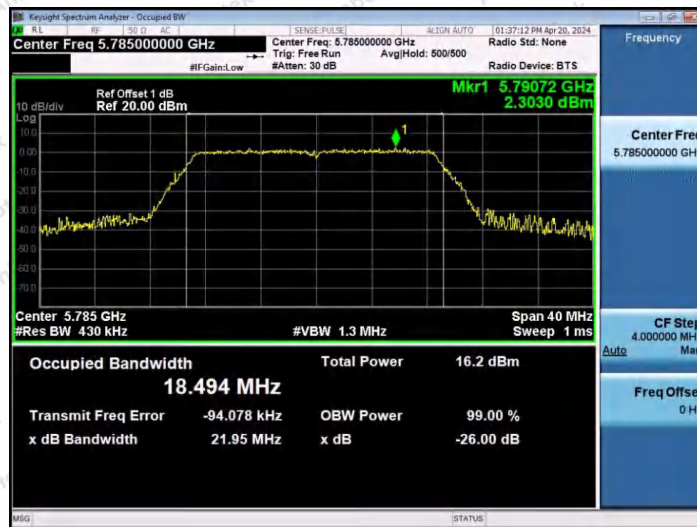


11AC20SISO-Ant1-5785

Shenzhen Anbotek Compliance Laboratory Limited


Address: 1/F., Building D, Sogood Science and Technology Park, Sanwei Community, Hangcheng Street, Bao'an District, Shenzhen, Guangdong, China.
Tel: (86) 0755-26066440 Fax: (86) 0755-26014772 Email: service@anbotek.com

Hotline
400-003-0500
www.anbotek.com.cn




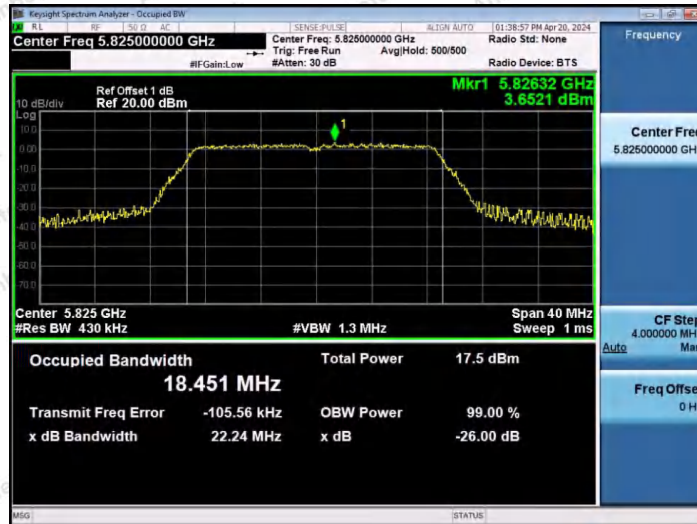

11AC20SISO-Ant1-5825

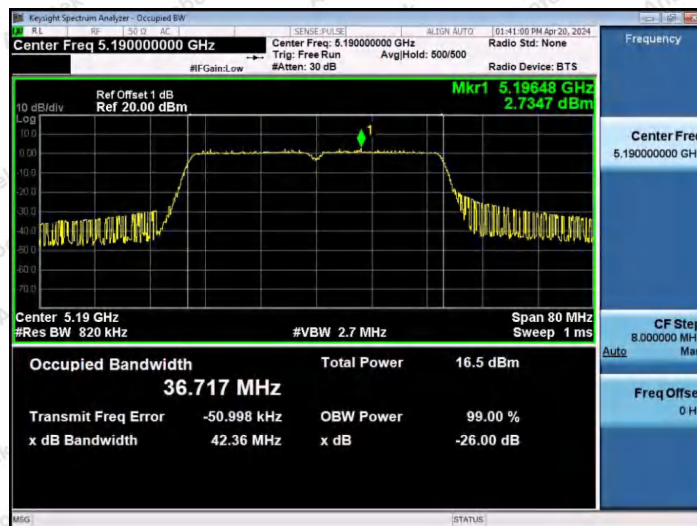

11AC40SISO-Ant1-5190

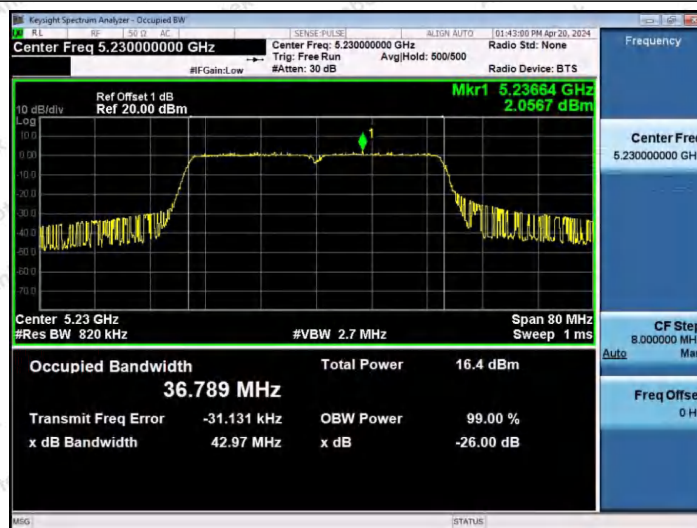

11AC40SISO-Ant1-5230

Shenzhen Anbotek Compliance Laboratory Limited


Address: 1/F., Building D, Sogood Science and Technology Park, Sanwei Community, Hangcheng Street, Bao'an District, Shenzhen, Guangdong, China.
 Tel: (86) 0755-26066440 Fax: (86) 0755-26014772 Email: service@anbotek.com

Hotline 400-003-0500
 www.anbotek.com.cn






11AC40SISO-Ant1-5755

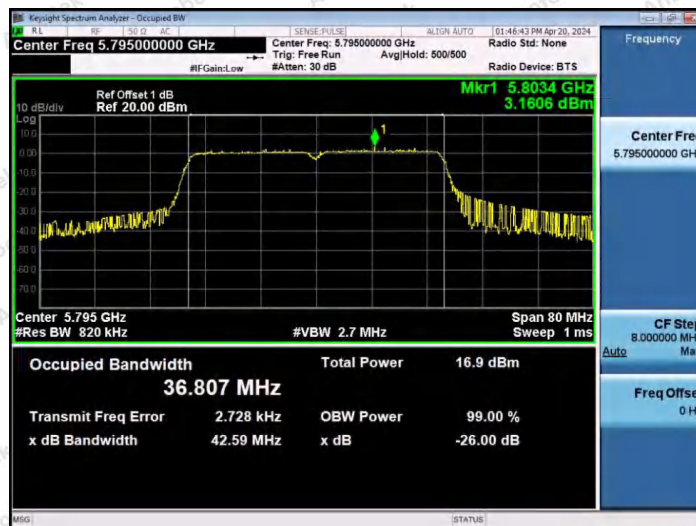

11AC40SISO-Ant1-5795

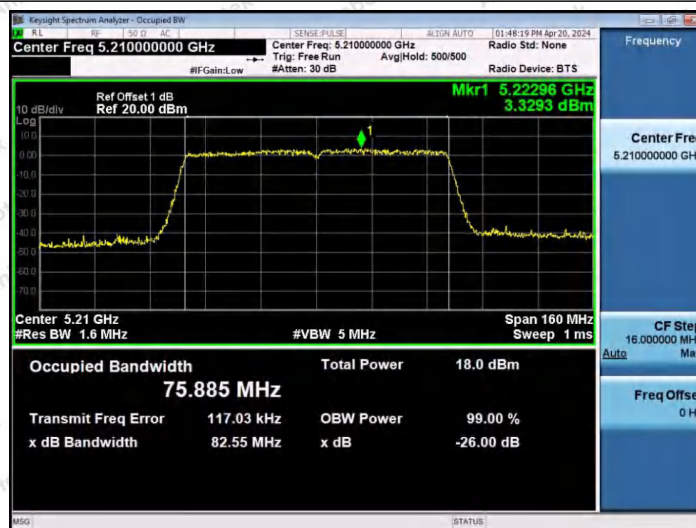


11AC80SISO-Ant1-5210

Shenzhen Anbotek Compliance Laboratory Limited


Address: 1/F., Building D, Sogood Science and Technology Park, Sanwei Community, Hangcheng Street, Bao'an District, Shenzhen, Guangdong, China.
 Tel: (86) 0755-26066440 Fax: (86) 0755-26014772 Email: service@anbotek.com

Hotline
 400-003-0500
 www.anbotek.com.cn



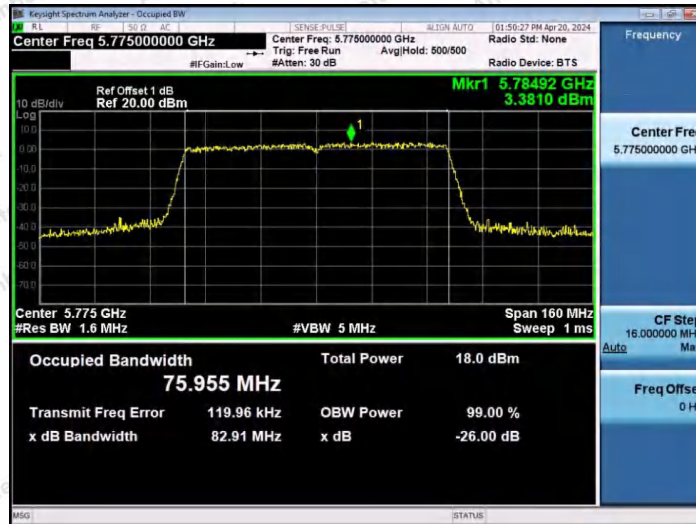

11AC80SISO-Ant1-5775

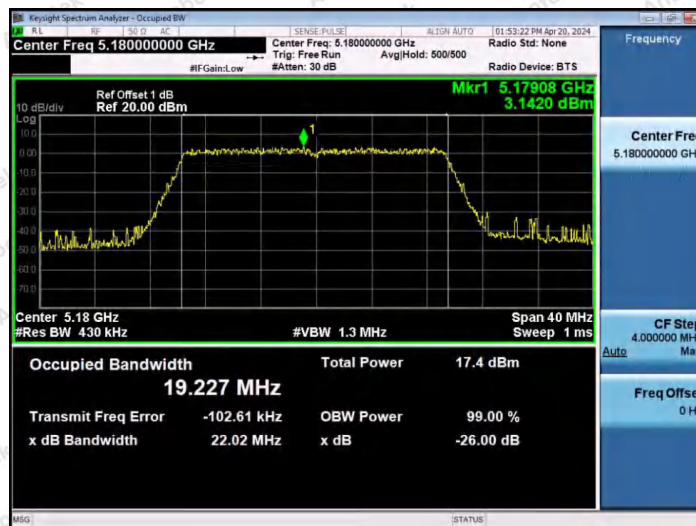

11AX20SISO-Ant1-5180




11AX20SISO-Ant1-5200

Shenzhen Anbotek Compliance Laboratory Limited


Address: 1/F., Building D, Sogood Science and Technology Park, Sanwei Community, Hangcheng Street, Bao'an District, Shenzhen, Guangdong, China.
Tel: (86) 0755-26066440 Fax: (86) 0755-26014772 Email: service@anbotek.com

Hotline
400-003-0500
www.anbotek.com.cn




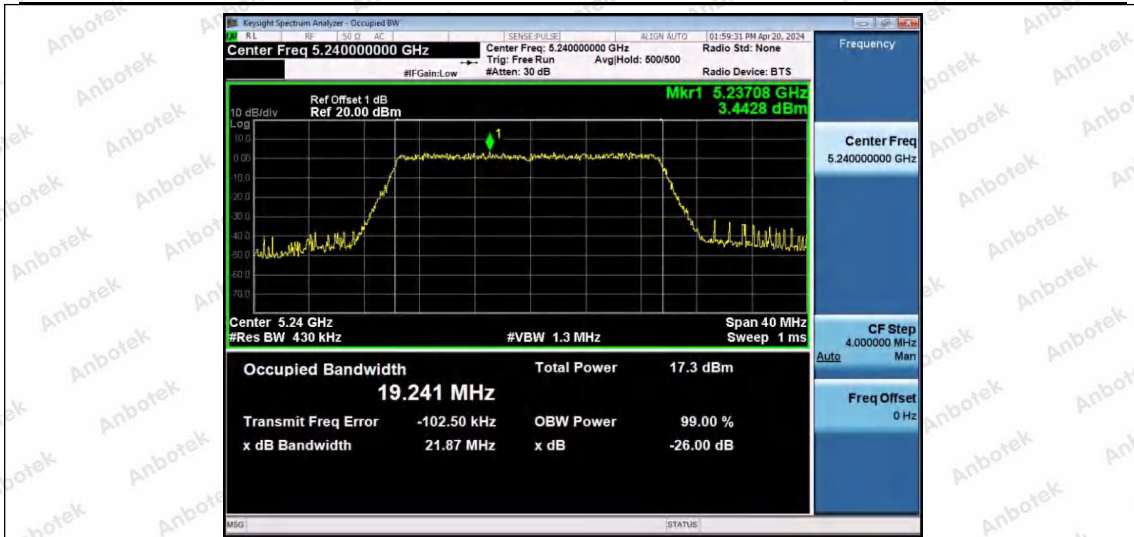

11AX20SISO-Ant1-5240

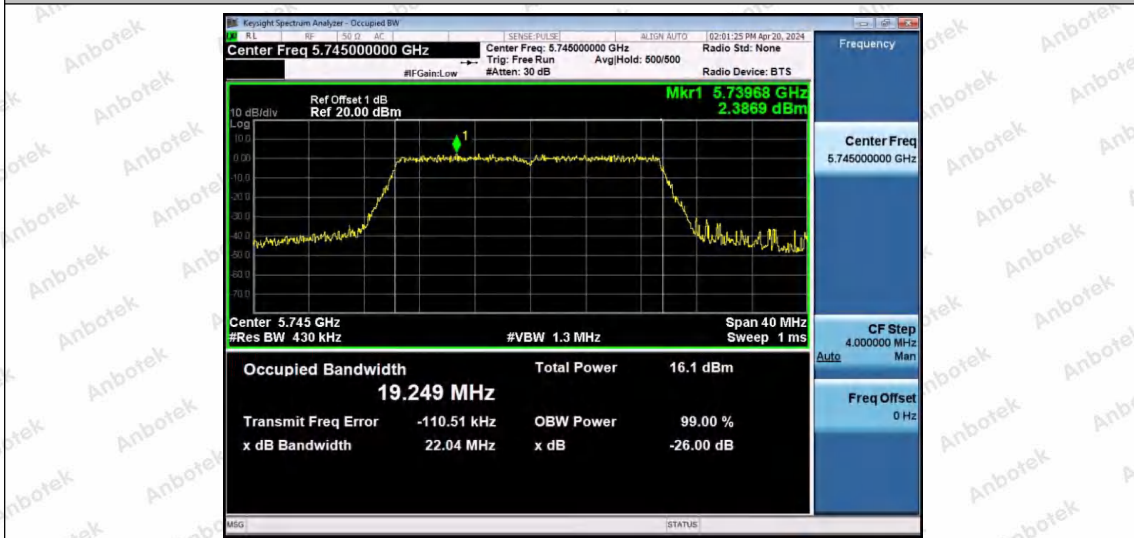

11AX20SISO-Ant1-5745

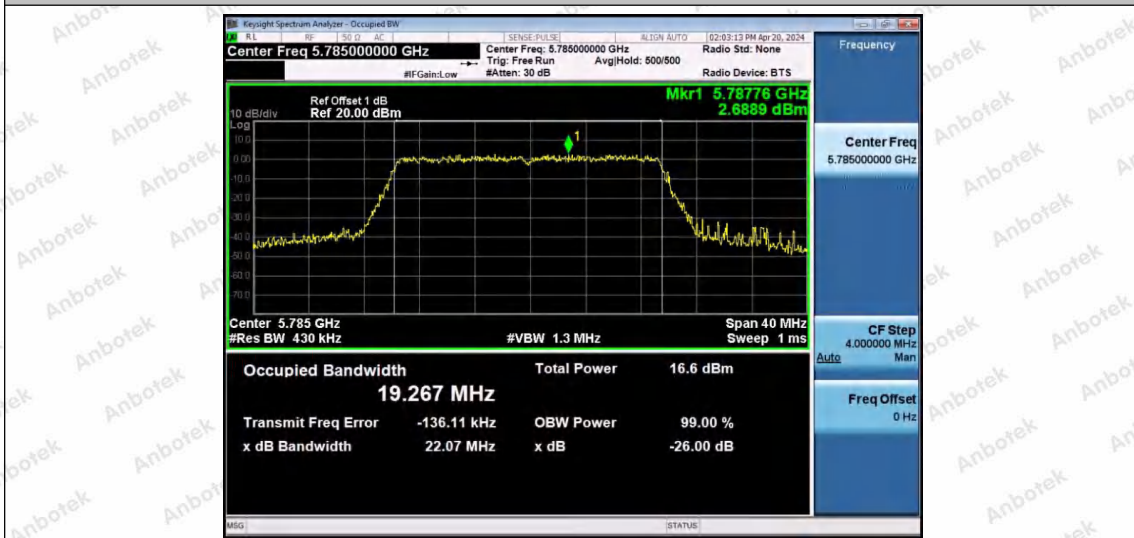


11AX20SISO-Ant1-5785

Shenzhen Anbotek Compliance Laboratory Limited


Address: 1/F., Building D, Sogood Science and Technology Park, Sanwei Community, Hangcheng Street, Bao'an District, Shenzhen, Guangdong, China.
Tel: (86) 0755-26066440 Fax: (86) 0755-26014772 Email: service@anbotek.com

Hotline
400-003-0500
www.anbotek.com.cn




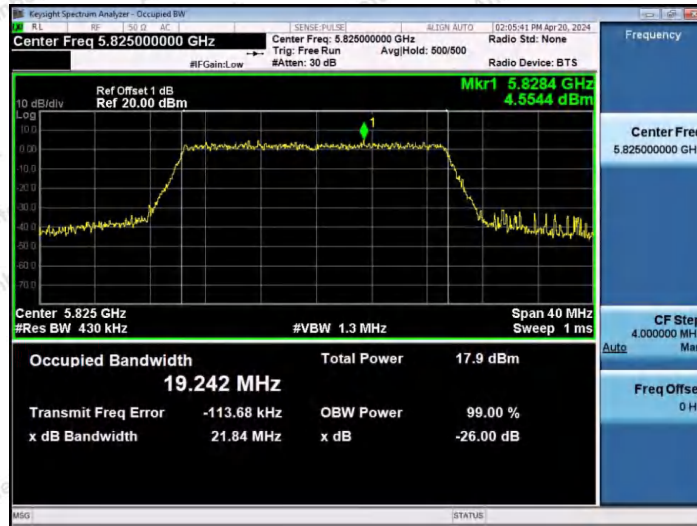

11AX20SISO-Ant1-5825

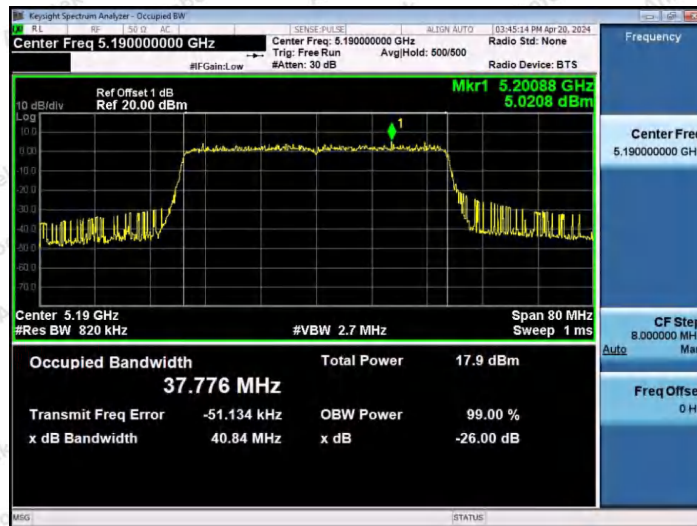

11AX40SISO-Ant1-5190

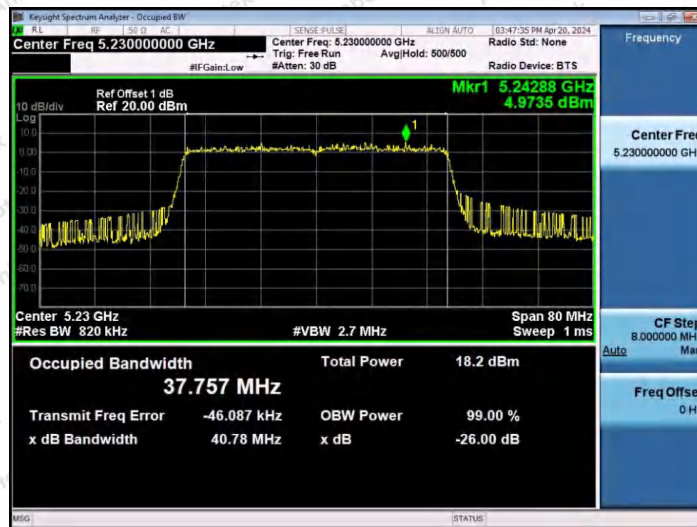


11AX40SISO-Ant1-5230

Shenzhen Anbotek Compliance Laboratory Limited


Address: 1/F., Building D, Sogood Science and Technology Park, Sanwei Community, Hangcheng Street, Bao'an District, Shenzhen, Guangdong, China.
 Tel: (86) 0755-26066440 Fax: (86) 0755-26014772 Email: service@anbotek.com

Hotline 400-003-0500
 www.anbotek.com.cn



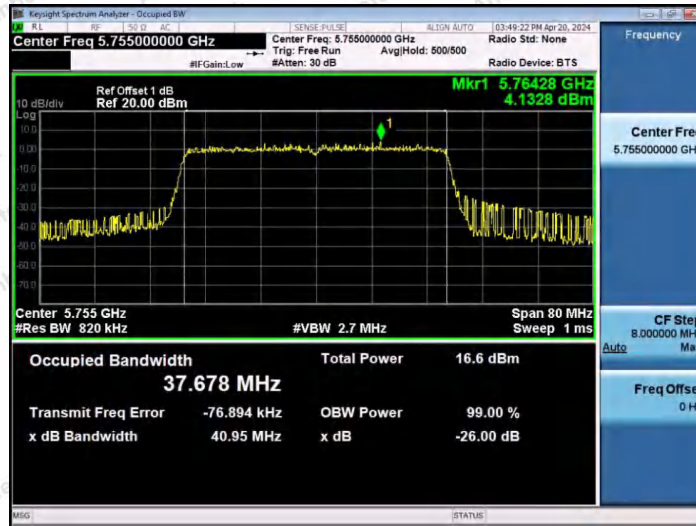

11AX40SISO-Ant1-5755

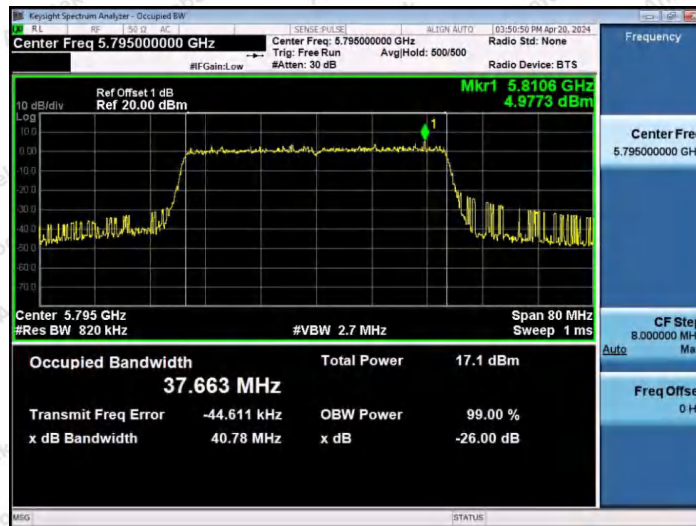

11AX40SISO-Ant1-5795




11AX80SISO-Ant1-5210

Shenzhen Anbotek Compliance Laboratory Limited

Address: 1/F., Building D, Sogood Science and Technology Park, Sanwei Community, Hangcheng Street, Bao'an District, Shenzhen, Guangdong, China.
Tel: (86) 0755-26066440 Fax: (86) 0755-26014772 Email: service@anbotek.com

Hotline
400-003-0500
www.anbotek.com.cn



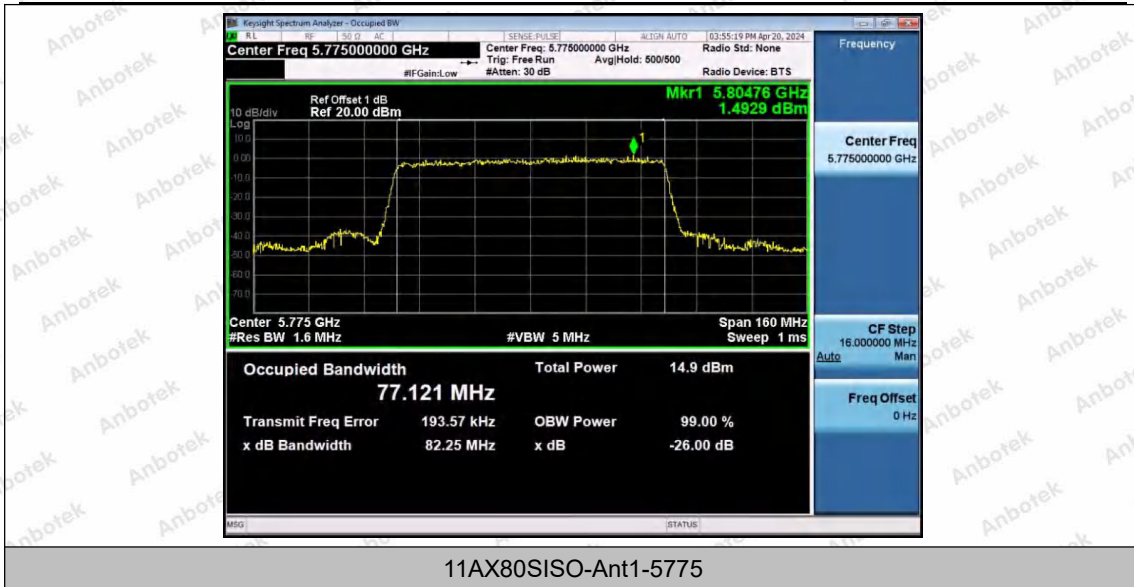

11AX80SISO-Ant1-5775

Shenzhen Anbotek Compliance Laboratory Limited

Address: 1/F., Building D, Sogood Science and Technology Park, Sanwei Community, Hangcheng Street, Bao'an District, Shenzhen, Guangdong, China.
 Tel: (86) 0755-26066440 Fax: (86) 0755-26014772 Email: service@anbotek.com

Hotline
 400-003-0500
www.anbotek.com.cn



Appendix A3: Minimum 6dB Bandwidth

Test Result B4

| TestMode | Antenna | Frequency[MHz] | 6db EBW [MHz] | FL[MHz] | FH[MHz] | Limit[MHz] | Verdict |
|------------|---------|----------------|---------------|----------|----------|------------|---------|
| 11A | Ant1 | 5745 | 16.400 | 5736.640 | 5753.040 | 0.5 | PASS |
| 11A | Ant1 | 5785 | 16.360 | 5776.640 | 5793.000 | 0.5 | PASS |
| 11A | Ant1 | 5825 | 16.320 | 5816.680 | 5833.000 | 0.5 | PASS |
| 11N20SISO | Ant1 | 5745 | 17.600 | 5736.040 | 5753.640 | 0.5 | PASS |
| 11N20SISO | Ant1 | 5785 | 17.600 | 5776.040 | 5793.640 | 0.5 | PASS |
| 11N20SISO | Ant1 | 5825 | 17.600 | 5816.040 | 5833.640 | 0.5 | PASS |
| 11N40SISO | Ant1 | 5755 | 36.320 | 5736.680 | 5773.000 | 0.5 | PASS |
| 11N40SISO | Ant1 | 5795 | 36.320 | 5776.680 | 5813.000 | 0.5 | PASS |
| 11AC20SISO | Ant1 | 5745 | 17.600 | 5736.040 | 5753.640 | 0.5 | PASS |
| 11AC20SISO | Ant1 | 5785 | 17.600 | 5776.040 | 5793.640 | 0.5 | PASS |
| 11AC20SISO | Ant1 | 5825 | 17.600 | 5816.040 | 5833.640 | 0.5 | PASS |
| 11AC40SISO | Ant1 | 5755 | 36.080 | 5736.920 | 5773.000 | 0.5 | PASS |
| 11AC40SISO | Ant1 | 5795 | 36.320 | 5776.680 | 5813.000 | 0.5 | PASS |
| 11AC80SISO | Ant1 | 5775 | 75.680 | 5737.240 | 5812.920 | 0.5 | PASS |
| 11AX20SISO | Ant1 | 5745 | 19.080 | 5735.280 | 5754.360 | 0.5 | PASS |
| 11AX20SISO | Ant1 | 5785 | 19.000 | 5775.320 | 5794.320 | 0.5 | PASS |
| 11AX20SISO | Ant1 | 5825 | 19.040 | 5815.320 | 5834.360 | 0.5 | PASS |
| 11AX40SISO | Ant1 | 5755 | 37.600 | 5736.040 | 5773.640 | 0.5 | PASS |
| 11AX40SISO | Ant1 | 5795 | 37.360 | 5776.280 | 5813.640 | 0.5 | PASS |
| 11AX80SISO | Ant1 | 5775 | 76.640 | 5736.760 | 5813.400 | 0.5 | PASS |

Shenzhen Anbotek Compliance Laboratory Limited

Address: 1/F., Building D, Sogood Science and Technology Park, Sanwei Community, Hangcheng Street, Bao'an District, Shenzhen, Guangdong, China.
Tel: (86) 0755-26066440 Fax: (86) 0755-26014772 Email: service@anbotek.com




Hotline

400-003-0500


www.anbotek.com.cn




Test Graphs B4

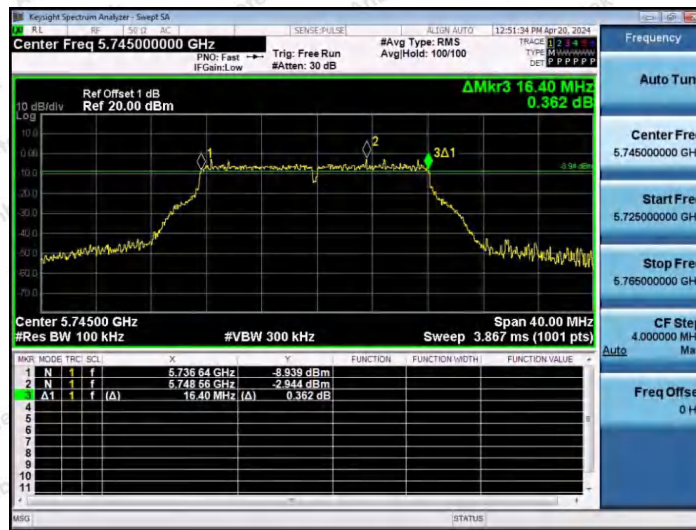

11A-Ant1-5745-PASS

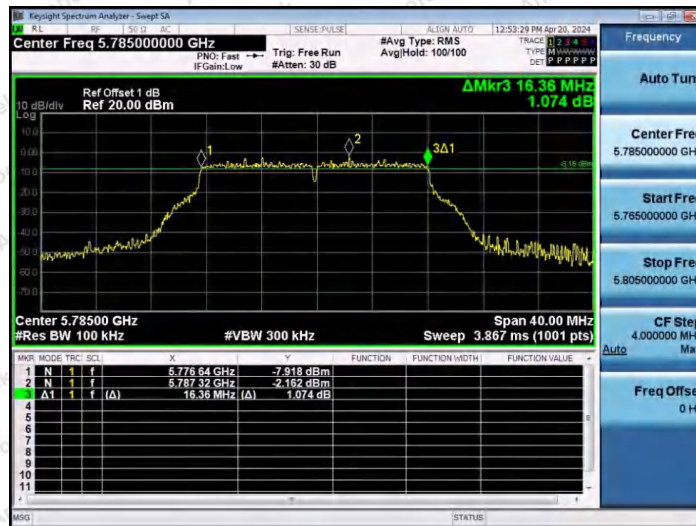

11A-Ant1-5785-PASS

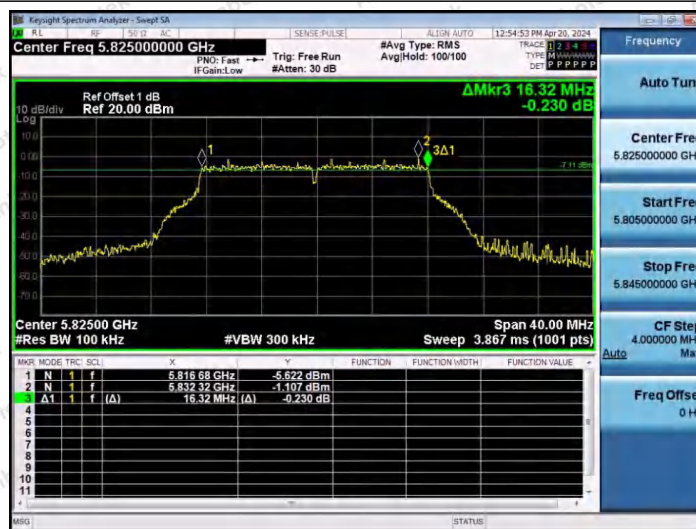


11A-Ant1-5825-PASS

Shenzhen Anbotek Compliance Laboratory Limited


Address: 1/F., Building D, Sogood Science and Technology Park, Sanwei Community, Hangcheng Street, Bao'an District, Shenzhen, Guangdong, China.
Tel: (86) 0755-26066440 Fax: (86) 0755-26014772 Email: service@anbotek.com

Hotline
400-003-0500
www.anbotek.com.cn




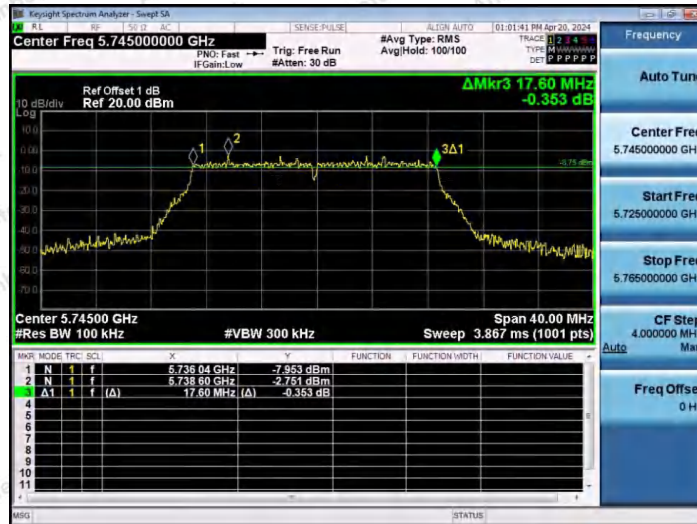

11N20SISO-Ant1-5745-PASS

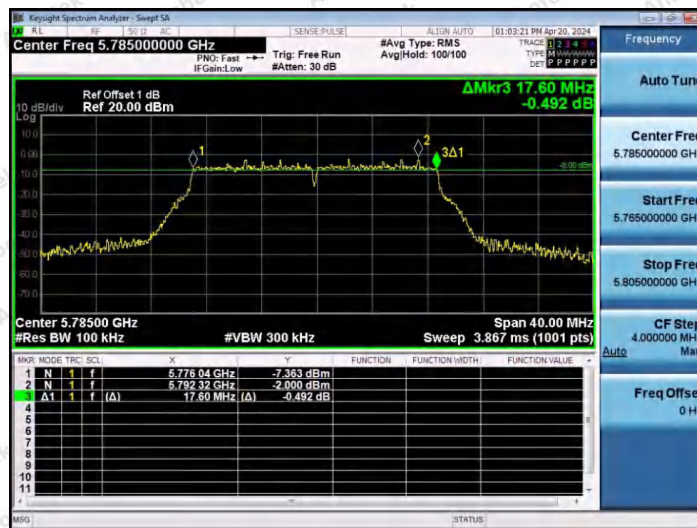

11N20SISO-Ant1-5785-PASS

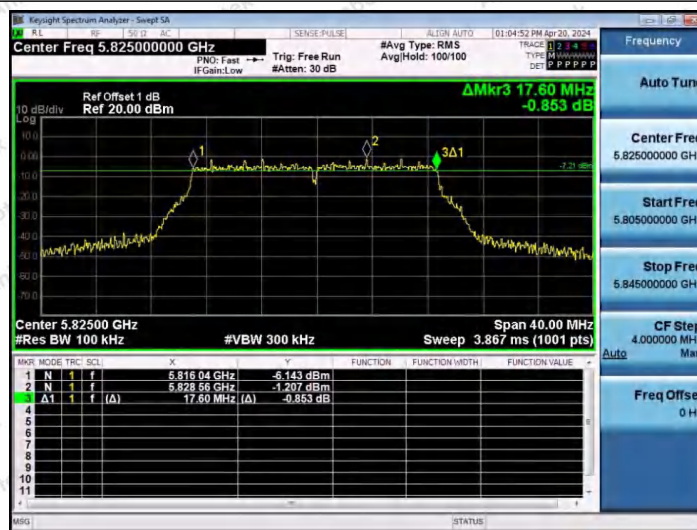


11N20SISO-Ant1-5825-PASS

Shenzhen Anbotek Compliance Laboratory Limited


Address: 1/F., Building D, Sogood Science and Technology Park, Sanwei Community, Hangcheng Street, Bao'an District, Shenzhen, Guangdong, China.
Tel: (86) 0755-26066440 Fax: (86) 0755-26014772 Email: service@anbotek.com

Hotline 400-003-0500
www.anbotek.com.cn




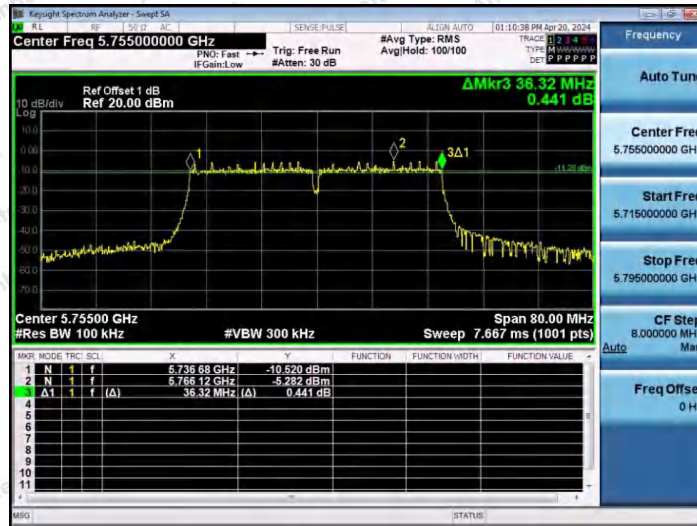

11N40SISO-Ant1-5755-PASS

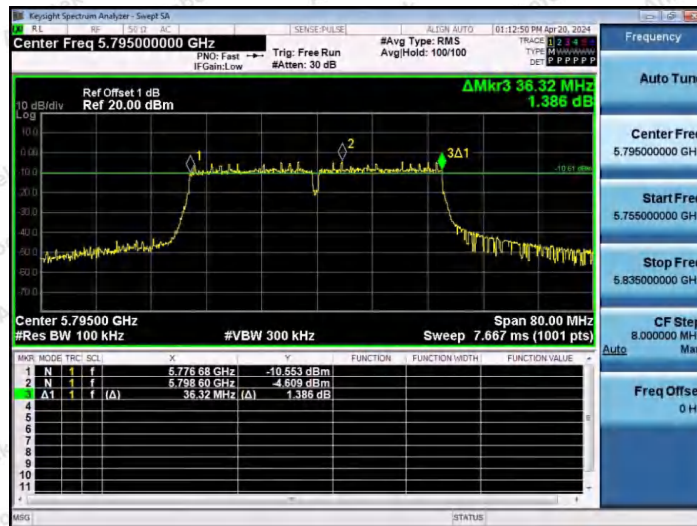

11N40SISO-Ant1-5795-PASS

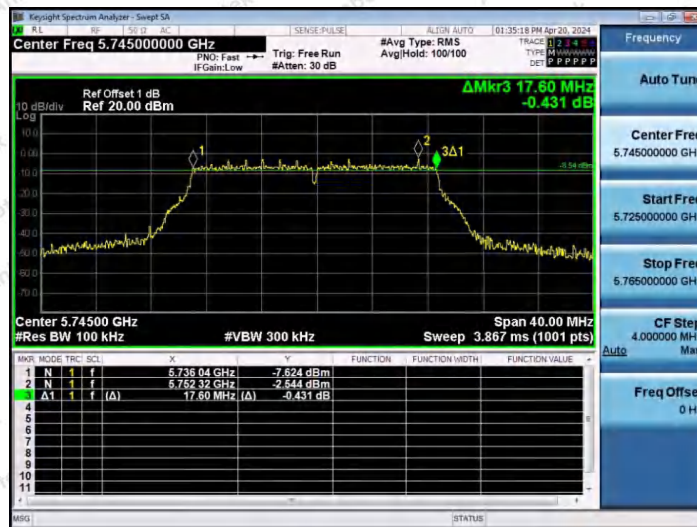

11A20SISO-Ant1-5745-PASS

Shenzhen Anbotek Compliance Laboratory Limited

Address: 1/F., Building D, Sogood Science and Technology Park, Sanwei Community, Hangcheng Street, Bao'an District, Shenzhen, Guangdong, China.
Tel: (86) 0755-26066440 Fax: (86) 0755-26014772 Email: service@anbotek.com

Hotline 400-003-0500
www.anbotek.com.cn






11AC20SISO-Ant1-5785-PASS



11AC20SISO-Ant1-5825-PASS

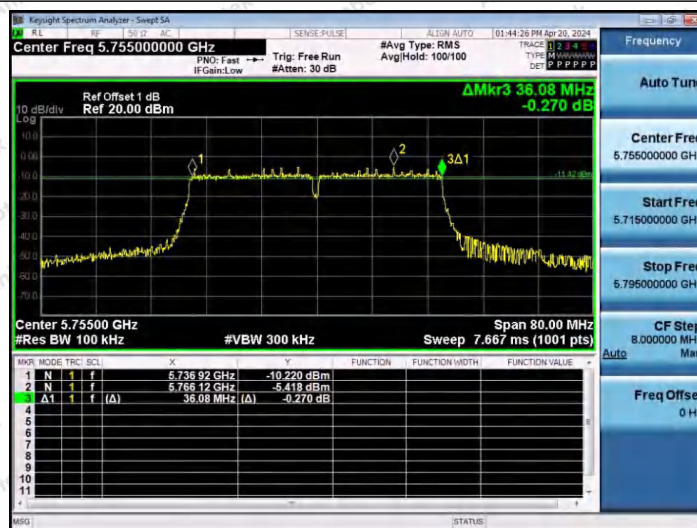


11AC40SISO-Ant1-5755-PASS

Shenzhen Anbotek Compliance Laboratory Limited


Address: 1/F., Building D, Sogood Science and Technology Park, Sanwei Community, Hangcheng Street, Bao'an District, Shenzhen, Guangdong, China.
Tel: (86) 0755-26066440 Fax: (86) 0755-26014772 Email: service@anbotek.com

Hotline 400-003-0500
www.anbotek.com.cn




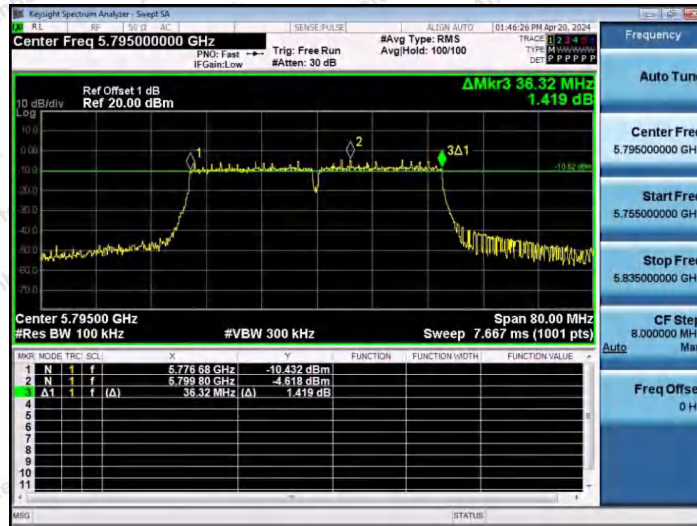

11AC40SISO-Ant1-5795-PASS

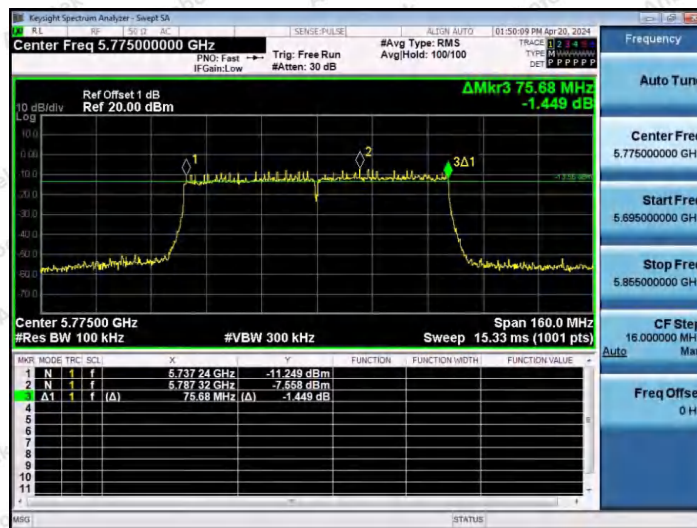

11AC80SISO-Ant1-5775-PASS

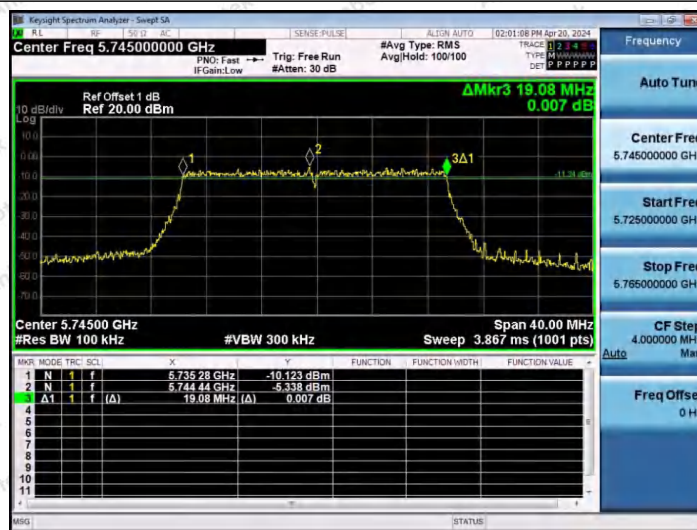


11AX20SISO-Ant1-5745-PASS

Shenzhen Anbotek Compliance Laboratory Limited


Address: 1/F., Building D, Sogood Science and Technology Park, Sanwei Community, Hangcheng Street, Bao'an District, Shenzhen, Guangdong, China.
Tel: (86) 0755-26066440 Fax: (86) 0755-26014772 Email: service@anbotek.com

Hotline 400-003-0500
www.anbotek.com.cn




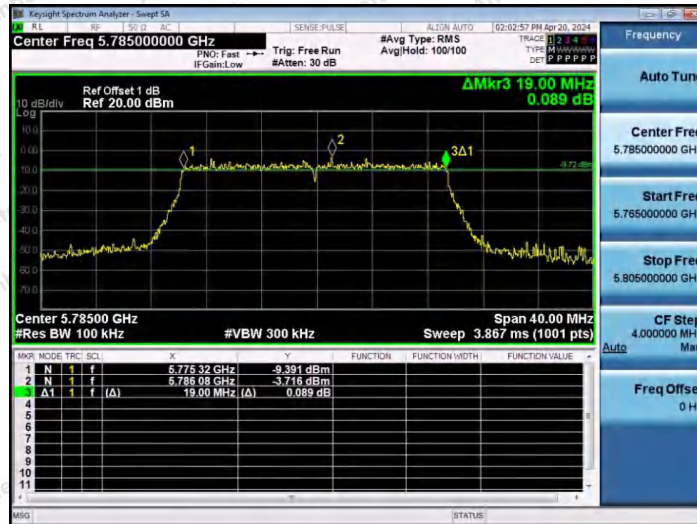

11AX20SISO-Ant1-5785-PASS

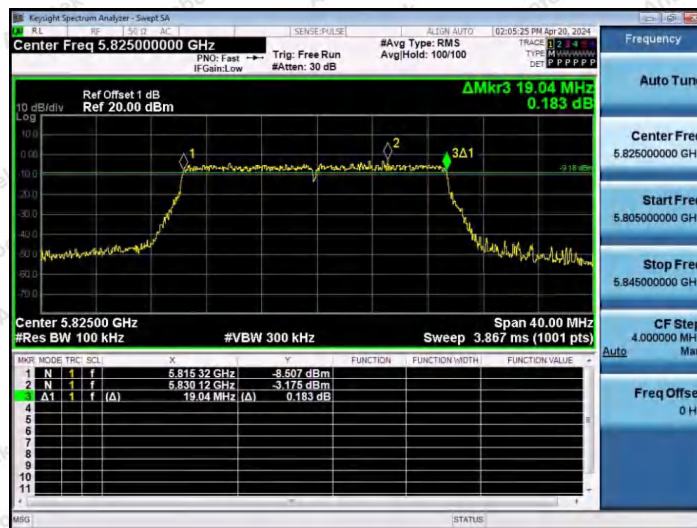

11AX20SISO-Ant1-5825-PASS

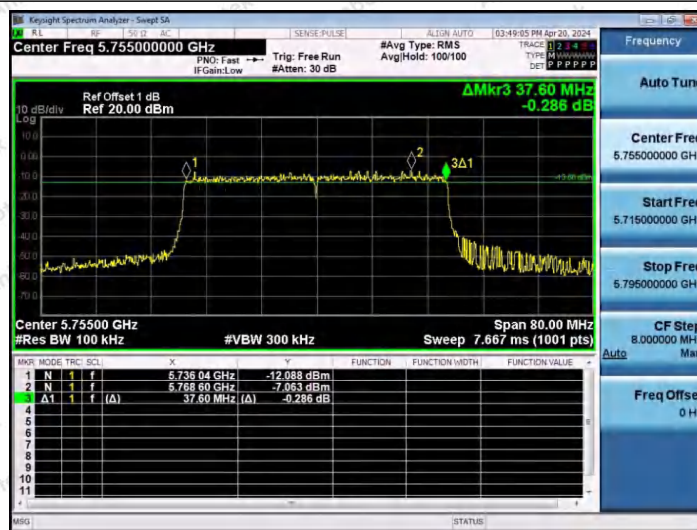


11AX40SISO-Ant1-5755-PASS

Shenzhen Anbotek Compliance Laboratory Limited


Address: 1/F., Building D, Sogood Science and Technology Park, Sanwei Community, Hangcheng Street, Bao'an District, Shenzhen, Guangdong, China.
 Tel: (86) 0755-26066440 Fax: (86) 0755-26014772 Email: service@anbotek.com

Hotline 400-003-0500
 www.anbotek.com.cn



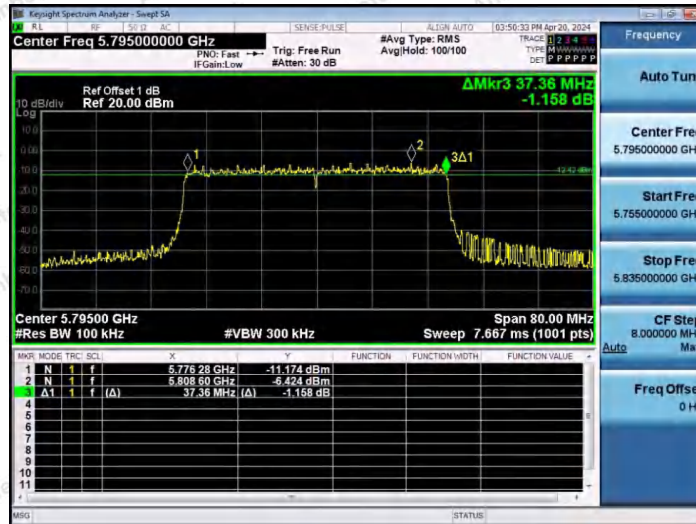

11AX40SISO-Ant1-5795-PASS

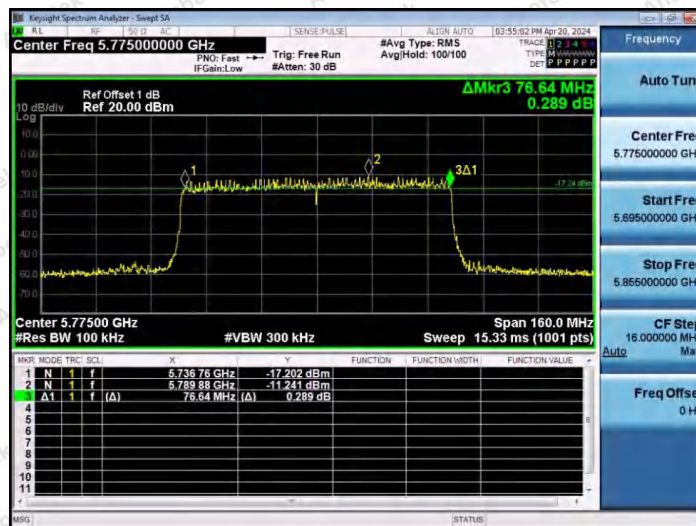

11AX80SISO-Ant1-5775-PASS

Shenzhen Anbotek Compliance Laboratory Limited

Address: 1/F., Building D, Sogood Science and Technology Park, Sanwei Community, Hangcheng Street, Bao'an District, Shenzhen, Guangdong, China.
Tel: (86) 0755-26066440 Fax: (86) 0755-26014772 Email: service@anbotek.com

Hotline
400-003-0500
www.anbotek.com.cn



Appendix B: Duty Cycle

Test Result

| TestMode | Antenna | Frequency[MHz] | Transmission Duration [ms] | Transmission Period [ms] | Duty Cycle [%] | Dc Factor [%] | 1/T |
|------------|---------|----------------|----------------------------|--------------------------|----------------|---------------|------|
| 11A | Ant1 | 5180 | 2.07 | 2.10 | 98.57 | 0.06 | 0.48 |
| 11A | Ant1 | 5200 | 2.07 | 2.10 | 98.57 | 0.06 | 0.48 |
| 11A | Ant1 | 5240 | 2.06 | 2.09 | 98.56 | 0.06 | 0.49 |
| 11A | Ant1 | 5745 | 2.06 | 2.09 | 98.56 | 0.06 | 0.49 |
| 11A | Ant1 | 5785 | 2.06 | 2.09 | 98.56 | 0.06 | 0.49 |
| 11A | Ant1 | 5825 | 2.07 | 2.10 | 98.57 | 0.06 | 0.48 |
| 11N20SISO | Ant1 | 5180 | 1.31 | 1.40 | 93.57 | 0.29 | 0.76 |
| 11N20SISO | Ant1 | 5200 | 1.31 | 1.41 | 92.91 | 0.32 | 0.76 |
| 11N20SISO | Ant1 | 5240 | 1.31 | 1.41 | 92.91 | 0.32 | 0.76 |
| 11N20SISO | Ant1 | 5745 | 1.31 | 1.41 | 92.91 | 0.32 | 0.76 |
| 11N20SISO | Ant1 | 5785 | 1.31 | 1.41 | 92.91 | 0.32 | 0.76 |
| 11N20SISO | Ant1 | 5825 | 1.31 | 1.41 | 92.91 | 0.32 | 0.76 |
| 11N40SISO | Ant1 | 5190 | 0.65 | 0.75 | 86.67 | 0.62 | 1.54 |
| 11N40SISO | Ant1 | 5230 | 0.65 | 0.75 | 86.67 | 0.62 | 1.54 |
| 11N40SISO | Ant1 | 5755 | 0.64 | 0.74 | 86.49 | 0.63 | 1.56 |
| 11N40SISO | Ant1 | 5795 | 0.65 | 0.75 | 86.67 | 0.62 | 1.54 |
| 11AC20SISO | Ant1 | 5180 | 1.93 | 1.95 | 98.97 | 0.04 | 0.52 |
| 11AC20SISO | Ant1 | 5200 | 1.94 | 1.95 | 99.49 | 0.02 | 0.52 |
| 11AC20SISO | Ant1 | 5240 | 1.94 | 1.96 | 98.98 | 0.04 | 0.52 |
| 11AC20SISO | Ant1 | 5745 | 1.93 | 1.95 | 98.97 | 0.04 | 0.52 |
| 11AC20SISO | Ant1 | 5785 | 1.94 | 1.96 | 98.98 | 0.04 | 0.52 |
| 11AC20SISO | Ant1 | 5825 | 1.93 | 1.95 | 98.97 | 0.04 | 0.52 |
| 11AC40SISO | Ant1 | 5190 | 1.54 | 1.56 | 98.72 | 0.06 | 0.65 |
| 11AC40SISO | Ant1 | 5230 | 1.54 | 1.56 | 98.72 | 0.06 | 0.65 |
| 11AC40SISO | Ant1 | 5755 | 1.54 | 1.56 | 98.72 | 0.06 | 0.65 |
| 11AC40SISO | Ant1 | 5795 | 1.54 | 1.56 | 98.72 | 0.06 | 0.65 |
| 11AC80SISO | Ant1 | 5210 | 0.90 | 1.05 | 85.71 | 0.67 | 1.11 |
| 11AC80SISO | Ant1 | 5775 | 0.90 | 1.05 | 85.71 | 0.67 | 1.11 |
| 11AX20SISO | Ant1 | 5180 | 4.85 | 4.95 | 97.98 | 0.09 | 0.21 |
| 11AX20SISO | Ant1 | 5200 | 4.85 | 4.95 | 97.98 | 0.09 | 0.21 |
| 11AX20SISO | Ant1 | 5240 | 4.85 | 4.95 | 97.98 | 0.09 | 0.21 |
| 11AX20SISO | Ant1 | 5745 | 4.85 | 4.95 | 97.98 | 0.09 | 0.21 |
| 11AX20SISO | Ant1 | 5785 | 4.85 | 4.95 | 97.98 | 0.09 | 0.21 |
| 11AX20SISO | Ant1 | 5825 | 4.86 | 4.96 | 97.98 | 0.09 | 0.21 |
| 11AX40SISO | Ant1 | 5190 | 2.46 | 2.56 | 96.09 | 0.17 | 0.41 |
| 11AX40SISO | Ant1 | 5230 | 2.45 | 2.55 | 96.08 | 0.17 | 0.41 |

Shenzhen Anbotek Compliance Laboratory Limited

Address: 1/F., Building D, Sogood Science and Technology Park, Sanwei Community, Hangcheng Street, Bao'an District, Shenzhen, Guangdong, China.
Tel: (86) 0755-26066440 Fax: (86) 0755-26014772 Email: service@anbotek.com



Hotline

400-003-0500

www.anbotek.com.cn



| | | | | | | | |
|------------|------|------|------|------|-------|------|------|
| 11AX40SISO | Ant1 | 5755 | 2.46 | 2.56 | 96.09 | 0.17 | 0.41 |
| 11AX40SISO | Ant1 | 5795 | 2.45 | 2.55 | 96.08 | 0.17 | 0.41 |
| 11AX80SISO | Ant1 | 5210 | 0.29 | 0.44 | 65.91 | 1.81 | 3.45 |
| 11AX80SISO | Ant1 | 5775 | 0.30 | 0.45 | 66.67 | 1.76 | 3.33 |

Shenzhen Anbotek Compliance Laboratory Limited


Address: 1/F., Building D, Sogood Science and Technology Park, Sanwei Community, Hangcheng Street, Bao'an District, Shenzhen, Guangdong, China.
 Tel: (86) 0755-26066440 Fax: (86) 0755-26014772 Email: service@anbotek.com




Hotline
 400-003-0500
www.anbotek.com.cn




Test Graphs

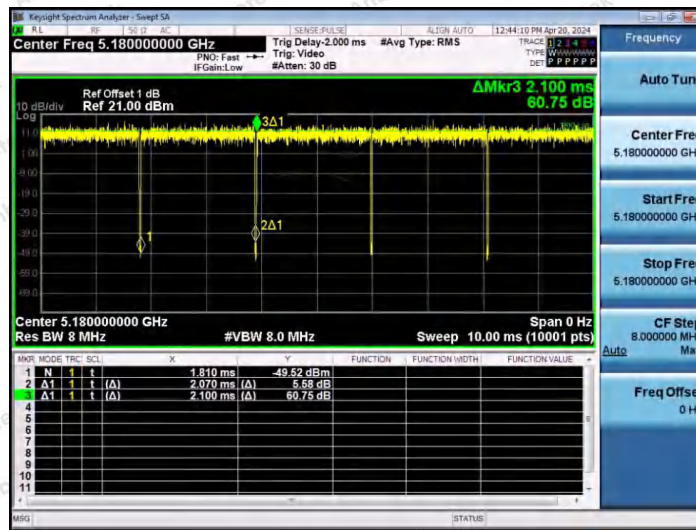

NTNV-11A-Ant1-5180

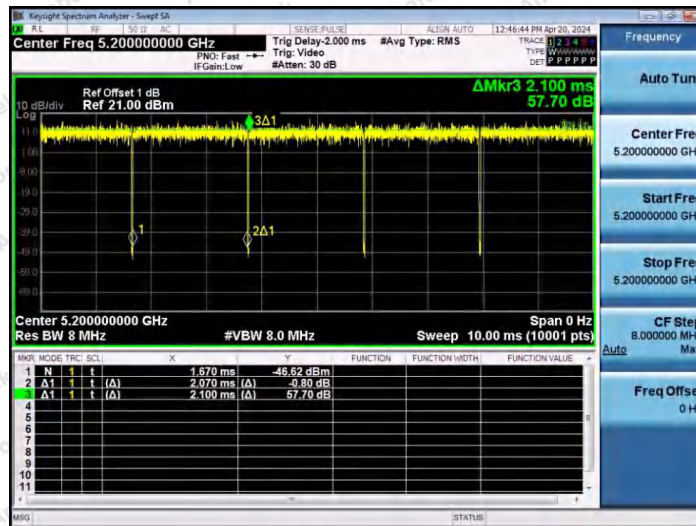

NTNV-11A-Ant1-5200

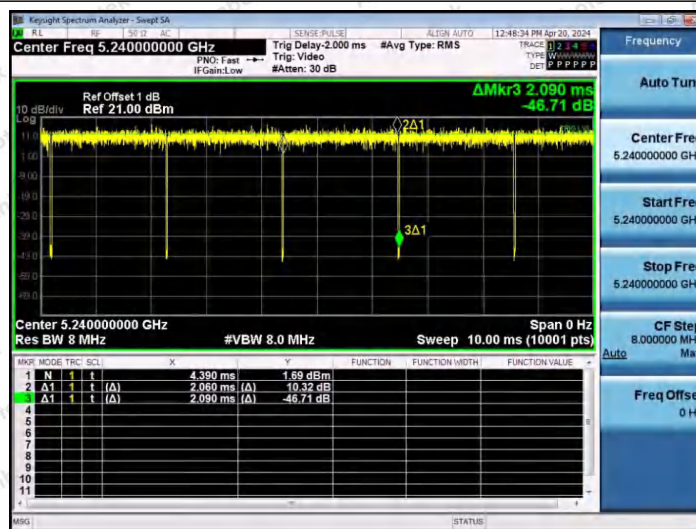


NTNV-11A-Ant1-5240

Shenzhen Anbotek Compliance Laboratory Limited


Address: 1/F., Building D, Sogood Science and Technology Park, Sanwei Community, Hangcheng Street, Bao'an District, Shenzhen, Guangdong, China.
 Tel: (86) 0755-26066440 Fax: (86) 0755-26014772 Email: service@anbotek.com

Hotline
 400-003-0500
www.anbotek.com.cn




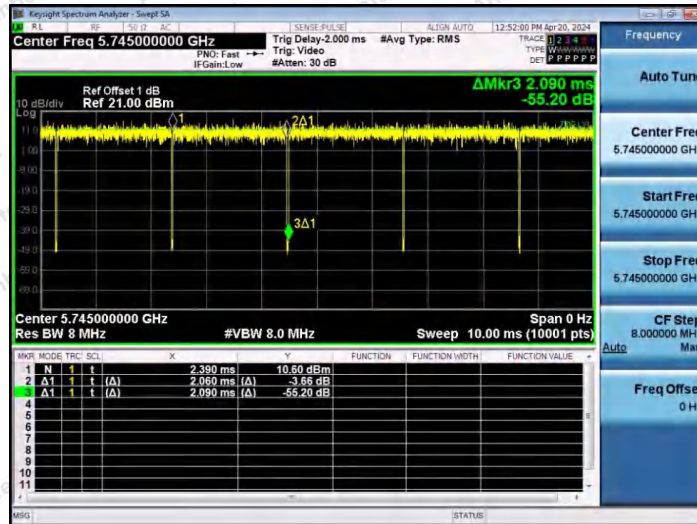

NTNV-11A-Ant1-5745

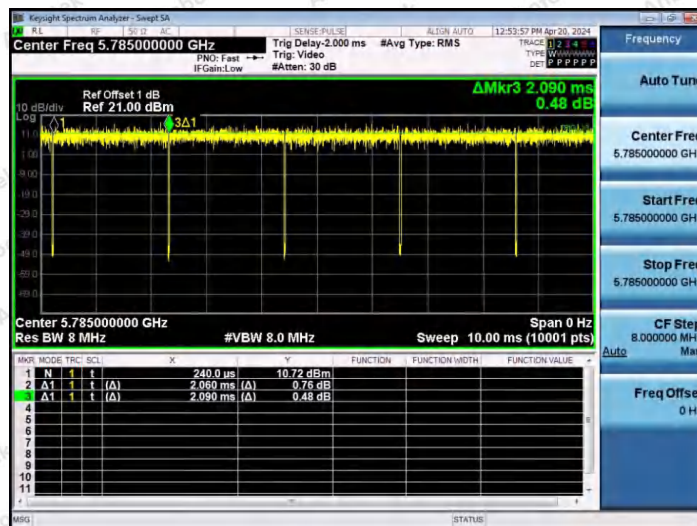

NTNV-11A-Ant1-5785

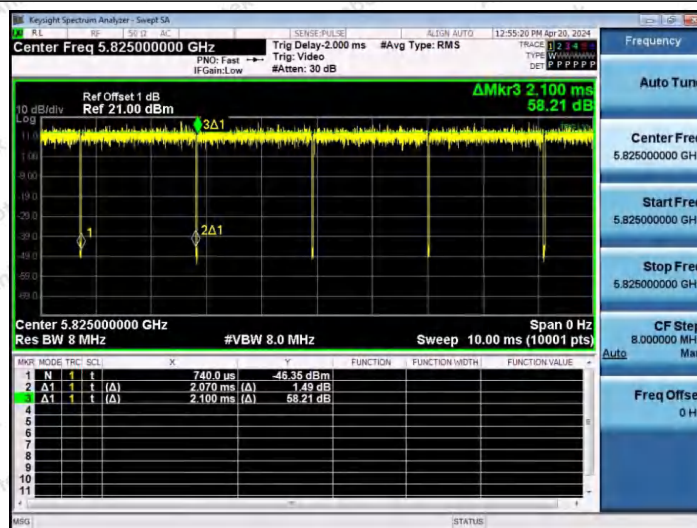


NTNV-11A-Ant1-5825

Shenzhen Anbotek Compliance Laboratory Limited


Address: 1/F., Building D, Sogood Science and Technology Park, Sanwei Community, Hangcheng Street, Bao'an District, Shenzhen, Guangdong, China.
 Tel: (86) 0755-26066440 Fax: (86) 0755-26014772 Email: service@anbotek.com

Hotline 400-003-0500
 www.anbotek.com.cn




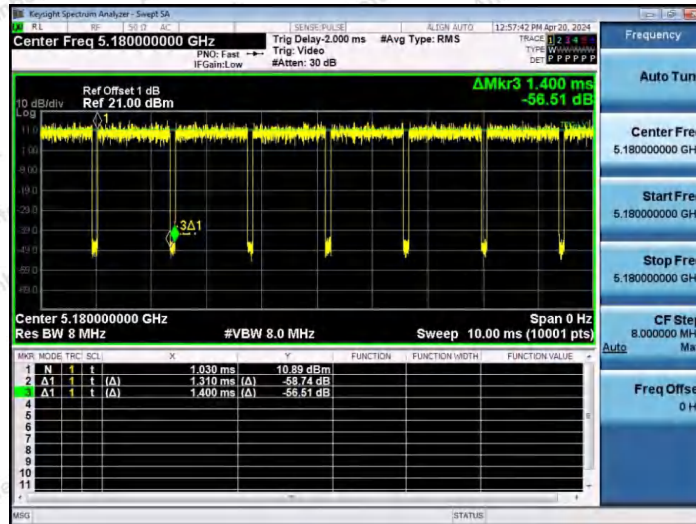

NTNV-11N20SISO-Ant1-5180

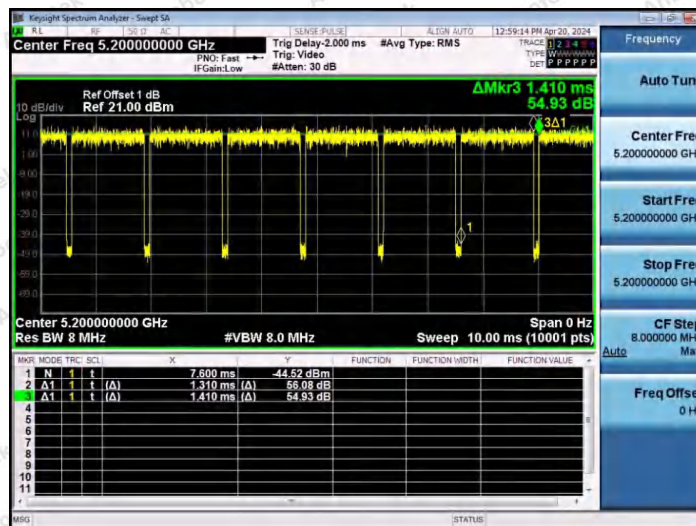

NTNV-11N20SISO-Ant1-5200

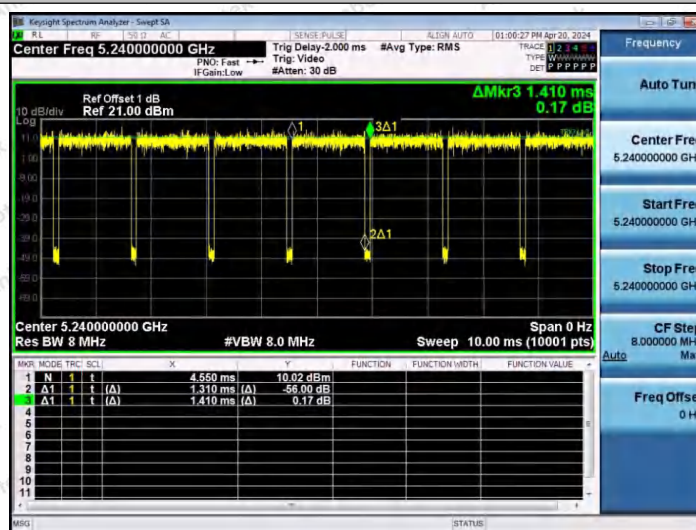


NTNV-11N20SISO-Ant1-5240

Shenzhen Anbotek Compliance Laboratory Limited


Address: 1/F., Building D, Sogood Science and Technology Park, Sanwei Community, Hangcheng Street, Bao'an District, Shenzhen, Guangdong, China.
 Tel: (86) 0755-26066440 Fax: (86) 0755-26014772 Email: service@anbotek.com

Hotline 400-003-0500
 www.anbotek.com.cn




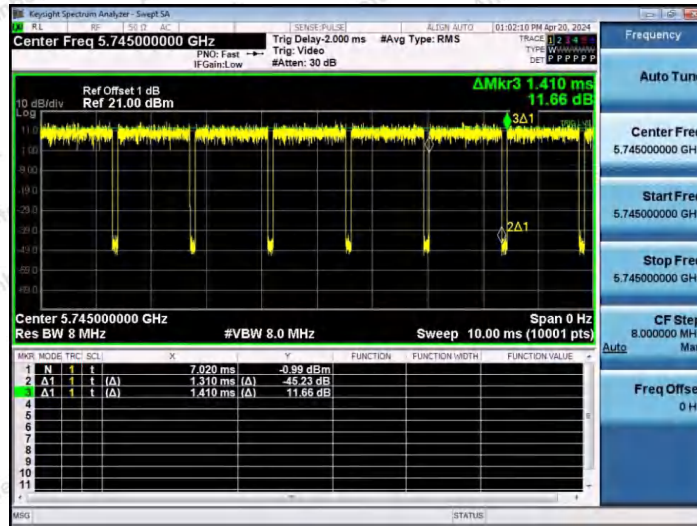

NTNV-11N20SISO-Ant1-5745

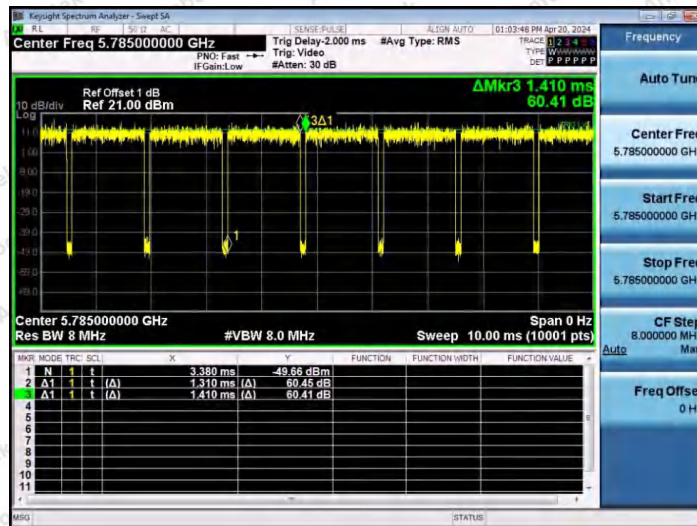

NTNV-11N20SISO-Ant1-5785

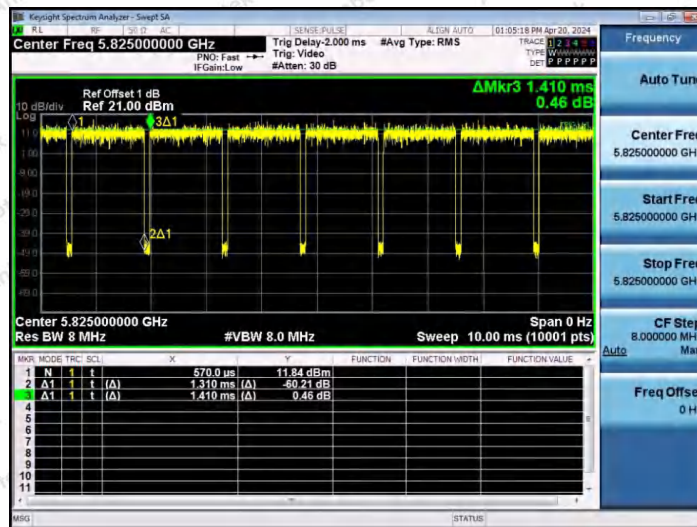


NTNV-11N20SISO-Ant1-5825

Shenzhen Anbotek Compliance Laboratory Limited


Address: 1/F., Building D, Sogood Science and Technology Park, Sanwei Community, Hangcheng Street, Bao'an District, Shenzhen, Guangdong, China.
 Tel: (86) 0755-26066440 Fax: (86) 0755-26014772 Email: service@anbotek.com

Hotline 400-003-0500
 www.anbotek.com.cn




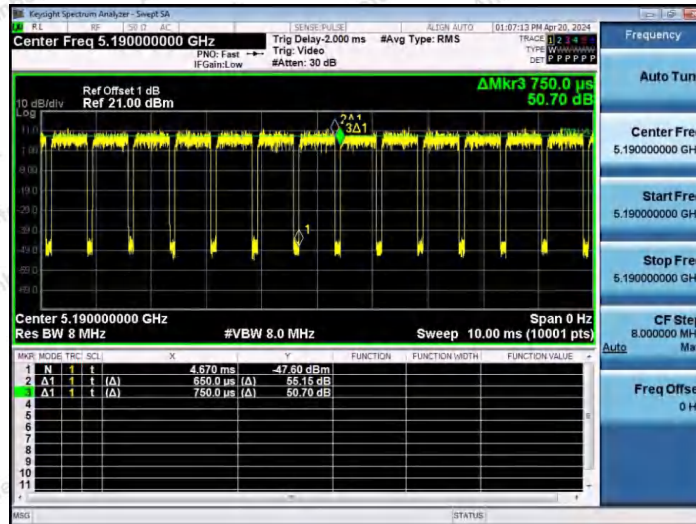

NTNV-11N40SISO-Ant1-5190

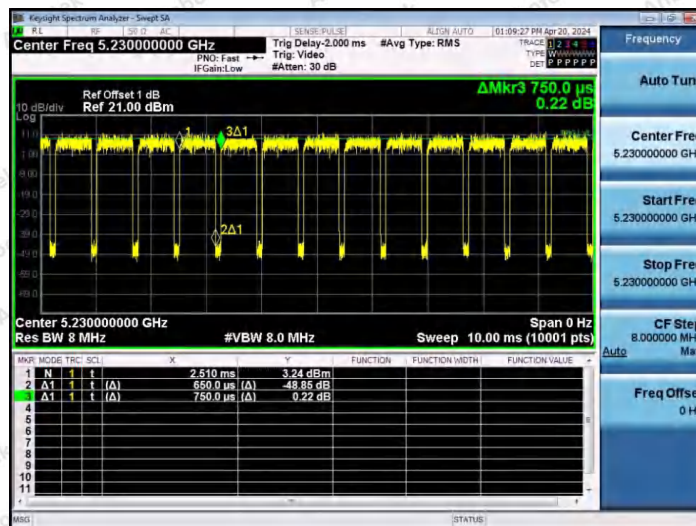

NTNV-11N40SISO-Ant1-5230

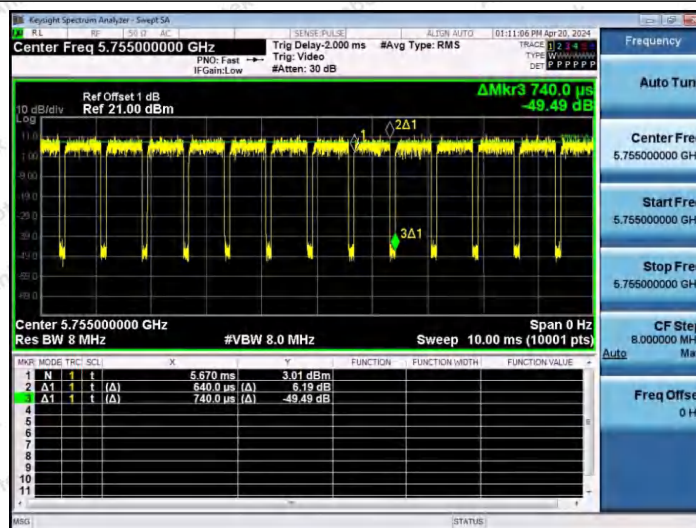


NTNV-11N40SISO-Ant1-5755

Shenzhen Anbotek Compliance Laboratory Limited


Address: 1/F., Building D, Sogood Science and Technology Park, Sanwei Community, Hangcheng Street, Bao'an District, Shenzhen, Guangdong, China.
 Tel: (86) 0755-26066440 Fax: (86) 0755-26014772 Email: service@anbotek.com

Hotline 400-003-0500
 www.anbotek.com.cn




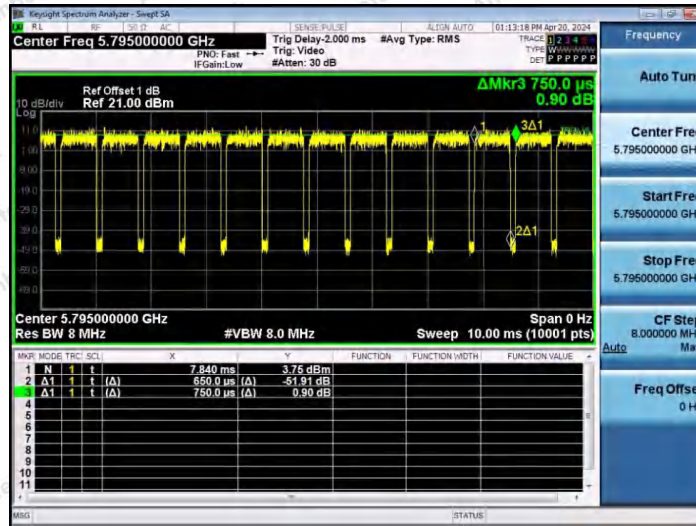

NTVN-11N40SISO-Ant1-5795

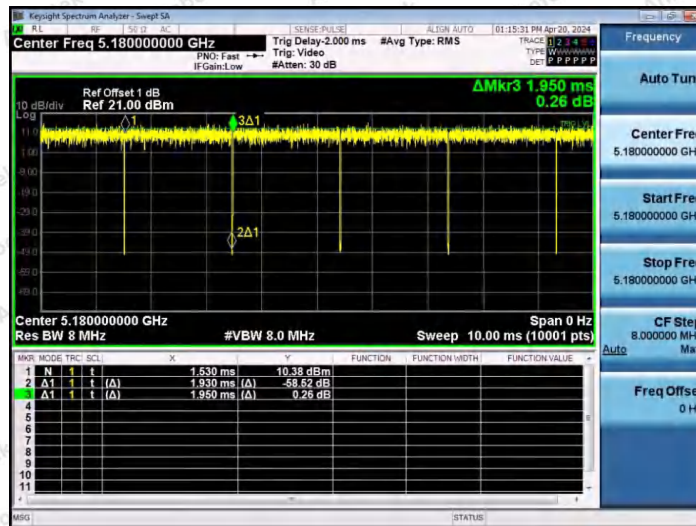

NTVN-11AC20SISO-Ant1-5180

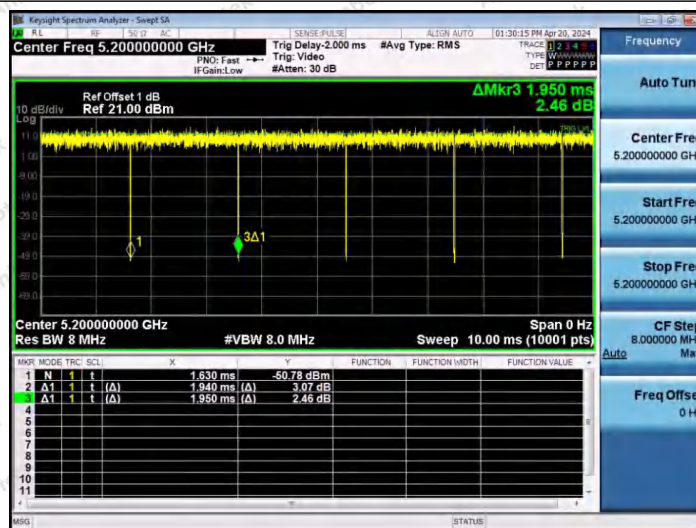


NTVN-11AC20SISO-Ant1-5200

Shenzhen Anbotek Compliance Laboratory Limited


Address: 1/F., Building D, Sogood Science and Technology Park, Sanwei Community, Hangcheng Street, Bao'an District, Shenzhen, Guangdong, China.
Tel: (86) 0755-26066440 Fax: (86) 0755-26014772 Email: service@anbotek.com

Hotline 400-003-0500
www.anbotek.com.cn




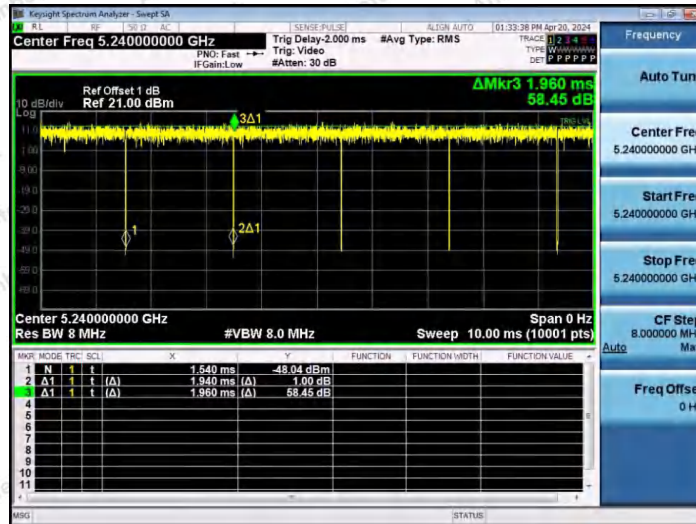

NTNV-11AC20SISO-Ant1-5240

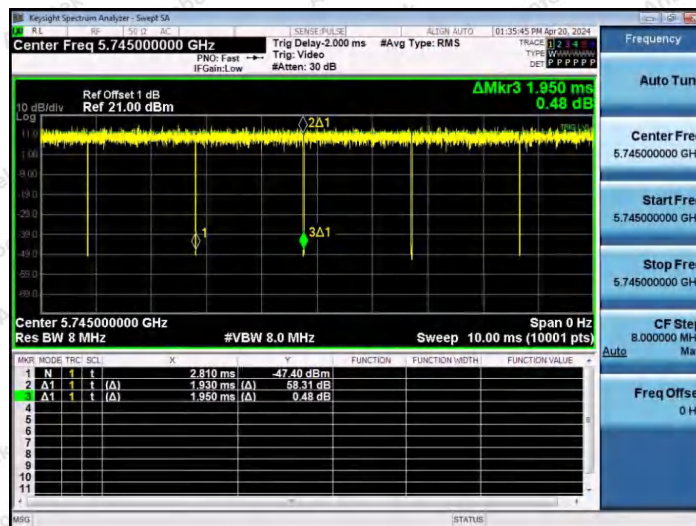

NTNV-11AC20SISO-Ant1-5745

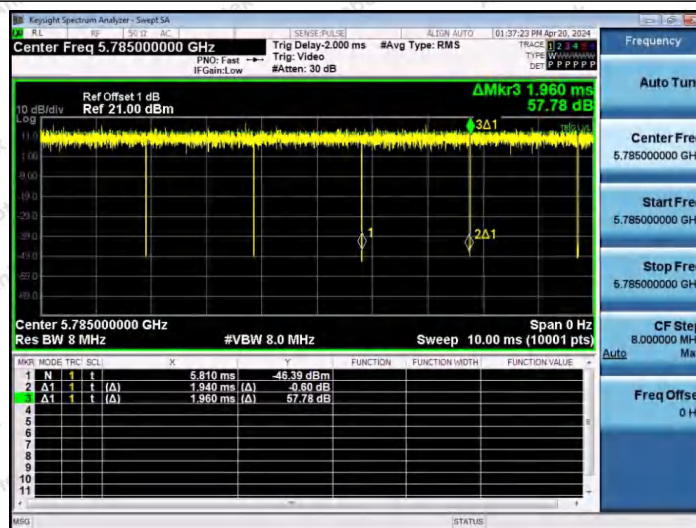


NTNV-11AC20SISO-Ant1-5785

Shenzhen Anbotek Compliance Laboratory Limited


Address: 1/F., Building D, Sogood Science and Technology Park, Sanwei Community, Hangcheng Street, Bao'an District, Shenzhen, Guangdong, China.
 Tel: (86) 0755-26066440 Fax: (86) 0755-26014772 Email: service@anbotek.com

Hotline 400-003-0500
 www.anbotek.com.cn




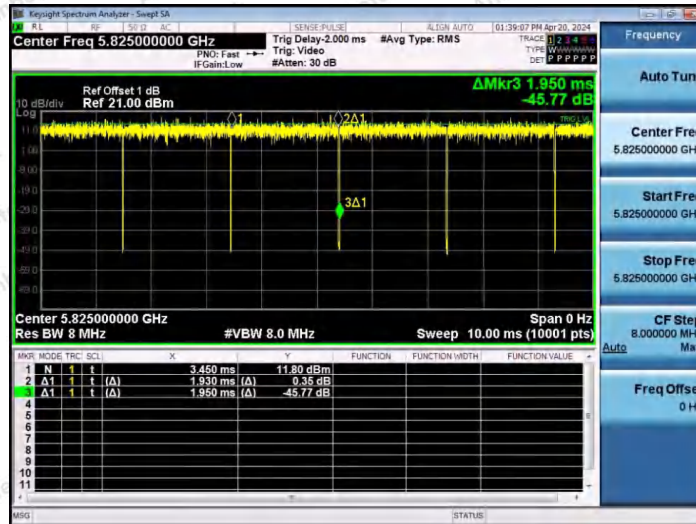

NTV-11AC20SISO-Ant1-5825

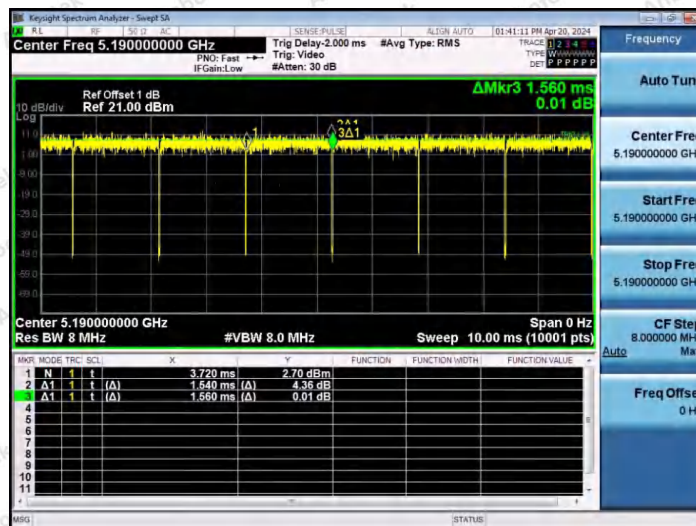

NTV-11AC40SISO-Ant1-5190

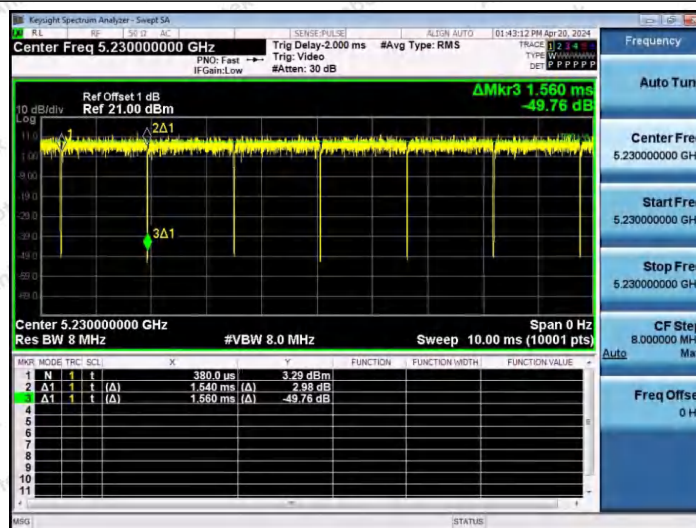


NTV-11AC40SISO-Ant1-5230

Shenzhen Anbotek Compliance Laboratory Limited


Address: 1/F., Building D, Sogood Science and Technology Park, Sanwei Community, Hangcheng Street, Bao'an District, Shenzhen, Guangdong, China.
 Tel: (86) 0755-26066440 Fax: (86) 0755-26014772 Email: service@anbotek.com

Hotline 400-003-0500
 www.anbotek.com.cn




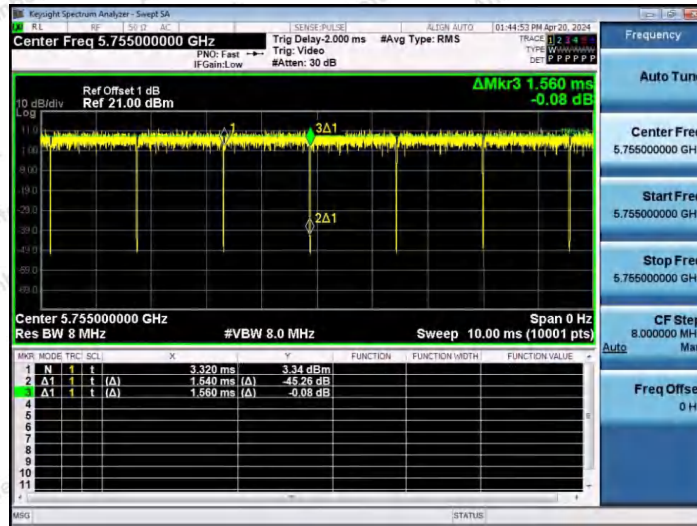

NTNV-11AC40SISO-Ant1-5755

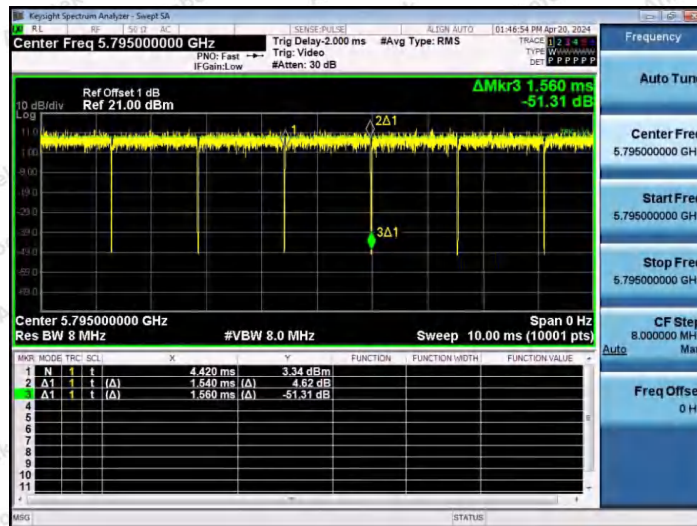

NTNV-11AC40SISO-Ant1-5795

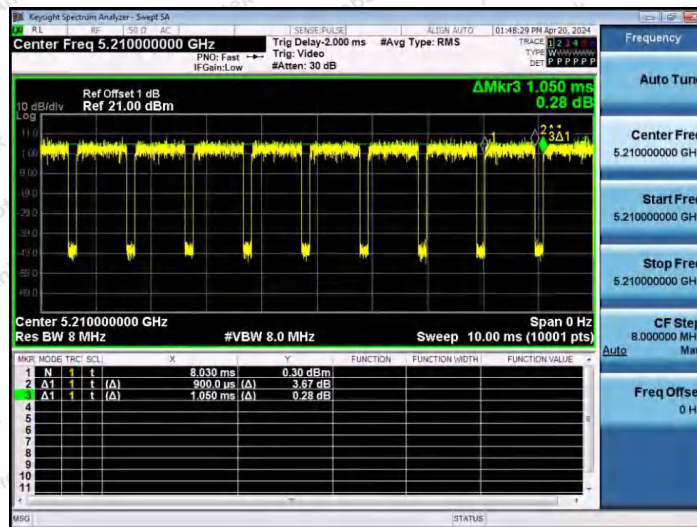


NTNV-11AC80SISO-Ant1-5210

Shenzhen Anbotek Compliance Laboratory Limited


Address: 1/F., Building D, Sogood Science and Technology Park, Sanwei Community, Hangcheng Street, Bao'an District, Shenzhen, Guangdong, China.
 Tel: (86) 0755-26066440 Fax: (86) 0755-26014772 Email: service@anbotek.com

Hotline 400-003-0500
 www.anbotek.com.cn




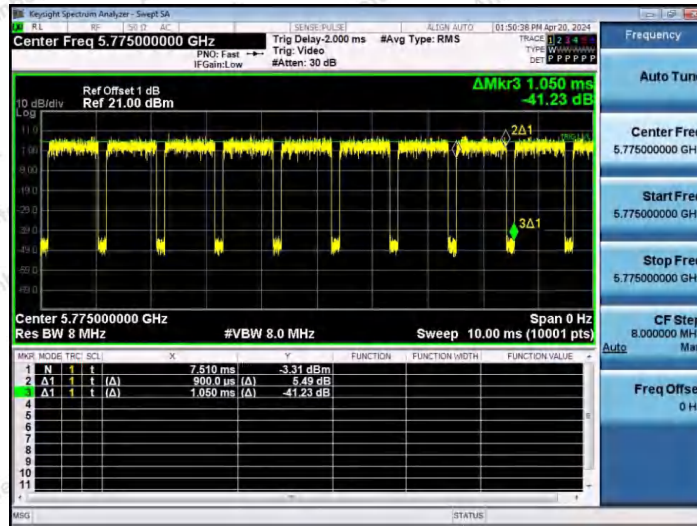

NTV-11AC80SISO-Ant1-5775

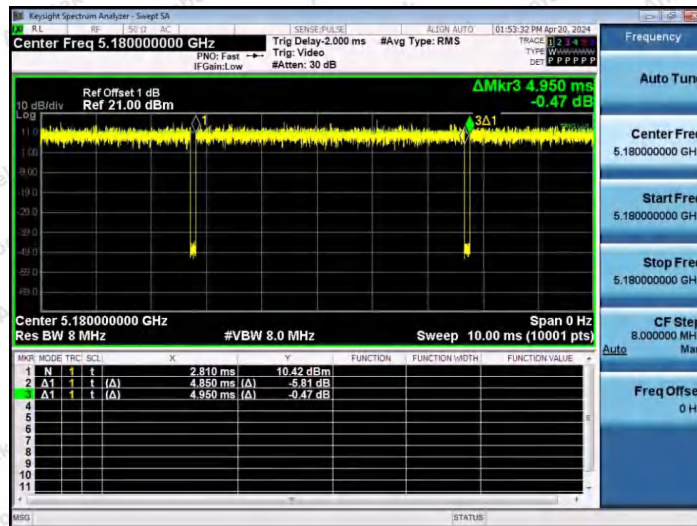

NTV-11AX20SISO-Ant1-5180

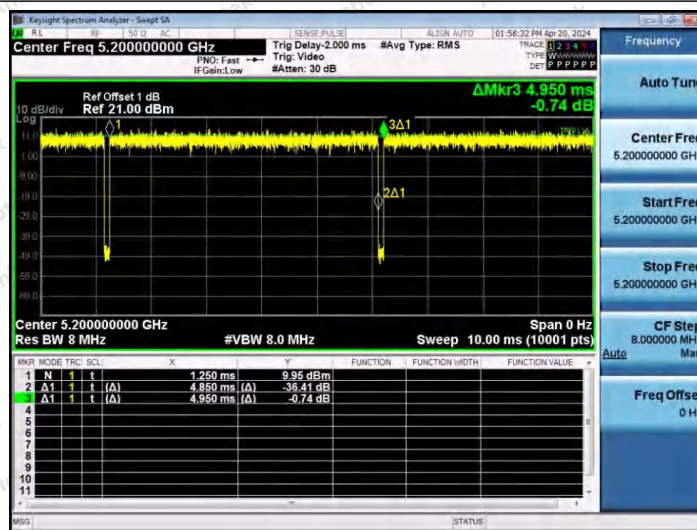

NTV-11AX20SISO-Ant1-5200

Shenzhen Anbotek Compliance Laboratory Limited

Address: 1/F., Building D, Sogood Science and Technology Park, Sanwei Community, Hangcheng Street, Bao'an District, Shenzhen, Guangdong, China.
 Tel: (86) 0755-26066440 Fax: (86) 0755-26014772 Email: service@anbotek.com

Hotline 400-003-0500
 www.anbotek.com.cn

