



NTNV-11AX80SISO-Ant1-5985-484Tone-RU66-PASS

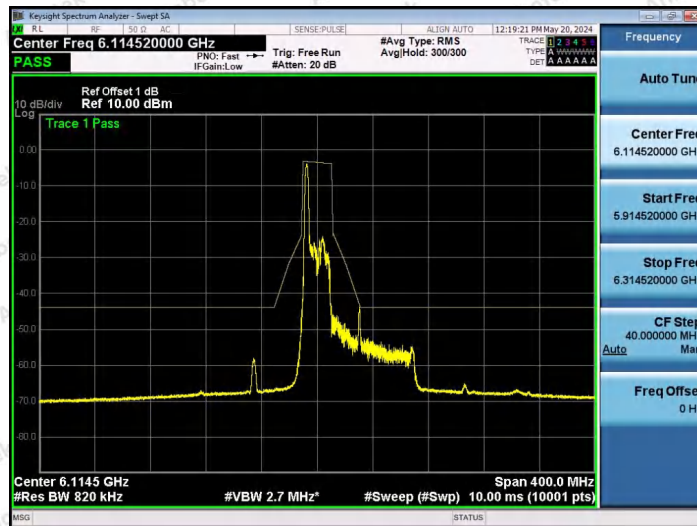

NTNV-11AX80SISO-Ant1-6145-26Tone-RU0-PASS

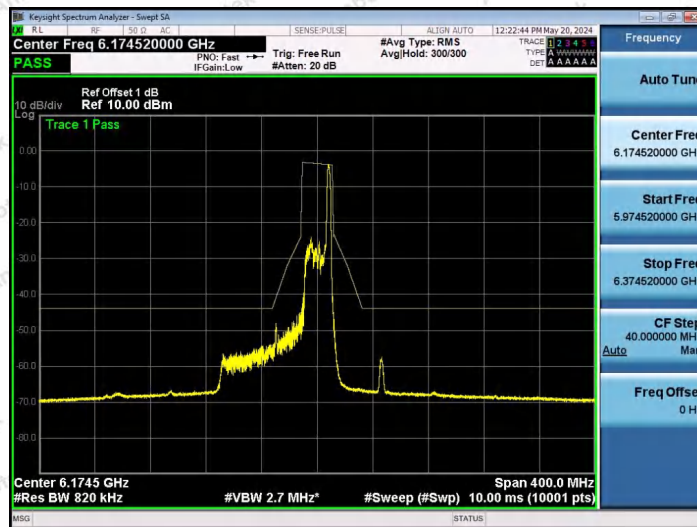


NTNV-11AX80SISO-Ant1-6145-26Tone-RU36-PASS

Shenzhen Anbotek Compliance Laboratory Limited


Address: 1/F., Building D, Sogood Science and Technology Park, Sanwei Community, Hangcheng Street, Bao'an District, Shenzhen, Guangdong, China.
Tel: (86) 0755-26066440 Fax: (86) 0755-26014772 Email: service@anbotek.com

Hotline 400-003-0500
www.anbotek.com.cn




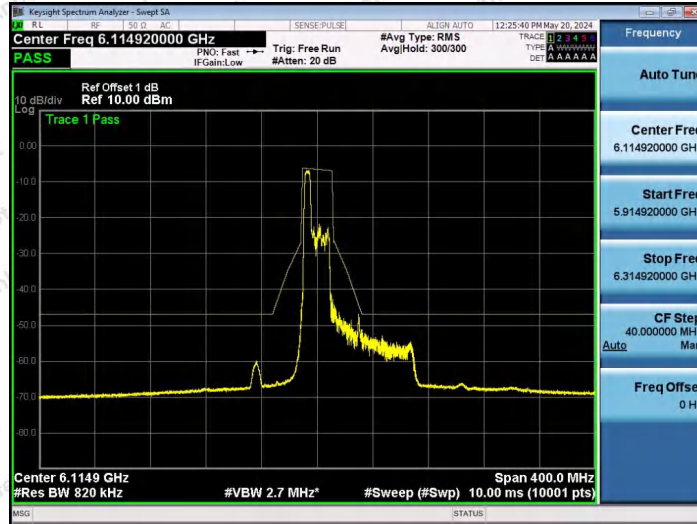

NTNV-11AX80SISO-Ant1-6145-52Tone-RU37-PASS

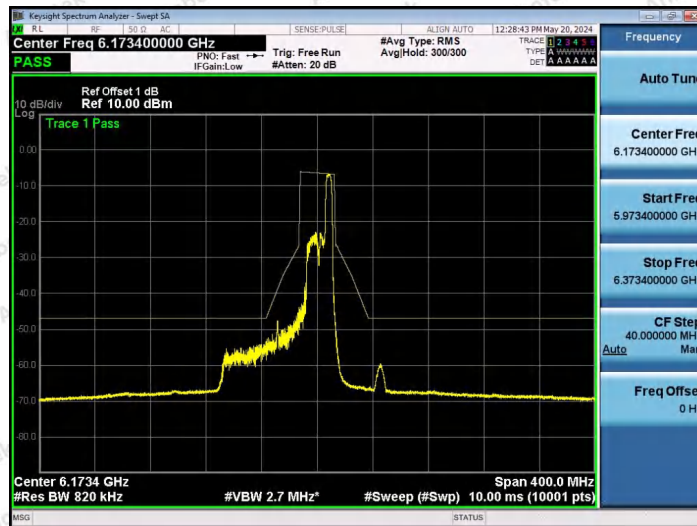

NTNV-11AX80SISO-Ant1-6145-52Tone-RU52-PASS

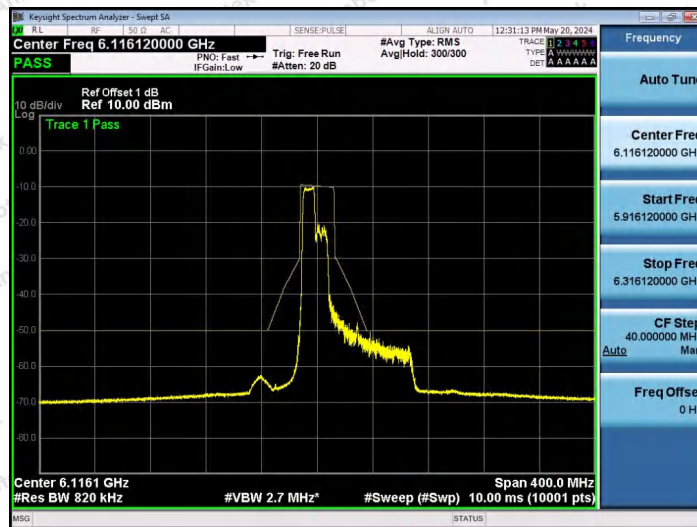


NTNV-11AX80SISO-Ant1-6145-106Tone-RU53-PASS

Shenzhen Anbotek Compliance Laboratory Limited


Address: 1/F., Building D, Sogood Science and Technology Park, Sanwei Community, Hangcheng Street, Bao'an District, Shenzhen, Guangdong, China.
 Tel: (86) 0755-26066440 Fax: (86) 0755-26014772 Email: service@anbotek.com

Hotline 400-003-0500
 www.anbotek.com.cn




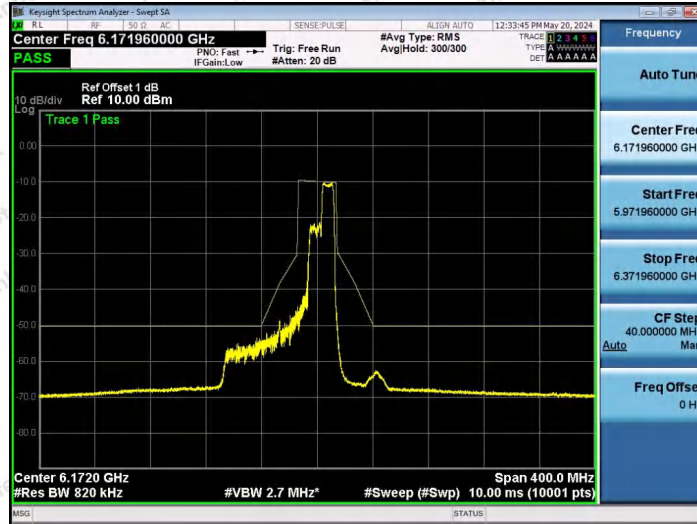

NTNV-11AX80SISO-Ant1-6145-106Tone-RU60-PASS

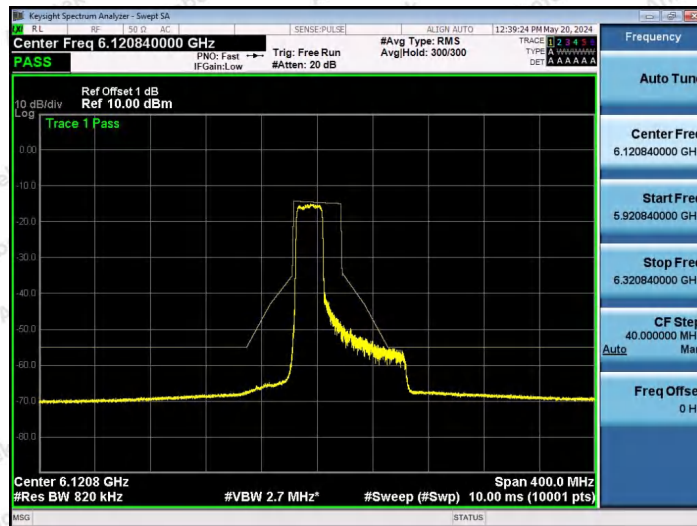

NTNV-11AX80SISO-Ant1-6145-242Tone-RU61-PASS

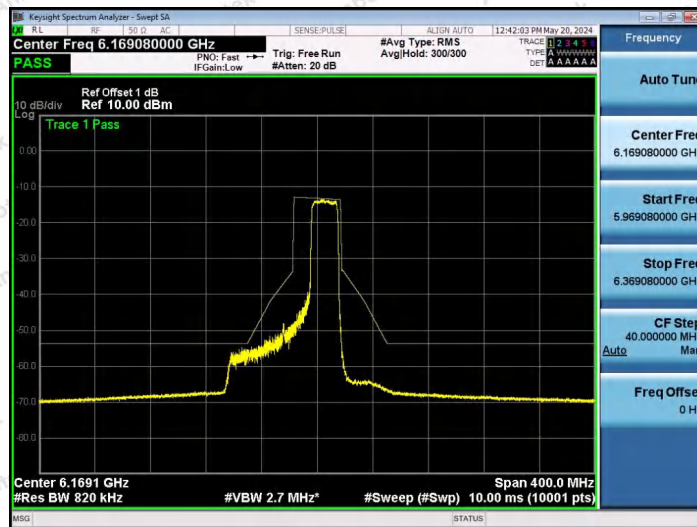


NTNV-11AX80SISO-Ant1-6145-242Tone-RU64-PASS

Shenzhen Anbotek Compliance Laboratory Limited


Address: 1/F., Building D, Sogood Science and Technology Park, Sanwei Community, Hangcheng Street, Bao'an District, Shenzhen, Guangdong, China.
 Tel: (86) 0755-26066440 Fax: (86) 0755-26014772 Email: service@anbotek.com

Hotline 400-003-0500
 www.anbotek.com.cn




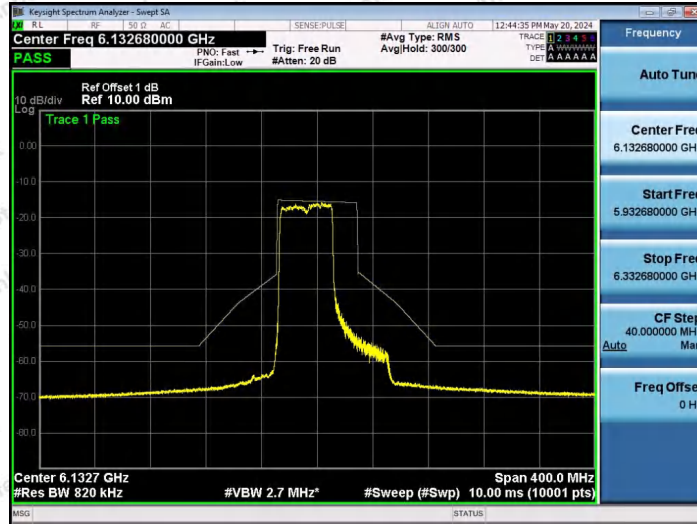

NTNV-11AX80SISO-Ant1-6145-484Tone-RU65-PASS

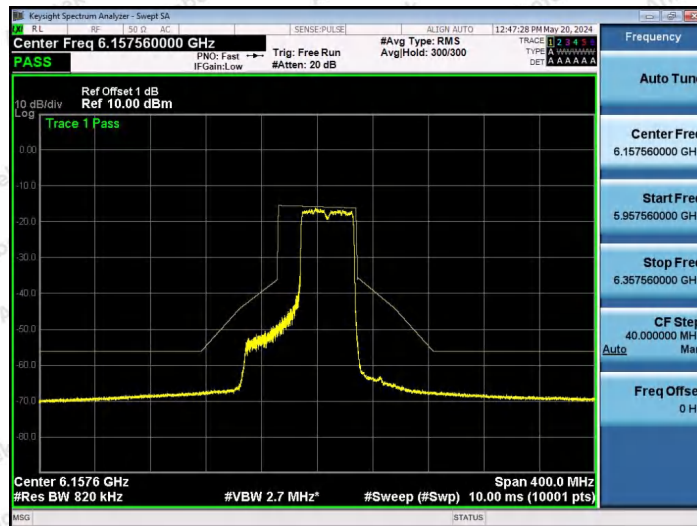

NTNV-11AX80SISO-Ant1-6145-484Tone-RU66-PASS

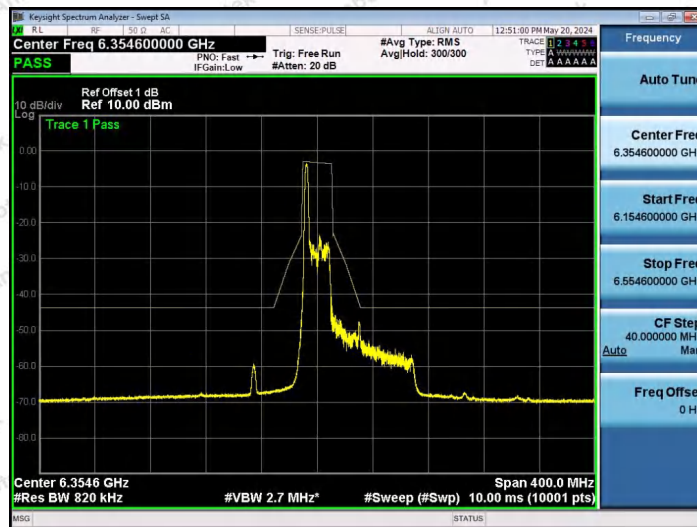


NTNV-11AX80SISO-Ant1-6385-26Tone-RU0-PASS

Shenzhen Anbotek Compliance Laboratory Limited


Address: 1/F., Building D, Sogood Science and Technology Park, Sanwei Community, Hangcheng Street, Bao'an District, Shenzhen, Guangdong, China.
Tel: (86) 0755-26066440 Fax: (86) 0755-26014772 Email: service@anbotek.com

Hotline 400-003-0500
www.anbotek.com.cn




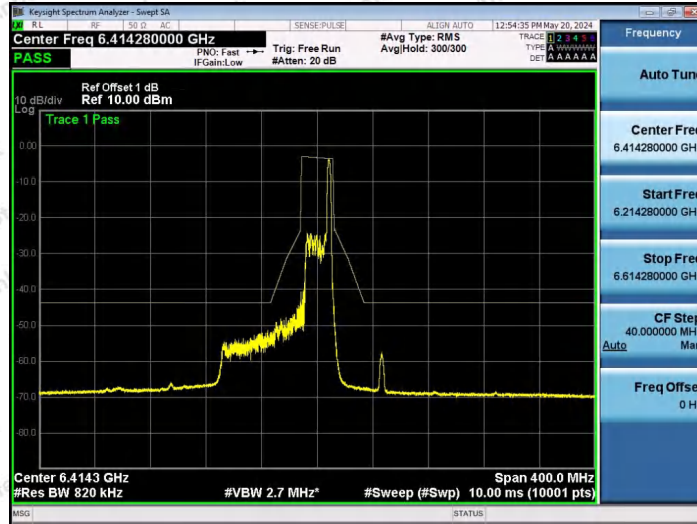

NTNV-11AX80SISO-Ant1-6385-26Tone-RU36-PASS

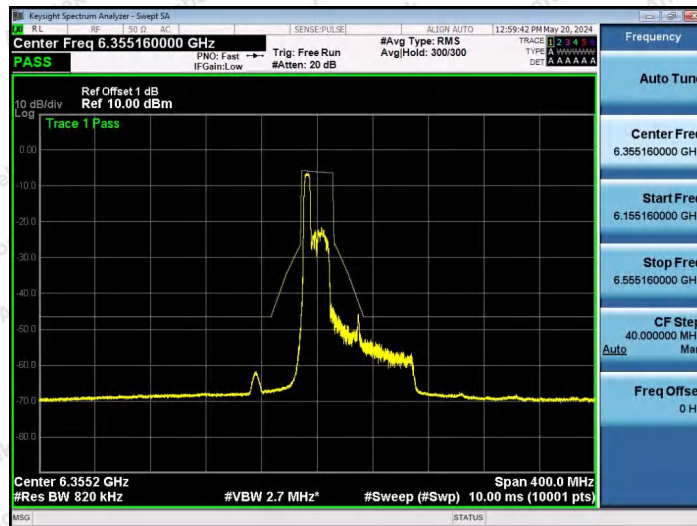

NTNV-11AX80SISO-Ant1-6385-52Tone-RU37-PASS

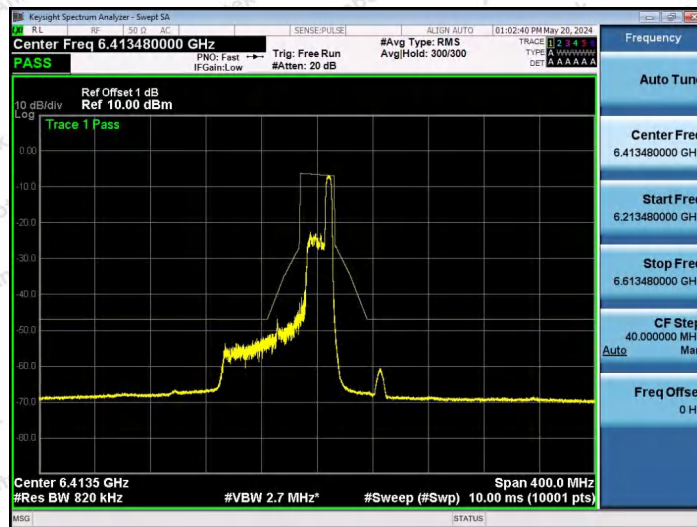


NTNV-11AX80SISO-Ant1-6385-52Tone-RU52-PASS

Shenzhen Anbotek Compliance Laboratory Limited


Address: 1/F., Building D, Sogood Science and Technology Park, Sanwei Community, Hangcheng Street, Bao'an District, Shenzhen, Guangdong, China.
Tel: (86) 0755-26066440 Fax: (86) 0755-26014772 Email: service@anbotek.com

Hotline 400-003-0500
www.anbotek.com.cn




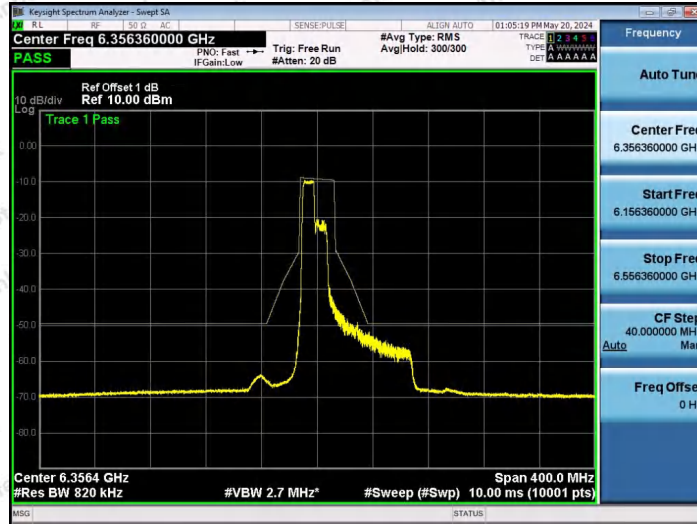

NTVN-11AX80SISO-Ant1-6385-106Tone-RU53-PASS

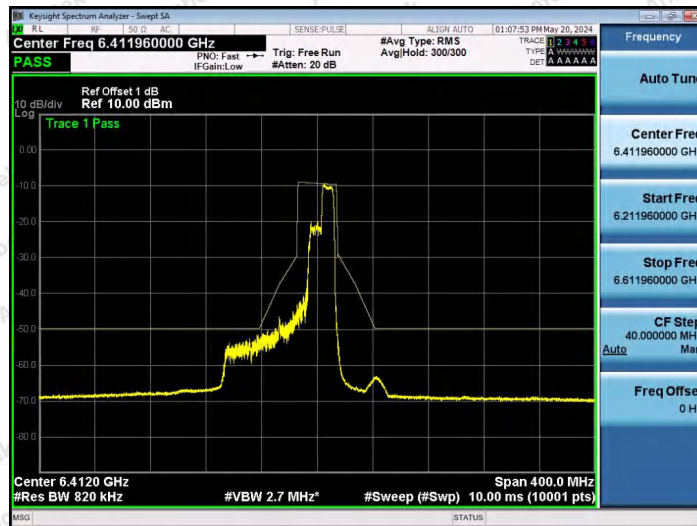

NTVN-11AX80SISO-Ant1-6385-106Tone-RU60-PASS

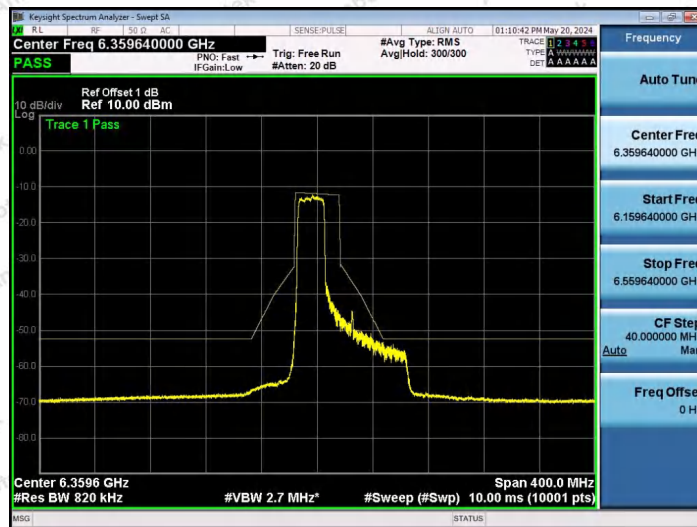


NTVN-11AX80SISO-Ant1-6385-242Tone-RU61-PASS

Shenzhen Anbotek Compliance Laboratory Limited

Address: 1/F., Building D, Sogood Science and Technology Park, Sanwei Community, Hangcheng Street, Bao'an District, Shenzhen, Guangdong, China.
Tel: (86) 0755-26066440 Fax: (86) 0755-26014772 Email: service@anbotek.com

Hotline 400-003-0500
www.anbotek.com.cn




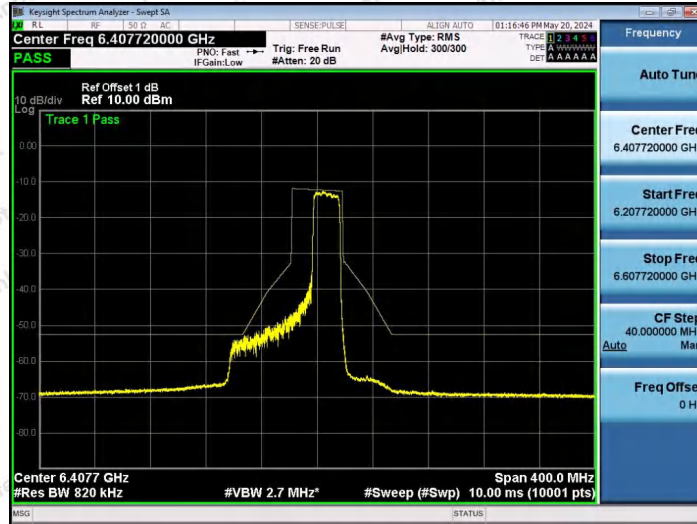

NTVN-11AX80SISO-Ant1-6385-242Tone-RU64-PASS



NTVN-11AX80SISO-Ant1-6385-484Tone-RU65-PASS

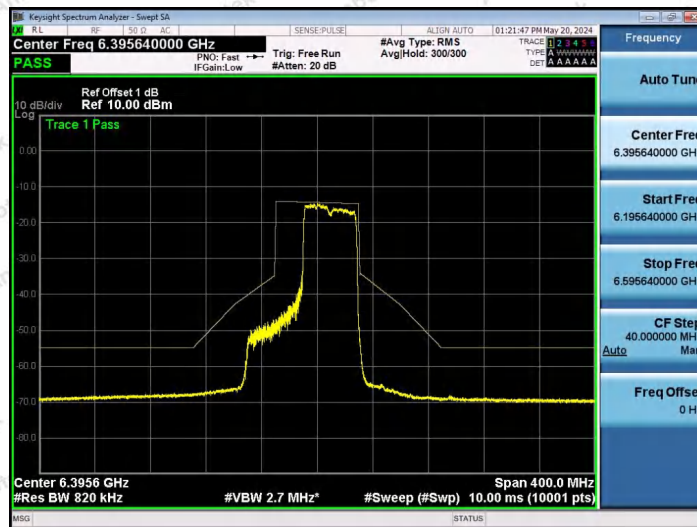


NTVN-11AX80SISO-Ant1-6385-484Tone-RU66-PASS

Shenzhen Anbotek Compliance Laboratory Limited


Address: 1/F., Building D, Sogood Science and Technology Park, Sanwei Community, Hangcheng Street, Bao'an District, Shenzhen, Guangdong, China.
 Tel: (86) 0755-26066440 Fax: (86) 0755-26014772 Email: service@anbotek.com

Hotline 400-003-0500
 www.anbotek.com.cn




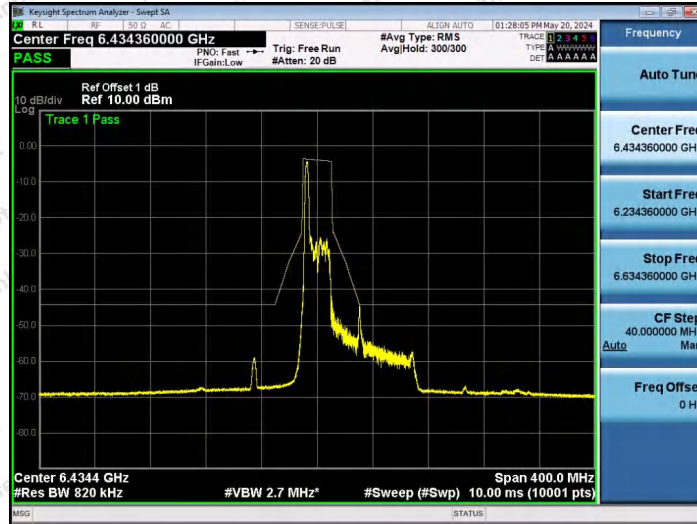

NTNV-11AX80SISO-Ant1-6465-26Tone-RU0-PASS

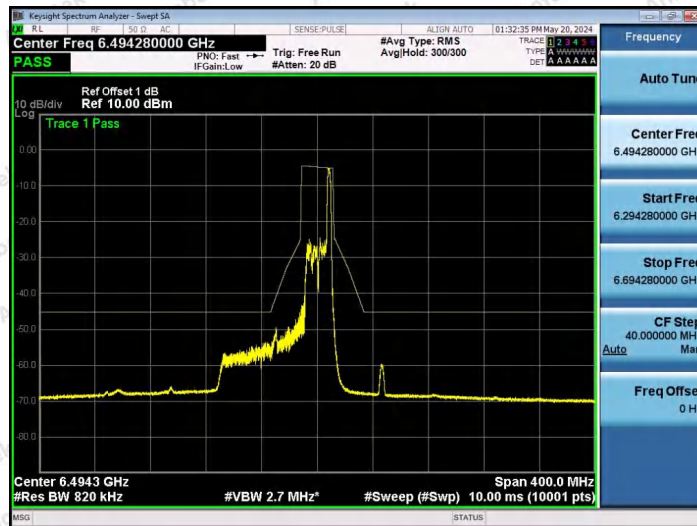

NTNV-11AX80SISO-Ant1-6465-26Tone-RU36-PASS

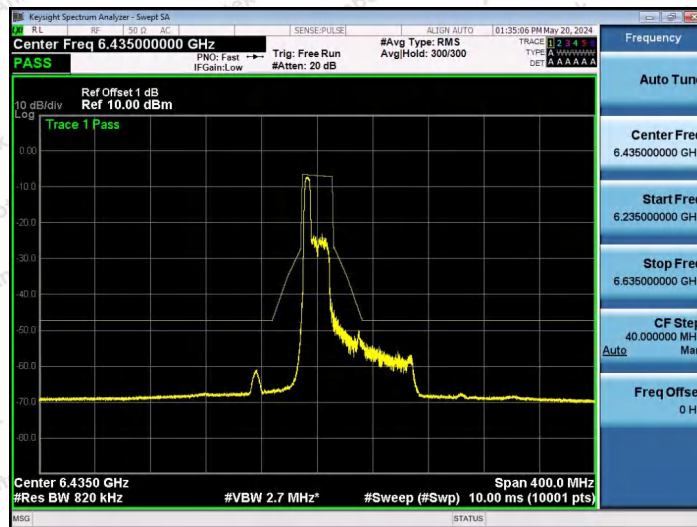


NTNV-11AX80SISO-Ant1-6465-52Tone-RU37-PASS

Shenzhen Anbotek Compliance Laboratory Limited


Address: 1/F., Building D, Sogood Science and Technology Park, Sanwei Community, Hangcheng Street, Bao'an District, Shenzhen, Guangdong, China.
 Tel: (86) 0755-26066440 Fax: (86) 0755-26014772 Email: service@anbotek.com

Hotline 400-003-0500
 www.anbotek.com.cn




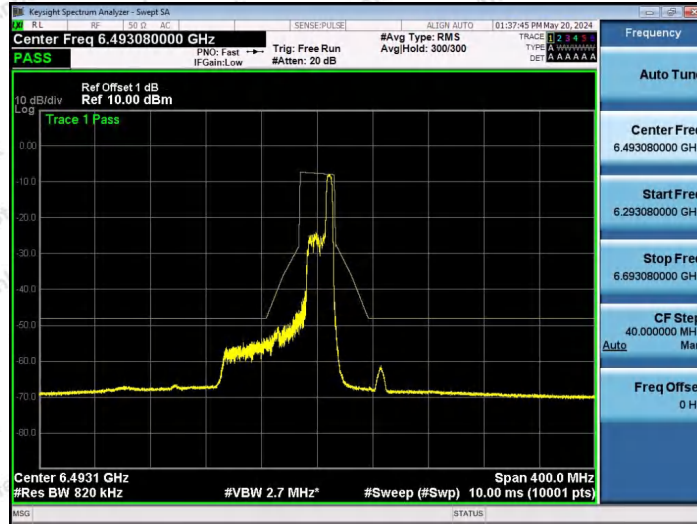

NTNV-11AX80SISO-Ant1-6465-52Tone-RU52-PASS

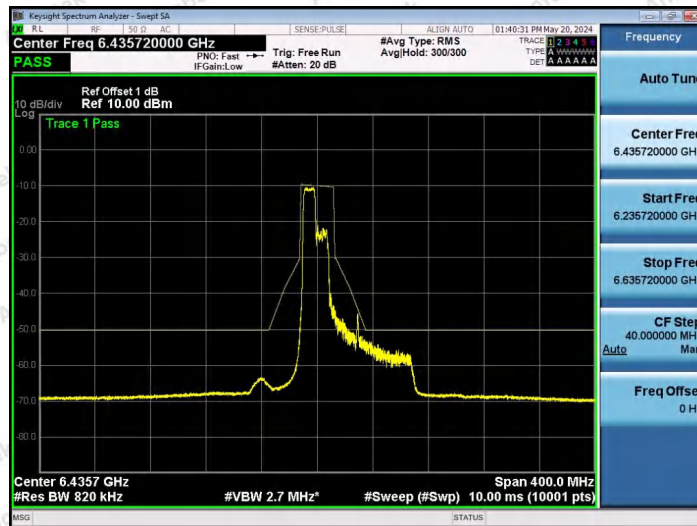

NTNV-11AX80SISO-Ant1-6465-106Tone-RU53-PASS

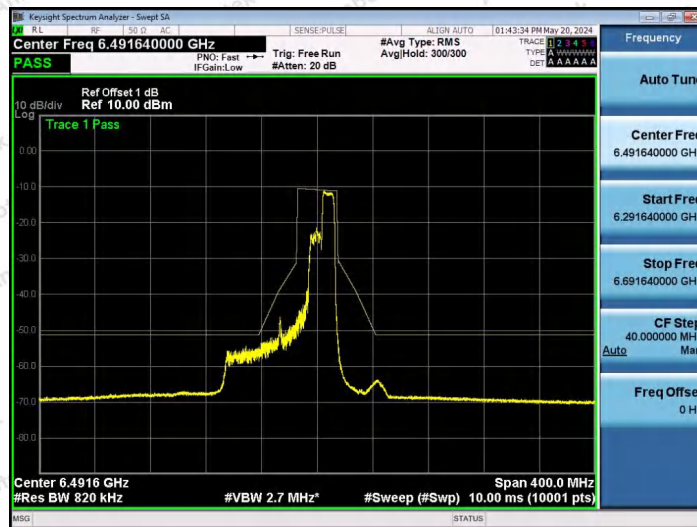


NTNV-11AX80SISO-Ant1-6465-106Tone-RU60-PASS

Shenzhen Anbotek Compliance Laboratory Limited


Address: 1/F., Building D, Sogood Science and Technology Park, Sanwei Community, Hangcheng Street, Bao'an District, Shenzhen, Guangdong, China.
 Tel: (86) 0755-26066440 Fax: (86) 0755-26014772 Email: service@anbotek.com

Hotline 400-003-0500
 www.anbotek.com.cn




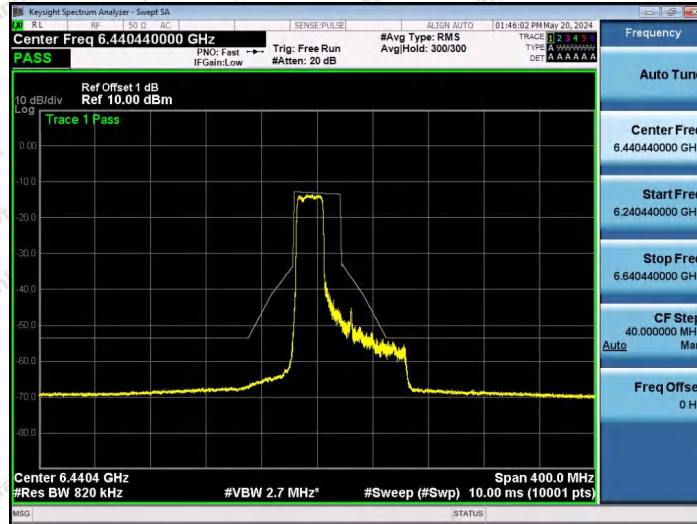

NTVN-11AX80SISO-Ant1-6465-242Tone-RU61-PASS

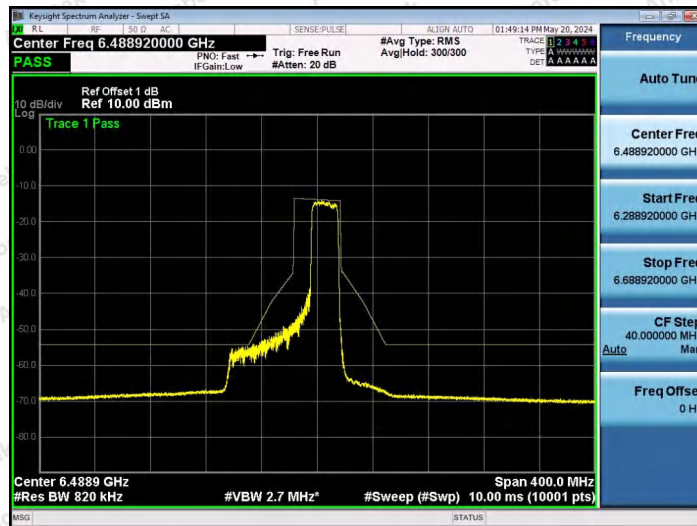

NTVN-11AX80SISO-Ant1-6465-242Tone-RU64-PASS

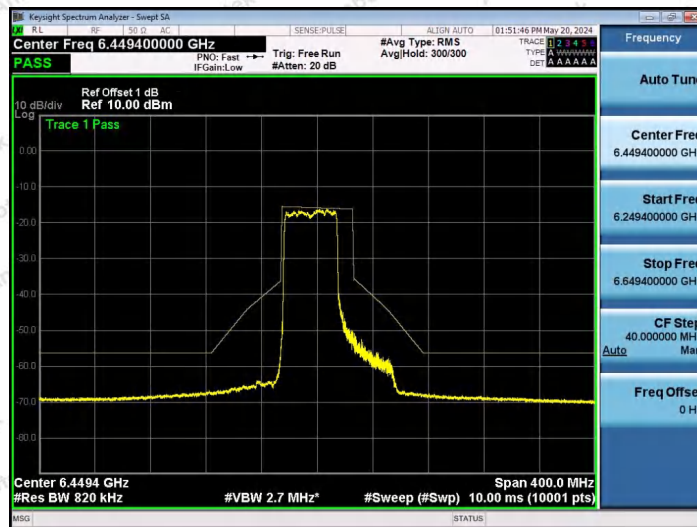


NTVN-11AX80SISO-Ant1-6465-484Tone-RU65-PASS

Shenzhen Anbotek Compliance Laboratory Limited


Address: 1/F., Building D, Sogood Science and Technology Park, Sanwei Community, Hangcheng Street, Bao'an District, Shenzhen, Guangdong, China.
Tel: (86) 0755-26066440 Fax: (86) 0755-26014772 Email: service@anbotek.com

Hotline
400-003-0500
www.anbotek.com.cn




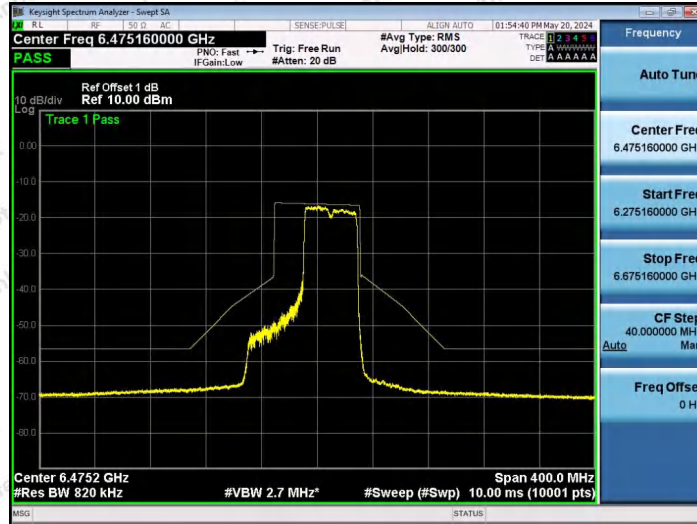

NTNV-11AX80SISO-Ant1-6465-484Tone-RU66-PASS

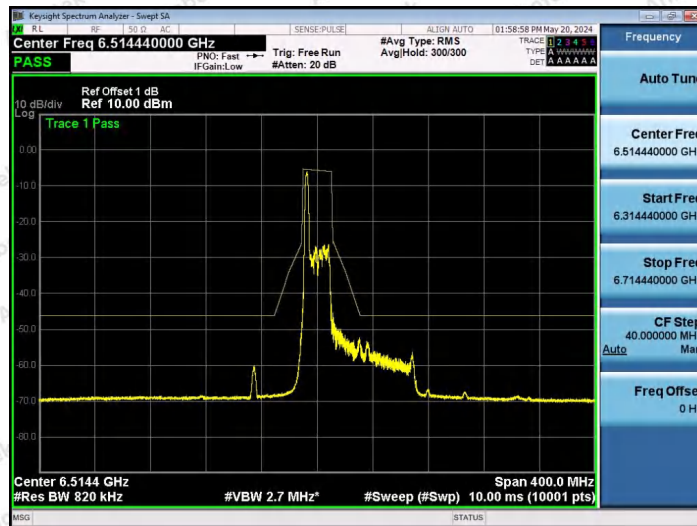

NTNV-11AX80SISO-Ant1-6545-26Tone-RU0-PASS

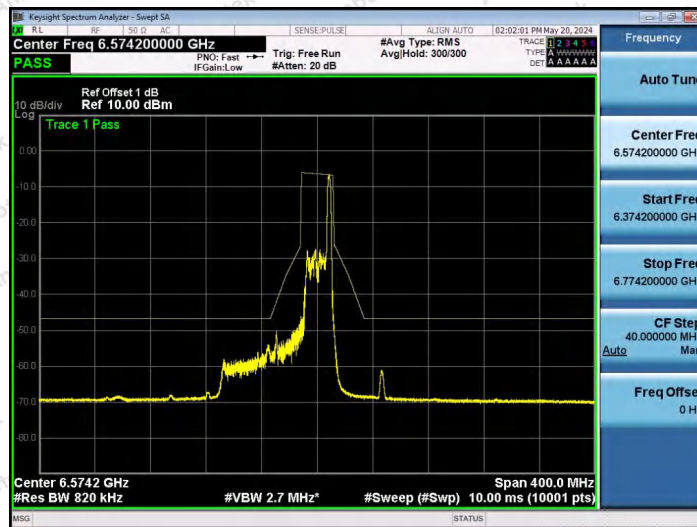


NTNV-11AX80SISO-Ant1-6545-26Tone-RU36-PASS

Shenzhen Anbotek Compliance Laboratory Limited


Address: 1/F., Building D, Sogood Science and Technology Park, Sanwei Community, Hangcheng Street, Bao'an District, Shenzhen, Guangdong, China.
 Tel: (86) 0755-26066440 Fax: (86) 0755-26014772 Email: service@anbotek.com

Hotline 400-003-0500
 www.anbotek.com.cn




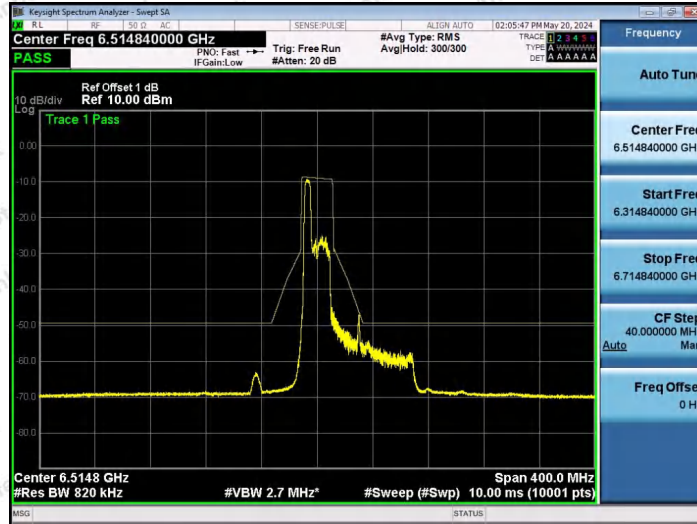

NTNV-11AX80SISO-Ant1-6545-52Tone-RU37-PASS

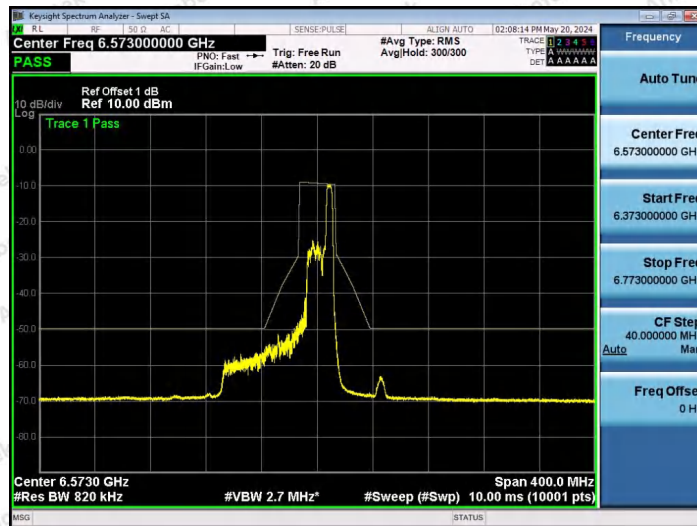

NTNV-11AX80SISO-Ant1-6545-52Tone-RU52-PASS

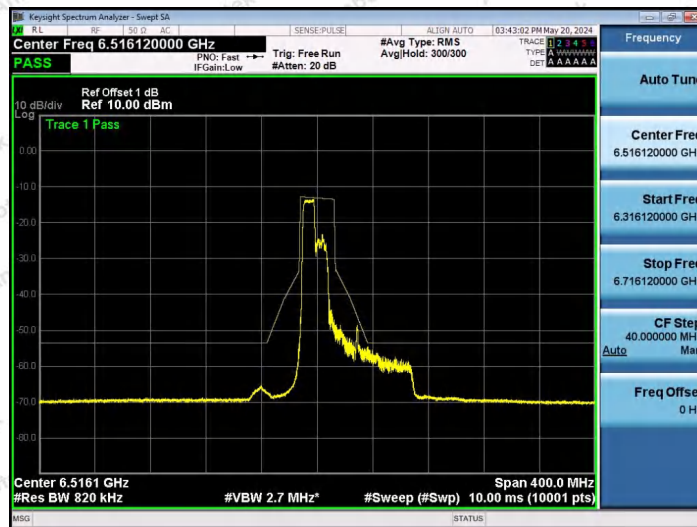


NTNV-11AX80SISO-Ant1-6545-106Tone-RU53-PASS

Shenzhen Anbotek Compliance Laboratory Limited


Address: 1/F., Building D, Sogood Science and Technology Park, Sanwei Community, Hangcheng Street, Bao'an District, Shenzhen, Guangdong, China.
Tel: (86) 0755-26066440 Fax: (86) 0755-26014772 Email: service@anbotek.com

Hotline 400-003-0500
www.anbotek.com.cn




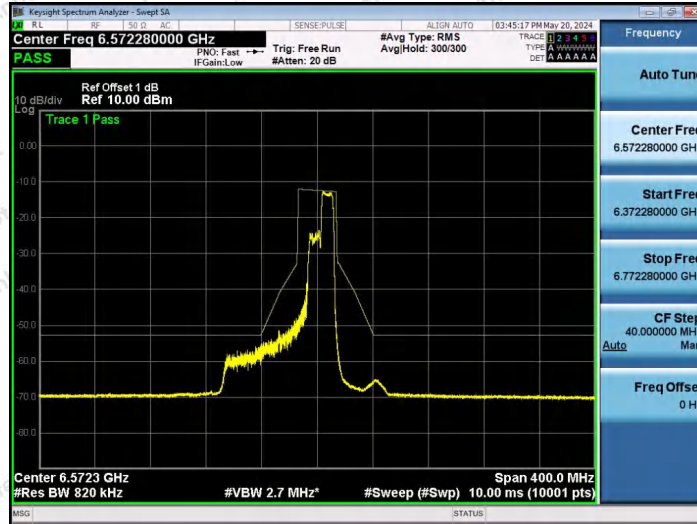

NTNV-11AX80SISO-Ant1-6545-106Tone-RU60-PASS

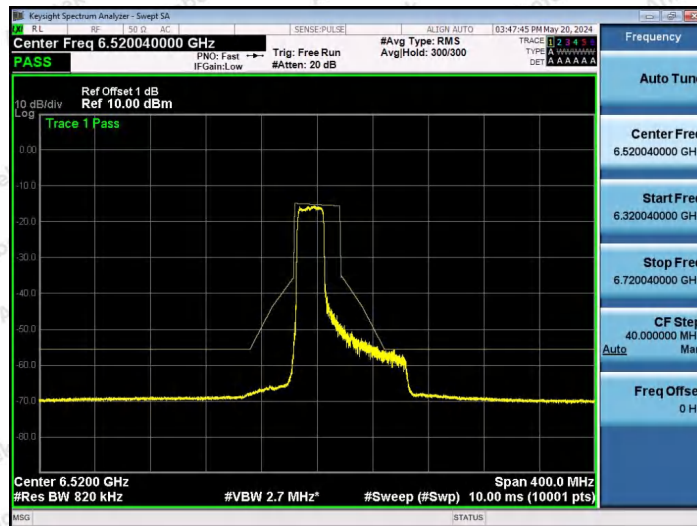

NTNV-11AX80SISO-Ant1-6545-242Tone-RU61-PASS

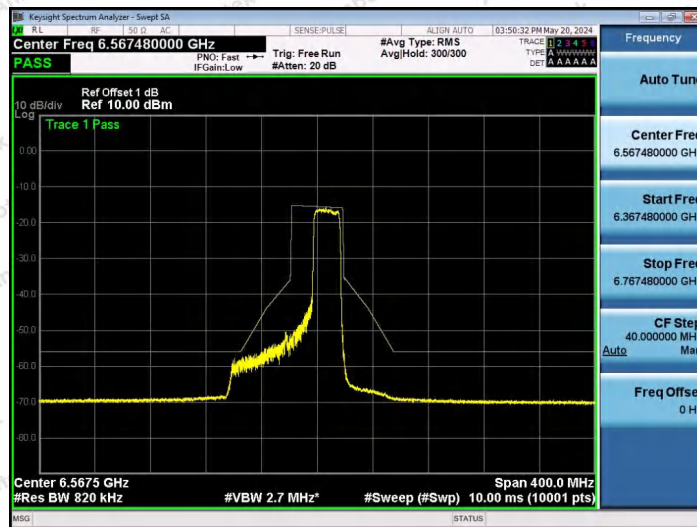


NTNV-11AX80SISO-Ant1-6545-242Tone-RU64-PASS

Shenzhen Anbotek Compliance Laboratory Limited


Address: 1/F., Building D, Sogood Science and Technology Park, Sanwei Community, Hangcheng Street, Bao'an District, Shenzhen, Guangdong, China.
Tel: (86) 0755-26066440 Fax: (86) 0755-26014772 Email: service@anbotek.com

Hotline 400-003-0500
www.anbotek.com.cn




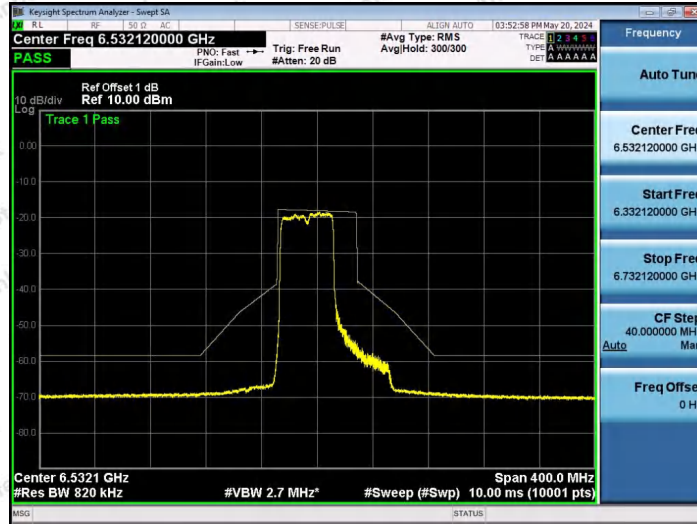

NTNV-11AX80SISO-Ant1-6545-484Tone-RU65-PASS

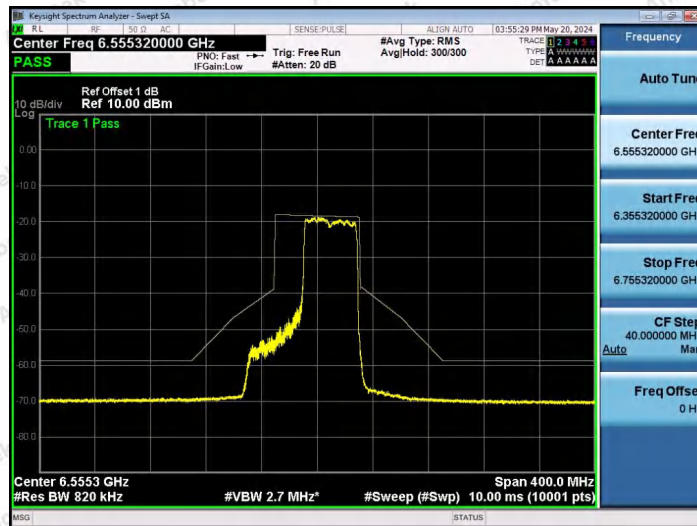

NTNV-11AX80SISO-Ant1-6545-484Tone-RU66-PASS

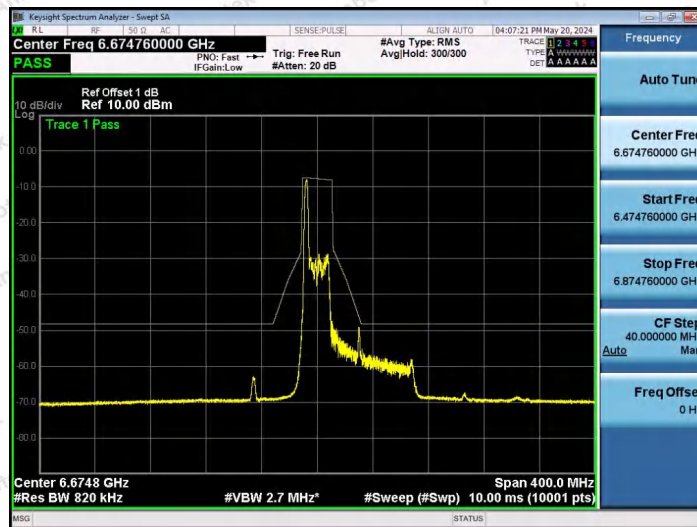


NTNV-11AX80SISO-Ant1-6705-26Tone-RU0-PASS

Shenzhen Anbotek Compliance Laboratory Limited


Address: 1/F., Building D, Sogood Science and Technology Park, Sanwei Community, Hangcheng Street, Bao'an District, Shenzhen, Guangdong, China.
 Tel: (86) 0755-26066440 Fax: (86) 0755-26014772 Email: service@anbotek.com

Hotline 400-003-0500
 www.anbotek.com.cn




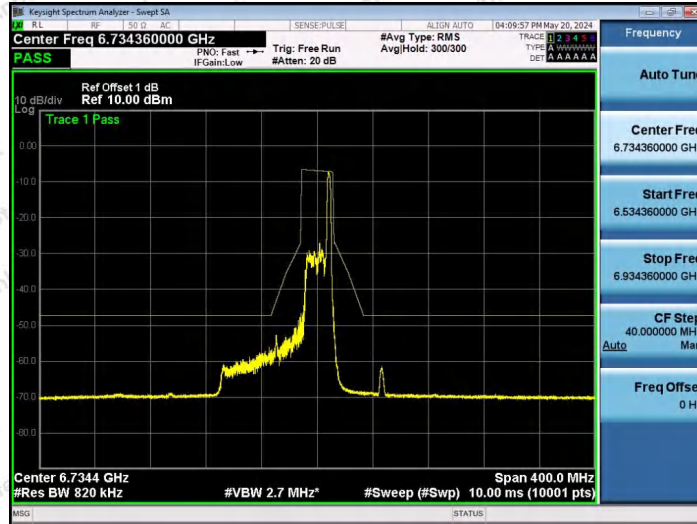

NTNV-11AX80SISO-Ant1-6705-26Tone-RU36-PASS

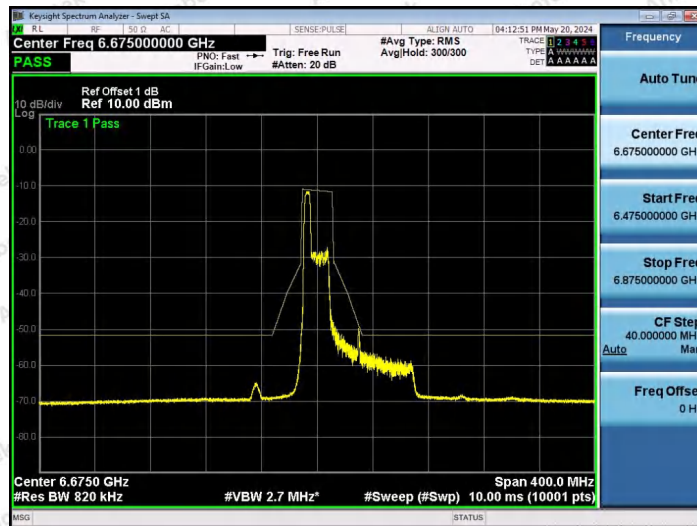

NTNV-11AX80SISO-Ant1-6705-52Tone-RU37-PASS

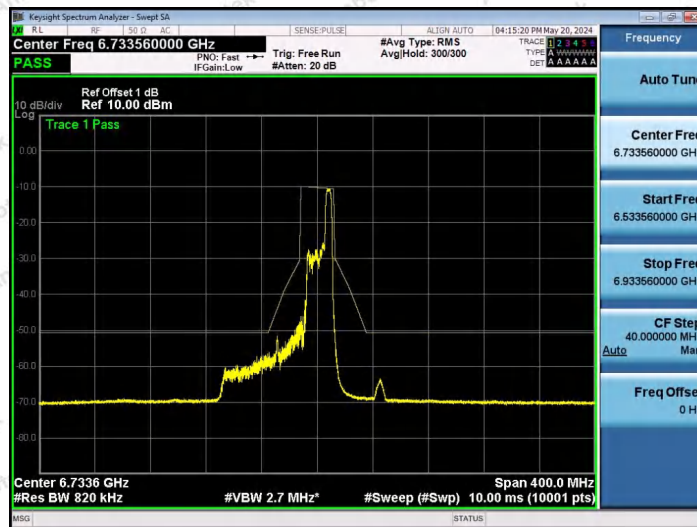


NTNV-11AX80SISO-Ant1-6705-52Tone-RU52-PASS

Shenzhen Anbotek Compliance Laboratory Limited


Address: 1/F., Building D, Sogood Science and Technology Park, Sanwei Community, Hangcheng Street, Bao'an District, Shenzhen, Guangdong, China.
Tel: (86) 0755-26066440 Fax: (86) 0755-26014772 Email: service@anbotek.com

Hotline 400-003-0500
www.anbotek.com.cn




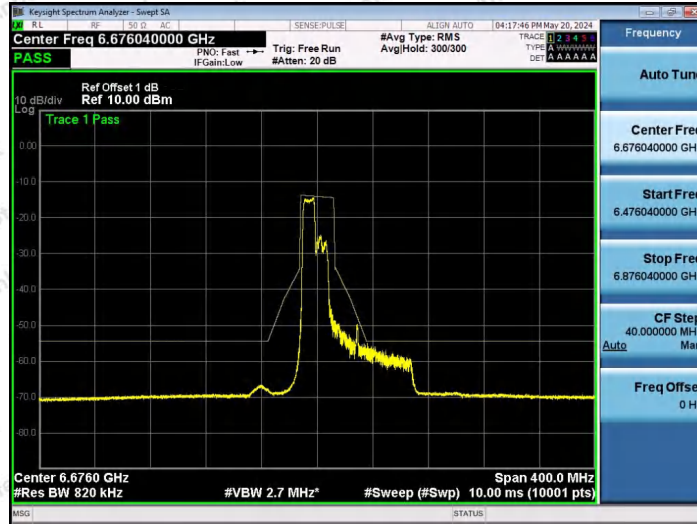

NTNV-11AX80SISO-Ant1-6705-106Tone-RU53-PASS

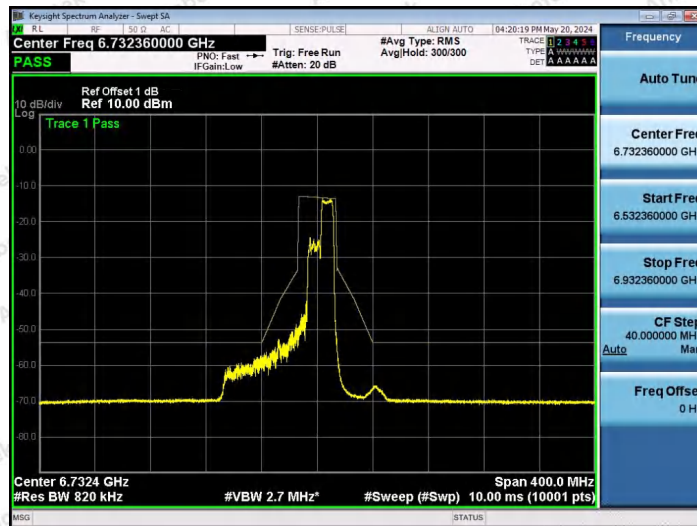

NTNV-11AX80SISO-Ant1-6705-106Tone-RU60-PASS

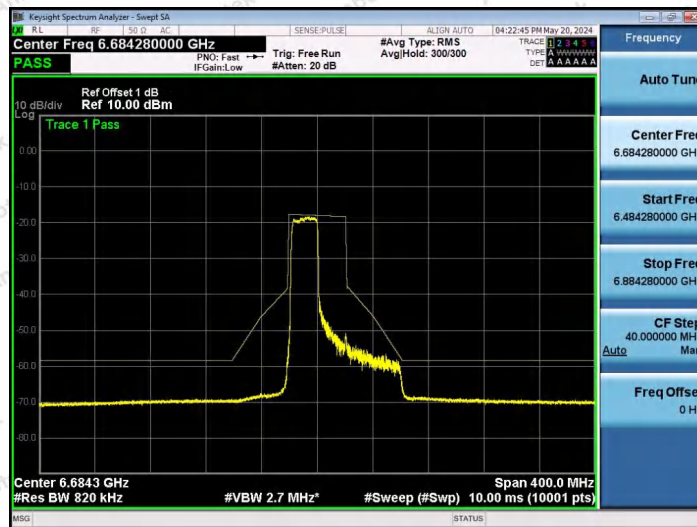


NTNV-11AX80SISO-Ant1-6705-242Tone-RU61-PASS

Shenzhen Anbotek Compliance Laboratory Limited


Address: 1/F., Building D, Sogood Science and Technology Park, Sanwei Community, Hangcheng Street, Bao'an District, Shenzhen, Guangdong, China.
Tel: (86) 0755-26066440 Fax: (86) 0755-26014772 Email: service@anbotek.com

Hotline 400-003-0500
www.anbotek.com.cn




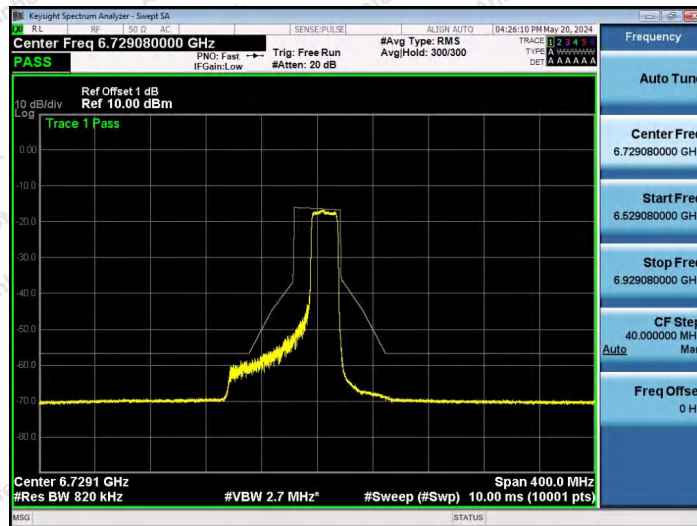

NTNV-11AX80SISO-Ant1-6705-242Tone-RU64-PASS

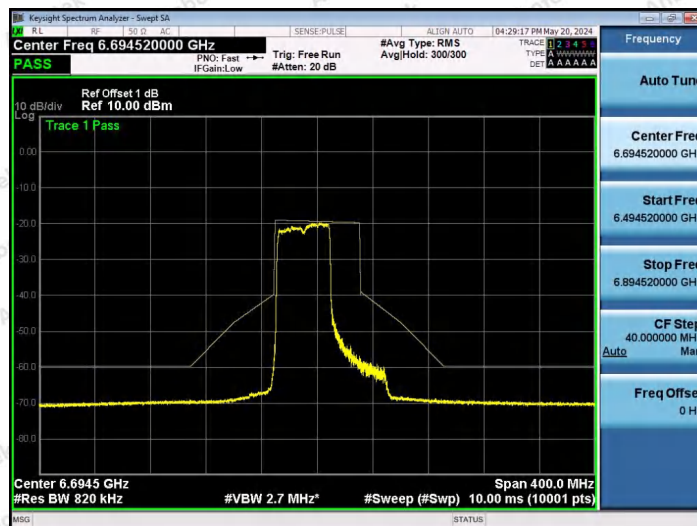

NTNV-11AX80SISO-Ant1-6705-484Tone-RU65-PASS

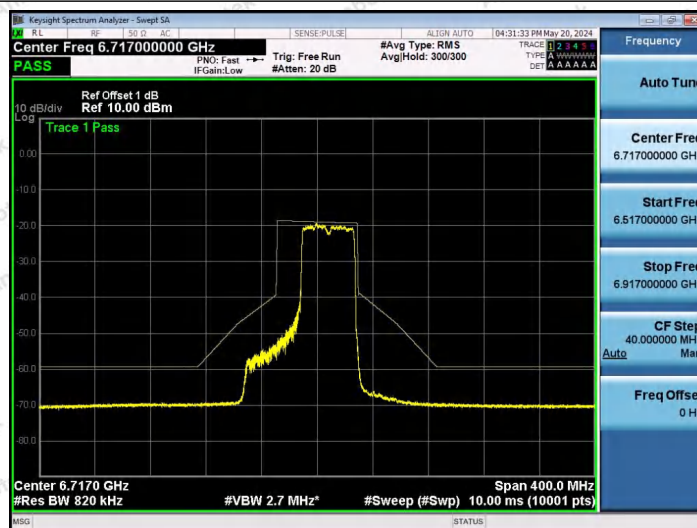


NTNV-11AX80SISO-Ant1-6705-484Tone-RU66-PASS

Shenzhen Anbotek Compliance Laboratory Limited


Address: 1/F., Building D, Sogood Science and Technology Park, Sanwei Community, Hangcheng Street, Bao'an District, Shenzhen, Guangdong, China.
Tel: (86) 0755-26066440 Fax: (86) 0755-26014772 Email: service@anbotek.com

Hotline 400-003-0500
www.anbotek.com.cn




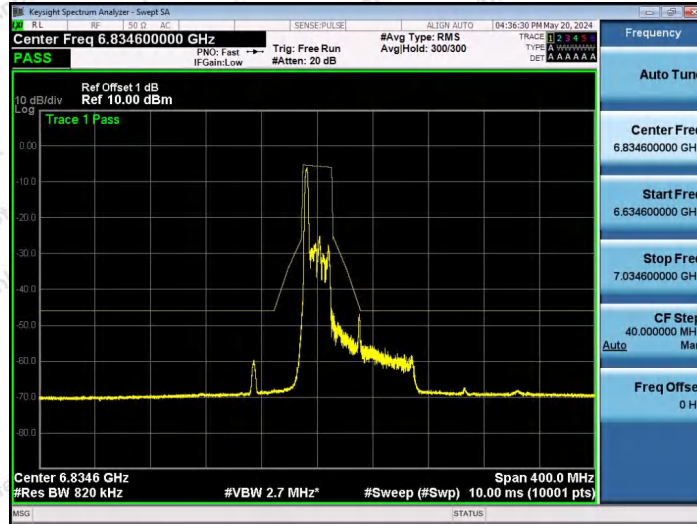

NTNV-11AX80SISO-Ant1-6865-26Tone-RU0-PASS

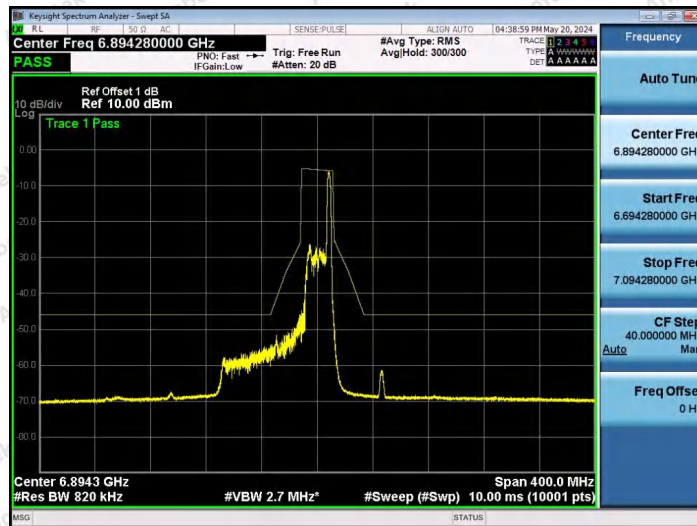

NTNV-11AX80SISO-Ant1-6865-26Tone-RU36-PASS

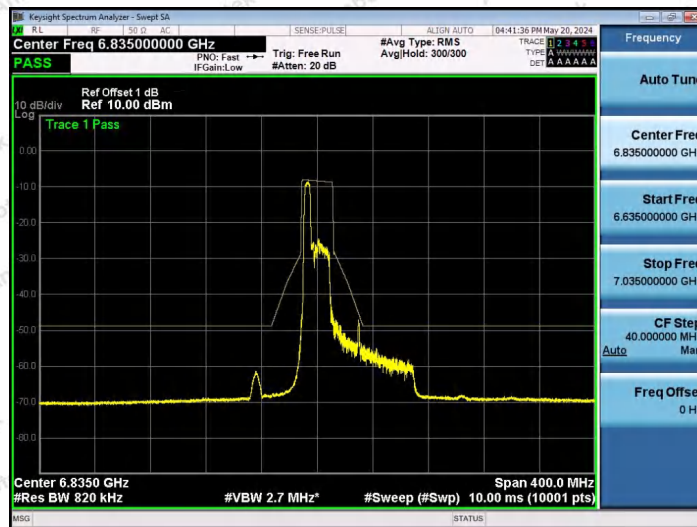


NTNV-11AX80SISO-Ant1-6865-52Tone-RU37-PASS

Shenzhen Anbotek Compliance Laboratory Limited


Address: 1/F., Building D, Sogood Science and Technology Park, Sanwei Community, Hangcheng Street, Bao'an District, Shenzhen, Guangdong, China.
Tel: (86) 0755-26066440 Fax: (86) 0755-26014772 Email: service@anbotek.com

Hotline 400-003-0500
www.anbotek.com.cn




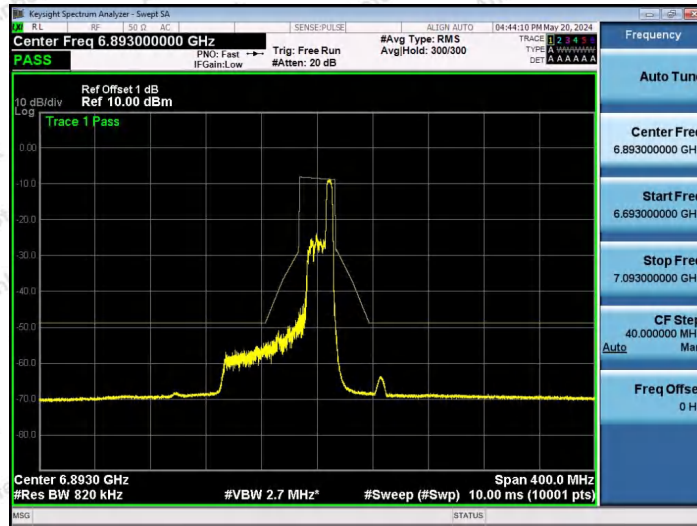

NTNV-11AX80SISO-Ant1-6865-52Tone-RU52-PASS

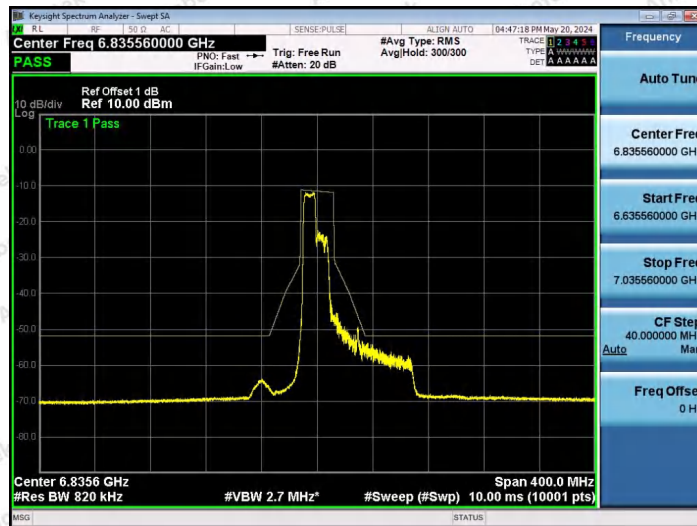

NTNV-11AX80SISO-Ant1-6865-106Tone-RU53-PASS

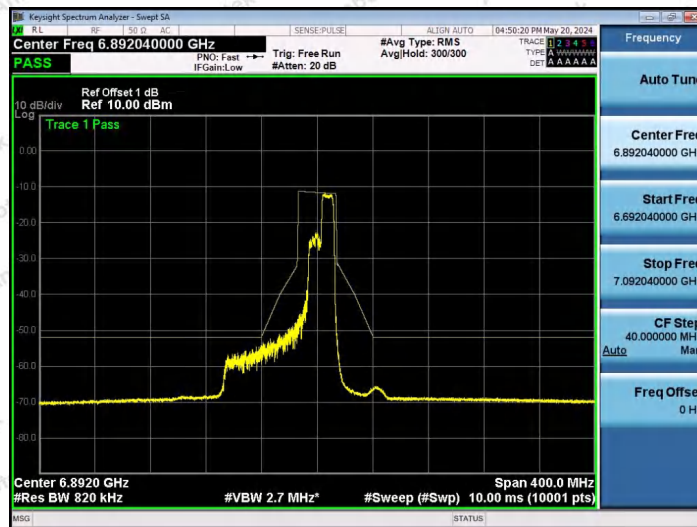


NTNV-11AX80SISO-Ant1-6865-106Tone-RU60-PASS

Shenzhen Anbotek Compliance Laboratory Limited


Address: 1/F., Building D, Sogood Science and Technology Park, Sanwei Community, Hangcheng Street, Bao'an District, Shenzhen, Guangdong, China.
Tel: (86) 0755-26066440 Fax: (86) 0755-26014772 Email: service@anbotek.com

Hotline 400-003-0500
www.anbotek.com.cn




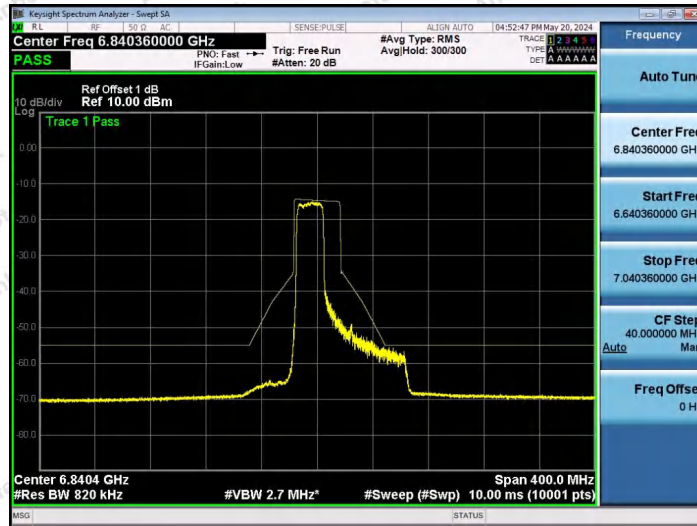

NTNV-11AX80SISO-Ant1-6865-242Tone-RU61-PASS

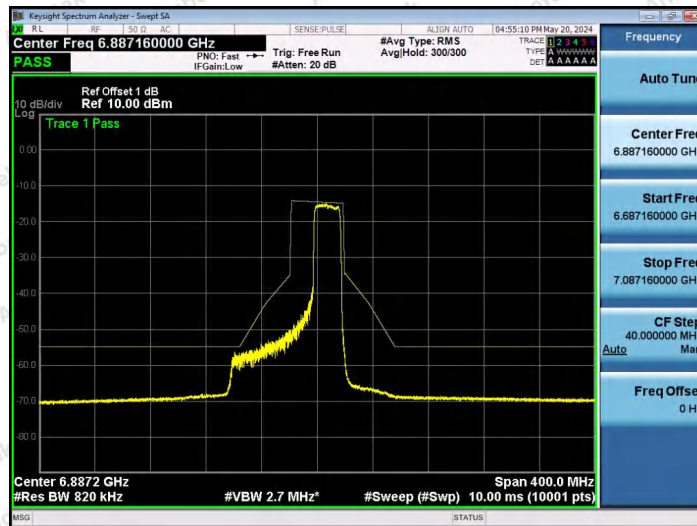

NTNV-11AX80SISO-Ant1-6865-242Tone-RU64-PASS

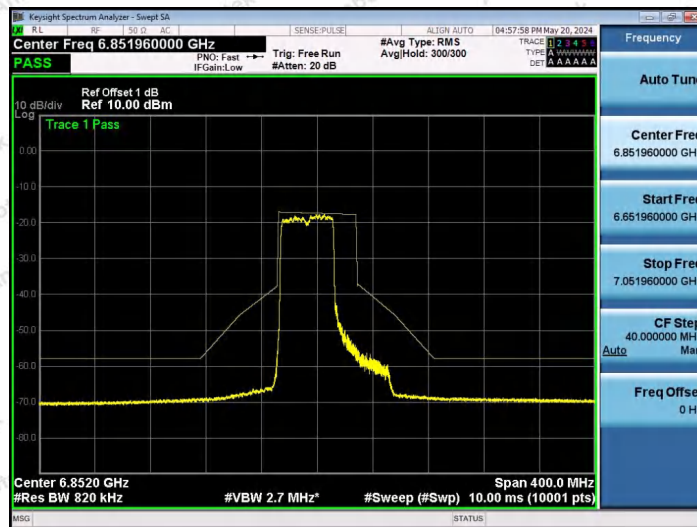


NTNV-11AX80SISO-Ant1-6865-484Tone-RU65-PASS

Shenzhen Anbotek Compliance Laboratory Limited


Address: 1/F., Building D, Sogood Science and Technology Park, Sanwei Community, Hangcheng Street, Bao'an District, Shenzhen, Guangdong, China.
 Tel: (86) 0755-26066440 Fax: (86) 0755-26014772 Email: service@anbotek.com

Hotline 400-003-0500
 www.anbotek.com.cn




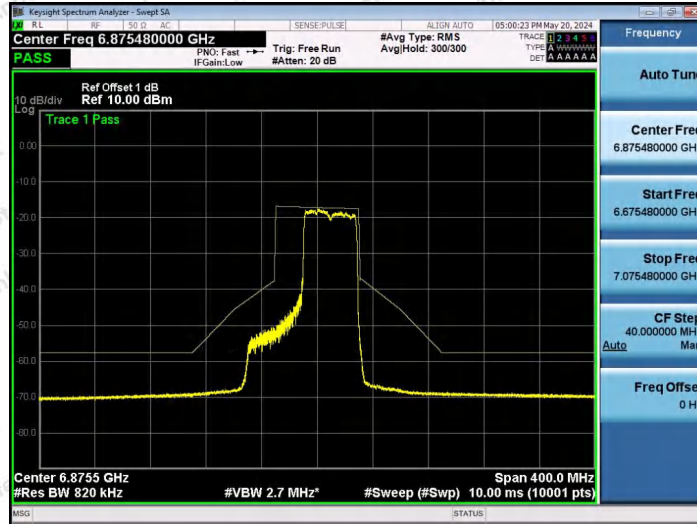

NTNV-11AX80SISO-Ant1-6865-484Tone-RU66-PASS

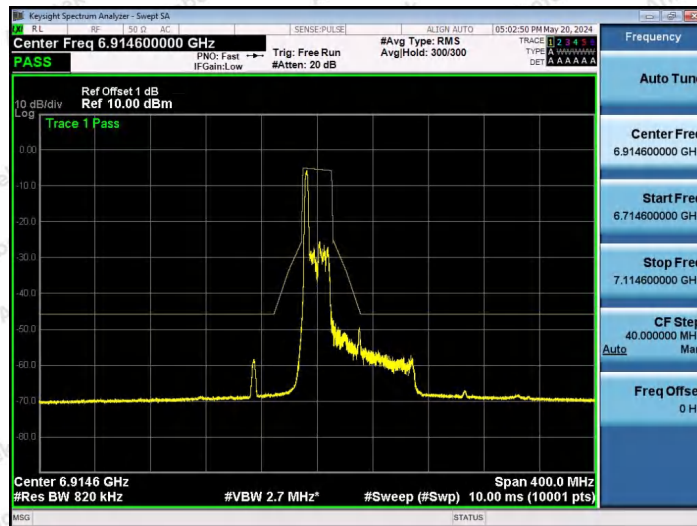

NTNV-11AX80SISO-Ant1-6945-26Tone-RU0-PASS

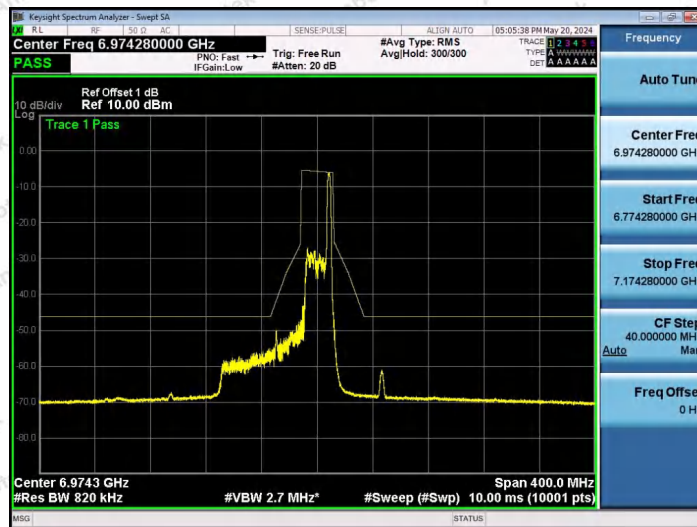


NTNV-11AX80SISO-Ant1-6945-26Tone-RU36-PASS

Shenzhen Anbotek Compliance Laboratory Limited


Address: 1/F., Building D, Sogood Science and Technology Park, Sanwei Community, Hangcheng Street, Bao'an District, Shenzhen, Guangdong, China.
Tel: (86) 0755-26066440 Fax: (86) 0755-26014772 Email: service@anbotek.com

Hotline 400-003-0500
www.anbotek.com.cn




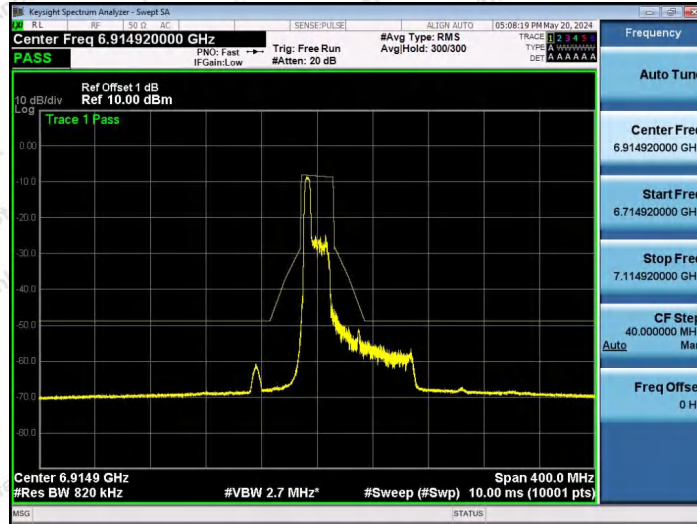

NTNV-11AX80SISO-Ant1-6945-52Tone-RU37-PASS

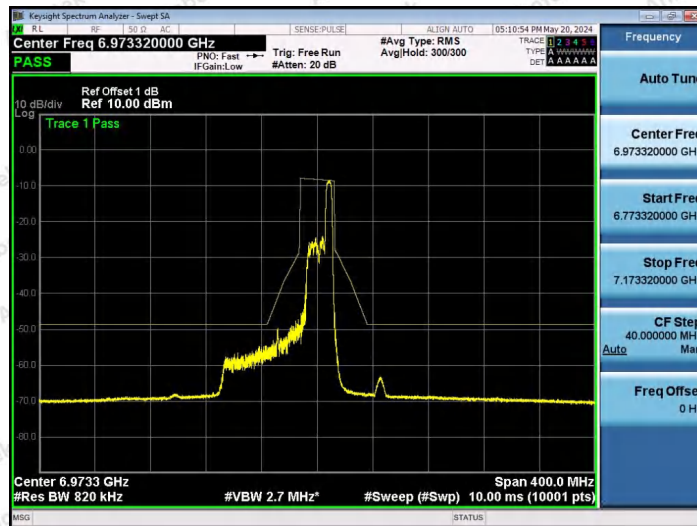

NTNV-11AX80SISO-Ant1-6945-52Tone-RU52-PASS

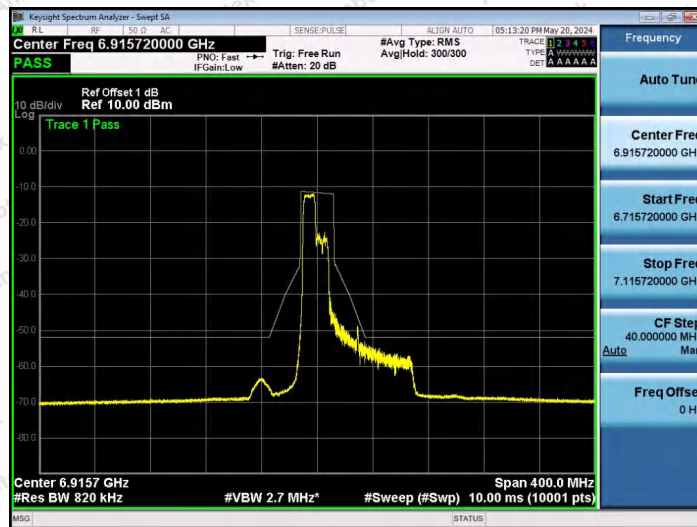


NTNV-11AX80SISO-Ant1-6945-106Tone-RU53-PASS

Shenzhen Anbotek Compliance Laboratory Limited


Address: 1/F., Building D, Sogood Science and Technology Park, Sanwei Community, Hangcheng Street, Bao'an District, Shenzhen, Guangdong, China.
Tel: (86) 0755-26066440 Fax: (86) 0755-26014772 Email: service@anbotek.com

Hotline 400-003-0500
www.anbotek.com.cn




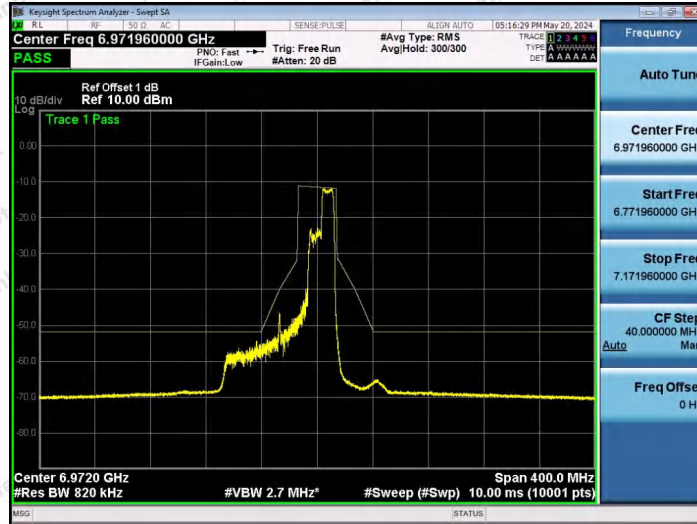

NTNV-11AX80SISO-Ant1-6945-106Tone-RU60-PASS

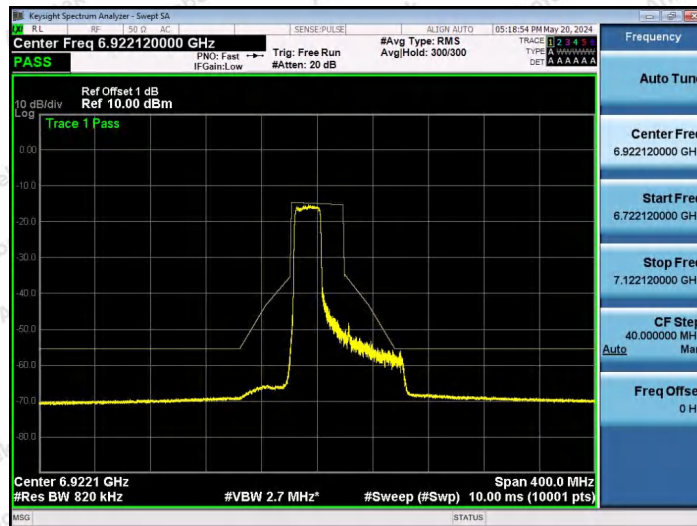

NTNV-11AX80SISO-Ant1-6945-242Tone-RU61-PASS

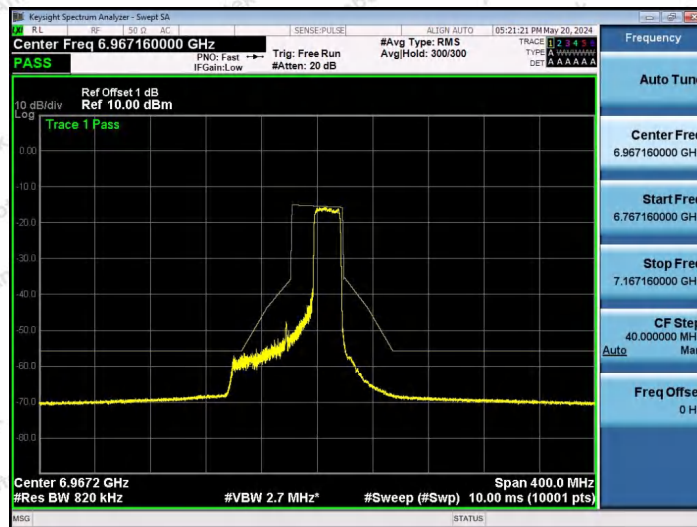


NTNV-11AX80SISO-Ant1-6945-242Tone-RU64-PASS

Shenzhen Anbotek Compliance Laboratory Limited


Address: 1/F., Building D, Sogood Science and Technology Park, Sanwei Community, Hangcheng Street, Bao'an District, Shenzhen, Guangdong, China.
Tel: (86) 0755-26066440 Fax: (86) 0755-26014772 Email: service@anbotek.com

Hotline 400-003-0500
www.anbotek.com.cn




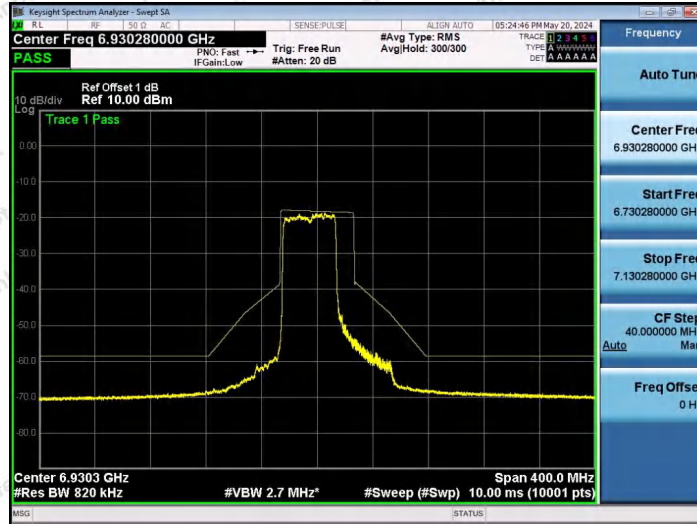

NTNV-11AX80SISO-Ant1-6945-484Tone-RU65-PASS

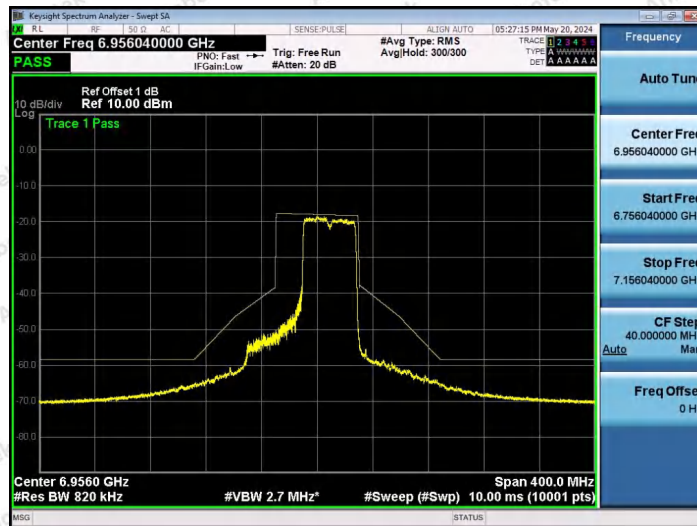

NTNV-11AX80SISO-Ant1-6945-484Tone-RU66-PASS

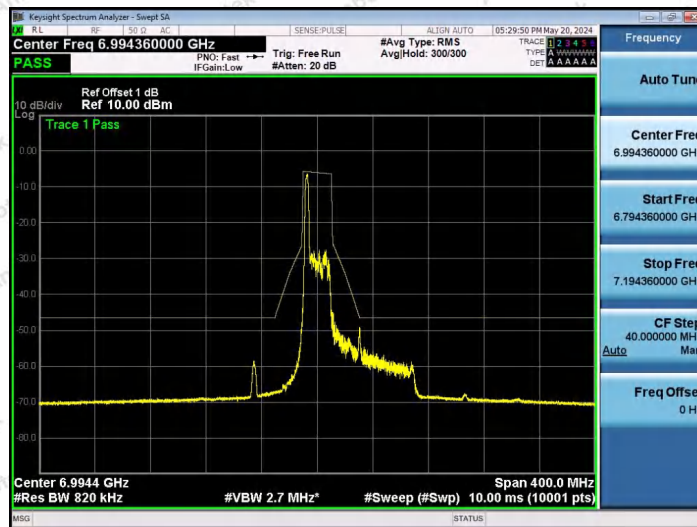


NTNV-11AX80SISO-Ant1-7025-26Tone-RU0-PASS

Shenzhen Anbotek Compliance Laboratory Limited


Address: 1/F., Building D, Sogood Science and Technology Park, Sanwei Community, Hangcheng Street, Bao'an District, Shenzhen, Guangdong, China.
Tel: (86) 0755-26066440 Fax: (86) 0755-26014772 Email: service@anbotek.com

Hotline 400-003-0500
www.anbotek.com.cn




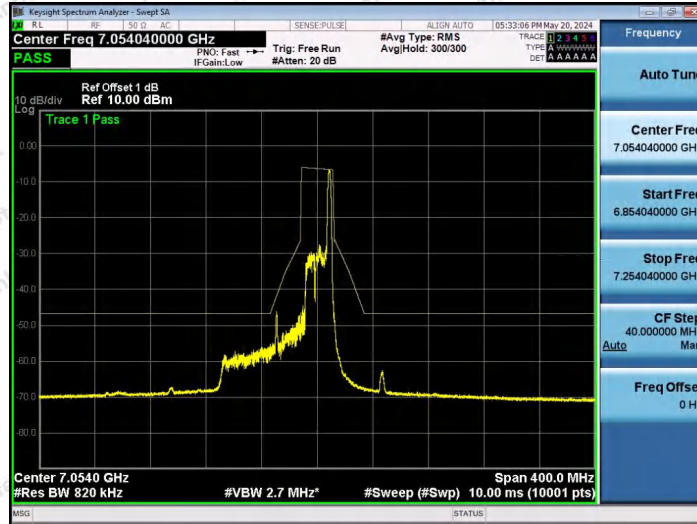

NTNV-11AX80SISO-Ant1-7025-26Tone-RU36-PASS

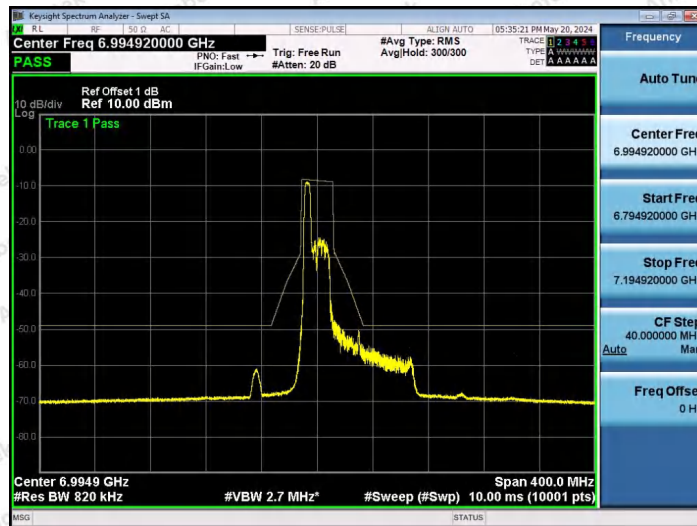

NTNV-11AX80SISO-Ant1-7025-52Tone-RU37-PASS

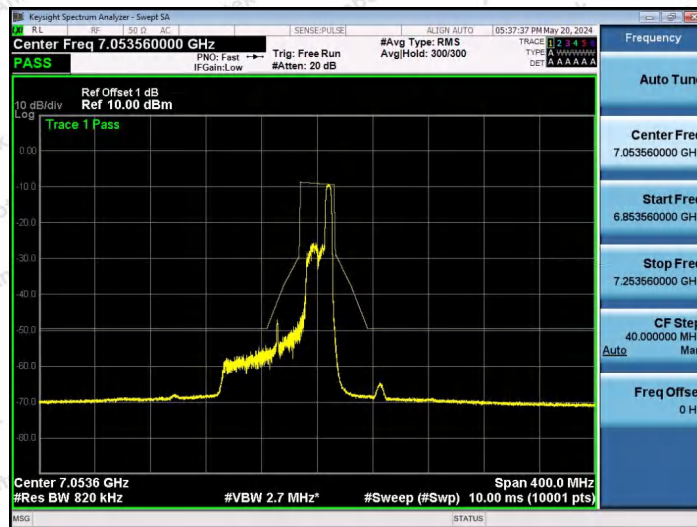


NTNV-11AX80SISO-Ant1-7025-52Tone-RU52-PASS

Shenzhen Anbotek Compliance Laboratory Limited


Address: 1/F., Building D, Sogood Science and Technology Park, Sanwei Community, Hangcheng Street, Bao'an District, Shenzhen, Guangdong, China.
Tel: (86) 0755-26066440 Fax: (86) 0755-26014772 Email: service@anbotek.com

Hotline 400-003-0500
www.anbotek.com.cn




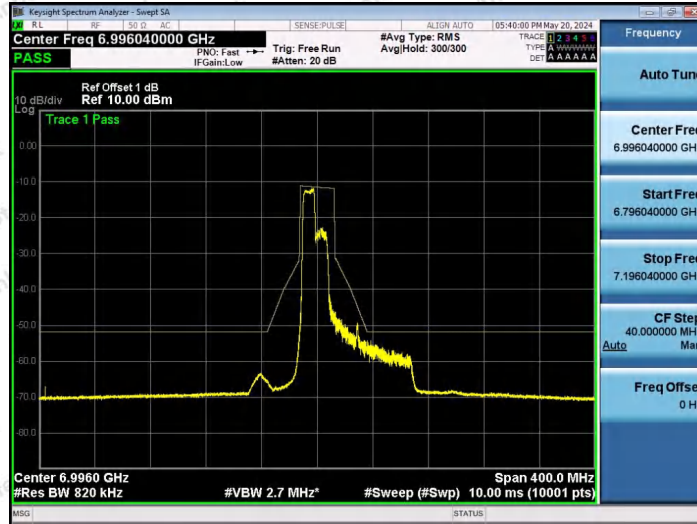

NTVN-11AX80SISO-Ant1-7025-106Tone-RU53-PASS

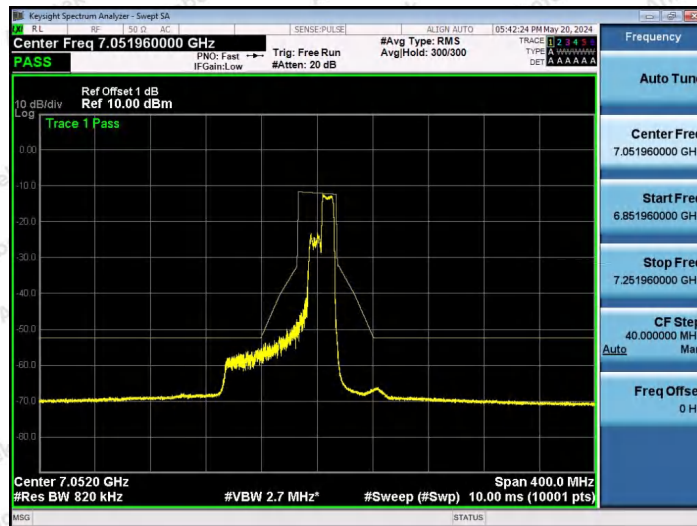

NTVN-11AX80SISO-Ant1-7025-106Tone-RU60-PASS

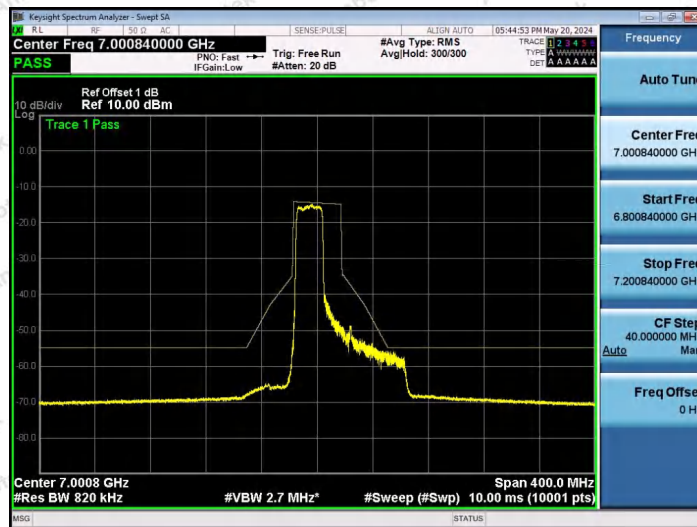


NTVN-11AX80SISO-Ant1-7025-242Tone-RU61-PASS

Shenzhen Anbotek Compliance Laboratory Limited


Address: 1/F., Building D, Sogood Science and Technology Park, Sanwei Community, Hangcheng Street, Bao'an District, Shenzhen, Guangdong, China.
 Tel: (86) 0755-26066440 Fax: (86) 0755-26014772 Email: service@anbotek.com

Hotline 400-003-0500
 www.anbotek.com.cn




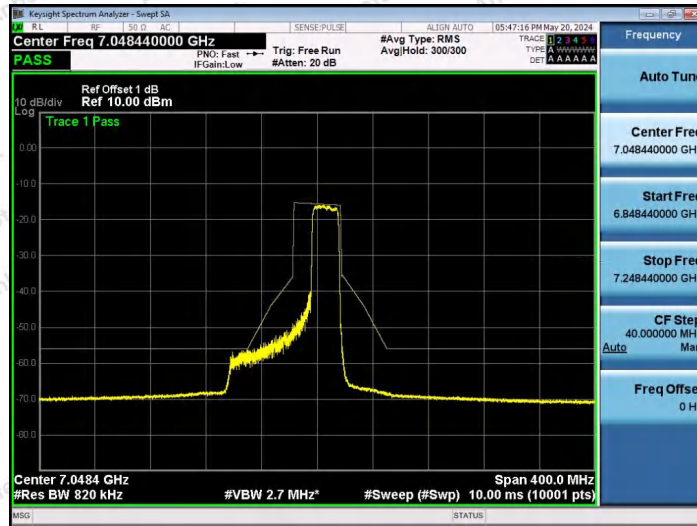

NTNV-11AX80SISO-Ant1-7025-242Tone-RU64-PASS

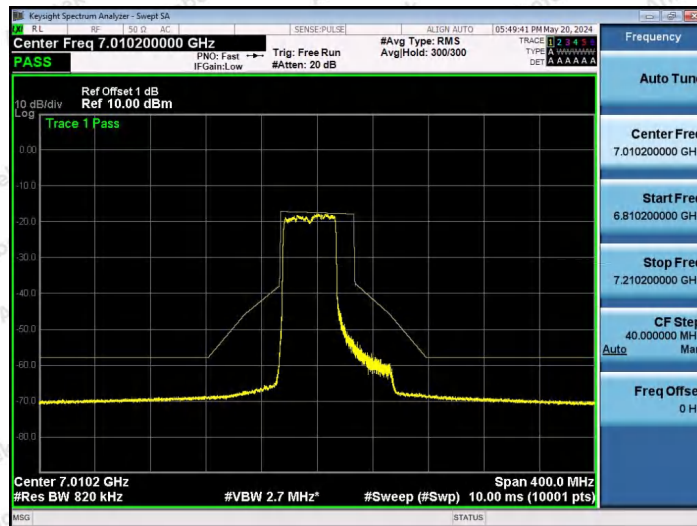

NTNV-11AX80SISO-Ant1-7025-484Tone-RU65-PASS

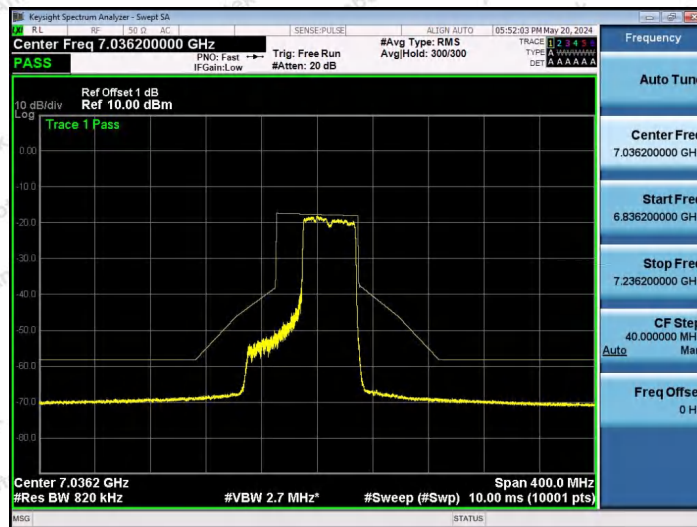

NTNV-11AX80SISO-Ant1-7025-484Tone-RU66-PASS

Shenzhen Anbotek Compliance Laboratory Limited

Address: 1/F., Building D, Sogood Science and Technology Park, Sanwei Community, Hangcheng Street, Bao'an District, Shenzhen, Guangdong, China.
 Tel: (86) 0755-26066440 Fax: (86) 0755-26014772 Email: service@anbotek.com

Hotline 400-003-0500
 www.anbotek.com.cn



Appendix F: Conducted Spurious Emission

Test Result

Test Mode	Antenna	Frequency [MHz]	Ru Size	Ru Index	FreqRange [Mhz]	Max. Fre [MHz]	Max. Level [dBm]	Limit [dBm]	Verdict
11AX20SISO	Ant1	5955	26Tone	RU0	30~3000	2419.76	-47.25	≤-27	PASS
11AX20SISO	Ant1	5955	26Tone	RU4	30~3000	2419.86	-48	≤-27	PASS
11AX20SISO	Ant1	5955	26Tone	RU8	30~3000	2415.5	-48.35	≤-27	PASS
11AX20SISO	Ant1	5955	52Tone	RU37	30~3000	2419.46	-44.76	≤-27	PASS
11AX20SISO	Ant1	5955	52Tone	RU39	30~3000	2418.97	-53.13	≤-27	PASS
11AX20SISO	Ant1	5955	52Tone	RU40	30~3000	2418.87	-48.99	≤-27	PASS
11AX20SISO	Ant1	5955	106Tone	RU53	30~3000	2416.4	-50.97	≤-27	PASS
11AX20SISO	Ant1	5955	106Tone	RU54	30~3000	2419.66	-46.65	≤-27	PASS
11AX20SISO	Ant1	5955	26Tone	RU0	3000~10000	5194.27	-35.23	≤-27	PASS
11AX20SISO	Ant1	5955	26Tone	RU4	3000~10000	5747.73	-52.95	≤-27	PASS
11AX20SISO	Ant1	5955	26Tone	RU8	3000~10000	5182.13	-45.86	≤-27	PASS
11AX20SISO	Ant1	5955	52Tone	RU37	3000~10000	5203.13	-38.32	≤-27	PASS
11AX20SISO	Ant1	5955	52Tone	RU39	3000~10000	5502.5	-53.84	≤-27	PASS
11AX20SISO	Ant1	5955	52Tone	RU40	3000~10000	6328.97	-49.86	≤-27	PASS
11AX20SISO	Ant1	5955	106Tone	RU53	3000~10000	5242.33	-47.55	≤-27	PASS
11AX20SISO	Ant1	5955	106Tone	RU54	3000~10000	5193.1	-38.02	≤-27	PASS
11AX20SISO	Ant1	5955	26Tone	RU0	10000~40000	26484.9	-43.63	≤-27	PASS
11AX20SISO	Ant1	5955	26Tone	RU4	10000~40000	24779.23	-44.08	≤-27	PASS
11AX20SISO	Ant1	5955	26Tone	RU8	10000~40000	25281.3	-44.07	≤-27	PASS
11AX20SISO	Ant1	5955	52Tone	RU37	10000~40000	24370.67	-44.14	≤-27	PASS
11AX20SISO	Ant1	5955	52Tone	RU39	10000~40000	25732.37	-43.76	≤-27	PASS
11AX20SISO	Ant1	5955	52Tone	RU40	10000~40000	24965.1	-44.21	≤-27	PASS
11AX20SISO	Ant1	5955	106Tone	RU53	10000~40000	24353.1	-44.49	≤-27	PASS
11AX20SISO	Ant1	5955	106Tone	RU54	10000~40000	24362.73	-44.03	≤-27	PASS
11AX20SISO	Ant1	6175	26Tone	RU0	30~3000	2420.95	-50.51	≤-27	PASS
11AX20SISO	Ant1	6175	26Tone	RU4	30~3000	826.46	-37.33	≤-27	PASS
11AX20SISO	Ant1	6175	26Tone	RU8	30~3000	2419.37	-51.86	≤-27	PASS
11AX20SISO	Ant1	6175	52Tone	RU37	30~3000	2419.76	-49.32	≤-27	PASS
11AX20SISO	Ant1	6175	52Tone	RU39	30~3000	2419.37	-48.2	≤-27	PASS
11AX20SISO	Ant1	6175	52Tone	RU40	30~3000	2416.69	-46.55	≤-27	PASS
11AX20SISO	Ant1	6175	106Tone	RU53	30~3000	2419.17	-49.74	≤-27	PASS
11AX20SISO	Ant1	6175	106Tone	RU54	30~3000	2416.69	-47.69	≤-27	PASS
11AX20SISO	Ant1	6175	26Tone	RU0	3000~10000	5201.27	-52.06	≤-27	PASS
11AX20SISO	Ant1	6175	26Tone	RU4	3000~10000	5202.9	-32.66	≤-27	PASS
11AX20SISO	Ant1	6175	26Tone	RU8	3000~10000	6305.17	-55.59	≤-27	PASS
11AX20SISO	Ant1	6175	52Tone	RU37	3000~10000	5192.4	-36.17	≤-27	PASS

Shenzhen Anbotek Compliance Laboratory Limited

Address: 1/F., Building D, Sogood Science and Technology Park, Sanwei Community, Hangcheng Street, Bao'an District, Shenzhen, Guangdong, China.
Tel: (86) 0755-26066440 Fax: (86) 0755-26014772 Email: service@anbotek.com

Hotline
400-003-0500
www.anbotek.com.cn



11AX20SISO	Ant1	6175	52Tone	RU39	3000~10000	5193.8	-34.77	≤-27	PASS
11AX20SISO	Ant1	6175	52Tone	RU40	3000~10000	5748.43	-49.77	≤-27	PASS
11AX20SISO	Ant1	6175	106Tone	RU53	3000~10000	5203.6	-48.99	≤-27	PASS
11AX20SISO	Ant1	6175	106Tone	RU54	3000~10000	5219.93	-41.24	≤-27	PASS
11AX20SISO	Ant1	6175	26Tone	RU0	10000~40000	24663.63	-43.56	≤-27	PASS
11AX20SISO	Ant1	6175	26Tone	RU4	10000~40000	25306.8	-44.07	≤-27	PASS
11AX20SISO	Ant1	6175	26Tone	RU8	10000~40000	24753.73	-43.91	≤-27	PASS
11AX20SISO	Ant1	6175	52Tone	RU37	10000~40000	26091.63	-44.11	≤-27	PASS
11AX20SISO	Ant1	6175	52Tone	RU39	10000~40000	24752.6	-44.14	≤-27	PASS
11AX20SISO	Ant1	6175	52Tone	RU40	10000~40000	25297.17	-44.03	≤-27	PASS
11AX20SISO	Ant1	6175	106Tone	RU53	10000~40000	24775.83	-44.21	≤-27	PASS
11AX20SISO	Ant1	6175	106Tone	RU54	10000~40000	24389.93	-44.1	≤-27	PASS
11AX20SISO	Ant1	6415	26Tone	RU0	30~3000	2417.19	-46.5	≤-27	PASS
11AX20SISO	Ant1	6415	26Tone	RU4	30~3000	2416.49	-48.85	≤-27	PASS
11AX20SISO	Ant1	6415	26Tone	RU8	30~3000	2416	-51.14	≤-27	PASS
11AX20SISO	Ant1	6415	52Tone	RU37	30~3000	2416	-47.55	≤-27	PASS
11AX20SISO	Ant1	6415	52Tone	RU39	30~3000	2416.1	-47.98	≤-27	PASS
11AX20SISO	Ant1	6415	52Tone	RU40	30~3000	2416	-47.87	≤-27	PASS
11AX20SISO	Ant1	6415	106Tone	RU53	30~3000	2419.66	-49.65	≤-27	PASS
11AX20SISO	Ant1	6415	106Tone	RU54	30~3000	1737.16	-34.77	≤-27	PASS
11AX20SISO	Ant1	6415	26Tone	RU0	3000~10000	6328.97	-52.6	≤-27	PASS
11AX20SISO	Ant1	6415	26Tone	RU4	3000~10000	5193.33	-34.97	≤-27	PASS
11AX20SISO	Ant1	6415	26Tone	RU8	3000~10000	5193.33	-33.88	≤-27	PASS
11AX20SISO	Ant1	6415	52Tone	RU37	3000~10000	5184	-39.96	≤-27	PASS
11AX20SISO	Ant1	6415	52Tone	RU39	3000~10000	5192.87	-34.24	≤-27	PASS
11AX20SISO	Ant1	6415	52Tone	RU40	3000~10000	5203.6	-29.25	≤-27	PASS
11AX20SISO	Ant1	6415	106Tone	RU53	3000~10000	5193.57	-34.78	≤-27	PASS
11AX20SISO	Ant1	6415	106Tone	RU54	3000~10000	5192.87	-33.62	≤-27	PASS
11AX20SISO	Ant1	6415	26Tone	RU0	10000~40000	25879.7	-44.14	≤-27	PASS
11AX20SISO	Ant1	6415	26Tone	RU4	10000~40000	25813.4	-43.65	≤-27	PASS
11AX20SISO	Ant1	6415	26Tone	RU8	10000~40000	24702.17	-43.98	≤-27	PASS
11AX20SISO	Ant1	6415	52Tone	RU37	10000~40000	24855.17	-43.77	≤-27	PASS
11AX20SISO	Ant1	6415	52Tone	RU39	10000~40000	25030.83	-43.78	≤-27	PASS
11AX20SISO	Ant1	6415	52Tone	RU40	10000~40000	24358.77	-44.33	≤-27	PASS
11AX20SISO	Ant1	6415	106Tone	RU53	10000~40000	25769.2	-44.62	≤-27	PASS
11AX20SISO	Ant1	6415	106Tone	RU54	10000~40000	25605.43	-43.92	≤-27	PASS
11AX20SISO	Ant1	6435	26Tone	RU0	30~3000	2416.3	-53.7	≤-27	PASS
11AX20SISO	Ant1	6435	26Tone	RU4	30~3000	2419.37	-50.65	≤-27	PASS
11AX20SISO	Ant1	6435	26Tone	RU8	30~3000	2416.49	-51.92	≤-27	PASS
11AX20SISO	Ant1	6435	52Tone	RU37	30~3000	2416.3	-48.4	≤-27	PASS
11AX20SISO	Ant1	6435	52Tone	RU39	30~3000	2415.8	-48.55	≤-27	PASS
11AX20SISO	Ant1	6435	52Tone	RU40	30~3000	2420.65	-55.23	≤-27	PASS

Shenzhen Anbotek Compliance Laboratory Limited

Address: 1/F., Building D, Sogood Science and Technology Park, Sanwei Community, Hangcheng Street, Bao'an District, Shenzhen, Guangdong, China.
Tel: (86) 0755-26066440 Fax: (86) 0755-26014772 Email: service@anbotek.com

Hotline
400-003-0500
www.anbotek.com.cn



11AX20SISO	Ant1	6435	106Tone	RU53	30~3000	2416.49	-48.58	≤-27	PASS
11AX20SISO	Ant1	6435	106Tone	RU54	30~3000	2415.5	-46.89	≤-27	PASS
11AX20SISO	Ant1	6435	26Tone	RU0	3000~10000	5193.1	-34.28	≤-27	PASS
11AX20SISO	Ant1	6435	26Tone	RU4	3000~10000	5492.93	-54.78	≤-27	PASS
11AX20SISO	Ant1	6435	26Tone	RU8	3000~10000	5185.63	-44.34	≤-27	PASS
11AX20SISO	Ant1	6435	52Tone	RU37	3000~10000	5195.43	-48.09	≤-27	PASS
11AX20SISO	Ant1	6435	52Tone	RU39	3000~10000	5193.33	-35.1	≤-27	PASS
11AX20SISO	Ant1	6435	52Tone	RU40	3000~10000	5180.5	-45.98	≤-27	PASS
11AX20SISO	Ant1	6435	106Tone	RU53	3000~10000	5885.63	-55.5	≤-27	PASS
11AX20SISO	Ant1	6435	106Tone	RU54	3000~10000	5193.57	-36	≤-27	PASS
11AX20SISO	Ant1	6435	26Tone	RU0	10000~40000	24698.77	-44.42	≤-27	PASS
11AX20SISO	Ant1	6435	26Tone	RU4	10000~40000	24374.07	-43.77	≤-27	PASS
11AX20SISO	Ant1	6435	26Tone	RU8	10000~40000	25335.13	-44.33	≤-27	PASS
11AX20SISO	Ant1	6435	52Tone	RU37	10000~40000	24404.67	-44.07	≤-27	PASS
11AX20SISO	Ant1	6435	52Tone	RU39	10000~40000	24710.67	-44.06	≤-27	PASS
11AX20SISO	Ant1	6435	52Tone	RU40	10000~40000	24758.27	-44.42	≤-27	PASS
11AX20SISO	Ant1	6435	106Tone	RU53	10000~40000	24771.3	-44.46	≤-27	PASS
11AX20SISO	Ant1	6435	106Tone	RU54	10000~40000	24762.23	-43.1	≤-27	PASS
11AX20SISO	Ant1	6475	26Tone	RU0	30~3000	2416.2	-50.58	≤-27	PASS
11AX20SISO	Ant1	6475	26Tone	RU4	30~3000	2419.56	-46.14	≤-27	PASS
11AX20SISO	Ant1	6475	26Tone	RU8	30~3000	2417.88	-51.94	≤-27	PASS
11AX20SISO	Ant1	6475	52Tone	RU37	30~3000	2415.7	-50.71	≤-27	PASS
11AX20SISO	Ant1	6475	52Tone	RU39	30~3000	2416.99	-47.19	≤-27	PASS
11AX20SISO	Ant1	6475	52Tone	RU40	30~3000	2416.49	-43.74	≤-27	PASS
11AX20SISO	Ant1	6475	106Tone	RU53	30~3000	2416.4	-46.82	≤-27	PASS
11AX20SISO	Ant1	6475	106Tone	RU54	30~3000	2416	-51.28	≤-27	PASS
11AX20SISO	Ant1	6475	26Tone	RU0	3000~10000	6568.13	-53.04	≤-27	PASS
11AX20SISO	Ant1	6475	26Tone	RU4	3000~10000	5744.93	-48.39	≤-27	PASS
11AX20SISO	Ant1	6475	26Tone	RU8	3000~10000	5201.73	-55.68	≤-27	PASS
11AX20SISO	Ant1	6475	52Tone	RU37	3000~10000	5200.33	-53.28	≤-27	PASS
11AX20SISO	Ant1	6475	52Tone	RU39	3000~10000	5743.07	-47.8	≤-27	PASS
11AX20SISO	Ant1	6475	52Tone	RU40	3000~10000	5245.37	-50.13	≤-27	PASS
11AX20SISO	Ant1	6475	106Tone	RU53	3000~10000	5835	-55.38	≤-27	PASS
11AX20SISO	Ant1	6475	106Tone	RU54	3000~10000	5743.3	-50.09	≤-27	PASS
11AX20SISO	Ant1	6475	26Tone	RU0	10000~40000	24722	-43.8	≤-27	PASS
11AX20SISO	Ant1	6475	26Tone	RU4	10000~40000	24396.73	-44.24	≤-27	PASS
11AX20SISO	Ant1	6475	26Tone	RU8	10000~40000	24707.83	-44.2	≤-27	PASS
11AX20SISO	Ant1	6475	52Tone	RU37	10000~40000	25872.9	-43.52	≤-27	PASS
11AX20SISO	Ant1	6475	52Tone	RU39	10000~40000	24717.47	-44.3	≤-27	PASS
11AX20SISO	Ant1	6475	52Tone	RU40	10000~40000	26002.1	-43.78	≤-27	PASS
11AX20SISO	Ant1	6475	106Tone	RU53	10000~40000	24740.13	-44.26	≤-27	PASS
11AX20SISO	Ant1	6475	106Tone	RU54	10000~40000	26039.5	-43.71	≤-27	PASS

Shenzhen Anbotek Compliance Laboratory Limited

Address: 1/F., Building D, Sogood Science and Technology Park, Sanwei Community, Hangcheng Street, Bao'an District, Shenzhen, Guangdong, China.
Tel: (86) 0755-26066440 Fax: (86) 0755-26014772 Email: service@anbotek.com

Hotline
400-003-0500
www.anbotek.com.cn



11AX20SISO	Ant1	6515	26Tone	RU0	30~3000	2419.07	-46.81	≤-27	PASS
11AX20SISO	Ant1	6515	26Tone	RU4	30~3000	2416.79	-47.3	≤-27	PASS
11AX20SISO	Ant1	6515	26Tone	RU8	30~3000	2417.58	-48.34	≤-27	PASS
11AX20SISO	Ant1	6515	52Tone	RU37	30~3000	2416.4	-46.26	≤-27	PASS
11AX20SISO	Ant1	6515	52Tone	RU39	30~3000	2415.11	-49.46	≤-27	PASS
11AX20SISO	Ant1	6515	52Tone	RU40	30~3000	2416.49	-44.55	≤-27	PASS
11AX20SISO	Ant1	6515	106Tone	RU53	30~3000	2416.4	-49.65	≤-27	PASS
11AX20SISO	Ant1	6515	106Tone	RU54	30~3000	2416	-52.31	≤-27	PASS
11AX20SISO	Ant1	6515	26Tone	RU0	3000~10000	6595.43	-55.16	≤-27	PASS
11AX20SISO	Ant1	6515	26Tone	RU4	3000~10000	5203.37	-44.47	≤-27	PASS
11AX20SISO	Ant1	6515	26Tone	RU8	3000~10000	5201.73	-35.42	≤-27	PASS
11AX20SISO	Ant1	6515	52Tone	RU37	3000~10000	6280.2	-55.96	≤-27	PASS
11AX20SISO	Ant1	6515	52Tone	RU39	3000~10000	5179.33	-46.92	≤-27	PASS
11AX20SISO	Ant1	6515	52Tone	RU40	3000~10000	5194.03	-34.64	≤-27	PASS
11AX20SISO	Ant1	6515	106Tone	RU53	3000~10000	5507.17	-50.76	≤-27	PASS
11AX20SISO	Ant1	6515	106Tone	RU54	3000~10000	5748.43	-50.31	≤-27	PASS
11AX20SISO	Ant1	6515	26Tone	RU0	10000~40000	25746.53	-44.26	≤-27	PASS
11AX20SISO	Ant1	6515	26Tone	RU4	10000~40000	24777.53	-44.17	≤-27	PASS
11AX20SISO	Ant1	6515	26Tone	RU8	10000~40000	24871.6	-44.36	≤-27	PASS
11AX20SISO	Ant1	6515	52Tone	RU37	10000~40000	24661.37	-43.6	≤-27	PASS
11AX20SISO	Ant1	6515	52Tone	RU39	10000~40000	25282.43	-44.22	≤-27	PASS
11AX20SISO	Ant1	6515	52Tone	RU40	10000~40000	25942.03	-44.1	≤-27	PASS
11AX20SISO	Ant1	6515	106Tone	RU53	10000~40000	24363.87	-43.54	≤-27	PASS
11AX20SISO	Ant1	6515	106Tone	RU54	10000~40000	25761.27	-43.78	≤-27	PASS
11AX20SISO	Ant1	6535	26Tone	RU0	30~3000	1757.65	-34.8	≤-27	PASS
11AX20SISO	Ant1	6535	26Tone	RU4	30~3000	2416.3	-53.08	≤-27	PASS
11AX20SISO	Ant1	6535	26Tone	RU8	30~3000	2420.85	-52.45	≤-27	PASS
11AX20SISO	Ant1	6535	52Tone	RU37	30~3000	2471.84	-56.41	≤-27	PASS
11AX20SISO	Ant1	6535	52Tone	RU39	30~3000	2416	-50.01	≤-27	PASS
11AX20SISO	Ant1	6535	52Tone	RU40	30~3000	2426.59	-52.52	≤-27	PASS
11AX20SISO	Ant1	6535	106Tone	RU53	30~3000	2434.81	-52.36	≤-27	PASS
11AX20SISO	Ant1	6535	106Tone	RU54	30~3000	2419.37	-50.96	≤-27	PASS
11AX20SISO	Ant1	6535	26Tone	RU0	3000~10000	5196.6	-50.09	≤-27	PASS
11AX20SISO	Ant1	6535	26Tone	RU4	3000~10000	3425.6	-55.99	≤-27	PASS
11AX20SISO	Ant1	6535	26Tone	RU8	3000~10000	5085.3	-56.46	≤-27	PASS
11AX20SISO	Ant1	6535	52Tone	RU37	3000~10000	5230.43	-52.53	≤-27	PASS
11AX20SISO	Ant1	6535	52Tone	RU39	3000~10000	5202.43	-37.88	≤-27	PASS
11AX20SISO	Ant1	6535	52Tone	RU40	3000~10000	5253.77	-48.56	≤-27	PASS
11AX20SISO	Ant1	6535	106Tone	RU53	3000~10000	6054.57	-56.32	≤-27	PASS
11AX20SISO	Ant1	6535	106Tone	RU54	3000~10000	6658.9	-54.53	≤-27	PASS
11AX20SISO	Ant1	6535	26Tone	RU0	10000~40000	24746.37	-43.82	≤-27	PASS
11AX20SISO	Ant1	6535	26Tone	RU4	10000~40000	24609.23	-43.93	≤-27	PASS

Shenzhen Anbotek Compliance Laboratory Limited

Address: 1/F., Building D, Sogood Science and Technology Park, Sanwei Community, Hangcheng Street, Bao'an District, Shenzhen, Guangdong, China.
Tel: (86) 0755-26066440 Fax: (86) 0755-26014772 Email: service@anbotek.com

Hotline
400-003-0500
www.anbotek.com.cn



11AX20SISO	Ant1	6535	26Tone	RU8	10000~40000	25663.23	-44.37	≤-27	PASS
11AX20SISO	Ant1	6535	52Tone	RU37	10000~40000	25841.73	-43.49	≤-27	PASS
11AX20SISO	Ant1	6535	52Tone	RU39	10000~40000	24806.43	-43.99	≤-27	PASS
11AX20SISO	Ant1	6535	52Tone	RU40	10000~40000	24733.9	-43.67	≤-27	PASS
11AX20SISO	Ant1	6535	106Tone	RU53	10000~40000	25952.8	-44.26	≤-27	PASS
11AX20SISO	Ant1	6535	106Tone	RU54	10000~40000	25276.2	-44.18	≤-27	PASS
11AX20SISO	Ant1	6695	26Tone	RU0	30~3000	2416	-49.53	≤-27	PASS
11AX20SISO	Ant1	6695	26Tone	RU4	30~3000	2415.9	-51.81	≤-27	PASS
11AX20SISO	Ant1	6695	26Tone	RU8	30~3000	2416	-42.94	≤-27	PASS
11AX20SISO	Ant1	6695	52Tone	RU37	30~3000	2417.78	-43.3	≤-27	PASS
11AX20SISO	Ant1	6695	52Tone	RU39	30~3000	2420.45	-49.53	≤-27	PASS
11AX20SISO	Ant1	6695	52Tone	RU40	30~3000	2416.59	-49.59	≤-27	PASS
11AX20SISO	Ant1	6695	106Tone	RU53	30~3000	2419.37	-47.05	≤-27	PASS
11AX20SISO	Ant1	6695	106Tone	RU54	30~3000	2419.27	-45.79	≤-27	PASS
11AX20SISO	Ant1	6695	26Tone	RU0	3000~10000	5507.87	-51.89	≤-27	PASS
11AX20SISO	Ant1	6695	26Tone	RU4	3000~10000	6945.67	-56.46	≤-27	PASS
11AX20SISO	Ant1	6695	26Tone	RU8	3000~10000	5192.87	-40.26	≤-27	PASS
11AX20SISO	Ant1	6695	52Tone	RU37	3000~10000	6388.47	-55.15	≤-27	PASS
11AX20SISO	Ant1	6695	52Tone	RU39	3000~10000	5180.03	-44.87	≤-27	PASS
11AX20SISO	Ant1	6695	52Tone	RU40	3000~10000	5201.97	-35.65	≤-27	PASS
11AX20SISO	Ant1	6695	106Tone	RU53	3000~10000	5762.67	-56.08	≤-27	PASS
11AX20SISO	Ant1	6695	106Tone	RU54	3000~10000	5901.73	-56.29	≤-27	PASS
11AX20SISO	Ant1	6695	26Tone	RU0	10000~40000	25857.6	-43.82	≤-27	PASS
11AX20SISO	Ant1	6695	26Tone	RU4	10000~40000	24951.5	-44.28	≤-27	PASS
11AX20SISO	Ant1	6695	26Tone	RU8	10000~40000	25281.3	-44.24	≤-27	PASS
11AX20SISO	Ant1	6695	52Tone	RU37	10000~40000	24430.73	-44.43	≤-27	PASS
11AX20SISO	Ant1	6695	52Tone	RU39	10000~40000	24702.17	-44.6	≤-27	PASS
11AX20SISO	Ant1	6695	52Tone	RU40	10000~40000	24744.67	-43.9	≤-27	PASS
11AX20SISO	Ant1	6695	106Tone	RU53	10000~40000	24675.53	-43.61	≤-27	PASS
11AX20SISO	Ant1	6695	106Tone	RU54	10000~40000	24360.47	-43	≤-27	PASS
11AX20SISO	Ant1	6875	26Tone	RU0	30~3000	910.01	-39.71	≤-27	PASS
11AX20SISO	Ant1	6875	26Tone	RU4	30~3000	2474.31	-54.98	≤-27	PASS
11AX20SISO	Ant1	6875	26Tone	RU8	30~3000	2416.49	-51.22	≤-27	PASS
11AX20SISO	Ant1	6875	52Tone	RU37	30~3000	2419.27	-49.25	≤-27	PASS
11AX20SISO	Ant1	6875	52Tone	RU39	30~3000	2419.27	-48.23	≤-27	PASS
11AX20SISO	Ant1	6875	52Tone	RU40	30~3000	2416.89	-54.48	≤-27	PASS
11AX20SISO	Ant1	6875	106Tone	RU53	30~3000	2414.12	-53.42	≤-27	PASS
11AX20SISO	Ant1	6875	106Tone	RU54	30~3000	2321.85	-48.56	≤-27	PASS
11AX20SISO	Ant1	6875	26Tone	RU0	3000~10000	6786.77	-56.7	≤-27	PASS
11AX20SISO	Ant1	6875	26Tone	RU4	3000~10000	5245.13	-50.11	≤-27	PASS
11AX20SISO	Ant1	6875	26Tone	RU8	3000~10000	5798.6	-56.05	≤-27	PASS
11AX20SISO	Ant1	6875	52Tone	RU37	3000~10000	5208.27	-50.43	≤-27	PASS

Shenzhen Anbotek Compliance Laboratory Limited

Address: 1/F., Building D, Sogood Science and Technology Park, Sanwei Community, Hangcheng Street, Bao'an District, Shenzhen, Guangdong, China.
 Tel: (86) 0755-26066440 Fax: (86) 0755-26014772 Email: service@anbotek.com

Hotline
 400-003-0500
 www.anbotek.com.cn



11AX20SISO	Ant1	6875	52Tone	RU39	3000~10000	5494.8	-52.45	≤-27	PASS
11AX20SISO	Ant1	6875	52Tone	RU40	3000~10000	5751	-49.43	≤-27	PASS
11AX20SISO	Ant1	6875	106Tone	RU53	3000~10000	5246.77	-49.23	≤-27	PASS
11AX20SISO	Ant1	6875	106Tone	RU54	3000~10000	5193.1	-36.68	≤-27	PASS
11AX20SISO	Ant1	6875	26Tone	RU0	10000~40000	25790.73	-44.37	≤-27	PASS
11AX20SISO	Ant1	6875	26Tone	RU4	10000~40000	24948.1	-44.45	≤-27	PASS
11AX20SISO	Ant1	6875	26Tone	RU8	10000~40000	25732.37	-44.1	≤-27	PASS
11AX20SISO	Ant1	6875	52Tone	RU37	10000~40000	25758.43	-44.01	≤-27	PASS
11AX20SISO	Ant1	6875	52Tone	RU39	10000~40000	24387.1	-43.7	≤-27	PASS
11AX20SISO	Ant1	6875	52Tone	RU40	10000~40000	24952.63	-43.24	≤-27	PASS
11AX20SISO	Ant1	6875	106Tone	RU53	10000~40000	25842.87	-43.82	≤-27	PASS
11AX20SISO	Ant1	6875	106Tone	RU54	10000~40000	24393.33	-44.35	≤-27	PASS
11AX20SISO	Ant1	6895	26Tone	RU0	30~3000	2419.17	-43.89	≤-27	PASS
11AX20SISO	Ant1	6895	26Tone	RU4	30~3000	2418.87	-51.22	≤-27	PASS
11AX20SISO	Ant1	6895	26Tone	RU8	30~3000	2418.87	-49.62	≤-27	PASS
11AX20SISO	Ant1	6895	52Tone	RU37	30~3000	2417.09	-49.53	≤-27	PASS
11AX20SISO	Ant1	6895	52Tone	RU39	30~3000	2413.92	-49.93	≤-27	PASS
11AX20SISO	Ant1	6895	52Tone	RU40	30~3000	1755.08	-40.37	≤-27	PASS
11AX20SISO	Ant1	6895	106Tone	RU53	30~3000	2419.37	-48.12	≤-27	PASS
11AX20SISO	Ant1	6895	106Tone	RU54	30~3000	2414.22	-49.98	≤-27	PASS
11AX20SISO	Ant1	6895	26Tone	RU0	3000~10000	5202.43	-53.17	≤-27	PASS
11AX20SISO	Ant1	6895	26Tone	RU4	3000~10000	5180.27	-49.27	≤-27	PASS
11AX20SISO	Ant1	6895	26Tone	RU8	3000~10000	5744.23	-50.42	≤-27	PASS
11AX20SISO	Ant1	6895	52Tone	RU37	3000~10000	5192.87	-36.28	≤-27	PASS
11AX20SISO	Ant1	6895	52Tone	RU39	3000~10000	5202.67	-46.12	≤-27	PASS
11AX20SISO	Ant1	6895	52Tone	RU40	3000~10000	5193.57	-39.79	≤-27	PASS
11AX20SISO	Ant1	6895	106Tone	RU53	3000~10000	5737.7	-54.11	≤-27	PASS
11AX20SISO	Ant1	6895	106Tone	RU54	3000~10000	5202.2	-38.01	≤-27	PASS
11AX20SISO	Ant1	6895	26Tone	RU0	10000~40000	24994	-44.46	≤-27	PASS
11AX20SISO	Ant1	6895	26Tone	RU4	10000~40000	25851.93	-43.34	≤-27	PASS
11AX20SISO	Ant1	6895	26Tone	RU8	10000~40000	25787.33	-44.38	≤-27	PASS
11AX20SISO	Ant1	6895	52Tone	RU37	10000~40000	24388.8	-43.99	≤-27	PASS
11AX20SISO	Ant1	6895	52Tone	RU39	10000~40000	24702.73	-44.28	≤-27	PASS
11AX20SISO	Ant1	6895	52Tone	RU40	10000~40000	24704.43	-44.28	≤-27	PASS
11AX20SISO	Ant1	6895	106Tone	RU53	10000~40000	25774.3	-43.97	≤-27	PASS
11AX20SISO	Ant1	6895	106Tone	RU54	10000~40000	24752.03	-44.09	≤-27	PASS
11AX20SISO	Ant1	7015	26Tone	RU0	30~3000	2419.66	-51.82	≤-27	PASS
11AX20SISO	Ant1	7015	26Tone	RU4	30~3000	2416.2	-48.22	≤-27	PASS
11AX20SISO	Ant1	7015	26Tone	RU8	30~3000	2417.19	-45.53	≤-27	PASS
11AX20SISO	Ant1	7015	52Tone	RU37	30~3000	2416.1	-53.67	≤-27	PASS
11AX20SISO	Ant1	7015	52Tone	RU39	30~3000	2414.91	-53.44	≤-27	PASS
11AX20SISO	Ant1	7015	52Tone	RU40	30~3000	2418.77	-50.82	≤-27	PASS

Shenzhen Anbotek Compliance Laboratory Limited

Address: 1/F., Building D, Sogood Science and Technology Park, Sanwei Community, Hangcheng Street, Bao'an District, Shenzhen, Guangdong, China.
 Tel: (86) 0755-26066440 Fax: (86) 0755-26014772 Email: service@anbotek.com

Hotline
 400-003-0500
www.anbotek.com.cn



11AX20SISO	Ant1	7015	106Tone	RU53	30~3000	2417.19	-49.76	≤-27	PASS
11AX20SISO	Ant1	7015	106Tone	RU54	30~3000	2417.78	-48.01	≤-27	PASS
11AX20SISO	Ant1	7015	26Tone	RU0	3000~10000	5191.23	-52.66	≤-27	PASS
11AX20SISO	Ant1	7015	26Tone	RU4	3000~10000	6320.8	-54.31	≤-27	PASS
11AX20SISO	Ant1	7015	26Tone	RU8	3000~10000	7104.8	-56.32	≤-27	PASS
11AX20SISO	Ant1	7015	52Tone	RU37	3000~10000	5749.6	-49.84	≤-27	PASS
11AX20SISO	Ant1	7015	52Tone	RU39	3000~10000	5739.57	-49.33	≤-27	PASS
11AX20SISO	Ant1	7015	52Tone	RU40	3000~10000	5193.8	-33.8	≤-27	PASS
11AX20SISO	Ant1	7015	106Tone	RU53	3000~10000	6718.63	-56.18	≤-27	PASS
11AX20SISO	Ant1	7015	106Tone	RU54	3000~10000	5193.1	-33.02	≤-27	PASS
11AX20SISO	Ant1	7015	26Tone	RU0	10000~40000	24323.63	-44.06	≤-27	PASS
11AX20SISO	Ant1	7015	26Tone	RU4	10000~40000	25913.13	-44.43	≤-27	PASS
11AX20SISO	Ant1	7015	26Tone	RU8	10000~40000	25727.27	-44.22	≤-27	PASS
11AX20SISO	Ant1	7015	52Tone	RU37	10000~40000	24793.97	-43.81	≤-27	PASS
11AX20SISO	Ant1	7015	52Tone	RU39	10000~40000	25916.53	-43.57	≤-27	PASS
11AX20SISO	Ant1	7015	52Tone	RU40	10000~40000	25891.6	-41.77	≤-27	PASS
11AX20SISO	Ant1	7015	106Tone	RU53	10000~40000	24708.4	-43.87	≤-27	PASS
11AX20SISO	Ant1	7015	106Tone	RU54	10000~40000	24406.93	-43.46	≤-27	PASS
11AX20SISO	Ant1	7115	26Tone	RU0	30~3000	2418.67	-45.08	≤-27	PASS
11AX20SISO	Ant1	7115	26Tone	RU4	30~3000	2419.46	-47.96	≤-27	PASS
11AX20SISO	Ant1	7115	26Tone	RU8	30~3000	2419.46	-50.27	≤-27	PASS
11AX20SISO	Ant1	7115	52Tone	RU37	30~3000	2418.87	-49.25	≤-27	PASS
11AX20SISO	Ant1	7115	52Tone	RU39	30~3000	1736.96	-39.12	≤-27	PASS
11AX20SISO	Ant1	7115	52Tone	RU40	30~3000	2415.8	-45.62	≤-27	PASS
11AX20SISO	Ant1	7115	106Tone	RU53	30~3000	2795.66	-56.08	≤-27	PASS
11AX20SISO	Ant1	7115	106Tone	RU54	30~3000	2416.3	-46.87	≤-27	PASS
11AX20SISO	Ant1	7115	26Tone	RU0	3000~10000	5735.6	-56.14	≤-27	PASS
11AX20SISO	Ant1	7115	26Tone	RU4	3000~10000	6289.77	-54.17	≤-27	PASS
11AX20SISO	Ant1	7115	26Tone	RU8	3000~10000	5193.33	-35.35	≤-27	PASS
11AX20SISO	Ant1	7115	52Tone	RU37	3000~10000	5205.7	-36.8	≤-27	PASS
11AX20SISO	Ant1	7115	52Tone	RU39	3000~10000	5507.4	-50.72	≤-27	PASS
11AX20SISO	Ant1	7115	52Tone	RU40	3000~10000	5742.6	-51.19	≤-27	PASS
11AX20SISO	Ant1	7115	106Tone	RU53	3000~10000	5743.3	-54.08	≤-27	PASS
11AX20SISO	Ant1	7115	106Tone	RU54	3000~10000	5192.87	-36.73	≤-27	PASS
11AX20SISO	Ant1	7115	26Tone	RU0	10000~40000	25817.93	-44.52	≤-27	PASS
11AX20SISO	Ant1	7115	26Tone	RU4	10000~40000	25880.83	-43.69	≤-27	PASS
11AX20SISO	Ant1	7115	26Tone	RU8	10000~40000	24341.2	-44.21	≤-27	PASS
11AX20SISO	Ant1	7115	52Tone	RU37	10000~40000	24753.73	-44.14	≤-27	PASS
11AX20SISO	Ant1	7115	52Tone	RU39	10000~40000	24350.83	-44.18	≤-27	PASS
11AX20SISO	Ant1	7115	52Tone	RU40	10000~40000	24717.47	-44.23	≤-27	PASS
11AX20SISO	Ant1	7115	106Tone	RU53	10000~40000	25328.33	-43.44	≤-27	PASS
11AX20SISO	Ant1	7115	106Tone	RU54	10000~40000	24399.57	-44.15	≤-27	PASS

Shenzhen Anbotek Compliance Laboratory Limited

Address: 1/F., Building D, Sogood Science and Technology Park, Sanwei Community, Hangcheng Street, Bao'an District, Shenzhen, Guangdong, China.
Tel: (86) 0755-26066440 Fax: (86) 0755-26014772 Email: service@anbotek.com

Hotline
400-003-0500
www.anbotek.com.cn



11AX40SISO	Ant1	5965	26Tone	RU0	30~3000	1764.68	-46.15	≤-27	PASS
11AX40SISO	Ant1	5965	26Tone	RU17	30~3000	2416.79	-45.4	≤-27	PASS
11AX40SISO	Ant1	5965	52Tone	RU37	30~3000	2417.19	-47.04	≤-27	PASS
11AX40SISO	Ant1	5965	52Tone	RU44	30~3000	2474.51	-54.77	≤-27	PASS
11AX40SISO	Ant1	5965	106Tone	RU53	30~3000	2418.87	-45.66	≤-27	PASS
11AX40SISO	Ant1	5965	106Tone	RU56	30~3000	2417.98	-44.96	≤-27	PASS
11AX40SISO	Ant1	5965	242Tone	RU61	30~3000	2416.49	-44.9	≤-27	PASS
11AX40SISO	Ant1	5965	242Tone	RU62	30~3000	2417.39	-45.91	≤-27	PASS
11AX40SISO	Ant1	5965	26Tone	RU0	3000~10000	5738.63	-48.12	≤-27	PASS
11AX40SISO	Ant1	5965	26Tone	RU17	3000~10000	5193.8	-35.58	≤-27	PASS
11AX40SISO	Ant1	5965	52Tone	RU37	3000~10000	5207.8	-41.42	≤-27	PASS
11AX40SISO	Ant1	5965	52Tone	RU44	3000~10000	5288.3	-52.64	≤-27	PASS
11AX40SISO	Ant1	5965	106Tone	RU53	3000~10000	5192.87	-32.14	≤-27	PASS
11AX40SISO	Ant1	5965	106Tone	RU56	3000~10000	5746.8	-52.36	≤-27	PASS
11AX40SISO	Ant1	5965	242Tone	RU61	3000~10000	5506.93	-52.41	≤-27	PASS
11AX40SISO	Ant1	5965	242Tone	RU62	3000~10000	6390.8	-56.72	≤-27	PASS
11AX40SISO	Ant1	5965	26Tone	RU0	10000~40000	25762.4	-44.48	≤-27	PASS
11AX40SISO	Ant1	5965	26Tone	RU17	10000~40000	24412.03	-44.56	≤-27	PASS
11AX40SISO	Ant1	5965	52Tone	RU37	10000~40000	24791.13	-44.17	≤-27	PASS
11AX40SISO	Ant1	5965	52Tone	RU44	10000~40000	24745.8	-44.54	≤-27	PASS
11AX40SISO	Ant1	5965	106Tone	RU53	10000~40000	24854.6	-44.13	≤-27	PASS
11AX40SISO	Ant1	5965	106Tone	RU56	10000~40000	24685.17	-44.13	≤-27	PASS
11AX40SISO	Ant1	5965	242Tone	RU61	10000~40000	25874.6	-43.47	≤-27	PASS
11AX40SISO	Ant1	5965	242Tone	RU62	10000~40000	24790.57	-43.55	≤-27	PASS
11AX40SISO	Ant1	6165	26Tone	RU0	30~3000	2418.97	-51.56	≤-27	PASS
11AX40SISO	Ant1	6165	26Tone	RU17	30~3000	2418.67	-49.27	≤-27	PASS
11AX40SISO	Ant1	6165	52Tone	RU37	30~3000	2471.44	-48.23	≤-27	PASS
11AX40SISO	Ant1	6165	52Tone	RU44	30~3000	2418.67	-34.44	≤-27	PASS
11AX40SISO	Ant1	6165	106Tone	RU53	30~3000	2414.12	-51.28	≤-27	PASS
11AX40SISO	Ant1	6165	106Tone	RU56	30~3000	2415.41	-51.46	≤-27	PASS
11AX40SISO	Ant1	6165	242Tone	RU61	30~3000	2417.78	-49.87	≤-27	PASS
11AX40SISO	Ant1	6165	242Tone	RU62	30~3000	2417.39	-49.12	≤-27	PASS
11AX40SISO	Ant1	6165	26Tone	RU0	3000~10000	5783.67	-40.59	≤-27	PASS
11AX40SISO	Ant1	6165	26Tone	RU17	3000~10000	6394.77	-53.38	≤-27	PASS
11AX40SISO	Ant1	6165	52Tone	RU37	3000~10000	5257.27	-44.14	≤-27	PASS
11AX40SISO	Ant1	6165	52Tone	RU44	3000~10000	5762.67	-47.68	≤-27	PASS
11AX40SISO	Ant1	6165	106Tone	RU53	3000~10000	5811.67	-43.69	≤-27	PASS
11AX40SISO	Ant1	6165	106Tone	RU56	3000~10000	7125.8	-56.69	≤-27	PASS
11AX40SISO	Ant1	6165	242Tone	RU61	3000~10000	5263.1	-46.19	≤-27	PASS
11AX40SISO	Ant1	6165	242Tone	RU62	3000~10000	5778.3	-43.91	≤-27	PASS
11AX40SISO	Ant1	6165	26Tone	RU0	10000~40000	24703.3	-44.81	≤-27	PASS
11AX40SISO	Ant1	6165	26Tone	RU17	10000~40000	24343.47	-44.55	≤-27	PASS

Shenzhen Anbotek Compliance Laboratory Limited

Address: 1/F., Building D, Sogood Science and Technology Park, Sanwei Community, Hangcheng Street, Bao'an District, Shenzhen, Guangdong, China.
Tel: (86) 0755-26066440 Fax: (86) 0755-26014772 Email: service@anbotek.com

Hotline
400-003-0500
www.anbotek.com.cn



11AX40SISO	Ant1	6165	52Tone	RU37	10000~40000	25643.4	-44.73	≤-27	PASS
11AX40SISO	Ant1	6165	52Tone	RU44	10000~40000	24427.33	-44.14	≤-27	PASS
11AX40SISO	Ant1	6165	106Tone	RU53	10000~40000	25290.37	-44.27	≤-27	PASS
11AX40SISO	Ant1	6165	106Tone	RU56	10000~40000	24360.47	-43.68	≤-27	PASS
11AX40SISO	Ant1	6165	242Tone	RU61	10000~40000	25673.43	-43.16	≤-27	PASS
11AX40SISO	Ant1	6165	242Tone	RU62	10000~40000	24682.33	-43.61	≤-27	PASS
11AX40SISO	Ant1	6405	26Tone	RU0	30~3000	2470.65	-41.03	≤-27	PASS
11AX40SISO	Ant1	6405	26Tone	RU17	30~3000	2470.94	-35.18	≤-27	PASS
11AX40SISO	Ant1	6405	52Tone	RU37	30~3000	2471.74	-37.59	≤-27	PASS
11AX40SISO	Ant1	6405	52Tone	RU44	30~3000	2471.54	-34	≤-27	PASS
11AX40SISO	Ant1	6405	106Tone	RU53	30~3000	2470.85	-35.98	≤-27	PASS
11AX40SISO	Ant1	6405	106Tone	RU56	30~3000	2471.64	-35.38	≤-27	PASS
11AX40SISO	Ant1	6405	242Tone	RU61	30~3000	2471.54	-37.02	≤-27	PASS
11AX40SISO	Ant1	6405	242Tone	RU62	30~3000	2471.44	-39.45	≤-27	PASS
11AX40SISO	Ant1	6405	26Tone	RU0	3000~10000	5648.33	-56.49	≤-27	PASS
11AX40SISO	Ant1	6405	26Tone	RU17	3000~10000	5786	-39.84	≤-27	PASS
11AX40SISO	Ant1	6405	52Tone	RU37	3000~10000	5800.47	-44.15	≤-27	PASS
11AX40SISO	Ant1	6405	52Tone	RU44	3000~10000	5802.33	-48.45	≤-27	PASS
11AX40SISO	Ant1	6405	106Tone	RU53	3000~10000	5742.37	-46.69	≤-27	PASS
11AX40SISO	Ant1	6405	106Tone	RU56	3000~10000	5262.63	-45.08	≤-27	PASS
11AX40SISO	Ant1	6405	242Tone	RU61	3000~10000	5782.97	-36.46	≤-27	PASS
11AX40SISO	Ant1	6405	242Tone	RU62	3000~10000	5258.67	-43.73	≤-27	PASS
11AX40SISO	Ant1	6405	26Tone	RU0	10000~40000	24376.33	-43.01	≤-27	PASS
11AX40SISO	Ant1	6405	26Tone	RU17	10000~40000	24387.1	-43.81	≤-27	PASS
11AX40SISO	Ant1	6405	52Tone	RU37	10000~40000	24401.27	-43.76	≤-27	PASS
11AX40SISO	Ant1	6405	52Tone	RU44	10000~40000	25237.67	-44.06	≤-27	PASS
11AX40SISO	Ant1	6405	106Tone	RU53	10000~40000	25686.47	-43.73	≤-27	PASS
11AX40SISO	Ant1	6405	106Tone	RU56	10000~40000	25902.37	-43.45	≤-27	PASS
11AX40SISO	Ant1	6405	242Tone	RU61	10000~40000	25872.9	-43.97	≤-27	PASS
11AX40SISO	Ant1	6405	242Tone	RU62	10000~40000	25755.03	-43.05	≤-27	PASS
11AX40SISO	Ant1	6445	26Tone	RU0	30~3000	2471.04	-32.57	≤-27	PASS
11AX40SISO	Ant1	6445	26Tone	RU17	30~3000	2471.44	-37.26	≤-27	PASS
11AX40SISO	Ant1	6445	52Tone	RU37	30~3000	2471.54	-37.46	≤-27	PASS
11AX40SISO	Ant1	6445	52Tone	RU44	30~3000	2471.04	-37.5	≤-27	PASS
11AX40SISO	Ant1	6445	106Tone	RU53	30~3000	2471.74	-37.62	≤-27	PASS
11AX40SISO	Ant1	6445	106Tone	RU56	30~3000	2417.58	-33.27	≤-27	PASS
11AX40SISO	Ant1	6445	242Tone	RU61	30~3000	2419.17	-34.58	≤-27	PASS
11AX40SISO	Ant1	6445	242Tone	RU62	30~3000	2472.23	-37.51	≤-27	PASS
11AX40SISO	Ant1	6445	26Tone	RU0	3000~10000	5256.8	-46.51	≤-27	PASS
11AX40SISO	Ant1	6445	26Tone	RU17	3000~10000	5789.27	-38.76	≤-27	PASS
11AX40SISO	Ant1	6445	52Tone	RU37	3000~10000	5746.1	-50.78	≤-27	PASS
11AX40SISO	Ant1	6445	52Tone	RU44	3000~10000	6613.4	-50.11	≤-27	PASS

Shenzhen Anbotek Compliance Laboratory Limited

Address: 1/F., Building D, Sogood Science and Technology Park, Sanwei Community,
 Hangcheng Street, Bao'an District, Shenzhen, Guangdong, China.
 Tel: (86) 0755-26066440 Fax: (86) 0755-26014772 Email: service@anbotek.com

Hotline
 400-003-0500
 www.anbotek.com.cn



11AX40SISO	Ant1	6445	106Tone	RU53	3000~10000	5788.8	-40.77	≤-27	PASS
11AX40SISO	Ant1	6445	106Tone	RU56	3000~10000	6611.77	-51.45	≤-27	PASS
11AX40SISO	Ant1	6445	242Tone	RU61	3000~10000	5785.07	-38.69	≤-27	PASS
11AX40SISO	Ant1	6445	242Tone	RU62	3000~10000	5778.3	-44.62	≤-27	PASS
11AX40SISO	Ant1	6445	26Tone	RU0	10000~40000	24767.9	-43.61	≤-27	PASS
11AX40SISO	Ant1	6445	26Tone	RU17	10000~40000	25653.03	-43.25	≤-27	PASS
11AX40SISO	Ant1	6445	52Tone	RU37	10000~40000	25709.7	-43.63	≤-27	PASS
11AX40SISO	Ant1	6445	52Tone	RU44	10000~40000	24328.17	-44.08	≤-27	PASS
11AX40SISO	Ant1	6445	106Tone	RU53	10000~40000	24368.4	-43.83	≤-27	PASS
11AX40SISO	Ant1	6445	106Tone	RU56	10000~40000	24796.23	-43.54	≤-27	PASS
11AX40SISO	Ant1	6445	242Tone	RU61	10000~40000	25947.7	-43.86	≤-27	PASS
11AX40SISO	Ant1	6445	242Tone	RU62	10000~40000	24396.73	-43.26	≤-27	PASS
11AX40SISO	Ant1	6485	26Tone	RU0	30~3000	2420.45	-41.89	≤-27	PASS
11AX40SISO	Ant1	6485	26Tone	RU17	30~3000	2471.14	-35.84	≤-27	PASS
11AX40SISO	Ant1	6485	52Tone	RU37	30~3000	2472.03	-33.14	≤-27	PASS
11AX40SISO	Ant1	6485	52Tone	RU44	30~3000	2419.76	-32.93	≤-27	PASS
11AX40SISO	Ant1	6485	106Tone	RU53	30~3000	2471.24	-31.84	≤-27	PASS
11AX40SISO	Ant1	6485	106Tone	RU56	30~3000	2417.39	-29.18	≤-27	PASS
11AX40SISO	Ant1	6485	242Tone	RU61	30~3000	2471.84	-39.84	≤-27	PASS
11AX40SISO	Ant1	6485	242Tone	RU62	30~3000	2471.24	-32.75	≤-27	PASS
11AX40SISO	Ant1	6485	26Tone	RU0	3000~10000	5743.07	-49.47	≤-27	PASS
11AX40SISO	Ant1	6485	26Tone	RU17	3000~10000	5261.7	-44.23	≤-27	PASS
11AX40SISO	Ant1	6485	52Tone	RU37	3000~10000	5786.47	-39.17	≤-27	PASS
11AX40SISO	Ant1	6485	52Tone	RU44	3000~10000	5784.6	-47.36	≤-27	PASS
11AX40SISO	Ant1	6485	106Tone	RU53	3000~10000	5779.7	-56.53	≤-27	PASS
11AX40SISO	Ant1	6485	106Tone	RU56	3000~10000	5787.4	-42.54	≤-27	PASS
11AX40SISO	Ant1	6485	242Tone	RU61	3000~10000	5786.47	-42.04	≤-27	PASS
11AX40SISO	Ant1	6485	242Tone	RU62	3000~10000	5788.8	-40.48	≤-27	PASS
11AX40SISO	Ant1	6485	26Tone	RU0	10000~40000	25930.13	-44.2	≤-27	PASS
11AX40SISO	Ant1	6485	26Tone	RU17	10000~40000	24120.77	-44.39	≤-27	PASS
11AX40SISO	Ant1	6485	52Tone	RU37	10000~40000	24703.87	-44.02	≤-27	PASS
11AX40SISO	Ant1	6485	52Tone	RU44	10000~40000	24398.43	-44.03	≤-27	PASS
11AX40SISO	Ant1	6485	106Tone	RU53	10000~40000	25666.07	-44.06	≤-27	PASS
11AX40SISO	Ant1	6485	106Tone	RU56	10000~40000	25301.7	-43.75	≤-27	PASS
11AX40SISO	Ant1	6485	242Tone	RU61	10000~40000	25889.33	-44.21	≤-27	PASS
11AX40SISO	Ant1	6485	242Tone	RU62	10000~40000	25952.8	-43.99	≤-27	PASS
11AX40SISO	Ant1	6525	26Tone	RU0	30~3000	2471.34	-38.36	≤-27	PASS
11AX40SISO	Ant1	6525	26Tone	RU17	30~3000	2471.34	-31.82	≤-27	PASS
11AX40SISO	Ant1	6525	52Tone	RU37	30~3000	2471.44	-46.16	≤-27	PASS
11AX40SISO	Ant1	6525	52Tone	RU44	30~3000	2472.92	-48.84	≤-27	PASS
11AX40SISO	Ant1	6525	106Tone	RU53	30~3000	2471.93	-45.08	≤-27	PASS
11AX40SISO	Ant1	6525	106Tone	RU56	30~3000	2472.53	-45.71	≤-27	PASS

Shenzhen Anbotek Compliance Laboratory Limited

Address: 1/F., Building D, Sogood Science and Technology Park, Sanwei Community, Hangcheng Street, Bao'an District, Shenzhen, Guangdong, China.
Tel: (86) 0755-26066440 Fax: (86) 0755-26014772 Email: service@anbotek.com

Hotline
400-003-0500
www.anbotek.com.cn



11AX40SISO	Ant1	6525	242Tone	RU61	30~3000	2471.74	-47.31	≤-27	PASS
11AX40SISO	Ant1	6525	242Tone	RU62	30~3000	2471.64	-47.66	≤-27	PASS
11AX40SISO	Ant1	6525	26Tone	RU0	3000~10000	5786.7	-43.51	≤-27	PASS
11AX40SISO	Ant1	6525	26Tone	RU17	3000~10000	5785.3	-44.12	≤-27	PASS
11AX40SISO	Ant1	6525	52Tone	RU37	3000~10000	5783.9	-40.06	≤-27	PASS
11AX40SISO	Ant1	6525	52Tone	RU44	3000~10000	5784.83	-40.49	≤-27	PASS
11AX40SISO	Ant1	6525	106Tone	RU53	3000~10000	5791.13	-39.63	≤-27	PASS
11AX40SISO	Ant1	6525	106Tone	RU56	3000~10000	5791.6	-41.78	≤-27	PASS
11AX40SISO	Ant1	6525	242Tone	RU61	3000~10000	5797.9	-48.39	≤-27	PASS
11AX40SISO	Ant1	6525	242Tone	RU62	3000~10000	5740.27	-51.85	≤-27	PASS
11AX40SISO	Ant1	6525	26Tone	RU0	10000~40000	24354.23	-44.04	≤-27	PASS
11AX40SISO	Ant1	6525	26Tone	RU17	10000~40000	24364.43	-43.46	≤-27	PASS
11AX40SISO	Ant1	6525	52Tone	RU37	10000~40000	24932.8	-44.05	≤-27	PASS
11AX40SISO	Ant1	6525	52Tone	RU44	10000~40000	24728.23	-44.35	≤-27	PASS
11AX40SISO	Ant1	6525	106Tone	RU53	10000~40000	25912.57	-44.06	≤-27	PASS
11AX40SISO	Ant1	6525	106Tone	RU56	10000~40000	24744.1	-43.71	≤-27	PASS
11AX40SISO	Ant1	6525	242Tone	RU61	10000~40000	24409.77	-43.86	≤-27	PASS
11AX40SISO	Ant1	6525	242Tone	RU62	10000~40000	24343.47	-44.35	≤-27	PASS
11AX40SISO	Ant1	6565	26Tone	RU0	30~3000	2471.84	-45.88	≤-27	PASS
11AX40SISO	Ant1	6565	26Tone	RU17	30~3000	2418.57	-47.63	≤-27	PASS
11AX40SISO	Ant1	6565	52Tone	RU37	30~3000	2471.74	-49.73	≤-27	PASS
11AX40SISO	Ant1	6565	52Tone	RU44	30~3000	2471.04	-49.04	≤-27	PASS
11AX40SISO	Ant1	6565	106Tone	RU53	30~3000	1746.86	-39.18	≤-27	PASS
11AX40SISO	Ant1	6565	106Tone	RU56	30~3000	2470.55	-44.85	≤-27	PASS
11AX40SISO	Ant1	6565	242Tone	RU61	30~3000	2471.54	-43.97	≤-27	PASS
11AX40SISO	Ant1	6565	242Tone	RU62	30~3000	2415.8	-49.45	≤-27	PASS
11AX40SISO	Ant1	6565	26Tone	RU0	3000~10000	5787.17	-39.52	≤-27	PASS
11AX40SISO	Ant1	6565	26Tone	RU17	3000~10000	5791.83	-41.61	≤-27	PASS
11AX40SISO	Ant1	6565	52Tone	RU37	3000~10000	5258.43	-43.87	≤-27	PASS
11AX40SISO	Ant1	6565	52Tone	RU44	3000~10000	5784.83	-41.05	≤-27	PASS
11AX40SISO	Ant1	6565	106Tone	RU53	3000~10000	5749.13	-51.2	≤-27	PASS
11AX40SISO	Ant1	6565	106Tone	RU56	3000~10000	5257.5	-46.09	≤-27	PASS
11AX40SISO	Ant1	6565	242Tone	RU61	3000~10000	5791.13	-41	≤-27	PASS
11AX40SISO	Ant1	6565	242Tone	RU62	3000~10000	5807.23	-47.68	≤-27	PASS
11AX40SISO	Ant1	6565	26Tone	RU0	10000~40000	25660.4	-44.3	≤-27	PASS
11AX40SISO	Ant1	6565	26Tone	RU17	10000~40000	24392.77	-44.21	≤-27	PASS
11AX40SISO	Ant1	6565	52Tone	RU37	10000~40000	24788.3	-44.33	≤-27	PASS
11AX40SISO	Ant1	6565	52Tone	RU44	10000~40000	24745.23	-43.88	≤-27	PASS
11AX40SISO	Ant1	6565	106Tone	RU53	10000~40000	25887.07	-43.85	≤-27	PASS
11AX40SISO	Ant1	6565	106Tone	RU56	10000~40000	25286.97	-43.56	≤-27	PASS
11AX40SISO	Ant1	6565	242Tone	RU61	10000~40000	25374.8	-44.37	≤-27	PASS
11AX40SISO	Ant1	6565	242Tone	RU62	10000~40000	24688	-43.29	≤-27	PASS

Shenzhen Anbotek Compliance Laboratory Limited

Address: 1/F., Building D, Sogood Science and Technology Park, Sanwei Community, Hangcheng Street, Bao'an District, Shenzhen, Guangdong, China.
 Tel: (86) 0755-26066440 Fax: (86) 0755-26014772 Email: service@anbotek.com

Hotline
 400-003-0500
www.anbotek.com.cn



11AX40SISO	Ant1	6685	26Tone	RU0	30~3000	2471.64	-48.6	≤-27	PASS
11AX40SISO	Ant1	6685	26Tone	RU17	30~3000	2470.85	-49.9	≤-27	PASS
11AX40SISO	Ant1	6685	52Tone	RU37	30~3000	1784.58	-44.74	≤-27	PASS
11AX40SISO	Ant1	6685	52Tone	RU44	30~3000	2415.41	-47.28	≤-27	PASS
11AX40SISO	Ant1	6685	106Tone	RU53	30~3000	2471.74	-50.07	≤-27	PASS
11AX40SISO	Ant1	6685	106Tone	RU56	30~3000	2471.04	-49.26	≤-27	PASS
11AX40SISO	Ant1	6685	242Tone	RU61	30~3000	2471.84	-48.43	≤-27	PASS
11AX40SISO	Ant1	6685	242Tone	RU62	30~3000	2448.57	-48.86	≤-27	PASS
11AX40SISO	Ant1	6685	26Tone	RU0	3000~10000	5257.73	-45.53	≤-27	PASS
11AX40SISO	Ant1	6685	26Tone	RU17	3000~10000	5780.87	-43.87	≤-27	PASS
11AX40SISO	Ant1	6685	52Tone	RU37	3000~10000	5789.73	-41.04	≤-27	PASS
11AX40SISO	Ant1	6685	52Tone	RU44	3000~10000	5788.33	-40.75	≤-27	PASS
11AX40SISO	Ant1	6685	106Tone	RU53	3000~10000	5784.37	-37.08	≤-27	PASS
11AX40SISO	Ant1	6685	106Tone	RU56	3000~10000	5784.83	-41.44	≤-27	PASS
11AX40SISO	Ant1	6685	242Tone	RU61	3000~10000	6832.97	-50.32	≤-27	PASS
11AX40SISO	Ant1	6685	242Tone	RU62	3000~10000	5791.13	-41.27	≤-27	PASS
11AX40SISO	Ant1	6685	26Tone	RU0	10000~40000	24368.97	-44.05	≤-27	PASS
11AX40SISO	Ant1	6685	26Tone	RU17	10000~40000	24328.17	-43.78	≤-27	PASS
11AX40SISO	Ant1	6685	52Tone	RU37	10000~40000	24318.53	-44.49	≤-27	PASS
11AX40SISO	Ant1	6685	52Tone	RU44	10000~40000	24370.1	-43.67	≤-27	PASS
11AX40SISO	Ant1	6685	106Tone	RU53	10000~40000	25871.77	-44.61	≤-27	PASS
11AX40SISO	Ant1	6685	106Tone	RU56	10000~40000	24457.37	-44.26	≤-27	PASS
11AX40SISO	Ant1	6685	242Tone	RU61	10000~40000	25743.7	-44.29	≤-27	PASS
11AX40SISO	Ant1	6685	242Tone	RU62	10000~40000	24369.53	-43.49	≤-27	PASS
11AX40SISO	Ant1	6845	26Tone	RU0	30~3000	2416.2	-48.82	≤-27	PASS
11AX40SISO	Ant1	6845	26Tone	RU17	30~3000	2471.54	-47.77	≤-27	PASS
11AX40SISO	Ant1	6845	52Tone	RU37	30~3000	2417.98	-47.87	≤-27	PASS
11AX40SISO	Ant1	6845	52Tone	RU44	30~3000	2417.19	-47.62	≤-27	PASS
11AX40SISO	Ant1	6845	106Tone	RU53	30~3000	2420.95	-46.72	≤-27	PASS
11AX40SISO	Ant1	6845	106Tone	RU56	30~3000	2416.4	-48.85	≤-27	PASS
11AX40SISO	Ant1	6845	242Tone	RU61	30~3000	2417.68	-50.18	≤-27	PASS
11AX40SISO	Ant1	6845	242Tone	RU62	30~3000	2415.9	-51.38	≤-27	PASS
11AX40SISO	Ant1	6845	26Tone	RU0	3000~10000	5256.8	-44.45	≤-27	PASS
11AX40SISO	Ant1	6845	26Tone	RU17	3000~10000	5752.4	-48.69	≤-27	PASS
11AX40SISO	Ant1	6845	52Tone	RU37	3000~10000	5782.97	-35.46	≤-27	PASS
11AX40SISO	Ant1	6845	52Tone	RU44	3000~10000	7075.87	-55.77	≤-27	PASS
11AX40SISO	Ant1	6845	106Tone	RU53	3000~10000	5759.17	-46.47	≤-27	PASS
11AX40SISO	Ant1	6845	106Tone	RU56	3000~10000	5257.03	-45	≤-27	PASS
11AX40SISO	Ant1	6845	242Tone	RU61	3000~10000	5257.5	-43.83	≤-27	PASS
11AX40SISO	Ant1	6845	242Tone	RU62	3000~10000	5780.4	-39.62	≤-27	PASS
11AX40SISO	Ant1	6845	26Tone	RU0	10000~40000	24373.5	-43.82	≤-27	PASS
11AX40SISO	Ant1	6845	26Tone	RU17	10000~40000	25908.6	-43.52	≤-27	PASS

Shenzhen Anbotek Compliance Laboratory Limited

Address: 1/F., Building D, Sogood Science and Technology Park, Sanwei Community, Hangcheng Street, Bao'an District, Shenzhen, Guangdong, China.
Tel: (86) 0755-26066440 Fax: (86) 0755-26014772 Email: service@anbotek.com

Hotline
400-003-0500
www.anbotek.com.cn



11AX40SISO	Ant1	6845	52Tone	RU37	10000~40000	24353.1	-43.75	≤-27	PASS
11AX40SISO	Ant1	6845	52Tone	RU44	10000~40000	24994	-43.8	≤-27	PASS
11AX40SISO	Ant1	6845	106Tone	RU53	10000~40000	24805.3	-44.09	≤-27	PASS
11AX40SISO	Ant1	6845	106Tone	RU56	10000~40000	24452.27	-43.71	≤-27	PASS
11AX40SISO	Ant1	6845	242Tone	RU61	10000~40000	26008.33	-43.5	≤-27	PASS
11AX40SISO	Ant1	6845	242Tone	RU62	10000~40000	24680.63	-43.81	≤-27	PASS
11AX40SISO	Ant1	6885	26Tone	RU0	30~3000	2471.93	-48.17	≤-27	PASS
11AX40SISO	Ant1	6885	26Tone	RU17	30~3000	2416.69	-46.04	≤-27	PASS
11AX40SISO	Ant1	6885	52Tone	RU37	30~3000	2415.6	-50.48	≤-27	PASS
11AX40SISO	Ant1	6885	52Tone	RU44	30~3000	2416.69	-50.17	≤-27	PASS
11AX40SISO	Ant1	6885	106Tone	RU53	30~3000	2448.37	-51.48	≤-27	PASS
11AX40SISO	Ant1	6885	106Tone	RU56	30~3000	2471.14	-50.97	≤-27	PASS
11AX40SISO	Ant1	6885	242Tone	RU61	30~3000	2416.79	-47.5	≤-27	PASS
11AX40SISO	Ant1	6885	242Tone	RU62	30~3000	2416	-48.6	≤-27	PASS
11AX40SISO	Ant1	6885	26Tone	RU0	3000~10000	7201.17	-56.23	≤-27	PASS
11AX40SISO	Ant1	6885	26Tone	RU17	3000~10000	7065.37	-56.34	≤-27	PASS
11AX40SISO	Ant1	6885	52Tone	RU37	3000~10000	5789.73	-40.34	≤-27	PASS
11AX40SISO	Ant1	6885	52Tone	RU44	3000~10000	5780.63	-41.66	≤-27	PASS
11AX40SISO	Ant1	6885	106Tone	RU53	3000~10000	5807.93	-49.84	≤-27	PASS
11AX40SISO	Ant1	6885	106Tone	RU56	3000~10000	5258.43	-48.49	≤-27	PASS
11AX40SISO	Ant1	6885	242Tone	RU61	3000~10000	5780.17	-44.5	≤-27	PASS
11AX40SISO	Ant1	6885	242Tone	RU62	3000~10000	5768.73	-51.63	≤-27	PASS
11AX40SISO	Ant1	6885	26Tone	RU0	10000~40000	25289.8	-43.33	≤-27	PASS
11AX40SISO	Ant1	6885	26Tone	RU17	10000~40000	24795.67	-42.85	≤-27	PASS
11AX40SISO	Ant1	6885	52Tone	RU37	10000~40000	25762.97	-44.18	≤-27	PASS
11AX40SISO	Ant1	6885	52Tone	RU44	10000~40000	25319.83	-42.94	≤-27	PASS
11AX40SISO	Ant1	6885	106Tone	RU53	10000~40000	24641.53	-44.12	≤-27	PASS
11AX40SISO	Ant1	6885	106Tone	RU56	10000~40000	25804.9	-44.02	≤-27	PASS
11AX40SISO	Ant1	6885	242Tone	RU61	10000~40000	25758.43	-43.3	≤-27	PASS
11AX40SISO	Ant1	6885	242Tone	RU62	10000~40000	25664.93	-44.01	≤-27	PASS
11AX40SISO	Ant1	7005	26Tone	RU0	30~3000	2419.96	-46.7	≤-27	PASS
11AX40SISO	Ant1	7005	26Tone	RU17	30~3000	2419.96	-49.62	≤-27	PASS
11AX40SISO	Ant1	7005	52Tone	RU37	30~3000	2416.89	-49.05	≤-27	PASS
11AX40SISO	Ant1	7005	52Tone	RU44	30~3000	2418.77	-47.95	≤-27	PASS
11AX40SISO	Ant1	7005	106Tone	RU53	30~3000	2419.56	-52	≤-27	PASS
11AX40SISO	Ant1	7005	106Tone	RU56	30~3000	1746.96	-37.53	≤-27	PASS
11AX40SISO	Ant1	7005	242Tone	RU61	30~3000	2471.14	-51.54	≤-27	PASS
11AX40SISO	Ant1	7005	242Tone	RU62	30~3000	2416.1	-49.67	≤-27	PASS
11AX40SISO	Ant1	7005	26Tone	RU0	3000~10000	5787.4	-38.41	≤-27	PASS
11AX40SISO	Ant1	7005	26Tone	RU17	3000~10000	5788.1	-38.06	≤-27	PASS
11AX40SISO	Ant1	7005	52Tone	RU37	3000~10000	5781.57	-38.19	≤-27	PASS
11AX40SISO	Ant1	7005	52Tone	RU44	3000~10000	5747.03	-49.34	≤-27	PASS

Shenzhen Anbotek Compliance Laboratory Limited

Address: 1/F., Building D, Sogood Science and Technology Park, Sanwei Community, Hangcheng Street, Bao'an District, Shenzhen, Guangdong, China.
Tel: (86) 0755-26066440 Fax: (86) 0755-26014772 Email: service@anbotek.com

Hotline
400-003-0500
www.anbotek.com.cn



11AX40SISO	Ant1	7005	106Tone	RU53	3000~10000	3269.97	-56.3	≤-27	PASS
11AX40SISO	Ant1	7005	106Tone	RU56	3000~10000	5784.6	-41.66	≤-27	PASS
11AX40SISO	Ant1	7005	242Tone	RU61	3000~10000	5783.2	-39.35	≤-27	PASS
11AX40SISO	Ant1	7005	242Tone	RU62	3000~10000	5786.47	-43.16	≤-27	PASS
11AX40SISO	Ant1	7005	26Tone	RU0	10000~40000	24793.97	-44.43	≤-27	PASS
11AX40SISO	Ant1	7005	26Tone	RU17	10000~40000	25706.3	-44.57	≤-27	PASS
11AX40SISO	Ant1	7005	52Tone	RU37	10000~40000	25745.97	-43.98	≤-27	PASS
11AX40SISO	Ant1	7005	52Tone	RU44	10000~40000	24391.07	-44.49	≤-27	PASS
11AX40SISO	Ant1	7005	106Tone	RU53	10000~40000	25702.9	-44.57	≤-27	PASS
11AX40SISO	Ant1	7005	106Tone	RU56	10000~40000	24317.4	-44.18	≤-27	PASS
11AX40SISO	Ant1	7005	242Tone	RU61	10000~40000	25880.83	-44.08	≤-27	PASS
11AX40SISO	Ant1	7005	242Tone	RU62	10000~40000	24827.97	-44.15	≤-27	PASS
11AX40SISO	Ant1	7085	26Tone	RU0	30~3000	2472.03	-51.88	≤-27	PASS
11AX40SISO	Ant1	7085	26Tone	RU17	30~3000	2471.04	-51.05	≤-27	PASS
11AX40SISO	Ant1	7085	52Tone	RU37	30~3000	2415.8	-48.74	≤-27	PASS
11AX40SISO	Ant1	7085	52Tone	RU44	30~3000	2417.48	-48.79	≤-27	PASS
11AX40SISO	Ant1	7085	106Tone	RU53	30~3000	2416.99	-48.56	≤-27	PASS
11AX40SISO	Ant1	7085	106Tone	RU56	30~3000	2416.49	-48.15	≤-27	PASS
11AX40SISO	Ant1	7085	242Tone	RU61	30~3000	2415.7	-49.8	≤-27	PASS
11AX40SISO	Ant1	7085	242Tone	RU62	30~3000	2416.1	-49.04	≤-27	PASS
11AX40SISO	Ant1	7085	26Tone	RU0	3000~10000	7532.5	-55.95	≤-27	PASS
11AX40SISO	Ant1	7085	26Tone	RU17	3000~10000	5787.87	-41.93	≤-27	PASS
11AX40SISO	Ant1	7085	52Tone	RU37	3000~10000	5746.57	-49.9	≤-27	PASS
11AX40SISO	Ant1	7085	52Tone	RU44	3000~10000	5785.3	-41.41	≤-27	PASS
11AX40SISO	Ant1	7085	106Tone	RU53	3000~10000	5782.5	-38.21	≤-27	PASS
11AX40SISO	Ant1	7085	106Tone	RU56	3000~10000	5262.87	-45.95	≤-27	PASS
11AX40SISO	Ant1	7085	242Tone	RU61	3000~10000	5780.63	-41.87	≤-27	PASS
11AX40SISO	Ant1	7085	242Tone	RU62	3000~10000	5751	-49.11	≤-27	PASS
11AX40SISO	Ant1	7085	26Tone	RU0	10000~40000	25305.67	-44.38	≤-27	PASS
11AX40SISO	Ant1	7085	26Tone	RU17	10000~40000	25249.57	-44.26	≤-27	PASS
11AX40SISO	Ant1	7085	52Tone	RU37	10000~40000	24419.4	-43.65	≤-27	PASS
11AX40SISO	Ant1	7085	52Tone	RU44	10000~40000	24179.13	-43.52	≤-27	PASS
11AX40SISO	Ant1	7085	106Tone	RU53	10000~40000	24394.47	-43.76	≤-27	PASS
11AX40SISO	Ant1	7085	106Tone	RU56	10000~40000	24757.7	-43.02	≤-27	PASS
11AX40SISO	Ant1	7085	242Tone	RU61	10000~40000	24704.43	-44.01	≤-27	PASS
11AX40SISO	Ant1	7085	242Tone	RU62	10000~40000	24720.87	-43.45	≤-27	PASS
11AX80SISO	Ant1	5985	26Tone	RU0	30~3000	2417.58	-52.76	≤-27	PASS
11AX80SISO	Ant1	5985	26Tone	RU36	30~3000	2414.32	-51.38	≤-27	PASS
11AX80SISO	Ant1	5985	52Tone	RU37	30~3000	2415.8	-47.53	≤-27	PASS
11AX80SISO	Ant1	5985	52Tone	RU52	30~3000	2418.97	-51.83	≤-27	PASS
11AX80SISO	Ant1	5985	106Tone	RU53	30~3000	2419.17	-45.82	≤-27	PASS
11AX80SISO	Ant1	5985	106Tone	RU60	30~3000	2419.27	-47.8	≤-27	PASS

Shenzhen Anbotek Compliance Laboratory Limited

Address: 1/F., Building D, Sogood Science and Technology Park, Sanwei Community, Hangcheng Street, Bao'an District, Shenzhen, Guangdong, China.
 Tel: (86) 0755-26066440 Fax: (86) 0755-26014772 Email: service@anbotek.com

Hotline
 400-003-0500
 www.anbotek.com.cn



11AX80SISO	Ant1	5985	242Tone	RU61	30~3000	2419.17	-46.43	≤-27	PASS
11AX80SISO	Ant1	5985	242Tone	RU64	30~3000	2415.11	-48.6	≤-27	PASS
11AX80SISO	Ant1	5985	484Tone	RU65	30~3000	2419.66	-49.75	≤-27	PASS
11AX80SISO	Ant1	5985	484Tone	RU66	30~3000	2419.76	-48.17	≤-27	PASS
11AX80SISO	Ant1	5985	26Tone	RU0	3000~10000	5254.23	-50.91	≤-27	PASS
11AX80SISO	Ant1	5985	26Tone	RU36	3000~10000	5506.23	-48.93	≤-27	PASS
11AX80SISO	Ant1	5985	52Tone	RU37	3000~10000	5257.27	-48.77	≤-27	PASS
11AX80SISO	Ant1	5985	52Tone	RU52	3000~10000	6292.57	-54.85	≤-27	PASS
11AX80SISO	Ant1	5985	106Tone	RU53	3000~10000	5252.83	-48.4	≤-27	PASS
11AX80SISO	Ant1	5985	106Tone	RU60	3000~10000	5502.97	-55.73	≤-27	PASS
11AX80SISO	Ant1	5985	242Tone	RU61	3000~10000	5493.87	-49.8	≤-27	PASS
11AX80SISO	Ant1	5985	242Tone	RU64	3000~10000	5236.27	-52.3	≤-27	PASS
11AX80SISO	Ant1	5985	484Tone	RU65	3000~10000	5494.1	-49.05	≤-27	PASS
11AX80SISO	Ant1	5985	484Tone	RU66	3000~10000	5208.03	-51.62	≤-27	PASS
11AX80SISO	Ant1	5985	26Tone	RU0	10000~40000	25956.77	-43.28	≤-27	PASS
11AX80SISO	Ant1	5985	26Tone	RU36	10000~40000	24342.9	-43.98	≤-27	PASS
11AX80SISO	Ant1	5985	52Tone	RU37	10000~40000	24695.37	-43.99	≤-27	PASS
11AX80SISO	Ant1	5985	52Tone	RU52	10000~40000	24712.37	-43.99	≤-27	PASS
11AX80SISO	Ant1	5985	106Tone	RU53	10000~40000	24346.3	-44.31	≤-27	PASS
11AX80SISO	Ant1	5985	106Tone	RU60	10000~40000	25312.47	-43.96	≤-27	PASS
11AX80SISO	Ant1	5985	242Tone	RU61	10000~40000	24332.7	-44.04	≤-27	PASS
11AX80SISO	Ant1	5985	242Tone	RU64	10000~40000	24320.8	-43.95	≤-27	PASS
11AX80SISO	Ant1	5985	484Tone	RU65	10000~40000	24421.1	-43.76	≤-27	PASS
11AX80SISO	Ant1	5985	484Tone	RU66	10000~40000	24810.97	-43.72	≤-27	PASS
11AX80SISO	Ant1	6145	26Tone	RU0	30~3000	2472.43	-56.21	≤-27	PASS
11AX80SISO	Ant1	6145	26Tone	RU36	30~3000	2421.94	-47.5	≤-27	PASS
11AX80SISO	Ant1	6145	52Tone	RU37	30~3000	2415.9	-45.77	≤-27	PASS
11AX80SISO	Ant1	6145	52Tone	RU52	30~3000	2416.69	-45.07	≤-27	PASS
11AX80SISO	Ant1	6145	106Tone	RU53	30~3000	2419.96	-46.21	≤-27	PASS
11AX80SISO	Ant1	6145	106Tone	RU60	30~3000	2421.94	-48.86	≤-27	PASS
11AX80SISO	Ant1	6145	242Tone	RU61	30~3000	2416.3	-50.19	≤-27	PASS
11AX80SISO	Ant1	6145	242Tone	RU64	30~3000	2415.6	-52.86	≤-27	PASS
11AX80SISO	Ant1	6145	484Tone	RU65	30~3000	2419.17	-47.33	≤-27	PASS
11AX80SISO	Ant1	6145	484Tone	RU66	30~3000	2417.09	-52.76	≤-27	PASS
11AX80SISO	Ant1	6145	26Tone	RU0	3000~10000	7071.43	-56.5	≤-27	PASS
11AX80SISO	Ant1	6145	26Tone	RU36	3000~10000	5275.47	-47.89	≤-27	PASS
11AX80SISO	Ant1	6145	52Tone	RU37	3000~10000	5493.63	-52.86	≤-27	PASS
11AX80SISO	Ant1	6145	52Tone	RU52	3000~10000	5254.47	-52.31	≤-27	PASS
11AX80SISO	Ant1	6145	106Tone	RU53	3000~10000	5254	-51.75	≤-27	PASS
11AX80SISO	Ant1	6145	106Tone	RU60	3000~10000	5739.33	-46.78	≤-27	PASS
11AX80SISO	Ant1	6145	242Tone	RU61	3000~10000	5493.17	-49.04	≤-27	PASS
11AX80SISO	Ant1	6145	242Tone	RU64	3000~10000	5747.73	-48.55	≤-27	PASS

Shenzhen Anbotek Compliance Laboratory Limited

Address: 1/F., Building D, Sogood Science and Technology Park, Sanwei Community, Hangcheng Street, Bao'an District, Shenzhen, Guangdong, China.
Tel: (86) 0755-26066440 Fax: (86) 0755-26014772 Email: service@anbotek.com

Hotline
400-003-0500
www.anbotek.com.cn

