

MRT Technology (Suzhou) Co., Ltd Phone: +86-512-66308358 Web: www.mrt-cert.com Report No.: 1910RSU037-U2 Report Version: V01 Issue Date: 11-14-2019

# SAR MEASUREMENT REPORT

FCC ID:	2ACVFM-920

Applicant:Shenzhen ChangTaiWei Electronic CO., LTD

Application Type:	Certification
Product:	Walkie Talkie
Model No.:	M-920
Serial Model No.:	M-900, M-930
FCC Classification:	Family Radio Service (FRS)
FCC Rule Part(s):	FCC 47 CFR Part 2.1093
Test Procedure(s):	IEEE 1528:2013; IEEE C95.1- 2005; KDB 447498 D01v06;
	KDB 865664 D01v01r04
Test Date:	10/31/2019

Surry Sur **Reviewed By:** (Sunny Sun) Approved By: CREDI TESTING LABORATORY CERTIFICATE #3628.01 (Robin Wu)

The test results relate only to the samples tested.

This equipment has been shown to be capable of compliance with the applicable technical standards as indicated in the measurement report and was tested in accordance with the measurement procedures specified in IEEE1528, KDB 447498 and KDB 865664. Test results reported herein relate only to the item(s) tested.

The test report shall not be reproduced except in full without the written approval of MRT Technology (Suzhou) Co., Ltd.



# **Revision History**

Report No.	Version	Description	Issue Date	Note
1910RSU037-U2	Rev. 01	Initial report	11-14-2019	Valid

# CONTENTS

Des	scriptio	n Page	)
§2.′	1033 Ge	eneral Information	5
1.	Introc	luction	6
	1.1.	Scope	6
	1.2.	MRT Test Location	6
2.	Produ	uct Information	7
	2.1.	General Description for EUT	7
	2.2.	Product Specification Subjective to this Report	7
	2.3.	Ancillary Equipment	7
3.	Sumn	nary of Test Result	B
	3.1.	Test Standards	8
	3.2.	Environment Condition	8
	3.3.	RF Exposure Limits	8
	3.4.	Test Result Summary	9
4.	Speci	fic Absorption Rate (SAR)10	D
	4.1.	Introduction10	0
	4.2.	Definition10	0
5.	DASY	6 Measurement System1 <sup>2</sup>	1
	5.1.	Introduction1	1
	5.2.	DASY6 Measurement System Diagram1	1
	5.3.	System Components Details12	2
6.	The S	AR Measurement Procedure2	3
	6.1.	Measurement Process Diagram23	3
	6.2.	Test Position Definition	4
	6.3.	Test Procedure	7
7.	Syste	m Verificaiton29	9
	7.1.	Tissue Check29	9
	7.2.	System Check	2
8.	Analy	vsis and Results	4
	8.1.	Antenna Location	4
	8.2.	Conducted Power	5
	8.3.	SAR Exclusion Analysis	6



	8.4.	Required Configurations of SAR Test	.37
	8.5.	SAR Test Results	.38
	8.6.	Estimated SAR Calculation	.39
9.	Simul	aneous Transmission Analysis	.40
	9.1.	Simultaneous Transmission Scenario	.40
	9.2.	Simultaneous Transmission Conclusion	.40
10.	Test E	quipment Used	.41
11.	Measu	rement Uncertainty	.42
Ann	ex A S	/stem Check Result	11
Ann		est Data Plots	
	iex B Te		.45
Ann	iex B To iex C S	est Data Plots	.45 .47



§2.1033	General	Information
---------	---------	-------------

Applicant:	Shenzhen ChangTaiWei Electronic CO., LTD
Applicant Address:	5/F.,6 Block, XinGu Industrial Zone, GuShu Village, XiXiang Town,
Applicant Address.	BaoAn District, Shenzhen City, China
Manufacturer:	Shenzhen ChangTaiWei Electronic CO., LTD
Manufacturer Address:	5/F.,6 Block, XinGu Industrial Zone, GuShu Village, XiXiang Town,
Manufacturer Address:	BaoAn District, Shenzhen City, China
Test Site:	MRT Technology (Suzhou) Co., Ltd
Test Site Address:	D8 Building, No.2 Tian'edang Rd., Wuzhong Economic Development
	Zone, Suzhou, China

#### Test Facility / Accreditations

Measurements were performed at MRT Laboratory located in Tian'edang Rd., Suzhou, China.

- MRT facility is a FCC registered (MRT Reg. No. 893164) test facility with the site description report on file and has met all the requirements specified in Section 2.948 of the FCC Rules.
- MRT facility is an IC registered (MRT Reg. No. 11384A-1) test laboratory with the site description on file at Industry Canada.
- MRT facility is a VCCI registered (R-20025, G-20034, C-20020, T-20020) test laboratory with the site description on file at VCCI Council.
- MRT Lab is accredited to ISO 17025 by the American Association for Laboratory Accreditation (A2LA) under the American Association for Laboratory Accreditation Program (A2LA Cert. No. 3628.01) in EMC, Telecommunications, Radio and SAR testing.





# 1. Introduction

# 1.1. Scope

Measurement and determination of specific absorption rate (SAR) of radio frequency devices including intentional and/or unintentional radiators is compliance with the technical rules and regulations of the Federal Communications Commission and the Innovation, Science and Economic Development Canada and Certification and Engineering Bureau.

### 1.2. MRT Test Location

The map below shows the location of the MRT LABORATORY, its proximity to the Taihu Lake. These measurement tests were conducted at the MRT Technology (Suzhou) Co., Ltd. Facility located at D8 Building, No.2 Tian'edang Rd., Wuzhong Economic Development Zone, Suzhou, China. The measurement facility compliant with the test site requirements specified in ANSI C63.4-2014.





# 2. Product Information

# 2.1. General Description for EUT

Product Name	Walkie Talkie
Model No.	M-920
Serial Model No.	M-900, M-930
EUT Type	Portable Device
Exposure Category	General Population/Uncontrolled Exposure

Note: The different models are only for marking different clients, others are the same.

# 2.2. Product Specification Subjective to this Report

PTT Specification		
Frequency Range	462.5625~462.7125MHz (1~7 channel)	
	467.5625~467.7125MHz (8~14 channel)	
	462.5500~462.7250MHz (15~22 channel)	
Type of Modulation	FM	
Antenna Type	Spring antenna / Internal	

# 2.3. Ancillary Equipment

N/A



# 3. Summary of Test Result

### 3.1. Test Standards

No.	Identity	Document Title
1	47 CFR Part 2.1093	Radiofrequency radiation exposure evaluation: portable devices
2	IEEE 1528-2013	IEEE Recommended Practice for Determining the Peak
		Spatial-Average Specific Absorption Rate (SAR) in the Human Head
		from Wireless Communications Devices: Measurement Techniques
3	IEEE C95.1-2005	IEEE Standard for Safety Levels with Respect to Human Exposure to
		Radio Frequency Electromagnetic Fields, 3 kHz to 300 GHz
4	KDB 447498 D01 v06	General RF Exposure Guidance
5	KDB 865664 D01 v01r04	SAR Measurement 100 MHz to 6 GHz

### **3.2. Environment Condition**

Ambient Temperature	20.5°C~24.0°C
Temperature of Simulant	20.0°C~23.5°C
Relative Humidity	38%RH ~55%RH

# 3.3. RF Exposure Limits

Human Exposure	Basic restrictions for electric, magnetic and electromagnetic fields. (Unit in mW/g or W/kg)
Spatial Peak SAR <sup>1</sup> (Head and Body)	1.60
Spatial Average SAR <sup>2</sup> (Whole Body)	0.08
Spatial Peak SAR <sup>3</sup> (Arms and Legs)	4.00

#### Notes:

1. The Spatial Peak value of the SAR averaged over any 1gram of tissue (defined as a tissue volume in the shape of a cube) and over the appropriate averaging time.

2. The Spatial Average value of the SAR averaged over the whole body.

3. The Spatial Peak value of the SAR averaged over any 1 gram of tissue (defined as a tissue volume in the shape of a cube) and over appropriate averaging time.



# 3.4. Test Result Summary

#### Worst SAR List

Highest Reported SAR	Front of Face 1g SAR (W/kg)	Body-worn 1g SAR (W/kg)	
PTT(FRS)	0.13	0.18	

# Highest Simultaneous SAR

N/A





# 4. Specific Absorption Rate (SAR)

# 4.1. Introduction

SAR is related to the rate at which energy is absorbed per unit mass in an object exposed to a radio field. The SAR distribution in a biological body is complicated and is usually carried out by experimental techniques or numerical modeling. The standard recommends limits for two tiers of groups, occupational /controlled and general population/uncontrolled, based on a person's awareness and ability to exercise control over his or her exposure. In general, occupational/controlled exposure limits are higher than the limits for general population/uncontrolled.

# 4.2. Definition

The SAR in the tissue-equivalent liquid can be determined by the rate of temperature increase or by E-field measurements, according to Formulas (1) or (2):

$$SAR = \frac{\sigma E^2}{\rho} \tag{1}$$

$$SAR = c_{\rm h} \frac{{\rm d}T}{{\rm d}t} \bigg|_{t=0}$$
<sup>(2)</sup>

where

SAR is the specific absorption rate in W/kg;

E is the rms value of the electric field strength in the tissue medium in V/m;

 $\sigma$  is the electrical conductivity of the tissue medium in S/m;

 $\rho$  is the mass density of the tissue medium in kg/m<sup>3</sup>;

c<sub>h</sub> is the specific heat capacity of the tissue medium in J/(kg K);



is the initial time derivative of temperature in the tissue medium in K/s.




# 5. DASY6 Measurement System

### 5.1. Introduction

DASY6 is the latest generation of the Dosimetric Assessment System optimized for specific absorption rate (SAR) measurements, SAR compliance. DASY6 builds on the power of our industry - leading dosimetric and near-field evaluation system, DASY52. Running on a significantly more robust platform and a more powerful measurement server, DASY6 offers much faster scanning with no sacrifice of measurement precision. All hardware and software are fully compatible with DASY52. The new system seamlessly integrates two software solutions, the novel cDASY V6.6 - optimized for SAR compliance testing to significantly reduce SAR assessment costs - and the widely used DASY V5.2 for generalized near-field evaluations with maximized flexibility.

### 5.2. DASY6 Measurement System Diagram

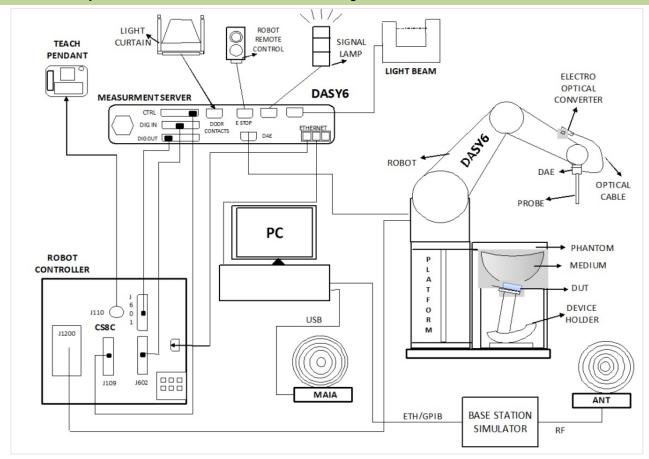

The DASY6 system in cDASY6/DASY5 V5.2 SAR Configuration is shown below:

The System consist of the following components:

DASY6 Measurement Server, Data Acquisition Electronics (DAE), Probes, Light-Beam Unit, Phantoms, Media, Device Holder for SAM-Twin Phantom, Laptop Extension Kit to Mounting Device, Robot System Platform & Pedestal, Verification of the Parameters with the Dielectric Assessment Kit (DAK), Modulation and Interference Analyzer (MAIA), Omni-Directional Ultra-Wideband Antenna (ANT), cDASY6 software, DASY5 NEO software and SEMCAD data evaluation software.





# 5.3. System Components Details

#### DASY6 Platforms MP6E-TX60L

MP6E-TX60L platform is a compact cost-effective platform based on TX60L. It consists of:

- a stable non-metalic platform for the TX60L robot
- a frame for two standard-size phantoms (1.0 × 0.5 m)
- a frame for one half-size phantom (0.5 × 0.5 m)

It includes two easily moveable trolleys for the phone and tablet/computer positioner and two platforms for positioning dipoles and other antennas.



Material The beams consist of a composite of wood and epoxy (permittivity of 3.3 and loss tangent of <0.07)

Size The footprint of the platform is 1590 mm × 1060 mm.

#### Robots -TX60L

The MRT DASY6 system uses the high-precision industrial robots TX60L from Staubli SA (France). The TX robot family - the successor of the well-known RX robot family - continues to offer the features important for DASY6 applications:

- High precision (repeatability 0.02mm)
- High reliability (industrial design)
- Low maintenance costs (virtually maintenance-free as all gears are direct drive, no belt drives)
- Jerk-free straight movements (brushless synchron motors, no stepper motors)

 Low extremely low frequency (ELF) interference (motor control fields are shielded by the closed metallic construction)

The robots are controlled by the Staubli CS8c robot controllers. All information regarding the use and maintenance of the robot arm and the robot controller is provided on CDs delivered with the robot. Paper manuals are available directly from Staubli upon request.







#### DASY6 Measurement Server

The DASY6 measurement server is based on a PC/104 CPU board with a 400MHz intel ULV Celeron, 128MB chip-disk and 128MB RAM. The necessary circuits for communication with the DAE4 electronics box, as well as the 16-bit AD converter system for optical detection and digital I/O interface are contained on the DASY6 I/O board, which is directly connected to the PC/104 bus of the CPU board.



The measurement server performs all real-time data evaluations of field measurements and surface detection, controls robot movements, and handles safety operations.

#### Data Acquisition Electronics (DAE)

The data acquisition electronics (DAE4) consist of a highly sensitive electrometer-grade preamplifier with auto-zeroing, a channel and gain-switching multiplexer, a fast 16-bit AD-converter, and a command decoder with a control logic unit. Transmission to the measurement server is accomplished through an optical downlink for data and status information, as well as an optical uplink for commands and the clock.





#### Probes

#### E-Field Probe(EX3DV4)

The SAR measurement is conducted with the dosimetric probe manufactured by SPEAG. The probe is specially designed and calibrated for use in liquid with high permittivity. The dosimetric probe has special calibration in liquid at different frequency. SPEAG conducts the probe calibration in compliance with international and national standards (e.g. IEEE 1528, EN 62209-1, IEC 62209, etc.) under ISO 17025. Construction:

Symmetric design with triangular core Built-in shielding against static charges PEEK enclosure material (resistant to organic solvents, e.g., DGBE)

Frequency: 4 MHz ~ 10 GHz

Linearity: ±0.2 dB (30 MHz ~ 10 GHz)

Directivity:

±0.1 dB in TSL (rotation around probe axis) ±0.3 dB in TSL (rotation normal to probe axis) Dynamic Range: 10 μW/g to 100 mW/g; Linearity: ± 0.2 dB (noise: typically < 1 μW/g) Dimensions: Overall length: 337 mm (Tip: 20 mm) Tip diameter: 2.5 mm (Body: 12 mm) Typical distance from probe tip to dipole centers: 1 mm Applications:

High precision dosimetric measurements in any exposure scenario (e.g., very strong gradient fields); the only probe that enables compliance testing for frequencies up to 6 GHz with precision of better than 30%.



MSTV1 (Mother Scan Teaching V1) Electronics & TP6V2 (Teaching Probe 6V2) Probe

MSTV1 (Mother Scan Teaching V1) electronics together with the TP6V2 (Teaching Probe 6V2) probe is used for mother scan of DASY6 system. This probe uses a 3D Renishaw LP2 sensor which ensures accurate detection of any shape and a measurement repeatability of 8 µm.





#### Light-Beam Unit

The light beam switch allows automatic "tooling" of the probe. During the process, the actual position of the probe tip with respect to the robot arm, as well as the probe length and the horizontal probe offset, are measured. The software then corrects all movements within the measurement jobs, such that the robot coordinates are valid for the probe tip.



The repeatability of this process is better than 0.1 mm. If a position has been taught with an aligned probe, the same position will be reached with another aligned probe within 0.1 mm, even if the other probe has different dimensions. During probe rotations, the probe tip will keep its actual position.



#### Phantoms

#### SAM-Twin Phantom

The shell corresponds to the specifications of the Specific Anthropomorphic Mannequin (SAM) phantom defined in IEEE 1528 and IEC 62209-1. It enables the dosimetric evaluation of left and right hand phone usage as well as body-mounted usage at the flat phantom region. A cover prevents evaporation of the liquid. Reference markings on the phantom allow the complete setup of all predefined phantom positions and measurement grids by teaching three points with the robot.

SAM-Twin V5.0 and higher has the same shell geometry and is manufactured from the same material as SAM-Twin V4.0, but with the top structure reinforced.

Material Vinyl ester, fiberglass reinforced (VE-GF)


Liquid Compatibility The phantom shell is compatible with SPEAG tissue simulating liquids (sugar and oil based). Use of other liquids may render the phantom warranty void (see note or consult SPEAG support).

Shell Thickness  $2 \pm 0.2 \text{ mm} (6 \pm 0.2 \text{ mm at ear point})$ 

DimensionsLength: 1000 mm(incl. WoodenWidth: 500 mmSupport)Height: adjustable feet

Filling Volume approx. 25 liters

SupportDASY6: standard-size platform slotDASY52 stand-alone: SPEAG standard phantom table

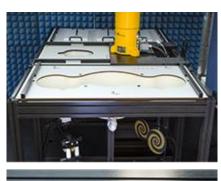





#### ELI phantom

The ELI phantom is used for compliance testing of handheld and body-mounted wireless devices in the frequency range of 30 MHz to 6 GHz. ELI is fully compatible with the IEC 62209-2 standard and all known tissue simulating liquids. ELI has been optimized regarding its performance and can be integrated into our standard phantom tables. A cover prevents evaporation of the liquid. Reference markings on the phantom allow installation of the complete setup, including all predefined phantom positions and measurement grids, by teaching three points. The phantom is compatible with all SPEAG dosimetric probes and dipoles.

ELI V5.0 and higher has the same shell geometry and is manufactured from the same material as ELI V4.0, but has reinforced top structure. ELI V6.0, released in August 2014, has the same shell geometry as ELI V4.0 but offers increased longterm stability.

Material	Vinyl ester, fiberglass reinforced (VE-GF)	
Liquid Compatibility	The phantom shell is compatible with	
	SPEAG tissue simulating liquids (sugar and	
	oil based). Use of other liquids may render	
	the phantom warranty void (see note or	
	consult SPEAG support).	
Shell Thickness	$2.0 \pm 0.2$ mm (bottom plate)	
Dimensions	Major axis: 600 mm	
	Minor axis: 400 mm	
Filling Volume	approx. 30 liters	
Support	DASY6: standard-size platform slot	
	DASY52 stand-alone: SPEAG standard	
	phantom table	



#### SAM Face Down Phantom

The SAM Face Down Phantom V10 allows assessment of the exposure of the face and in particular the eyes for handheld devices operated in front of the face. e.g., video phones, cameras, organizers, etc. It is manufactured from high precision injection molded polypropylene. The Mounting Device for Transmitters including extensions kit can be used to position the device.

Material	Epoxy based
Liquid Compatibility	The phantom shell is compatible with
	SPEAG tissue simulating liquids (sugar
	and oil based). Use of other liquids may
	render the phantom warranty void (see
	note or consult SPEAG support).
Shell Thickness	$2 \pm 0.2$ mm (6 mm at ear point)
Head Shape	Standard compatible SAM head.





#### SAM Head Stand Phantom

The SAM Head Stand Phantom V10 allows assessment of the exposure of the top-head or around-the-head wireless accessories, e.g., head-belts, etc. It is manufactured from high precision injection molded polypropylene. The Mounting Device for Transmitters including extensions kit can be used to position the device.

Epoxy based
The phantom shell is compatible with
SPEAG tissue simulating liquids (sugar
and oil based). Use of other liquids may
render the phantom warranty void (see
note or consult SPEAG support).
$2 \pm 0.2$ mm (6 mm at ear point)
Standard compatible SAM head.








#### Wrist Phantom

The Wrist Phantom V10 is shape-compatible with the CTIA approved OTA GFPC-V1 and optimized for SAR evaluation of watches and other wireless hand accessories.

Material	Epoxy based
Liquid Compatibility	The phantom shell is compatible
	with SPEAG tissue simulating
	liquids (sugar and oil based). Use
	of other liquids may render the
	phantom warranty void (see note
	or consult SPEAG support).
Shell Thickness	Shell Thickness
Wrist Shape	Design compatible with CTIA
	forearm.

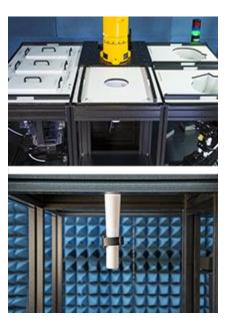



#### Device Holder for SAM-Twin Phantom

The SAR in the phantom is approximately inversely proportional to the square of the distance between the source and the liquid surface. For a source at 5mm distance, a positioning uncertainty of  $\pm 0.5$ mm would produce uncertainty in the SAR of  $\pm 20\%$ . Accurate device positioning is therefore crucial for accurate and repeatable measurements. The positions at which the devices must be measured are defined by the standards.

#### MD4HHTV5 - Mounting Device for Hand-Held Transmitters

In combination with the Twin SAM V5.0/V5.0c or ELI phantoms, the Mounting Device for Hand-Held Transmitters enables rotation of the mounted transmitter device to specified spherical coordinates. At the heads, the rotation axis is at the ear opening. Transmitter devices can be easily and accurately positioned according to IEC 62209-1, IEEE 1528, FCC, or other specifications. The device holder can be locked for positioning at different phantom sections (left head, right head, flat).



Material: Polyoxymethylene (POM)

# MDA4WTV5 - Mounting Device Adaptor for Ultra Wide

#### Transmitters

An upgrade kit to Mounting Device to enable easy mounting of wider devices like big smart-phones, e-books, small tablets, etc. It holds devices with width up to 140 mm.

Material: Polyoxymethylene (POM)

#### MDA4SPV6 - Mounting Device Adaptor for Smart Phones

The solid low-density MDA4SPV6 adaptor assuring no impact on the DUT radiation performance and is conform with any DUT design and shape.

Material: ROHACELL







# MD4LAPV5 - Mounting Device for Laptops and other **Body-Worn Transmitters**

In combination with the Twin SAM V5.0/V5.0c or ELI phantoms, the Mounting Device (Body-Worn) enables testing of transmitter devices according to IEC 62209-2 specifications. The device holder can be locked for positioning at a flat phantom section.

Material: Polyoxymethylene (POM), PET-G, Foam

#### MDA4LAP - Mounting Device Adaptor for Laptops

A simple but effective and easy-to-use extension for the Mounting Device; facilitates testing of larger devices (e.g., laptops, cameras, etc.) according to IEC 62209-2; lightweight and fits easily on the upper part of the Mounting Device in place of the phone positioner. The extension is fully compatible with the Twin SAM as well as ELI and other Flat Phantoms.

Material: Polyoxymethylene (POM), PET-G, Foam

#### Modulation and Interference Analyzer(MAIA)

MAIA is a hardware interface used to evaluate the modulation and audio interference characteristics of RF signals in the frequency range 698 - 6000 MHz. DASY6 evaluates the time-domain and frequency domain properties of the uplink signal transmitted by the DUT during SAR measurement with MAIA. MAIA uses USB powered active electronics to identify the modulation of the DUT. It can be operated over the air interface using the built-in ultra-broadband planar log spiral antenna (698 - 6000 MHz) or in conducted mode using the coaxial SMA 50 Ohm connector (300 - 6000 MHz).

To prevent damage in conducted mode due to high peak power, an external RF attenuator may be mounted. The LED on the MAIA hardware also indicates whether it is connected.













#### DAK-3.5 (200MHz - 20GHz)

This precision dielectric measurement system is designed to cover the 200MHz – 20GHz frequency range with a single open-ended coaxial dielectric probe. The system uses advanced algorithms and novel hardware to measure the dielectric properties of liquids, solids, and semi-solids over a broad range of parameters. The measurement method is fast and non-destructive to the material under test.



Evaluation of reference liquids over a broad frequency range for specific absorption rate (SAR) measurements, in accordance with IEC 62209, IEEE 1528, and several federal regulations.

Evaluating Software: DAK software version 2.0

MRT simulating liquid		
Product	Test Frequency (MHz)	Main Ingredients
HSL450	400 – 500	Water, Sucrose, NaCl
MSL450	400 – 500	Water, Sucrose, NaCl

Speag Broad-Band simulating liquid				
Product	Test Frequency (MHz)	Main Ingredients		
HBBL600-10000V6	600 – 10000	Water, Oil		
MBBL600-6000V6	600 - 6000	Water, Oil		




# 6. The SAR Measurement Procedure

### 6.1. Measurement Process Diagram

#### **General Procedure**

#### For IEEE1528-2013 Head SAR

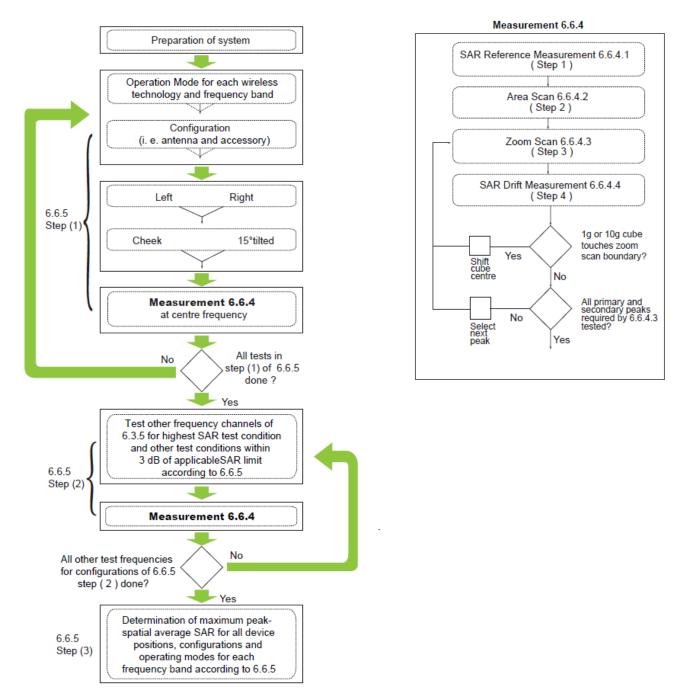

#### For Body SAR

SAR scan procedures described in section 2.7 of KDB 865664 D01 v01r04 should be applied to body SAR test.




# 6.2. Test Position Definition


#### Head SAR Test Position

#### -Mobile phone

Define two imaginary lines on the handset—the vertical centerline and the horizontal line. The vertical centerline passes through two points on the front side of the handset—the midpoint of the width wt of the handset at the level of the acoustic output [point A in Fixed case and Clamshell case], and the midpoint of the width wb at the bottom of the handset (point B). The horizontal line is perpendicular to the vertical centerline and passes through the center of the acoustic output [see Fixed case]. The horizontal line is also tangential to the face of the handset at point A. The two lines intersect at point A. Note that for many handsets, point A coincides with the center of the acoustic output; however, the acoustic output may be located elsewhere on the horizontal line. Also note that the vertical centerline is not necessarily parallel to the front face of the handset [see Clamshell case], especially for clamshell handsets, handsets with flip covers, and other irregularly-shaped handsets, the vertical centerline passes through point A but not the tip edge of the phone.

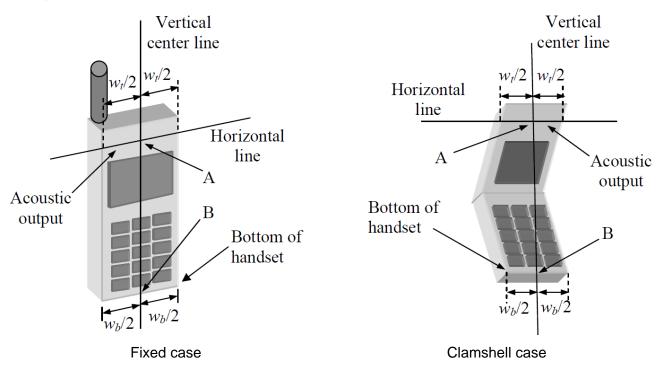




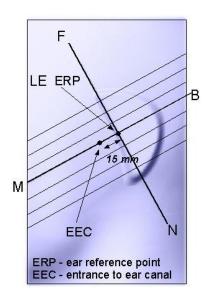

#### Key

- B Direction of B-M line back endpoint
- F Direction of N-F line front endpoint
- N Direction of N-F line neck endpoint
- M Mouth reference point
- LE Left ear reference point (ERP)

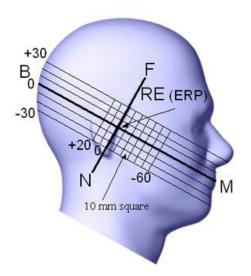


### Key

- B Line B-M back endpoint
- M Line B-M front endpoint
- N Line N-F neck endpoint
- F Line N-F front endpoint
- RE Right ear reference point (ERP)

#### **Cheek Position**

The cheek position has the following characteristics, based on the geometrical lines described above:

- The N-F line (see above) is in the plane defined by the handset vertical centerline and horizontal line
- Handset touches the pinna
- The handset vertical centerline is aligned with the Reference Plane.

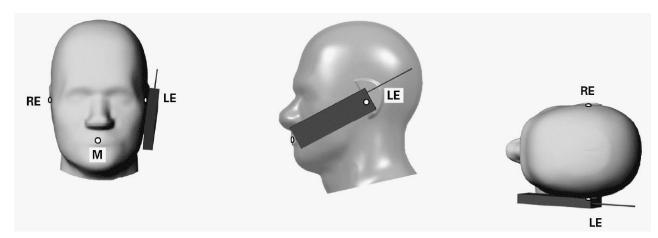

#### Key

- M Mouth reference point
- LE Left ear reference point
- RE Right ear reference point



#### Tilt Position


The tilt position is established as follows:

-Repeat the steps to place the device in the cheek position.

-While maintaining the orientation of the handset, move the handset away from the pinna along the line passing through RE and LE far enough to allow a rotation of the handset away from the cheek by 15°.

-Rotate the handset around the horizontal line by 15°.

-While maintaining the orientation of the handset, move the handset towards the phantom on the line passing through RE and LE until any part of the handset touches the ear. The tilt position is obtained when the contact point is on the pinna. If contact occurs at any location other than the pinna, e.g., the antenna at the back of the phantom head, the angle of the handset shall be reduced. In this case, the tilt position is obtained if any point on the handset is in contact with the pinna and a second point on the handset is in contact with the phantom, e.g., the andset is in contact with the phantom, e.g., the antenna with the back of the head.

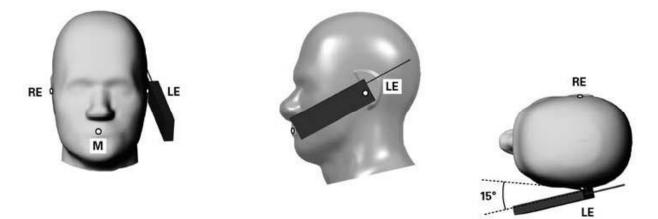

#### Key

- M Mouth reference point
- LE Left ear reference point
- RE Right ear reference point

#### -PTT

In-front-of the face SAR test position and a test separation distance of 25 mm as certain KDB requires should be applied.

#### Body SAR Test Position

For body-worn accessory, hotspot mode and other exposure conditions to human body should be conducted pursuant to the test position requirements of SAR KDBs for certain product.



### 6.3. Test Procedure

#### Step 1 Setup a Connection

First, engineer should record the conducted power before the test. Then establish a call in handset at the maximum power level with a base station simulator via air interface, or make the EUT establish transmition by itself in testing band. Place the EUT to certain test position.

#### **Step 2 Power Reference Measurements**

To measure the local E-field value at a fixed location which value will be taken as a reference value for calculating a possible power drift.

#### Step 3 Area Scan

The Area Scan is used as a fast scan in two dimensions to find the area of high field values, before doing a fine measurement around the hot spot. The sophisticated interpolation routines implemented in DASY software can find the maximum locations even in relatively coarse grids. When an Area Scan has measured all reachable points, it computes the field maximal found in the scanned area, within a range of the global maximum. The range (in dB) is specified in the standards for compliance testing. For example, a 2 dB range is required in IEEE Standard 1528 and IEC 62209 standards, whereby 3 dB is a requirement when compliance is assessed in accordance with the ARIB standard (Japan). If only one Zoom Scan follows the Area Scan, then only the absolute maximum will be taken as reference. For cases where multiple maximums are detected, the number of Zoom Scans has to be increased accordingly.

	≤ 3 GHz	> 3 GHz				
Maximum distance from closest measurement						
point (geometric center of probe sensors) to	5 mm ± 1 mm	½·δ·ln(2) mm ± 0.5 mm				
phantom surface						
Maximum probe angle from probe axis to						
phantom surface normal at the measurement	30° ± 1°	20° ± 1°				
location						
	≤ 2 GHz: ≤ 15 mm	3 - 4 GHz: ≤ 12 mm				
	2 - 3 GHz: ≤ 12 mm	4 - 6 GHz: ≤ 10 mm				
Maximum area scan spatial resolution: $\Delta$	When the x or y dimension of the test device, in the					
	measurement plane orientation, is smaller than the					
$x_{Area}, \Delta y_{Area}$	above, the measurement resolution must be $\leq$ the					
	corresponding x or y dimens	sion of the test device with at				
	least one measurement point on the test device.					
Note: $\delta$ is the penetration depth of a plane-way	e at normal incidence to the t	issue medium: see IEEE Std				

#### Area Scan Parameters extracted from KDB 865664 D01v01r04

Note:  $\delta$  is the penetration depth of a plane-wave at normal incidence to the tissue medium; see IEEE Std 1528-2013 for details.



#### Step 4 Zoom Scan

Zoom Scans are used to assess the peak spatial SAR values within a cubic averaging volume containing 1 g and 10 g of simulated tissue. The Zoom Scan measures points (refer to table below) within a cube whose base faces are centered on the maxima found in a preceding area scan job within the same procedure. When the measurement is done, the Zoom Scan evaluates the averaged SAR for 1 g and 10 g and displays these values next to the job's label.

			≤ 3 GHz	> 3 GHz			
Maximum zoom sca	an spatial r	esolution: $\Delta x_{Zoom}$ ,	≤ 2 GHz: ≤ 8 mm	3 - 4 GHz: ≤ 5 mm*			
$\Delta y_{Zoom}$			2 - 3 GHz: ≤ 5 mm*	4 - 6 GHz: ≤ 4 mm*			
				3 - 4 GHz: ≤ 4 mm			
	uniform g	grid: Δz <sub>zoom</sub> (n)	≤ 5 mm	4 - 5 GHz: ≤ 3 mm			
Maximum zoom				5 - 6 GHz: ≤ 2 mm			
scan spatial		$\Delta z_{Zoom}(1)$ : between		3 - 4 GHz: ≤ 3 mm			
resolution, normal		1 <sup>st</sup> two points closest	≤ 4 mm	4 - 5 GHz: ≤ 2.5 mm			
to phantom	graded	to phantom surface		5 - 6 GHz: ≤ 2 mm			
surface	grid	$\Delta z_{\text{Zoom}}(n>1)$ :					
		between subsequent	≤ 1.5·Δz	<sub>zoom</sub> (n-1) mm			
		points					
				3-4 GHz: ≥ 28 mm			
Minimum zoom		x, y, z	≥ 30 mm	4-5 GHz: ≥ 25 mm			
scan volume				5-6 GHz: ≥ 22 mm			
Note: * When zoom	scan is rea	quired and the reported S	SAR from the area scan	based 1-g SAR estimation			
procedures of KDB	Publicatior	n 447498 is ≤ 1.4 W/kg, ≤	$1 \le 8 \text{ mm}, \le 7 \text{ mm and} \le 5 $	mm zoom scan resolution			
may be applied, respectively, for 2 GHz to 3 GHz, 3 GHz to 4 GHz and 4 GHz to 6 GHz.							

#### Zoom Scan Parameters extracted from KDB 865664 D01 v01r04

#### Step 5 Power Drift Measurements

Repetition of the E-field measurement at the fixed location mentioned in Step 1 to make sure the two results differ by less than  $\pm 0.2$  dB.

#### Step 6 Test Data


After the test, SAR test data should be exported by SEMCAD.



# 7. System Verificaiton

# 7.1. Tissue Check

■ Refer to KDB 865664 D01 v01r04, the depth of tissue-equivalent liquid in a phantom must be ≥ 15.0 cm with ≤ ± 0.5 cm variation for SAR measurements ≤ 3 GHz and ≥ 10.0 cm with ≤ ± 0.5 cm variation for measurements > 3 GHz.

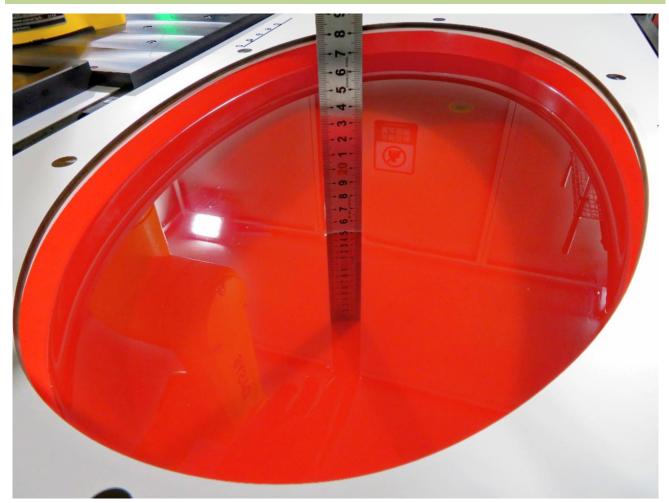

15cm Depth Head Tissue for 450MHz Band



#### Tissue Dielectric Parameters

Frequency	Н	ead
(MHz)	ε <sub>r</sub>	σ (S/m)
300	45.3	0.87
450	43.5	0.87
750	41.9	0.89
835	41.5	0.90
900	41.5	0.97
1 450	40.5	1.20
1 500	40.4	1.23
1 640	40.2	1.31
1 750	40.1	1.37
1 800	40.0	1.40
1 900	40.0	1.40
2 000	40.0	1.40
2 100	39.8	1.49
2 300	39.5	1.67
2 450	39.2	1.80
2 600	39.0	1.96
3 000	38.5	2.40
3 500	37.9	2.91
4 000	37.4	3.43
4 500	36.8	3.94
5 000	36.2	4.45
5 200	36.0	4.66
5 400	35.8	4.86
5 600	35.5	5.07
5 800	35.3	5.27
6 000	35.1	5.48

( $\epsilon_r$  = relative permittivity,  $\sigma$  = conductivity and  $\rho$  = 1000 kg/m<sup>3</sup>)

Note:

- 1. FCC has permitted the use of single head-tissue simulating liquid specified in IEC62209-1 for all SAR tests, as described in TCB workshop April 2019.
- 2. For convenience, permittivity and conductivity values at those frequencies which are not part of the original data provided by Drossos et al. [33] or the extension to 5800MHz are provided (i.e. the values shown in italics). These values were linearly interpolated between the values in this table that are immediately above and below these values, except the values at 6000MHz that were



linearly extrapolated from the values at 3000MHz and 5800MHz.

Tissue Calibration Result

The dielectric parameters of the liquids were verified prior to the SAR evaluation using DASY6 Dielectric Assessment Kit and keysight PNA-L Network Analyzer N5234B.

Tissue parameter for head								
Freq.	Derm	Perm. Cond.	Target	Target	Deviation	Deviation	Tissue	Toot Data
(MHz)	Perm.		Perm.	Cond.	Perm. (%)	Cond. (%)	Temp. (°C)	Test Date
450	43.00	0.86	43.50	0.87	-1.15	-1.15	22.5	2019.10.31


Note: The ±5% deviation of tissue parameter is recommended.



# 7.2. System Check

#### Purpose

The purpose of the system check is to verify that the system operates within its specifications at the device test frequencies. System check verifies the measurement repeatability of a SAR system before compliance testing and is not a validation of all system specifications. The latter is not required for testing a device but is mandatory before the system is deployed.

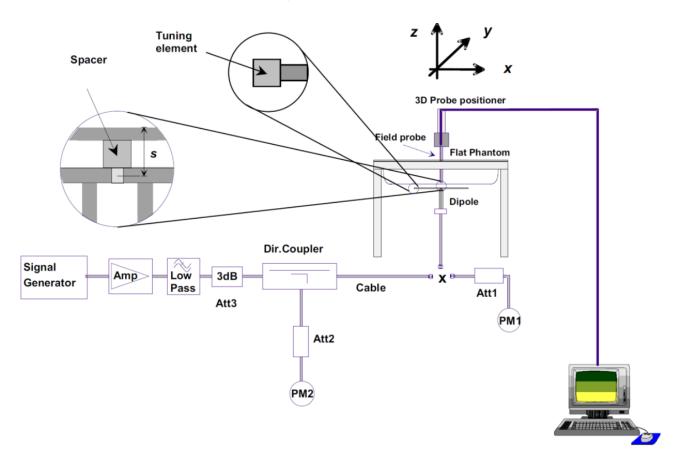

System Performance Check Setup Diagram

#### System Check Procedure

The system check procedure is a complete 1g and 10g peak spatial-average SAR measurement using a source having a previously determined system check target value. The measured 1g and 10g SAR are normalized to the target input power of the specific source and compared to their respective target values. A description of the different measurement tasks to be performed is given below, together with the information that can be deduced from their results:

a. The Power Reference Measurement and Power Drift Measurement are located at the beginning and end of the batch process. They measure the field drift at one single point in the liquid over the complete procedure. The indicated drift is mainly the variation of the amplifier output power. If it is too high (above  $\pm 0.1$  dB), the system check should be repeated; some amplifiers have very high drift during warm-up. A stable amplifier gives drift results in the DASY6 system below  $\pm 0.02$  dB.



b. The second step is optional. For probes with integrated optical surface detection sensor this step must be conducted, otherwise the step can be skipped. The Surface Check tests the optical surface detection system of the DASY6 system by repeatedly detecting the surface with the optical and mechanical surface detector and comparing the results. The output gives the detecting heights of both systems, the difference between the two systems and the standard deviation of the detection repeatability. Air bubbles or refraction in the liquid due to separation of the sugar-water mixture gives poor repeatability (above  $\pm 0.1$  mm). In that case it is better to abort the system check and stir the liquid.

c. The Area Scan measures the SAR above the dipole on a plane parallel to the surface. It is used to locate the approximate location of the peak SAR. The proposed scan uses large grid spacing for faster measurement; due to the symmetric field, the peak detection is reliable. If a finer graphic is desired, the grid spacing can be reduced. Grid spacing and orientation have no influence on the SAR result.

d. The Zoom Scan measures the field in a volume around the peak SAR value assessed in the previous Area Scan.

If the system check gives reasonable results, the SAR peak, 1 g and 10 g spatial average SAR values normalized to 1 W dipole input power give reference data for comparisons. The next sections analyze the expected uncertainties of these values, as well as additional checks for further information or troubleshooting.

System check for head								
Freq.	1g SAR	1g SAR 10g SAR	Target	Target	Deviation	Deviation	Tissue	
(MHz)	(W/kg)	(W/kg)	1g SAR	10g SAR	1g SAR	10g SAR	Temp.	Test Date
(1011 12)	(**/kg)	kg) (VV/kg)	(W/kg)	(W/kg)	(%)	(%)	(°C)	
450	4.36	2.94	4.50	3.01	-3.11	-2.19	22.5	2019.10.31

#### Result of System Performance Check

Note:


1. The  $\pm 10\%$  deviation of system check result is required.

2. System check value listed above has been harmonized to 1W.




# 8. Analysis and Results

### 8.1. Antenna Location

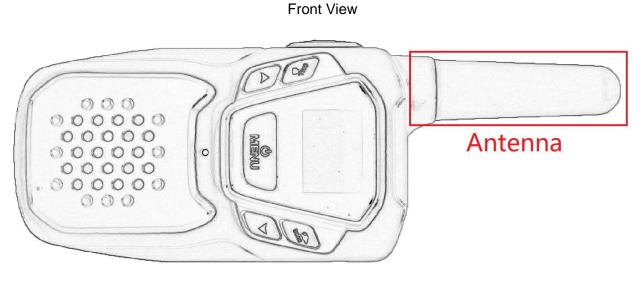

**Right View** 

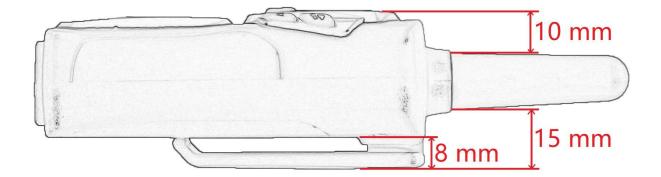

Note: The accessory is body worn using, the thickness is 8mm, and there's no metallic or conductive components in it.

Antenna Distance to Surfaces/Edges (mm)				
Position	Front of Face-side	Back-side		
Distance	10	15		



# 8.2. Conducted Power

Channel	Channel	Frequency	Power (dBm)		
Description		(MHz)	Measured Power	Tune-up Power	
	1	462.5625	29.48	30.0	
	2	462.5875	29.52	30.0	
	3	462.6125	29.32	30.0	
FRS	4	462.6375	29.51	30.0	
	5	462.6625 29.46		30.0	
	6	462.6875	29.48	30.0	
	7	462.7125	29.41	30.0	
	8	467.5625	29.01	29.5	
	9	467.5875	28.94	29.5	
	10	467.6125	28.97	29.5	
FRS	11	467.6375	28.93	29.5	
	12	467.6625	28.95	29.5	
	13	467.6875	28.94	29.5	
	14	467.7125	28.89	29.5	
FRS	15	462.5500	29.40	30.0	
	16	462.5750	29.49	30.0	
	17	462.6000	29.49	30.0	
	18	462.6250	29.48	30.0	
	19	462.6500	29.47	30.0	
	20	462.6750	29.44	30.0	
	21	462.7000	29.47	30.0	
	22	462.7250	29.47	30.0	

Note: The power above is conducted power tested via RF cable.



# 8.3. SAR Exclusion Analysis

Per FCC KDB 447498 D01v06, the SAR exclusion threshold for distances<50mm is defined by the following equation:

 $\frac{\textit{Max Power of Channel(mW)}}{\textit{Test Separation Distance(mm)}} \times \sqrt{\textit{Frequency(GHz)}} \le 3.0$ 

Antenna Distance to User (mm)					
Position	Front of Face-side	Back-side			
Distance	35	15			

Note: Antenna to user distance = Antenna to out-surface of EUT distance + Out-surface of EUT to user distance

#### 35mm Antenna Distance to Front of Face

Channel		Frequency Ant-to-user		Thresholds Tune-u		Power	SAR Test
Description	Ch.	(MHz)	distance (mm)	(mW)	dBm	mW	(Y/N)
FRS	1	462.5625	35	154.38	30.0	1000.00	Y
	2	462.5875	35	154.38	30.0	1000.00	Y
	3	462.6125	35	154.38	30.0	1000.00	Y
	4	462.6375	35	154.37	30.0	1000.00	Y
	5	462.6625	35	154.37	30.0	1000.00	Y
-	6	462.6875	35	154.36	30.0	1000.00	Y
	7	462.7125	35	154.36	30.0	1000.00	Y
FRS	8	467.5625	35	153.56	29.5	891.25	Y
	9	467.5875	35	153.55	29.5	891.25	Y
	10	467.6125	35	153.55	29.5	891.25	Y
	11	467.6375	35	153.54	29.5	891.25	Y
	12	467.6625	35	153.54	29.5	891.25	Y
	13	467.6875	35	153.54	29.5	891.25	Y
	14	467.7125	35	153.53	29.5	891.25	Y
FRS	15	462.5500	35	154.39	30.0	1000.00	Y
	16	462.5750	35	154.38	30.0	1000.00	Y
	17	462.6000	35	154.38	30.0	1000.00	Y
	18	462.6250	35	154.37	30.0	1000.00	Y
	19	462.6500	35	154.37	30.0	1000.00	Y
	20	462.6750	35	154.37	30.0	1000.00	Y
	21	462.7000	35	154.36	30.0	1000.00	Y
	22	462.7250	35	154.36	30.0	1000.00	Y

FCC ID: 2ACVFM-920

Page Number: 36 of 49



#### 15mm Antenna Distance to Body Back

Channel	Ch	Frequency	Ant-to-user	Thresholds	Tune-up	Power	SAR Test
Description	Ch.	(MHz)	distance (mm)	(mW)	dBm	mW	(Y/N)
	1	462.5625	15	66.16	30.0	1000.00	Y
	2	462.5875	15	66.16	30.0	1000.00	Y
	3	462.6125	15	66.16	30.0	1000.00	Y
FRS	4	462.6375	15	66.16	30.0	1000.00	Y
	5	462.6625	15	66.16	30.0	1000.00	Y
	6	462.6875	15	66.16	30.0	1000.00	Y
	7	462.7125	15	66.15	30.0	1000.00	Y
	8	467.5625	15	65.81	29.5	891.25	Y
	9	467.5875	15	65.81	29.5	891.25	Y
	10	467.6125	15	65.81	29.5	891.25	Y
FRS	11	467.6375	15	65.80	29.5	891.25	Y
	12	467.6625	15	65.80	29.5	891.25	Y
	13	467.6875	15	65.80	29.5	891.25	Y
	14	467.7125	15	65.80	29.5	891.25	Y
	15	462.5500	15	66.17	30.0	1000.00	Y
	16	462.5750	15	66.16	30.0	1000.00	Y
	17	462.6000	15	66.16	30.0	1000.00	Y
500	18	462.6250	15	66.16	30.0	1000.00	Y
FRS	19	462.6500	15	66.16	30.0	1000.00	Y
	20	462.6750	15	66.16	30.0	1000.00	Y
	21	462.7000	15	66.16	30.0	1000.00	Y
	22	462.7250	15	66.15	30.0	1000.00	Y

## 8.4. Required Configurations of SAR Test

Walkie Talkie, M-920							
Test Mode	In Front of Face	Body Back					
PTT(FRS)	Yes	Yes					



#### 8.5. SAR Test Results

PTT 4	PTT 450MHz									
CH.	Freq. (MHz)	Test Position	Dist. (mm)	Cond. Power (dBm)	Max.Tune -up Power (dBm)	Scaling Factor	Duty Factor	Meas. SAR-1g (W/kg)	Reported SAR-1g (W/kg)	SAR Plot #
1	462.5625	Front of Face	25	29.48	30.0	1.13	0.50	0.23	0.13	
11	467.6375	Front of Face	25	28.93	29.5	1.14	0.50	0.16	0.09	
22	462.7250	Front of Face	25	29.47	30.0	1.13	0.50	0.23	0.13	1
1	462.5625	Body Back	0	29.48	30.0	1.13	0.50	0.32	0.18	2
11	467.6375	Body Back	0	28.93	29.5	1.14	0.50	0.19	0.11	
22	462.7250	Body Back	0	29.47	30.0	1.13	0.50	0.27	0.15	

Note: A duty factor of 50% should be applied to determine compliance for radios with a mechanical PTT button.



#### 8.6. Estimated SAR Calculation

Per FCC KDB 447498 D01v06 section 4.3.2 b) 1), when an antenna qualifies for the standalone SAR test exclusion of 4.3.1 and also transmits simultaneously with other antennas, the standalone SAR value was estimated according to the following formula to result in substantially conservative SAR values of  $\leq 0.4W/kg$  for test separation distance  $\leq 50mm$  to determine the simultaneous transmission SAR test exclusion criteria:

Estimated SAR =  $\frac{\sqrt{f(GHz)}}{7.5} * \frac{(Max Power of channel, mW)}{Min. Separation, mm}$ , for 1-g SAR

When the test separation distance is > 50 mm, estimated 1g-SAR 0.4W/kg is used for simultaneous evaluation.

N/A



# 9. Simultaneous Transmission Analysis

### 9.1. Simultaneous Transmission Scenario

N/A

## 9.2. Simultaneous Transmission Conclusion

N/A



# 10. Test Equipment Used

SR3 - SAR								
Instrument	Manufacturer	Model No.	Asset No.	Cali. Interval	Cali. Due Date			
Stäubli Robot TX60L	Stäubli	TX60L	MRTSUE06412	only once	only once			
Robot Controller	Stäubli	CS8C	MRTSUE06412	only once	only once			
ELI Phantom	Speag	V8	MRTSUE06420	N/A	N/A			
DAK	Speag	DAK-3.5	MRTSUE06435	N/A	N/A			
Dipole Validation Kits	Speag	D450V3	MRTSUE06425	3 year	2021/05/21			
DAE4	Speag	SD 000 D04 BN	MRTSUE06414	1 year	2020/05/22			
E-Field Probe	Speag	EX3DV4	MRTSUE06438	1 year	2020/04/17			
Network Analyzer	Keysight	N5234B	MRTSUE06454	1 year	2020/07/11			
Directional Coupler	Agilent	778D	MRTSUE06083	1 year	2020/03/26			
Signal Generator	Keysight	N5183B	MRTSUE06197	1 year	2020/04/15			
Power Sensor	Keysight	U2021XA	MRTSUE06447	1 year	2020/06/30			
Thermohygrometer	Testo	622	MRTSUE06361	1 year	2020/05/06			

Software	Version	Function
DASY NEO	52.10.2.1495	SAR Test Software



# **11. Measurement Uncertainty**

DASY5 Uncertainty Budge	t, according	to IEEE <sup>·</sup>	1528 (0	.3 - 3 G	Hz rang	je)		
	Uncert.	Prob.	Dia	(ci)	(ci)	Std. Unc.	Std. Unc.	(vi)
Error Description	value	Dist.	Div.	1g	10g	(1g)	(10g)	veff
Measurement System								
Probe Calibration	±6.0 %	N	1	1	1	±6.0 %	±6.0 %	∞
Axial Isotropy	±4.7 %	R	√3	0.7	0.7	±1.9 %	±1.9 %	∞
Hemispherical Isotropy	±9.6 %	R	$\sqrt{3}$	0.7	0.7	±3.9 %	±3.9 %	∞
Boundary Effects	±1.0 %	R	$\sqrt{3}$	1	1	±0.6 %	±0.6 %	∞
Linearity	±4.7 %	R	$\sqrt{3}$	1	1	±2.7 %	±2.7 %	∞
System Detection Limits	±1.0 %	R	$\sqrt{3}$	1	1	±0.6 %	±0.6 %	∞
Modulation Response <sup>m</sup>	±2.4 %	R	√3	1	1	±1.4 %	±1.4 %	∞
Readout Electronics	±0.3 %	N	1	1	1	±0.3 %	±0.3 %	∞
Response Time	±0.8 %	R	$\sqrt{3}$	1	1	±0.5 %	±0.5 %	∞
Integration Time	±2.6 %	R	$\sqrt{3}$	1	1	±1.5 %	±1.5 %	∞
RF Ambient Noise	±3.0 %	R	$\sqrt{3}$	1	1	±1.7 %	±1.7 %	∞
RF Ambient Reflections	±3.0 %	R	$\sqrt{3}$	1	1	±1.7 %	±1.7 %	∞
Probe Positioner	±0.02 %	R	$\sqrt{3}$	1	1	±0.0 %	±0.0 %	∞
Probe Positioning	±0.4 %	R	$\sqrt{3}$	1	1	±0.2 %	±0.2 %	∞
Max. SAR Eval.	±2.0 %	R	$\sqrt{3}$	1	1	±1.2 %	±1.2 %	∞
Test Sample Related			•					
Device Positioning	±2.9%	N	1	1	1	±2.9 %	±2.9 %	145
Device Holder	±3.6%	N	1	1	1	±3.6 %	±3.6 %	5
Power Drift	±5.0%	R	$\sqrt{3}$	1	1	±2.9 %	±2.9 %	∞
Power Scaling	±0%	R	$\sqrt{3}$	1	1	±0.0 %	±0.0 %	∞
Phantom and Setup		•	•					
Phantom Uncertainty	±6.1%	R	$\sqrt{3}$	1	1	±3.5 %	±3.5 %	8
SAR correction	±1.9%	N	1	1	0.84	±1.9 %	±1.6 %	∞
Liquid Cond. (mea.) <sup>DAK</sup>	±2.5%	N	1	0.78	0.71	±2.0 %	±1.8 %	∞
Liquid Perm. (mea.) <sup>DAK</sup>	±2.5%	N	1	0.23	0.26	±0.6 %	±0.7 %	∞
Temp. unc. – Conductivity	±3.4%	R	√3	0.78	0.71	±1.5 %	±1.4 %	∞
Temp. unc. – Permittivity	±0.4%	R	$\sqrt{3}$	0.23	0.26	±0.1 %	±0.1 %	∞
Combined Std. Uncertainty						±11.3%	±11.2%	459
Expanded STD Uncertainty						±22.6%	±22.4%	



DASY5 Uncertainty Budget, according to IEEE 1528 (3 - 6 GHz range)								
<b>F B 1 1</b>	Uncert.	Prob.		(ci)	(ci)	Std. Unc.	Std. Unc.	(vi)
Error Description	value	Dist.	Div.	1g	10g	(1g)	(10g)	veff
Measurement System								
Probe Calibration	±6.55 %	N	1	1	1	±6.55 %	±6.55 %	∞
Axial Isotropy	±4.7 %	R	√3	0.7	0.7	±1.9 %	±1.9 %	∞
Hemispherical Isotropy	±9.6 %	R	√3	0.7	0.7	±3.9 %	±3.9 %	∞
Boundary Effects	±2.0 %	R	√3	1	1	±1.2 %	±1.2 %	∞
Linearity	±4.7 %	R	$\sqrt{3}$	1	1	±2.7 %	±2.7 %	∞
System Detection Limits	±1.0 %	R	$\sqrt{3}$	1	1	±0.6 %	±0.6 %	∞
Modulation Response <sup>m</sup>	±2.4 %	R	$\sqrt{3}$	1	1	±1.4 %	±1.4 %	∞
Readout Electronics	±0.3 %	N	1	1	1	±0.3 %	±0.3 %	∞
Response Time	±0.8 %	R	√3	1	1	±0.5 %	±0.5 %	∞
Integration Time	±2.6 %	R	$\sqrt{3}$	1	1	±1.5 %	±1.5 %	∞
RF Ambient Noise	±3.0 %	R	$\sqrt{3}$	1	1	±1.7 %	±1.7 %	∞
RF Ambient Reflections	±3.0 %	R	$\sqrt{3}$	1	1	±1.7 %	±1.7 %	∞
Probe Positioner	±0.04 %	R	$\sqrt{3}$	1	1	±0.0 %	±0.0 %	∞
Probe Positioning	±0.8 %	R	$\sqrt{3}$	1	1	±0.5 %	±0.5 %	∞
Max. SAR Eval.	±4.0 %	R	$\sqrt{3}$	1	1	±2.3 %	±2.3 %	∞
Test Sample Related		•						
Device Positioning	±2.9%	N	1	1	1	±2.9 %	±2.9 %	145
Device Holder	±3.6%	N	1	1	1	±3.6 %	±3.6 %	5
Power Drift	±5.0%	R	√3	1	1	±2.9 %	±2.9 %	∞
Power Scaling	±0%	R	√3	1	1	±0.0 %	±0.0 %	∞
Phantom and Setup						·		
Phantom Uncertainty	±6.6%	R	$\sqrt{3}$	1	1	±3.8 %	±3.8 %	∞
SAR correction	±1.9%	N	1	1	0.84	±1.9 %	±1.6 %	∞
Liquid Cond. (mea.) <sup>DAK</sup>	±2.5%	N	1	0.78	0.71	±2.0 %	±1.8 %	∞
Liquid Perm. (mea.) <sup>DAK</sup>	±2.5%	Ν	1	0.23	0.26	±0.6 %	±0.7 %	∞
Temp. unc. – Conductivity	±3.4%	R	√3	0.78	0.71	±1.5 %	±1.4 %	∞
Temp. unc. – Permittivity	±0.4%	R	√3	0.23	0.26	±0.1 %	±0.1 %	∞
Combined Std. Uncertainty						±11.9%	±11.8%	569
Expanded STD Uncertainty						±23.8%	±23.6%	



## Annex A System Check Result

Test Date: 10/31/2019


## SystemPerformanceCheck-SAM2-D450HSL DUT: Dipole 450 MHz D450V2; Type: D450V2 Communication System: CW; Frequency: 450 MHz; Duty Cycle: 1:1 Medium parameters used: f = 450 MHz; $\sigma = 0.86$ S/m; $\epsilon_r = 43$ ; $\rho = 1000$ kg/m<sup>3</sup> Phantom section: Flat Section DASY5 Configuration:

- Probe: EX3DV4 SN7524; ConvF(10.9, 10.9, 10.9) @ 450 MHz; Calibrated: 4/18/2019
- Sensor-Surface: 4mm (Mechanical Surface Detection)
- Electronics: DAE4 Sn1552; Calibrated: 5/23/2019
- Phantom: SAM2; Type: QD OVA 004 AA; Serial: 2089
- Measurement SW: DASY52, Version 52.10 (2); SEMCAD X Version 14.6.12 (7450)

# **Configuration/d=15mm, Pin=250mW, dist=4mm (EX-Probe) 2 2/Area Scan (5x22x1):** Measurement grid: dx=15mm, dy=15mm; Maximum value of SAR (measured) = 1.16 W/kg

**Configuration/d=15mm, Pin=250mW, dist=4mm (EX-Probe) 2 2/Zoom Scan (7x7x7) (5x5x7)/Cube 0:** Measurement grid: dx=8mm, dy=8mm, dz=5mm; Reference Value = 41.36 V/m; Power Drift = -0.02 dB Peak SAR (extrapolated) = 1.61 W/kg

SAR(1 g) = 1.09 W/kg; SAR(10 g) = 0.736 W/kg Maximum value of SAR (measured) = 1.17 W/kg

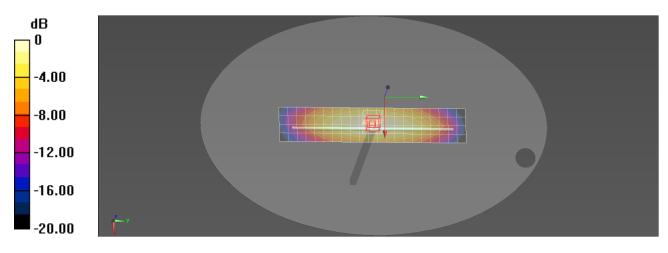

#### 0 dB = 1.17 W/kg = 0.68 dBW/kg



## Annex B Test Data Plots

Plot 1#

Test Date: 10/31/2019

#### DUT: Walkie Talkie; Type: M-920

#### Procedure Name: PTT 450MHz Channel 22 Front of Face

Communication System: PTT; Frequency: 462.7250 MHz; Duty Cycle: 1:1 Medium parameters used: f = 463 MHz;  $\sigma$  = 0.87 S/m;  $\varepsilon_r$  = 42.68;  $\rho$  = 1000 kg/m<sup>3</sup>; Tissue Temp (celsius)-22.5°C; Phantom section: Flat Section DASY5 Configuration:


- Probe: EX3DV4 SN7524; ConvF(10.9, 10.9, 10.9) @ 462.725 MHz; Calibrated: 4/18/2019
- Sensor-Surface: 4mm (Mechanical Surface Detection)
- Electronics: DAE4 Sn1552; Calibrated: 5/23/2019
- Phantom: SAM2; Type: QD OVA 004 AA; Serial: 2089
- Measurement SW: DASY52, Version 52.10 (2); SEMCAD X Version 14.6.12 (7450)

#### Configuration/PTT 450MHz Channel 22 Front of Face/Area Scan (7x13x1): Measurement grid:

dx=15mm, dy=15mm; Maximum value of SAR (measured) = 0.239 W/kg

**Configuration/PTT 450MHz Channel 22 Front of Face/Zoom Scan (5x5x7)/Cube 0:** Measurement grid: dx=8mm, dy=8mm, dz=5mm; Reference Value = 17.53 V/m; Power Drift = -0.04 dB Peak SAR (extrapolated) = 0.312 W/kg

SAR(1 g) = 0.233 W/kg; SAR(10 g) = 0.170 W/kg Maximum value of SAR (measured) = 0.246 W/kg

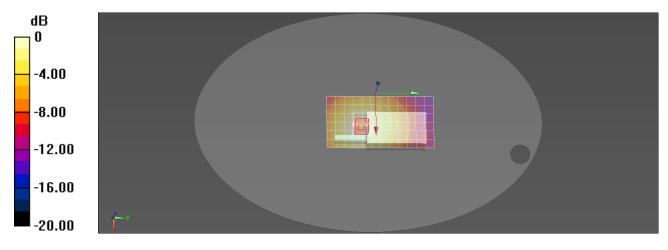

0 dB = 0.246 W/kg = -6.09 dBW/kg



Plot 2#

Test Date: 10/31/2019

#### DUT: Walkie Talkie; Type: M-920

#### Procedure Name: PTT 450MHz Channel 1 Body Back

Communication System: PTT; Frequency: 462.5625 MHz; Duty Cycle: 1:1

Medium parameters used: f = 463 MHz;  $\sigma$  = 0.87 S/m;  $\epsilon_r$  = 42.68;  $\rho$  = 1000 kg/m<sup>3</sup>; Tissue

Temp (celsius)-22.5°C; Phantom section: Flat Section

DASY5 Configuration:

- Probe: EX3DV4 SN7524; ConvF(10.9, 10.9, 10.9) @ 462.563 MHz; Calibrated: 4/18/2019
- Sensor-Surface: 4mm (Mechanical Surface Detection)
- Electronics: DAE4 Sn1552; Calibrated: 5/23/2019
- Phantom: SAM2; Type: QD OVA 004 AA; Serial: 2089
- Measurement SW: DASY52, Version 52.10 (2); SEMCAD X Version 14.6.12 (7450)


**Configuration/PTT 450MHz Channel 1 Body Back/Area Scan (7x13x1):** Measurement grid: dx=15mm, dy=15mm; Maximum value of SAR (measured) = 0.344 W/kg

Configuration/PTT 450MHz Channel 1 Body Back/Zoom Scan (5x5x7)/Cube 0: Measurement grid:

dx=8mm, dy=8mm, dz=5mm; Reference Value = 19.86 V/m; Power Drift = -0.14 dB

Peak SAR (extrapolated) = 0.442 W/kg

SAR(1 g) = 0.320 W/kg; SAR(10 g) = 0.227 W/kg Maximum value of SAR (measured) = 0.338 W/kg

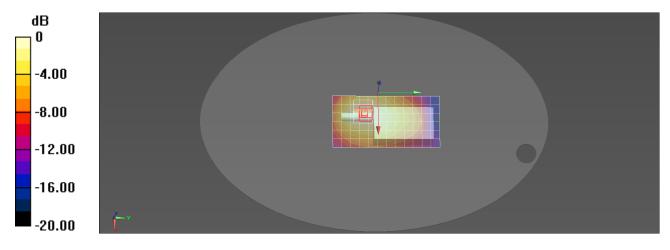

0 dB = 0.338 W/kg = -4.71 dBW/kg



# Annex C SAR Test Setup Photos

Refer to "1910RSU037-UT" file.



## **Annex D EUT Photos**

Refer to "1910RSU037-UE" file.



## Annex E Equipment Calibration Report

Please refer to document "Annex E - Equipment Calibration Report.pdf".