# **Interactive Whiteboard**

**User Manual** 

Please retain this manual properly for future reference.

This is the general manual for Interactive Whiteboard and there might be slight differences between the actual product and the descriptions.

#### **Table of Contents**

ATTENTION	2
SYSTEM REQUIREMENTS	3
INTRODUCTION	4
HOW TO INSTALL	5
How to Install Hardware	
How to Install Software	15
CALIBRATION	16
HOW TO USE THE WHITEBOARD	19
HOW TO USE THE SMART PEN TRAY	21
SCREEN KEYS	23
TROUBLE SHOOTING	25
SPECIFICATIONS	27

#### **Attention**

- Do not expose this whiteboard to rain or moisture so as to reduce the risk of fire or electric shock.
- Do not expose this whiteboard to fire, electric shock and long time direct sunlight.
- This device is heavy with N.W. over 15 Kg. Use expansion bolts to fix the device to the wall.
- When the projector and interactive whiteboard are used together, do not stare directly at the light from the projector. Especially the kids should be warned about this.
- This user manual is only applicable to IR interactive whiteboard products.
- Only the matched pens from our company or human fingers can write or operate on the interactive whiteboard.
- This product uses the IR annotation technology. Make sure the product will not contact with any other hard objects so as to avoid deformation from squeezing.
- If the interactive whiteboard is connected with wire, make sure the connection between this device and computer is safe. You are recommended to do hidden wiring to avoid pulling and dragging the cables.
- If the interactive whiteboard is connected with wire, use the cables in the accessory box. Other cables might not be compatible with this product.
- If the interactive whiteboard is in RF connection, the distance between the wireless receiver and interactive whiteboard must ≤15m and no obstacles shielding electromagnetic waves are allowed.
- Do not touch, cut,or scratch the panel and frame with sharp or hard objects. Do not drill holes or nail in any place of the product since it might damage the device.
- For the instructions of writing software, please refer to its user manual and there will be no more instructions in this user manual.

### **System Requirements**

#### Lowest Environmental Requirements:

CPU: 1.0GHz×86Memory: 512M Byte

Display Card: Support 256 or above

Hard Disk:1GByte

Screen Display Resolution: 800×600 \, 1024×768 \, 1280×1024

USB1.1 Port

#### Recommended:

CPU: 2.0GHz×86

• Memory: 2GB or above

Display Card: Support 256 or above

Hard Disk:2GByte

Screen Display Resolution: 1024×768、1280×1024

USB2.0 Port

Software Running Environment: Microsoft Windows XP/Vista/Win7/Win8

#### Introduction

This interactive whiteboard uses IR scan and sensor technology. Working seamlessly with a projector and computer, the Interactive whiteboard can become a large touch display. Any projected image in the whiteboard can be operated by pens or fingers directly. Thus, it provides an interactive presentation platform for the lecturers.

#### Main Performances:

- Writing: User can write and draw with pens or fingers directly on the display panel and show your writing info instantaneously during speech and lecture.
- Annotation: The user can operate and annotate over any popular format files including PPT、WORD、EXCEL、AVI、MPEG、JPEG and etc.
- Touching: In working mode, the interactive whiteboard can also be a high precision touching interactive whiteboard. User can use fingers or wand as a mouse to click and drag directly on the display panel.
- Touch Recognition: The interactive whiteboard can recognize touch of a single-finger, multi-finger, double click, left-click and right click.
- Hot Keys: Have hot keys on one side or both sides.
- Smart Pen tray: Support smart pen tray. User can change pen writing stroke colors when using this smart pen tray.
- Drive Free Mode: This product design is in accordance with HID category standard and supports drive free mode.
- Display Panel: High gain and high contrast display
- Energy Conservation: Power consumption less than 1W. No need for any independent power supply.

Note: On the upper left and bottom right corner, there are projection area line s(such as " " "). When images are projected to the interactive whiteboard, projection area should be limited within these lines for better writing effects.


#### How to Install

The following instructions have stated the installation for all series products from our company. The user can refer to corespondent instructions according to the products purchased. Please contact the local distributor for mor details.


#### **How to Install Hardware**


#### I. Whiteboard installation for A series

1. Firstly install the smart pen tray of the interactive whiteboard: Insert the box underprop into the pen tray. The PCB in pen tray should be exactly in the outlet of the underprop and the pen tray joints should be exactly in the box underprop slot. Screw in two M3 screws from the bottom of the pen tray. Shown as follow:

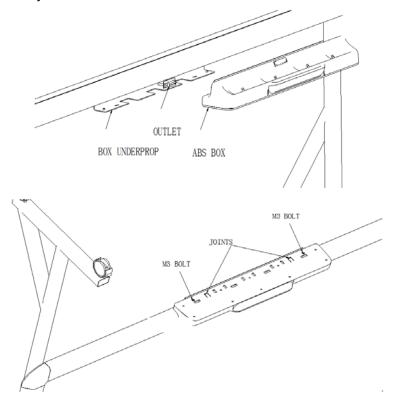


2. Drill 8 holes for expansion bolts on the wall according to your preference (shown as a). Install the wall-mount brackets and tighten bolts into each hole. Hang up the whiteboard with calibration hole D in four corners in the wall-mounting bolts (shown as b).

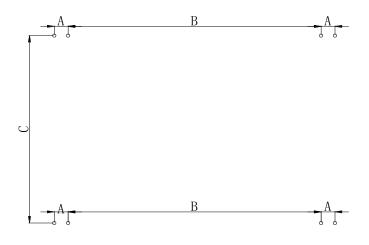

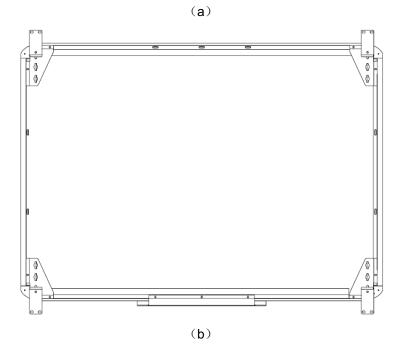


#### II. Whiteboard installation for B series

1. Firstly install the smart pen tray of the interactive whiteboard: Lock the smart pen tray to the metal supporting plate with three M5 bolts. Shown as follow:

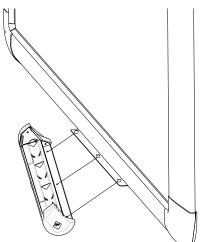


2. There are wall-mount brackets A and B on the back of the whiteboard. Wall-mount brackets B should be screwed. Shown as follow:

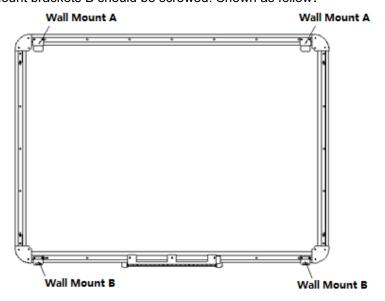

Install the fixing plate according to the space between wall-mounts brackets A:




After hanging up the whiteboard, drill 2 holes for expansion bolts according to actual positions, and fix wall-mount brackets B into the wall. Shown as follow:

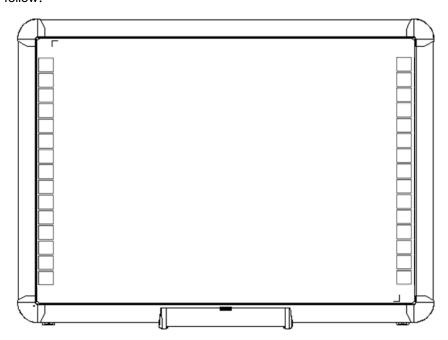


#### III. Whiteboard installation for C series

The whiteboards in this series have ultra-thin frames. To install with traditional blackboards, you are recommended to have embedded installation. You can contact the local distributor or our company to obtain the engineering drawings for corresponding products.

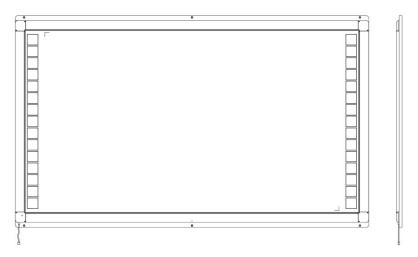

Whiteboard Diagram

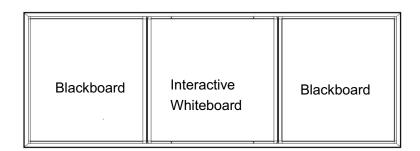



Black	Sliding	Interactive	Blackboard
board	Blackboard	Whiteboard	

Embedded Installation Diagram

#### IV. Whiteboard installation for D. E&F series

1. Firstly install the smart pen tray of the interactive whiteboard: First, please insert the 4 pin pen cable into the pen box of smart pen tray. Insert the box under prop into the pen tray. The PCB in pen tray should be exactly in the outlet of the underprop and the pen tray joints should be exactly in the box underprop slot. Screw in two M3 screws from the bottom of the pen tray. Shown as follow:

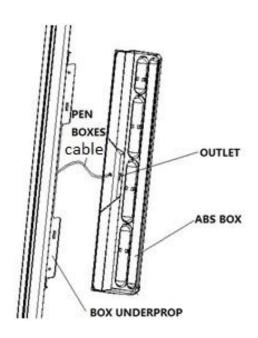


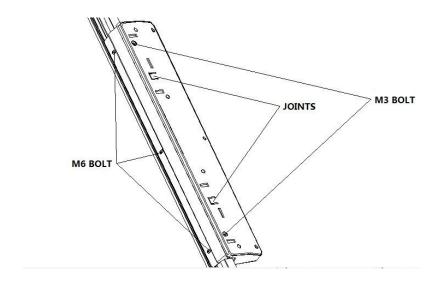



2. There are 4 pieces of whiteboard wall-mount brackets in the accessory box as follow. Place them on the wall according to the position of the hooks on the back of whiteboard and fix them with expansion bolts.



3. Hang the whiteboard onto wall-mount brackets and make sure the hooks on whiteboard catch the brackets. Shown as follow C,D,E:

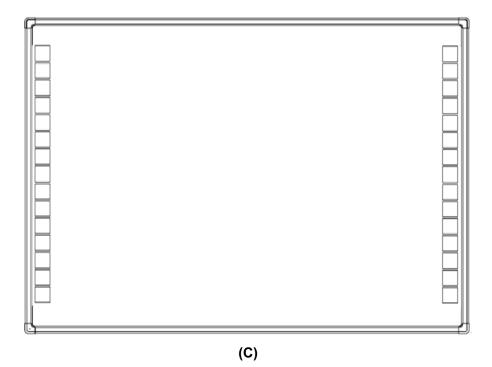

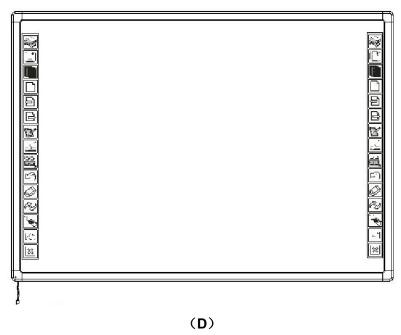

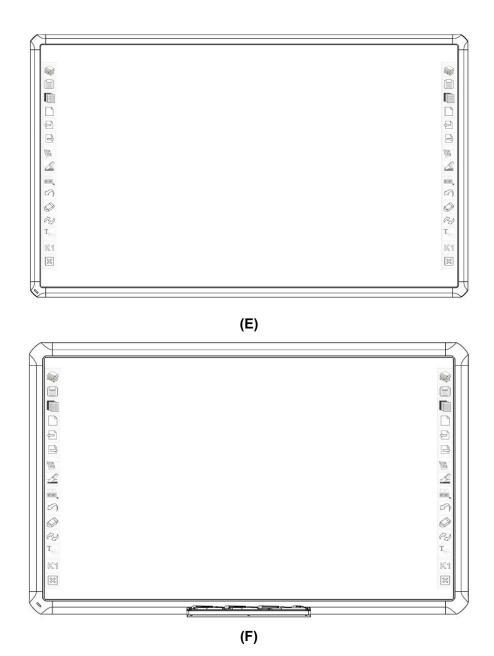

#### V. Interactive System Building

- 1. Make sure the whiteboard is firmly fixed before building the interactive system.
- 2. Adjust the positions of the projector and whiteboard to make sure images are projected to writing area of the whiteboard in full screen.
- One corner of the whiteboard is set with USB port(position of USB port will be varied in different models). Plug the USB cable into the USB port. The USB cable in the accessory box is designed for this whiteboard. Normal USB cable might not be compatible to this whiteboard.
- 4. Connect the USB cable to the USB port in the computer.
- 5. Connect the computer and projector (You can refer to the projector User Manual for more details).

#### **How to Install Software**

Before software installation, exit the anti-virus or virus protection softwares in your computer. The software installation instructions in this manual are based on Microsoft Windows 7 system.

There is an installation disc in the accessory box. Insert the installation disc and you can see the instructions. You can open the disc by manual if you do not see.

Follow the instructions and complete the installation of the whiteboard software. For complete functions, you can click Full Installation and complete the installation as the instructions show. The computer needs to restart so as to activate the software after installation completed. Save all the files in the computer and restart .

#### Calibration

To work normally, the strokes on the whiteboard should coincide with the actual ones so as to calibrate accurately. The following situations need a calibration.

- The whiteboard is used for the first time.
- The whiteboard softwares have been reinstalled or updated.
- The position of the whiteboard or projector is changed.
- The computer connected to the whiteboard is changed.
- The computer's resolution ratio or refresh rate is changed.
- Calibration deviation caused by other reasons.

#### Steps are as follow:

Step 1: Connect all necessary devices and make sure the whiteboard service program has been auto-runed once the computer is power on. If not, click "Start-All Programs-HHAP-WhiteBoard Driver-WhiteBoard Driver" and run the whiteboard service program.

Step 2: Wait for seconds and the whiteboard drive icon in taskbar notification area will turn green from red and this indicates that the device and drive are connected.




The service program icon has two status: Icon turns red when the whiteboard and program are disconnected; icon turns green when whiteboard can work normally. To work normally, the whiteboard and computer should be connected correctly and service program icon is green.

Step 3: Adjust the projection angle and make sure the projection area is within the whiteboard display area.

Step 4: Mouse click the whiteboard service program icon at the bottom right of the screen and you can see the following:



Click "Calibration" and the whiteboard will be in calibration interface as follow:

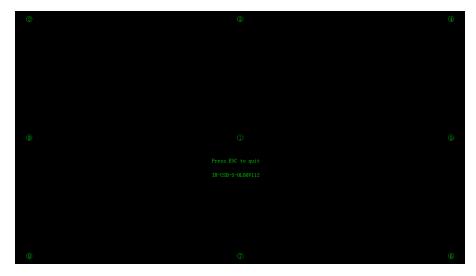

Step 5: Vertically touch the centre of the flashing "+" with the interactive whiteboard pen tip until the flashing "+" move to the next calibration point and thus one point is calibrated. Follow the instructions in the calibration

interface and complete the calibration of other points thus the interactive whiteboard calibration is finished.

#### Notes:

- Calibration with a finger might lead to inaccurate calibration. Calibration with the pens will gain a better effect.
- Wrong calibration may lead to whiteboard not working and this requires recalibration.
- Pressing "ESC" during calibration can cancel the current calibration operation.
- There are minor differences between the calibration interface of different version softwares. The calibration, however, is very much the same. For products with shortcut keys, there are shortcut-key calibration and you just need to follow the instructions.
- When a laptop pc with windows 8 system connect a whiteboard touch s creen, and set the projective mode as "Duplicate" mode, in some resol ution, the laptop may can't get full screen display, then the calibration a ccuracy in the whiteboard touch screen will not be accurate too, so ple ase select others resolution which can be displayed fully by the laptop pc to avoid this problem.

#### How to Use the Whiteboard

The whiteboard can be normally used after calibration finished.

Common computer operations can be realized without opening the writing software.

**Left Click** Clicking the whiteboard with a finger or pen has the same effect as mouse left click. Normally it is for selection or pointing.

**Double Click** Double clicking the whiteboard with a finger or pen has the same effect as mouse double click.

**Right Click** Touching the whiteboard with a finger or pen for about 2 seconds has the same effect as mouse right click.

Double click the writing software icon on desktop to run the software.



You can also do the following in the writing software:

**Write** You can write with the pen pressing and sliding on the whiteboard.

Operations of drawing and erasing are similar to writing.


**Roaming** Spread your palm and press the whiteboard with five fingers at the same time and slide then you can have the roaming function.

Tools and Resources The whiteboard with writing software running can realize more functions. You can refer to the writing software user manual for more details.

#### Notes:

- When you are roaming with your palm, you need to have five fingers
  pressing the whiteboard at the same time. Your fingers will be
  recognized as being writing if they are not pressing at the same time.
- For the best effect, please use the pen in the accessory box or fingers to operate.
- To avoid scratching, do not use other objects instead of the pen. The whiteboard should be carefully kept to avoid cover membrane being scratched.
- Refer to the writing software user manual for more functions and detailed instructions.
- When the DPI (Text Size) is set as "Larger-150%", the writing software will not work properly.
  - Please enable the "Use Windows XP style DPI scaling" item in "Custo m DPI Setting" menu to make the writing software work

### **How to Use the Smart Pen Tray**

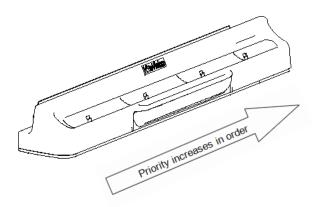

The smart pen tray can contain three whiteboard pens and one eraser. The slots on the pen tray from left to right are for red pen, black pen, blue pen and eraser. And all of them have priority properties: The eraser has the top priority, then blue pen, black pen and lastly the red pen. When you pick up a pen from the pen tray and write on whiteboard, the stroke color is what the slot represents. When you pick up several pens from the pen tray, the stroke color will be what the slot which has the highest priority represents.

When pens are picked up from the pen tray, you can choose the stroke color from the software tools bar. Put the pens into corresponding slot in the pen tray when you are not going to use them.


The drive icon is green when the service program and whiteboard are connected. If the writing software is not open, you can use the eraser or any pen from the pen tray to open the software and create a new white page. If the writing page is open, you can use the eraser or any pen from the pen tray to switch other interface to writing software interface.

## Notes:

- The stroke colors are only associated with the pen tray slots and have no relation with pen colors.
- When pens are in the pen tray, for convenience, the pen colors should be correspondent with the color marks in the pen tray slot.
- The pen tray slot has built-in PCBs. Do not put other objects in it. Do not expose the pen tray to liquid. Clean the dust in the pen tray slot with a dry cloth regularly. The pen tray might work abnormally if it is not cleaned for a long time.

## **Screen Keys**

Screen keys are called hot keys as well. If the whiteboard is set with hot keys and WhiteBoard is not running, you can run Whiteboard by clicking the hot keys. You can realize the normal functions by clicking the hot keys when the Whiteboard is running.

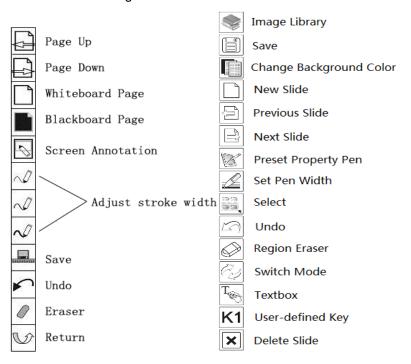



Different models have different hot key functions. Refer to the above hot key explanations according to the actual models your purchased.

## **Trouble Shooting**

	Solutions to Problems						
Phenomenon	Presumable Causes	Solutions					
No service program icon on the right bottom of the computer.	Service program is not started up.  Service program is not installed.	Start up the service program.  Install the service program.					
Drive icon is red.	The whiteboard is not connected to the computer.	Connect the whiteboard and computer with the USB cable.					
	The self-checking of whiteboard is not successful and can not be connected.	Check if there is any other objects pressing on the surface of the whiteboard. Remove if any.					
	Drive malfunction.	Uninstall the drive and reinstall it.					
Drive icon is green.	Inaccurate calibration.	Refer to instructions above and recalibrate.					
No green crossed cursor on whiteboard.	The projector is not adjusted correctly so that part of the image is outside the whiteboard projection area.	Adjust the projector.					
Mouse pointer can move but no writing stroke.	The software is not under writing mode.	Shift to writing mode and set mouse status as pen.  Change the stroke color					
	No service program icon on the right bottom of the computer.  Drive icon is red.  Drive icon is green.  No green crossed cursor on whiteboard.  Mouse pointer can move but no writing	No service program is not started up.  Service program is not started up.  Service program is not installed.  The whiteboard is not connected to the computer.  The self-checking of whiteboard is not successful and can not be connected.  Drive icon is green.  Drive icon is green.  Inaccurate calibration.  The projector is not adjusted correctly so that part of the image is outside the whiteboard projection area.  Mouse pointer can move but no writing stroke.  Service program is not started up.  Service program is not installed.  The whiteboard is not successful and can not be connected.  The projector is not adjusted correctly so that part of the image is outside the whiteboard projection area.  The software is not under writing mode.					

	move under	is same with the	or background color.
	desktop operation	background color.	
	mode but cannot		
	write under writing		
	mode.		
The pen is	Part of the whiteboard have large deviations.	Inaccurate	Decelibrate correctly
working but		calibration.	Recalibrate correctly.
there are		There is projection	Adjust the projector.
deviations.		distortion.	
		Conflict with anti-virus	Exit the anti-virus
		softwares.	softwares.
The pen is	The strokes do	The computer is	Exit the softwares
The pen is working but	not sync with the writing and there is a delay.	running too many	which will not be used
reactions are		softwares.	at present.
		The computer's	Contact professional
slow.		hardware	personnel to upgrade
		configuration is too	the computer
		low.	hardware.
	Cannot change the stroke color when not picking up or orking putting down the pen from the pen tray.	There are other objects	Remove other objects
The pen tray		or dust in the pen tray	or clean the dust from
		slots.	the pen tray slots.
		The pen tray is not fixed	Take off and re-plug
_		firmly to the whiteboard	the pen tray and
Horrially.		or not well-connected	screw firmly on the
	uay.	with the whiteboard.	bottom of the pen tray.

## **Specifications**

Technology Infrared Touch System Pen, Finger Resolution 32767 X 32767

Tracing Velocity 125 P/S Scan Period ≤8ms

Consumption(Wired) Power<1W

Port USB

Operation System Microsoft Windows XP/Vista/Win7/Win8

-15°C ~ 50°C Operation Temperature Operation Humidity 20~90% Storage Temperature -40°C  $\sim 50$ °C

Storage Humidity 10~95% We commit ourselves to product upgrading and technology improvement. The contents in this manual are subject to be changed without prior notice.

**FCC Caution:** Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate this equipment.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

This device and its antenna(s) must not be co-located or operating in conjunction with any other antenna or transmitter.

This equipment should be installed and operated with minimum distance 20cm between the radiator and your body.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a

residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- -- Reorient or relocate the receiving antenna.
- -- Increase the separation between the equipment and receiver.
- -- Connect the equipment into an outlet on a circuit different from that to which the

receiver is connected.

-- Consult the dealer or an experienced radio/TV technician for help.