



2DH5-Ant1-Hop_2402-PASS




2DH5-Ant1-Hop_2480-PASS

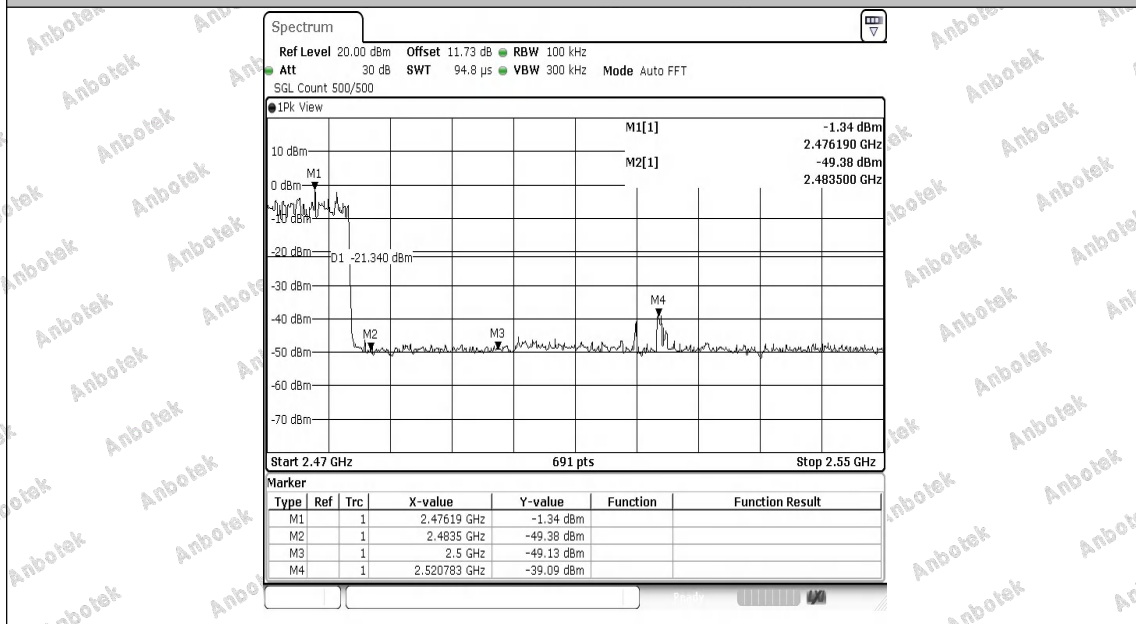

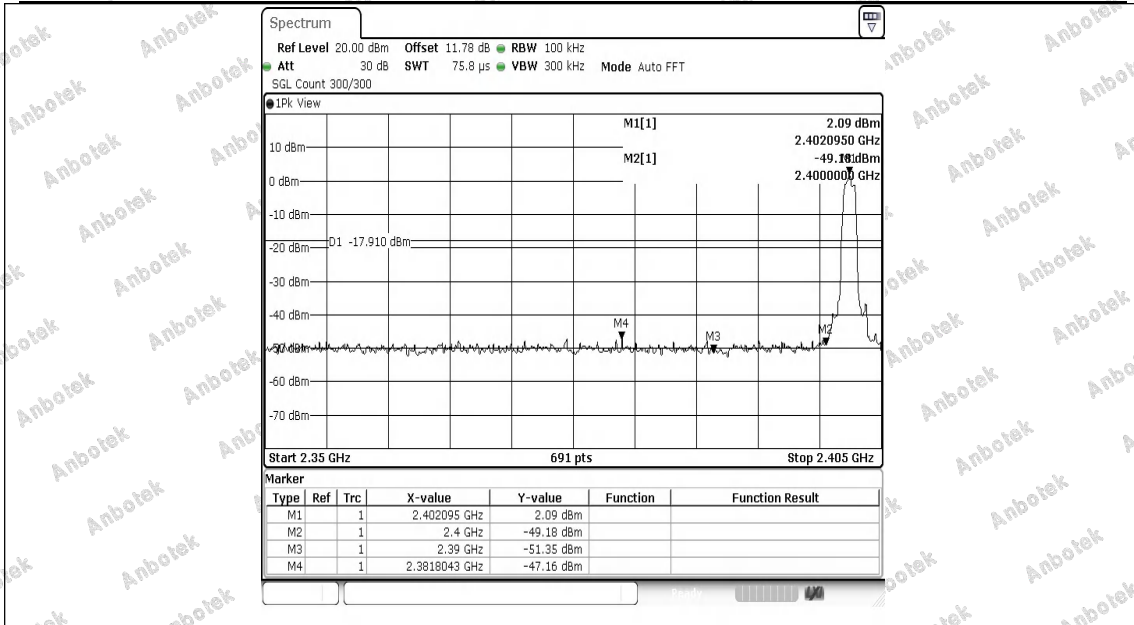


3DH5-Ant1-2402-PASS

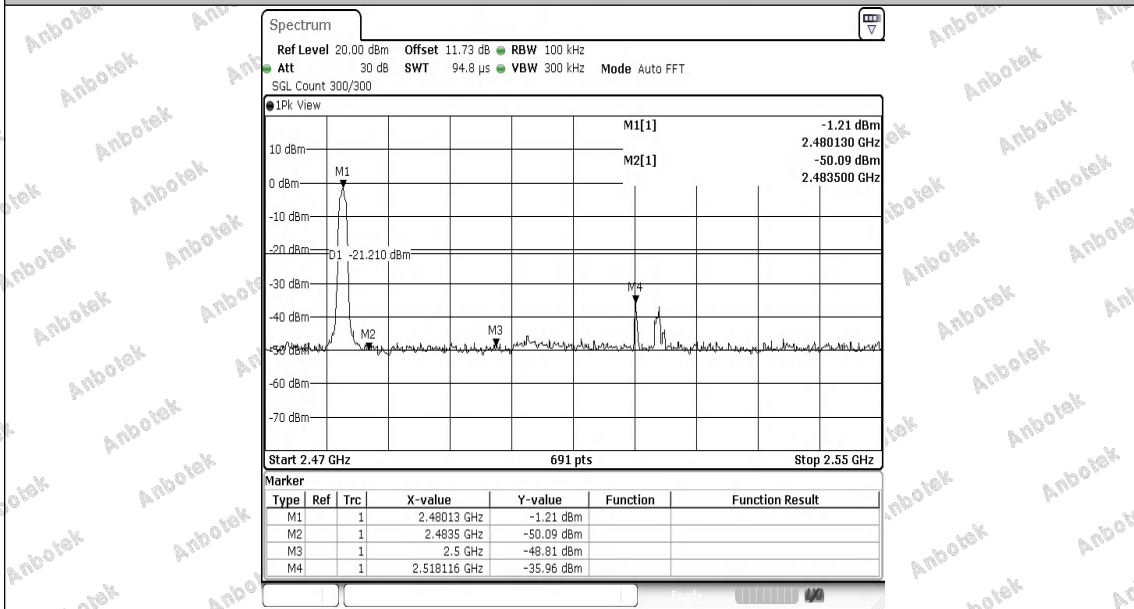


3DH5-Ant1-2480-PASS



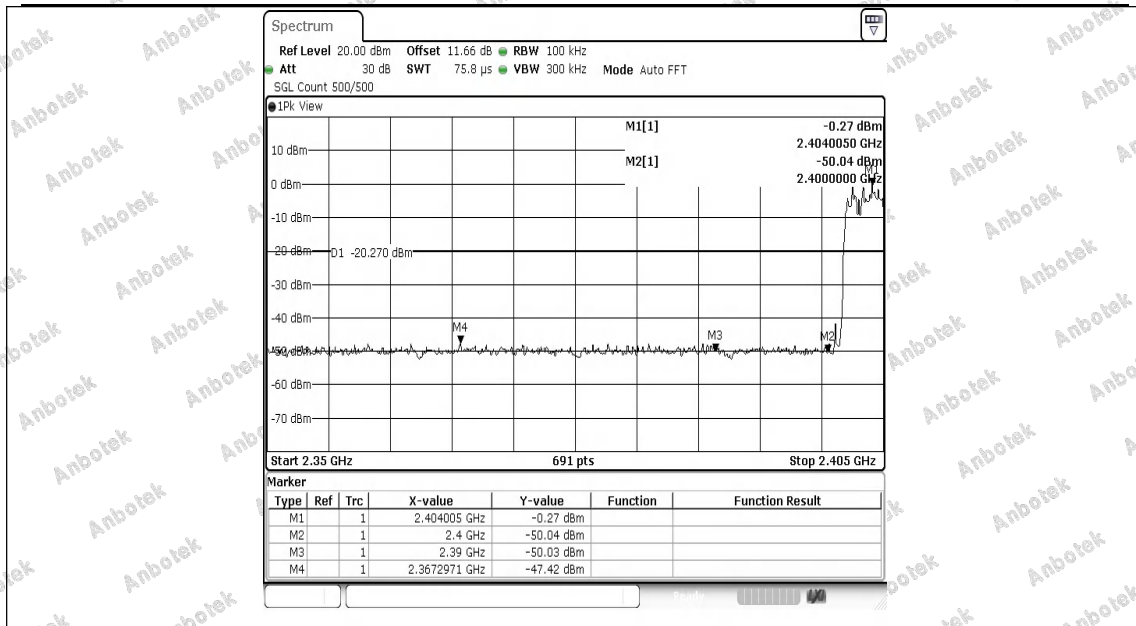

3DH5-Ant1-Hop_2402-PASS

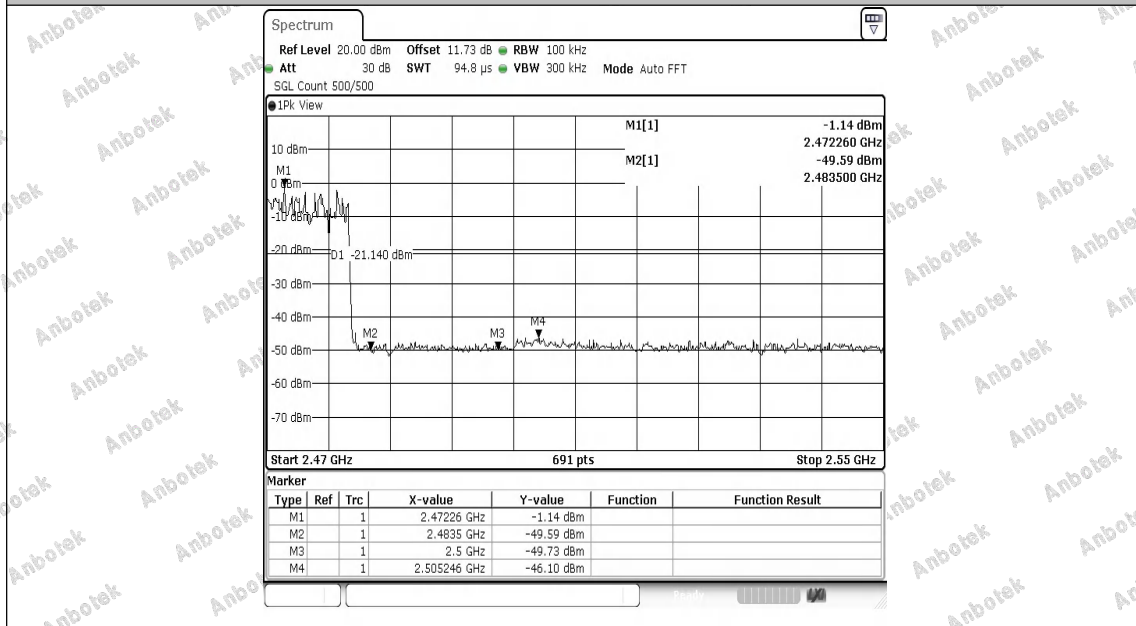

3DH5-Ant1-Hop_2480-PASS




Appendix H: Conducted Spurious Emission

Test Result


TestMode	Antenna	Frequency[MHz]	FreqRange [MHz]	RefLevel [dBm]	Result [dBm]	Limit [dBm]	Verdict
DH5	Ant1	2402	0~Reference	-1.70	-1.70	---	PASS
DH5	Ant1	2402	30~1000	-1.70	-56	≤-21.7	PASS
DH5	Ant1	2402	1000~26500	-1.70	-29.44	≤-21.7	PASS
DH5	Ant1	2441	0~Reference	-1.77	-1.77	---	PASS
DH5	Ant1	2441	30~1000	-1.77	-56.61	≤-21.77	PASS
DH5	Ant1	2441	1000~26500	-1.77	-28.93	≤-21.77	PASS
DH5	Ant1	2480	0~Reference	-5.25	-5.25	---	PASS
DH5	Ant1	2480	30~1000	-5.25	-56.79	≤-25.25	PASS
DH5	Ant1	2480	1000~26500	-5.25	-27.5	≤-25.25	PASS
2DH5	Ant1	2402	0~Reference	-0.30	-0.30	---	PASS
2DH5	Ant1	2402	30~1000	-0.30	-56.38	≤-20.3	PASS
2DH5	Ant1	2402	1000~26500	-0.30	-27.01	≤-20.3	PASS
2DH5	Ant1	2441	0~Reference	-3.99	-3.99	---	PASS
2DH5	Ant1	2441	30~1000	-3.99	-56.82	≤-23.99	PASS
2DH5	Ant1	2441	1000~26500	-3.99	-28.01	≤-23.99	PASS
2DH5	Ant1	2480	0~Reference	-5.44	-5.44	---	PASS
2DH5	Ant1	2480	30~1000	-5.44	-56.96	≤-25.44	PASS
2DH5	Ant1	2480	1000~26500	-5.44	-31.93	≤-25.44	PASS
3DH5	Ant1	2402	0~Reference	-3.54	-3.54	---	PASS
3DH5	Ant1	2402	30~1000	-3.54	-56.83	≤-23.54	PASS
3DH5	Ant1	2402	1000~26500	-3.54	-29.82	≤-23.54	PASS
3DH5	Ant1	2441	0~Reference	-2.24	-2.24	---	PASS
3DH5	Ant1	2441	30~1000	-2.24	-57.41	≤-22.24	PASS
3DH5	Ant1	2441	1000~26500	-2.24	-27.84	≤-22.24	PASS
3DH5	Ant1	2480	0~Reference	-1.13	-1.13	---	PASS
3DH5	Ant1	2480	30~1000	-1.13	-56.76	≤-21.13	PASS
3DH5	Ant1	2480	1000~26500	-1.13	-30.67	≤-21.13	PASS



Test Graphs

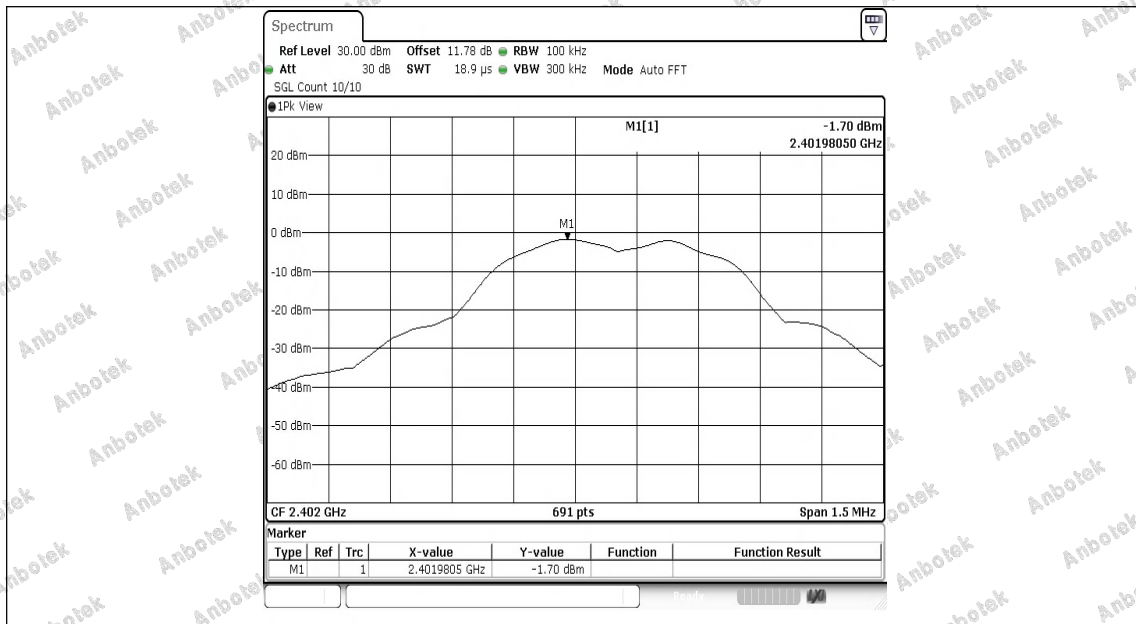


DH5-Ant1-2402-0~Reference-PASS

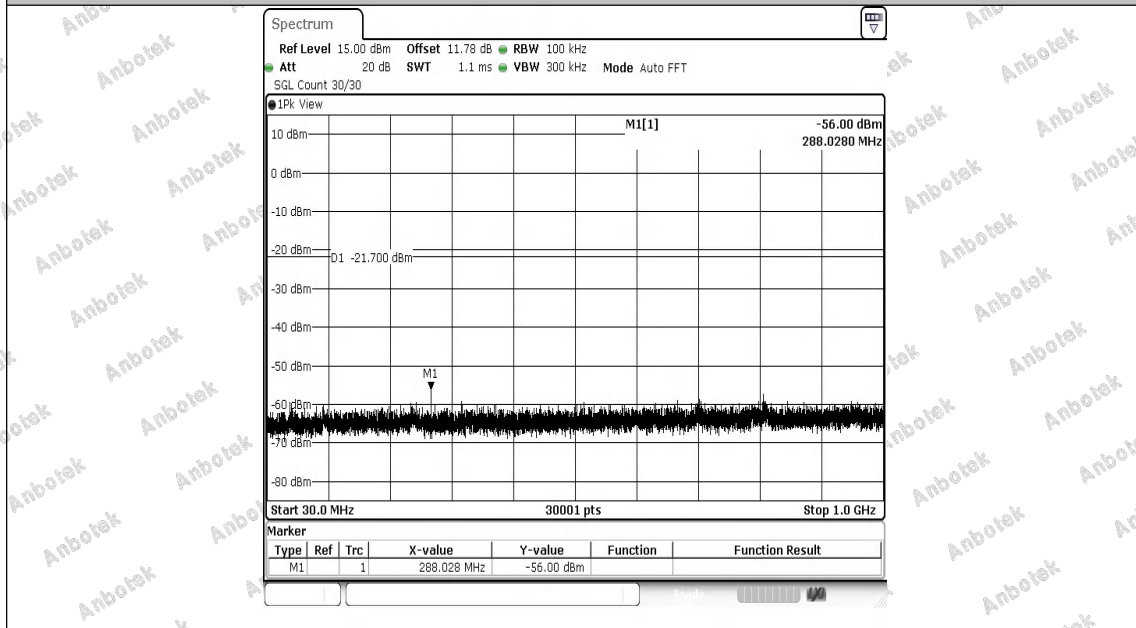


DH5-Ant1-2402-30~1000-PASS



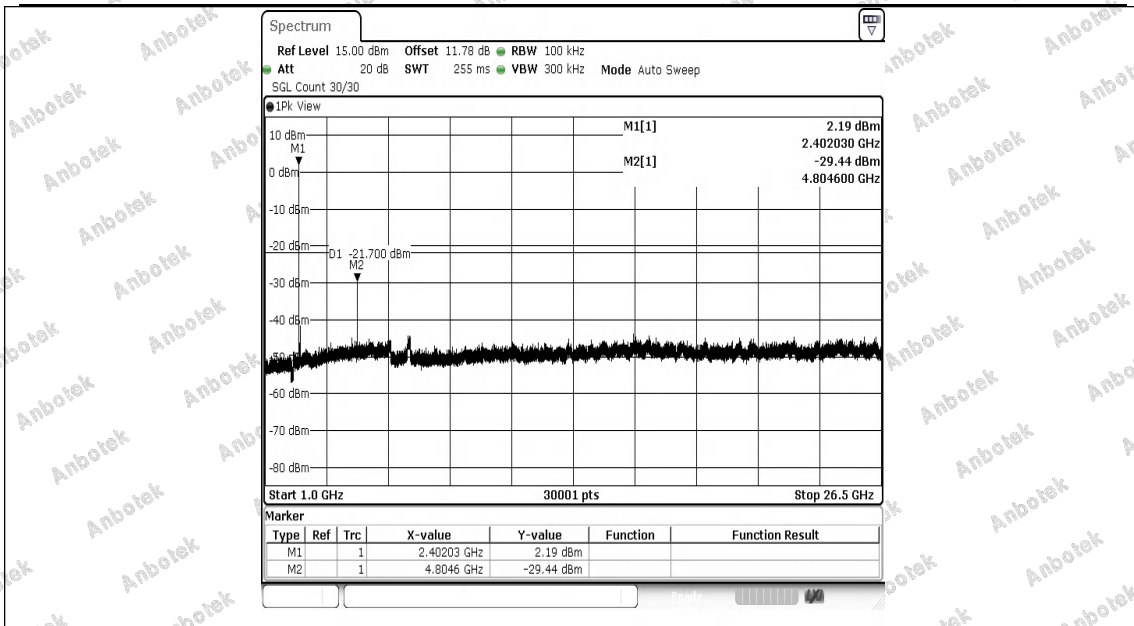


DH5-Ant1-2402-1000~26500-PASS

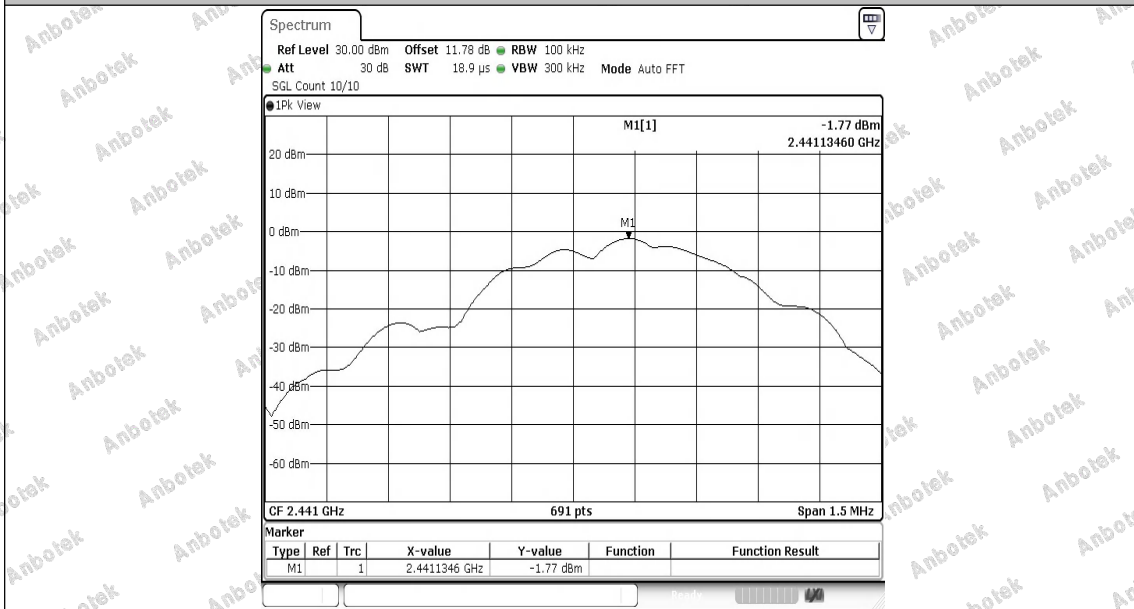


DH5-Ant1-2441-0~Reference-PASS



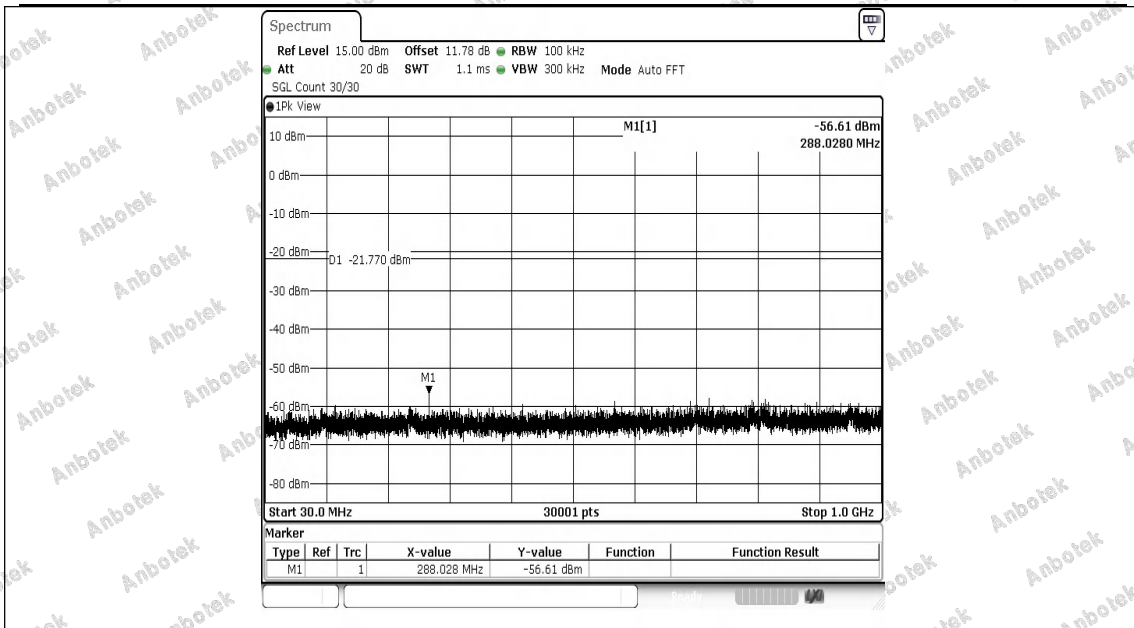


DH5-Ant1-2441-30~1000-PASS

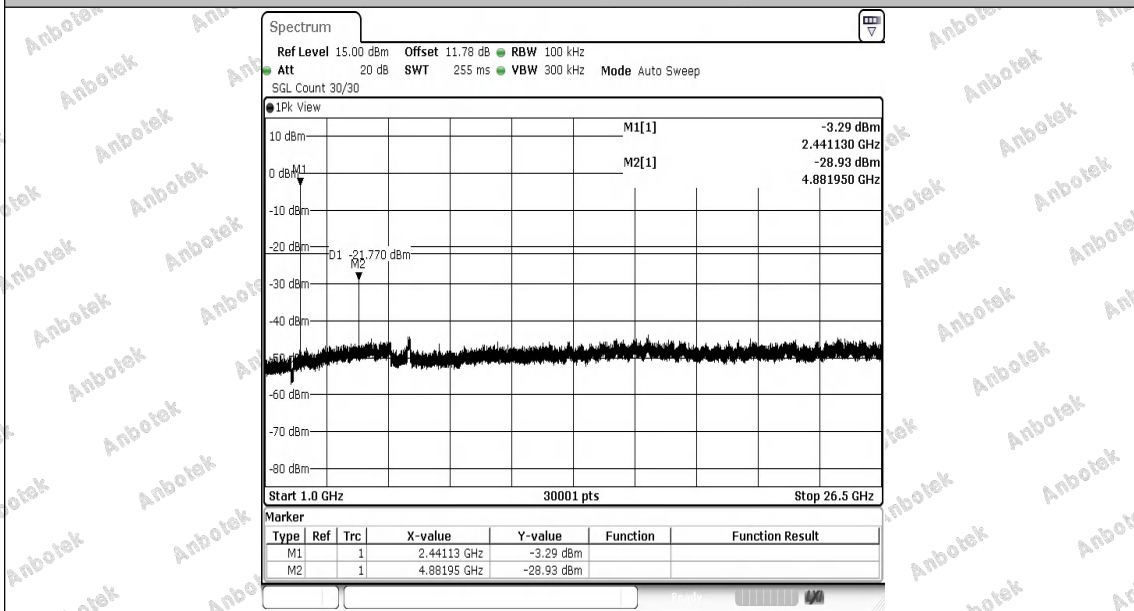


DH5-Ant1-2441-1000~26500-PASS



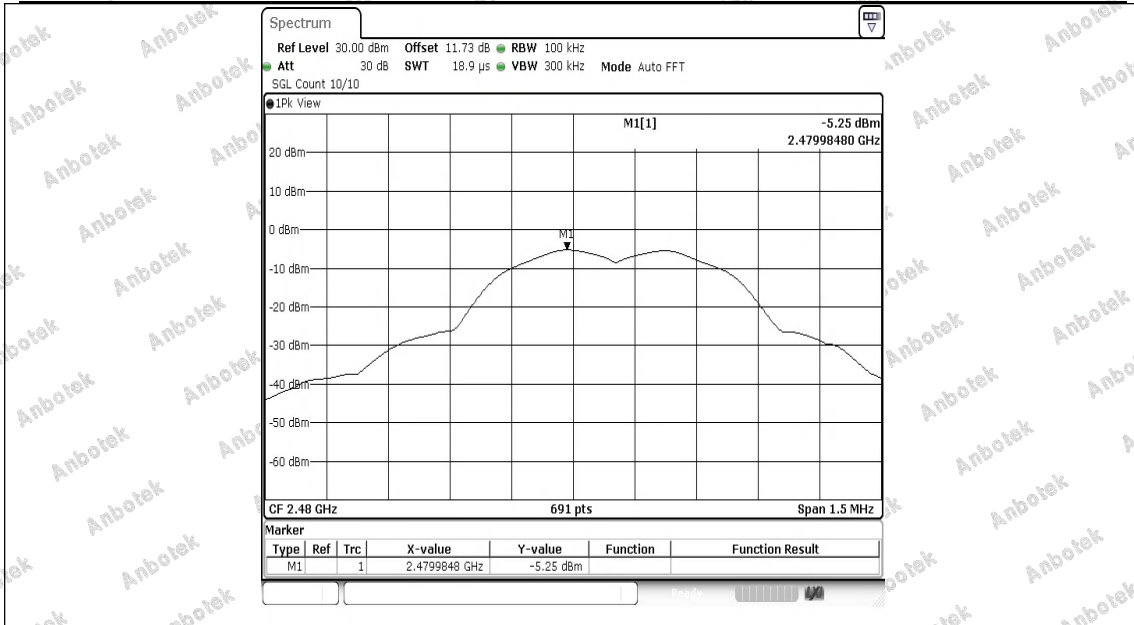


DH5-Ant1-2480-0~Reference-PASS

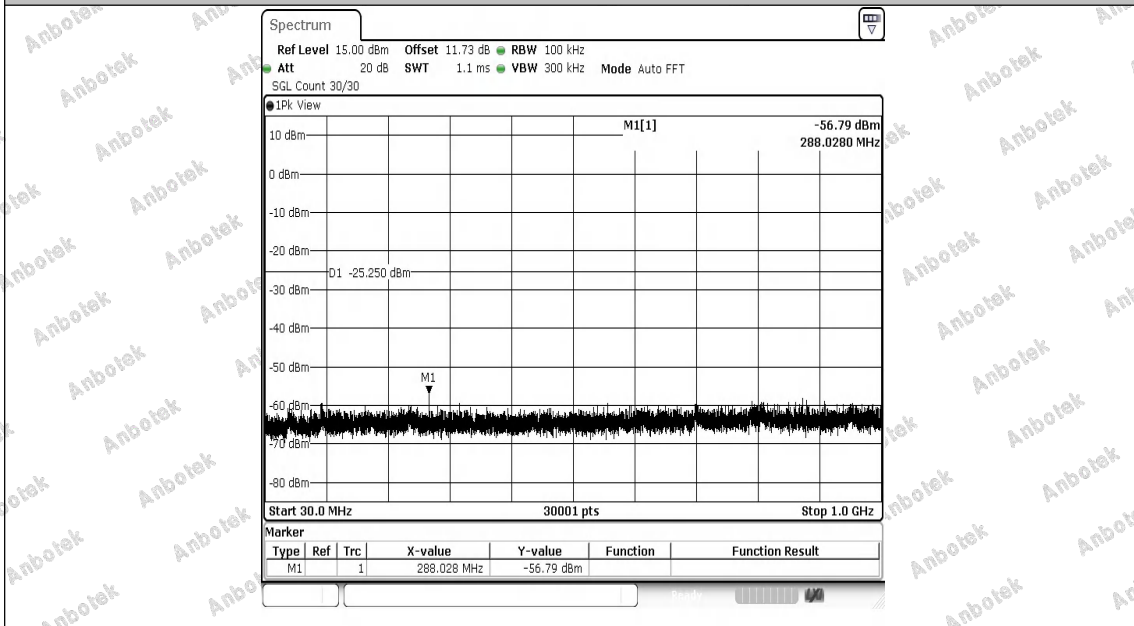


DH5-Ant1-2480-30~1000-PASS



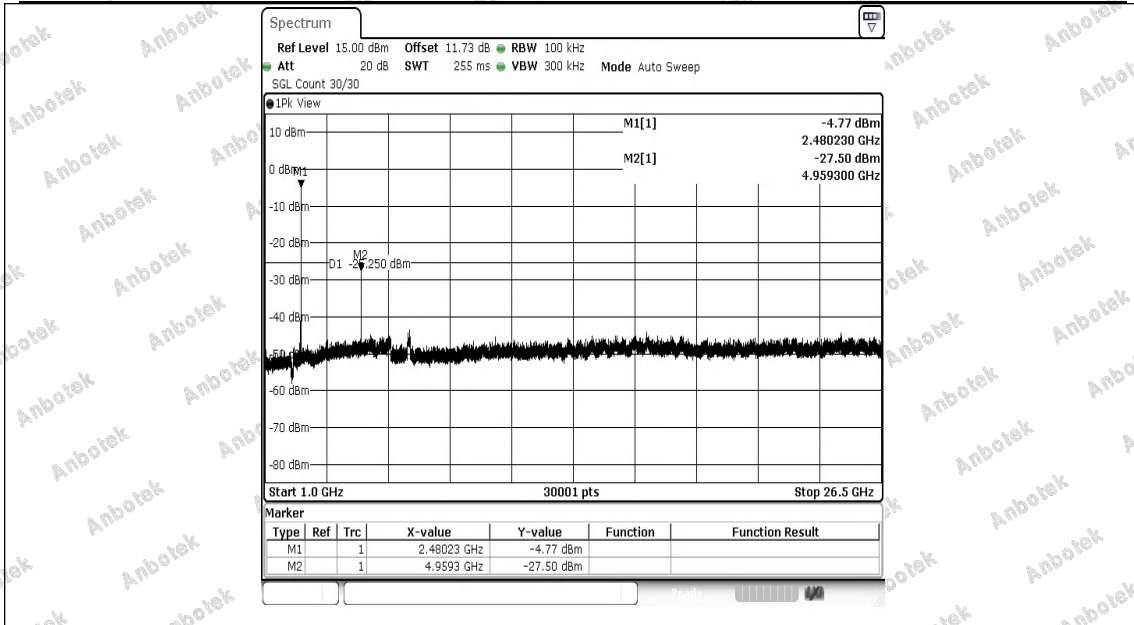


DH5-Ant1-2480-1000~26500-PASS

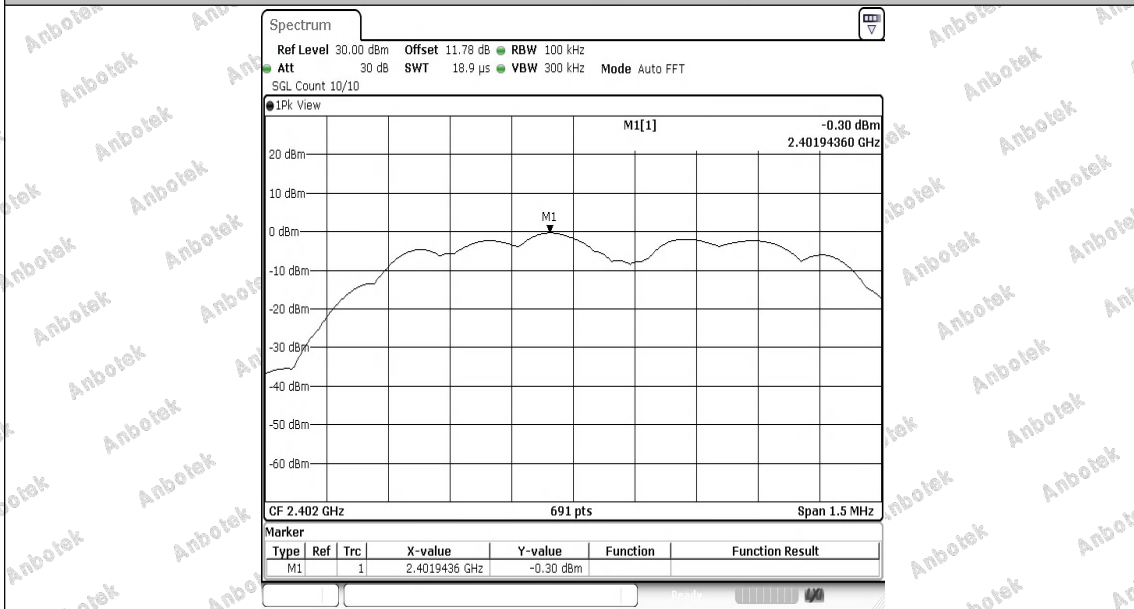


2DH5-Ant1-2402-0~Reference-PASS



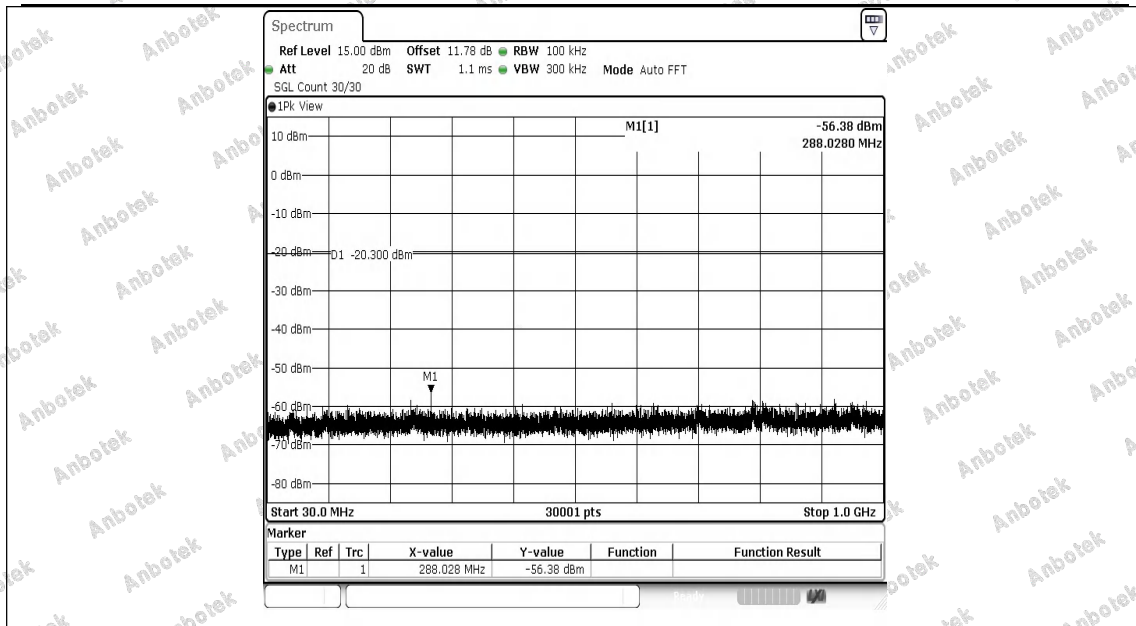


2DH5-Ant1-2402-30~1000-PASS

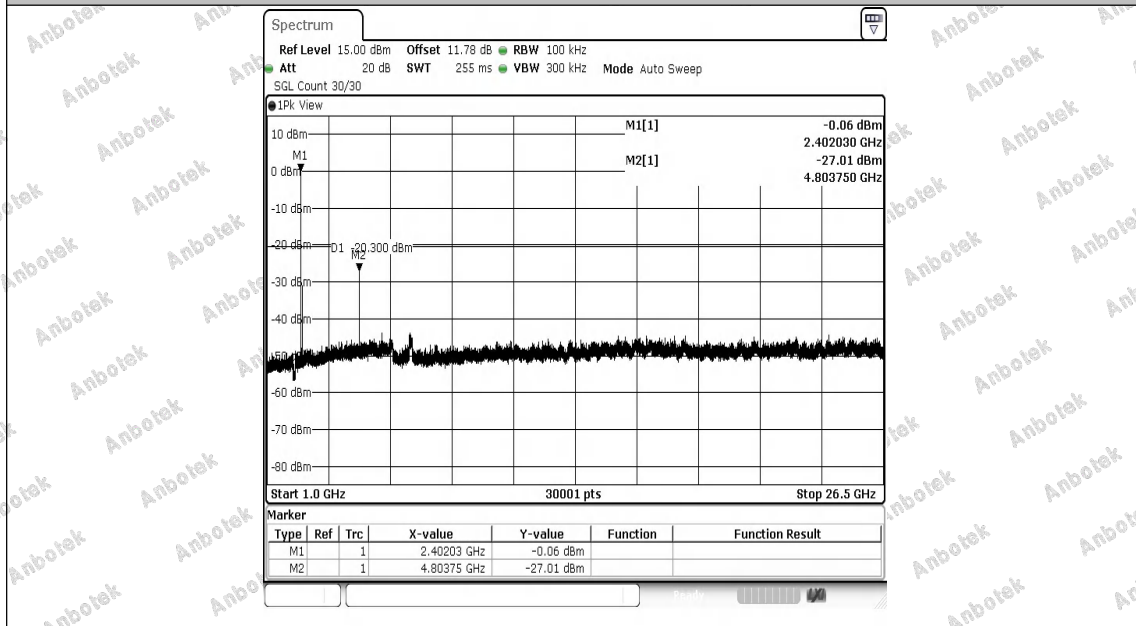


2DH5-Ant1-2402-1000~26500-PASS



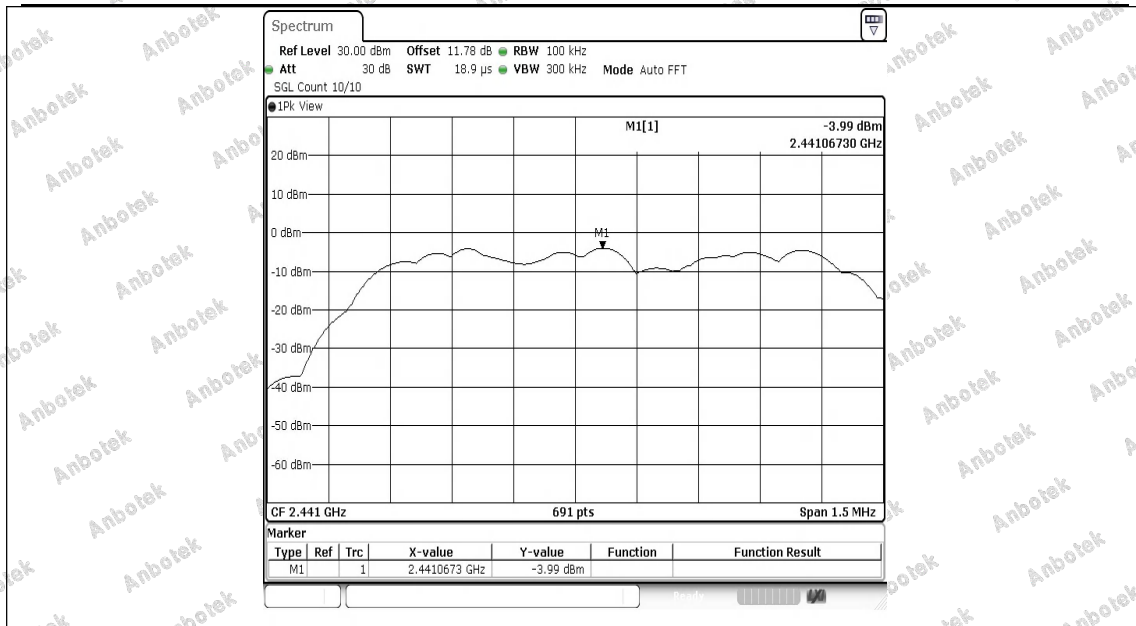


2DH5-Ant1-2441-0~Reference-PASS

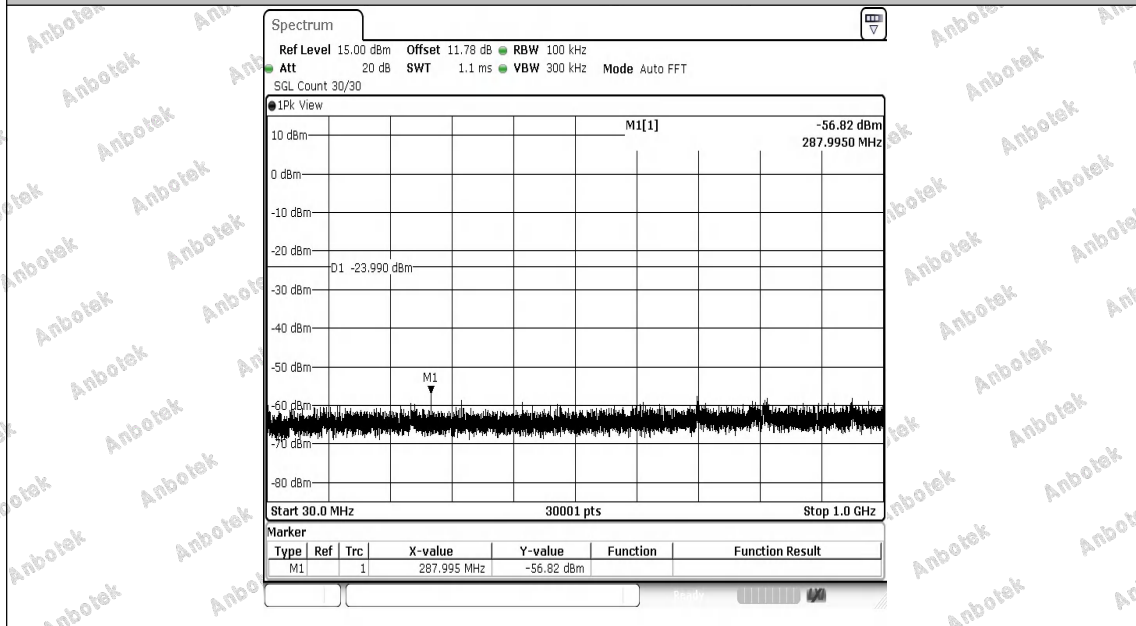


2DH5-Ant1-2441-30~1000-PASS



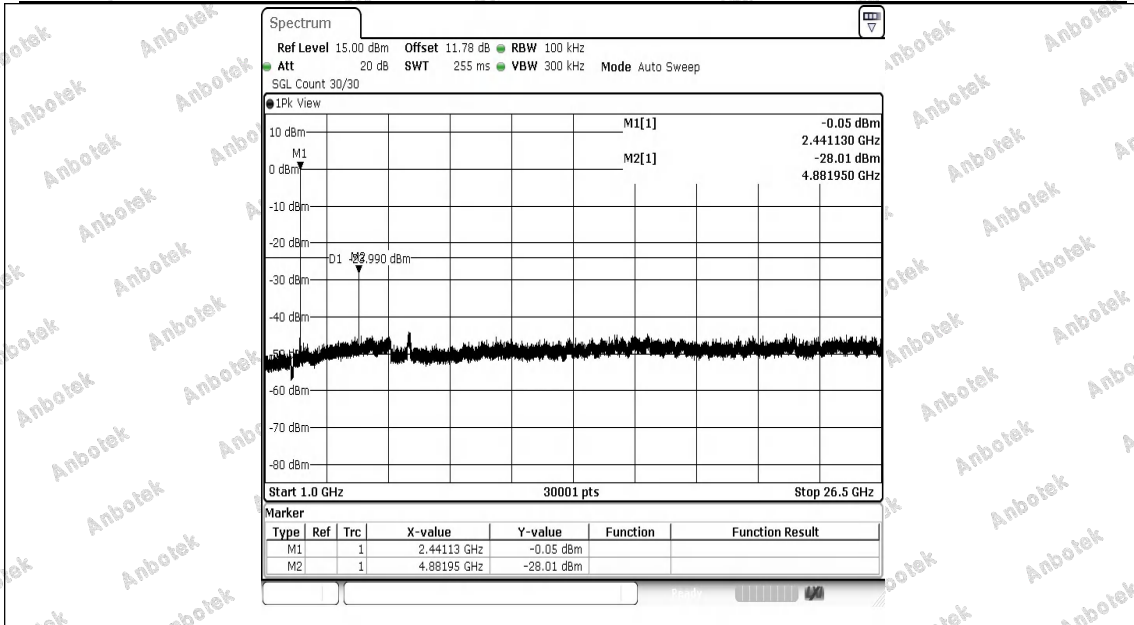

2DH5-Ant1-2441-1000~26500-PASS

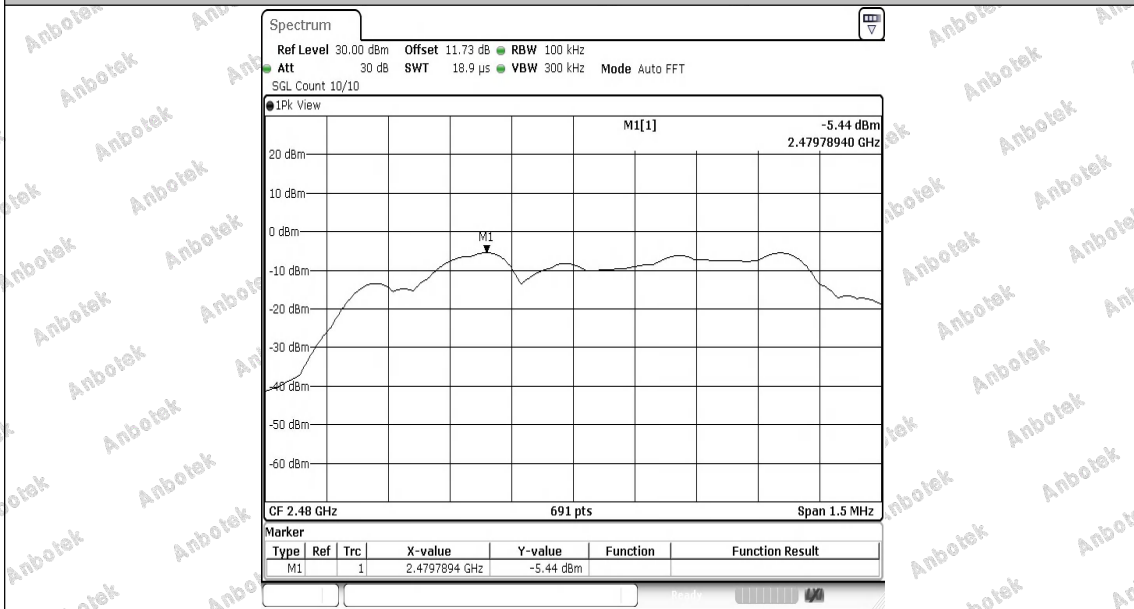

2DH5-Ant1-2480-0~Reference-PASS


Shenzhen Anbotek Compliance Laboratory Limited

Address: Sogood Industrial Zone Laboratory & 1/F. of Building D, Sogood Science and Technology Park, Sanwei Community, Hahgcheng Subdistrict, Bao'an District, Shenzhen, Guangdong, China.
Tel: (86)0755-26066440 Email: service@anbotek.com




Hotline
400-003-0500
www.anbotek.com



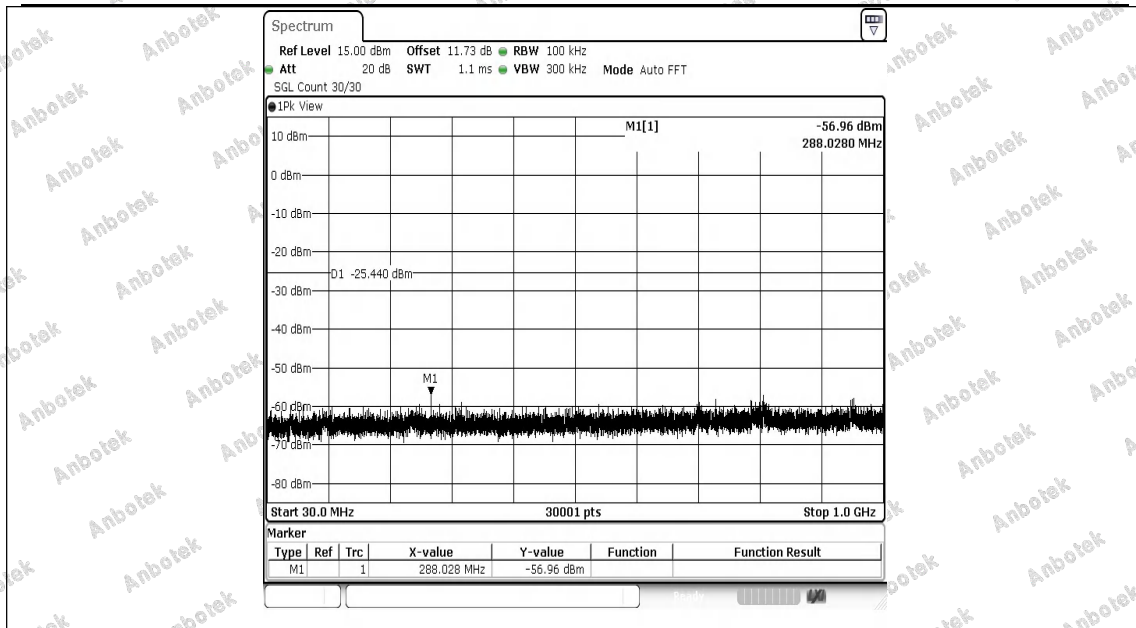


2DH5-Ant1-2480-30~1000-PASS

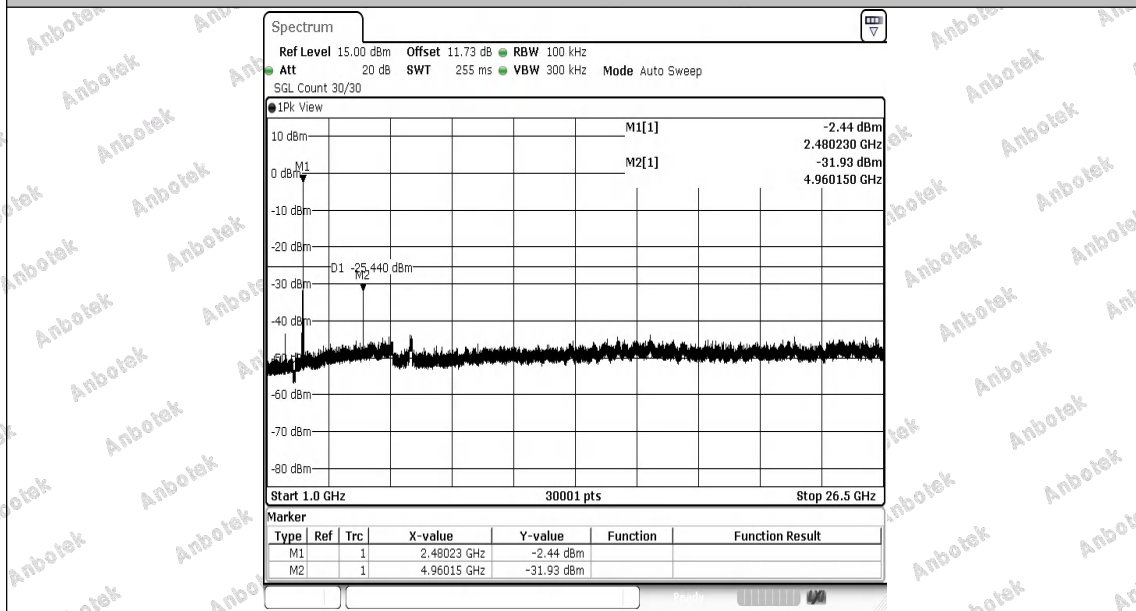


2DH5-Ant1-2480-1000~26500-PASS



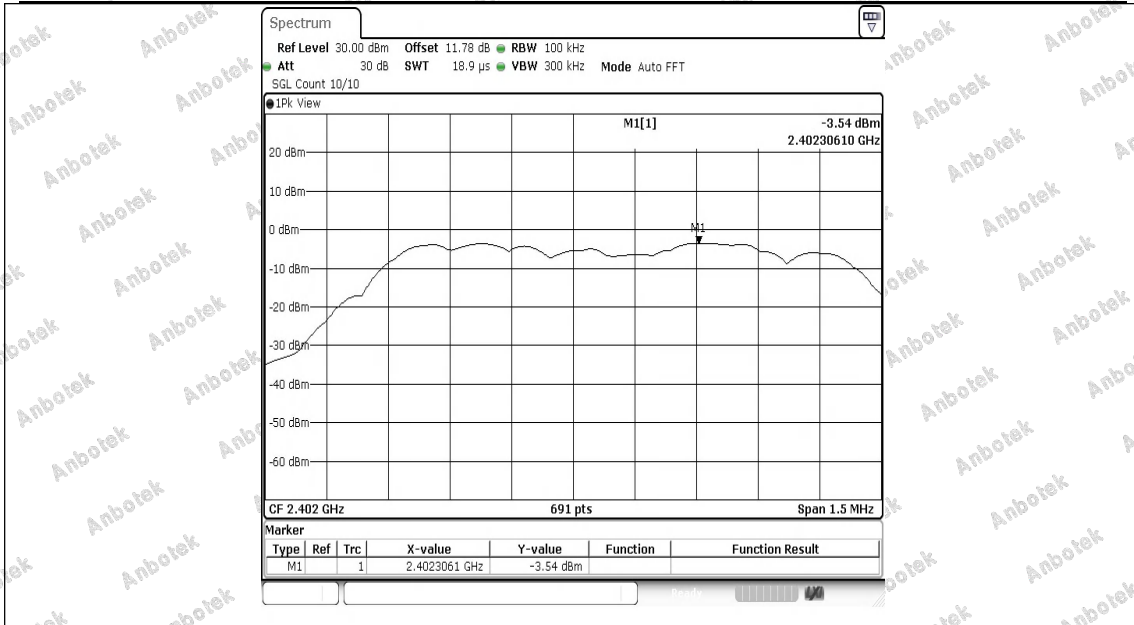


3DH5-Ant1-2402-0~Reference-PASS

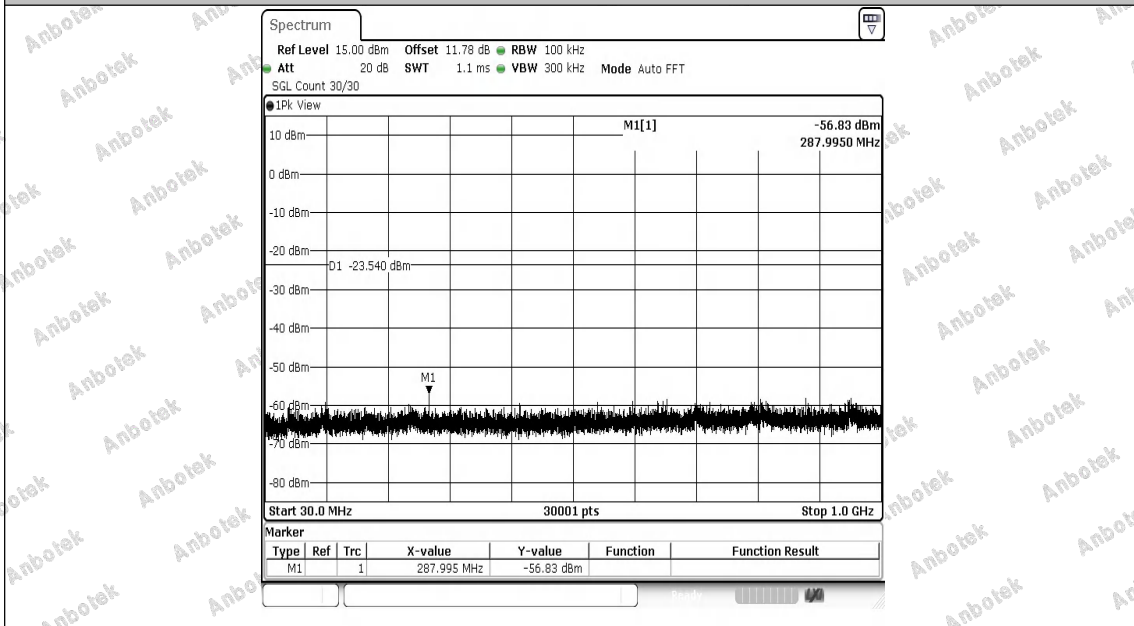


3DH5-Ant1-2402-30~1000-PASS



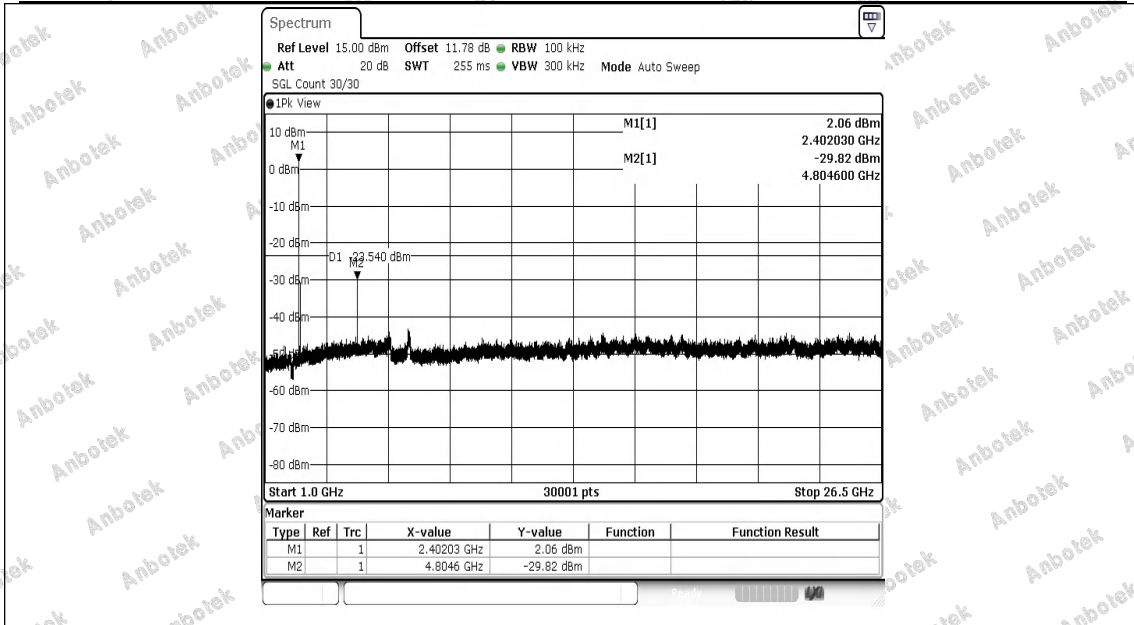


3DH5-Ant1-2402-1000~26500-PASS

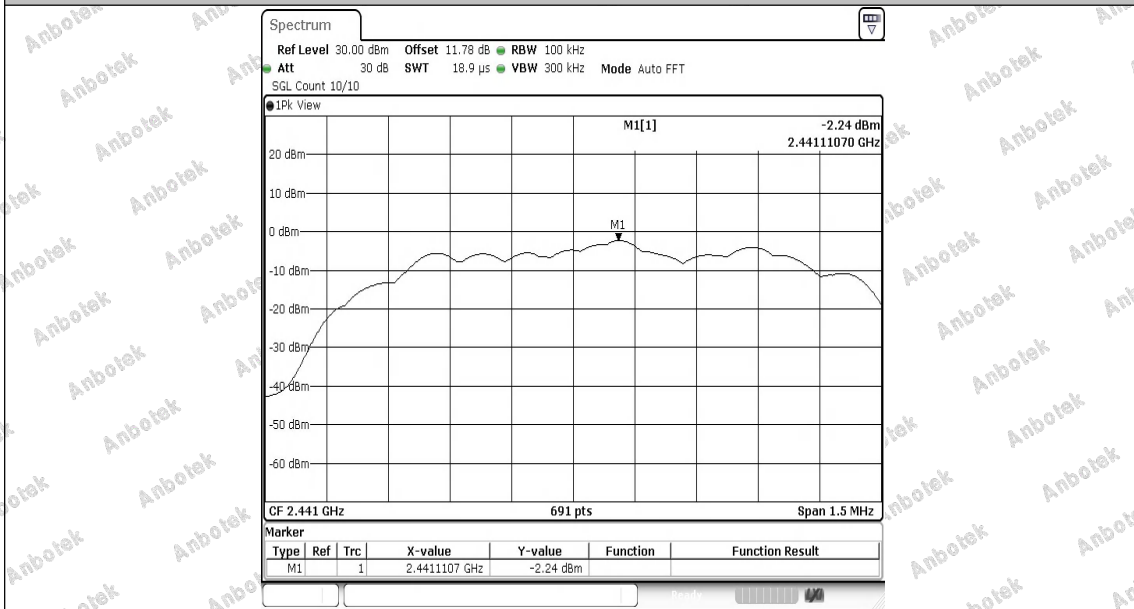


3DH5-Ant1-2441-0~Reference-PASS



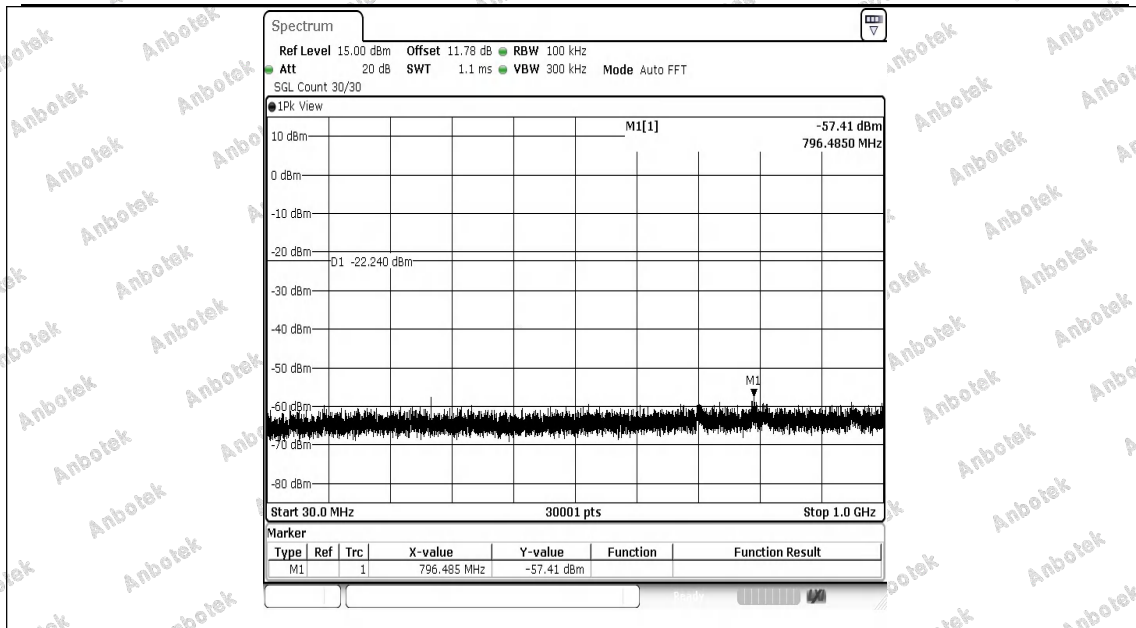


3DH5-Ant1-2441-30~1000-PASS

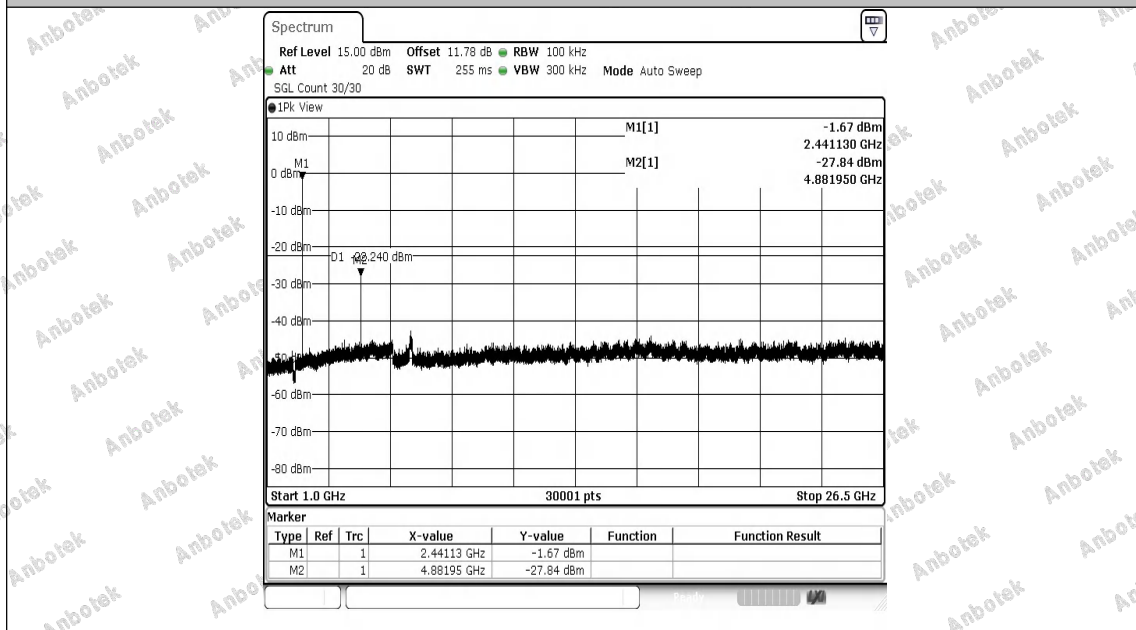


3DH5-Ant1-2441-1000~26500-PASS



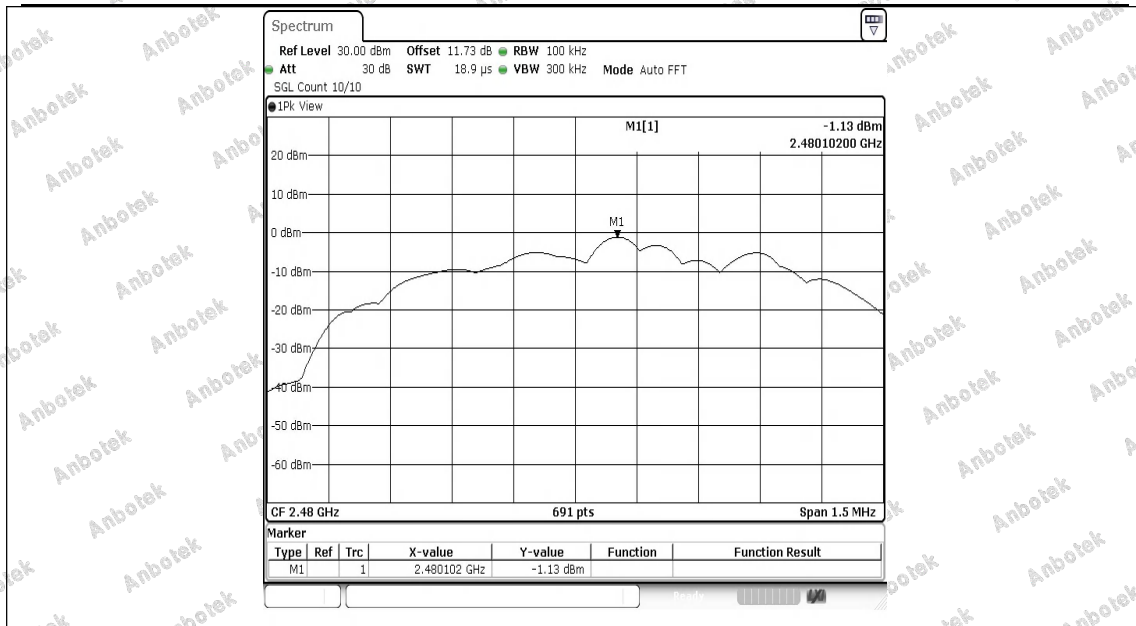


3DH5-Ant1-2480-0~Reference-PASS

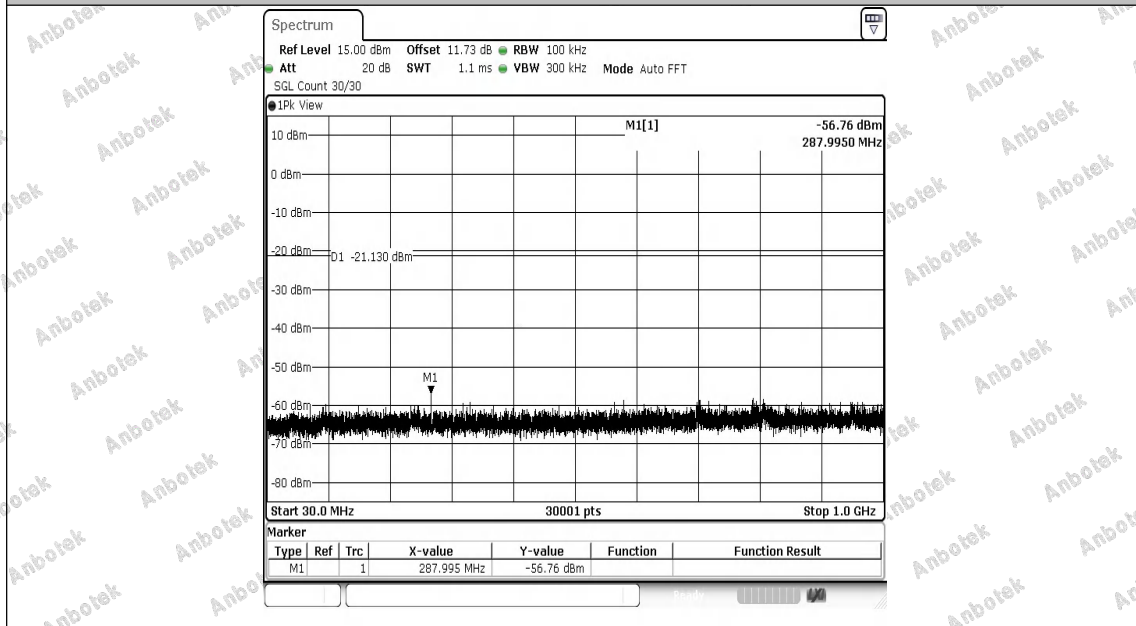

3DH5-Ant1-2480-30~1000-PASS



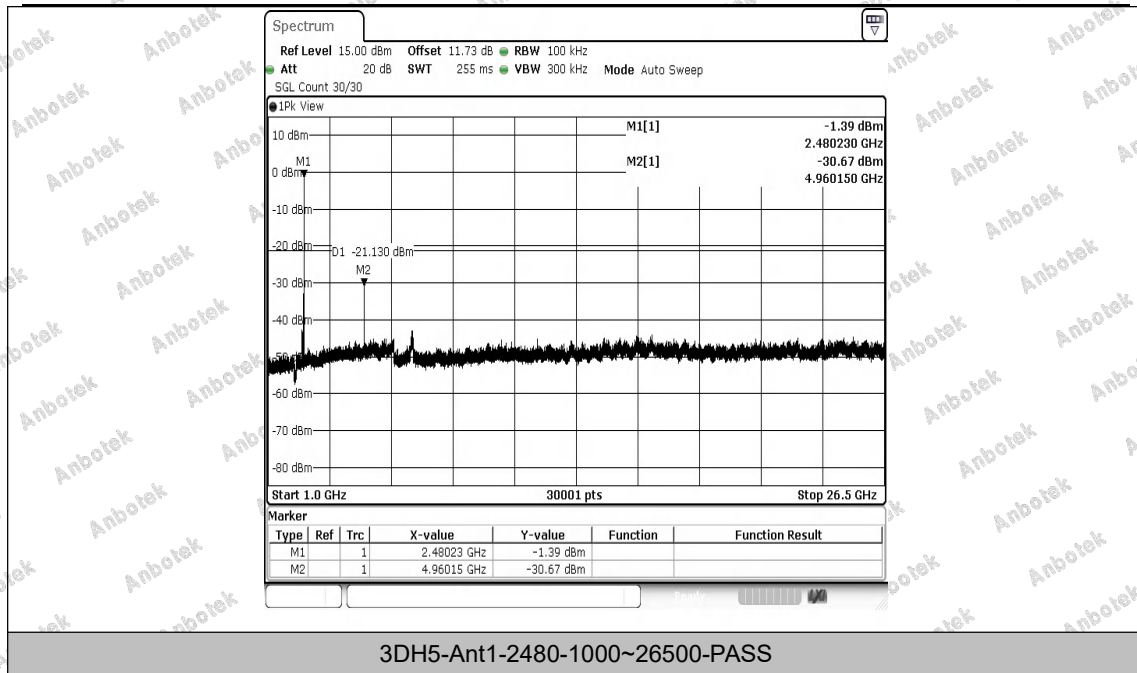

---END---

