# **CUSTOMER APPROVAL SHEET**

Company Name	-
MODEL	ELH75GF
CUSTOMER APPROVAL	

- □ APPROVAL FOR SPECIFICATIONS ONLY (Spec. Ver. 1.0)
- □ CUSTOMER REMARK:

Issued By	Checked By	Approved By
YJ Kim	YB Lee	BJ Jun

#### Solu-M

150, Maeyoung-ro(Maetan3-Dong), YoungTong-Gu, Suwon, Gyeonggi-Do, Korea Tel: 82-31-210-5114

## **S-TAGDatasheet**

## S-Label (Electronic Label System)

**REV1.0** 

SoluM

2018-12-19

## **Summary**

This datasheet presents the general performance and specifications of S-Tagfor S-Label ESL (Electronic Shelf Label) system, which is based on IEEE 802.15.4.

© 2018Solu-M. All rights reserved

The names of actual companies and products mentioned herein may be the trademarks of their respective owners.

No part of this document may be reproduced, stored in a retrieval system, or transmitted in any form or by any means without the express written consent of Samsung Electro-Mechanics.

This document is subject to change without notice.

## **Table of Contents**

GENERAL DESCRIPTION	5
FEATURES	6
Typical Applications	6
Appearance	6
SPECIFICATION	7
PRODUCT SPECIFICATION	7
RADIO (RF) SPECIFICATION.	7
MECHANICAL DRAWING	8
LABELS	9
BARCODE SCANNING 오류! 책갈피가 정의되어 있지 않습니다	۲.
OPERATION TEST1	1
	_
ESL OPERATION BY DISPLAY1	3
ESL OPERATION BY DISPLAY1: PACKAGE오류! 책갈피가 정의되어 있지 않습니다	
	⊦.
PACKAGE오류! 책갈피가 정의되어 있지 않습니다	⊦. 7
PACKAGE오류! 책갈피가 정의되어 있지 않습니다 CAUTIONS FOR TREATMENT1	⊦. <b>7</b>
PACKAGE오류! 책갈피가 정의되어 있지 않습니다 CAUTIONS FOR TREATMENT	├. <b>7</b> 7

## **Document History**

Rev.	Date	Revision history	Page
1.0	19SET 27	Initial release	-

## 1 General Description

.

This S-Tag product is a part of Samsung S-Label (Electronic Shelf Label) system as well as S-Label Gateway (S-Gate), Remote controller (S-RC). S-Label system make up a system that electronically displays price and other product information on S-Tags, which has been traditionally printed or written on paper in places like retail markets.

S-Tag receives product price/information updates from S-Gate and updates or changesits display of price and other information.

S-Tag is the product based on IEEE standard 802.15.4 for low power wireless communication applications. S-Tag consists of RF transceiver, RF circuitry and ARM Cortex M3 MCU offering IEEE 802.15.4 based network protocol and MAC protocol and other peripheral devices.

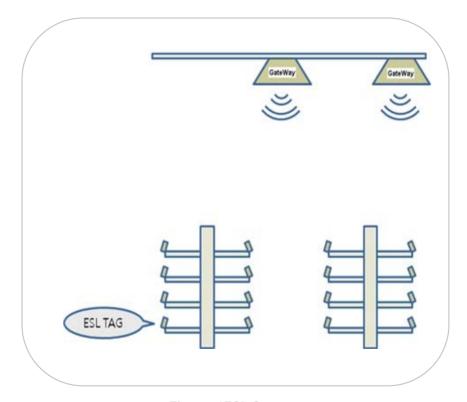


Figure 1ESL System

#### 1.1 Features

- Display: E-Paper Display (EPD)(active type)(163.24(H)mm X 97.97(V)mm)

- Display Color: Black, White, Red

- Display Resolution: 528X880 pixel (137dpi)

Communication: Wireless communication based on IEEE 802.15.4

- Operating on 2.4GHz Unlicensed ISM band for ZigBee

- Low Power Consumption

External Wakeup: RF Wakeup (using ISM Band[2.4GHz])

- Outline Dimension: 161.92mmx 227.2mmx14.3mm

- Case Color : Black


- Working condition: Indoor where wireless communication is available.

### 1.2 Typical Applications

- Retail industry with electronic displays, platforms, solutions and services.
- Intelligently communicating, managing, and optimizing price and product informations.

#### 1.3 Appearance

Figure 2Appearance

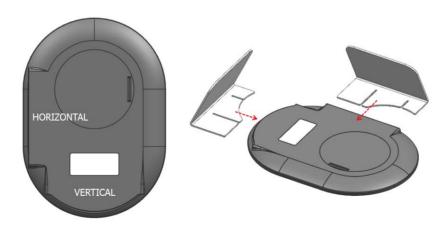

## 2 Specification

## 2.1 Product Specification

Item	Description	
Size	161.92mmx 227.2mmx14.3mm	
Battery(Life Time)	CR2450 Lithium Battery (3V) 2.4 ~ 3.3Vdc(condition: In active status) 5 years available for1updates in a day at room temperature (The Battery Life time is dependent on the operating conditions for ESL [temperature, etc])	
Display	Electrical paper display (active type: 163.24mm X 97.97mm) Display Resolution: 528X880 pixel (137dpi)	
Housing Color	Black	
Information display	Price, Unit, Symbol, Product Informationetc.	
Communication	Wireless communication based on IEEE 802.15.4	
Communication Distance	Radius 20m (Line of Sight)	
Operation Temp.	0 ~ 40 °C	
Storage Temp.	-25 ~ 60 °C	
Humidity	35 ~ 70% RH	


## 2.2 Radio (RF)<sup>1</sup> Specification

Itom	Parameter	SPEC		Umit	Condition	
Item	Parameter	Min	Тур	Max	Unit	Condition
	Transmit Power	-5	0	8	dBm	
TX	Error Vector Magnitude	-	10	30	%	When measured for 100 chips
	Tx Current		-	35	mA	Total current at max Tx Power
RX	Receiver Sensitivity	-90	-	-	dBm	PER < 1%


<sup>1</sup>Test Channel: 2480MHz

## 2.3 Mechanical Drawing

7.5-INCH OVAL

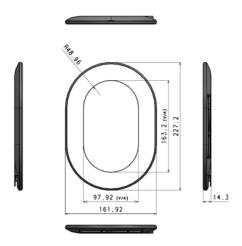


#### 2.3.1 Case Dimension

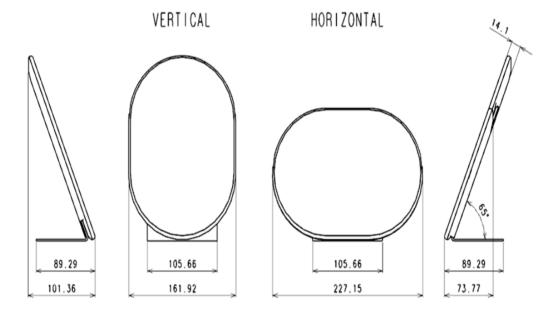

**Figure 3 Mechanical Dimension** 

## 2.3.2 Exploded View

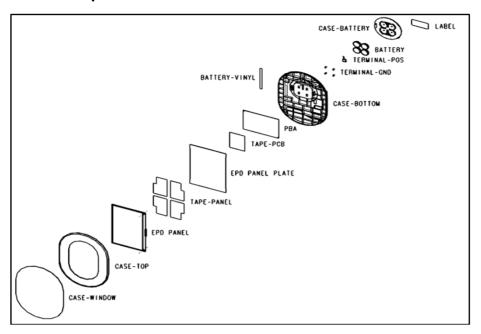

**Figure 4Exploded View** 

#### 2.4 Labels



#### 2.4.1 Serial NumberInformation

\*Serial1,2CodeValue

133GSAA2JW

- (	)		<b>②</b>		3	
Ĺ	1	CODE	윌	CODE	일	COD
20	09	09	1	1	1	1
20	10	10	2	2	2	2
20	11	11	3	3	3	3
20	12	12	4	4	4	4
20	113	13	5	5	5	5
20	114	14	6	6	6	6
20	115	15	7	7	7	7
20	16	16	8	8	8	8
20	117	17	9	9	9	9
20	118	18	10	×	10	A
20	119	19	11	Y	11	В
_	20	20	12	Z	12	C
20		21			13	D
-	22	22			14	E
			ı		15	F
					16	G
					17	Н

Κ

M N O

P Q

R

s

T U

27

28

29

#### 1234567

- ①Year:Lasttwodigitsofmanufacturingyear.
- (00~99,example:2013is'13')
- 2 Month: Manufacturingmonth
- $(1\sim9,X(10),Y(11),Z(12))$
- 3 Date: Manufacturing date
- $(1\sim9,A(10)\simV(31))$
- 4) Vendor: One character of manufacturing vendor
  - ((D: Dongguan Solu-M, V: Solu-M Vina., T: TSEM, .....etc))
- ⑤Linenumber:OnecharacterofManufacturingLinenumber ('A','B','C',etc)
- ⑥ Revision: Productrevision number(A:First, B:Second, C:Third, etc)
- ?ZigBeelCLotNumber:Last3characters

(032 : SEM9110 1532(15 : Year, 32 : Week))

#### 2.4.2 Product and Mac Label Drawings




Figure 5 Product and Mac Labels

Product information is indicated in a printed sticker label. The information consists of MODEL (model name), MFD (manufacturing date), S/N (serial number), MAC (MAC address), CE certification mark, FCC ID and Manufacture (SoluM).

- 1)ModelName:ELH75GFBRR/NUS
- 2)MFD:(month).(date).(year)ex)MAY.16.2016
- 3)S/N:DailyProductionQuantity(6digits)&SerialNumberInformation (hexadecimal10digits)

## 3 Operation Test

• Equipments : ESL Tag, Gateway, R/C



Figure 6 Operation Test

#### Test Scenario

- ① Ready to Gateway and R/C
- ② Wake up Tag with R/C
- 3 Tag start to communicate with Gateway
- 4 Tag display the numeric information received from Gateway
- 5 Check Tag(EPD display status & MAC address value)
- 6 Wake up Tag with R/C
- ① Check Tag(EPD display(blank display))
- **Criterion** (Below both two conditions should be all satisfied)
  - ① Good :You can see 'Black' →'White' display
  - 2 Compare MAC address with that of label attached to Front or Back plane.

## Wake up area

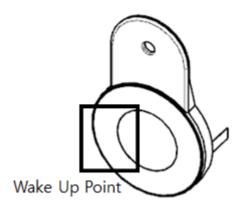



Figure 7Wake up Area

## 4 ESL Operation by display


It will be updated before 2<sup>nd</sup> release. Below is just a sample.

Display	State	User Action	
	STATE: 0 Initial display when shipped from the manufacturer (All white).	None	
	STATE: 1  No change.	To assign a tag using a PDA	
ZZZ	STATE 1 → 2  Searching for GWs (Tag version, MAC addressand triangle).	Assign Process  → Remove tape on the tag and then Tag can start to search the gateway automatically w/o beeper	

	T	T
WAL G MUCUS REL PETABLETS  BUY 2 FOR  19.99  OR \$15 EA 60CT Model#	STATE 2 → 4  A tag is connected to a GW and received price (Price)	None
ZZZ XXXXXXXXXXX	STATE 2 →3  A tag failed to locate a GW (Tag version, MAC address).	Lost Status
WAL G MUCUS REL PETABLETS  BUY 2 FOR  19.99  OR \$15 EA 60CT Model#	STATE 4 →5  Connection to a GW is lost (price and Rectangle on upper right corner)	Lost Status  → Even Tag lost GW, price and other information keep to be displayed with lost symbol'
WAL G MUCUS RELPETABLETS  BUY 2 FOR  19.99  OR \$15 EA  60CT Model#	STATE 5→ 6  When connection is lost and woken up by an RC  (blinks with the price and Rectangle)  Starts to search GWs.	Woken up by abeeper

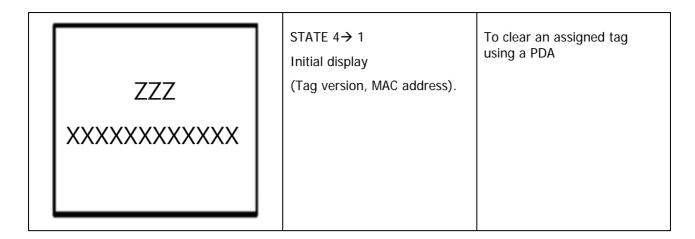

## 5 Package

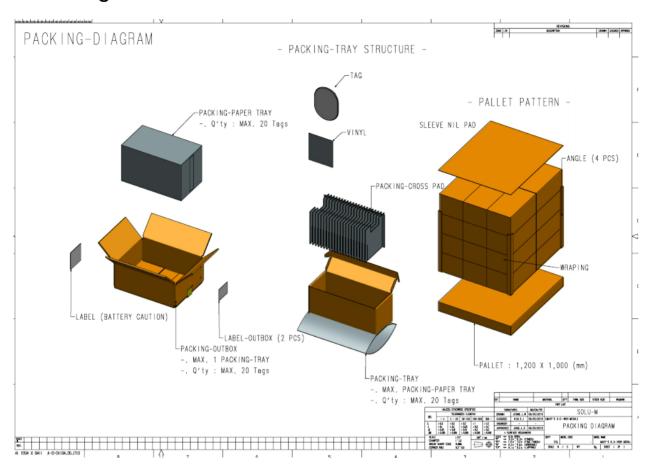

LABEL - BAG

LABEL - OUTBOX(L)

TAG(XXXXXX)

PART NAME: XXXXXXXXXXXXX

PART NO: XXX-XXXXX

LOT NO: XXXXXXX

Q'TY: XXX PCS

LABEL - OUTBOX(R)

TAG SIZE: H X W X D

COUNTRY: XXXXXXXX

ESEL VERSION: X.X

FIRMWARE VERSION: X.X

#### 6 Cautions for Treatment

Provisions should be made to protect against any damage to the product caused by improper handling.

It is highly recommended that the product should be installed within 3 months from the date of arrival in the logistics hub. Recommended storage condition is in 0-40 Celsius degree, 35-70% RH environment.

This RF device operates on the 2.4GHz frequency band and can produce radio interference. The device, therefore, may not be used for applications where safety of human lives is concerned.

#### 6.1 Usage Environment

Take extra cautions when using this RF device in the vicinity of other electronic devices and appliances. Most electronic devices and appliances use electromagnetic waves. Electromagnetic waves emitted by this RF device can affect other electronic devices and appliances.

If using the device in an explosion hazard area, follow all safety regulations, instructions, and signals.

### 6.2 Storage and Use

- Moisture and liquids can damage internal parts and circuit boards if allowed to enter into the device itself.
- Do not place or store the product on a sloped surface. The product may slide and fall off the surface and damaged.
- Use the product in temperatures ranging from 0°C to +40°C. Parts and circuits may be damaged if used or stored under temperature extremes.
- The display panel needs extra care when handling.
  - Do not apply any impacts on outside since e-Paper display is fragile.
  - Continuous exposure to excessive moisture (over 60% RH) or UV makes display lifetimeshortened.
  - Ghosting image may be appeared in temperature conditions of less than 15 Celsius degree.
  - Avoid areas with strong magnetism or subject to magnetism.
    - Contact between the device and a magnetic object can lead to malfunctions.
- Do not place the product near heat-producing kitchen appliances like a stove or a microwave or in the vicinity of highly pressurized containers.

- External impact to the product, such as from being dropped, can damage the productor battery casing can be separated.
- Twisting and bending the product can damage the exterior casing and the internal components.
- If this product operates abnormally in eliminating battery vinyl or replacing battery, you should discharge it by contacting battery terminal (+) and (-).
- This product uses 2.4GHz frequency band for wireless communication network. Radio communications can be limited or affected by other applications which share same frequency band, such as WiFi, Bluetooth, Zigbee, etc.
- Frequent communications, updates and screen renewals may reduce battery life time.

### 6.3 Battery Replacement

#### **Audience**

Authorized persons with the following knowledge are allowed to replace the battery.

- . Battery / -. Electronic assemblies like circuit board / -. Compliance of the instruction

(When need to replace the battery. Please contact authorized person and get instructions.)

#### Instructions

- Risk of short circuit if battery is incorrectly installed/stored.
- Keep attention that your hands are dry before you start with replacement
- Keep away batteries from children and infants.
- Don't heat, charge, bend, drop, short-circuit and disassemble battery.
- Don't mix the used battery together with the new battery or different type of batteries.

Note: Battery rarely has a little stain or leak.

■Battery directional

#### Steps

- ① Open the battery cover.
- ② Take out the batteries.
- ③ Put in the new batteries.
- 4 Check the batteries direction.
- 5 Put the battery cover.

[View] Top : (+)Positive

Bottom : (-)Negative



#### 6.4 How to cleaning


### **For Spray Cleaning:**

Stand Tags not to lay down tags

Lightly spray surfaces and wait few second

Wipe dry using cloth or tissues.

Dry out tags

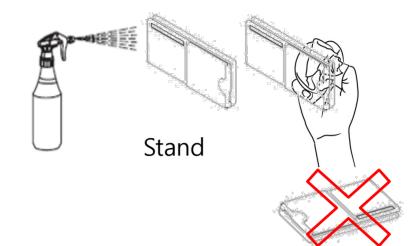

#### Note:

- When spray the tags, make sure not to flow any liquid into inside tags
- It may damage tags directly, circuit and battery.
- You can use mild, non-alcoholic detergents or glass cleaner.
- Recommend non-abrasive cloths: Microfiber, Cotton T-shirt, Cotton handkerchief, Cotton tea towel

#### For Wet Tissue Cleaning:

Lay down tags or stand tags

Wipe using wet tissues

Dry out tags



#### We do not guarantee any water damaged tags



**WARNING**: This equipment may generate or use radio frequency energy. Changes or modifications to

equipment may cause harmful interference unless the modifications are expressly approved in the instruction

manual. The user could lose the authority to operate this equipment if an unauthorized change or modification is made.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1)

This device may not cause harmful interference, and (2) this device must accept any interference received, Including interference that may cause undesired operation.

**NOTE**: FCC Information to User

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one of the following measures:

- · Reorient or relocate the receiving antenna.
- · Increase the separation between the equipment and receiver.
- · Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- · Consult the dealer or an experienced radio/TV technician for help.

Caution

THE GRANTEE IS NOT RESPONSIBLE FOR ANY CHANGES OR MODIFICATIONS NOT EXPRESSLY APPROVED BY THE PARTY RESPONSIBLE FOR COMPLIANCE. SUCH MODIFICATIONS COULD VOID THE USER'S AUTHORITY TO OPERATE THE EQUIPMENT.

IMPORTANT NOTE: FCC RF Radiation Exposure Statement

This equipment complies with FCC RF radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with a minimum distance of 20 centimeters between the radiator and your body. This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter