



360 Smart Camera AC1C  
User Manual




# CONTENT

---

en	English.....	P001 – P013
ch	中文繁體 .....	P014 – P023
fr	Français.....	P024 – P035
de	Deutsch.....	P036 – P047
it	Italiano.....	P048 – P059
ru	Русский.....	P060 – P071
id	Bahasa Indonesia.....	P072 – P083
th	ภาษาไทย.....	P084 – P095
ja	日本語.....	P096 – P105
ko	한국어.....	P106 – P115
sp	Español.....	P116 – P127

## Appearance

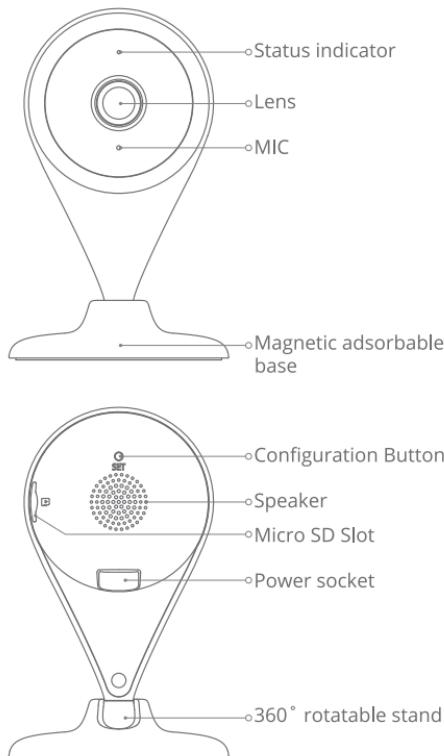

## Packing list

Please confirm if the camera and its accessories are in good condition after opening the package.



Camera x1



USB cable x1



Adapter x1



User Manual x1




3M double-sided tape x1

# User Guide

## 1. Connect with power

① Insert Power Line into Power interface which behind the camera. When the status indicator lamp turns green, shows the camera start working.

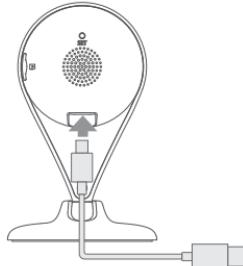

② Please make sure your phone has connected to the available WiFi network.  
 ③ Please make sure to hang up on the wall after finishing connecting the camera.

## 2. Download the Botslab APP

Download the Botslab App from App Store or Google Play and install the App on your phone.



## 3. Add Camera

① Open Botslab APP, click “register” button and start register an account. If you already have an account, login directly.

② After login, click “+”button which on the right-top corner of screen. Click on “connect to my camera” and follow the voice prompts to complete.

### Note:

The issues mentioned below may cause the network disconnection problem, suggest to avoid those items.

- During acoustic matching, please keep away from noisy environment.
- Please turn off MAC Address Filter function in WiFi router, otherwise the camera may not be connected successfully.
- Make sure the camera connect to 2.4GHz WiFi
- The camera temporally not supports WPA/WPA2 enterprise-class WiFi, please select other options.
- Suggest connecting nonbridging contact WiFi.

③ After adding successfully, start your discovery.

## 4. Fixing the camera

### Method 1:


The camera can be used directly on a horizontal table.

### Method 2:

The camera base is magnetic, which can be adsorbed on the surface of iron-containing objects (such as refrigerator and iron window). Do not place it near the computer host or hard disk.

### Method 3:

The camera can be attached on the surface of smooth objects such as glass, tile, and wall coated with latex paint using the delivery-attached 3M double-sided tap.

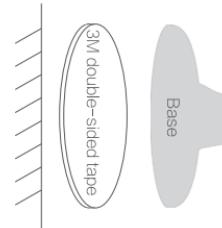

Smooth wall

Base

## Product Description

- ① Resolution: 300W super HD resolution, transparent and exquisite screen, clear and bright, outstanding in both close-up view and full view.
- ② Color quality of picture: clear, beautiful, delicate, and realistic, comparable to screen display capability of mainstream smartphones, rich in color.
- ③ Field of view angle: ultra-wide-angle lens, ultra-clear customization, wide field of view, excellent full view effect.
- ④ Voice: Real-time two-way synchronous conversation, stable and clear, free chat like a phone call, immersed in intimate communication.
- ⑤ Night vision: The camera can automatically turn on the night vision mode according to the ambient light. In this mode, the picture is black and white and clearly visible within 7 m in the indoor environment. The internal filter is switched when night vision is turned on or off. The switching is accompanied by a slight "click" sound, which is normal. It will cause no light pollution, thereby protecting your eyes.

## FAQ

### 1. How many modes does the indicator have?

Constant Green	Camera activated
flashing Green	Configuring Wi-Fi networks or offline
Constant Blue	Camera on-line
Flashing Blue	Video being viewed

### 2. Is it normal for the camera to run hot?


Low level of heat is a normal phenomenon during working status. Working temperature may ranges from 0°C to 45°C.

### 3. Announcements

In order to get a better night vision imaging results, please don't put the camera in front of or close to the glass, white walls or other reflective objects, or you will see the picture bright in the vicinity and dark in the distance or white full of the screen.



Wrong

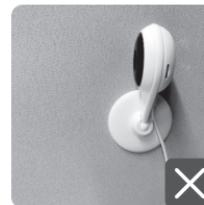


Wrong

The night vision imaging effect      The night vision imaging effect



## Correct Demonstration

Avoid to be blocked the view of camera, please put the camera in the right way when on the table (pic 1) or on the wall (pic 2)

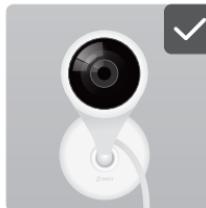

Right



Right

The night vision imaging effect The night vision imaging effect



## Important Statement

## 1. Personal information security

To protect the information for you and your family, please make sure that the product you purchased was not bound by others without your permission. 360 Company always take strict measures to guard and protect the information safety of you and your family.

## 2. Description of Hazardous material Contents

Toxic and Harmful Substances and Element	Component				
	Plastic enclosure	Circuit board components	Power cable	Adapter	Lens
Lead (Pb)	<input type="radio"/>	<input checked="" type="radio"/>	<input checked="" type="radio"/>	<input checked="" type="radio"/>	<input type="radio"/>
Mercury (Hg)	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>
Cadmium (Cd)	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>
Hexavalent Chromium (Cr <sup>VI</sup> )	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>
Polybrominated Biphenyls (PBB)	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>
Polybrominated DiphenylEthers (PBDE)	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>

This form is prepared in accordance with SJ/T11364.

: Indicates that for each item in this produce ,said hazardous substance id below the requirements set forth by the standard GB/T26572.



: It indicates that the hazardous substance in at least one homogeneous material of this part exceeds the limit specified in GB/T26572. However, it satisfies limit requirements specified in the List of Exempt Applications of Hazardous Substances Identified in the Management Catalog.

**Note:**

A small patch of electronic components for special purposes is marked with "X" in the table (such as high voltage resistors, ceramic resistors, diodes), in which the lead content may exceed 0.1% . As the screws and the core in the data cables using alloy with better performance, the lead content may also be exceed 0.1%. These components are in accordance with the requirements of the exemption clause of the EU RoHS directive. Limited by the current global technology development, there are no other alternative technologies and components. The external lead contents of these components are in accordance with environmental protection requirements.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

**Note:**

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 20cm between the radiator & your body.

# 360 Smart Camera warranty card

---

## 1. User Information

Name \_\_\_\_\_ Tel \_\_\_\_\_

E-mail \_\_\_\_\_ Post Code \_\_\_\_\_

Address \_\_\_\_\_

## 2. Product information

Color \_\_\_\_\_

SN \_\_\_\_\_

## 3. Service record

Service Record	Fault information	Service Date	Signature

IC Caution:

- English:

This device contains licence-exempt transmitter(s)/receiver(s) that comply with Innovation, Science and Economic Development Canada's licence-exempt RSS(s). Operation is subject to the following two conditions:

This device may not cause interference.

This device must accept any interference, including interference that may cause undesired operation of the device.

- French:

L'émetteur/récepteur exempt de licence contenu dans le présent appareil est conforme aux CNR d'Innovation, Sciences et Développement économique Canada applicables aux appareils radio exempts de licence. L'exploitation est autorisée aux deux conditions suivantes :

L'appareil ne doit pas produire de brouillage;

L'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.