

FCC SAR Test Report

Product : Remote Controller
Trade mark : PowerVision
Model/Type reference : PRC30
Serial Number : N/A
Report Number : EED32N802106
FCC ID : 2AKBMPRC30
Date of Issue: : Jul. 20, 2021
Test Standards : Refer to Section 1.5
Test result : PASS

Prepared for:

Powervision Tech Inc.

**Zone E,Ocean Venture Valley, No.40, Yangguang Rd,
Nanhai new District, Weihai, Shandong,China. 264200**

Prepared by:

**Centre Testing International Group Co., Ltd.
Hongwei Industrial Zone, Bao'an 70 District,
Shenzhen, Guangdong, China**

TEL: +86-755-3368 3668

FAX: +86-755-3368 3385



Compiled by:

Wei shifeng

Wei shifeng

Reviewed by:

Aaron Ma

Aaron Ma

Approved by:

David Wang

David Wang

Date:

Jul. 20, 2021

Check No: 7824090421

Table of contents

1 General information.....	5
1.1 Notes.....	5
1.2 Application details.....	5
1.3 Statement of Compliance.....	6
1.4 EUT Information.....	7
1.5 Test standard/s.....	8
1.6 RF exposure limits.....	9
1.7 SAR Definition.....	9
1.8 Testing laboratory.....	10
1.9 Test Environment.....	10
1.10 Applicant and Manufacturer.....	10
2 SAR Measurement System Description and Setup.....	11
2.1 The Measurement System Description.....	11
2.2 Probe description.....	12
2.3 Data Acquisition Electronics description.....	13
2.4 SAM Twin Phantom description.....	14
2.5 ELI4 Phantom description.....	15
2.6 Device Holder description.....	16
3 SAR Test Equipment List.....	17
4 SAR Measurement Procedures.....	19
4.1 Spatial Peak SAR Evaluation.....	19
4.2 Data Storage and Evaluation.....	20
4.3 Data Storage and Evaluation.....	24
5 SAR Verification Procedure.....	26
5.1 Tissue Verification.....	26
5.2 System check procedure.....	28
5.3 System check results.....	29
6 SAR Measurement variability and uncertainty.....	30
6.1 SAR measurement variability.....	30
6.2 SAR measurement uncertainty.....	30
7 SAR Test Results.....	31
7.1 2.4G Conducted Power Measurements.....	31
7.2 5.8G Conducted Power Measurements.....	32
7.3 SAR test results.....	33
7.4 Results overview of 2.4G.....	34

7.5 The location of the antennas.....	35
7.6 Simultaneous Transmission Possibility and Conclusion.....	35
Annex A: Appendix A: SAR System performance Check Plots.....	36
Annex B: Appendix B: SAR Measurement results Plots.....	36
Annex C: Appendix C: Calibration reports.....	36
Annex D: Appendix D: Antenna rotated Photo documentation.....	36
Annex E: Appendix E: Antenna retracted Photo documentation.....	36

Modified History

REV.	Modification Description	Issued Date	Remark
REV.1.0	Initial Test Report Release	Jul. 20, 2021	

1 General information

1.1 Notes

The test results of this test report relate exclusively to the test item specified in this test report.

Centre Testing International Group Co., Ltd. does not assume responsibility for any conclusions and generalisations drawn from the test results with regard to other specimens or samples of the type of the equipment represented by the test item. The test report is not to be reproduced or published in full without the prior written permission.

1.2 Application details

Date of receipt of test item: 2021-05-30

Start of test: 2021-06-13

End of test: 2021-06-21

1.3 Statement of Compliance

The maximum results of Specific Absorption Rate (SAR) found during testing for Powervision Tech Inc. Model Name: PRC30 are as below:

Band		MAX Reported SAR (W/kg)		
		1-g Head	1-g Body (0mm)	1-g Hotspot (10mm)
2.4G QPSK	Antenna rotated	NA	0.088	NA
	Antenna retracted	NA	0.226	NA

Note:

For body operation, this device has been tested and meets FCC/IC RF exposure guidelines when used with any accessory that contains no metal and that positions a minimum of 5mm from the body. Use of other accessories may not ensure compliance with FCC/IC RF exposure guidelines.

The device is in compliance with Specific Absorption Rate (SAR) for general population/uncontrolled exposure limits according to the FCC rule §2.1093, the ANSI/IEEE C95.1:1992, the NCRP Report Number 86 for uncontrolled environment, according to the Industry Canada Radio Standards Specification RSS-102 for General Population/Uncontrolled exposure, and had been tested in accordance with the measurement methods and procedures specified in IEEE Std 1528-2013

1.4 EUT Information

Device Information:	
Product Name:	Remote Controller
Model:	PRC30
Test Model No:	PRC30
FCC ID:	2AKBMPPRC30
SN:	N/A
Exposure Category:	uncontrolled environment / general population
Hardware version:	N/A(manufacturer declare)
Software version :	N/A(manufacturer declare)
Antenna Type :	External antenna
Device Operating Configurations:	
Duty Cycle used for SAR testing:	15.47%
Modulation:	QPSK
Operating Frequency Range(s):	2.4G: 2405MHz - 2475MHz
	5.8G: 5731MHz - 5801MHz
Test Frequency (low-mid-high):	2.4G: 2405-2441-2475
	5.8G:5731-5767-5801
Power Source:	Battery*2:
	Model: PT103450(1ICP10/34/51) Rated Capacity:1750 Rated voltage:3.7V DC Watt Hour:6.74Wh

Remark:

Company Name and Address shown on Report, the sample(s) and sample Information was/ were provided by the applicant who should be responsible for the authenticity which CTI hasn't verified.

1.5 Test standard/s

ANSI Std C95.1-1992	Safety Levels with Respect to Human Exposure to Radio Frequency Electromagnetic Fields, 3 kHz to 300 GHz.
IEEE Std 1528-2003	Recommended Practice for Determining the Peak Spatial-Average Specific Absorption Rate (SAR) in the Human Head from Wireless Communications Devices: Measurement Techniques
RSS-102	Radio Frequency Exposure Compliance of Radiocommunication Apparatus (All Frequency Bands (Issue 5 of March 2015))
KDB447498 D01	General RF Exposure Guidance v06
KDB 690783 D01	SAR Listings on Grants v01r03
KDB865664 D01	SAR measurement 100 MHz to 6 GHz v01r04
KDB865664 D02	SAR Reporting v01r02

1.6 RF exposure limits

Human Exposure	Uncontrolled Environment General Population	Controlled Environment Occupational
Spatial Peak SAR* (Brain/Body/Arms/Legs)	1.60 mW/g	8.00 mW/g
Spatial Average SAR** (Whole Body)	0.08 mW/g	0.40 mW/g
Spatial Peak SAR*** (Hands/Feet/Ankle/Wrist)	4.00 mW/g	20.00 mW/g

The limit applied in this test report is shown in bold letters

Notes:

* The Spatial Peak value of the SAR averaged over any 1 gram of tissue (defined as a tissue volume in the shape of a cube) and over the appropriate averaging time.

** The Spatial Average value of the SAR averaged over the whole body.

*** The Spatial Peak value of the SAR averaged over any 10 grams of tissue (defined as a tissue volume in the shape of a cube) and over the appropriate averaging time.

Uncontrolled Environments are defined as locations where there is the exposure of individuals who have no knowledge or control of their exposure.

Controlled Environments are defined as locations where there is exposure that may be incurred by persons who are aware of the potential for exposure, (i.e. as a result of employment or occupation).

1.7 SAR Definition

Specific Absorption Rate is defined as the time derivative (rate) of the incremental energy (dW) absorbed by(dissipated in) an incremental mass (dm) contained in a volume element (dV) of a given density (ρ).

$$SAR = \frac{d}{dt} \left(\frac{dW}{dm} \right) = \frac{d}{dt} \left(\frac{dW}{\rho dV} \right)$$

SAR is expressed in units of watts per kilogram (W/kg). SAR can be related to the electric field at a point by

$$SAR = \frac{\sigma |E|^2}{\rho}$$

where:

σ = conductivity of the tissue (S/m)
 ρ = mass density of the tissue (kg/m³)
 E = rms electric field strength (V/m)

1.8 Testing laboratory

Test Site	Centre Testing International Group Co., Ltd.
Test Location	Hongwei Industrial Zone, Bao'an 70 District, Shenzhen, Guangdong, China
Telephone	+86 (0) 755 3368 3668
Fax	+86 (0) 755 3368 3385

1.9 Test Environment


	Required	Actual
Ambient temperature:	18 – 25 °C	21.5 ± 2.0 °C
Tissue Simulating liquid:	18 – 25 °C	21.5 ± 2.0 °C
Relative humidity content:	30 – 70 %	30 – 70 %

1.10 Applicant and Manufacturer

Applicant/Client Name	Powervision Tech Inc.
Applicant Address	Zone E,Ocean Venture Valley, No.40, Yangguang Rd, Nanhai new District, Weihai, Shandong,China. 264200
Manufacturer Name	Powervision Tech Inc.
Manufacturer Address	Zone E,Ocean Venture Valley, No.40, Yangguang Rd, Nanhai new District, Weihai, Shandong,China. 264200
Factory Name :	Powervision (Suzhou) Technology Co.,Ltd.
Factory Address :	Building 3,No.15, Zhujing Road,Changshu High-tech Industrial Development Zone,Suzhou,China

2 SAR Measurement System Description and Setup

2.1 The Measurement System Description

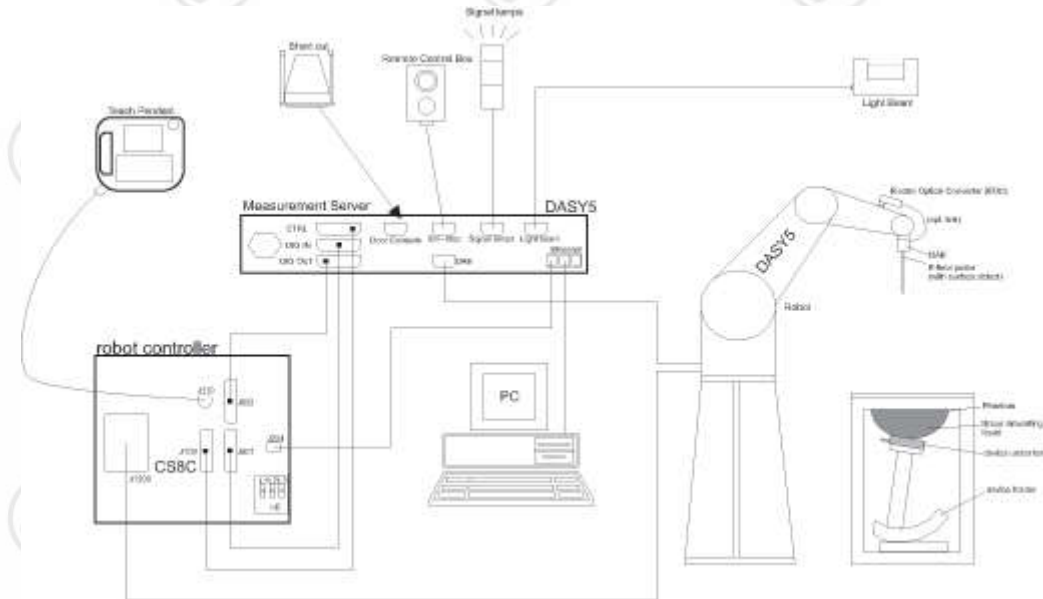

The DASYS system for performing compliance tests consists of the following items:

- A standard high precision 6-axis robot (Stäubli TX/RX family) with controller, teach pendant and software. An arm extension for accommodating the data acquisition electronics (DAE).
- An isotropic field probe optimized and calibrated for the targeted measurement.
- A data acquisition electronics (DAE) which performs the signal amplification, signal multiplexing, AD-conversion, offset measurements, mechanical surface detection, collision detection, etc. The unit is battery powered with standard or rechargeable batteries. The signal is optically transmitted to the EOC.
- The Electro-optical converter (EOC) performs the conversion from optical to electrical signals for the digital communication to the DAE. To use optical surface detection, a special version of the EOC is required. The EOC signal is transmitted to the measurement server.
- The function of the measurement server is to perform the time critical tasks such as signal filtering, control of the robot operation and fast movement interrupts.
- The Light Beam used is for probe alignment. This improves the (absolute) accuracy of the probe positioning.
- A computer running Win7 professional operating system and the DASYS software.
- Remote control and teach pendant as well as additional circuitry for robot safety such as warning lamps, etc.
- The phantom, the device holder and other accessories according to the targeted measurement.

2.2 Probe description

Dosimetric Probes: These probes are specially designed and calibrated for use in liquids with high permittivities. They should not be used in air, since the spherical isotropy in air is poor (± 2 dB). The dosimetric probes have special calibrations in various liquids at different frequencies.

Construction	Symmetrical design with triangular core Interleaved sensors Built-in shielding against static charges PEEK enclosure material (resistant to organic solvents, e.g., DGBE)
Calibration	ISO/IEC 17025 calibration service available.
Frequency	10 MHz to 6 GHz; Linearity: ± 0.2 dB
Probe Overall Length	337mm
Probe Body Diameter	10mm
Tip Length	9mm
Tip Diameter	2.5mm
Dynamic range	5 μ W/g to 100 mW/g; Linearity: ± 0.2 dB



2.3 Data Acquisition Electronics description

The data acquisition electronics (DAE4) consist of a highly sensitive electrometer-grade preamplifier with auto-zeroing, a channel and gain-switching multiplexer, a fast 16 bit AD-converter and a command decoder with a control logic unit. Transmission to the measurement server is accomplished through an optical downlink for data and status information, as well as an optical uplink for commands and the clock.

The mechanical probe mounting device includes two different sensor systems for frontal and sideways probe contacts. They are used for mechanical surface detection and probe collision detection. The input impedance of the DAE4 box is 200M Ω ; the inputs are symmetrical and floating. Common mode rejection is above 80 dB.


Batteries: The DAE works with either two standard 9V batteries or two 9V (actually 8.4V or 9.6 V) rechargeable batteries. Because the electronics automatically power-down unused components during braking or between measurements, the battery lifetime depends on system usage. Typical lifetimes are >20 hours for batteries and >10 hours for accus. Remove the batteries if you do not plan to use the DAE for a long period of time.



2.4 SAM Twin Phantom description

The SAM twin phantom is a fiberglass shell phantom with 2mm shell thickness (except the ear region, where shell thickness increases to 6 mm). The phantom has three measurement areas:

- ◆ Left hand
- ◆ Right hand
- ◆ Flat phantom

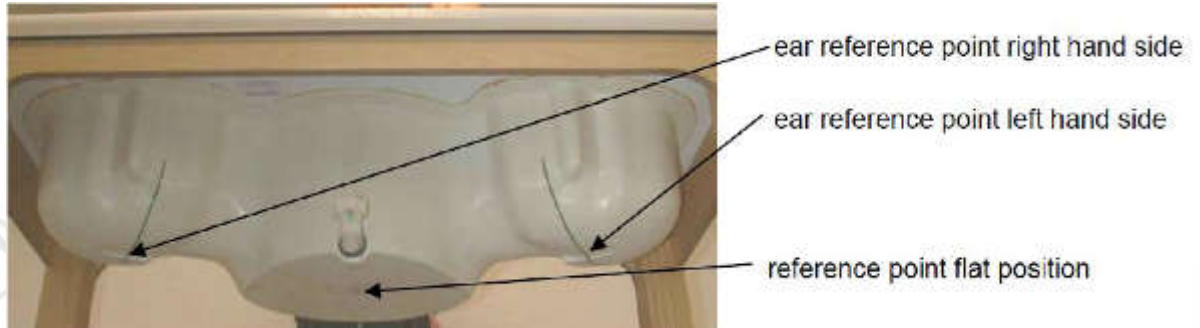

The phantom table for the DASY systems have the size of 100 x 50 x 85 cm (L x W x H). These tables are reinforced for mounting of the robot onto the table. For easy dislocation these tables have fork lift cut outs at the bottom.

The bottom plate contains three pairs of bolts for locking the device holder. The device holder positions are adjusted to the standard measurement positions in the three sections.

A white cover is provided to cover the phantom during off-periods to prevent water evaporation and changes in the liquid parameters.


Three reference marks are provided on the phantom counter. These reference marks are used to teach the absolute phantom position relative to the robot.



2.5 ELI4 Phantom description

The ELI4 phantom is intended for compliance testing of handheld and body mounted wireless devices in the frequency range of 30MHz to 6 GHz. ELI4 is fully compatible with the latest draft of the standard IEC 62209-2 and all known tissue simulating liquids.

ELI4 has been optimized regarding its performance and can be integrated into a SPEAG standard phantom table. A cover prevents evaporation of the liquid. Reference markings on the phantom allow installation of the complete setup, including all predefined phantom positions and measurement grids, by teaching three points

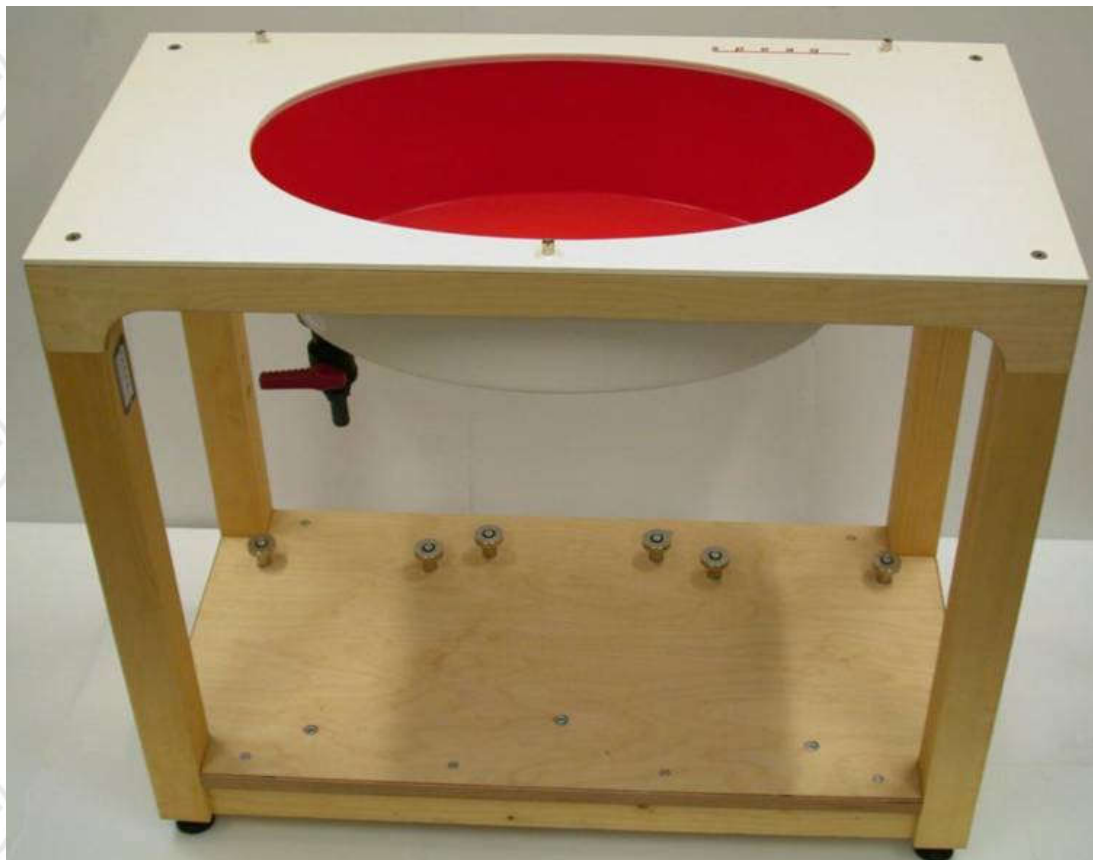

2.6 Device Holder description

The SAR in the phantom is approximately inversely proportional to the square of the distance between the source and the liquid surface. For a source at 5mm distance, a positioning uncertainty of $\pm 0.5\text{mm}$ would produce a SAR uncertainty of $\pm 20\%$. Accurate device positioning is therefore crucial for accurate and repeatable measurements. The positions in which the devices must be measured are defined by the standards.

The DASY device holder is designed to cope with the different positions given in the standard. It has two scales for device rotation (with respect to the body axis) and device inclination (with respect to the line between the ear reference points). The rotation centers for both scales is the ear reference point (ERP). Thus the device needs no repositioning when changing the angles.

The DASY device holder is constructed of low-loss POM material having the following dielectric parameters: relative permittivity $\epsilon = 3$ and loss tangent $\delta = 0.02$. The amount of dielectric material has been reduced in the closest vicinity of the device, since measurements have suggested that the influence of the clamp on the test results could thus be lowered.



3 SAR Test Equipment List

To simplify the identification of the test equipment and/or ancillaries which were used, the reporting of the relevant test cases only refer to the test item number as specified in the table below.

	Manufacturer	Device Type	Type(Model)	Serial number	Date of last calibration	Valid period
<input checked="" type="checkbox"/>	SPEAG	E-Field Probe	EX3DV4	7328	2021-02-03	One year
<input type="checkbox"/>	SPEAG	835 MHz Dipole	D835V2	4d193	2021-01-12	Three years
<input type="checkbox"/>	SPEAG	1750 MHz Dipole	D1750V2	1134	2021-01-12	Three years
<input type="checkbox"/>	SPEAG	1900 MHz Dipole	D1900V2	5d198	2021-01-12	Three years
<input type="checkbox"/>	SPEAG	2000 MHz Dipole	D2000V2	1078	2021-01-12	Three years
<input type="checkbox"/>	SPEAG	2300 MHz Dipole	D2300V2	1082	2020-01-06	Three years
<input checked="" type="checkbox"/>	SPEAG	2450 MHz Dipole	D2450V2	959	2021-01-12	Three years
<input type="checkbox"/>	SPEAG	2600 MHz Dipole	D2600V2	1101	2021-01-12	Three years
<input type="checkbox"/>	SPEAG	5 GHz Dipole	D5GHzV2	1208	2021-01-12	Three years
<input checked="" type="checkbox"/>	SPEAG	DAKS probe	DAKS-3.5	1052	2021-01-27	Three years
<input checked="" type="checkbox"/>	SPEAG	Planar R140 Vector Reflectometer	DAKS-VNA R140	0200514	2021-01-27	Three years
<input checked="" type="checkbox"/>	SPEAG	Data acquisition electronics	DAE4	1458	2021-01-12	One year
<input checked="" type="checkbox"/>	SPEAG	Software	DASY 5	NA	NCR	NCR
<input type="checkbox"/>	SPEAG	Twin Phantom	SAM V5.0	1875	NCR	NCR
<input checked="" type="checkbox"/>	SPEAG	Flat Phantom	ELI V6.0	2024	NCR	NCR
<input type="checkbox"/>	R & S	Universal Radio Communication Tester	CMW500	102898	2020-12-28	One year
<input checked="" type="checkbox"/>	Agilent	Signal Generator	N5181A	MY50142334	2020-12-28	One year
<input checked="" type="checkbox"/>	BONN	Power Amplifier and directional coupler	SU319W	BL-SZ1550140	2020-12-28	One year
<input checked="" type="checkbox"/>	KEITHLEY	RF Power Meter	3500	1128079	2020-06-24	One year
<input checked="" type="checkbox"/>	KEITHLEY	RF Power Meter	3500	1128081	2020-06-24	One year
<input checked="" type="checkbox"/>	JINGCHUAN G	Temperature/ Humidity Indicator	GSP-8	EMK197F0009 5	2020-06-29	One year

Note:

- 1) Per KDB865664D01 requirements for dipole calibration, the test laboratory has adopted three-year extended calibration interval. Each measured dipole is expected to evaluate with the following criteria at least on annual interval in Appendix C.

- a) There is no physical damage on the dipole;
- b) System check with specific dipole is within 10% of calibrated value;
- c) The most recent return-loss result, measured at least annually, deviates by no more than 20% from the previous measurement.
- d) The most recent measurement of the real or imaginary parts of the impedance, measured at least annually is within 5Ω from the previous measurement.

4 SAR Measurement Procedures

4.1 Spatial Peak SAR Evaluation

The DASY5 software includes all numerical procedures necessary to evaluate the spatial peak SAR values. The base for the evaluation is a "cube" measurement in a volume of 30mm³ (7x7x7 points). The measured volume must include the 1 g and 10 g cubes with the highest averaged SAR values. For that purpose, the center of the measured volume is aligned to the interpolated peak SAR value of a previously performed area scan. If the 10g cube or both cubes are not entirely inside the measured volumes, the system issues a warning regarding the evaluated spatial peak values within the Postprocessing engine (SEMCAD X). This means that if the measured volume is shifted, higher values might be possible. To get the correct values you can use a finer measurement grid for the area scan. In complicated field distributions, a large grid spacing for the area scan might miss some details and give an incorrectly interpolated peak location. The entire evaluation of the spatial peak values is performed within the Postprocessing engine (SEMCAD X). The system always gives the maximum values for the 1 g and 10 g cubes.

The algorithm to find the cube with highest averaged SAR is divided into the following stages:

1. extraction of the measured data (grid and values) from the Zoom Scan
2. calculation of the SAR value at every measurement point based on all stored data (A/D values and measurement parameters)
3. generation of a high-resolution mesh within the measured volume
4. interpolation of all measured values from the measurement grid to the high-resolution grid
5. extrapolation of the entire 3-D field distribution to the phantom surface over the distance from sensor to surface
6. calculation of the averaged SAR within masses of 1 g and 10 g

4.2 Data Storage and Evaluation

Data Storage

The DASY5 software stores the measured voltage acquired by the Data Acquisition Electronics (DAE) as raw data together with all the necessary software parameters for the data evaluation (probe calibration data, liquid parameters and communication system parameters) in measurement files with the extension .da5x. The postprocessing software evaluates the data every time the data is visualized or exported. This allows the verification and modification of the setup after completion of the measurement. For example, if a measurement has been performed with an incorrect crest factor, the parameter can be corrected afterwards and the data can be reevaluated.

To avoid unintentional parameter changes or data manipulations, the parameters in measured files are locked. In the administrator access mode of the software, the parameters can be unlocked. After changing the parameters, the measured scans can be reevaluated in the postprocessing engine.

The measured data can be visualized or exported in different units or formats, depending on the selected probe type (e.g., E-field, H-field, SAR). Some of these units are not available in certain situations or give meaningless results, e.g., a SAR-output in a lossless media will always be zero. Raw data can also be exported to perform the evaluation with other software packages.

Data Evaluation

The fields and SAR are calculated from the measured voltage (probe voltage acquired by the DAE) and the following parameters:

Probe parameters:

- Sensitivity

$norm_i, a_{i0}, a_{i1}, a_{i2}$

- Conversion Factor

$convF_i$

- Diode Compression Point

dcp_i

- Probe Modulation Response Factors

a_i, b_i, c_i, d

Device parameters:

- Frequency

f

- Crest factor

cf

Media parameters:

- Conductivity

σ

- Relative Permittivity

ρ

This parameters are stored in the DASY5 V52 measurement file.

These parameters must be correctly set in the DASY5 V52 software setup. They are available as configuration file and can be imported into the measurement file. The values displayed in the multimeter window are assessed using the parameters of the actual system setup. In the scan visualization and export modes, the parameters stored in the measurement file are used.

The measured voltage is not proportional to the exciting. It must be first linearized.

Approximated Probe Response Linearization using Crest Factor.

This linearization method is enabled when a custom defined communication system is measured. The compensation applied is a function of the measured voltage, the detector diode compression point and the crest factor of the measured signal.

$$V_i = U_i + U_i^2 \cdot \frac{cf}{dcp_i}$$

- with
- V_i = linearized voltage of channel i (uV) (i = x,y,z)
 - U_i = measured voltage of channel i (uV) (i = x,y,z)
 - cf = crest factor of exciting field (DASY parameter)
 - dcp_i = diode compression point of channel i (uV) (Probe parameter, i = x,y,z)

Field and SAR Calculation

The primary field data for each channel are calculated using the linearized voltage:

$$E - \text{fieldprobes : } E_i = \sqrt{\frac{V_i}{\text{Norm}_i \cdot \text{ConvF}}}$$

$$H - \text{fieldprobes : } H_i = \sqrt{V_i} \cdot \frac{a_{i0} + a_{i1}f + a_{i2}f^2}{f}$$

with V_i = linearized voltage of channel i (i = x,y,z)

Norm_i = sensor sensitivity of channel i (i = x,y,z)

$\mu\text{V}/(\text{V/m})^2$ for E-field Probes

ConvF = sensitivity enhancement in solution

a_{ij} = sensor sensitivity factors for H-field probes

f = carrier frequency [GHz]

E_i = electric field strength of channel i in V/m

H_i = magnetic field strength of channel i in A/m

The RMS value of the field components gives the total field strength (Hermitian magnitude):

$$E_{tot} = \sqrt{E_x^2 + E_y^2 + E_z^2}$$

The primary field data are used to calculate the derived field units.

$$SAR = E_{tot}^2 \cdot \frac{\sigma}{\rho \cdot 1'000}$$

with SAR = local specific absorption rate in mW/g

E_{tot} = total field strength in V/m

σ = conductivity in [mho/m] or [Siemens/m]

ρ = equivalent tissue density in g/cm^3

Note that the density is set to 1, to account for actual head tissue density rather than the density of the tissue simulating liquid.

Spatial Peak SAR for 1 g and 10 g

The DASY5 software includes all numerical procedures necessary to evaluate the spatial peak SAR values. The base for the evaluation is a "cube" measurement at the points of the fine cube grid consisting of 5 x 5 x 7 points (with 8mm horizontal resolution) or 7 x 7 x 7 points (with 5mm horizontal resolution) or 8 x 8 x 7 points (with 4mm horizontal resolution). The entire evaluation of the spatial peak values is performed within the Postprocessing engine (SEMCAD X). The system always gives the maximum values for the 1 g and 10 g cubes. The algorithm to find the cube with highest averaged SAR is divided into the following stages:

1. extraction of the measured data (grid and values) from the Zoom Scan.
2. calculation of the SAR value at every measurement point based on all stored data (A/D values and measurement parameters).
3. generation of a high-resolution mesh within the measured volume.
4. interpolation of all measured values from the measurement grid to the high-resolution grid
5. extrapolation of the entire 3-D field distribution to the phantom surface over the distance from sensor to surface.
6. calculation of the averaged SAR within masses of 1 g and 10 g.

4.3 Data Storage and Evaluation

The DASY5 installation includes predefined files with recommended procedures for measurements and validation. All test positions (head or body-worn) are tested with the same configuration of test steps differing only in the grid definition for the different test positions.

Step 1: Power reference measurement

The Power Reference Measurement and Power Drift Measurement are for monitoring the power drift of the device under test in the batch process. The Minimum distance of probe sensors to surface determines the closest measurement point to phantom surface. By default, the Minimum distance of probe sensors to surface is 4 mm. This distance can be modified by the user, but cannot be smaller than the Distance of sensor calibration points to probe tip as defined in the probe properties. The SAR measurement was taken at a selected spatial reference point to monitor power variations during testing. This fixed location point was measured and used as a reference value.

Step 2: Area Scan

The Area Scan is used as a fast scan in two dimensions to find the area of high field values, before doing a finer measurement around the hotspot. The sophisticated interpolation routines implemented in DASY5 software can find the maximum locations even in relatively coarse grids. When an Area Scan has measured all reachable points, it computes the field maxima found in the scanned area, within a range of the global maximum. The range (in dB) is specified in the standards for compliance testing. For example, a 2 dB range is required in IEEE 1528-2003 and IEC 62209 standards, whereby 3 dB is a requirement when compliance is assessed in accordance with the ARIB standard (Japan). If only one Zoom Scan follows the Area Scan, then only the absolute maximum will be taken as reference. For cases where multiple maximums are detected, the number of Zoom Scans has to be increased accordingly.

Step 3: Zoom Scan

The Zoom Scans are used to assess the peak spatial SAR values within a cubic averaging volume containing 1 gram and 10 gram of simulated tissue. The default Zoom Scan is defined in the following table. DASY5 is also able to perform repeated zoom scans if more than 1 peak is found during area scan. When the measurement is done, the Zoom Scan evaluates the averaged SAR for 1 gram and 10 gram and displays these values next to the job's label.

Area scan and Zoom scan resolutions per FCC KDB Publication 865664 D01:

Frequency	Maximun Area Scan resolution ($\Delta x_{Area}, \Delta y_{Area}$)	Maximun Zoom Scan spatial resolution ($\Delta x_{Zoom}, \Delta y_{Zoom}$)	Maximun Zoom Scan spatial resolution			Minimum zoom scan volume (x,y,z)
			Uniform Grid	Graded Grad		
			$\Delta z_{Zoom}(n)$	$\Delta z_{Zoom}(1)^*$	$\Delta z_{Zoom}(n>1)^*$	
≤ 2GHz	≤ 15mm	≤ 8mm	≤ 5mm	≤ 4mm	$\leq 1.5 * \Delta z_{Zoom}(n-1)$	≥ 30mm
2-3GHz	≤ 12mm	≤ 5mm	≤ 5mm	≤ 4mm	$\leq 1.5 * \Delta z_{Zoom}(n-1)$	≥ 30mm
3-4GHz	≤ 12mm	≤ 5mm	≤ 4mm	≤ 3mm	$\leq 1.5 * \Delta z_{Zoom}(n-1)$	≥ 28mm
4-5GHz	≤ 10mm	≤ 4mm	≤ 3mm	≤ 2.5mm	$\leq 1.5 * \Delta z_{Zoom}(n-1)$	≥ 25mm
5-6GHz	≤ 10mm	≤ 4mm	≤ 2mm	≤ 2mm	$\leq 1.5 * \Delta z_{Zoom}(n-1)$	≥ 22mm

Step 4: Power Drift Monitoring

The Power Drift Measurement measures the field at the same location as the most recent power reference measurement job within the same procedure, and with the same settings. The Power Drift Measurement gives the field difference in dB from the reading conducted within the last Power Reference Measurement. If the value changed by more than 5%, the evaluation should be retested.

5 SAR Verification Procedure

5.1 Tissue Verification

The following materials are used for producing the tissue-equivalent materials.

(Liquids used for tests are marked with ☒):

Ingredients (% of weight)	Frequency (MHz)						
	Head Tissue						
Tissue Type	<input type="checkbox"/> 835	<input type="checkbox"/> 1800	<input type="checkbox"/> 2000	<input type="checkbox"/> 2300	<input checked="" type="checkbox"/> 2450	<input type="checkbox"/> 2600	<input type="checkbox"/> 5200-5800
frequency band	<input type="checkbox"/> 835	<input type="checkbox"/> 1800	<input type="checkbox"/> 2000	<input type="checkbox"/> 2300	<input checked="" type="checkbox"/> 2450	<input type="checkbox"/> 2600	<input type="checkbox"/> 5200-5800
Water	41.45	52.64	54.9	62.82	62.7	55.242	65.52
Salt (NaCl)	1.45	0.36	0.18	0.51	0.5	0.306	0.0
Sugar	56.0	0.0	0.0	0.0	0.0	0.0	0.0
HEC	1.0	0.0	0.0	0.0	0.0	0.0	0.0
Bactericide	0.1	0.0	0.0	0.0	0.0	0.0	0.0
Triton X-100	0.0	0.0	0.0	0.0	36.8	0.0	17.24
DGBE	0.0	47.0	44.92	36.67	0.0	44.452	0.0
Diethylenglycol monohexylether	0.0	0.0	0.0	0.0	0.0	0.0	17.24
Ingredients (% of weight)	Body Tissue						
Tissue Type	<input type="checkbox"/> 835	<input type="checkbox"/> 1750	<input type="checkbox"/> 1900	<input type="checkbox"/> 2450	<input type="checkbox"/> 2600	<input type="checkbox"/> 5200-5800	
frequency band	<input type="checkbox"/> 835	<input type="checkbox"/> 1750	<input type="checkbox"/> 1900	<input type="checkbox"/> 2450	<input type="checkbox"/> 2600	<input type="checkbox"/> 5200-5800	
Water	52.5	69.91	69.91	73.20	64.50	76.3	
Salt (NaCl)	1.40	0.13	0.13	0.04	0.02	0.0	
Sugar	45.0	0.0	0.0	0.0	0.0	0.0	
HEC	1.0	0.0	0.0	0.0	0.0	0.0	
Bactericide	0.1	0.0	0.0	0.0	0.0	0.0	
Triton X-100	0.0	0.0	0.0	0.0	0.0	10.2	
DGBE	0.0	29.96	29.96	26.76	35.48	0.0	
Diethylenglycol monohexylether	0.0	0.0	0.0	0.0	0.0	13.5	

Salt: 99+% Pure Sodium Chloride

Water: De-ionized, 16MΩ+ resistivity

DGBE: 99+% Di(ethylene glycol) butyl ether, [2-(2-butoxyethoxy)ethanol]

Triton X-100(ultra pure): Polyethylene glycol mono [4-(1,1,3,3-tetramethylbutyl)phenyl]ether

Sugar: 98+% Pure Sucrose

HEC: Hydroxyethyl Cellulose

Tissue simulating liquids: parameters:


Tissue Type	Measured Frequency (MHz)	Target Tissue		Measured Tissue		Liquid Temp.	Test Date
		ϵ_r (+/-5%)	σ (S/m) (+/-5%)	ϵ_r	σ (S/m)		
2450	2450	39.20 (37.24~41.16)	1.80 (1.71~1.89)	38.79	1.86	19.76°C	6/15/2021
	2405	39.28 (37.32~41.24)	1.76 (1.67~1.85)	38.86	1.82	19.76°C	6/15/2021
	2441	39.21 (37.25~41.17)	1.79 (1.70~1.88)	38.88	1.86	19.76°C	6/15/2021
	2475	39.16 (37.20~41.12)	1.82 (1.73~1.91)	38.78	1.89	19.76°C	6/15/2021
2450	2450	39.20 (37.24~41.16)	1.82 (1.71~1.89)	38.62	1.84	19.79°C	6/16/2021
	2405	39.28 (37.32~41.24)	1.76 (1.67~1.85)	38.86	1.80	19.79°C	6/16/2021
	2441	39.21 (37.25~41.17)	1.79 (1.70~1.88)	38.75	1.83	19.79°C	6/16/2021
	2475	39.16 (37.20~41.12)	1.82 (1.73~1.91)	38.53	1.86	19.79°C	6/16/2021

ϵ_r = Relative permittivity, σ = Conductivity

5.2 System check procedure

The System check is performed by using a System check dipole which is positioned parallel to the planar part of the SAM phantom at the reference point. The distance of the dipole to the SAM phantom is determined by a spacer. The dipole is connected to the signal source consisting of signal generator and amplifier via a directional coupler, N-connector cable and adaption to SMA. It is fed with a power of 250mW. To adjust this power a power meter is used. The power sensor is connected to the cable before the System check to measure the power at this point and do adjustments at the signal generator. At the outputs of the directional coupler both return loss as well as forward power are controlled during the validation to make sure that emitted power at the dipole is kept constant. This can also be checked by the power drift measurement after the test (result on plot).

System check results have to be equal or near the values determined during dipole calibration (target SAR in table above) with the relevant liquids and test system.

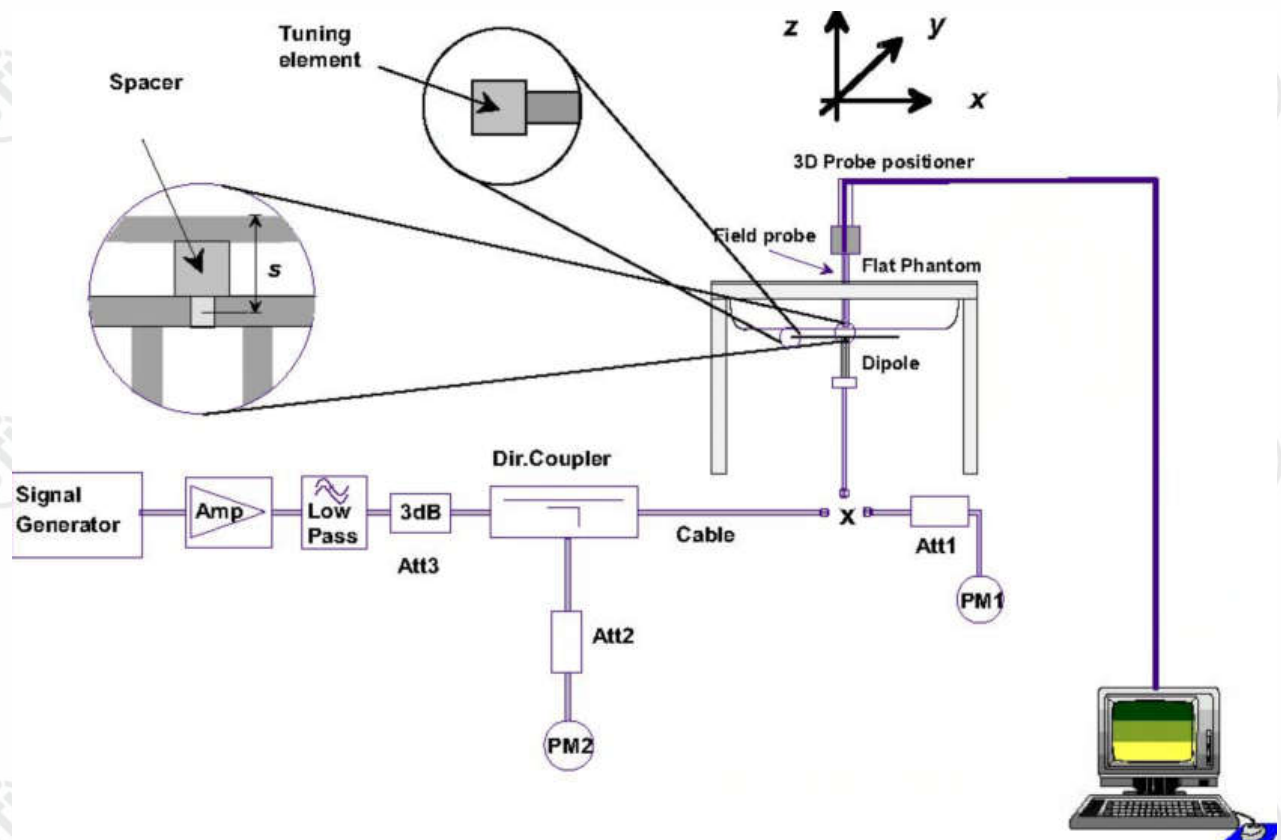

5.3 System check results

The system Check is performed for verifying the accuracy of the complete measurement system and performance of the software. The following table shows System check results for all frequency bands and tissue liquids used during the tests (plot(s) see annex A).

System Check (MHz)	Target SAR (1W) (+/-10%)		Measured SAR (Normalized to 1W)		Liquid Temp.	Test Date
	1-g (mW/g)	10-g (mW/g)	1-g (mW/g)	10-g (mW/g)		
D2450V2	53.70 (48.33~59.07)	25.00 (22.50~27.50)	50.80	23.56	19.76°C	6/15/2021
D2450V2	53.70 (48.33~59.07)	25.00 (22.50~27.50)	54.00	24.88	19.79°C	6/16/2021

Note: All SAR values are normalized to 1W forward power.

6 SAR Measurement variability and uncertainty

6.1 SAR measurement variability

In accordance with published RF Exposure KDB procedure 865664 D01 SAR measurement 100 MHz to 6 GHz v01r04. These additional measurements are repeated after the completion of all measurements requiring the same head or body tissue-equivalent medium in a frequency band. The test device should be returned to ambient conditions (normal room temperature) with the battery fully charged before it is re-mounted on the device holder for the repeated measurement(s) to minimize any unexpected variations in the repeated results.

- 1) Repeated measurement is not required when the original highest measured SAR is < 0.80 W/kg; steps 2) through 4) do not apply.
- 2) When the original highest measured SAR is ≥ 0.80 W/kg, repeat that measurement once.
- 3) Perform a second repeated measurement only if the ratio of largest to smallest SAR for the original and first repeated measurements is > 1.20 or when the original or repeated measurement is ≥ 1.45 W/kg (~ 10% from the 1-g SAR limit).
- 4) Perform a third repeated measurement only if the original, first or second repeated measurement is ≥ 1.5 W/kg and the ratio of largest to smallest SAR for the original, first and second repeated measurements is > 1.20 .

6.2 SAR measurement uncertainty


Per KDB865664 D01 SAR Measurement 100 MHz to 6 GHz v01r04, when the highest measured 1-g SAR within a frequency band is < 1.5 W/kg, the extensive SAR measurement uncertainty analysis described in IEEE Std 1528-2013 is not required in SAR reports submitted for equipment approval. The equivalent ratio (1.5/1.6) is applied to extremity and occupational exposure conditions.

7 SAR Test Results

7.1 2.4G Conducted Power Measurements

Modulation	Tune up (dBm)	Channel/ Frequency	Peak Power(dBm)	Duty Cycle[%]	Averaged output Power (dBm)
QPSK	12.50	2405	20.17	15.47%	12.06
	12.50	2441	19.79	15.47%	11.68
	12.50	2475	19.47	15.47%	11.36

Avg Power=Peak Power-10log(1/Duty Cycle) Factor[dB]

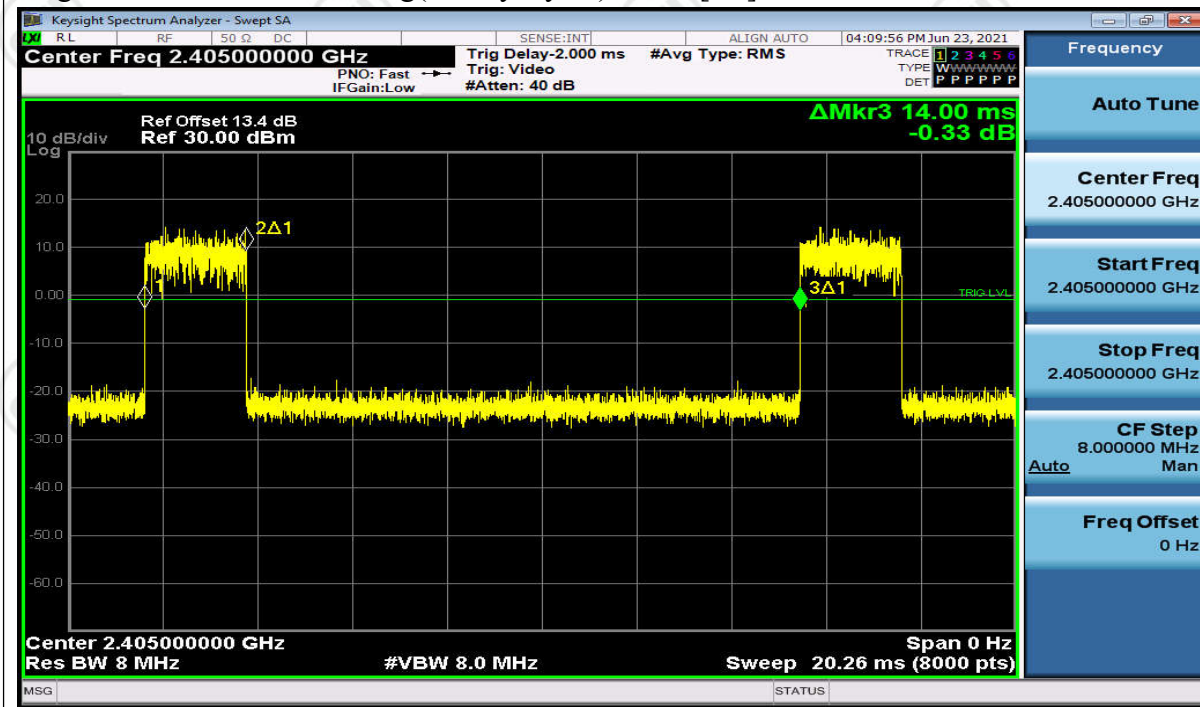

7.2 5.8G Conducted Power Measurements

Test Frequency (MHz)	E (dBμV/m)	EIRP (dBm)	Antenna gain (dBi)	Max. averaged conducted output power (dBm)	Max. averaged conducted output power (mW)	min. test separation distance, (mm)	Calculated value	Exclusion threshold
5731.07	93.55	-1.75	1	-2.75	0.53	5	0.106	≤ 3.0
5767.21	93.59	-1.71	1	-2.71	0.54	5	0.108	≤ 3.0
5801.01	93.86	-1.44	1	-2.44	0.57	5	0.114	≤ 3.0

Conclusion: the calculated value ≤3.0, SAR is exempted.

Remark:

- 1) The E (dBμV/m) data refer to report Report No.: EED39N802102
- 2) EIRP(dBm) = E(dBμV/m) - 95.3
- 3) Max. averaged conducted output power(dBm)= EIRP(dBm) – Antenna gain(dBi)
- 4) $[(\text{Max. averaged conducted output power, mW})/(\text{min. test separation distance, mm})] * [\sqrt{f(\text{GHz})}] \leq 3.0$

7.3 SAR test results

Notes:

1) Per KDB447498 D01v06, testing of other required channels within the operating mode of a frequency band is not required when the reported 1-g or 10-g SAR for the mid-band or highest output power channel is: ≤ 0.8 W/kg or 2.0 W/kg, for 1-g or 10-g respectively, when the transmission band is ≤ 100 MHz. When the maximum output power variation across the required test channels is $> \frac{1}{2}$ dB, instead of the middle channel, the highest output power channel must be used.

2) Per KDB447498 D01v06, All measurement SAR result is scaled-up to account for tune-up tolerance is compliant.

3) Per KDB865664 D01v01r04, for each frequency band, repeated SAR measurement is required only when the measured SAR is ≥ 0.8 W/Kg; if the deviation among the repeated measurement is $\leq 20\%$, and the measured SAR < 1.45 W/Kg, only one repeated measurement is required.

4) Per KDB865664 D02v01r02, SAR plot is only required for the highest measured SAR in each exposure configuration, wireless mode and frequency band combination; Plots are also required when the measured SAR is > 1.5 W/kg, or > 7.0 W/kg for occupational exposure. The published RF exposure KDB procedures may require additional plots; for example, to support SAR to peak location separation ratio test exclusion and/or volume scan post-processing (Refer to appendix B for details).

5) This device doesn't support Hotspot mode and voice mode that next to the ear, the hotspot and head mode is not applicable. This device employ QPSK modulation, the signal is sent by data both voice and data, The voice and data transmitting is only apply to body exposure conditions.

7.4 Results overview of 2.4G

Test Antenna rotated:




Test position of Body with 0mm	channel / Frequency	Modulation	SAR Value (W/Kg)		Power Drift(dB)	Conducted Power(dBm)	Tune up Power(dBm)	Scaled SAR1-g(W/kg)	Actual duty factor	Reported SAR1-g(W/kg)
			1-g	10-g						
Front Side	2405	QPSK	0.002	0.001	0.000	12.08	12.50	0.002	15.52%	0.014
Back Side	2405	QPSK	0.001	0.000	0.000	12.08	12.50	0.001	15.52%	0.007
Left Side	2405	QPSK	0.001	0.000	0.000	12.08	12.50	0.001	15.52%	0.006
Top Side	2405	QPSK	0.005	0.002	-0.550	12.08	12.50	0.005	15.52%	0.035
Top Side	2441	QPSK	0.011	0.004	0.910	11.70	12.50	0.014	15.52%	0.088
Top Side	2475	QPSK	0.010	0.006	0.570	11.38	12.50	0.013	15.52%	0.081

Test Antenna retracted:

Test position of Body with 0mm	channel / Frequency	Modulation	SAR Value (W/Kg)		Power Drift(dB)	Conducted Power(dBm)	Tune up Power(dBm)	Scaled SAR1-g(W/kg)	Actual duty factor	Reported SAR1-g(W/kg)
			1-g	10-g						
Front Side	2405	QPSK	0.005	0.003	0.000	12.08	12.50	0.005	15.52%	0.033
Back Side	2405	QPSK	0.001	0.000	0.000	12.08	12.50	0.001	15.52%	0.006
Left Side	2405	QPSK	0.001	0.000	0.000	12.08	12.50	0.001	15.52%	0.007
Top Side	2405	QPSK	0.022	0.006	0.320	12.08	12.50	0.024	15.52%	0.153
Top Side	2441	QPSK	0.029	0.009	0.950	11.70	12.50	0.035	15.52%	0.226
Top Side	2475	QPSK	0.021	0.006	-0.190	11.38	12.50	0.027	15.52%	0.173

7.5 The location of the antennas

The location of the antennas of PRC30 shown as below picture:

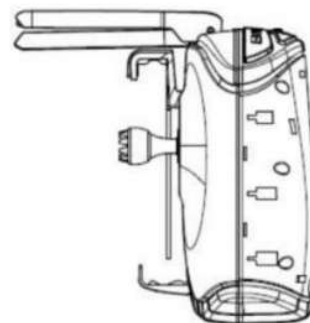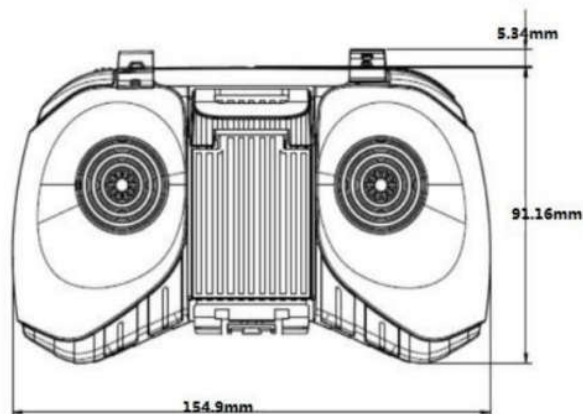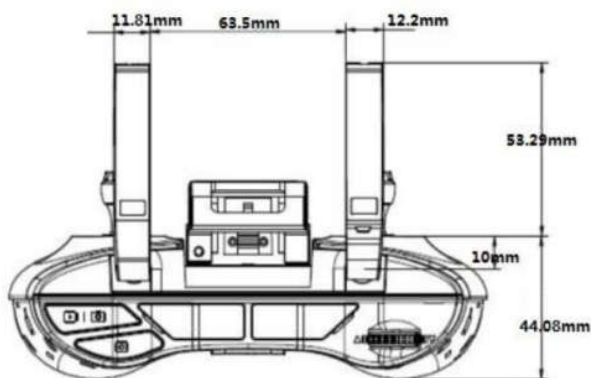

7.6 Simultaneous Transmission Possibility and Conclusion

The device has only one transmitting antenna, supports QPSK technology, there is no possibility of simultaneous transmission, and the reported SAR result does not exceed the SAR limit, so the test result complies with the FCC limit.

Annex A: Appendix A: SAR System performance Check Plots

(Please See Appendix A)

Annex B: Appendix B: SAR Measurement results Plots

(Please See Appendix B)

Annex C: Appendix C: Calibration reports

(Please See Appendix C)

Annex D: Appendix D: Antenna rotated Photo documentation

(Please See Appendix D)

Annex E: Appendix E: Antenna retracted Photo documentation

(Please See Appendix E)

The test report is effective only with both signature and specialized stamp, The result(s) shown in this report refer only to the sample(s) tested. Without written approval of CTI, this report can't be reproduced except in full.

—END OF REPORT—