


**OWLLABS**

# **SETUP GUIDE**




Owl Bar


WHAT'S IN THE BOX

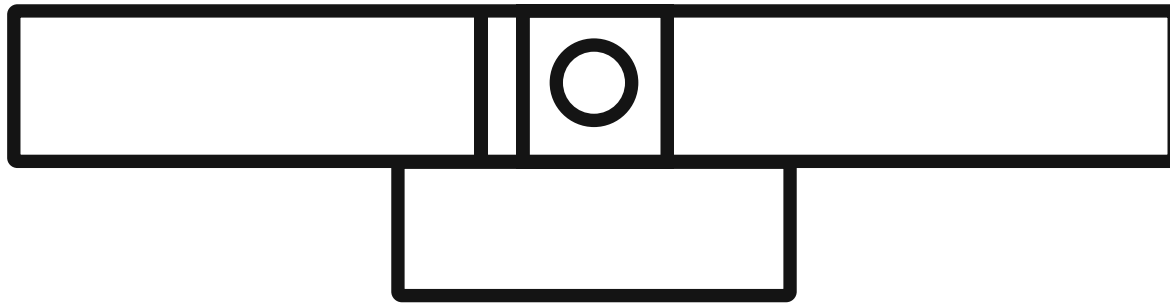


Owl Bar with Mount

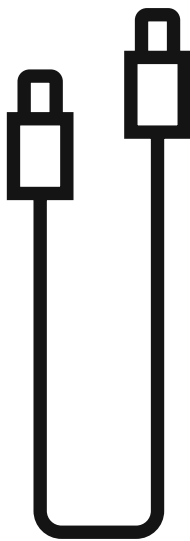


USB-C Cable

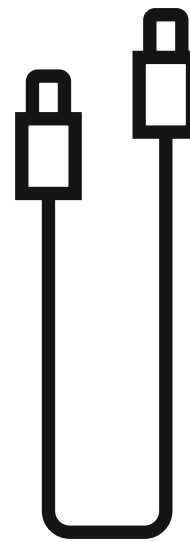


HDMI Cable

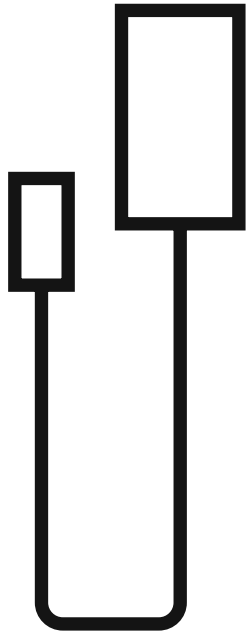


Power Adapter

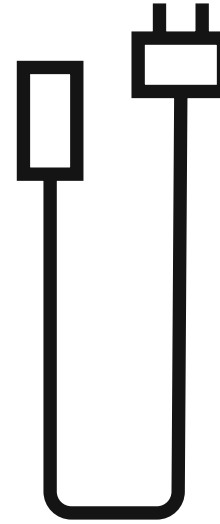

Power Cord

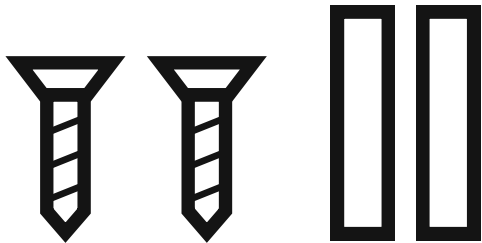


Wall Mounting Screws + Anchors

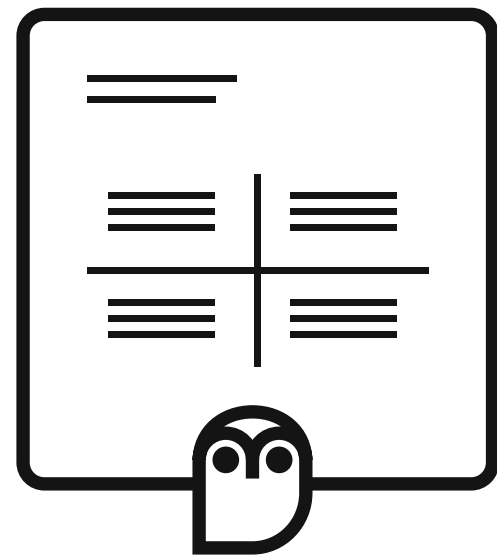

Reference Card + Holder


## SETUP STEP 1

Connect the Owl Bar to your computer using the USB-C Cable.

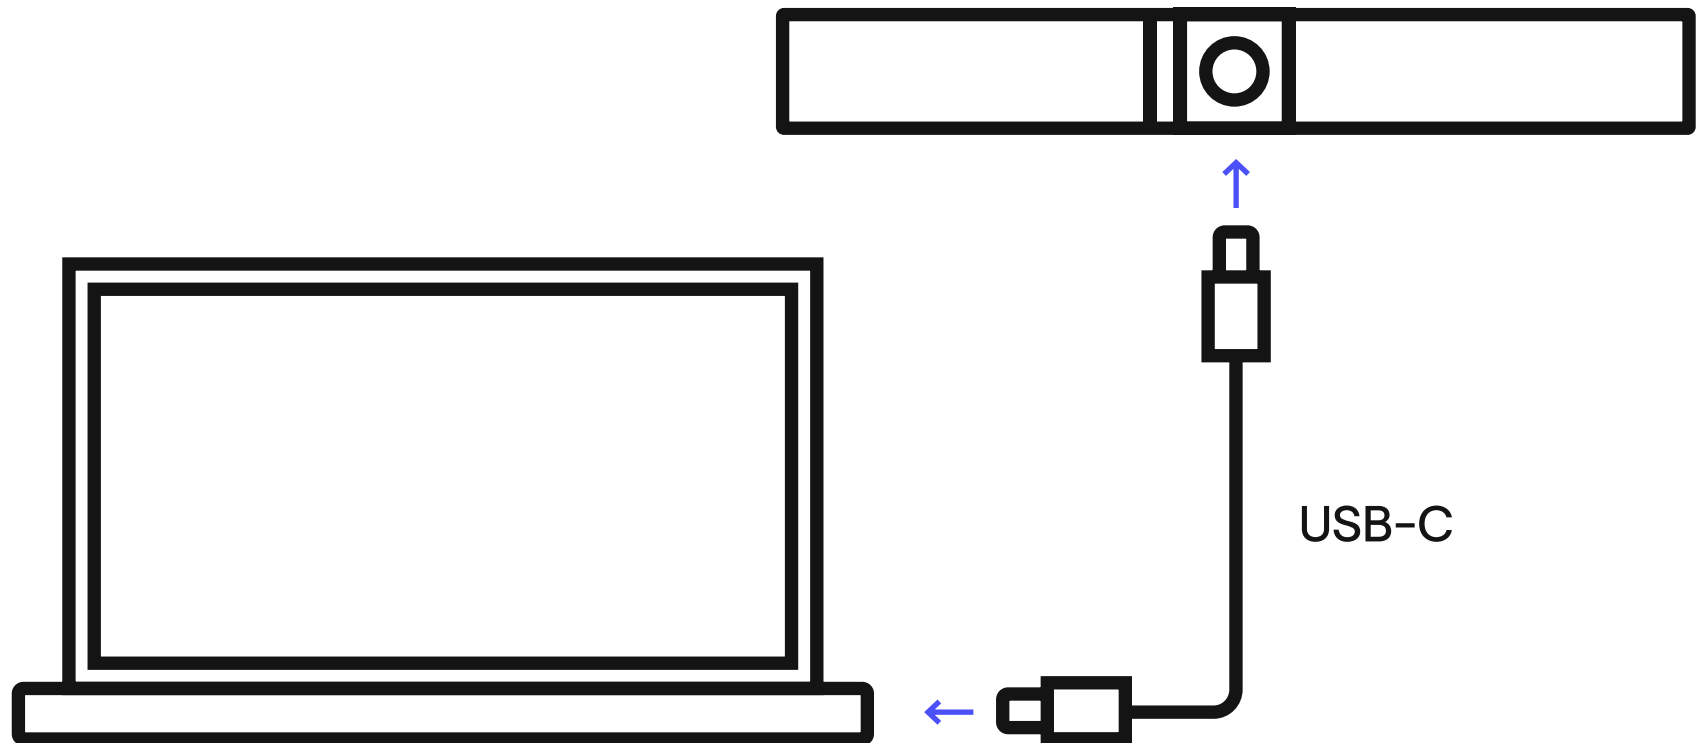


## SETUP STEP 2

Connect the Power Cord to the Power Adapter then plug it into the Owl Bar and an outlet. Optionally, connect the Owl Bar to ethernet.

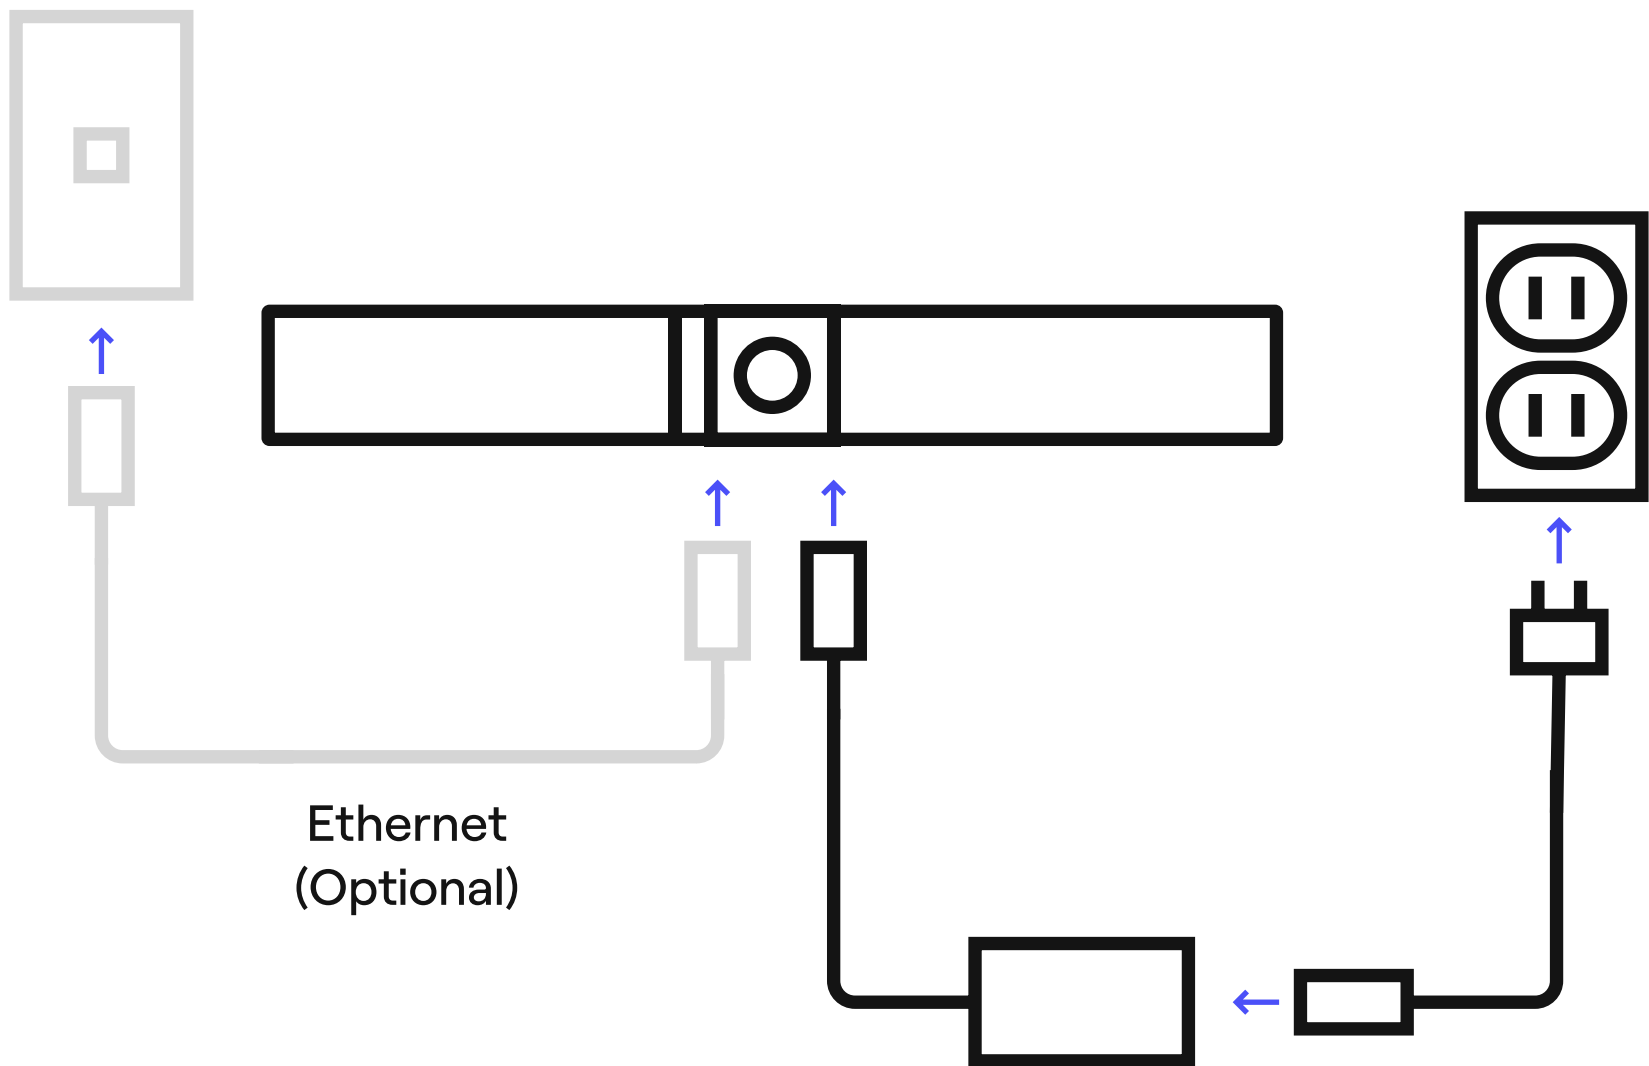

# Mounting the Owl Bar


The Owl Bar with mount can either be placed on a flat surface or mounted to the wall.

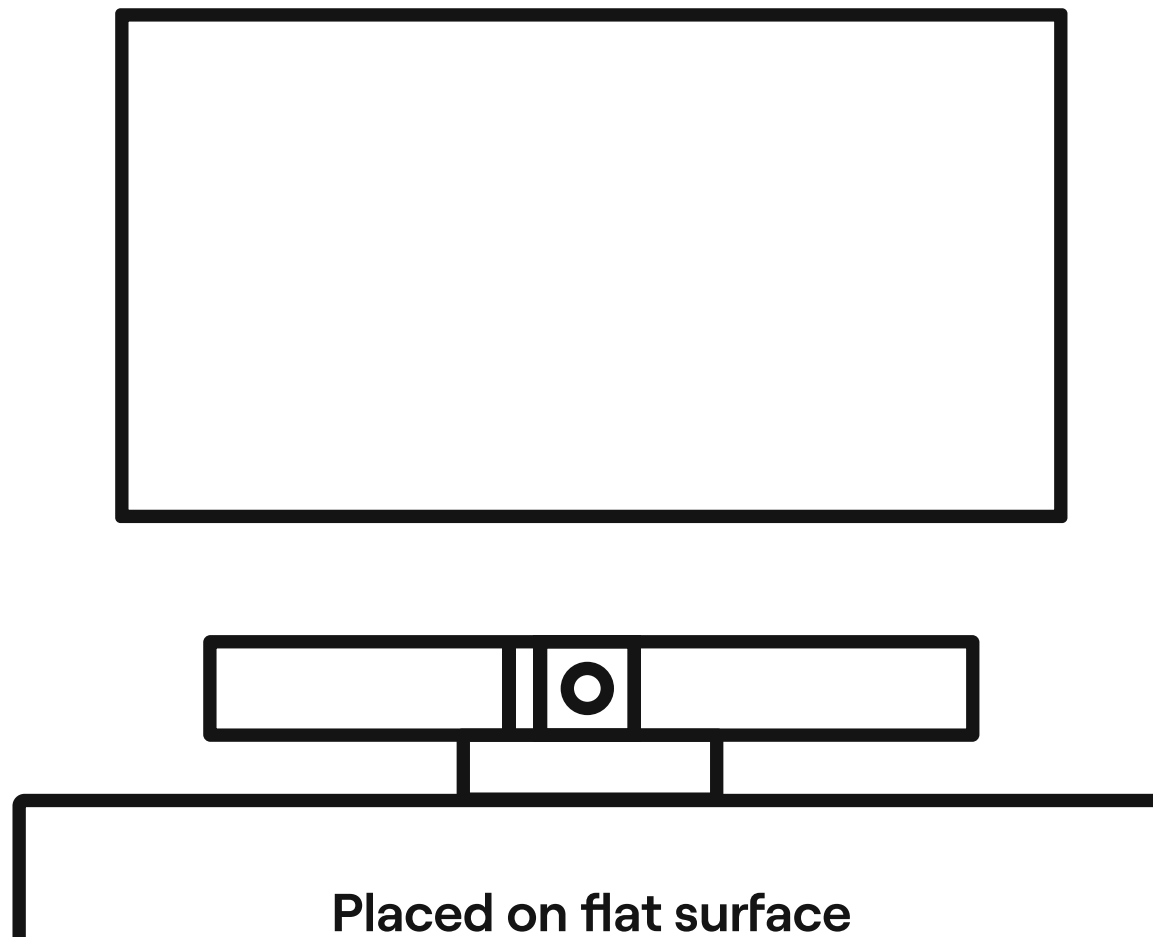

Visit [owllabs.com/ob-mounting](https://owllabs.com/ob-mounting) to learn more about mounting options.

## (OPTIONAL) WALL MOUNT STEP 1

If attaching to the wall, rotate the Owl Bar 90°. Then hold the Owl Bar with mount against wall and decide the best placement for your setup.

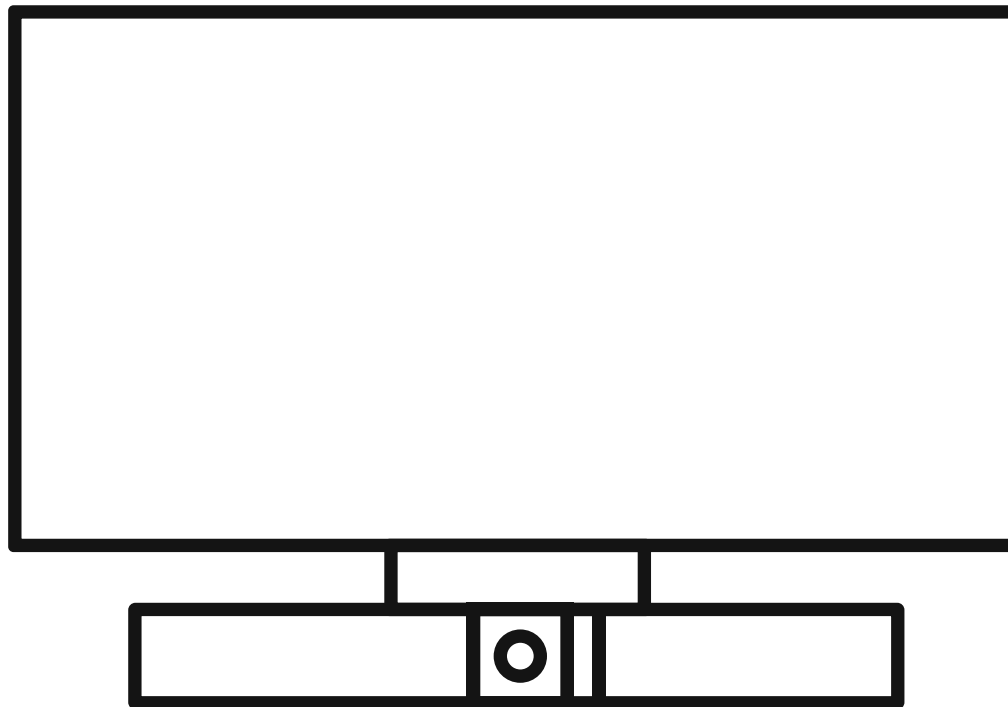


**Mounted on wall**

Placing the Owl Bar below the TV is recommended.

(OPTIONAL) WALL MOUNT STEP 2


Press the quick release tab and slide the Owl Bar off of the mount.

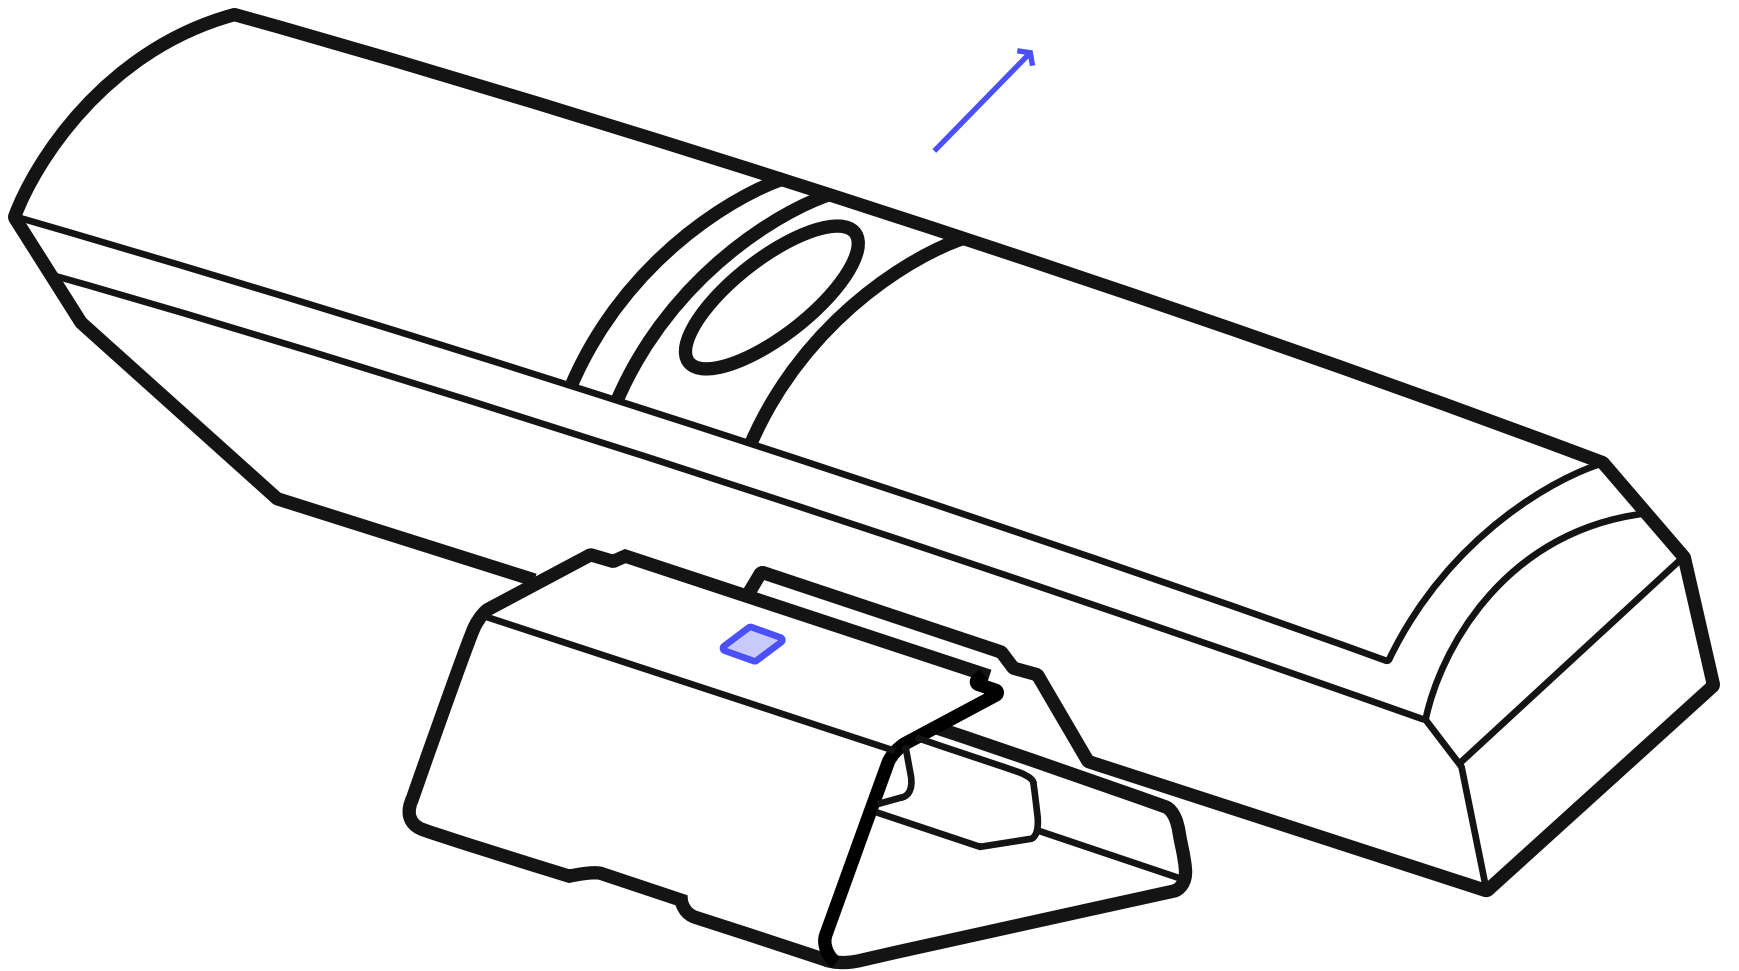




### (OPTIONAL) WALL MOUNT STEP 3

Mark screw holes on the wall. Drill pilot holes using a ## bit. Install anchors then screw the wall mount into the anchors.

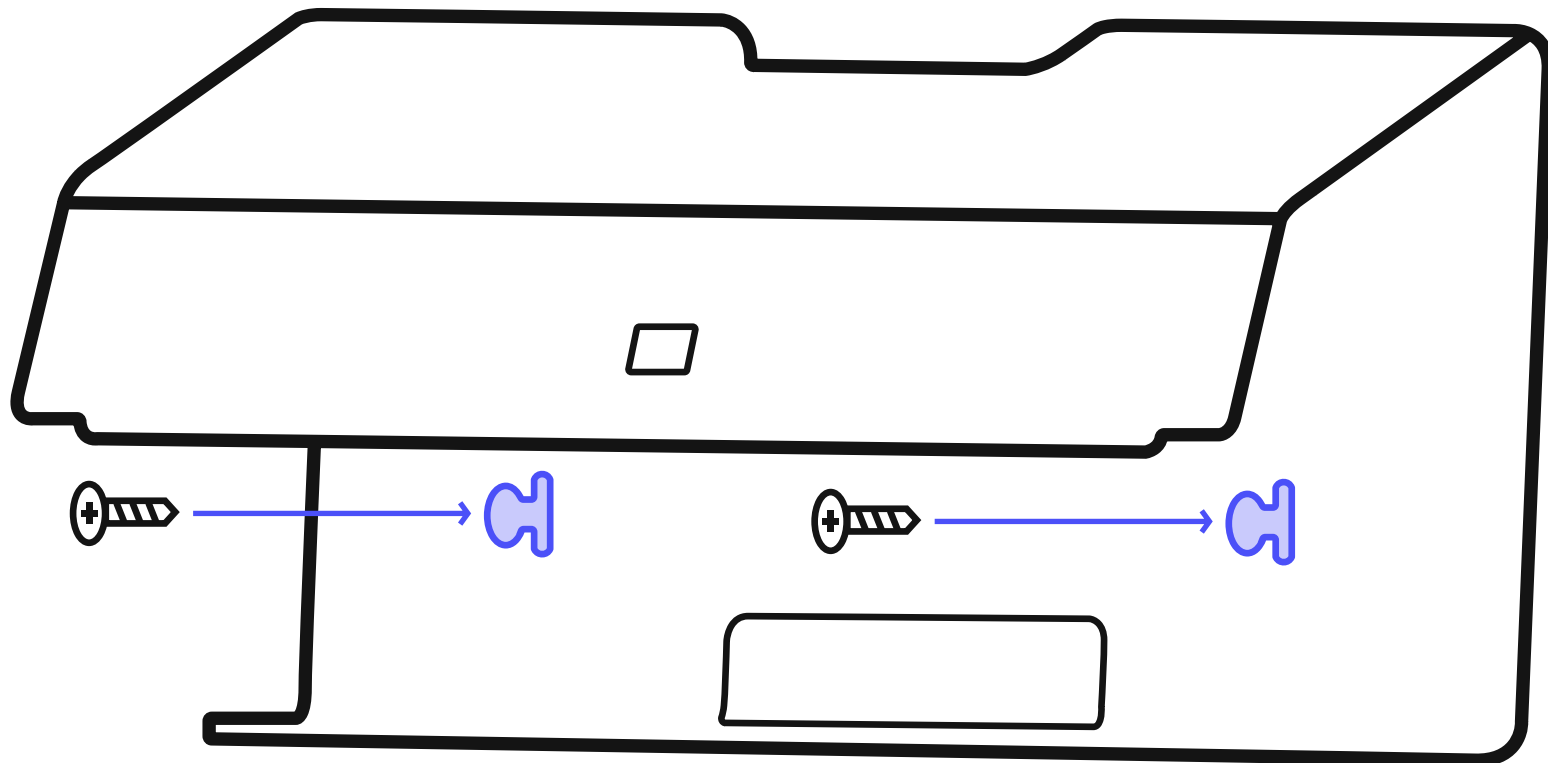

#### (OPTIONAL) WALL MOUNT STEP 4


Align the Owl Bar's quick release tab with the mount's notch. Slide the Owl Bar in until you hear a click.

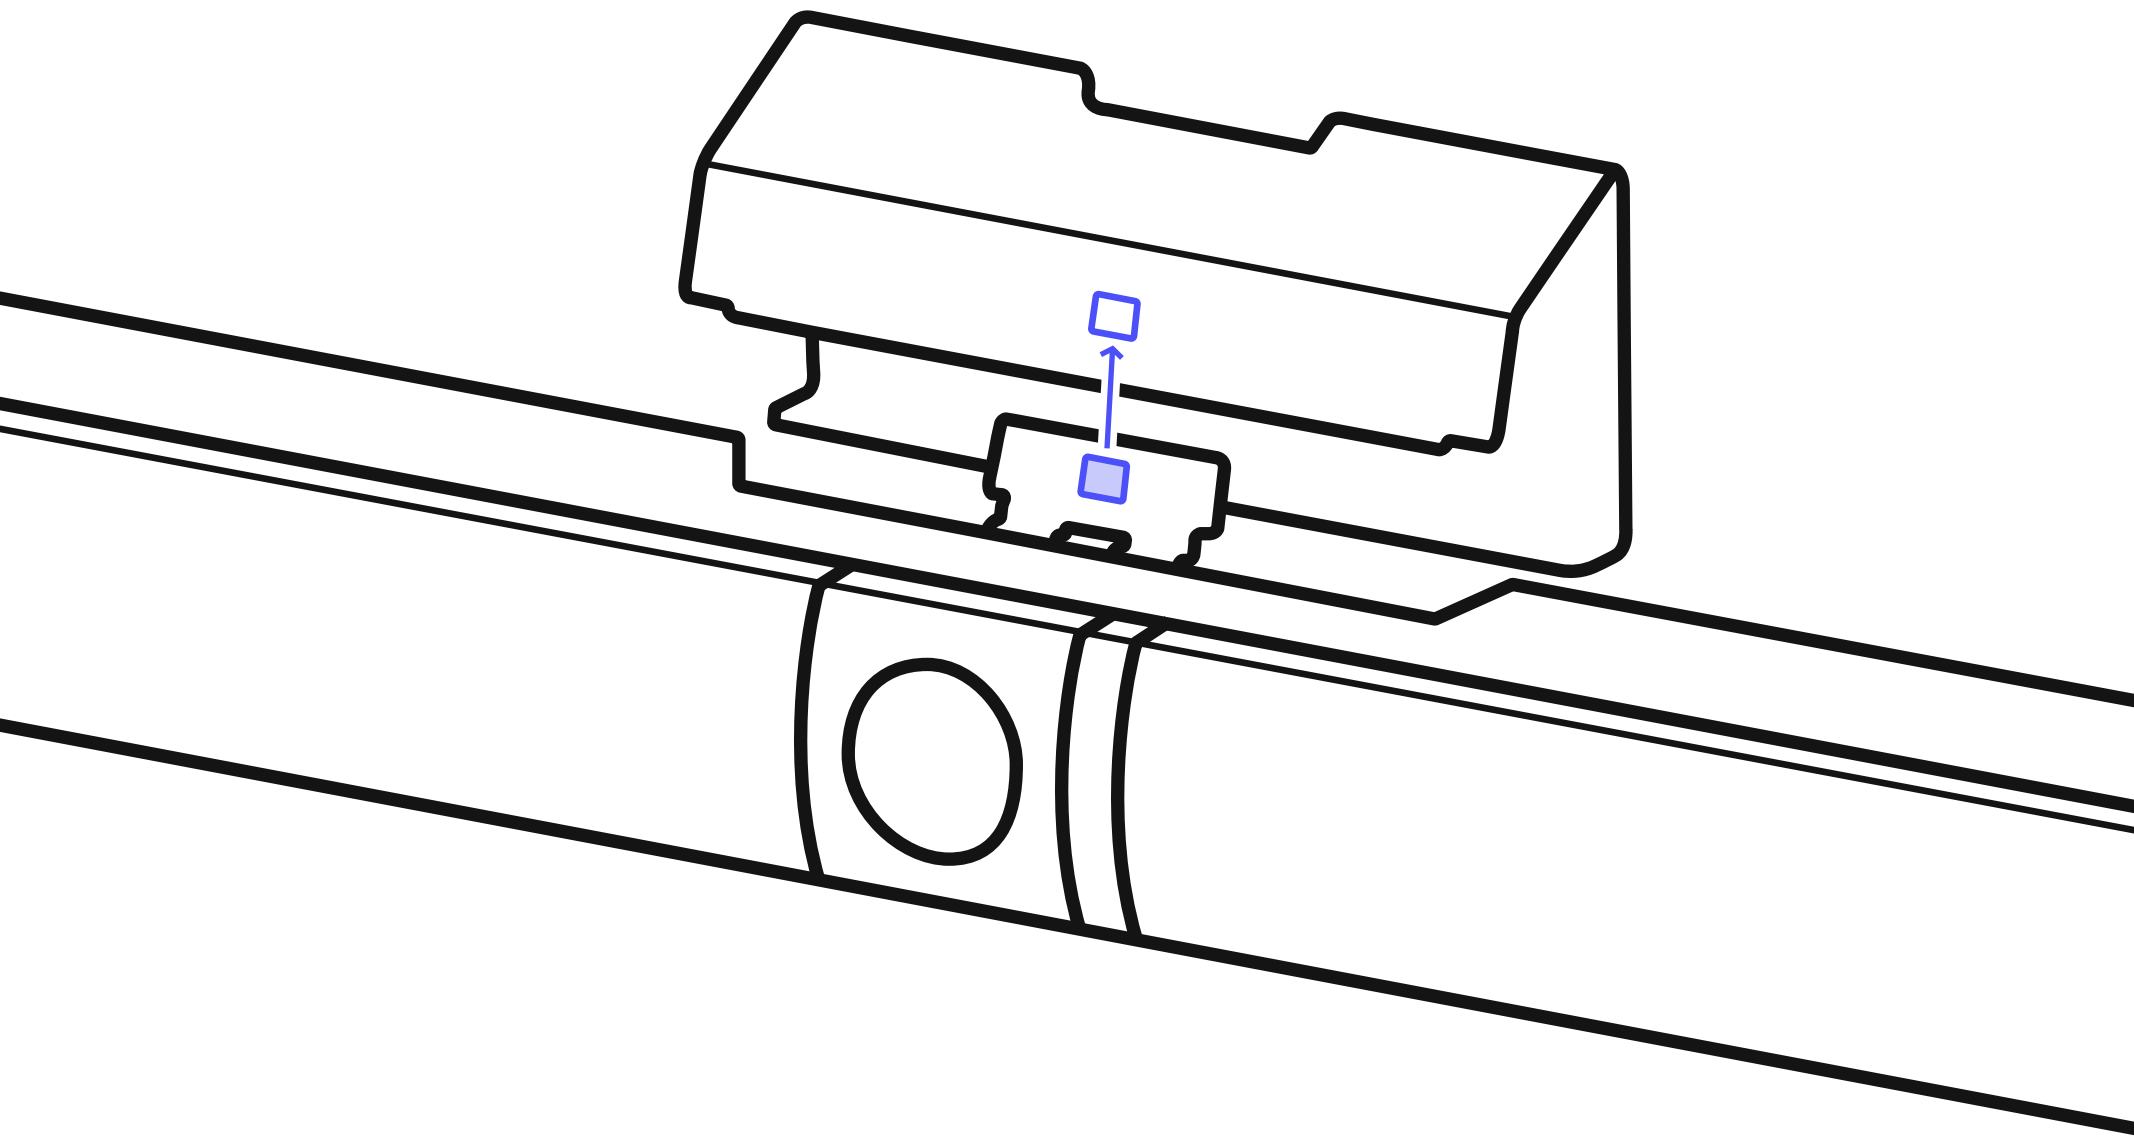

Try angling the Owl Bar to best capture people in the room.

# Finish Setup


Download the Meeting Owl App by visiting [www.owllabs.com/download](http://www.owllabs.com/download). Follow the instructions in the app to complete setup and register your Owl Bar.

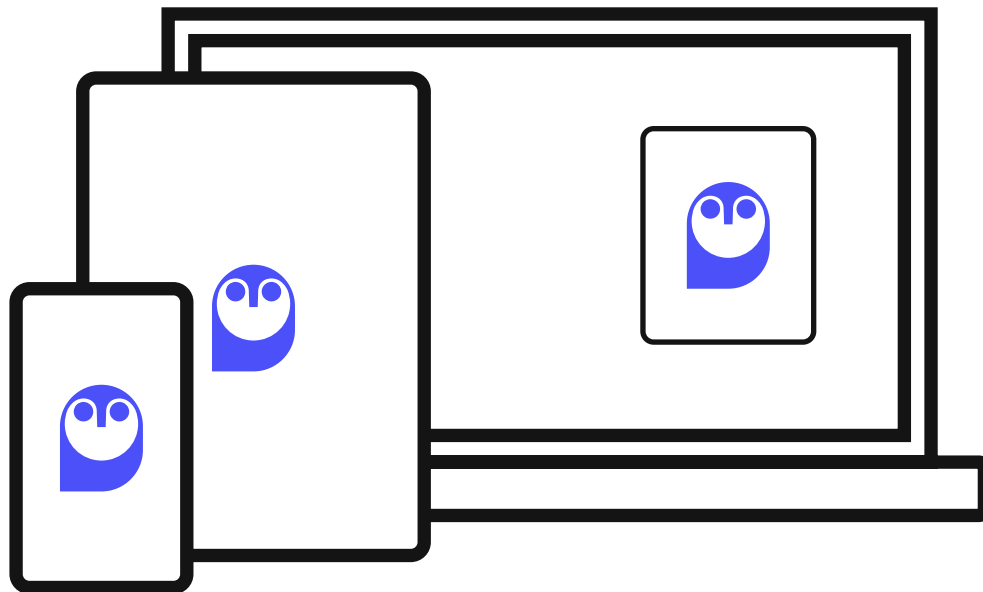

Visit [nest.owllabs.com](http://nest.owllabs.com) to manage all of your organization's Owl Labs devices

## MEETING OWL APP


Use the Meeting Owl App on your computer, phone, or tablet to control the camera, customize the view, adjust settings, and more.

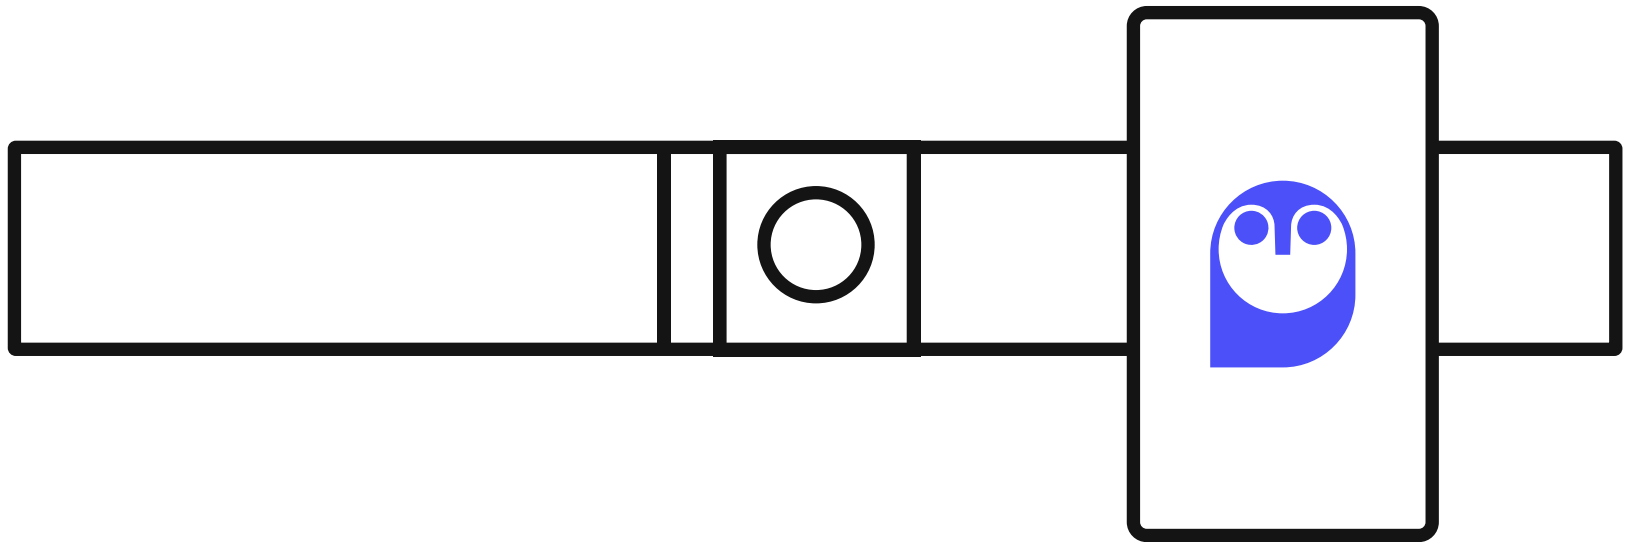


If the Owl Bar is mounted below the TV, use the Meeting Owl App to vertically flip the video in your Owl Bar's Default Settings.

## USING THE OWL BAR

Follow the steps below any time you'd like to use the Owl Bar with your computer.

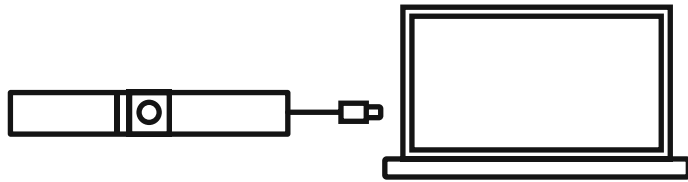


**1** Plug the Owl Bar's USB-C cable into your computer. Make sure the Owl Bar is plugged into power.

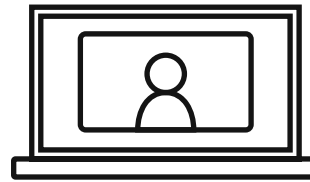

**2** Start a meeting in your video conferencing platform (Zoom, Microsoft Teams, Google Meet, etc.).




**3** Set your conferencing software's **video**, **microphone**, and **speaker settings** to the Owl Bar.

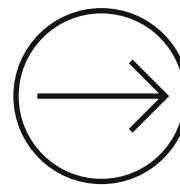

**4** The Owl Bar will automatically focus on active speakers in the room.



# Pairing with a Meeting Owl?

Make sure both devices are plugged into power. Select “Pair Devices” in the Meeting Owl App then follow the instructions to set up your devices.

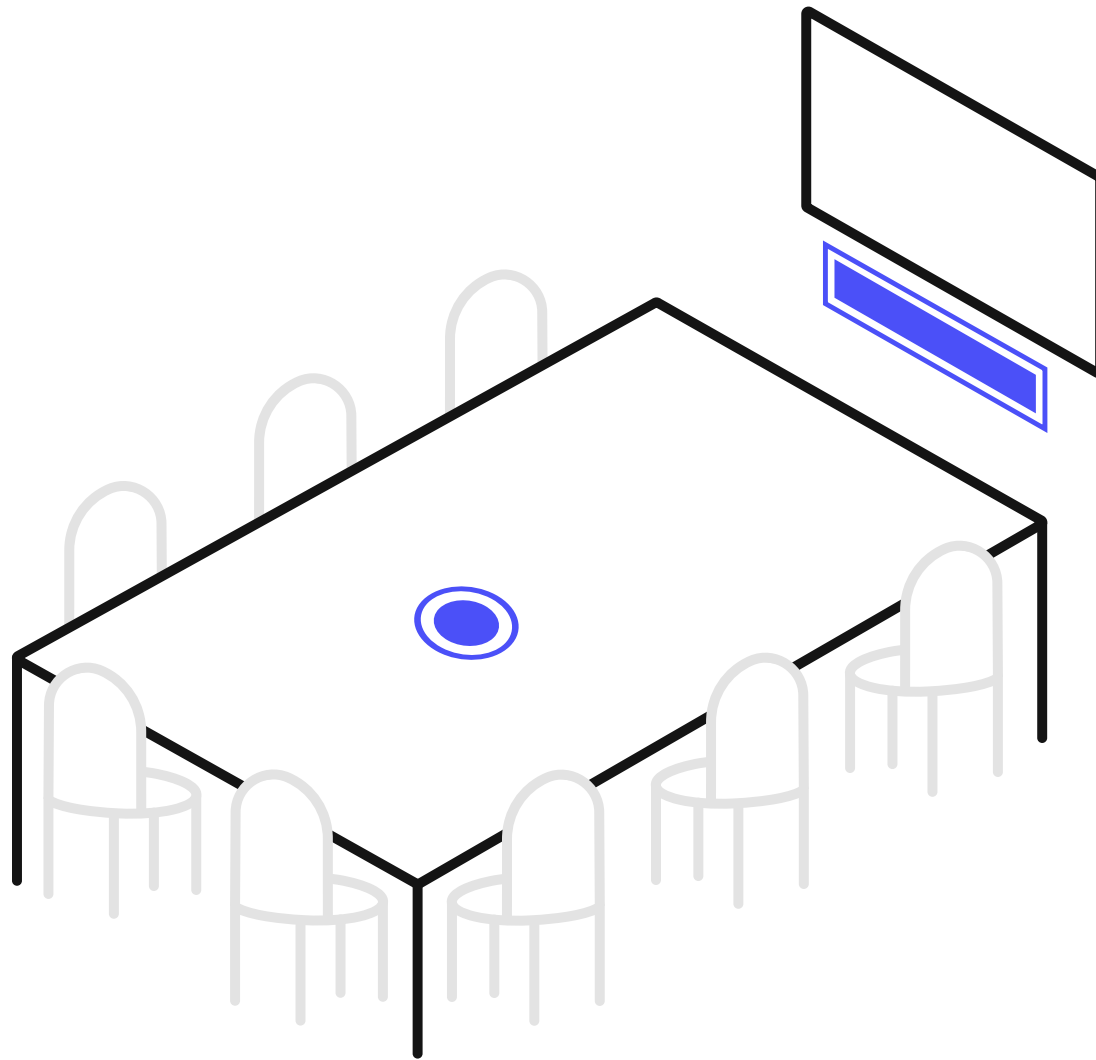

Visit [owllabs.com/using-oc](https://owllabs.com/using-oc) for info about placing and using paired devices.

## ABOUT THE OWL BAR

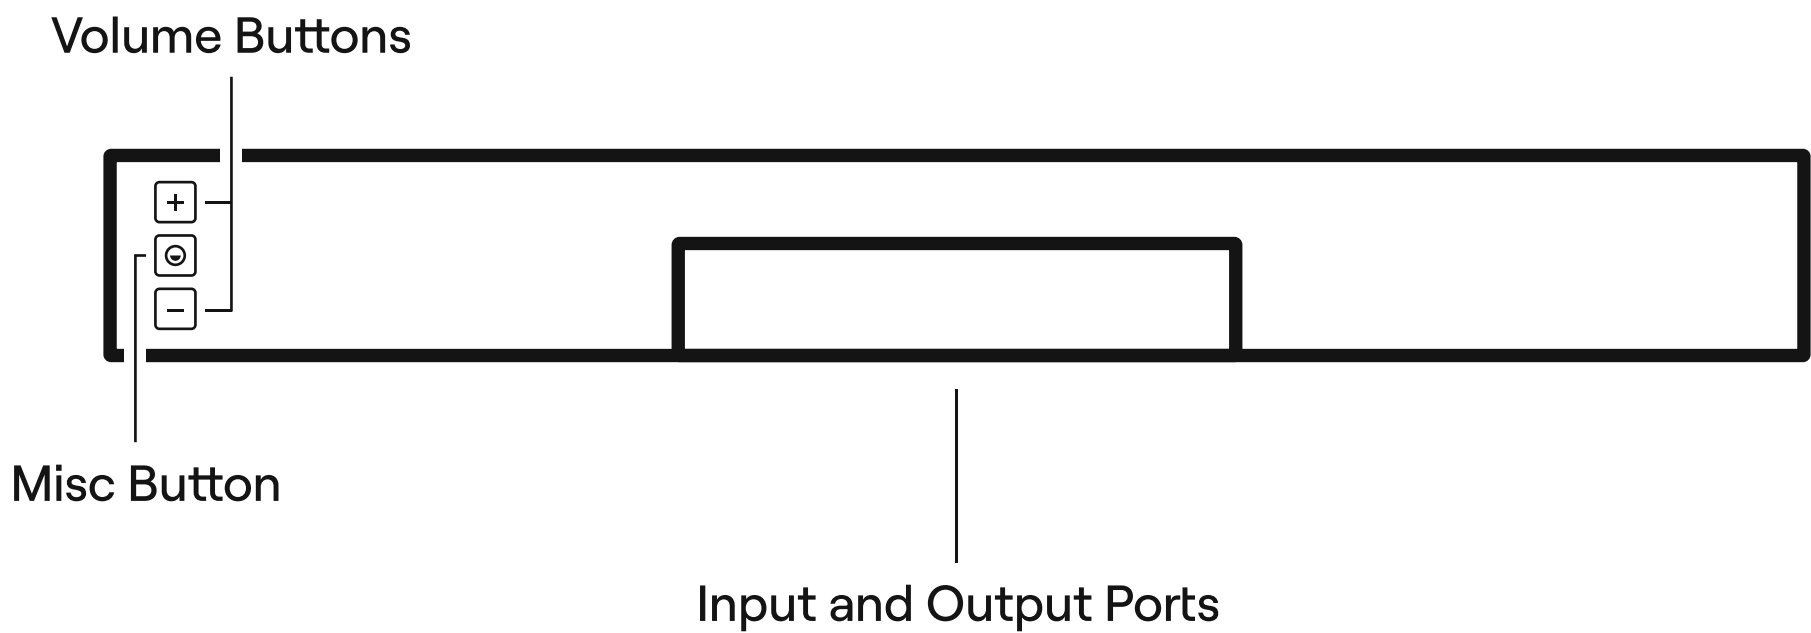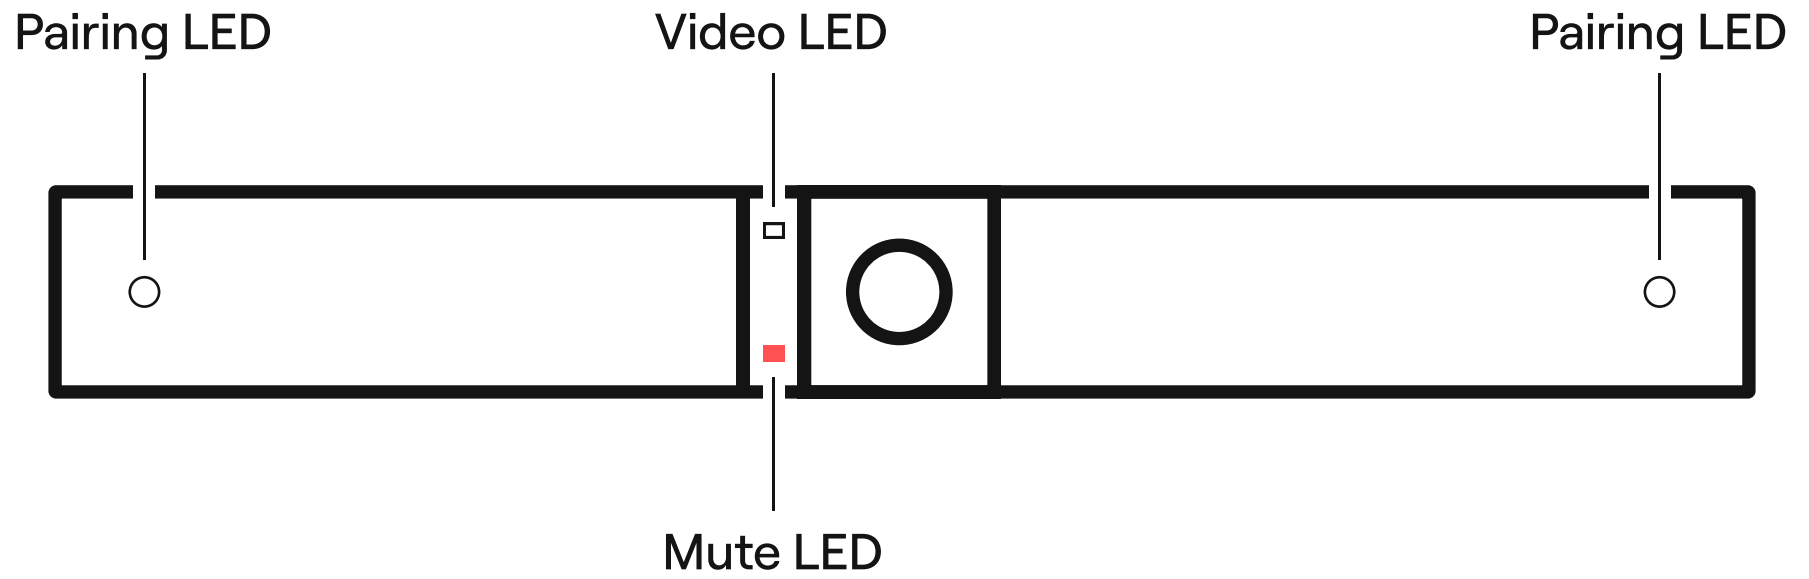

# Questions? We give a hoot.

[support@owllabs.com](mailto:support@owllabs.com)

1-857-214-4341 (US)

[www.owllabs.com/support](http://www.owllabs.com/support)

