

I、Main Functions

1. Multiple-language translation

Supports translation between Chinese and English/Japanese/Korean/French/Spanish/Russian, etc., covering more areas and populations

2. AIUI intelligent speech interaction

AIUI intelligent speech system supports human-machine interaction, which makes the machine more intelligent

3. Global roaming

Users can purchase destination country's data plan to connect the translator to the Internet and turn it into a WIFI hub at the same time

4. Image translation

Intelligent recognition to English words and sentences in images, which allows the translation machine to "read" rather than "listen"

5. Human translation

Accurate human translations

6. Spoken English study

Users can learn spoken English anytime and anywhere

7. SOS emergency contact

Users can contact their emergency contact person via our backend in emergencies

8. Offline translation

Offline translation system supports Chinese-English translation without network connection

II、Component Functions

① Foreign language input button

Press and hold the "ABC" button to input foreign language and Chinese translation will be played after releasing the button.

② Home button

Press the Home button to return to the home screen while press and hold the Home button to trigger intelligent speech interaction.


③ Chinese input button

Press and hold the "中文" button to input Chinese and foreign language translation will be played after releasing the button.

④ SIM card slot

Insert a SIM card into the card slot.

- ① Foreign language input button
- ② Home button
- ③ Chinese input button
- ④ SIM card slot

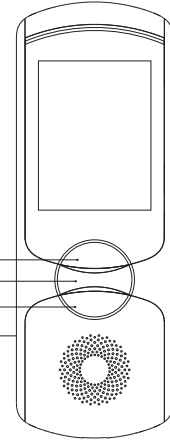

⑤ 3.5mm earphone jack

Supports earphones and other audio devices of 3.5mm jack.

⑥ Volume buttons

Press "+" to turn up the volume and press "-" to turn down the volume.


⑦ SOS button

press and hold the SOS button for over 3s to trigger emergency contact function and contact the emergency contact person.

⑧ Power button

On: press and hold the power button for over 3s to turn on the device
Off: press and hold the power button for over 3s to turn off the device

⑨ Charging port

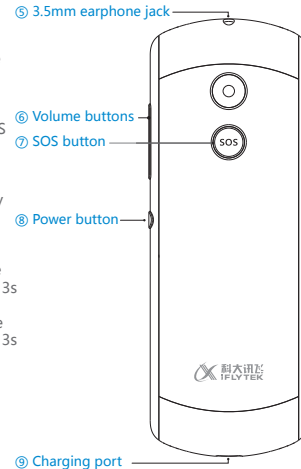

III、Operation Manual

1. Setup Guide

The device will enter setup guide in the first boot. Users can read User Agreement, switch system language, setup WIFI (skipped if the device has been connected to a 4G network) and complete device legitimacy verification and system authorization.

Note:

- 1) There are 3 screens on the desktop: the left screen is a translation history page; the middle screen is Home screen; and the right screen is APP screen.
- 2) Users can go to the next menu by clicking the menu and go back to the previous page by swiping the screen (from left to right).

2. Application introduction

2.1 Multiple-language translation: on the translation screen (the main screen), press and hold the Chinese input button to speak in Chinese and press and hold the foreign language input button to speak in foreign languages. Translation results will be broadcasted and the source text and the translated text will be displayed after releasing the button.
Switch language: enter the drop-down menu to select language.
Replay: click the blue speaker icon on translation screen to play the translated text.

Note:

- 1) Supports online translation between Chinese and English/Japanese/Korean/French/Spanish/Russian, etc.
- 2) Supports offline translation between Chinese and English.

2.2 AIUI intelligent interaction: press and hold the Home button on any page and speak your question or instruction, and then AIUI intelligent interaction page will appear automatically to display recognized text and returned results. Press and hold the Home button again to continue chat function.
AIUI intelligent interaction supports search of weather, stock, time,

encyclopedia and arithmetic (only Chinese instruction supported). For example, if you ask "how's the weather like in Hefei", the device will broadcast Hefei's weather, temperature and wind force scale. Furthermore, AIUI intelligent interaction also supports language switch, volume and brightness adjustment, turning on a function or opening an application through voice control. For example, if you ask "switch to Chinese-English translation", the device will jump to the translation screen and switch to CN-EN translation.
Exit AIUI intelligent interaction: press the Home button.

2.3 Image translation: enter image translation app, take a photo of the text, crop the image and click "translate", then translation results will be displayed.

Note: Please make sure that the photo is clear.

- 2.4 Spoken English study: enter Spoken English study through 1)click Spoken English study app or 2) press and hold the Home button and speak "Spoken English study".

Enter "Situational dialogue" and select the sentences you'd like to learn. Then the device will broadcast the English sentence automatically. Press and hold the mic icon on the screen to read the sentence and the device will record your reading and give you a mark on this sentence. You can check the details of the mark and play the recording. You can also record your reading for multiple times.

2.5 Human translation: Enter human translation app. Create an account and log in. Then top up your account. Choose language and click the call button, then you will be connected with our human translators.

2.6 SOS emergency contact: Enter settings page of SOS emergency contact function and set up your emergency contact person. Press and hold the SOS button on the back for over 3s to trigger SOS and contact your emergency contact person via the backend.

End the call: press the SOS button again to end the call.

2.7 Global roaming: Enter Global roaming app. In "Data store", you can choose corresponding country and purchase packages according to your requirements. WeChat and Alipay are supported as payment methods. You can check the details of your package in "My package". When you arrive at the destination, start using corresponding package and then the device will be connected to the Internet automatically. The duration of use starts from the first successful network connection.

Note:

- 1) The package can be refunded within 30 days from the day of purchase if it has not been used.
- 2) You should first use your package within 30 days from the day of purchase; otherwise the package will expire and cannot be refunded.
- 3) Each device can collect 100M data for free (valid for 24h). You can choose corresponding country.

IV、System setting

1. Airplane mode

It can be used to disconnect the translator from Internet in a quick way and it is off by default.

2. WLAN

WLAN is off by default. After WLAN is turned on, select the WIFI in the list and enter the password. The device can access the Internet when it shows that it is connected. By clicking "i" on the right of the WIFI that the device is connected to, you can check the information of the WIFI and disconnect the device.

3. Bluetooth

It is off by default. The device can discover nearby Bluetooth devices and choose devices to pair with when Bluetooth is on.

4. Operator

look up and set up operator network, e.g. turn on/off data network, edit APN name.

5. Hotspot

The translator can share its data network with other mobile devices in the form of WIFI hotspot.

6. Sounds

include speech rate (moderate by default) and volume (50% by default).

7. Screen Setting

include locking time, brightness and screen-lock password.

8. Time and Language

include network time synchronization (on by default; user-defined system time is enabled after it is off), time zone and system language.

9. About

displays information about the device, such as the device's name, serial no., version of the hardware and software, storage space, legal information and factory data reset, etc.

V、Safety, Operation and Support

Important Safety Information

[Warning]

By not following these safety instructions, it may cause fire, electric shocks, and injuries or may damage the translation machine or other properties. Please read all the following safety instructions before using the translation machine.

Battery

The battery of the translation machine can only be changed by iFLYTEK or the authorized vendors by iFLYTEK. Do not change the battery privately.

Operation

This product is made of metal and plastic. There are sensitive electronic components inside. Throwing, burning, impaling and squeezing of the machine, or contacting with liquid may cause damage to the machine.

Maintenance

Do not disassemble the translation machine or try to repair it privately as it may cause damages to the machine or personal injuries. If damage, breakdown or contacting with liquid happens, please contact the after-sales service department.

Distraction

Under some circumstances, the translation machine may distract you, which may cause injuries (For example, do not use the translation machine while driving). Please follow the rules of banning or restrictions of mobile phones and earphones usage.

Using Environment

Avoid using the translation machine in too high or too low

temperature. Avoid long time exposure to strong sunlight or damp environment. Do not sleep on the device or power adapter when connected to power, and do not put it under a blanket, a pillow or your body. While using or charging the translation machine, please use the machine and the power adapter in a well-ventilated area.

Volume

Do not use high volume for a long time to prevent hearing loss.

Charging

To charge the translation machine, please use the attached cable and power adapter or standard power adapter that meets the national 3c certificate. Please contact the power adapter and cable manufacturer to check whether your power adapter meets these standards.

Important Processing Information Cleaning

If the translation machine comes into contact with any contaminants that may cause stains, like dirt, ink, cosmetics, detergent, please clean it immediately. Before you clean it, finish the following steps first:

- Unplug all cables and turn off the translation machine (press the turn off button for over 2 seconds).
- Use soft wiping cloth that is not fluffy
- Avoid dampness
- Do not use cleansers or compressed air.

The front and back cover plate of the translation machine are made of plastic and are coated with oleophobic layer that is fingerprint proof. Under normal usage, this coating may be abraded over time. Cleansers and corrosive materials may further

weaken its function and may scratch the plastic.

When using the plug, port or button, do not insert the plug into the port forcibly or press the button too hard, because it may cause damage to the plug, port or button. This kind of damage is not included in the repair guarantees. If the plug cannot be easily inserted to the port, it means that they are not matched. Please check if there is a barrier and make sure the plug is matched with the port, also the direction of the plug corresponds to the direction of the port.

It is a normal phenomenon that the USB will change color under normal usage. Dust, debris and exposure to moisture may also cause color change. If the data cable or the USB generate heat while using, or the translation machine cannot be charged or synchronized, please disconnect them from the computer or the power adapter, and use soft dry cloth that is not fluffy to clean the USB. Do not use liquid or cleansers to clean it.

Operation Temperature

The translation machine works better in environment with temperature between -10 degree centigrade and 55 degree centigrade. If the working temperature is out of this range, the translation machine may be damaged, and it will shorten the battery life. Avoid putting the translation machine in environment with high temperature and big humidity differences. It is normal that the translation machine will generate heat while using it and charging the battery.

[Attention]

If the temperature is too high, you may not be able to use the translation machine. If the translation machine cannot adjust its inner temperature, it will turn into deep sleep mode until it is cooled. Move the translation machine to a cooler place and avoid direct sunlight, wait for a few minutes and then try to

use it.

For more information, please visit <http://fanyi.xunfei.cn>

VI、After-Sales Service

Website: www.iFLYTEK.com

Customer service email: itrans@iflytek.com

Customer service telephone: 4000-199-199

Manufacturer: This product is produced under the authorization of iFLYTEK Co., Ltd

Address: National Intelligent Voice High-tech Industrialization

Base. No. 666, Wangjiang West Road, Hefei, Anhui, China.

VII、FCC Compliance

This phone complies with section 15 of FCC Regulations. Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

- Consult the dealer or an experienced radio/TV technician for help.
This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. End user must follow the specific operating instructions for satisfying RF exposure compliance. This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.

The portable device is designed to meet the requirements for exposure to radio waves established by the Federal Communications Commission (USA). These requirements set a SAR limit of 1.6 W/kg averaged over one gram of tissue. The highest SAR value reported under this standard during product certification for use

when properly worn on the body.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Specific Absorption Rate(SAR)information

This wireless device meets the government's requirements for exposure to radio waves. The guidelines are based on standards that were developed by independent scientific organizations through periodic and thorough evaluation of scientific studies.

The standards include a substantial safety margin designed to assure the safety of all persons regardless of age or health.

FCC and IC RF Exposure Information and Statement the SAR limit is 1.6 W/kg averaged over one gram of tissue. Device types:

Portable device has also been tested against this SAR limit. The highest SAR value reported under this standard during product certification for use is 1.365 W/kg. The use of belt clips, holsters and similar accessories should not contain metallic components in its assembly. The use of accessories that do not satisfy these requirements may not comply with FCC and IC RF exposure requirements, and should be avoided.

iFLYTEK

Instruction Manual
of iFLYTEK Translator 2.0

