

eighteen♀

COMEX

Not just an ordinary vibrator.

Introduction

COME-X is an adult toy intended for use by women. It can be operated manually or by the accompanying smartphone application Come Together (Android or iOS). The internal battery is charged via Qi compatible wireless charger base. COME-X is completely sealed and dishwasher safe for better cleaning. Usage of water based lubricants is recommended.


Overview

The COME-X vibrator has three vibration motors:

M1: Vibration motor for G-Spot and vaginal stimulation

M2: Large vibration motor for overall stimulation

M3: Vibration motor for clitoral stimulation

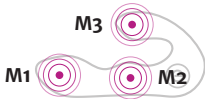



One button for three types of operation:

Short press: Pressing the button and releasing it within one second.

Long press: Pressing and holding the button for longer than one second and then releasing it.

Double press: Shortly pressing and releasing the button in two consecutive orders within one second.

Operation modes:

Standby: *The device is turned off. This is the default state. There is no motor action and the device is not discoverable via Bluetooth. By short pressing the button, the device goes into Bluetooth discovery mode.*


Bluetooth discovery: *When the device goes into Bluetooth discovery mode, the M2 motor will buzz twice. The user has 60 seconds to connect to the device, before it goes back to Standby mode. Pressing and holding the smart button for several seconds will set your device to manual mode.*

Smart operation mode is activated when your smartphone is paired via Bluetooth to your COME-X. In this mode, you can change the vibration intensity of each motor or play haptic sequences.

Manual mode mode is activated with a short press (Bluetooth mode) followed by a long button press. When activated, your COME-X starts to vibrate. You can switch between pre-set vibration modes/patterns with a short press of the smart button.

Getting started

- Charge for 3 hours before first use.
- Download the Come together app.
- Wash your device with soap and water.
- Lubricate vaginal/G-spot stimulator with a water-based lubricant.

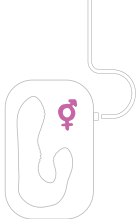

To turn on your COME-X, shortly press the smart button. The device will buzz twice to indicate Bluetooth discovery mode. At this point, start the Come Together application on your smartphone and follow the instructions.

For manual operation, press and hold the smart button for more than one second. The device goes into manual operation mode. By pressing the smart button you can switch between vibration or haptic effects. Turn off your COME-X by long pressing the smart button.

Vibration modes

- 1. Basic vibration – In this mode user choose constant vibration for each vibration motor.*
- 2. Haptic vibration – User can choose between 122 haptic effects and combine them into sequences.*

Charging

Wash and fully dry your COME-X before recharging it. Plug the charging cable into any USB port or USB/AC power adapter (included with device). When a computer USB port is used, your device will not charge if your computer goes into hibernation mode. When your device is correctly placed in the charging base, the charging base will glow with pulsating blue light to indicate that the device is charging. A full charge can take up to 3 hours, depending on the charge remaining in the device.



The device operates up to 4 hours on a full charge. Modes with higher vibration power will drain the battery faster. There is no need to drain the battery before recharging. If you store your device off the charging base, the charge is maintained for several months, but will continually diminish over time. For best performance and long battery life, recharge before vibrations weaken noticeably. If you use your device regularly, it is recommended to charge your device for one hour before every use. Avoid prolonged charging (more than 3 hours), as generated heat can shorten battery lifespan.

Cleaning and storage

- *Clean with gentle soap and water before and after every use.*
- *Store on the charging base disconnected from the main power supply.*
- *Keep away from extreme heat or cold.*

DO NOT!

Do not overextend clitoral stimulation, or twist device into an unnatural shape.

Do not use with silicone-based lubricants as they can damage the product.

Do not clean with products that contain alcohol, petrol or acetone.

Do not boil, bake, microwave or put the Smart sex toy or the charging base in a dishwasher.

Do not store in extreme temperatures.

Do not use a USB hub that is also charging other devices.

Do not use charger near water.

Do not leave the charger plugged in and unattended.

Do not overcharge.

Warning: Contains Lithium battery. Risk of explosion!

Product specification

Battery: *Lithium Ion*

Run time: *Up to 4 hours on full charge*

Charging: *USB DC / 5V / 1A*

Materials: *Medical-grade silicone, PA/EA*

Charging time: *Maximum 3 hours*

Operating temperature: *maximum 98,6°F (37°C)*

One year limited warranty

Merchandise may not be returned unless defective. This product is covered by Product Warranty for ONE (1) YEAR from the date of delivery. The warranty covers product replacement for manufacturing defects only.


Model name: Come-X

Model #: HPT v3.0.0/01

FCC ID: 2A034-HPT030001

IC: 23943-HPT030001

Charging base

5V  1000mA

FCC ID: 2A034-CHG01

IC: 23943-CHG01

MADE IN EU



The Federal Communication Commission (FCC) warns the users that changes or modifications to the unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

RF Exposure statement: This device complies with the RF exposure requirements for portable and mobile devices. However, the device shall be used in such a manner that the potential for human contact during normal operation is minimized.

*This device complies with Part 15 of the FCC Rules.
Operation is subject to the following two conditions:*

(1) this device may not cause harmful interference, and

*(2) this device must accept any interference received,
including interference that may cause undesired
operation.*

This device complies with Industry Canada's license-exempt RSSs. Operation is subject to the following two conditions:

- (1) this device may not cause harmful interference, and*
- (2) this device must accept any interference received, including interference that may cause undesired operation of the device.*

Le présent appareil est conforme aux CNR d'Industrie Canada applicables aux appareils radio exempts de licence. L'exploitation est autorisée aux deux conditions suivantes:

(1) l'appareil ne doit pas produire de brouillage;

(2) l'utilisateur de l'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.

CUSTOMER SUPPORT
support@eighteenplus.net