

OUTFORM™

iDISPLAY 15.6" Display



User Manual

Table of Contents

About This Guide	2
Introducing the iDISPLAY 15.6" GEN 5	2
Important Notices	3
Copyright Information	3
Safety and Warning Information	4
Package Contents	5
Quick Start User Guide	7
Setting up the Tablet Hardware	7
Playing Videos and Displaying Images	7
Supported File Formats	8
Accessing the Pulse Player Settings	8
Pulse Player Settings	9
Using the Android Operating System	13
Configuring the Android Operating System Settings	14
Using Pulse Management	15
Troubleshooting	16

About This Guide

Thank you for purchasing an Outform product. We recommend reading this user guide in its entirety in order to maximize the performance and service life of this product. This product is intended for commercial use and should be installed by authorized personnel only.

Introducing the iDISPLAY 15.6" GEN 5

The iDISPLAY 15.6" GEN 5 is interactive digital display designed to be used in commercial environments, and includes the following features:

- Quad core processor
- 1920 x 1080 full HD resolution
- Android 5.1 operating system
- 10-point touch capacitive screen
- 802.11b/g/n or 802.11b/g/n/a/c WiFi
- Bluetooth
- VESA wall mounting option
- 100M/1000M RJ45 Ethernet port with Power over Ethernet (PoE 15.6" is optional)
- USB ports
- 2 speakers
- Headphone jack

If required, please ask for detailed specifications.

Important Notices

Copyright Information

Copyright © 2021 Outform. All rights reserved.

All intellectual property rights in this publication are owned by Outform and protected by applicable copyright laws and international treaty provisions. Outform retains all rights not expressly granted. No part of this publication may be reproduced in any form whatsoever or used to make any derivative work without prior written approval by Outform.

Outform reserves the right to revise this publication, and/or make improvements or changes in the product(s) and/or the program(s) described in this documentation at any time without prior notice. The information in this document is provided in good faith, but without any representation or warranty whatsoever, whether it is accurate, or complete or otherwise, and on express understanding that Outform shall have no liability whatsoever to other parties in any way arising from or relating to the information or its use.

All other trademarks are the property of their respective owners. Other company and brand products and service names are trademarks or registered trademarks of their respective holders.

This device complies with CE and FCC regulations.



Important Notices

Safety and Warning Information

NOTE

- CE This mark is applied to indicate that the equipment conforms to European safety and electro-magnetic compatibility standards.

WARNING!

- ⚠ Main Supply: This equipment is designed to operate from a 100-240 Volt, 50/60Hz AC power supply. The use of other power sources may damage this equipment. Check that the voltage marked on the rating plate located at the rear of the power adaptor states 100-240V. The manufacturer will NOT accept responsibility or damage or injury caused by connecting to the wrong voltage.

WARNING!

- ⚠ Main Adaptor: The supplied power adaptor is compatible with a standard main socket. If the power adaptor or lead gets damaged, it must be replaced by a qualified service agent with an approved adaptor of the same type and rating.

WARNING!

- ⚠ Dangerous voltage constituting a risk of electric shock is present inside this equipment.

WARNINGS!

- ⚠ The main plug shall be the main disconnect device and shall remain operable at all times.

Do not push objects into holes and ventilation slots.

Do not expose this product to moisture or place any objects filled with liquids on or near the product.

Do not place a naked flame source, such as lighted candles, on or near this product.

Do not store or operate the device in environments where the temperature is above 50 degrees celsius or below -10 degrees celsius.

Do not intentionally hit the device or place heavy or sharp objects on the device.

Only use accessories specified by the manufacturer.

Keep the device away from benzene, diluents, and other chemicals.

Do not attempt to repair this product yourself. Always use a qualified service agent to perform adjustments or repairs.

Package Contents

The package contains the following items:




15.6" Shown Display Tablet



Power Adapter




Power Cable
(US, UK, or EU)

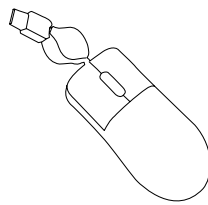

USB Mini Mouse
(Included with
advertising displays only)

15.6" Display Exterior Components

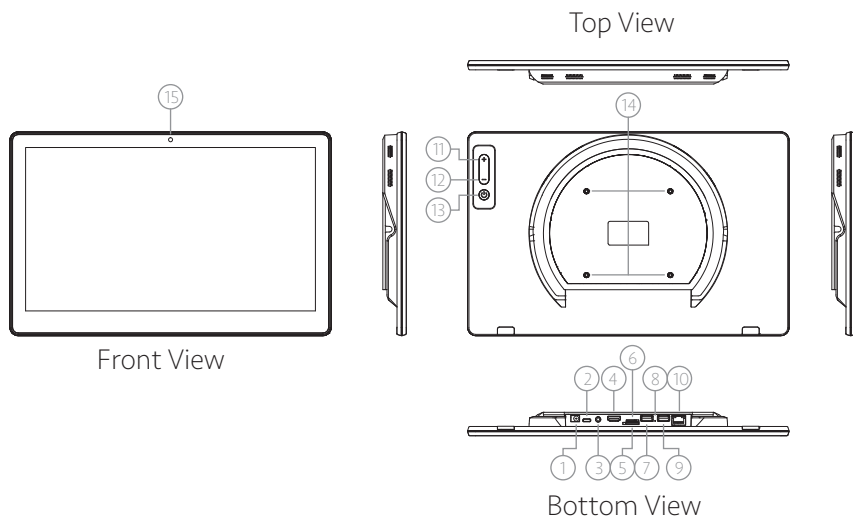

No.	Description
1	DC 12V Port 5.5x2.1 mm
2	Type-C OTG
3	3.5 mm Audio Port
4	HDMI Output
5	TF-Card Slot
6	Sim Card Slot
7	USB 2.0 OTG Port
8	Reset Key
9	USB 2.0 OTG Port
10	Ethernet RJ45 Port
11	Volume Button V+
12	Volume Button V-
13	Power Button
14	Vesa Hole 6x4xM4
15	Camera

Quick Start User Guide

This section describes how to set up and use the iDISPLAY tablet for the first time. The tablet runs OUTFORM's Pulse Player software by default, which runs on an Android operating system installed in the player to play the desired content.

Setting up the Tablet Hardware

Connect the following components to the back side ports of the iDISPLAY tablet:

- The power adapter, plugged in to a nearby plug outlet.
- Alternately, power may be supplied through the RJ45 outlet by plugging in an RJ45 cable connected to a POE capable source. (15.6" tablet only).

The tablet automatically powers on and initiates the Pulse Player software, which in most cases plays a sample video by default.

Playing Videos and Displaying Images

Copy video and image files to the tablet using a USB thumb drive as follows:

1. Insert an empty USB drive into a computer and create a folder titled "0" (the number zero) at the topmost (root) directory of the drive. Ensure that no other content is on the drive.
2. Copy the desired video and image files to be played into the "0" folder.
3. Eject the drive from the computer and insert it into a USB port on the back side of the tablet.
4. A password prompt appears on the display. Enter the configured password using the on-screen keyboard. By default this password is "11223344" without the quotation marks, and can be modified later.
5. Upon successful entry of the password, select one of the two options that display, either to delete and replace the existing content on the tablet or to simply add additional content.

NOTE: If you choose to keep the existing content, the new content from the USB drive is copied alongside the existing content, and no files are deleted. However, if a file on the drive has the same name as a file already on the tablet, the file on the tablet will be overwritten.

6. After a message displays indicating that the content has been copied, the USB drive can be removed. The new content plays automatically.

NOTE: When auto-copying files from a Linux or MAC OS-based computer, hidden metadata files, preceded by a period ".", may also get copied into the "0" folder on the USB drive. When Pulse Player attempts to play or display these files, a black screen is shown momentarily. Use the Explorer app mentioned in the Android Operating System Settings section below to manually delete these metadata files from the "0" folder on the device.

Quick Start User Guide

Supported File Formats


The tablet supports the following file formats:

- Standard Android applications (APK files) supported by Android 5.1 and more recent versions
- Video formats: 3gp / mp4 / avi / mkv / flv / mov / rm / rmvb
- Image formats: jpg / jpeg / png / bmp

Accessing the Pulse Player Settings

When content is being played on the display, use a finger to draw a Z shape on the screen. Start at the top left of the screen and move in the direction shown below.


Note: If the tablet is an advertising display with no touch screen, plug the provided mouse into a usb port on the tablet. Click and drag the mouse to draw the Z-shape and interact with the tablet menus.

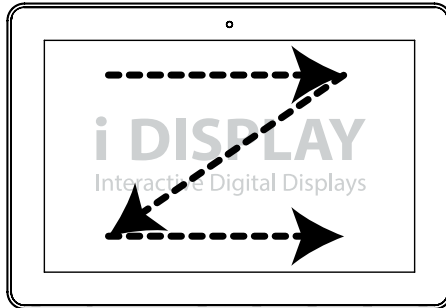

Then enter the configured or default password ("11223344" without the quotation marks) when prompted to open the Pulse Player settings interface.

Modify the "Change Password" Pulse Player software setting to configure the password for this function.

Pulse Player Settings

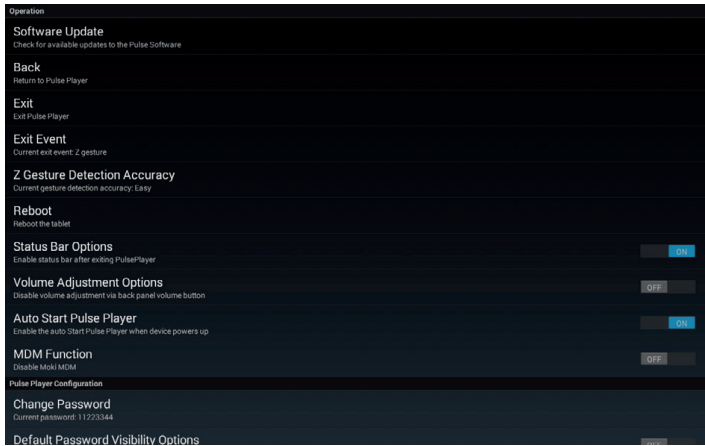

The following table describes the Pulse Player settings. For more information on how to use the underlying Android operating system, refer to the following section.

Setting	Description
Software Update	Check for available Pulse Player software updates. This requires an Internet connection.
Back	Return to playing the configured content.
Exit	Exit Pulse Player and open the home screen of the base Android operating system.
Exit Event	Configure how the user stops content playback to open the Pulse Player settings interface. Settings include the following: <ul style="list-style-type: none"> Z gesture: Draw a large Z shape on the screen by sliding a finger across the screen, starting at the top left of the screen. Tapping the screen 5 times: Tap anywhere on the screen 5 times. Z gesture and tapping the screen 5 times: Either draw a Z shape or tap 5 times as described above.
Z Gesture Detection Accuracy	Choose “Easy”, “Medium”, or “Hard” to configure how accurately the user must draw the Z shape to perform the Exit Event. “Easy” indicates a low level of drawing accuracy, “Medium” a fair amount of accuracy, and “Hard” a stricter level of accuracy, all with regards to how straight the lines of the Z shape are drawn and whether the drawing is oriented correctly.

Pulse Player Settings

Setting	Description
Reboot	Reboot the tablet.
Status Bar Option	Show and hide the Android operating system quick launch status and tool bar that appears at the bottom of the screen after exiting Pulse Player. "ON" shows the status bar, while "OFF" hides it.
Volume Adjustment Option	Enable and disable volume adjustment buttons on the exterior of the Pulse Player device. "ON" means the buttons are enabled, while "OFF" indicates that the buttons are disabled. Note that this option only works for iDISPLAY tablets, and does not affect the use of the media player set top box.
Auto Start Pulse Player	Enable and disable running Pulse Player automatically when the device powers on. "ON" indicates to automatically run Pulse Player, whereas "OFF" does not, instead configuring the device to load the Android operating system home page when the system powers on.
MDM Function	Enable and disable the Pulse Management software to remote control iDISPLAY devices.
Change Password	Select this setting to modify the configured password used to perform administrative tasks related to Pulse Player.
Default Password Visibility Option	Show ("ON") or hide ("OFF") the configured default password in the password entry field.
Password Validation Feature Option	Enable ("ON") or disable ("OFF") option to password restrict administrative tasks related to Pulse Player.
Image Interval Time	Adjust the length of time (in seconds) an image or picture is displayed before displaying the next image or video. The configured time value can be within the range of 2 - 600 seconds.
Video Ratio Option	"ON" indicates keeping the original video and image size ratio when being played or displayed, whereas "OFF" indicates resizing content to fit the screen.
Player Orientation Option	"ON" enables automatic screen orientation recognition based on how the device is positioned, enabling the portrait display orientation. "OFF" keeps the screen oriented in the default landscape display orientation. Note that this option only works for iDISPLAY tablets, and does not affect the use of the media player set-top box.


Pulse Player Settings

Setting	Description
Log Option	"ON" enables recording Pulse Player log messages to a log file stored in the internal device memory. If this setting is enabled, the log file "PulsePlayer_Log.txt" is created and stored in the top-most directory of the device's internal memory, which can be accessed through the "Explorer" Android operating system app.
Forward To Option	Enable ("ON") and disable ("OFF") a "forward event" initiation, such as opening a configured webpage (caused by the user tapping the screen when content is playing). When enabled, specific settings related to the event display immediately below this setting.
Forward Target(TP Folder/URL)	Shown when the "Forward To Options" setting is enabled. Options include either specifying a URL to which the user is forwarded, opening the Pulse Player web browser, which also enables the "Set URL" setting (see this setting's description below), or "TP Folder", which causes an event configured by content, such as a web page file, stored in the "tp" folder to be opened or played. TP folder content must be loaded into the device's top-level internal memory directory for the "TP Folder" forward target setting to work.
Set URL	Shown when the "Forward To Options" setting is enabled and configurable when the "Forward Target(TP Folder/URL)" setting is set to "URL". Select this setting to specify a forward event URL. Do not include "http://" at the beginning of the URL.
Inactivity Time-out	The length of time (in seconds) it takes for a password input field or forward event webpage to time-out. The value specified must be a value between 15 and 600 seconds. In the case of a password input field, once the inactivity time is reached, the field disappears and the content continues playing. In the case of a URL forward event, this amount of time specifies when a warning dialog pops up prompting the user to stay on the page or return to the initially playing content.
Warning Dialog Expire Time	The length of time (in seconds) from which the forward event webpage inactivity time-out warning dialog appears until Pulse Player returns to playing the initially configured video or image content. The value specified must be a value between 3 and 600 seconds.

Pulse Player Settings

Setting	Description
Hardware Acceleration Option	Enable ("ON") or disable ("OFF") hardware acceleration for better video playback performance, if needed.
Progress Box Option	Display ("ON") or hide ("OFF") an animated loading progress icon when loading a forward event URL.
Cache Clear Option	When enabled the forward to browser Cache and cookies are cleared on exit from the Pulse Player. When disabled the Web browser cache and cookies are kept.
Reboot Scheduler	Configure a daily reboot time to ensure Pulse Player and the underlying Android operating system memory is regularly cleared and refreshed so as to maintain good playback performance for extended periods of time. OUTFORM recommends scheduling a daily reboot time when no customers are expected to use the device.
Reboot On Error	Turn this setting on to automatically reboot the device if Pulse Player detects an error.

Using the Android Operating System

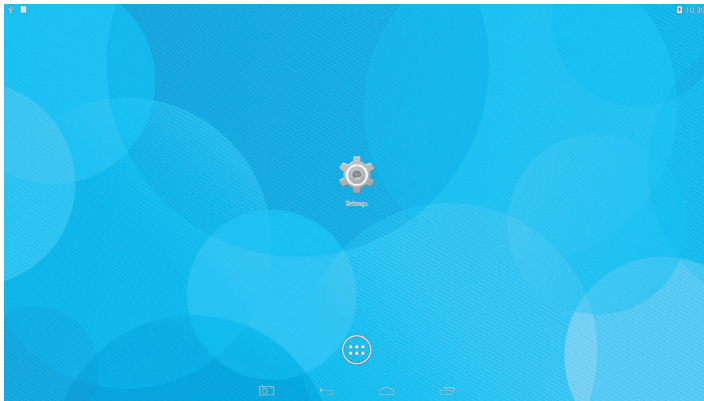

This section describes parts of the underlying Android operating system that are relevant to using Pulse Player on OUTFORM devices. More important interface elements are described below:

Applications Menu

On the bottom or side of the Android home screen, which by default has a light blue background with scattered lighter colored circles, the applications menu can be accessed by tapping on the white circular icon with six white smaller squares. The applications menu contains commonly used Android applications and tools.

The following three applications most relevant to using your iDISPLAY device are described below:

PulsePlayer

Opens and runs the Pulse Player software to play interactive content.

Explorer


A file and folder system management application. Use Explorer to manually manage files to be played by Pulse Player (located in the "O" and "TP" folders, if present), as well as to access other system-specific files such as the Pulse Player log file.

Settings

Configure the Android operating system settings, such as to turn on and connect to a wireless network. The following section describes these settings more in-depth.

Using the Android Operating System

Configuring the Android Operating System Settings

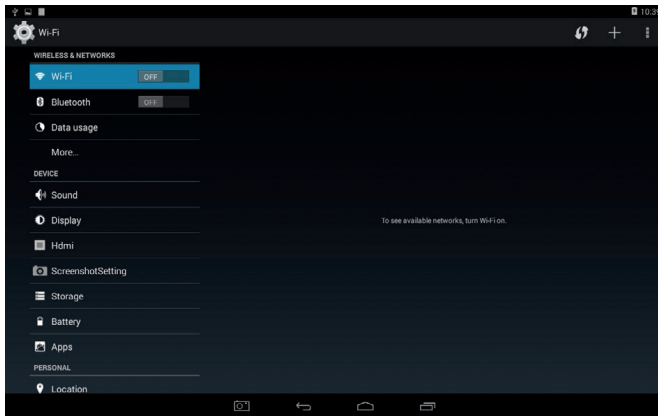

Tap on the “Settings” icon to configure the following three relevant Android system settings:

Connecting to a Wireless Network

The preselected item on the left hand settings menu is “Wi-Fi”. To enable wireless connections, drag the “Wi-Fi” menu item slider to the right to display “ON”. After a few seconds available wireless networks appear on the right side of the screen. Select a network to configure and connect to it.

Connecting to a Wired Network

A wired connection may be made using a USB to Ethernet adapter. Select “More...” on the Android settings left hand menu. On the menu to the right, select “Ethernet” and ensure “Use Ethernet” is checked. Immediately below the “Use Ethernet” option, open “Static IP Settings” to configure your network’s wired connection settings.

Enable USB Debugging

This setting allows developers to debug their applications. Select “Developer options” on the left hand menu and then ensure “USB debugging” on the right is checked. Under the “Device” section on the left side menu, “USB” and then “Connect to PC” also needs to be enabled.

Using the Android Operating System

Using Pulse Management

Pulse Management is an additional subscription-based feature that can be used to remotely control iDISPLAY devices. When connecting to the Internet, the Pulse Management app automatically connects to the service's servers, as is indicated by the "Registering Device" message that briefly appears. If connecting to the Internet for the first time, a prompt appears requesting device administrator activation. As Pulse Management is intended to run in the background regardless of whether your organization has registered for a Pulse Management account, select "Activate".

Note that the Pulse Management app icon is present in the Android app menu, but serves no function other than to indicate that the app has been installed. Tapping on the app icon simply runs the software in the background without displaying any visual messages or confirmations.

The service can be enabled and disabled by adjusting the "MDM Function" setting in the Pulse Player settings menu.

Contact OUTFORM for help in setting up the Pulse Management service.

Troubleshooting

The following section lists common questions and troubleshooting scenarios.

When the Pulse Player forward to URL option is enabled, why does the configured website not appear when I tap the screen?

Two possible reasons are explained below:

- The device is not connected to the Internet. Refer to “Configuring the Android Operating System Settings” above.
- Ensure the configured URL is correct in the Pulse Player settings. Also, do not include “http://” at the beginning of the URL.

When I insert a USB drive into my iDISPLAY device, the system does not automatically prompt me to load my content onto the device.

Check the following:

- Ensure Pulse Player is running.
- Unplug and reinsert the USB drive to ensure the drive is connected properly.
- Ensure content to be played on the device is stored in a folder named “0” (the number zero), and that this folder is located at the top-most (root) directory of the USB drive.
- Use your computer to check if the USB drive contains an error. View your computer’s operating system documentation to troubleshoot any problems related to the USB drive.
- The USB drive was inserted into the “USB OTG (On-The-Go)” port of the iDISPLAY device with the Android system “Developer options” setting “USB debugging” enabled. The “USB OTG” port can also be used for developer debugging purposes. If the “USB debugging” setting is enabled, only the “USB” port can be used to load content onto the device. To use the “USB OTG” port, disable “USB debugging”.

What is the default Pulse Player password?

The default password is “11223344” without the quotation marks.

Why does my device reboot multiple times when I auto-copy data from my USB drive?

This happens when an unsupported/corrupt file is copied to the device. Pulse Player has a built-in auto recovery program that reboots the device a minimum of 5 times to protect the software configuration. After rebooting a number of times, a prompt appears requesting to delete the currently loaded content. Select “Yes” and enter your password. The content stored in the “0” folder on the device is deleted. Double-check the files on your computer to fix any problems related to the files, recopy the desired content to the USB drive from your computer, and then perform the auto-copy procedure a second time.

FCC Statement

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help


This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 20cm between the radiator & your body.

CE NB Statement

Herby, OUTFORM SCIENCE AND TECHNOLOGY (SHENZHEN) CO., LTD declares that this iDISPLAY 15.6" Display, UIT515B-B02 is in compliance with the essential requirements and other relevant provisions of Directive 2014/53/EU. In accordance with Article 10(2) and Article 10(10), this product allowed to be used in all EU member states.

Use the iDISPLAY 15.6" Display in the environment with the temperature between 0°C and 40°C,

Use careful with the earphone maybe possible excessive sound pressure from earphones and headphones can cause hearing loss. 

Risk of explosion if battery is replaced by an incorrect type. Dispose of used batteries according to the instructions.

The product shall only be connected to a USB interface of version USB2.0

Adapter shall be installed near the equipment and shall be easily accessible.

The plug considered as disconnect device of adapter

Adapter Model: FJ-SW20261203000

Input: AC 100-240V, 50/60Hz, 1.5A Max Output: DC 12.0V, 3.0A, 36.0W

Operation Frequency:

For BT/BLE: 2402MHz~2480MHz

For 2.4G WIFI:

2412MHz~2472MHz (802.11b/802.11g/802.11n(HT20))

For 5G WIFI:

5150MHz~5250MHz, 5725MHz~5875MHz

For GPS: 1.57542GHz

Max Output Power:

For BT: 0.0032W

For BLE: 0.0027W

For 2.4G WIFI: 0.181W

For 5G WIFI: 0.048W

Manufacturer: OUTFORM SCIENCE AND TECHNOLOGY (SHENZHEN) CO., LTD

Address: BUILDING A FIRST FLOOR, HUADA PLAZA, GONGYE 3RD

ROAD, SHEKOU, NANSHAN DISTRICT, SHENZHEN, CHINA 518067

E-mail: Ronen.s@outform.com

DECLARATION OF CONFORMITY

I hereby declare that the product

Product:

Product Name: iDISPLAY 15.6" Display

Model: UIT515B-B02, UIT515B-B01, UIT515X-XYX (The 1st X is "A" or "B" represents the agent or the client; The 2nd X is A-Z represents the color; YY is client number from "01" to "90"), UIA515X-XYX("UIA" stands for display without touch screen, The 1st X is "A" or "B" represents the agent or the client; The 2nd X is A-Z represents the color; YY is client number from "01" to "90")

Brand Name: N/A

Hardware Version: AD-B03-V1.5

Software Version: B03-7.1-OUTFORM-T1506B02-G5-ICS12-RK3399-SW0.1-20210927

Accessories:

Adapter information:

Model: FJ-SW20261203000

Input: AC 100-240V, 50/60Hz, 1.5A Max Output: DC 12.0V, 3.0A, 36.0W

Manufacturer: SHENZHEN FUJIA APPLIANCE CO LTD

(Name of product, type or model, batch or serial number)

satisfies all the technical regulations applicable to the product within the scope of Council Directives 2014/53/EU, 2014/35/EU and 2014/30/EU:and declare that the same application has not been lodged with any other notified body.

EN IEC 62368-1:2020+A11:2020

EN 62311:2020

Draft ETSI EN 301 489-19 V2.2.0 (2020-09)

ETSI EN 301 489-17 V3.2.4 (2020-09)

Draft ETSI EN 301 489-3 V2.1.2 (2021-03)

ETSI EN 301 489-1 V2.2.3 (2019-11)

EN55032:2015+A1:2020+A11:2020

EN55035:2017+A11:2020

EN IEC 61000-3-2:2019

EN 61000-3-3:2013+A1:2019

ETSI EN 300 328 V2.2.2 (2019-07)

ETSI EN 301 893 V2.1.1 (2017-05)

ETSI EN 300 440 V2.2.1 (2018-07)

ETSI EN 303 413 V1.2.1 (2021-04)

(Title(s) of regulations, standards, etc.)

All essential radio test suites have been carried out.

NOTIFIED BODY: MiCOM Labs Inc

– **Address:**

575 Boulder Court,
Pleasanton, California 94566
USA
Identification Number: 2280

MANUFACTURER or AUTHORISED REPRESENTATIVE:

– **Address:**

OUTFORM SCIENCE AND TECHNOLOGY (SHENZHEN) CO., LTD
BUILDING A FIRST FLOOR, HUADA PLAZA, GONGYE 3RD
ROAD, SHEKOU, NANSHAN DISTRICT, SHENZHEN, CHINA 518067

This declaration is issued under the sole responsibility of the manufacturer and, if applicable, his authorised representative.

Point of contact:

Ronen Simhi, 0086-755-83236716/0086-755-83236725
(Name, telephone and fax number)

2021-12-08
(Place, date of issue)

Ronen Simhi
(Signature)

Ronen Simhi, GM
(Name and title in block letters)

OUTFORM™

For additional assistance, visit outformsupport.com.