

Scentee Machina Getting Started Guide

“Getting started with Scentee Machina”

✔ Connect the cable to the device

First connect the USB cable to the Scentee Machina then connect to power supply.

✔ Turn on the switch

Next, turn on the switch on the main unit and check that fragrance bottle's slot lights up.

✔ Install your fragrance bottles

Please install your favorite fragrance bottles you have purchased.


✔ Download Scentee's app

Download Scentee's app and follow the in-app instructions to complete your account creation and setup. By creating an account on the cloud, your usage history

Scentee Machina Uno

Fragrance bottle

You can choose your favorite one from our list of fragrances.

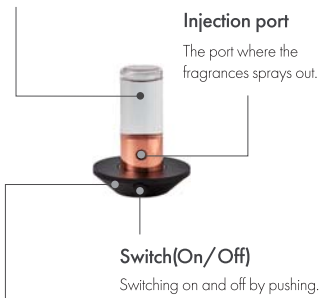

AI mounted stand

If you use Wifi, the device will use AI to suggest fragrances based off of your usage.

8

Precautions for handling

- Do not place Scentee Machina on an unstable or unlevel surface. Failure to do so may cause damage to the product.
- Do not place anything within 25 cm radius of Scentee Machina. If the fragrance hits other objects it may cause damage or discoloration.
- Fragrance bottle may be damaged and leak if tightened tightly. Please do not open / close by yourself.
- When installing or removing fragrance in Scentee Machina body, insert fragrance slowly from directly above. Pulling it out at an angle may cause malfunction.

9

- The expiration date of fragrance is one year. Do not use those that have passed the expiration date.
- Do not spray fragrance directly on your skin and do not inhale directly.
- Bottles of fragrance are interchangeable. Please do not attempt to forcibly open the bottle as it may cause device to malfunction.
- In the unlikely event that you swallow the bottle liquid, rinse your mouth well and drink plenty of water. If you feel unwell after that, please consult your doctor immediately.
- If you feel unwell during use, stop using immediately.
- Place device and fragrances in a safe place out of reach of children and pets.

- Do not place the product in places subject to water or where there is a risk of fire.
- Avoid locations exposed to direct sunlight, heat, and high humidity.
- If you are using a pacemaker, please use at least 1.5 cm away from Scentee Machina. If you are using other personal medical equipment, consult your medical device manufacturer or your doctor to ensure there will not be problems using medical equipment near the device.
- Do not disassemble or repair Scentee Machina by yourself.

Trouble Shooting

❗ The power does not come on

Please check that the cable is properly plugged into the Scentee Machina body, then press the switch.

❗ Fragrance does not spray

There is a possibility that the fragrance is clogged at the injection port. Please wipe the jet gently with a cotton swab and try spraying again.

❗ Fragrance is not recognized by the application

Please insert the bottle of fragrance again.

Customer Support

If an issue with the Scentee Machina you are using is not resolved, please contact us at the following address.

Scentee Japan Inc.

1-5-19, Nishiazabu, Minato-ku, Tokyo,
1060031, Japan

✉ info@scentee.com

Specifications of Quattro

Product	Scentee Machina Quattro	
Size	W331mm×D207mm×H42mm	
Weight	1661g	
Diffuser count	4bottles	
Contents	Base & Power Cord	
Connection type	Micro-B	
Plug type	Type A <small>※ Please use a USB charger if the packaged plug type is not used in your region.</small>	
Voltage	Output	5V/2A
	Input	100-240V
Frequency	50-60HZ	

14

Specifications of Uno

Product	Scentee Machina Uno	
Size	W91mm×D91mm×H22.5mm	
Weight	176g	
Diffuser count	1 bottle	
Contents	Base & Power Cord	
Connection type	Micro-B	
Plug type	Type A <small>※ Please use a USB charger if the packaged plug type is not used in your region.</small>	
Voltage	Output	5V/2A
	Input	100-240V
Frequency	50-60HZ	

15

Special message

Thank you for purchasing
Scentee Machina at this time.

We will strive to create devices that give
everyone a pleasant experience through
fragrance.

Please also follow our future work.

The fragrance dreams are made of Scentee.

Scentee Japan Inc.

will be saved on the cloud and the AI suggest feature will be enabled.

Download app here.



Supported OS information

iOS	11.3 later
Android	5.0 later

Compatible Models

iOS	iPhone7(Plus),8(Plus),X
Android	Android Smart Phone

Software Update

We will periodically update the software.
Update information here:
<https://scentee-machina.com>

4

Familiar with applications

① Remote Controller

On the remote control screen of the application, you can test the fragrance by turning the switch on and off, and select and confirm the fragrance.

② Timer

Timer setting of fragrance is available on the timer screen. You can select the amount of time, kind of scent, and the intensity of the scent.

③ Setting

On the settings screen, it is possible to register new device and change account information. You can also send inquiries and receive notifications from the settings screen.

5

Scentee Machina Quattro

Fragrance bottle
You can choose your favorite one from our list of fragrances.

Injection port
The port where the fragrances sprays out.



Switch(On/Off)
Switching on and off by pushing.

Fans
Spreads the fragrance to deliver scent into the room.

AI mounted stand
If you use Wifi, the device will use AI to suggest fragrances based off of your usage.

Warning Statement

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 20cm between the radiator & your body.