

Report No.: 18220WC30241303 FCC ID: 2ASCB-DM215NLB Page 1 of 79

# FCC SAR Test Report

Applicant : D2G Group LLC

Address

81 Commerce Drive, Fall River, Massachusetts, 02720, United States

Product Name

: 21.5 Inch Digital Backpack Android 11

Date

Jan. 02, 2024



#### Shenzhen Anbotek Compliance Laboratory Limited

Address:1/F.,Building D,Sogood Science and Technology Park, Sanwei Community, Hangcheng Street, Bao'an District, Shenzhen, Guangdong, China. Tel:(86) 0755–26066440 Fax:(86) 0755–26014772 Email:service@anbotek.com Code:AB-RF-05-b Hotline 400-003-0500 www.anbotek.com.cn



Report No.: 18220WC30241303

FCC ID: 2ASCB-DM215NLB Page 2 of 79
Contents

Statement of Compliance	6
General Information	7
2.1 Client Information	7
2.2 Description of Equipment Under Test (EUT)	
2.3 Device Category and SAR Limits	8
2.4 Applied Standard	8
2.5 Environment of Test Site	
2.6 Test Configuration	8
2.7 Description of Test Facility	9
Specific Absorption Rate (SAR)	10
3.1 Introduction	10
3.2 SAR Definition	
SAR Measurement System	
4.1 E-Field Probe	
4.2 Data Acquisition Electronics (DAE)	Ano 12
4.3 Robot	13
4.4 Measurement Server	
4.5 Phantom	
4.6 Device Holder	16
4.7 Data Storage and Evaluation	
Test Equipment List	
Tissue Simulating Liquids	20
System Verification Procedures	22
EUT Testing Position	24
8.1 Body Worn Position	24
Measurement Procedures	
9.1 Spatial Peak SAR Evaluation	
9.2 Power Reference Measurement	
9.3 Area Scan Procedures	
9.4 Zoom Scan Procedures	
9.5 Volume Scan Procedures	
9.6 Power Drift Monitoring	
0. Conducted Power	29
2. SAR Test Results Summary	
3. Simultaneous Transmission Analysis	33
Simultaneous TX SAR Considerations	
1 Maggurgmont Upgertainty	34
	<ul> <li>9.3 Area Scan Procedures</li> <li>9.4 Zoom Scan Procedures</li> <li>9.5 Volume Scan Procedures</li> <li>9.6 Power Drift Monitoring</li> <li>9.6 Power Drift Monitoring</li> <li>9.6 Conducted Power</li> <li>9.7 Conducted Power</li> <li>9.8 Antenna Location</li> <li>9.8 SaR Test Results Summary</li> <li>9.8 Simultaneous Transmission Analysis</li> </ul>

Address:1/F.,Building D,Sogood Science and Technology Park, Sanwei Community, Hangcheng Street, Bao'an District, Shenzhen, Guangdong, China. Tel:(86) 0755–26066440 Fax:(86) 0755–26014772 Email:service@anbotek.com



Report No.: 18220WC30241303	FCC ID:	2ASCB-DM	1215NLB	Page 3	3 of 79
Appendix A. EUT Photos and Test Setup	Photos	فالمهر والمسابق	Anbor		
Appendix B. Plots of SAR System Check	K Anbo		oda,	le. b	
Appendix C. Plots of SAR Test Data	ate <sup>k</sup>	ooter Anu		botek	
Appendix D. DASY System Calibration Co	ertificate	, botek A	nb0	, otek	
All					

#### Shenzhen Anbotek Compliance Laboratory Limited

Address:1/F.,Building D,Sogood Science and Technology Park, Sanwei Community, Hangcheng Street, Bao'an District, Shenzhen, Guangdong, China. Tel:(86) 0755–26066440 Fax:(86) 0755–26014772 Email:service@anbotek.com Code:AB-RF-05-b





# Report No.: 18220WC30241303 FCC ID: 2ASCB-DM215NLB Page 4 of 79 TESTREPORT

Applicant :	D2G Group LLC
Manufacturer :	Shenzhen Jiatean Technology Co.,Ltd
Product Name :	21.5 Inch Digital Backpack Android 11
Model No. :	JTA-WT-21.5BA,DM215NLB
Trade Mark :	Displays2go
Rating(s) :	Input: DC 12V (with DC 12V, 30000mAh Battery)

#### Test Standard(s) : IEC/IEEE 62209-1528:2020; FCC 47 CFR Part 2.1093; ANSI/IEEE C95.1:2005; Reference FCC KDB 447498; KDB 248227; KDB 616217

The device described above is tested by Shenzhen Anbotek Compliance Laboratory Limited to determine the maximum emission levels emanating from the device and the severe levels of the device can endure and its performance criterion. The measurement results are contained in this test report and Shenzhen Anbotek Compliance Laboratory Limited is assumed full of responsibility for the accuracy and completeness of these measurements. Also, this report shows that the EUT (Equipment Under Test) is technically compliant with the IEC/IEEE 62209-1528:2020, FCC 47 CFR Part 2.1093, ANSI/IEEE C95.1:2005 and Reference KDB 447498, KDB 248227, KDB 616217 requirements.

This report applies to above tested sample only and shall not be reproduced in part without written approval of Shenzhen Anbotek Compliance Laboratory Limited.

Date of Receipt Date of Test Dec.21 , 2023 Dec.23 , 2023

Prepared By

Ella Liang

(Ella Liang)

Bolward pan

(Edward Pan)

Approved & Authorized Signer

Shenzhen Anbotek Compliance Laboratory Limited

Address:1/F.,Building D,Sogood Science and Technology Park, Sanwei Community, Hangcheng Street, Bao'an District, Shenzhen, Guangdong, China. Tel:(86) 0755–26066440 Fax:(86) 0755–26014772 Email:service@anbotek.com Code:AB-RF-05-b

400-003-0500

www.anbotek.com.cn



# Report No.: 18220WC30241303 FCC ID: 2ASCB-DM215NLB Page 5 of 79 Version

Version No		Date			Descrip	otion		
R00	Anb	Jan. 02, 2024	Anborek	Anbo	Origir	alovek	Anbote	k Þr
otek Anbotek	p	nbort Anbotek	Anbore	Anbo	otek	Anbotek	Anboro	otek
unbotek Anbot	*ek	Anu nbotek Anbo	ton Aupo	wotek p	Inbotek	Aupore	ek Ann	abotek
Anbotek Ant	notel	Anbotek A	htore A	nbotek	Anbote	K Anb	hotek	Anbot
Anborotek	Ann	tek Anbotek	anbo hotek	Anbotek	Anb	ore P	nborek	AN
Anbo botek	P	ibotek Anboth	Annanbotek	Anboteh	A No.	hotek	Anbotel	4
ottek prote	K-	Anboten Anbo	ek Anbol	rek Anbr	o' tek	Anbotek	Aupo	der ak

#### Shenzhen Anbotek Compliance Laboratory Limited

Address:1/F.,Building D,Sogood Science and Technology Park, Sanwei Community, Hangcheng Street, Bao'an District, Shenzhen, Guangdong, China. Tel:(86) 0755–26066440 Fax:(86) 0755–26014772 Email:service@anbotek.com

#### Code:AB-RF-05-b



Report No.: 18220WC30241303 FCC ID: 2ASCB-DM215NLB Page 6 of 79

## 1. Statement of Compliance

The maximum results of Specific Absorption Rate (SAR) found during testing are as follows.

#### <Highest SAR Summary>

Frequency Dand	Highest Reported 1g-SAR(W/Kg)	SAR Test Limit
Frequency Band	Body-worn(0mm)	(W/Kg)
WIFI 2.4G	0.567	1.6 Let
Test Result	PASS	Anbotek Anbo

This device is in compliance with Specific Absorption Rate (SAR) for general population/uncontrolled exposure limits (1.6 W/kg) specified in KDB 447498 D01 v06, 2015 and ANSI/IEEE C95.1:2005, and had been tested in accordance with the measurement methods and procedures specified in IEEE 1528-2013.

#### Shenzhen Anbotek Compliance Laboratory Limited

Address:1/F.,Building D,Sogood Science and Technology Park, Sanwei Community, Hangcheng Street, Bao'an District, Shenzhen, Guangdong, China. Tel:(86) 0755–26066440 Fax:(86) 0755–26014772 Email:service@anbotek.com

#### Code:AB-RF-05-b



#### Report No.: 18220WC30241303

#### FCC ID: 2ASCB-DM215NLB Page 7 of 79

## 2. General Information

#### 2.1 Client Information

Applicant	:	D2G Group LLC
Address	:	81 Commerce Drive, Fall River, Massachusetts, 02720, United States
Manufacturer	:	Shenzhen Jiatean Technology Co.,Ltd
Address	:	Floor 9,Building A,Baoke Industrial Park,No.20,Langkou Industrial Road.Dalang Street,Longhua District,Shenzhen, China
Factory	:	Shenzhen Jiatean Technology Co.,Ltd
Address	:	Floor 9,Building A,Baoke Industrial Park,No.20,Langkou Industrial Road.Dalang Street,Longhua District,Shenzhen, China

#### 2.2 Description of Equipment Under Test (EUT)

	Product Name	:	21.5 Inch Digital Back	pack Android 11	
	Model No.	:	JTA-WT-21.5BA, DM2 (Note: All samples are "JTA-WT-21.5BA" for	e the same except the model number, so we prepare	
	Trade Mark	:	Displays2go		
	Test Power Supply	:	with DC 12V, 30000mAh Battery		
	Test Sample No.	:	1-2-2(Engineering Sample)		
			Operation Frequency:	BLE:2402~2480MHz WiFi 2.4G: 2412~2462MHz for 802.11b/g/n20	
		lu a d	Number of Channel:	BLE:40 Channels WiFi 2.4G: 11 Channels	
	Product Description	:	botek Anbotek	BLE:GFSK WiFi 2.4G 802.11b: DSSS(CCK, DQPSK, DBPSK);	
5			Modulation Type:	802.11g: OFDM(BPSK, QPSK, 16QAM, 64QAM); 802.11n(HT20): OFDM (BPSK, QPSK, 16QAM, 64QAM)	
	Remark: 1) For a m			iption, please refer to the manufacturer's specifications or	

#### Shenzhen Anbotek Compliance Laboratory Limited

Address:1/F.,Building D,Sogood Science and Technology Park, Sanwei Community, Hangcheng Street, Bao'an District, Shenzhen, Guangdong, China. Tel:(86) 0755–26066440 Fax:(86) 0755–26014772 Email:service@anbotek.com

#### Code:AB-RF-05-b



#### Report No.: 18220WC30241303

#### FCC ID: 2ASCB-DM215NLB Page 8 of 79

#### 2.3 Device Category and SAR Limits

This device belongs to portable device category because its radiating structure is allowed to be used within 20 centimeters of the body of the user. Limit for General Population/Uncontrolled exposure should be applied for this device, it is 1.6 W/kg as averaged over any 1 gram of tissue.

#### 2.4 Applied Standard

The Specific Absorption Rate (SAR) testing specification, method, and procedure for this device is in accordance with the following standards:

IEC/IEEE 62209-1528:2020

ANSI/IEEE C95.1:2005

FCC 47 CFR Part 2.1093

Reference FCC KDB 447498; KDB 248227; KDB 616217

#### 2.5 Environment of Test Site

Items	Required	Actual
Temperature (°C )	18-25	22~23
Humidity (%RH)	30-70	55~65

#### 2.6 Test Configuration

For WIFI and Bluetooth SAR testing, engineering testing software installed on the EUT can provide continuous transmitting RF signal.

#### Shenzhen Anbotek Compliance Laboratory Limited

Address:1/F.,Building D,Sogood Science and Technology Park, Sanwei Community, Hangcheng Street, Bao'an District, Shenzhen, Guangdong, China. Tel:(86) 0755–26066440 Fax:(86) 0755–26014772 Email:service@anbotek.com Code:AB-RF-05-b



#### Report No.: 18220WC30241303

FCC ID: 2ASCB-DM215NLB Page 9 of 79

#### 2.7 Description of Test Facility

The test facility is recognized, certified, or accredited by the following organizations:

#### FCC-Registration No.: 434132

Shenzhen Anbotek Compliance Laboratory Limited, EMC Laboratory has been registered and fully described in a report filed with the (FCC) Federal Communications Commission. The acceptance letter from the FCC is maintained in our files. Registration No. 184111.

#### ISED-Registration No.: 8058A

Shenzhen Anbotek Compliance Laboratory Limited, EMC Laboratory has been registered and fully described in a report filed with the (ISED) Innovation, Science and Economic Development Canada. The acceptance letter from the ISED is maintained in our files. Registration 8058A.

#### Test Location

Shenzhen Anbotek Compliance Laboratory Limited. 1/F, Building D, Sogood Science and Technology Park, Sanwei community, Hangcheng Street, Bao'an District, Shenzhen, Guangdong, China.518102

#### Shenzhen Anbotek Compliance Laboratory Limited

Address:1/F.,Building D,Sogood Science and Technology Park, Sanwei Community, Hangcheng Street, Bao'an District, Shenzhen, Guangdong, China. Tel:(86) 0755–26066440 Fax:(86) 0755–26014772 Email:service@anbotek.com

#### Code:AB-RF-05-b



#### Report No.: 18220WC30241303 FCC ID: 2ASCB-DM215NLB Page 10 of 79

## 3. Specific Absorption Rate (SAR)

#### 3.1 Introduction

SAR is related to the rate at which energy is absorbed per unit mass in an object exposed to a radio field. The SAR distribution in a biological body is complicated and is usually carried out by experimental techniques or numerical modeling. The standard recommends limits for two tiers of groups, occupational/controlled and general population/uncontrolled, based on a person's awareness and ability to exercise control over his or her exposure. In general, occupational/controlled exposure limits are higher than the limits for general population/uncontrolled.

#### 3.2 SAR Definition

The SAR definition is the time derivative (rate) of the incremental energy (dW) absorbed by (dissipated in) an incremental mass (dm) contained in a volume element (dv) of a given density ( $\rho$ ). The equation description is as below:

$$SAR = \frac{d}{dt} \left( \frac{dW}{dm} \right) = \frac{d}{dt} \left( \frac{dW}{\rho dv} \right)$$

SAR is expressed in units of Watts per kilogram (W/kg)

SAR measurement can be either related to the temperature elevation in tissue by

$$SAR = C\left(\frac{\delta T}{\delta t}\right)$$

Where: C is the specific head capacity,  $\delta T$  is the temperature rise and  $\delta t$  is the exposure duration, or related to the electrical field in the tissue by

$$SAR = \frac{\sigma |E|^2}{\rho}$$

Where:  $\sigma$  is the conductivity of the tissue,  $\rho$  is the mass density of the tissue and E is the RMS electrical field strength.

However for evaluating SAR of low power transmitter, electrical field measurement is typically applied.

#### Shenzhen Anbotek Compliance Laboratory Limited


Address:1/F.,Building D,Sogood Science and Technology Park, Sanwei Community, Hangcheng Street, Bao'an District, Shenzhen, Guangdong, China. Tel:(86) 0755–26066440 Fax:(86) 0755–26014772 Email:service@anbotek.com

#### Code:AB-RF-05-b Hotline 400-003-0500 www.anbotek.com.cn



Report No.: 18220WC30241303 FCC ID: 2ASCB-DM215NLB Page 11 of 79

## 4. SAR Measurement System

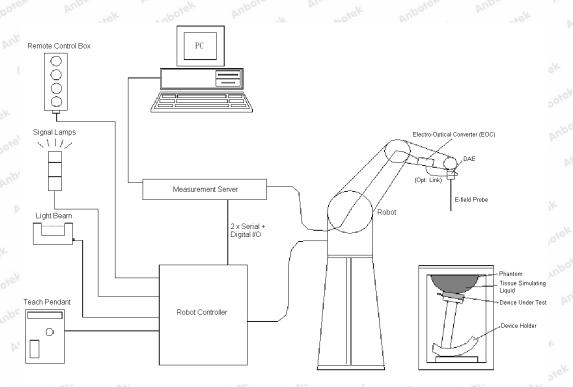

#### **DASY System Configurations**

The DASY system for performance compliance tests is illustrated above graphically. This system consists of the following items:

- > A standard high precision 6-axis robot with controller, a teach pendant and software
- > A data acquisition electronic (DAE) attached to the robot arm extension
- A dosimetric probe equipped with an optical surface detector system
- The electro-optical converter (EOC) performs the conversion between optical and electrical signals
- A measurement server performs the time critical tasks such as signal filtering, control of the robot operation and fast movement interrupts.
- A probe alignment unit which improves the accuracy of the probe positioning
- A computer operating Windows XP
- DASY software
- Remove control with teach pendant and additional circuitry for robot safety such as warming lamps, etc.
- The SAM twin phantom
- A device holder
- Tissue simulating liquid

#### Shenzhen Anbotek Compliance Laboratory Limited

Address:1/F.,Building D,Sogood Science and Technology Park, Sanwei Community, Hangcheng Street, Bao'an District, Shenzhen, Guangdong, China. Tel:(86) 0755–26066440 Fax:(86) 0755–26014772 Email:service@anbotek.com





Report No.: 18220WC30241303FCC ID: 2ASCB-DM215NLBPage 12 of 79> Dipole for evaluating the proper functioning of the system

components are described in details in the following sub-sections.

#### 4.1 E-Field Probe

The SAR measurement is conducted with the dosimetric probe (manufactured by SPEAG). The probe is specially designed and calibrated for use in liquid with high permittivity. The dosimetric probe has special calibration in liquid at different frequency. This probe has a built in optical surface detection system to prevent from collision with phantom.

<lv2da4 lidb6=""></lv2da4>	pri y voto pri	NOK-	100	pe.
Construction	Symmetrical design with triangular core Built-in shielding against static charges PEEK enclosure material (resistant to organic solvents, e.g., DGBE)	ex ante	7	A.
Frequency	10 MHz to 6 GHz; Linearity: ± 0.2 dB	Anbr	2.9	I.C.
Directivity	<ul> <li>± 0.3 dB in HSL (rotation around probe axis)</li> <li>± 0.5 dB in tissue material (rotation normal to probe axis)</li> </ul>	4		bot Ani
Dynamic Range	10 μW/g to 100 mW/g; Linearity: ± 0.2 dB (noise: typically < 1 μW/g)	Anbo	T	
Dimensions	Overall length: 330 mm (Tip: 20 mm) Tip diameter: 2.5 mm (Body: 12 mm) Typical distance from probe tip to dipole centers: 1 mm	Anbores Anbores Anbores	of EX3DV4	Anbote Anb

## E-Field Probe Specification

#### E-Field Probe Calibration

Each probe needs to be calibrated according to a dosimetric assessment procedure with accuracy better than  $\pm$  10%. The spherical isotropy shall be evaluated and within  $\pm$  0.25dB. The sensitivity parameters (NormX, NormY, and NormZ), the diode compression parameter (DCP) and the conversion factor (ConvF) of the probe are tested. The calibration data can be referred to appendix C of this report.

#### 4.2 Data Acquisition Electronics (DAE)

The data acquisition electronics (DAE) consists of a highly sensitive electrometer-grade preamplifier with auto-zeroing, a channel and gain-switching multiplexer, a fast 16 bit AD-converter and a command decoder and control logic unit. Transmission to the measurement server is accomplished through an optical downlink for data and status information as well as an optical uplink for commands

#### Shenzhen Anbotek Compliance Laboratory Limited

Address: 1/F., Building D, Sogood Science and Technology Park, Sanwei Community, Hangcheng Street, Bao'an District, Shenzhen, Guangdong, China. Tel: (86) 0755–26066440 Fax: (86) 0755–26014772 Email:service@anbotek.com





## Report No.: 18220WC30241303 FCC ID: 2ASCB-DM215NLB Page 13 of 79 and the clock.

The input impedance of the DAE is 200MOhm; the inputs are symmetrical and floating. Common mode rejection is above 80dB.



Photo of DAE

#### 4.3 Robot

The SPEAG DASY system uses the high precision robots (DASY5: TX60XL) type from Stäubli SA (France). For the 6-axis controller system, the robot controller version (DASY5: CS8c) from Stäubli is used. The Stäubli robot series have many features that are important for our application:

- High precision (repeatability ±0.035 mm)
- High reliability (industrial design)
- Jerk-free straight movements
- > Low ELF interference (the closed metallic construction shields against motor control fields)



Photo of DASY5

#### Shenzhen Anbotek Compliance Laboratory Limited

Address:1/F.,Building D,Sogood Science and Technology Park, Sanwei Community, Hangcheng Street, Bao'an District, Shenzhen, Guangdong, China. Tel:(86) 0755–26066440 Fax:(86) 0755–26014772 Email:service@anbotek.com Code:AB-RF-05-b Hotline 400-003-0500 www.anbotek.com.cn



#### Report No.: 18220WC30241303

#### FCC ID: 2ASCB-DM215NLB Page 14 of 79

#### 4.4 Measurement Server

Anbotek Product Safety

The measurement server is based on a PC/104 CPU board with CPU (DASY5: 400 MHz, Intel Celeron), chip disk (DASY5: 128 MB), RAM (DASY5: 128 MB). The necessary circuits for communication with the DAE electronic box, as well as the 16 bit AD converter system for optical detection and digital I/O interface are contained on the DASY I/O board, which is directly connected to the PC/104 bus of the CPU board.

The measurement server performs all the real-time data evaluation for field measurements and surface detection, controls robot movements and handles safety operations.



#### Photo of Server for DASY5

#### 4.5 Phantom

#### <SAM Twin Phantom>

Shell Thickness	2 ± 0.2 mm;	-teit And
	Center ear point: 6 ± 0.2 mm	And
Filling Volume	Approx. 25 liters	
Dimensions	Length: 1000 mm; Width: 500 mm; Height: adjustable feet	
Measurement	Left Hand, Right Hand, Flat	
Areas	Phantom	Anti-

#### Photo of SAM Phantom

The bottom plate contains three pair of bolts for locking the device holder. The device holder positions are adjusted to the standard measurement positions in the three sections. A white cover is provided to tap the phantom during off-periods to prevent water evaporation and changes in the liquid parameters. On the phantom top, three reference markers are provided to identify the phantom position with respect to the robot.

#### Shenzhen Anbotek Compliance Laboratory Limited

Address:1/F.,Building D,Sogood Science and Technology Park, Sanwei Community, Hangcheng Street, Bao'an District, Shenzhen, Guangdong, China. Tel:(86) 0755–26066440 Fax:(86) 0755–26014772 Email:service@anbotek.com





#### Report No.: 18220WC30241303 FCC ID: 2ASCB-DM215NLB Page 15 of 79 <ELI4 Phantom>

	DV AV V LOV DV	
Shell Thickness	2 ± 0.2 mm (sagging: <1%)	
Filling Volume	Approx. 30 liters	
Dimensions	Major ellipse axis: 600 mm Minor axis:400 mm	
	Anbotek Anbotek Anbotek Anbotek Anbo	
	Photo of ELI4 Phantom	e de

The ELI4 phantom is intended for compliance testing of handheld and body-mounted wireless devices in the frequency range of 30 MHz to 6 GHz. ELI4 is fully compatible with standard and all known tissue simulating liquids.

#### Shenzhen Anbotek Compliance Laboratory Limited

Address:1/F.,Building D,Sogood Science and Technology Park, Sanwei Community, Hangcheng Street, Bao'an District, Shenzhen, Guangdong, China. Tel:(86) 0755–26066440 Fax:(86) 0755–26014772 Email:service@anbotek.com

#### Code:AB-RF-05-b



#### Report No.: 18220WC30241303

#### FCC ID: 2ASCB-DM215NLB Page 16 of 79

#### 4.6 Device Holder


Anbotek Product Safety

The SAR in the phantom is approximately inversely proportional to the square of the distance between the source and the liquid surface. For a source at 5 mm distance, a positioning uncertainty of  $\pm 0.5$ mm would produce a SAR uncertainty of  $\pm 20\%$ . Accurate device positioning is therefore crucial for accurate and repeatable measurements. The positions in which the devices must be measured are defined by the standards.

The DASY device holder is designed to cope with different positions given in the standard. It has two scales for the device rotation (with respect to the body axis) and the device inclination (with respect to the line between the ear reference points). The rotation center for both scales is the ear reference point (ERP). Thus the device needs no repositioning when changing the angles.

The DASY device holder is constructed of low-loss POM material having the following dielectric parameters: relative permittivity  $\varepsilon$  = 3 and loss tangent  $\delta$  = 0.02. The amount of dielectric material has been reduced in the closest vicinity of the device, since measurements have suggested that the influence of the clamp on the test results could thus be lowered.





#### Shenzhen Anbotek Compliance Laboratory Limited

Address:1/F.,Building D,Sogood Science and Technology Park, Sanwei Community, Hangcheng Street, Bao'an District, Shenzhen, Guangdong, China. Tel:(86) 0755–26066440 Fax:(86) 0755–26014772 Email:service@anbotek.com Code:AB-RF-05-b



#### Report No.: 18220WC30241303

FCC ID: 2ASCB-DM215NLB Page 17 of 79

#### 4.7 Data Storage and Evaluation

#### Data Storage

Anbotek **Product Safety** 

> The DASY software stores the assessed data from the data acquisition electronics as raw data (in microvolt readings from the probe sensors), together with all the necessary software parameters for the data evaluation (probe calibration data, liquid parameters and device frequency and modulation data) in measurement files. The post-processing software evaluates the desired unit and format for output each time the data is visualized or exported. This allows verification of the complete software setup even after the measurement and allows correction of erroneous parameter settings. For example, if a measurement has been performed with an incorrect crest factor parameter in the device setup, the parameter can be corrected afterwards and the data can be reevaluated.

> The measured data can be visualized or exported in different units or formats, depending on the selected probe type (e.g., [V/m], [A/m], [mW/g]). Some of these units are not available in certain situations or give meaningless results, e.g., a SAR-output in a non-lose media, will always be zero. Raw data can also be exported to perform the evaluation with other software packages.

#### Data Evaluation

The DASY post-processing software (SEMCAD) automatically executes the following procedures to calculate the field units from the microvolt readings at the probe connector. The parameters used in the evaluation are stored in the configuration modules of the software:

Probe	parameters:

Norm<sub>i</sub>, a<sub>i0</sub>, a<sub>i1</sub>, a<sub>i2</sub> Conversion factor ConvFi

σ

cf

- Diode compression point dcpi

**Device parameters:** 

- Frequency - Crest factor

Conductivity

Sensitivity

Media parameters:

- Density

These parameters must be set correctly in the software. They can be found in the component documents or they can be imported into the software from the configuration files issued for the DASY components. In the direct measuring mode of the multi-meter option, the parameters of the actual system setup are used. In the scan visualization and export modes, the parameters stored in the corresponding document files are used.

The first step of the evaluation is a linearization of the filtered input signal to account for the compression characteristics of the detector diode. The compensation depends on the input signal, the diode type and the DC-transmission factor from the diode to the evaluation electronics. If the exciting field is pulsed, the crest factor of the signal must be known to correctly

#### **Shenzhen Anbotek Compliance Laboratory Limited**

Address:1/F., Building D, Sogood Science and Technology Park, Sanwei Community, Hangcheng Street, Bao'an District, Shenzhen, Guangdong, China. Tel:(86) 0755-26066440 Fax:(86) 0755-26014772 Email:service@anbotek.com

Code:AB-RF-05-b

Hotline



## Report No.: 18220WC30241303 FCC ID: 2ASCB-DM215NLB Page 18 of 79 compensate for peak power.

The formula for each channel can be given as:

$$\mathbf{W}_{i} = \mathbf{U}_{i} + \mathbf{U}_{i}^{2} \cdot \frac{\mathbf{cf}}{\mathbf{dcp}_{i}}$$

with  $V_i$ = compensated signal of channel i, (i = x, y, z)

 $U_i$  = input signal of channel i, (i = x, y, z)

cf = crest factor of exciting field (DASY parameter)

dcp<sub>i</sub> = diode compression point (DASY parameter)

From the compensated input signals, the primary field data for each channel can be evaluated:

E-field Probes: E

Anbotek Product Safety

es: 
$$E_i = \sqrt{\frac{V_i}{Norm_i \cdot ConvF}}$$

H-field Probes:  $H_i = \sqrt{V_i} \cdot \frac{a_{i0} + a_{i1}f + a_{i2}f^2}{f}$ 

with  $V_i$  = compensated signal of channel i,(i = x, y, z)

Norm<sub>i</sub>= sensor sensitivity of channel i, (i = x, y, z),  $\mu V/(V/m)^2$  for E-field Probes

ConvF= sensitivity enhancement in solution

a<sub>ij</sub>= sensor sensitivity factors for H-field probes

f = carrier frequency [GHz]

E<sub>i</sub>= electric field strength of channel i in V/m

H<sub>i</sub>= magnetic field strength of channel i in A/m

The RSS value of the field components gives the total field strength (Hermitian magnitude):

$$E_{tot} = \sqrt{E_x^2 + E_y^2 + E_z^2}$$

The primary field data are used to calculate the derived field units.

$$SAR = E_{tot}^2 \cdot \frac{\sigma}{\rho \cdot 1000}$$

with SAR = local specific absorption rate in mW/g

E<sub>tot</sub>= total field strength in V/m

 $\sigma$  = conductivity in [mho/m] or [Siemens/m]

 $\rho$  = equivalent tissue density in g/cm<sup>3</sup>

Note that the density is set to 1, to account for actual head tissue density rather than the density of the tissue simulating liquid.

Shenzhen Anbotek Compliance Laboratory Limited Address:1/F.,Building D,Sogood Science and Technology Park, Sanwei Community, Hangcheng Street, Bao'an District, Shenzhen, Guangdong, China.

Hangcheng Street, Bao'an District, Shenzhen, Guangdong, China. Tel:(86) 0755–26066440 Fax:(86) 0755–26014772 Email:service@anbotek.com www.anbotek.com.cn

Code:AB-RF-05-b

Hotline



### Report No.: 18220WC30241303 FCC ID: 2ASCB-DM215NLB Page 19 of 79

## 5. Test Equipment List

Manufacturar	Nome of Equipment	Turne/Media	Serial Number	Calib	ration
Manufacturer	Name of Equipment	Type/Model	Serial Number	Last Cal.	Due Date
SPEAG	5GHz System Validation Kit	D5GHzV2	1160	Oct. 02, 2021	Oct. 01, 2024
SPEAG	2450MHz System Validation Kit	D2450V2	910	Jun. 15,2021	Jun. 14,2024
SPEAG	Data Acquisition Electronics	DAE4	387	Sept.06,2023	Sept.05,2024
SPEAG	Dosimetric E-Field Probe	EX3DV4	7396	May 06,2023	May 05,2024
Agilent	ENA Series Network Analyzer	E5071C	MY46317418	Oct.26, 2023	Oct.25, 2024
SPEAG	DAK	DAK-3.5	1226	NCR	NCR
SPEAG	ELI Phantom	QDOVA004AA	2058	NCR	NCR
AR	Amplifier	ZHL-42W	QA1118004	NCR	NCR
Agilent	Power Sensor	N8481H	MY51240001	Oct.26, 2023	Oct.25, 2024
Agilent	Spectrum Analyzer	N9020A	MY51170037	Oct.12, 2023	Oct.11, 2024
Agilent	Signal Generation	N5182A	MY47420647	Feb.23, 2023	Feb.22, 2024
Worken	Directional Coupler	0110A05601O-10	COM5BNW1A2	Oct.26, 2023	Oct.25, 2024

#### Note:

1. The calibration certificate of DASY can be referred to appendix C of this report.

2. The dipole calibration interval can be extended to 3 years with justification. The dipoles are also not physically damaged, or repaired during the interval.

3. The Insertion Loss calibration of Dual Directional Coupler and Attenuator were characterized via the network analyzer and compensated during system check.

- 4. The dielectric probe kit was calibrated via the network analyzer, with the specified procedure (calibrated in pure water) and calibration kit (standard) short circuit, before the dielectric measurement. The specific procedure and calibration kit are provided by Agilent.
- i. In system check we need to monitor the level on the power meter, and adjust the power amplifier level to have precise power level to the dipole; the measured SAR will be normalized to 1W input power according to the ratio of 1W to the input power to the dipole. For system check, the calibration of the power amplifier is deemed not critically required for correct measurement; the power meter is critical and we do have calibration for it

#### Shenzhen Anbotek Compliance Laboratory Limited

Address:1/F.,Building D,Sogood Science and Technology Park, Sanwei Community, Hangcheng Street, Bao'an District, Shenzhen, Guangdong, China. Tel:(86) 0755–26066440 Fax:(86) 0755–26014772 Email:service@anbotek.com

#### Code:AB-RF-05-b



### Report No.: 18220WC30241303 FCC ID: 2ASCB-DM215NLB Page 20 of 79

## 6. Tissue Simulating Liquids

For the measurement of the field distribution inside the SAM phantom with DASY, the phantom must be filled with around 25 liters of homogeneous body tissue simulating liquid. For head SAR testing, the liquid height from the ear reference point (ERP) of the phantom to the liquid top surface is larger than 15 cm, which is shown in Fig. 6.1. For body SAR testing, the liquid height from the center of the flat phantom to the liquid top surface is larger than 15 cm, which is shown as followed:



#### Photo of Liquid Height for Body SAR

The following table gives the recipes for tissue simulating liquid.

Frequency	Water	Sugar	Cellulose	Salt	Preventol			Permittivity	
(MHz)	(%)	(%)	(%)	(%)	(%)	(%)	(σ)	(ɛr)	0.
				For Bo	dy				20
2450	68.6	Net 0	nbotek I	mb <sup>o</sup> 0	31.4	0.0010	1.95	52.7	

The following table shows the measuring results for simulating liquid.

#### Shenzhen Anbotek Compliance Laboratory Limited

Address:1/F.,Building D,Sogood Science and Technology Park, Sanwei Community, Hangcheng Street, Bao'an District, Shenzhen, Guangdong, China. Tel:(86) 0755–26066440 Fax:(86) 0755–26014772 Email:service@anbotek.com

#### Code:AB-RF-05-b



Report N	lo.: 18220W	/C3024130	3nbone	FCC ID: 2ASCB-DM215NLB Page 21 of 79							
	Measured	Target Tissue			Measure	Liquid					
Tissue Type	Frequenc y (MHz)	٤r	σ	٤r	Dev. (%)	σ	Dev. (%)	Temp. (°C)	Test Date		
2450MSL	2450	52.70	1.95	52.14	-1.07	1.88	-3.72	22.5	12/23/2023		

#### Shenzhen Anbotek Compliance Laboratory Limited

Address:1/F.,Building D,Sogood Science and Technology Park, Sanwei Community, Hangcheng Street, Bao'an District, Shenzhen, Guangdong, China. Tel:(86) 0755–26066440 Fax:(86) 0755–26014772 Email:service@anbotek.com

#### Code:AB-RF-05-b



## Report No.: 18220WC30241303

#### FCC ID: 2ASCB-DM215NLB Page 22 of 79

## 7. System Verification Procedures

Each DASY system is equipped with one or more system validation kits. These units, together with the predefined measurement procedures within the DASY software, enable the user to conduct the system performance check and system validation. System validation kit includes a dipole, tripod holder to fix it underneath the flat phantom and a corresponding distance holder.


#### Purpose of System Performance check

The system performance check verifies that the system operates within its specifications. System and operator errors can be detected and corrected. It is recommended that the system performance check be performed prior to any usage of the system in order to guarantee reproducible results. The system performance check uses normal SAR measurements in a simplified setup with a well characterized source. This setup was selected to give a high sensitivity to all parameters that might fail or vary over time. The system check does not intend to replace the calibration of the components, but indicates situations where the system uncertainty is exceeded due to drift or failure.

#### System Setup

Anbotek **Product Safety** 

> In the simplified setup for system evaluation, the EUT is replaced by a calibrated dipole and the power source is replaced by a continuous wave that comes from a signal generator. The calibrated dipole must be placed beneath the flat phantom section of the SAM twin phantom with the correct distance holder. The distance holder should touch the phantom surface with a light pressure at the reference marking and be oriented parallel to the long side of the phantom. The equipment setup is shown below:

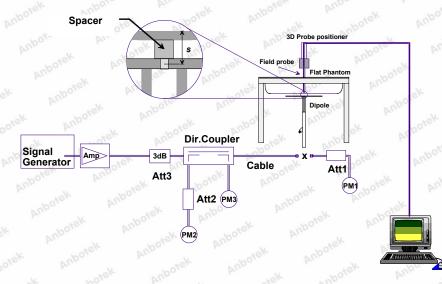

#### **Shenzhen Anbotek Compliance Laboratory Limited**

Address:1/F., Building D, Sogood Science and Technology Park, Sanwei Community, Hangcheng Street, Bao'an District, Shenzhen, Guangdong, China. Tel:(86) 0755-26066440 Fax:(86) 0755-26014772 Email:service@anbotek.com

Code:AB-RF-05-b Hotline 400-003-0500 www.anbotek.com.cn





#### Report No.: 18220WC30241303 FCC ID: 2ASCB-DM215NLB Page 23 of 79 System Setup for System Evaluation



## Photo of Dipole Setup

#### Validation Results

Comparing to the original SAR value provided by SPEAG, the verification data should be within its specification of 10%. The table below shows the target SAR and measured SAR after normalized to 1W input power. It indicates that the system performance check can meet the variation criterion and the plots can be referred to Appendix A of this report.

Frequenc y (MHz)	Liquid Type	Power fed onto reference dipole (mW)	Targeted SAR (W/kg)	Measured SAR (W/kg)	Normalized SAR (W/kg)	Deviatio n (%)	Test Date
2450	Body	250	51.8	12.69	50.76	-2.01	12/23/2023

Target and Measurement SAR after Normalized

#### Shenzhen Anbotek Compliance Laboratory Limited

Address:1/F.,Building D,Sogood Science and Technology Park, Sanwei Community, Hangcheng Street, Bao'an District, Shenzhen, Guangdong, China. Tel:(86) 0755–26066440 Fax:(86) 0755–26014772 Email:service@anbotek.com

#### Code:AB-RF-05-b



#### Report No.: 18220WC30241303

FCC ID: 2ASCB-DM215NLB Page 24 of 79

## 8. EUT Testing Position

#### 8.1 Body Worn Position

Body-worn operating configurations are tested with the belt-clips and holsters attached to the device and positioned against a flat phantom in a normal use configuration. Per KDB 648474 D04, bodyworn accessory exposure is typically related to voice mode operations when handsets are carried in body-worn accessories. The body-worn accessory procedures in FCC KDB 447498 D01 v06, 2015 should be used to test for body-worn accessory SAR compliance, without a headset connected to it. This enables the test results for such configuration to be compatible with that required for hotspot mode when the body-worn accessory test separation distance is greater than or equal to that required for hotspot mode, when applicable. When the reported SAR for body-worn accessory, measured without a headset connected to the handset is < 1.2 W/kg, the highest reported SAR configuration for that wireless mode and frequency band should be repeated for that body-worn accessory with a handset attached to the handset.

Accessories for body-worn operation configurations are divided into two categories: those that do not contain metallic components and those that do contain metallic components. When multiple accessories that do not contain metallic components are supplied with the device, the device is tested with only the accessory that dictates the closest spacing to the body. Then multiple accessories that contain metallic components are test with the device with each accessory. If multiple accessories share an identical metallic component (i.e. the same metallic belt-chip used with different holsters with no other metallic components) only the accessory that dictates the closest spacing to the body is tested.

moinend init

#### **Body Worn Position**

#### Shenzhen Anbotek Compliance Laboratory Limited

Hat phantom

Address:1/F.,Building D,Sogood Science and Technology Park, Sanwei Community, Hangcheng Street, Bao'an District, Shenzhen, Guangdong, China. Tel:(86) 0755–26066440 Fax:(86) 0755–26014772 Email:service@anbotek.com





#### Report No.: 18220WC30241303

Anbotek Product Safety

#### FCC ID: 2ASCB-DM215NLB Page 25 of 79

### 9. Measurement Procedures

The measurement procedures are as follows:

- (a) Use base station simulator (if applicable) or engineering software to transmit RF power continuously (continuous Tx) in the middle channel.
- (b) Keep EUT to radiate maximum output power or 100% duty factor (if applicable)
- (c) Measure output power through RF cable and power meter.
- (d) Place the EUT in the positions as setup photos demonstrates.
- (e) Set scan area, grid size and other setting on the DASY software.
- (f) Measure SAR transmitting at the middle channel for all applicable exposure positions.
- (g) Identify the exposure position and device configuration resulting the highest SAR
- (h) Measure SAR at the lowest and highest channels at the worst exposure position and device configuration if applicable.

According to the test standard, the recommended procedure for assessing the peak spatial-average SAR value consists of the following steps:

- (a) Power reference measurement
- (b) Area scan
- (c) Zoom scan
- (d) Power drift measurement

#### 9.1 Spatial Peak SAR Evaluation

The procedure for spatial peak SAR evaluation has been implemented according to the test standard. It can be conducted for 1g and 10g, as well as for user-specific masses. The DASY software includes all numerical procedures necessary to evaluate the spatial peak SAR value.

The base for the evaluation is a "cube" measurement. The measured volume must include the 1g and 10g cubes with the highest averaged SAR values. For that purpose, the center of the measured volume is aligned to the interpolated peak SAR value of a previously performed area scan.

The entire evaluation of the spatial peak values is performed within the post-processing engine (SEMCAD). The system always gives the maximum values for the 1g and 10g cubes. The algorithm to find the cube with highest averaged SAR is divided into the following stages:

- (a) Extraction of the measured data (grid and values) from the Zoom Scan
- (b) Calculation of the SAR value at every measurement point based on all stored data (A/D values and measurement parameters)
- (c) Generation of a high-resolution mesh within the measured volume
- (d) Interpolation of all measured values form the measurement grid to the high-resolution grid
- (e) Extrapolation of the entire 3-D field distribution to the phantom surface over the distance from

#### Shenzhen Anbotek Compliance Laboratory Limited

Address: 1/F., Building D, Sogood Science and Technology Park, Sanwei Community, Hangcheng Street, Bao'an District, Shenzhen, Guangdong, China. Tel:(86) 0755–26066440 Fax:(86) 0755–26014772 Email:service@anbotek.com Code:AB-RF-05-b



- Report No.: 18220WC30241303 FCC ID: 2ASCB-DM215NLB Page 26 of 79 sensor to surface
  - (f) Calculation of the averaged SAR within masses of 1g and 10g

#### 9.2 Power Reference Measurement

The Power Reference Measurement and Power Drift Measurements are for monitoring the power drift of the device under test in the batch process. The minimum distance of probe sensors to surface determines the closest measurement point to phantom surface. This distance cannot be smaller than the distance of sensor calibration points to probe tip as defined in the probe properties.

#### 9.3 Area Scan Procedures

The area scan is used as a fast scan in two dimensions to find the area of high field values, before doing a fine measurement around the hot spot. The sophisticated interpolation routines implemented in DASY software can find the maximum found in the scanned area, within a range of the global maximum. The range (in dB0 is specified in the standards for compliance testing. For example, a 2 dB range is required in IEEE standard 1528 and IEC 62209 standards, whereby 3 dB is a requirement when compliance is assessed in accordance with the ARIB standard (Japan), if only one zoom scan follows the area scan, then only the absolute maximum will be taken as reference. For cases where multiple maximums are detected, the number of zoom scans has to be increased accordingly.

Area scan parameters extracted from FCC KDB 865664 D01 SAR measurement 100 MHz to 6 GHz.

		ALC: NUM	
		$\leq$ 3 GHz	> 3 GHz
-	Maximum distance from closest measurement point (geometric center of probe sensors) to phantom surface	$5 \pm 1 \text{ mm}$	$\frac{1}{2} \cdot \delta \cdot \ln(2) \pm 0.5 \text{ mm}$
3	Maximum probe angle from probe axis to phantom surface normal at the measurement location	$30^{\circ}\pm1^{\circ}$	$20^{\circ} \pm 1^{\circ}$
\$		$\leq$ 2 GHz: $\leq$ 15 mm 2 - 3 GHz: $\leq$ 12 mm	$3 - 4 \text{ GHz:} \le 12 \text{ mm}$ $4 - 6 \text{ GHz:} \le 10 \text{ mm}$
1	Maximum area scan spatial resolution: $\Delta x_{\text{Area}}, \Delta y_{\text{Area}}$	When the x or y dimension o measurement plane orientation the measurement resolution r x or y dimension of the test d measurement point on the test	on, is smaller than the above, must be $\leq$ the corresponding levice with at least one

#### Shenzhen Anbotek Compliance Laboratory Limited

Address: 1/F., Building D, Sogood Science and Technology Park, Sanwei Community, Hangcheng Street, Bao'an District, Shenzhen, Guangdong, China. Tel: (86) 0755–26066440 Fax: (86) 0755–26014772 Email: service @ anbotek.com





## Product Safety

Anbotek

#### FCC ID: 2ASCB-DM215NLB Page 27 of 79

#### 9.4 Zoom Scan Procedures

Report No.: 18220WC30241303

Zoom scans are used assess the peak spatial SAR values within a cubic averaging volume containing 1 gram and 10gram of simulated tissue. The zoom scan measures points (refer to table below) within a cube shoes base faces are centered on the maxima found in a preceding area scan job within the same procedure. When the measurement is done, the zoom scan evaluates the averaged SAR for 1 gram and 10 gram and displays these values next to the job's label. Zoom scan parameters extracted from FCC KDB 865664 D01 SAR measurement 100 MHz to 6 GHz.

10 M			DIA	19.	400	10 N.	
			$\leq$ 3 GH	z	> 3 GI	Hz	
abore Ano	u:	- dek Aupo	r.	abore	Plun	-01	
Mavimum zoom soon s	motiol roco	Intion: Av. Av.	$\leq$ 2 GHz: $\leq$	8 mm	3 – 4 GHz:	$\leq 5 \text{ mm}^*$	
Maximum zoom scan s	spatial leso	uuton. Δx <sub>Zoom</sub> , Δy <sub>Zoom</sub>	$2-3$ GHz: $\leq$	$5 \text{ mm}^*$	4 – 6 GHz:	$\leq 4 \text{ mm}^*$	
					3 – 4 GHz:	$\leq$ 4 mm	
	uniform	grid: ∆z <sub>Zoom</sub> (n)	$\leq 5 \text{ mm}$	n	4 – 5 GHz:	$\leq$ 3 mm	
Maximum zoom scan					$5 - 6 \text{ GHz}: \le 2 \text{ mm}$		
	n,	$\Delta z_{Zoom}(1)$ : between	$\leq$ 4 mm		3 – 4 GHz:	< 3 mm	
spatial resolution,		1 <sup>st</sup> two points closest to phantom surface			4 – 5 GHz: s	< 2.5 mm	
normal to phantom surface					5 – 6 GHz:		
surface	grid	∆z <sub>Zoom</sub> (n>1): between subsequent points	$\leq 1.5 \cdot \Delta z_{Zoom}(n-1)$				
Minimum zoom scan		1			3 – 4 GHz:	≥ 28 mm	
volume	x, y, z		$\geq$ 30 m	m	4 – 5 GHz:	≥25 mm	
, on the					5 – 6 GHz:	≥22 mm	

Note: δ is the penetration depth of a plane-wave at normal incidence to the tissue medium; see draft standard IEEE P1528-2011 for details.

\* When zoom scan is required and the <u>reported</u> SAR from the area scan based 1-g SAR estimation procedures of KDB 447498 is ≤ 1.4 W/kg, ≤ 8 mm, ≤ 7 mm and ≤ 5 mm zoom scan resolution may be applied, respectively, for 2 GHz to 3 GHz, 3 GHz to 4 GHz and 4 GHz to 6 GHz.

#### Shenzhen Anbotek Compliance Laboratory Limited

Address:1/F.,Building D,Sogood Science and Technology Park, Sanwei Community, Hangcheng Street, Bao'an District, Shenzhen, Guangdong, China. Tel:(86) 0755–26066440 Fax:(86) 0755–26014772 Email:service@anbotek.com

#### Code:AB-RF-05-b



#### Report No.: 18220WC30241303

#### FCC ID: 2ASCB-DM215NLB Page 28 of 79

#### 9.5 Volume Scan Procedures

The volume scan is used for assess overlapping SAR distributions for antennas transmitting in different frequency bands. It is equivalent to an oversized zoom scan used in standalone measurements. The measurement volume will be used to enclose all the simultaneous transmitting antennas. For antennas transmitting simultaneously in different frequency bands, the volume scan is measured separately in each frequency band. In order to sum correctly to compute the 1g aggregate SAR, the EUT remain in the same test position for all measurements and all volume scan use the same spatial resolution and grid spacing. When all volume scan were completed, the software, SEMCAD postprocessor can combine and subsequently superpose these measurement data to calculating the multiband SAR.

#### 9.6 Power Drift Monitoring

All SAR testing is under the EUT install full charged battery and transmit maximum output power. In DASY measurement software, the power reference measurement and power drift measurement procedures are used for monitoring the power drift of EUT during SAR test. Both these procedures measure the field at a specified reference position before and after the SAR testing. The software will calculate the field difference in dB. If the power drift more than 5%, the SAR will be retested.

#### Shenzhen Anbotek Compliance Laboratory Limited

Address:1/F.,Building D,Sogood Science and Technology Park, Sanwei Community, Hangcheng Street, Bao'an District, Shenzhen, Guangdong, China. Tel:(86) 0755–26066440 Fax:(86) 0755–26014772 Email:service@anbotek.com

#### Code:AB-RF-05-b



Report No.: 18220WC30241303 FCC ID: 2ASCB-DM215NLB Page 29 of

## 10. Conducted Power

Mode Channe		Frequen cy (MHz)	Average Power(dBm)	Tune-Up Limit(dBm)	Test Rate Data
	100ter	2412	15.48	16.00	1 Mbps
802.11 b	6 bote	2437	15.70	16.00	1 Mbps
	11	2462	15.86	16.00	1 Mbps
	<sup>010</sup> 1 <sup>p.01</sup>	2412	16.25	16.50	6 Mbps
802.11 g	nbote 6	2437	16.29	16.50	6 Mbps
	11	2462	16.01	16.50 Miles	6 Mbps
	Lovek	2412	16.28	16.50	MCS0
802.11 n20	6	2437	16.23	16.50	MCS0
	11	2462	16.17	16.50	MCS0

#### <WIFI 2.4GHz Conducted Power>

#### Note:

- 1. Per KDB 447498 D01 v06, the test distance less than 5mm
- 2. Per KDB 248227 D01, choose the highest output power channel to test SAR and determine further SAR exclusion.
- Per KDB 248227 D01, In the 2.4 GHz band, separate SAR procedures are applied to DSSS and OFDM configurations to simplify DSSS test requirements. SAR is not required for the following 2.4 GHz OFDM conditions:
  - 1) When KDB Publication 447498 SAR test exclusion applies to the OFDM configuration.
  - 2) When the highest reported SAR for DSSS is adjusted by the ratio of OFDM to DSSS specified maximum output power and the adjusted SAR is  $\leq$  1.2 W/kg.
- 4. According to chapter 12 of this report, the max report SAR of 802.11 b mode is 0.567W/Kg, and 0.567W/Kg x (42.56/38.55) = 0.626W/Kg, which are smaller than 1.2W/Kg, so SAR evaluation of 802.11g mode is not required, the same method evaluate for 802.11n mode.

#### Shenzhen Anbotek Compliance Laboratory Limited

Address:1/F.,Building D,Sogood Science and Technology Park, Sanwei Community, Hangcheng Street, Bao'an District, Shenzhen, Guangdong, China. Tel:(86) 0755–26066440 Fax:(86) 0755–26014772 Email:service@anbotek.com







#### <Bluetooth Conducted Power>

TestMode	Channel	Peak Power (dBm)	Average Power(dBm)	Maximum Tune- Up(dBm)
	2402	-0.87	-2.39	-2.00
GFSK(BT	2440	-0.71	-2.20	-2.00
BLE_1M)	2480	-1.20	-2.72	-2.00

#### Note:

Per KDB 447498 D01v05r02, the 1-g and 10-g SAR test exclusion thresholds for 100 MHz to 6 GHz at test separation distances  $\leq$  50 mm are determined by:

[(max. power of channel, including tune-up tolerance, mW)/(min. test separation distance, mm)]  $\cdot [\sqrt{f(GHz)}] \le 3.0$  for 1-g SAR and  $\le 7.5$  for 10-g extremity SAR

f(GHz) is the RF channel transmit frequency in GHz

Power and distance are rounded to the nearest mW and mm before calculation

The result is rounded to one decimal place for comparison

Bluetooth Max Turn-up Power (dBm)	Separation Distance (mm)	Frequency (GHz)	exclusion thresholds		
-2.00 porter pr	notek Anbo	2.440	0.187		

Per KDB 447498 D01, when the minimum test separation distance is < 5 mm, a distance of 5 mm is applied to determine SAR test exclusion. The test exclusion threshold is 0.187 which is<= 3, SAR testing is not required.

#### Shenzhen Anbotek Compliance Laboratory Limited

Address:1/F., Building D, Sogood Science and Technology Park, Sanwei Community, Hangcheng Street, Bao'an District, Shenzhen, Guangdong, China. Tel:(86) 0755–26066440 Fax:(86) 0755–26014772 Email:service@anbotek.com






Report No.: 18220WC30241303

FCC ID: 2ASCB-DM215NLB Page 31 of 79

## 11. Antenna Location

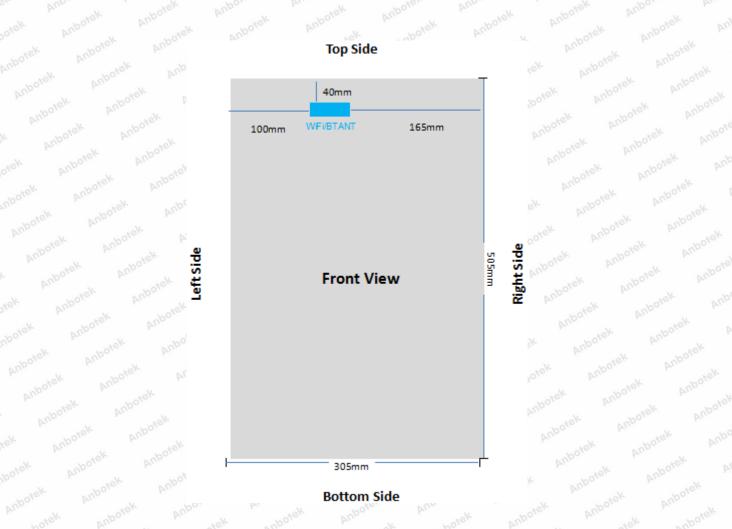

Distance of The Antenna to the EUT surface and edge										
Antennas	Front	Back	Top Side	Bottom Side	Left Side	Right Side				
WiFi/BT ANT	<25mm <25mm >25mm		>25mm	>25mm	>25mm	>25mm				

#### Shenzhen Anbotek Compliance Laboratory Limited

Address:1/F.,Building D,Sogood Science and Technology Park, Sanwei Community, Hangcheng Street, Bao'an District, Shenzhen, Guangdong, China. Tel:(86) 0755–26066440 Fax:(86) 0755–26014772 Email:service@anbotek.com

#### Code:AB-RF-05-b





#### Report No.: 18220WC30241303 FCC

#### FCC ID: 2ASCB-DM215NLB Page 32 of 79

### 12. SAR Test Results Summary

General Note:

- 1. Per KDB 447498 D01 v06, the reported SAR is the measured SAR value adjusted for maximum tune-up tolerance.
  - Scaling Factor = tune-up limit power (mW) / EUT RF power (mW), where tune-up limit is the maximum rated power among all production units.
- Reported SAR(W/kg)= Measured SAR(W/kg)\* Scaling Factor
   Per KDB 447498 D01 v06, for each exposure position, if the highest output channel reported SAR≤0.8W/kg, other channels SAR testing are not necessary

#### <WIFI 2.4GHz>

Plot No.	Band	Mode	Test Position	Gap (mm)	Ch.	Freq. (MHz )	е	Tune- Up Limit (dBm)	Scalin g Factor	r Drift	Measure d SAR <sub>1g</sub> (W/kg)	Reporte d SAR <sub>1g</sub> (W/kg)
elf-	WIFI 2.4GHz	802.11 b	Left	0 0	11	2462	15.86	16.00	1.033	N/A	N/A	N/A
Mak	WIFI 2.4GHz	802.11 b	Right	0	p.11°	2462	15.86	16.00	1.033	N/A	N/A	N/A
.el	WIFI 2.4GHz	802.11 b	Тор	0	11	2462	15.86	16.00	1.033	N/A	N/A	N/A
Pupo.	WIFI 2.4GHz	802.11 b	Bottom	0.4	11	2462	15.86	16.00	1.033	N/A	N/A	N/A
Pupp	WIFI 2.4GHz	802.11 b	Front	0	11	2462	15.86	16.00	1.033	0.08	0.335	0.346
#1	WIFI 2.4GHz	802.11 b	Back	0	11	2462	15.86	16.00	1.033	0.14	0.549	0.567

#### Shenzhen Anbotek Compliance Laboratory Limited

Address:1/F.,Building D,Sogood Science and Technology Park, Sanwei Community, Hangcheng Street, Bao'an District, Shenzhen, Guangdong, China. Tel:(86) 0755–26066440 Fax:(86) 0755–26014772 Email:service@anbotek.com Code:AB-RF-05-b





Report No.: 18220WC30241303 FCC ID:

#### FCC ID: 2ASCB-DM215NLB Page 33 of 79

## 13. Simultaneous Transmission Analysis

#### Simultaneous TX SAR Considerations

- No. Applicable Simultaneous Transmission
- 1. NA

#### Note:

1. WIFI 2.4GHz and Bluetooth cannot transmit simultaneously.

#### Shenzhen Anbotek Compliance Laboratory Limited

Address:1/F.,Building D,Sogood Science and Technology Park, Sanwei Community, Hangcheng Street, Bao'an District, Shenzhen, Guangdong, China. Tel:(86) 0755–26066440 Fax:(86) 0755–26014772 Email:service@anbotek.com

#### Code:AB-RF-05-b



Report No.: 18220WC30241303 FCC ID: 2ASCB-DM215NLB Page 34 of 79

## 14. Measurement Uncertainty

100	Anbo' Pi' ok		boter Ant		set a		000	pr.	hote bote	
NO	Source	Uncert. ai (%)	Prob. Dist.	Div.	ci (1g)	ci (10g)	Stand.U ncert. ui (1g)	Stand.U ncert. ui (10g)	Veff	
Angote	Repeat	0.4	nbotek N_k	Anbot	otek 1	Anbo	0.4	0.4	9 botek	
Anb	stek sobotek A	nbotek	Instru	ument	Anbotek	P	nbotek	Anbo	Anbot	
2	Probe calibration	Anboren et	N abo	2	Pupol	,1	3.5	3.5	∞ An	
otek 3	Axial isotropy	4.7 pobl	R A	√3	0.7	0.7	1.9 <sup>mbot</sup>	1.9	unbot &	
4	Hemispherical isotropy	9.4	Anbotek Rotek	√3	0.7	0.7	3.9	3.9	× North	
5	Boundary effect	1.0 potek	Runbol	√3	Ant Ant	,ote¥	0.6	0.6	otek ∞	
nb 6° <sup>k</sup>	Linearity	4.7 pr	pote <sup>k</sup> R	√3	, , e <sup>x</sup> 1	Anboron Albot	2.7	2.7	nbotek	
Anbo' 7	Detection limits	1.0	Anborn	√3	nbotek 1	4 1 An	0.6	0.6	Anbote	
8	Readout electronics	0.3	Nabot	1	Anbo	ote <sup>V1</sup>	0.3	0.3	rek ∞	
9	Response time	0.8	e <sup>k</sup> Ant	√3	рл. 1 Р	nbotek 1	0.5	ore <sup>k</sup> 0.5	nbotek w	
10	Integration time	2.6	Anbotek R	√ <u>3</u>	ione <sup>n</sup>	Anbo Ant	1.5	1.5	Anboie Mootel	
11	Ambient noise	3.0	Ribote	√3	Anbotel	, 1 <sup>10</sup>	1.7	1.7	∞ <sup>∞</sup>	
12	Ambient reflections	3.0 <sup>5,6000</sup>	otek R	√3	Ano 1 A	nbotek 1	Anbote 1.7	Anbo	botek	
13	Probe positioner mech. restrictions	0.4	unbotek R	√3	e <sup>k</sup>	Anboi Anb	0.2	0.2	Anbotek	
14	Probe positioning with respect to phantom shell	2.9	Anborat R Anbo	√3	Anbotek Anbo 1 Ar	rek botak	Anbotek 1.70tek	Anborek 1.7 nbor	ek Anbo	

#### Shenzhen Anbotek Compliance Laboratory Limited

Address:1/F.,Building D,Sogood Science and Technology Park, Sanwei Community, Hangcheng Street, Bao'an District, Shenzhen, Guangdong, China. Tel:(86) 0755–26066440 Fax:(86) 0755–26014772 Email:service@anbotek.com Code:AB-RF-05-b

400-003-0500 www.anbotek.com.cn

Hotline



**Product Safety** 

An

botek

Report No.: 18220WC3024	41303	FC	C ID:	2ASC	CB-DN	/215NLB	B Page	35 of 79
15 Max.SAR evaluation	1.0	unbot R	√3	ek 1	Anbote 1	0.6	0.6	Anbotek wotek
stek unbols Ar	10th	botet	P.C	0 <sup>0</sup>		dek	onboile	prov

NSH-		Anb	Test samp	ole rel	ated	botek	Anbotek	Anbo	ien Ani			
16	Device positioning	3.8	ote <sup>k</sup> A	Artoot	1 1	Anbotel	3.8 S	3.8	99			
17	Device holder	5.1	Antontek N	1 <sup>An1</sup>	onotek Anbûtek	1 A	5.1	5.1	5 mbore			
18	Drift of output power	5.0 ore	R Anbo	√3	Anbo' 1	potet	2.9	2.9	otek ∞			
botek	Phantom and set-up											
19	Phantom uncertainty	4.0	Ant Rek	√3	otek 1 <sub>ek</sub>	Anbo	2.3	2.3	Anbolek © Lote			
20	Liquid conductivity (target)	5.0	Anbotek R	√3	0.64	0.43	1.8	1.2 off	∞ 100			
21	Liquid conductivity (meas)	2.5	iek An	ooten Antotel	0.64	0.43	1.6	otel 1.2	abo <sup>tot</sup> ∞			
22	Liquid Permittivity (target)	5.0	Anbotek R hotek	√3	0.6	0.49	1.7	1.5	Anbolo			
23	Liquid Permittivity (meas)	2.5	N <sup>inbott</sup>	ote <sup>1</sup>	0.6	0.49	1.5	1.2	hek ∞ Al			
anbotek Anbot	Combined standard	Anbot ak An ootek	RSS	AntU AntU	$C_C = \sqrt{\sum_{i=1}^{n}}$	$C_i^2 U_i^2$	11.4%	11.3%	236			
unc	Expanded ertainty(P=95%)	Anborek Anbotek	Anbote L	ן = <i>ג</i> נ	/ ,k=	2.ek	22.8%	22.6%	rek An			

#### **Shenzhen Anbotek Compliance Laboratory Limited**

Address:1/F.,Building D,Sogood Science and Technology Park, Sanwei Community, Hangcheng Street, Bao'an District, Shenzhen, Guangdong, China. Tel:(86) 0755–26066440 Fax:(86) 0755–26014772 Email:service@anbotek.com

Code:AB-RF-05-b

ß



Anboi

Report No.: 18220WC30241303 FCC ID: 2ASCB-DM215NLB Page 36 of 79

## Appendix A. EUT Photos and Test Setup Photos



front(0mm)

back(0mm)

#### Shenzhen Anbotek Compliance Laboratory Limited

Address: 1/F., Building D, Sogood Science and Technology Park, Sanwei Community, Hangcheng Street, Bao'an District, Shenzhen, Guangdong, China. Tel: (86) 0755–26066440 Fax: (86) 0755–26014772 Email:service@anbotek.com

#### Code:AB-RF-05-b



#### Report No.: 18220WC30241303 FCC ID: 2ASCB-DM215NLB Page 37 of 79

## Appendix B. Plots of SAR System Check

#### 2450MHz Body System Check

Date:12/23/2023

Communication System: UID 0, CW; Frequency: 2450 MHz;Duty Cycle: 1:1 Medium parameters used: f = 2450 MHz;  $\sigma$  = 1.88 S/m;  $\epsilon_r$  = 52.14;  $\rho$  = 1000 kg/m<sup>3</sup> Phantom section: Flat Section


#### DASY5 Configuration:

- Probe: EX3DV4 SN7396; ConvF(7.53, 7.53, 7.53); Calibrated: May 06, 2023;
- Sensor-Surface: 2mm (Mechanical Surface Detection)
- Electronics: DAE4 Sn387; Calibrated: Sep. 06, 2023
- Phantom: SAM; Type: QD000P40CD; Serial: TP:1670
- Measurement SW: DASY52, Version 52.8 (2); SEMCAD X Version 14.6.10 (7164)

**Configuration/Pin=250mW/Area Scan (81x81x1):** Interpolated grid: dx=1.200 mm, dy=1.200 mm Maximum value of SAR (interpolated) = 20.6 W/kg

## **Configuration/Pin=250mW/Zoom Scan (7x7x7)/Cube 0:** Measurement grid: dx=5mm, dy=5mm, dz=5mm

Reference Value = 89.751 V/m; Power Drift = 0.12 dB Peak SAR (extrapolated) = 27.1 W/kg SAR(1 g) = 12.69 W/kg; SAR(10 g) = 5.96W/kg Maximum value of SAR (measured) = 20.8 W/kg

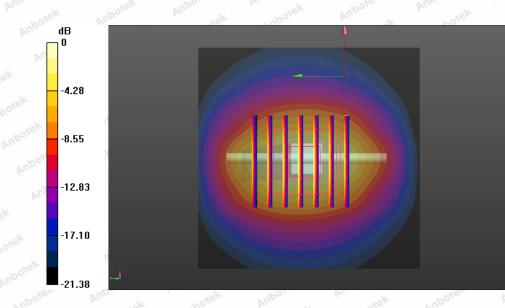

#### Shenzhen Anbotek Compliance Laboratory Limited

Address:1/F.,Building D,Sogood Science and Technology Park, Sanwei Community, Hangcheng Street, Bao'an District, Shenzhen, Guangdong, China. Tel:(86) 0755–26066440 Fax:(86) 0755–26014772 Email:service@anbotek.com

#### Code:AB-RF-05-b



Report No.: 18220WC30241303 FCC ID: 2ASCB-DM215NLB Page 38 of 79

## Appendix C. Plots of SAR Test Data

#1

Date: 12/23/2023

#### 2.4G WIFI\_802.11b\_CH11 BODY BACK


Communication System: UID 0, wifi (fcc) (0); Frequency: 2462 MHz;Duty Cycle: 1:1 Medium parameters used (interpolated): f = 2462 MHz;  $\sigma$  = 1.88 S/m;  $\epsilon_r$  = 52.14;  $\rho$  = 1000 kg/m<sup>3</sup> Phantom section: Flat Section

DASY5 Configuration:

- Probe: EX3DV4 SN7396; ConvF(7.53, 7.53, 7.53); Calibrated: May 06, 2023;
- Sensor-Surface: 1.4mm (Mechanical Surface Detection)
- Electronics: DAE4 Sn387; Calibrated: Sep. 06, 2023
- Phantom: SAM; Type: QD000P40CD; Serial: TP:1670
- Measurement SW: DASY52, Version 52.8 (2); SEMCAD X Version 14.6.10 (7164)

**BODY BACK /Area Scan (81x81x1):** Interpolated grid: dx=1.200 mm, dy=1.200 mm Maximum value of SAR (interpolated) = 1.632 W/kg

BODY BACK /Zoom Scan (7x7x7)/Cube 0: Measurement grid: dx=5mm, dy=5mm, dz=5mm Reference Value = 8.248 V/m; Power Drift = 0.14 dB Peak SAR (extrapolated) = 1.624 W/kg SAR(1 g) = 0.549 W/kg; SAR(10 g) = 0.248 W/kg Maximum value of SAR (measured) = 1.546 W/kg

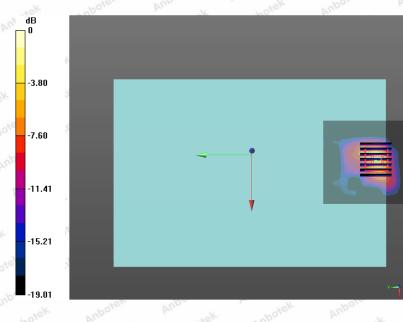

#### Shenzhen Anbotek Compliance Laboratory Limited

Address: 1/F., Building D, Sogood Science and Technology Park, Sanwei Community, Hangcheng Street, Bao'an District, Shenzhen, Guangdong, China. Tel: (86) 0755–26066440 Fax: (86) 0755–26014772 Email: service @ anbotek.com

#### Code:AB-RF-05-b





Report No.: 18220WC30241303 FCC ID: 2ASCB-DM215NLB Page 39 of 79


## Appendix D. DASY System Calibration Certificate

#### Shenzhen Anbotek Compliance Laboratory Limited

Address:1/F., Building D, Sogood Science and Technology Park, Sanwei Community, Hangcheng Street, Bao'an District, Shenzhen, Guangdong, China. Tel:(86) 0755–26066440 Fax:(86) 0755–26014772 Email:service@anbotek.com

#### Code:AB-RF-05-b



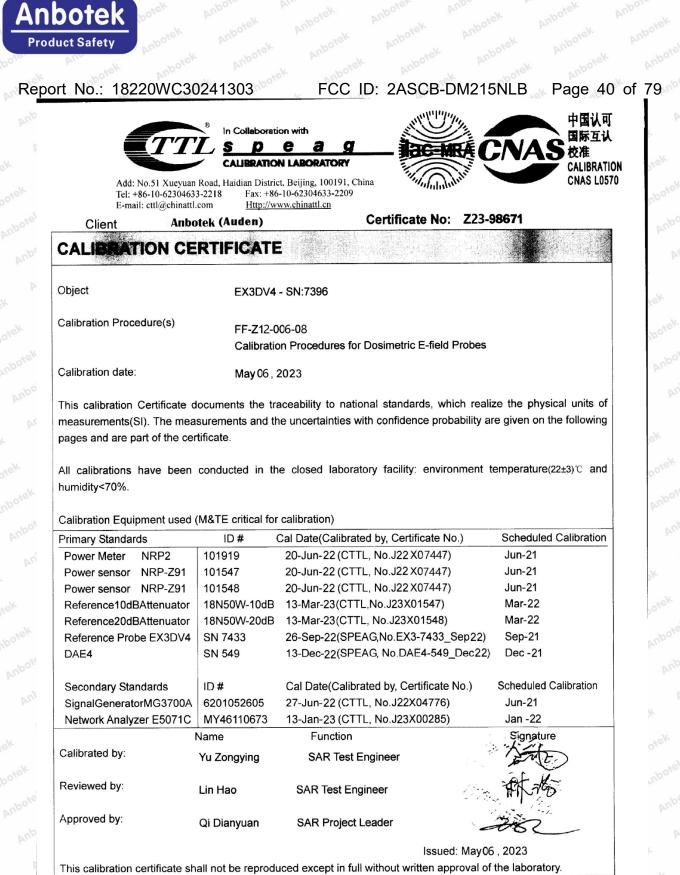

Certificate No: Z23-98671

Page 1 of 11

#### **Shenzhen Anbotek Compliance Laboratory Limited**

Address:1/F., Building D, Sogood Science and Technology Park, Sanwei Community, Hangcheng Street, Bao'an District, Shenzhen, Guangdong, China. Tel:(86) 0755-26066440 Fax:(86) 0755-26014772 Email:service@anbotek.com



