

Report No.: 18220WC20229502 FCC ID: 2AT6X-LITERADIO1 Page 1 of 76

# FCC SAR Test Report

Client Name : Shenzhen Baida Moxing Co.,Ltd.

Client Address

2007 Building 11, Tianan Yungu Phase II, Bantian street, Longgang District, Shenzhen, China

Product Name : LiteRadio 1

Report Date : Dec. 01, 2022



Shenzhen Anbotek Compliance Laboratory Limited

\* Approved \*

Shenzhen Anbotek Compliance Laboratory Limited

Address:1/F.,Building D,Sogood Science and Technology Park, Sanwei Community, Hangcheng Street, Bao'an District, Shenzhen, Guangdong, China. Tel:(86) 0755–26066440 Fax:(86) 0755–26014772 Email:service@anbotek.com Code:AB-RF-05-b





Report No.: 18220WC20229502

FCC ID: 2AT6X-LITERADIO1 Page 2 of 76

# Contents

1. Statement of Compliance	watek	nboter	Anu		ak Anb	6
2. General Information	n <sup>u</sup> yek	abotek	Anbo.		otek	7
Statement of Compliance     Statement of Compliance     Statement Information     Statement Information     Statement Information     Statement Information	Anbo		4 Anbot	e. 90		7
2.3 Device Category and SAR Limits	popote	Ano		hotek	Anbor	8
2.4 Applied Standard	Marine 1990	stek p	n <sup>bo.</sup>	p.'	Anbote	8
2.5 Environment of Test Site	· · · · · · · · · · · · · · · · · · ·	-potek	Anbote	Pur	Y	8
<ul> <li>2.2 Description of Equipment officer rest (EQ</li> <li>2.3 Device Category and SAR Limits</li></ul>	bore A		anboten	Anbe		8
2.7 Description of Test Facility						9
3 Specific Absorption Rate (SAR)						10
3.1 Introduction		Anbo			hote	. 10
		202	NY		1000	. 10
4. SAR Measurement System	en Anb		hotek	Anbor		11
4.1 E-Field Probe	noter Al	No.	Hatek	Anbois	199°.	. 12
4.2 Data Acquisition Electronics (DAE)						12
4.3 Robot	An	paboten	Anbu		toolek	13
<ul> <li>4.3 Robot</li> <li>4.4 Measurement Server</li> <li>4.5 Phantom</li> </ul>	And		ek Anb			. 14
4.5 Phantom	Anbor		wate <sup>k</sup>	nbote	Anu	14
4.6 Device Holder	22				Rai.	.16
4.7 Data Storage and Evaluation		poten	Anbu		Anbor	. 17
<ol> <li>5. Test Equipment List</li> <li>6. Tissue Simulating Liquids</li> <li>7. System Verification Procedures</li> </ol>		hotek	Anbo		lar You	.19
6. Tissue Simulating Liquids	inbor	Hotok.	phote	Ann		.20
7. System Verification Procedures	Anbore	Ann	ð	ter M	10°	.22
8. EUT Testing Position		Anbe		hotek	Anbor	.24
8.1 Body Worn Position		ant As			Anboten.	. 24
9. Measurement Procedures		otek	Anbote.	P.O.		25
<ol> <li>8. EUT Testing Position</li></ol>	ole. No.			Anbu		.25
9.2 Power Reference Measurement	nboten	Anb-	in atek	Anbo		
9.3 Area Scan Procedures	hotek	Anbo		de	poter 1	26
9.4 Zoom Scan Procedures		pspote	PUP		Minotek	27
9.5 Volume Scan Procedures			oten Ar			28
9.6 Power Drift Monitoring	Anbu		deotek	Anbort	Ann	.28
10 Conducted Power		0	Hatek	Anboten	Anb	.29
11. Antenna Location		nbotor	Ann	hot	ak Anbr	.30
12. SAR TEST RESULTS SUITHINGLY		unbotek	Anbo		, ate <sup>k</sup>	
13. Measurement Uncertainty	Anb	hotel	4 Anbor	- Pu	Yor	.32

### Shenzhen Anbotek Compliance Laboratory Limited

Address:1/F.,Building D,Sogood Science and Technology Park, Sanwei Community, Hangcheng Street, Bao'an District, Shenzhen, Guangdong, China. Tel:(86) 0755–26066440 Fax:(86) 0755–26014772 Email:service@anbotek.com





Report No.: 18220WC20229502	FCC ID: 2AT6X-LITERADIO1	Page 3 of 76	
Appendix A. EUT Photos and Te	st Setup Photos	Ann and and an and an	34
Appendix B. Plots of SAR Syster	n Check	Anbu	35
Appendix C. Plots of SAR Test D	ata	Anton An	36
Appendix D. DASY System Calib	ration Certificate	ek popoten Arib	37

### Shenzhen Anbotek Compliance Laboratory Limited

Address:1/F.,Building D,Sogood Science and Technology Park, Sanwei Community, Hangcheng Street, Bao'an District, Shenzhen, Guangdong, China. Tel:(86) 0755–26066440 Fax:(86) 0755–26014772 Email:service@anbotek.com

# Code:AB-RF-05-b





Report No.: 18220WC20229502

FCC ID: 2AT6X-LITERADIO1 Page 4

of

# **TEST REPORT**

Applicant	Anboten	Shenzhen Baida Moxing Co.,Ltd.
Manufacturer	Anboi	Shenzhen Baida Moxing Co.,Ltd.
Product Name	ak Anb	LiteRadio 1
Model No.	in p	LiteRadio 1
Trade Mark	botek	BETAFPV
Rating(s)	Annotel	Input: 5V-1A(with DC 3.7V, 1000mAh battery inside)

### Test Standard(s) : IEC/IEEE 62209-1528:2020; FCC 47 CFR Part 2.1093;

### ANSI/IEEE C95.1:2005; Reference FCC KDB 447498

The device described above is tested by Shenzhen Anbotek Compliance Laboratory Limited to determine the maximum emission levels emanating from the device and the severe levels of the device can endure and its performance criterion. The measurement results are contained in this test report and Shenzhen Anbotek Compliance Laboratory Limited is assumed full of responsibility for the accuracy and completeness of these measurements. Also, this report shows that the EUT (Equipment Under Test) is technically compliant with the IEC/IEEE 62209-1528:2020, FCC 47 CFR Part 2.1093, ANSI/IEEE C95.1:2005 and Reference KDB 447498 requirements.

This report applies to above tested sample only and shall not be reproduced in part without written approval of Shenzhen Anbotek Compliance Laboratory Limited.

Date of Receipt Date of Test

Prepared By

Oct. 19, 2022 Oct. 19~Nov. 21, 2022

Ella Liang

(Ella Liang)

(Kingkong Jin)

Approved & Authorized Signer

### Shenzhen Anbotek Compliance Laboratory Limited

Address: 1/F., Building D, Sogood Science and Technology Park, Sanwei Community, Hangcheng Street, Bao'an District, Shenzhen, Guangdong, China. Tel: (86) 0755–26066440 Fax: (86) 0755–26014772 Email:service@anbotek.com

#### Code:AB-RF-05-b Hotline



Page 5 of 76 Report No.: 18220WC20229502 FCC ID: 2AT6X-LITERADIO1

Version

Version No.	Date	Description
R00	Dec. 01, 2022	Original
k Anbols An	abotek Anbotek	Anborek Anborek Anborek Anborek
oten Anbo	Anbotek Anbot	k nobotek Anbotek Anbotek Anbotek
inbone pni photek	Anbotet Anbo	otek Anbotek Anbotek Anbotek Anbotek Anbotek
Anbotek Anbot	Anbore An	inbotek Anbotek Anbotek Anbotek Anbotek
Anbotek Ant	soter And	Anbotek Anbotek Anbotek Anbotek An
otek Anbotek	Anbo Lotek Anbotek	Anbore Ann Anborek Anborek Anbo

### Shenzhen Anbotek Compliance Laboratory Limited

Address:1/F., Building D, Sogood Science and Technology Park, Sanwei Community, Hangcheng Street, Bao'an District, Shenzhen, Guangdong, China. Tel:(86) 0755-26066440 Fax:(86) 0755-26014772 Email:service@anbotek.com

### Code:AB-RF-05-b





Report No.: 18220WC20229502 FCC ID: 2AT6X-LITERADIO1 Page 6 of 76

# 1. Statement of Compliance

The maximum results of Specific Absorption Rate (SAR) found during testing are as follows.

### <Highest SAR Summary>

Frequency Dand	Highest Reported 1g-SAR(W/Kg)	SAR Test Limit
Frequency Band	Body-worn(0mm)	(W/Kg)
2.4G	0.450 Linbole 0.450	1.6
Test Result	PASS potent	Anboro Ano

This device is in compliance with Specific Absorption Rate (SAR) for general population/uncontrolled exposure limits (1.6 W/kg) specified in KDB 447498 D01 v06, 2015 and ANSI/IEEE C95.1:2005, and had been tested in accordance with the measurement methods and procedures specified in IEEE 1528-2013.

### Shenzhen Anbotek Compliance Laboratory Limited

Address: 1/F., Building D, Sogood Science and Technology Park, Sanwei Community, Hangcheng Street, Bao'an District, Shenzhen, Guangdong, China. Tel:(86) 0755–26066440 Fax:(86) 0755–26014772 Email:service@anbotek.com

### Code:AB-RF-05-b





3220WC20229502 FCC ID: 2AT6X-LITERADIO1 Page 7 of 76

# 2. General Information

### 2.1 Client Information

Applicant	: Shenzhen Baida Moxing Co.,Ltd.
Address	2007 Building 11, Tianan Yungu Phase II, Bantian street, Longgang District, Shenzhen, China
Manufacturer	: Shenzhen Baida Moxing Co.,Ltd.
Address	2007 Building 11, Tianan Yungu Phase II, Bantian street, Longgang District, Shenzhen, China
Factory	: Shenzhen Humming Technology Co.,Ltd
Address	Floor 6, Building B, Zone C, Shangxue Technology Industrial City, Shangxue Residents' Group, Xinxue Community, Bantian Street, Longgang District, Shenzhen, China

### 2.2 Description of Equipment Under Test (EUT)

Lak		-10 <sup>0</sup>	solo alle set alle	
Product Name	:	LiteRadio 1	And botek Anbotek Anbotek Anbotek A	
Model No.	:	LiteRadio 1	Anbotek Anboten Anototek Anbotek	
Trade Mark	:	BETAFPV	tek Anborek Anborrek Anborek Anborek Anborer	
Test Power Supply	:	DC 3.7V battery inside	botek Anbotek Anbotek Anbotek Anbotek	
Test Sample No.	:	1-2-1(Engineering Sample)		
		Operation Frequency:	2404~2474.2 MHz	
		Number of Channel:	235 Channels	
Product Description	:	Modulation Type:	GFSK Month Andrew Market Andrew	
		Antenna Type:	PCB antenna	
		Antenna Gain(Peak):	3.24 dBi (Provided by customer)	
Remark: 1) For a me	ore	detailed features descrip	tion, please refer to the manufacturer's specifications or	

the User's Manual.

### Shenzhen Anbotek Compliance Laboratory Limited

Address:1/F.,Building D,Sogood Science and Technology Park, Sanwei Community, Hangcheng Street, Bao'an District, Shenzhen, Guangdong, China. Tel:(86) 0755–26066440 Fax:(86) 0755–26014772 Email:service@anbotek.com

#### Code:AB-RF-05-b Hotline 400-003-0500

www.anbotek.com.cn



Product Safety

Anbotek

Report No.: 18220WC20229502 FCC ID: 2AT6X-LITERADIO1 Page 8 of 76

### 2.3 Device Category and SAR Limits

This device belongs to portable device category because its radiating structure is allowed to be used within 20 centimeters of the body of the user. Limit for General Population/Uncontrolled exposure should be applied for this device, it is 1.6 W/kg as averaged over any 1 gram of tissue.

### 2.4 Applied Standard

The Specific Absorption Rate (SAR) testing specification, method, and procedure for this device is in accordance with the following standards:

- IEC/IEEE 62209-1528:2020
- ANSI/IEEE C95.1:2005
- FCC 47 CFR Part 2.1093
- Reference FCC KDB 447498

### 2.5 Environment of Test Site

Items	Required	Actual
Temperature (℃)	18-25	22~23
Humidity (%RH)	30-70	55~65

### 2.6 Test Configuration

For WIFI and Bluetooth SAR testing, engineering testing software installed on the EUT can provide continuous transmitting RF signal.

### Shenzhen Anbotek Compliance Laboratory Limited

Address:1/F., Building D, Sogood Science and Technology Park, Sanwei Community, Hangcheng Street, Bao'an District, Shenzhen, Guangdong, China. Tel:(86) 0755–26066440 Fax:(86) 0755–26014772 Email:service@anbotek.com



### Report No.: 18220WC20229502 FCC ID: 2AT6X-LITERADIO1 Page 9 of 76

### 2.7 Description of Test Facility

The test facility is recognized, certified, or accredited by the following organizations:

### FCC-Registration No.: 184111

Shenzhen Anbotek Compliance Laboratory Limited, EMC Laboratory has been registered and fully described in a report filed with the (FCC) Federal Communications Commission. The acceptance letter from the FCC is maintained in our files. Registration No. 184111.

### ISED-Registration No.: 8058A

Shenzhen Anbotek Compliance Laboratory Limited, EMC Laboratory has been registered and fully described in a report filed with the (ISED) Innovation, Science and Economic Development Canada. The acceptance letter from the ISED is maintained in our files. Registration 8058A.

### **Test Location**

Shenzhen Anbotek Compliance Laboratory Limited. 1/F, Building D, Sogood Science and Technology Park, Sanwei community, Hangcheng Street, Bao'an District, Shenzhen, Guangdong, China.518102

### Shenzhen Anbotek Compliance Laboratory Limited

Address:1/F.,Building D,Sogood Science and Technology Park, Sanwei Community, Hangcheng Street, Bao'an District, Shenzhen, Guangdong, China. Tel:(86) 0755–26066440 Fax:(86) 0755–26014772 Email:service@anbotek.com

### Code:AB-RF-05-b



Product Safety

Anbotek

Report No.: 18220WC20229502 FCC ID: 2AT6X-LITERADIO1 Page 10 of 76

# 3. Specific Absorption Rate (SAR)

### 3.1 Introduction

SAR is related to the rate at which energy is absorbed per unit mass in an object exposed to a radio field. The SAR distribution in a biological body is complicated and is usually carried out by experimental techniques or numerical modeling. The standard recommends limits for two tiers of groups, occupational/controlled and general population/uncontrolled, based on a person's control over his awareness and ability to exercise or her exposure. In general, general occupational/controlled exposure limits higher the limits are than for population/uncontrolled.

### 3.2 SAR Definition

The SAR definition is the time derivative (rate) of the incremental energy (dW) absorbed by (dissipated in) an incremental mass (dm) contained in a volume element (dv) of a given density ( $\rho$ ). The equation description is as below:

$$SAR = \frac{d}{dt} \left( \frac{dW}{dm} \right) = \frac{d}{dt} \left( \frac{dW}{\rho dv} \right)$$

SAR is expressed in units of Watts per kilogram (W/kg)

SAR measurement can be either related to the temperature elevation in tissue by

$$\mathbf{SAR} = \mathbf{C}\left(\frac{\mathbf{\delta T}}{\mathbf{\delta t}}\right)$$

Where: C is the specific head capacity,  $\delta T$  is the temperature rise and  $\delta$ tisthe exposure duration, or related to the electrical field in the tissue by

$$SAR = \frac{\sigma |E|^2}{\rho}$$

Where:  $\sigma$  is the conductivity of the tissue,  $\rho$  is the mass density of the tissue and E is the RMS electrical field strength.

However for evaluating SAR of low power transmitter, electrical field measurement is typically applied.

### Shenzhen Anbotek Compliance Laboratory Limited


Address:1/F.,Building D,Sogood Science and Technology Park, Sanwei Community, Hangcheng Street, Bao'an District, Shenzhen, Guangdong, China. Tel:(86) 0755–26066440 Fax:(86) 0755–26014772 Email:service@anbotek.com





Report No.: 18220WC20229502 FCC ID: 2AT6X-LITERADIO1 Page 11 of 76

# 4. SAR Measurement System

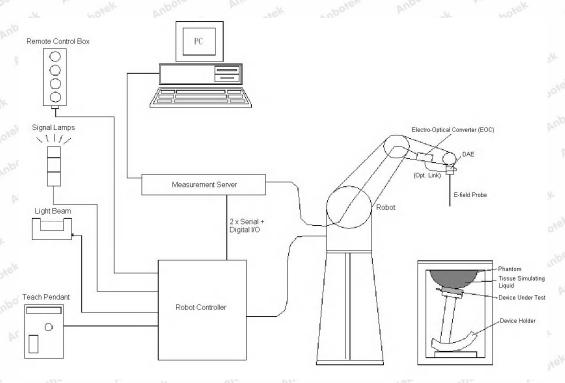

### **DASY System Configurations**

The DASY system for performance compliance tests is illustrated above graphically. This system consists of the following items:

- > A standard high precision 6-axis robot with controller, a teach pendant and software
- A data acquisition electronic (DAE) attached to the robot arm extension
- A dosimetric probe equipped with an optical surface detector system
  The electro entired exponenter (EQC) performs the exponential performance optical and the exponential entired exponential exponential entired exponential exponential exponential exponential exponential entired exponential expone
- The electro-optical converter (EOC) performs the conversion between optical and electrical signals
- A measurement server performs the time critical tasks such as signal filtering, control of the robot operation and fast movement interrupts.
- A probe alignment unit which improves the accuracy of the probe positioning
- A computer operating Windows XP
- DASY software
- Remove control with teach pendant and additional circuitry for robot safety such as warming lamps, etc.
- The SAM twin phantom
- A device holder
- Tissue simulating liquid

### Shenzhen Anbotek Compliance Laboratory Limited

Address:1/F.,Building D,Sogood Science and Technology Park, Sanwei Community, Hangcheng Street, Bao'an District, Shenzhen, Guangdong, China. Tel:(86) 0755–26066440 Fax:(86) 0755–26014772 Email:service@anbotek.com

### Code:AB-RF-05-b





#### Report No.: 18220WC20229502 FCC ID: 2AT6X-LITERADIO 'ade

Dipole for evaluating the proper functioning of the system

components are described in details in the following sub-sections.

### 4.1 E-Field Probe

The SAR measurement is conducted with the dosimetric probe (manufactured by SPEAG). The probe is specially designed and calibrated for use in liquid with high permittivity. The dosimetric probe has special calibration in liquid at different frequency. This probe has a built in optical surface detection system to prevent from collision with phantom.

<ex3dv4 probe<="" th=""><th>A stek unbois All</th><th>boten And</th></ex3dv4>	A stek unbois All	boten And
Construction	Symmetrical design with triangular core Built-in shielding against static charges PEEK enclosure material (resistant to organic solvents, e.g., DGBE)	tek 1
Frequency	10 MHz to 6 GHz; Linearity: ± 0.2 dB	blu,
Directivity	<ul> <li>± 0.3 dB in HSL (rotation around probe axis)</li> <li>± 0.5 dB in tissue material (rotation normal to probe axis)</li> </ul>	
Dynamic Range	10 $\mu$ W/g to 100 mW/g; Linearity: ± 0.2 dB (noise: typically < 1 $\mu$ W/g)	Photo of EX3DV4
Dimensions	Overall length: 330 mm (Tip: 20 mm) Tip diameter: 2.5 mm (Body: 12 mm) Typical distance from probe tip to dipole centers: 1 mm	Anbotek Anbotek Anbotek Anbotek

# E-Field Probe Specification

### **E-Field Probe Calibration**

Each probe needs to be calibrated according to a dosimetric assessment procedure with accuracy better than ± 10%. The spherical isotropy shall be evaluated and within ± 0.25dB. The sensitivity parameters (NormX, NormY, and NormZ), the diode compression parameter (DCP) and the conversion factor (ConvF) of the probe are tested. The calibration data can be referred to appendix C of this report.

### 4.2 Data Acquisition Electronics (DAE)

The data acquisition electronics (DAE) consists of a highly sensitive electrometer-grade preamplifier with auto-zeroing, a channel and gain-switching multiplexer, a fast 16 bit AD-converter and a command decoder and control logic unit. Transmission to the measurement server is

### Shenzhen Anbotek Compliance Laboratory Limited

Address:1/F., Building D, Sogood Science and Technology Park, Sanwei Community, Hangcheng Street, Bao'an District, Shenzhen, Guangdong, China. Tel:(86) 0755-26066440 Fax:(86) 0755-26014772 Email:service@

### Code:AB-RF-05-b 00-003-0500 www.anbotek.com.cr



### Report No.: 18220WC20229502 FCC ID: 2AT6X-LITERADIO1 Page 13 of 76

accomplished through an optical downlink for data and status information as well as an optical uplink for commands and the clock.

The input impedance of the DAE is 200MOhm; the inputs are symmetrical and floating. Common mode rejection is above 80dB.



Photo of DAE

### 4.3 Robot

The SPEAG DASY system uses the high precision robots (DASY5: TX60XL) type from Stäubli SA (France). For the 6-axis controller system, the robot controller version (DASY5: CS8c) from Stäubli is used. The Stäubli robot series have many features that are important for our application:

- High precision (repeatability ±0.035 mm)
- High reliability (industrial design)
- Jerk-free straight movements
- Low ELF interference (the closed metallic construction shields against motor control fields)



Photo of DASY5

### Shenzhen Anbotek Compliance Laboratory Limited

Address:1/F.,Building D,Sogood Science and Technology Park, Sanwei Community, Hangcheng Street, Bao'an District, Shenzhen, Guangdong, China. Tel:(86) 0755–26066440 Fax:(86) 0755–26014772 Email:service@anbotek.com



### Report No.: 18220WC20229502 FCC ID: 2AT6X-LITERADIO1 Page 14 of 76

### 4.4 Measurement Server

The measurement server is based on a PC/104 CPU board with CPU (DASY5: 400 MHz, Intel Celeron), chip disk (DASY5: 128 MB), RAM (DASY5: 128 MB). The necessary circuits for communication with the DAE electronic box, as well as the 16 bit AD converter system for optical detection and digital I/O interface are contained on the DASY I/O board, which is directly connected to the PC/104 bus of the CPU board.

The measurement server performs all the real-time data evaluation for field measurements and surface detection, controls robot movements and handles safety operations.



### Photo of Server for DASY5

### 4.5 Phantom

<SAM Twin Phantom>

Shell Thickness	2 ± 0.2 mm;
	Center ear point: 6 ± 0.2 mm
Filling Volume	Approx. 25 liters
Dimensions	Length: 1000 mm; Width: 500 mm; Height: adjustable feet
Measurement	Left Hand, Right Hand, Flat
Areas	Phantom photos and pho
	unborter Anti tek unbortek Ar

Photo of SAM Phantom

The bottom plate contains three pair of bolts for locking the device holder. The device holder positions are adjusted to the standard measurement positions in the three sections. A white cover is provided to tap the phantom during off-periods to prevent water evaporation and changes in the liquid parameters. On the phantom top, three reference markers are provided to identify the phantom position with respect to the robot.

### Shenzhen Anbotek Compliance Laboratory Limited

Address:1/F.,Building D,Sogood Science and Technology Park, Sanwei Community, Hangcheng Street, Bao'an District, Shenzhen, Guangdong, China. Tel:(86) 0755–26066440 Fax:(86) 0755–26014772 Email:service@anbotek.com

#### Code:AB-RF-05-b Hotline 400-003-0500

www.anbotek.com.cn



 Product Safety

 Report No.: 18220WC20229502
 FCC ID: 2AT6X-LITERADIO1

Page 15 of 76

### <ELI4 Phantom>

Anbotek

No. Alle	
Shell Thickness	2 ± 0.2 mm (sagging: <1%)
Filling Volume	Approx. 30 liters
Dimensions	Major ellipse axis: 600 mm
	Minor axis:400 mm
	or An bolek Anbolen Anu de e e e e e e
	inbore Ann botek Anboten Ano
	Anboten Anu stek subotek Anb
c.	Anbotek Anbo ok botek Ano
	Photo of ELI4 Phantom
	Ann atok subotek Anbo

The ELI4 phantom is intended for compliance testing of handheld and body-mounted wireless devices in the frequency range of 30 MHz to 6 GHz. ELI4 is fully compatible with standard and all known tissue simulating liquids.

### Shenzhen Anbotek Compliance Laboratory Limited

Address:1/F.,Building D,Sogood Science and Technology Park, Sanwei Community, Hangcheng Street, Bao'an District, Shenzhen, Guangdong, China. Tel:(86) 0755–26066440 Fax:(86) 0755–26014772 Email:service@anbotek.com

### Code:AB-RF-05-b



### Report No.: 18220WC20229502 FCC ID: 2AT6X-LITERADIO1 Page 16 of 76

### 4.6 Device Holder

Anbotek Product Safety

The SAR in the phantom is approximately inversely proportional to the square of the distance between the source and the liquid surface. For a source at 5 mm distance, a positioning uncertainty of  $\pm 0.5$ mm would produce a SAR uncertainty of  $\pm 20\%$ . Accurate device positioning is therefore crucial for accurate and repeatable measurements. The positions in which the devices must be measured are defined by the standards.

The DASY device holder is designed to cope with different positions given in the standard. It has two scales for the device rotation (with respect to the body axis) and the device inclination (with respect to the line between the ear reference points). The rotation center for both scales is the ear reference point (ERP). Thus the device needs no repositioning when changing the angles.

The DASY device holder is constructed of low-loss POM material having the following dielectric parameters: relative permittivity  $\varepsilon$  = 3 and loss tangent  $\delta$  = 0.02. The amount of dielectric material has been reduced in the closest vicinity of the device, since measurements have suggested that the influence of the clamp on the test results could thus be lowered.



### Anboic Aurotek Anboic

### Shenzhen Anbotek Compliance Laboratory Limited

Address:1/F.,Building D,Sogood Science and Technology Park, Sanwei Community, Hangcheng Street, Bao'an District, Shenzhen, Guangdong, China. Tel:(86) 0755–26066440 Fax:(86) 0755–26014772 Email:service@anbotek.com

### Code:AB-RF-05-b



### Report No.: 18220WC20229502

FCC ID: 2AT6X-LITERADIO1 Page 17 of 76

### 4.7 Data Storage and Evaluation

Data Storage

The DASY software stores the assessed data from the data acquisition electronics as raw data (in microvolt readings from the probe sensors), together with all the necessary software parameters for the data evaluation (probe calibration data, liquid parameters and device frequency and modulation data) in measurement files. The post-processing software evaluates the desired unit and format for output each time the data is visualized or exported. This allows verification of the complete software setup even after the measurement and allows correction of erroneous parameter settings. For example, if a measurement has been performed with an incorrect crest factor parameter in the device setup, the parameter can be corrected afterwards and the data can be reevaluated.

The measured data can be visualized or exported in different units or formats, depending on the selected probe type (e.g., [V/m], [A/m], [mW/g]). Some of these units are not available in certain situations or give meaningless results, e.g., a SAR-output in a non-lose media, will always be zero. Raw data can also be exported to perform the evaluation with other software packages.

### Data Evaluation

The DASY post-processing software (SEMCAD) automatically executes the following procedures to calculate the field units from the microvolt readings at the probe connector. The parameters used in the evaluation are stored in the configuration modules of the software:

Probe parameters:	- Sensitivity	Normi, ai0, ai1, ai2
	- Conversion factor	ConvFi
	- Diode compression point	dcpi
Device parameters:	- Frequency	foot put notek
	- Crest factor	cf
Media parameters:	- Conductivity	O Anbotek Anbo
	- Density	P shotek Ant

These parameters must be set correctly in the software. They can be found in the component documents or they can be imported into the software from the configuration files issued for the DASY components. In the direct measuring mode of the multi-meter option, the parameters of the actual system setup are used. In the scan visualization and export modes, the parameters stored in the corresponding document files are used.

The first step of the evaluation is a linearization of the filtered input signal to account for the compression characteristics of the detector diode. The compensation depends on the input signal, the diode type and the DC-transmission factor from the diode to the evaluation electronics. If the exciting field is pulsed, the crest factor of the signal must be known to correctly compensate for peak power.

### Shenzhen Anbotek Compliance Laboratory Limited

Address:1/F.,Building D,Sogood Science and Technology Park, Sanwei Community, Hangcheng Street, Bao'an District, Shenzhen, Guangdong, China. Tel:(86) 0755–26066440 Fax:(86) 0755–26014772 Email:service@anbotek.com Code:AB-RF-05-b

www.anbotek.com.cn

400-003-0500





The formula for each channel can be given as:

$$\mathbf{V}_{i} = \mathbf{U}_{i} + \mathbf{U}_{i}^{2} \cdot \frac{\mathbf{cf}}{\mathbf{dcp}_{i}}$$

with  $V_i$ = compensated signal of channel i, (i = x, y, z)

 $U_i$  = input signal of channel i, (i = x, y, z)

cf = crest factor of exciting field (DASY parameter)

dcp<sub>i</sub> = diode compression point (DASY parameter)

From the compensated input signals, the primary field data for each channel can be evaluated:

E-field Probes:  $E_i = \sqrt{\frac{V_i}{Norm_i \cdot ConvF}}$ 

Anbotek

H-field Probes:  $H_i = \sqrt{V_i} \cdot \frac{a_{i0} + a_{i1}f + a_{i2}f^2}{r}$ 

with  $V_i$  = compensated signal of channel i,(i = x, y, z)

Norm<sub>i</sub>= sensor sensitivity of channel i, (i = x, y, z),  $\mu V/(V/m)^2$  for E-field Probes

ConvF= sensitivity enhancement in solution

aij= sensor sensitivity factors for H-field probes

f = carrier frequency [GHz]

E<sub>i</sub>= electric field strength of channel i in V/m

H<sub>i</sub>= magnetic field strength of channel i in A/m

The RSS value of the field components gives the total field strength (Hermitian magnitude):

$$\mathbf{E_{tot}} = \sqrt{\mathbf{E_x^2 + E_y^2 + E_z^2}}$$

The primary field data are used to calculate the derived field units.

$$SAR = E_{tot}^2 \cdot \frac{\sigma}{\rho \cdot 1000}$$

with SAR = local specific absorption rate in mW/g

 $E_{tot}$ = total field strength in V/m

 $\sigma$  = conductivity in [mho/m] or [Siemens/m]

 $\rho$  = equivalent tissue density in g/cm<sup>3</sup>

Note that the density is set to 1, to account for actual head tissue density rather than the density of the tissue simulating liquid.

### Shenzhen Anbotek Compliance Laboratory Limited

Address:1/F.,Building D,Sogood Science and Technology Park, Sanwei Community, Hangcheng Street, Bao'an District, Shenzhen, Guangdong, China. Tel:(86) 0755–26066440 Fax:(86) 0755–26014772 Email:service@anbotek.com

### Code:AB-RF-05-b



### Report No.: 18220WC20229502

## 5. Test Equipment List

Manufacturer	Nome of Equipment	Turne/Medial		Calib	ration
Manufacturer	Name of Equipment	Type/Model	Serial Number	Last Cal.	Due Date
SPEAG	2450MHz System Validation Kit	D2450V2	910	Jun. 15,2021	Jun. 14,2024
SPEAG	Data Acquisition Electronics	DAE4	387	Sept.06,2022	Sept.05,2023
SPEAG	Dosimetric E-Field Probe	EX3DV4	7396	May 06,2022	May 05,2023
Agilent	ENA Series Network Analyzer	E5071C	MY46317418	Oct.26, 2022	Oct.25, 2023
SPEAG	DAK	DAK-3.5	1226	NCR	NCR
SPEAG	ELI Phantom	QDOVA004AA	2058	NCR	NCR
AR	Amplifier	ZHL-42W	QA1118004	NCR	NCR
Agilent	Power Meter	N1914A	MY50001102	Oct.26, 2022	Oct.25, 2023
Agilent	Power Sensor	N8481H	MY51240001	Oct.26, 2022	Oct.25, 2023
R&S	Spectrum Analyzer	N9020A	MY51170037	Oct.26, 2022	Oct.25, 2023
Agilent	Signal Generation	N5182A	MY48180656	Oct.26, 2022	Oct.25, 2023
Worken	Directional Coupler	0110A05601O-10	COM5BNW1A2	Oct.26, 2022	Oct.25, 2023

#### Note:

1.

The calibration certificate of DASY can be referred to appendix C of this report.

- 2. The dipole calibration interval can be extended to 3 years with justification. The dipoles are also not physically damaged, or repaired during the interval.
- The Insertion Loss calibration of Dual Directional Coupler and Attenuator were characterized via the network analyzer and compensated during system check.
- 4. The dielectric probe kit was calibrated via the network analyzer, with the specified procedure (calibrated in pure water) and calibration kit (standard) short circuit, before the dielectric measurement. The specific procedure and calibration kit are provided by Agilent.
  - In system check we need to monitor the level on the power meter, and adjust the power amplifier level to have precise power level to the dipole; the measured SAR will be normalized to 1W input power according to the ratio of 1W to the input power to the dipole. For system check, the calibration of the power amplifier is deemed not critically required for correct measurement; the power meter is critical and we do have calibration for it

#### Shenzhen Anbotek Compliance Laboratory Limited

Address:1/F.,Building D,Sogood Science and Technology Park, Sanwei Community, Hangcheng Street, Bao'an District, Shenzhen, Guangdong, China. Tel:(86) 0755–26066440 Fax:(86) 0755–26014772 Email:service@anbotek.com Code:AB-RF-05-b Hotline 400-003-0500 www.anbotek.com.cn

2ade



Report No.: 18220WC20229502 FCC ID: 2AT6X-LITERADIO1 F

Page 20 of 76

# 6. Tissue Simulating Liquids

For the measurement of the field distribution inside the SAM phantom with DASY, the phantom must be filled with around 25 liters of homogeneous body tissue simulating liquid. For head SAR testing, the liquid height from the ear reference point (ERP) of the phantom to the liquid top surface is larger than 15 cm, which is shown in Fig. 6.1. For body SAR testing, the liquid height from the center of the flat phantom to the liquid top surface is larger than 15 cm, which is shown as followed:



### Photo of Liquid Height for Body SAR

The following table gives the recipes for tissue simulating liquid.

Frequency (MHz)	Water (%)	Sugar (%)	Cellulose (%)	Salt (%)	Prevento I (%)	DGBE (%)	Conductivity (σ)	Permittivity (εr)
				For Boo	dy			
2450	68.6	Anboin O	An O otek	Quipote	31.4	oter 0	1.95	52.7

### Shenzhen Anbotek Compliance Laboratory Limited

Address:1/F.,Building D,Sogood Science and Technology Park, Sanwei Community, Hangcheng Street, Bao'an District, Shenzhen, Guangdong, China. Tel:(86) 0755–26066440 Fax:(86) 0755–26014772 Email:service@anbotek.com



# Report No.: 18220WC20229502FCC ID: 2AT6X-LITERADIO1Page 21 of 76The following table shows the measuring results for simulating liquid.

	Measured	Target Tissue			Measure	Liquid			
Tissue Type	•	٤r	σ	٤r	Dev. (%)	σ	Dev. (%)	Liquid Temp.(℃ )	Test Date
2450MSL	2450	52.7	1.95	51.68	-1.935	1.96	0.513	22.1	11/17/2022

### Shenzhen Anbotek Compliance Laboratory Limited

Address:1/F.,Building D,Sogood Science and Technology Park, Sanwei Community, Hangcheng Street, Bao'an District, Shenzhen, Guangdong, China. Tel:(86) 0755–26066440 Fax:(86) 0755–26014772 Email:service@anbotek.com

### Code:AB-RF-05-b



Product Safety

Anbotek

#### Report No.: 18220WC20229502

FCC ID: 2AT6X-LITERADIO1 Page 22 of 76

### 7. System Verification Procedures


Each DASY system is equipped with one or more system validation kits. These units, together with the predefined measurement procedures within the DASY software, enable the user to conduct the system performance check and system validation. System validation kit includes a dipole, tripod holder to fix it underneath the flat phantom and a corresponding distance holder.

### Purpose of System Performance check

The system performance check verifies that the system operates within its specifications. System and operator errors can be detected and corrected. It is recommended that the system performance check be performed prior to any usage of the system in order to guarantee reproducible results. The system performance check uses normal SAR measurements in a simplified setup with a well characterized source. This setup was selected to give a high sensitivity to all parameters that might fail or vary over time. The system check does not intend to replace the calibration of the components, but indicates situations where the system uncertainty is exceeded due to drift or failure.

### System Setup

In the simplified setup for system evaluation, the EUT is replaced by a calibrated dipole and the power source is replaced by a continuous wave that comes from a signal generator. The calibrated dipole must be placed beneath the flat phantom section of the SAM twin phantom with the correct distance holder. The distance holder should touch the phantom surface with a light pressure at the reference marking and be oriented parallel to the long side of the phantom. The equipment setup is shown below:

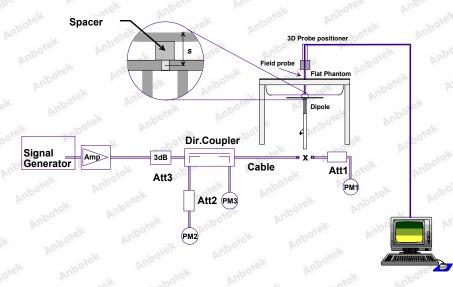

### System Setup for System Evaluation

### Shenzhen Anbotek Compliance Laboratory Limited

Address:1/F.,Building D,Sogood Science and Technology Park, Sanwei Community, Hangcheng Street, Bao'an District, Shenzhen, Guangdong, China. Tel:(86) 0755–26066440 Fax:(86) 0755–26014772 Email:service@anbotek.com

# Code:AB-RF-05-b





### Report No.: 18220WC20229502 FCC ID: 2AT6X-LITERADIO1 Page 23 of 76



### Photo of Dipole Setup

### Validation Results

Comparing to the original SAR value provided by SPEAG, the verification data should be within its specification of 10%. The table below shows the target SAR and measured SAR after normalized to 1W input power. It indicates that the system performance check can meet the variation criterion and the plots can be referred to Appendix A of this report.

Frequenc y (MHz)	Liquid Type	Power fed onto reference dipole (mW)	Targeted SAR (W/kg)	Measured SAR (W/kg)	Normalized SAR (W/kg)	Deviatio n (%)	Test Date
2450	Body	250	51.8	12.85	51.40	-0.772	11/17/2022

Target and Measurement SAR after Normalized

### Shenzhen Anbotek Compliance Laboratory Limited

Address:1/F.,Building D,Sogood Science and Technology Park, Sanwei Community, Hangcheng Street, Bao'an District, Shenzhen, Guangdong, China. Tel:(86) 0755–26066440 Fax:(86) 0755–26014772 Email:service@anbotek.com



Report No.: 18220WC20229502 FCC ID: 2AT6X-LITERADIO1 Page 24 of 76

## 8. EUT Testing Position

### 8.1 Body Worn Position

Body-worn operating configurations are tested with the belt-clips and holsters attached to the device and positioned against a flat phantom in a normal use configuration. Per KDB 648474 D04, body-worn accessory exposure is typically related to voice mode operations when handsets are carried in body-worn accessories. The body-worn accessory procedures in FCC KDB 447498 D01 v06, 2015 should be used to test for body-worn accessory SAR compliance, without a headset connected to it. This enables the test results for such configuration to be compatible with that required for hotspot mode when the body-worn accessory test separation distance is greater than or equal to that required for hotspot mode, when applicable. When the reported SAR for body-worn accessory, measured without a headset connected to the handset is < 1.2 W/kg, the highest reported SAR configuration for that wireless mode and frequency band should be repeated for that body-worn accessory with a handset attached to the handset.

Accessories for body-worn operation configurations are divided into two categories: those that do not contain metallic components and those that do contain metallic components and those that do contain metallic components. When multiple accessories that do not contain metallic components are supplied with the device, the device is tested with only the accessory that dictates the closest spacing to the body. Then multiple accessories that contain metallic components are test with the device with each accessory. If multiple accessories share an identical metallic component (i.e. the same metallic belt-chip used with different holsters with no other metallic components) only the accessory that dictates the closest spacing to the body is tested.

molnend tely

### **Body Worn Position**

### Shenzhen Anbotek Compliance Laboratory Limited

mother phantom

Address:1/F.,Building D,Sogood Science and Technology Park, Sanwei Community, Hangcheng Street, Bao'an District, Shenzhen, Guangdong, China. Tel:(86) 0755–26066440 Fax:(86) 0755–26014772 Email:service@anbotek.com

#### Code:AB-RF-05-b Hotline 400-003-0500

www.anbotek.com.cn



Report No.: 18220WC20229502 FCC ID: 2AT6X-LITERADIO1 Page 25 of 76

### 9. Measurement Procedures

Anbotek Product Safety

The measurement procedures are as follows:

- (a) Use base station simulator (if applicable) or engineering software to transmit RF power continuously (continuous Tx) in the middle channel.
- (b) Keep EUT to radiate maximum output power or 100% duty factor (if applicable)
- (c) Measure output power through RF cable and power meter.
- (d) Place the EUT in the positions as setup photos demonstrates.
- (e) Set scan area, grid size and other setting on the DASY software.
- (f) Measure SAR transmitting at the middle channel for all applicable exposure positions.
- (g) Identify the exposure position and device configuration resulting the highest SAR
- (h) Measure SAR at the lowest and highest channels at the worst exposure position and device configuration if applicable.

According to the test standard, the recommended procedure for assessing the peak spatial-average SAR value consists of the following steps:

- (a) Power reference measurement
- (b) Area scan
- (c) Zoom scan
- (d) Power drift measurement

### 9.1 Spatial Peak SAR Evaluation

The procedure for spatial peak SAR evaluation has been implemented according to the test standard. It can be conducted for 1g and 10g, as well as for user-specific masses. The DASY software includes all numerical procedures necessary to evaluate the spatial peak SAR value.

The base for the evaluation is a "cube" measurement. The measured volume must include the 1g and 10g cubes with the highest averaged SAR values. For that purpose, the center of the measured volume is aligned to the interpolated peak SAR value of a previously performed area scan.

The entire evaluation of the spatial peak values is performed within the post-processing engine (SEMCAD). The system always gives the maximum values for the 1g and 10g cubes. The algorithm to find the cube with highest averaged SAR is divided into the following stages:

- (a) Extraction of the measured data (grid and values) from the Zoom Scan
- (b) Calculation of the SAR value at every measurement point based on all stored data (A/D values and measurement parameters)
- (c) Generation of a high-resolution mesh within the measured volume
- (d) Interpolation of all measured values form the measurement grid to the high-resolution grid

### Shenzhen Anbotek Compliance Laboratory Limited

Address:1/F.,Building D,Sogood Science and Technology Park, Sanwei Community, Hangcheng Street, Bao'an District, Shenzhen, Guangdong, China. Tel:(86) 0755–26066440 Fax:(86) 0755–26014772 Email:service@anbotek.com

### Code:AB-RF-05-b



#### Report No.: 18220WC20229502 FCC ID: 2AT6X-LITERADIO1 Page 26 of 76

- (e) Extrapolation of the entire 3-D field distribution to the phantom surface over the distance from sensor to surface
- Calculation of the averaged SAR within masses of 1g and 10g

### 9.2 Power Reference Measurement

The Power Reference Measurement and Power Drift Measurements are for monitoring the power drift of the device under test in the batch process. The minimum distance of probe sensors to surface determines the closest measurement point to phantom surface. This distance cannot be smaller than the distance of sensor calibration points to probe tip as defined in the probe properties.

### 9.3 Area Scan Procedures

The area scan is used as a fast scan in two dimensions to find the area of high field values, before doing a fine measurement around the hot spot. The sophisticated interpolation routines implemented in DASY software can find the maximum found in the scanned area, within a range of the global maximum. The range (in dB0 is specified in the standards for compliance testing. For example, a 2 dB range is required in IEEE standard 1528 and IEC 62209 standards, whereby 3 dB is a requirement when compliance is assessed in accordance with the ARIB standard (Japan), if only one zoom scan follows the area scan, then only the absolute maximum will be taken as reference. For cases where multiple maximums are detected, the number of zoom scans has to be increased accordingly.

Area scan parameters extracted from FCC KDB 865664 D01 SAR measurement 100 MHz to 6 GHz.

	$\leq$ 3 GHz	> 3 GHz
Maximum distance from closest measurement point (geometric center of probe sensors) to phantom surface	$5 \pm 1 \text{ mm}$	$\frac{1}{2} \cdot \delta \cdot \ln(2) \pm 0.5 \text{ mm}$
Maximum probe angle from probe axis to phantom surface normal at the measurement location	$30^{\circ} \pm 1^{\circ}$	$20^{\circ} \pm 1^{\circ}$
	$\leq$ 2 GHz: $\leq$ 15 mm 2 - 3 GHz: $\leq$ 12 mm	$3 - 4 \text{ GHz:} \le 12 \text{ mm}$ $4 - 6 \text{ GHz:} \le 10 \text{ mm}$
Maximum area scan spatial resolution: $\Delta x_{Area}$ , $\Delta y_{Area}$	When the x or y dimension of measurement plane orientation the measurement resolution of x or y dimension of the test of measurement point on the test	on, is smaller than the above, must be $\leq$ the corresponding levice with at least one

### Shenzhen Anbotek Compliance Laboratory Limited

Address:1/F.,Building D,Sogood Science and Technology Park, Sanwei Community, Hangcheng Street, Bao'an District, Shenzhen, Guangdong, China. Tel:(86) 0755-26066440 Fax:(86) 0755-26014772 Email:service@anbotek.com



### Report No.: 18220WC20229502

### CC ID: 2AT6X-LITERADIO1 Page 27

ot

9.4 Zoom Scan Procedures

Zoom scans are used assess the peak spatial SAR values within a cubic averaging volume containing 1 gram and 10gram of simulated tissue. The zoom scan measures points (refer to table below) within a cube shoes base faces are centered on the maxima found in a preceding area scan job within the same procedure. When the measurement is done, the zoom scan evaluates the averaged SAR for 1 gram and 10 gram and displays these values next to the job's label. Zoom scan parameters extracted from FCC KDB 865664 D01 SAR measurement 100 MHz to 6 GHz.

L L .					
			$\leq$ 3 GHz	> 3 GHz	
	~ 0 <sup>00</sup>	dec.	wole Ann	Her Nupo.	
Maximum zoom scan s	spatial reso	plution: $\Delta x_{Zoom}$ , $\Delta y_{Zoom}$	$\leq 2$ GHz: $\leq 8$ mm 2 - 3 GHz: $\leq 5$ mm <sup>*</sup>	$3 - 4 \text{ GHz:} \le 5 \text{ mm}^*$ $4 - 6 \text{ GHz:} \le 4 \text{ mm}^*$	
	uniform	grid: ∆z <sub>Zoom</sub> (n)	$\leq$ 5 mm	3 – 4 GHz: ≤ 4 mm 4 – 5 GHz: ≤ 3 mm 5 – 6 GHz: ≤ 2 mm	
Maximum zoom scan spatial resolution, normal to phantom surface	graded	$\Delta z_{Zoom}(1)$ : between 1 <sup>st</sup> two points closest to phantom surface	$\leq$ 4 mm	3 – 4 GHz: ≤3 mm 4 – 5 GHz; ≤2.5 mm 5 – 6 GHz; ≤2 mm	
	grid	∆z <sub>Zoom</sub> (n>1): between subsequent points	$\leq 1.5 \cdot \Delta$	z <sub>Zoom</sub> (n-1)	
Minimum zoom scan volume	x, y, z		$\geq$ 30 mm	3 – 4 GHz: ≥ 28 mm 4 – 5 GHz: ≥ 25 mm 5 – 6 GHz: ≥ 22 mm	

Note: δ is the penetration depth of a plane-wave at normal incidence to the tissue medium: see draft standard IEEE P1528-2011 for details.

When zoom scan is required and the <u>reported</u> SAR from the area scan based 1-g SAR estimation procedures of KDB 447498 is  $\leq 1.4$  W/kg,  $\leq 8$  mm,  $\leq 7$  mm and  $\leq 5$  mm zoom scan resolution may be applied, respectively, for 2 GHz to 3 GHz, 3 GHz to 4 GHz and 4 GHz to 6 GHz.

### Shenzhen Anbotek Compliance Laboratory Limited

Address:1/F.,Building D,Sogood Science and Technology Park, Sanwei Community, Hangcheng Street, Bao'an District, Shenzhen, Guangdong, China. Tel:(86) 0755–26066440 Fax:(86) 0755–26014772 Email:service@anbotek.com



#### Report No.: 18220WC20229502

FCC ID: 2AT6X-LITERADIO1

Page 28 of 76

### 9.5 Volume Scan Procedures

The volume scan is used for assess overlapping SAR distributions for antennas transmitting in different frequency bands. It is equivalent to an oversized zoom scan used in standalone measurements. The measurement volume will be used to enclose all the simultaneous transmitting antennas. For antennas transmitting simultaneously in different frequency bands, the volume scan is measured separately in each frequency band. In order to sum correctly to compute the 1g aggregate SAR, the EUT remain in the same test position for all measurements and all volume scan use the same spatial resolution and grid spacing. When all volume scan were completed, the software, SEMCAD postprocessor can combine and subsequently superpose these measurement data to calculating the multiband SAR.

### 9.6 Power Drift Monitoring

All SAR testing is under the EUT install full charged battery and transmit maximum output power. In DASY measurement software, the power reference measurement and power drift measurement procedures are used for monitoring the power drift of EUT during SAR test. Both these procedures measure the field at a specified reference position before and after the SAR testing. The software will calculate the field difference in dB. If the power drift more than 5%, the SAR will be retested.

#### Shenzhen Anbotek Compliance Laboratory Limited

Address:1/F.,Building D,Sogood Science and Technology Park, Sanwei Community, Hangcheng Street, Bao'an District, Shenzhen, Guangdong, China. Tel:(86) 0755–26066440 Fax:(86) 0755–26014772 Email:service@anbotek.com

### Code:AB-RF-05-b



Report No.: 18220WC20229502 FCC ID: 2AT6X-LITERADIO1 Page 29 of 76

### 10. Conducted Power

### <2.4GHz Conducted Power>

Test Mode	Channel	Frequency (MHz)	Peak Output Power (dBm)	Average Output Power (dBm)	Tune-Up Limit(dBm)
	001	2404	19.06	17.02	17.50
2.4G	118	2439.1	18.95	16.35	17.50
	235	2474.2	18.84	16.33	17.50

Note:

1. Per KDB 447498 D01 v06, the test distance less than 5mm

### Shenzhen Anbotek Compliance Laboratory Limited

Address:1/F.,Building D,Sogood Science and Technology Park, Sanwei Community, Hangcheng Street, Bao'an District, Shenzhen, Guangdong, China. Tel:(86) 0755–26066440 Fax:(86) 0755–26014772 Email:service@anbotek.com


### Code:AB-RF-05-b



An 00 **Product Safety** Report No.: 18220WC20229502

Page 30 of 76 FCC ID: 2AT6X-LITERADIO1

#### 11. **Antenna Location**

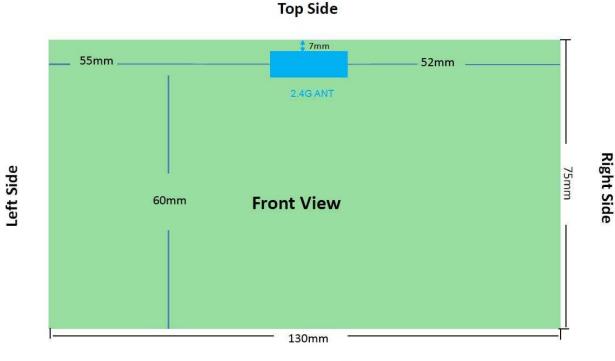

### **Bottom Side**

**EUT BACK VIEW** 

	Distance of The Antenna to the EUT surface and edge										
Antennas	Front	Back	Top Side	Bottom Side	Left Side	Right Side					
2.4G ANT	<25mm	<25mm	<25mm	>25mm	>25mm	>25mm					
- Mar	Pole Prov	A.	water and	Mar 19	both	prov v					

### Shenzhen Anbotek Compliance Laboratory Limited

Address:1/F., Building D, Sogood Science and Technology Park, Sanwei Community, Hangcheng Street, Bao'an District, Shenzhen, Guangdong, China. Tel:(86) 0755-26066440 Fax:(86) 0755-26014772 Email:service@anbotek.com

### Code:AB-RF-05-b Hotline

400-003-0500 www.anbotek.com.cn





## 12. SAR Test Results Summary

General Note:

- 1. Per KDB 447498 D01 v06, the reported SAR is the measured SAR value adjusted for maximum tune-up tolerance.
  - Scaling Factor = tune-up limit power (mW) / EUT RF power (mW), where tune-up limit is the maximum rated power among all production units.
- Reported SAR(W/kg)= Measured SAR(W/kg)\* Scaling Factor 2. Per KDB 447498 D01 v06, for each exposure position, if the highest output channel reported SAR≤0.8W/kg, other channels SAR testing are not necessary

### <WIFI 2.4GHz>

						Freq.	Averag	Tune-U	Scalin	Powe	Measure	Reporte
Plot No.	Band	Mode	Test Position	Gap (cm)	Ch.	(MHz )	e Power (dBm)	p Limit (dBm)	g Factor	r Drift	d SAR <sub>1g</sub> (W/kg)	d SAR <sub>19</sub> (W/kg)
	2.4GHz	GFSK	Back	0	1	2404	17.02	17.50	1.117	0.05	0.143	0.160
ove <sup>k</sup>	2.4GHz	GFSK	Front	0	Puto.	2404	17.02	17.50	1.117	-0.08	0.267	0.298
-otek	2.4GHz	GFSK	Right	0	1.0	2404	17.02	17.50	1.117	N/A	N/A	N/A
0.0	2.4GHz	GFSK	Left	0	1	2404	17.02	17.50	1.117	N/A	N/A	N/A
#1	2.4GHz	GFSK	Тор	0	≪ 1	2404	17.02	17.50	1.117	0.06	0.403	0.450
24	2.4GHz	GFSK	Bottom	0	1	2404	17.02	17.50	1.117	N/A	N/A	N/A

### Shenzhen Anbotek Compliance Laboratory Limited

Address:1/F.,Building D,Sogood Science and Technology Park, Sanwei Community, Hangcheng Street, Bao'an District, Shenzhen, Guangdong, China. Tel:(86) 0755–26066440 Fax:(86) 0755–26014772 Email:service@anbotek.com

### Code:AB-RF-05-b





Report No.: 18220WC20229502 FCC ID: 2AT6X-LITERADIO1 Page 32 of 76

# 13. Measurement Uncertainty

And	otek	nbo'	Pet	6	bore	P	mp.	Notek	N000.
NO	Source	Uncert. ai (%)	Prob. Dist.	Div. k	ci (1g)	ci (10g)	Stand.U ncert. ui (1g)	Stand.U ncert. ui (10g)	Veff
Anbotel	Repeat	0. 4	Nex		o <sup>tek</sup> 1	P1 <sup>bc</sup>	0. 4	0. 4	9 <sup>botek</sup>
Pupp	hotek Anbotek A	nbote.	Instru	ument	Anbotek	P.	hotek	Anbotek	Anbore
2	Probe calibration	Anbor 7, otek	Nanbo	2	Anbot	te <sup>N1</sup>	3.5	3.5 <sup>10019</sup>	∞ Ant
otek	Anbotek Anbote	Deer	rek pr	poten	P.M	pu sotek	1.9	ak Ant	other
3 obotek	Axial isotropy	4.7 M	ibotel R	√3	0.7	0.7	1.9	o <sup>1</sup> e <sup>1</sup> .9	unbo'
Anbo	ek Anboten Anbo	botek	Anbotek	Pup	otek	Par	potek	Aupoter	Anote
4	Hemispherical isotropy	9.4	Rotek	√3	0.7	0.7	3.9	3.9	8
5	Boundary effect	1.0 <sup>botek</sup>	R <sup>Anbot</sup>	√3	Ant	otek 1	0.6	0.6	otek o p
6	Linearity	4.7 M	potek R	√3	he <sup>k</sup> 1	Anbo	2.7	2.7	Anb tek
Anboi 7	Detection limits	1.0	Anbu ArRotek	√3	hotek 1e	Ant K 1	0.6	0.6	Anboten ∞
8	Readout electronics	0.3	Nabot	1	Ano 1	ote <sup>V</sup> 1	0.3	0.3	net ∞ N
9	Response time	0.8 0.8	otek R	√3	1	nbotek 1	0.5 mb	ote <sup>k</sup> 0.5 A	botek sek
10	Integration time	2.6	Anbotek Riek	√3 <u></u>	potek	Ant 1Ant	1.5	1.5 <sup>k</sup>	Anbo. Asbotek
11	Ambient noise	3.0	Ribote	√3	Anbotel	iek1	1.7	1.7	Anbo ek ∞
12	Ambient reflections	3.0	ote <sup>k</sup> R p	√3	1 <sup>A'</sup>	ibotek 1 botek	Anbore 1.7 <sub>Anb</sub> c	helk 1.7 Ar	botek ®k
13	Probe positioner mech. restrictions	0.4	nbotek Rek	√3	po <sup>tek</sup> 1	Ant	0.2	0.2	Anbo. Ar∞otek
Anb	Probe positioning with	Anbotek	Anbotek	Kelk_	Anbotok	lek P	Anbotek	Anbotek	anbot ak An
14	respect to phantom	2.9	R Anb <sup>c</sup>	√3	1 pr	pot <b>r</b>	1.7 <sup>otek</sup>	1.7	otek ®

### Shenzhen Anbotek Compliance Laboratory Limited

Address: 1/F., Building D, Sogood Science and Technology Park, Sanwei Community, Hangcheng Street, Bao'an District, Shenzhen, Guangdong, China. Tel: (86) 0755–26066440 Fax: (86) 0755–26014772 Email:service@anbotek.com Code:AB-RF-05-b

400-003-0500

www.anbotek.com.cn





eport	No.: 18220WC2022950	2	FCC ID:	2AT6>	<b>K-LITERADIC</b>	D1 hotel	Page 33	of 76
-oK	shell	Anos	otek .	nbotek	Anbore	An.	tek Ar	poten
001- vel		Ant Ant	wotek	Anbote	k Aupor	rek pin	botek	Anboten
Aupo.	wek nbotek Ant	p*0. 1	int hotek	- dou	otek Anb	o. p	abotek	Anbote
Aup		nbote	Anu		nbotek P	nbo	A. abotek	Anb
15	Max.SAR evaluation	1.0	R	√3	1 John Mark	0.6	0.6	o⊁ ∞

Anbotel			Test samp	ole rel	ated				
16	Device positioning	3.8	Anbone Anbonek	1	unbotek 1	e¥ 1	3.8	3.8	99
17	Device holder	5.1	NAnbo	pot16	1 AL	potek 1 stek	5.1	5.1 Ant	o <sup>tek</sup> 5
18	Drift of output power	5.0 ×	R	√ <u>3</u>	ote <sup>k</sup> 1	Anbu	2.9	2.9	hint constant
Aupo		boten	Phantom a	and se	et-up				
19	Phantom uncertainty	4.0 vek	Runbot	√3	Anbot 1	otel	2.3	2.3	tek o
20	Liquid conductivity (target)	5.0 Art	oo <sup>tek</sup> R	√3	0.64	0.43	1.8 M	1.2	nbolek ©
21	Liquid conductivity (meas)	2.5	Anbotek	Anb <sup>1</sup>	0.64	0.43	1.6	1.2	×
22	Liquid Permittivity (target)	5.0	Anbote pk R Anb	√3	0.6	0.49	1.7	1.5	œ
23	Liquid Permittivity (meas)	2.5	notek N	Anbotek	0.6	0.49	1.5	1.2	×
Anbur	Combined standard	anbotek	RSS	U <sub>c</sub>	$=\sqrt{\sum_{i=1}^{n}C}$	$U_i^2 U_i^2$	11.4%	11.3%	236
unce	Expanded ertainty(P=95%)	Anbotek	Anbo	ן = גנ c	/ ,k=	otek 2 nb <sup>otek</sup>	22.8%	22.6%	lek Ar

### Shenzhen Anbotek Compliance Laboratory Limited

Address:1/F.,Building D,Sogood Science and Technology Park, Sanwei Community, Hangcheng Street, Bao'an District, Shenzhen, Guangdong, China. Tel:(86) 0755–26066440 Fax:(86) 0755–26014772 Email:service@anbotek.com

#### Code:AB-RF-05-b Hotline 400-003-0500

www.anbotek.com.cn





# Appendix A. EUT Photos and Test Setup Photos



### Shenzhen Anbotek Compliance Laboratory Limited

Address:1/F.,Building D,Sogood Science and Technology Park, Sanwei Community, Hangcheng Street, Bao'an District, Shenzhen, Guangdong, China. Tel:(86) 0755–26066440 Fax:(86) 0755–26014772 Email:service@anbotek.com

### Code:AB-RF-05-b





Report No.: 18220WC20229502

Appendix B. Plots of SAR System Check

### 2450MHz Body System Check

Date:11/17/2022

Communication System: UID 0, CW; Frequency: 2450 MHz;Duty Cycle: 1:1 Medium parameters used: f = 2450 MHz;  $\sigma$  = 1.96 S/m;  $\epsilon_r$  = 51.68;  $\rho$  = 1000 kg/m<sup>3</sup> Phantom section: Flat Section

DASY5 Configuration:

- Probe: EX3DV4 SN7396; ConvF(7.53, 7.53, 7.53); Calibrated: May 06, 2022;
- Sensor-Surface: 2mm (Mechanical Surface Detection)
- Electronics: DAE4 Sn387; Calibrated: Sep. 06, 2022
- Phantom: SAM; Type: QD000P40CD; Serial: TP:1670
- Measurement SW: DASY52, Version 52.8 (2); SEMCAD X Version 14.6.10 (7164)

**Configuration/Pin=250mW/Area Scan (81x81x1):** Interpolated grid: dx=1.200 mm, dy=1.200 mm Maximum value of SAR (interpolated) = 20.5 W/kg

**Configuration/Pin=250mW/Zoom Scan (7x7x7)/Cube 0:** Measurement grid: dx=5mm, dy=5mm, dz=5mm


JZ-511111

Reference Value = 88.563 V/m; Power Drift = 0.05 dB

Peak SAR (extrapolated) = 26.6 W/kg

SAR(1 g) = 12.85 W/kg; SAR(10 g) = 5.88W/kg

Maximum value of SAR (measured) = 20.1 W/kg

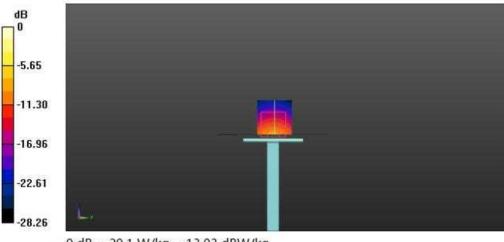

0 dB = 20.1 W/kg = 13.03 dBW/kg

### Shenzhen Anbotek Compliance Laboratory Limited

Address:1/F.,Building D,Sogood Science and Technology Park, Sanwei Community, Hangcheng Street, Bao'an District, Shenzhen, Guangdong, China. Tel:(86) 0755–26066440 Fax:(86) 0755–26014772 Email:service@anbotek.com





Report No.: 18220WC20229502 FCC ID: 2AT6X-LITERADIO1 Page 36 of 76

## Appendix C. Plots of SAR Test Data

#### #1

Date: 11/17/2022

### 2.4G\_CH1 BODY TOP

Communication System: UID 0, 2.4G (fcc) (0); Frequency: 2404 MHz;Duty Cycle: 1:1 Medium parameters used (interpolated): f = 2404 MHz;  $\sigma$  = 1.96 S/m;  $\epsilon_r$  = 51.68;  $\rho$  = 1000 kg/m<sup>3</sup> Phantom section: Flat Section


DASY5 Configuration:

- Probe: EX3DV4 SN7396; ConvF(7.53, 7.53, 7.53); Calibrated: May 06, 2022;
- Sensor-Surface: 1.4mm (Mechanical Surface Detection)
- Electronics: DAE4 Sn387; Calibrated: Sep. 06, 2022
- Phantom: SAM; Type: QD000P40CD; Serial: TP:1670
- Measurement SW: DASY52, Version 52.8 (2); SEMCAD X Version 14.6.10 (7164)

BODY TOP /Area Scan (101x101x1): Interpolated grid: dx=1.200 mm, dy=1.200 mm

Maximum value of SAR (interpolated) = 1.022 W/kg

BODY TOP /Zoom Scan (7x7x7)/Cube 0: Measurement grid: dx=5mm, dy=5mm, dz=5mm Reference Value = 4.327 V/m; Power Drift = 0.06 dB Peak SAR (extrapolated) = 1.007 W/kg SAR(1 g) = 0.403 W/kg; SAR(10 g) = 0.205W/kg Maximum value of SAR (measured) = 1.005 W/kg

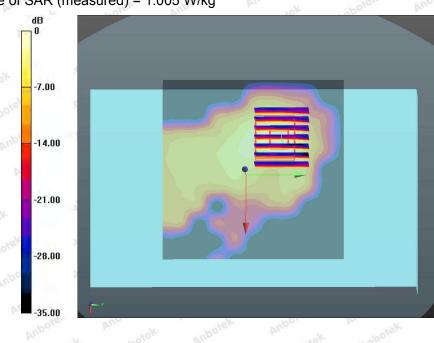

### Shenzhen Anbotek Compliance Laboratory Limited

Address:1/F.,Building D,Sogood Science and Technology Park, Sanwei Community, Hangcheng Street, Bao'an District, Shenzhen, Guangdong, China. Tel:(86) 0755–26066440 Fax:(86) 0755–26014772 Email:service@anbotek.com





Report No.: 18220WC20229502 FCC

FCC ID: 2AT6X-LITERADIO1

Page 37 of 76

a

# Appendix D. DASY System Calibration Certificate

Schmid & Partner Engineering AG S D C a

Zeughausstrasse 43, 8004 Zurich, Switzerland Phone +41 44 245 9700, Fax +41 44 245 9779 info@speag.com, http://www.speag.com

# **IMPORTANT NOTICE**

#### **USAGE OF THE DAE 4**

The DAE unit is a delicate, high precision instrument and requires careful treatment by the user. There are no serviceable parts inside the DAE. Special attention shall be given to the following points:

Battery Exchange: The battery cover of the DAE4 unit is closed using a screw, over tightening the screw may cause the threads inside the DAE to wear out.

Shipping of the DAE: Before shipping the DAE to SPEAG for calibration, remove the batteries and pack the DAE in an antistatic bag. This antistatic bag shall then be packed into a larger box or container which protects the DAE from impacts during transportation. The package shall be marked to indicate that a fragile instrument is inside.

E-Stop Failures: Touch detection may be malfunctioning due to broken magnets in the E-stop. Rough handling of the E-stop may lead to damage of these magnets. Touch and collision errors are often caused by dust and dirt accumulated in the E-stop. To prevent E-stop failure, the customer shall always mount the probe to the DAE carefully and keep the DAE unit in a non-dusty environment if not used for measurements.

Repair: Minor repairs are performed at no extra cost during the annual calibration. However, SPEAG reserves the right to charge for any repair especially if rough unprofessional handling caused the defect.

DASY Configuration Files: Since the exact values of the DAE input resistances, as measured during the calibration procedure of a DAE unit, are not used by the DASY software, a nominal value of 200 MOhm is given in the corresponding configuration file.

#### Important Note:

Warranty and calibration is void if the DAE unit is disassembled partly or fully by the Customer.

#### Important Note:

Never attempt to grease or oil the E-stop assembly. Cleaning and readjusting of the Estop assembly is allowed by certified SPEAG personnel only and is part of the annual calibration procedure.

#### Important Note:

To prevent damage of the DAE probe connector pins, use great care when installing the probe to the DAE. Carefully connect the probe with the connector notch oriented in the mating position. Avoid any rotational movement of the probe body versus the DAE while turning the locking nut of the connector. The same care shall be used when disconnecting the probe from the DAE.

Schmid & Partner Engineering

TN\_BR040315AD DAE4.doc

11.12.2009

#### Shenzhen Anbotek Compliance Laboratory Limited

Address:1/F.,Building D,Sogood Science and Technology Park, Sanwei Community, Hangcheng Street, Bao'an District, Shenzhen, Guangdong, China. Tel:(86) 0755–26066440 Fax:(86) 0755–26014772 Email:service@anbotek.com

#### Code:AB-RF-05-b Hotline 400-003-0500 www.anbotek.com.cn





#### FCC ID: 2AT6X-LITERADIO1

Page 38 of 76

**Calibration Laboratory of** Schmid & Partner Engineering AG Zeughausstrasse 43, 8004 Zurich, Switzerland





Schweizerischer Kalibrierdienst Service suisse d'étalonnage Servizio svizzero di taratura Swiss Calibration Service

Accredited by the Swiss Accreditation Service (SAS) The Swiss Accreditation Service is one of the signatories to the EA Multilateral Agreement for the recognition of calibration certificates

Client Anbotek (Auden) Certificate No: DAE4-387\_Sep10

Accreditation No.: SCS 0108

S

C

S

QA CAL-06.v29 Calibration procee	dure for the data acquisition elec	ctronics (DAE)
September 06, 20	22	
certainties with confidence pro ducted in the closed laboratory	obability are given on the following pages an	nd are part of the certificate.
ID #	Cal Date (Certificate No.)	Scheduled Calibration
SN: 0810278	15-Aug-21 (No:22092)	Aug-22
ID #	Check Date (in house)	Scheduled Check
		In house check: Jan-23 In house check: Jan-23
Name	Function	Signature
Dominique Steffen	Laboratory Technician	A
	Donutu Monogor	-0
Sven Kühn	Deputy Manager	1. Blund
	Calibration process Calibration process September 06, 20 Unrents the traceability to nation the constant of th	Calibration procedure for the data acquisition elea         September 06, 2022         uments the traceability to national standards, which realize the physical undertainties with confidence probability are given on the following pages and ducted in the closed laboratory facility: environment temperature (22 ± 3)°         MaTE critical for calibration)         ID #       Cal Date (Certificate No.)         SN: 0810278       15-Aug-21 (No:22092)         ID #       Check Date (in house)         SE UWS 053 AA 1001       05-Jan-22 (in house check)         SE UMS 006 AA 1002       05-Jan-22 (in house check)         SE UMS 006 AA 1002       05-Jan-22 (in house check)

Certificate No: DAE4-387\_Sep10

Page 1 of 5

#### Shenzhen Anbotek Compliance Laboratory Limited

Address:1/F., Building D, Sogood Science and Technology Park, Sanwei Community, Hangcheng Street, Bao'an District, Shenzhen, Guangdong, China. Tel:(86) 0755-26066440 Fax:(86) 0755-26014772 Email:service@anbotek.com

# Code:AB-RF-05-b Hotline







## FCC ID: 2AT6X-LITERADIO1

Page 39 of 76

Calibration Laboratory of Schmid & Partner Engineering AG Zeughausstrasse 43, 8004 Zurich, Switzerland





S

C

S

Schweizerischer Kalibrierdienst Service suisse d'étalonnage Servizio svizzero di taratura Swiss Calibration Service

Accreditation No.: SCS 0108

Accredited by the Swiss Accreditation Service (SAS) The Swiss Accreditation Service is one of the signatories to the EA Multilateral Agreement for the recognition of calibration certificates

#### Glossary

DAE Connector angle data acquisition electronics information used in DASY system to align probe sensor X to the robot coordinate system.

# Methods Applied and Interpretation of Parameters

- *DC Voltage Measurement:* Calibration Factor assessed for use in DASY system by comparison with a calibrated instrument traceable to national standards. The figure given corresponds to the full scale range of the voltmeter in the respective range.
- Connector angle: The angle of the connector is assessed measuring the angle mechanically by a tool inserted. Uncertainty is not required.
- The following parameters as documented in the Appendix contain technical information as a
  result from the performance test and require no uncertainty.
  - DC Voltage Measurement Linearity: Verification of the Linearity at +10% and -10% of the nominal calibration voltage. Influence of offset voltage is included in this measurement.
  - Common mode sensitivity: Influence of a positive or negative common mode voltage on the differential measurement.
  - Channel separation: Influence of a voltage on the neighbor channels not subject to an input voltage.
  - AD Converter Values with inputs shorted: Values on the internal AD converter corresponding to zero input voltage
  - Input Offset Measurement: Output voltage and statistical results over a large number of zero voltage measurements.
  - Input Offset Current: Typical value for information; Maximum channel input offset current, not considering the input resistance.
  - Input resistance: Typical value for information: DAE input resistance at the connector, during internal auto-zeroing and during measurement.
  - Low Battery Alarm Voltage: Typical value for information. Below this voltage, a battery alarm signal is generated.
  - Power consumption: Typical value for information. Supply currents in various operating modes.

Certificate No: DAE4-387\_Sep10

Page 2 of 5

#### Shenzhen Anbotek Compliance Laboratory Limited

Address:1/F.,Building D,Sogood Science and Technology Park, Sanwei Community, Hangcheng Street, Bao'an District, Shenzhen, Guangdong, China. Tel:(86) 0755–26066440 Fax:(86) 0755–26014772 Email:service@anbotek.com

# Code:AB-RF-05-b



Anbotek Product Safety Report No.: 18220WC20229502

### FCC ID: 2AT6X-LITERADIO1

Page 40 of 76

#### **DC Voltage Measurement**

A/D - Converter Resolution nominal High Range: 1LSB =

 $\begin{array}{rrrr} \mbox{High Range:} & 1LSB = & 6.1 \mu V \,, & \mbox{full range = } -100...+300 \mbox{ mV} \\ \mbox{Low Range:} & 1LSB = & 61 \mbox{nV} \,, & \mbox{full range = } -1.....+3 \mbox{mV} \\ \mbox{DASY measurement parameters: Auto Zero Time: 3 sec; Measuring time: 3 sec} \end{array}$ 

<b>Calibration Factors</b>	X	Y	Z
High Range	404.489 ± 0.02% (k=2)	404.852 ± 0.02% (k=2)	404.862 ± 0.02% (k=2)
Low Range	3.97827 ± 1.50% (k=2)	3.95875 ± 1.50% (k=2)	3.97982 ± 1.50% (k=2)

#### **Connector Angle**

Connector Angle to be used in DASY system	53.0 ° ± 1 °
---	--------------

Certificate No: DAE4-387\_Sep10

Page 3 of 5

## Shenzhen Anbotek Compliance Laboratory Limited

Address:1/F.,Building D,Sogood Science and Technology Park, Sanwei Community, Hangcheng Street, Bao'an District, Shenzhen, Guangdong, China. Tel:(86) 0755–26066440 Fax:(86) 0755–26014772 Email:service@anbotek.com

# Code:AB-RF-05-b





#### FCC ID: 2AT6X-LITERADIO1

## Appendix (Additional assessments outside the scope of SCS0108)

#### 1. DC Voltage Linearity

High Range	Reading (µV)	Difference (µV)	Error (%)
Channel X + Input	200032.85	-3.31	-0.00
Channel X + Input	20007.64	1.88	0.01
Channel X - Input	-20003.48	1.18	-0.01
Channel Y + Input	200034.23	-1.43	-0.00
Channel Y + Input	20006.60	0.91	0.00
Channel Y - Input	-20004.04	0.72	-0.00
Channel Z + Input	200035.38	-0.83	-0.00
Channel Z + Input	20003.69	-2.11	-0.01
Channel Z - Input	-20006.38	-1.59	0.01

Low Range	Reading (µV)	Difference (µV)	Error (%)
Channel X + Input	2001.63	0.08	0.00
Channel X + Input	202.29	0.70	0.35
Channel X - Input	-197.90	0.60	-0.30
Channel Y + Input	2001.33	-0.07	-0.00
Channel Y + Input	200.86	-0.60	-0.30
Channel Y - Input	-199.87	-1.23	0.62
Channel Z + Input	2001.61	0.27	0.01
Channel Z + Input	200.60	-0.70	-0.35
Channel Z - Input	-199.51	-0.85	0.43

#### 2. Common mode sensitivity

DASY measurement parameters: Auto Zero Time: 3 sec; Measuring time: 3 sec

	Common mode Input Voltage (mV)	High Range Average Reading (μV)	Low Range Average Reading (µV)
Channel X	200	13.50	11.56
	- 200	-8.64	-11.18
Channel Y	200	-0.81	-1.28
	- 200	1.05	0.09
Channel Z	200	7.17	6.91
	- 200	-9.46	-9.01

#### 3. Channel separation

DASY measurement parameters: Auto Zero Time: 3 sec; Measuring time: 3 sec

	Input Voltage (mV)	Channel X (µV)	Channel Y (µV)	Channel Z (µV)
Channel X	200	-	-1.70	0.33
Channel Y	200	10.70	-	-0.38
Channel Z	200	7.11	7.89	-

Certificate No: DAE4-387\_Sep10

Page 4 of 5

## Shenzhen Anbotek Compliance Laboratory Limited

Address:1/F.,Building D,Sogood Science and Technology Park, Sanwei Community, Hangcheng Street, Bao'an District, Shenzhen, Guangdong, China. Tel:(86) 0755–26066440 Fax:(86) 0755–26014772 Email:service@anbotek.com

# Code:AB-RF-05-b





## FCC ID: 2AT6X-LITERADIO1

## 4. AD-Converter Values with inputs shorted

DASY measurement parameters: Auto Zero Time: 3 sec; Measuring time: 3 sec

	High Range (LSB)	Low Range (LSB)
Channel X	15969	17466
Channel Y	15661	16162
Channel Z	15990	16190

#### 5. Input Offset Measurement

DASY measurement parameters: Auto Zero Time: 3 sec; Measuring time: 3 sec Input 10M $\Omega$ 

	Average (μV)	min. Offset (μV)	max. Offset (μV)	Std. Deviation (µV)
Channel X	0.73	-2.58	3.29	0.62
Channel Y	0.41	-0.49	1.23	0.40
Channel Z	-0.80	-1.88	0.30	0.42

#### 6. Input Offset Current

Nominal Input circuitry offset current on all channels: <25fA

# 7. Input Resistance (Typical values for information)

	Zeroing (kOhm)	Measuring (MOhm)
Channel X	200	200
Channel Y	200	200
Channel Z	200	200

# 8. Low Battery Alarm Voltage (Typical values for information)

Typical values	Alarm Level (VDC)	
Supply (+ Vcc)	+7.9	
Supply (- Vcc)	-7.6	

# 9. Power Consumption (Typical values for information)

Typical values	Switched off (mA)	Stand by (mA)	Transmitting (mA)
Supply (+ Vcc)	+0.01	+6	+14
Supply (- Vcc)	-0.01	-8	-9

Certificate No: DAE4-387\_Sep10

Page 5 of 5

#### Shenzhen Anbotek Compliance Laboratory Limited

Address:1/F.,Building D,Sogood Science and Technology Park, Sanwei Community, Hangcheng Street, Bao'an District, Shenzhen, Guangdong, China. Tel:(86) 0755–26066440 Fax:(86) 0755–26014772 Email:service@anbotek.com

# Code:AB-RF-05-b







of 76

Tel: +86-10-62304633-2218 E-mail: ettl@chinattl.com Anbotek (Auden)

#### Certificate No: Z21-98671

#### **BRATION CERTIFICATE** CALI

Object

00

**Product Safety** 

EX3DV4 - SN:7396

Calibration Procedure(s)

FF-Z12-006-08 Calibration Procedures for Dosimetric E-field Probes

Calibration date:

Client

May 06, 2022

This calibration Certificate documents the traceability to national standards, which realize the physical units of measurements(SI). The measurements and the uncertainties with confidence probability are given on the following pages and are part of the certificate.

All calibrations have been conducted in the closed laboratory facility: environment temperature(22±3) C and humidity<70%.

Calibration Equipment used (M&TE critical for calibration)

Primary Standards ID #		ID#	Cal Date(Calibrated by, Certificate No.)	Scheduled Calibration		
Power Meter NR	P2	101919	20-Jun-21 (CTTL, No.J21X07447)	Jun-21		
Power sensor NR	P-Z91	101547	20-Jun-21 (CTTL, No.J21X07447)	Jun-21		
Power sensor NR	P-Z91	101548	20-Jun-21 (CTTL, No.J21X07447)	Jun-21		
Reference10dBAtte	enuator	18N50W-10dB	13-Mar-22(CTTL,No.J22X01547)	Mar-22		
Reference20dBAtte	enuator	18N50W-20dB	13-Mar-22(CTTL, No.J22X01548)	Mar-22		
Reference Probe E	X3DV4	SN 7433	26-Sep-21 (SPEAG, No.EX3-7433_Sep21)	Sep-21		
DAE4		SN 549	13-Dec-21 (SPEAG, No.DAE4-549_Dec21)	Dec -21		
Secondary Standards		ID #	Cal Date(Calibrated by, Certificate No.)	Scheduled Calibration		
SignalGeneratorMG3700A		6201052605	27-Jun-21 (CTTL, No.J21X04776)	Jun-21		
Network Analyzer E5071C		MY46110673	13-Jan-22 (CTTL, No.J22X00285)	Jan -22		
	1	Name	Function	Signature		
Calibrated by:		Yu Zongying	SAR Test Engineer	ATUE)		
Reviewed by:		Lin Hao	SAR Test Engineer	新扬		
Approved by:		Qi Dianyuan	SAR Project Leader	252		
			Issued: May06	, 2022		

This calibration certificate shall not be reproduced except in full without written approval of the laboratory.

Certificate No: Z21-98671

Page 1 of 11

## Shenzhen Anbotek Compliance Laboratory Limited

Address:1/F., Building D, Sogood Science and Technology Park, Sanwei Community, Hangcheng Street, Bao'an District, Shenzhen, Guangdong, China. Tel:(86) 0755-26066440 Fax:(86) 0755-26014772 Email:service@anbotek.com

#### Code:AB-RF-05-b Hotline 400-003-0500 www.anbotek.com.cn



**Product Safety** Report No.: 18220WC20229502

Anbotek

FCC ID: 2AT6X-LITERADIO1

Page 44 of 76



Add: No.51 Xueyuan Road, Haidian District, Beijing, 100191, China Tel: +86-10-62304633-2218 Fax: +86-10-62304633-2209 E-mail: cttl@chinattl.com

Http://www.chinattl.cn

#### Glossary:

tissue simulating liquid TSI NORMx,y,z sensitivity in free space ConvF sensitivity in TSL / NORMx, y,z DCP diode compression point CF crest factor (1/duty\_cycle) of the RF signal A,B,C,D modulation dependent linearization parameters Polarization Φ Φ rotation around probe axis Polarization θ θ rotation around an axis that is in the plane normal to probe axis (at measurement center), i  $\theta$ =0 is normal to probe axis

Connector Angle information used in DASY system to align probe sensor X to the robot coordinate system Calibration is Performed According to the Following Standards:

- a) IEEE Std 1528-2013, "IEEE Recommended Practice for Determining the Peak Spatial-Averaged Specific Absorption Rate (SAR) in the Human Head from Wireless Communications Devices: Measurement Techniques", June 2013
- b) IEC 62209-1, "Procedure to measure the Specific Absorption Rate (SAR) for hand-held devices used in close proximity to the ear (frequency range of 300MHz to 3GHz)", February 2005
- c) IEC 62209-2, "Procedure to determine the Specific Absorption Rate (SAR) for wireless communication devices used in close proximity to the human body (frequency range of 30 MHz to 6 GHz)", March 2010

d) KDB 865664, "SAR Measurement Requirements for 100 MHz to 6 GHz" Methods Applied and Interpretation of Parameters:

- NORMx, y, z: Assessed for E-field polarization θ=0 (f≤900MHz in TEM-cell; f>1800MHz: waveguide). NORMx,y,z are only intermediate values, i.e., the uncertainties of NORMx,y,z does not effect the  $E^2$ -field uncertainty inside TSL (see below ConvF).
- NORM(f)x,y,z = NORMx,y,z\* frequency\_response (see Frequency Response Chart). This linearization is implemented in DASY4 software versions later than 4.2. The uncertainty of the frequency response is included in the stated uncertainty of ConvF.
- DCPx,y,z: DCP are numerical linearization parameters assessed based on the data of power sweep (no uncertainty required). DCP does not depend on frequency nor media.
- PAR: PAR is the Peak to Average Ratio that is not calibrated but determined based on the signal characteristics
- Ax,y,z; Bx,y,z; Cx,y,z; VRx,y,z:A,B,C are numerical linearization parameters assessed based on the data of power sweep for specific modulation signal. The parameters do not depend on frequency nor media. VR is the maximum calibration range expressed in RMS voltage across the diode.
- ConvF and Boundary Effect Parameters: Assessed in flat phantom using E-field (or Temperature Transfer Standard for f≤800MHz) and inside waveguide using analytical field distributions based on power measurements for f >800MHz. The same setups are used for assessment of the parameters applied for boundary compensation (alpha, depth) of which typical uncertainty valued are given. These parameters are used in DASY4 software to improve probe accuracy close to the boundary. The sensitivity in TSL corresponds to NORMx,y,z\* ConvF whereby the uncertainty corresponds to that given for ConvF. A frequency dependent ConvF is used in DASY version 4.4 and higher which allows extending the validity from±50MHz to±100MHz.
- Spherical isotropy (3D deviation from isotropy): in a field of low gradients realized using a flat phantom exposed by a patch antenna.
- Sensor Offset: The sensor offset corresponds to the offset of virtual measurement center from the probe tip (on probe axis). No tolerance required.
- Connector Angle: The angle is assessed using the information gained by determining the NORMx (no uncertainty required).

Certificate No: Z21-98671

Page 2 of 11

## Shenzhen Anbotek Compliance Laboratory Limited

Address:1/F., Building D, Sogood Science and Technology Park, Sanwei Community, Hangcheng Street, Bao'an District, Shenzhen, Guangdong, China. Tel:(86) 0755-26066440 Fax:(86) 0755-26014772 Email:service@anbotek.com

# Code:AB-RF-05-b



**Product Safet** 

Report No.: 18220WC20229502

FCC ID: 2AT6X-LITERADIO1



Tel: +86-10-62304633-2218 E-mail: cttl@chinattl.com

Add: No.51 Xueyuan Road, Haidian District, Beijing, 100191, China Fax: +86-10-62304633-2209 Http://www.chinattl.cn

# Probe EX3DV4

# SN: 7396

Calibrated: May 06, 2022

Calibrated for DASY/EASY Systems

(Note: non-compatible with DASY2 system!)

Certificate No: Z21-98671

Page 3 of 11

## Shenzhen Anbotek Compliance Laboratory Limited

Address:1/F., Building D, Sogood Science and Technology Park, Sanwei Community, Hangcheng Street, Bao'an District, Shenzhen, Guangdong, China. Tel:(86) 0755-26066440 Fax:(86) 0755-26014772 Email:service@anbotek.com

# Code:AB-RF-05-b

Hotline -003 - 0500otek.com.cr



Page 45 of 76

Anboi **Product Safety** Report No.: 18220WC20229502

ID: 2AT6X-LITERADIO1 FCC Page 46 of 76



Tel: +86-10-62304633-2218 E-mail: cttl@chinattl.com

Add: No.51 Xueyuan Road, Haidian District, Beijing, 100191, China Fax: +86-10-62304633-2209 Http://www.chinattl.cn

# DASY/EASY - Parameters of Probe: EX3DV4 - SN: 7396

## **Basic Calibration Parameters**

	Sensor X	Sensor Y	Sensor Z	Unc (k=2)
Norm(µV/(V/m) <sup>2</sup> ) <sup>A</sup>	0.54	0.53	0.50	±10.0%
DCP(mV) <sup>B</sup>	97.8	104.5	102.5	

## **Modulation Calibration Parameters**

UID	Communication System Name		A dB	B dBõV	C	D dB	VR mV	Unc <sup>E</sup> (k=2)
0 CV	CW	X	0.0	0.0	1.0	0.00	199.9	±2.4%
		Y	0.0	0.0	1.0		203.3	
		Z	0.0	0.0	1.0		195.0	

The reported uncertainty of measurement is stated as the standard uncertainty of Measurement multiplied by the coverage factor k=2, which for a normal distribution Corresponds to a coverage probability of approximately 95%.

<sup>A</sup> The uncertainties of Norm X, Y, Z do not affect the E<sup>2</sup>-field uncertainty inside TSL (see Page 5 and Page 6).

 <sup>B</sup> Numerical linearization parameter: uncertainty not required.
 <sup>E</sup> Uncertainly is determined using the max. deviation from linear response applying rectangular distribution and is expressed for the square of the field value.

Certificate No: Z21-98671

Page 4 of 11

## Shenzhen Anbotek Compliance Laboratory Limited

Address:1/F.,Building D,Sogood Science and Technology Park, Sanwei Community, Hangcheng Street, Bao'an District, Shenzhen, Guangdong, China. Tel:(86) 0755-26066440 Fax:(86) 0755-26014772 Email:service@anbotek.com

# Code:AB-RF-05-b



Anbote

**Product Safety** 

ID: 2AT6X-LITERADIO1 FCC

of 76 Page 47



Tel: +86-10-62304633-2218 E-mail: cttl@chinattl.com

Add: No.51 Xueyuan Road. Haidian District, Beijing, 100191, China Fax: +86-10-62304633-2209 Http://www.chinattl.cn

# DASY/EASY – Parameters of Probe: EX3DV4 – SN: 7396

#### Calibration Parameter Determined in Head Tissue Simulating Media

f [MHz] <sup>C</sup>	Relative Permittivity <sup>F</sup>	Conductivity (S/m) <sup>F</sup>	ConvF X	ConvF Y	ConvF Z	Alpha <sup>G</sup>	Depth <sup>G</sup> (mm)	Unct. (k=2)
750	41.9	0.89	9.82	9.82	9.82	0.30	0.85	±12.1%
835	41.5	0.90	9.71	9.71	9.71	0.15	1.36	±12.1%
900	41.5	0.97	9.87	9.87	9.87	0.16	1.37	±12.1%
1750	40.1	1.37	8.61	8.61	8.61	0.25	1.04	±12.1%
1900	40.0	1.40	8.13	8.13	8.13	0.24	1.01	±12.1%
2100	39.8	1.49	8.14	8.14	8.14	0.24	1.04	±12.1%
2300	39.5	1.67	7.85	7.85	7.85	0.40	0.75	±12.1%
2450	39.2	1.80	7.57	7.57	7.57	0.50	0.75	±12.1%
2600	39.0	1.96	7.38	7.38	7.38	0.64	0.68	±12.1%
5250	35.9	4.71	5.33	5.33	5.33	0.45	1.30	±13.3%
5600	35.5	5.07	4.89	4.89	4.89	0.45	1.35	±13.3%
5750	35.4	5.22	4.92	4.92	4.92	0.45	1.45	±13.3%

<sup>C</sup> Frequency validity above 300 MHz of ±100MHz only applies for DASY v4.4 and higher (Page 2), else it is restricted to ±50MHz. The uncertainty is the RSS of ConvF uncertainty at calibration frequency and the uncertainty for the indicated frequency band. Frequency validity below 300 MHz is ± 10, 25, 40, 50 and 70 MHz for ConvF assessments at 30, 64, 128, 150 and 220 MHz respectively. Above 5 GHz frequency validity can be extended to ± 110 MHz.

<sup>F</sup> At frequency below 3 GHz, the validity of tissue parameters ( $\epsilon$  and  $\sigma$ ) can be relaxed to ±10% if liquid compensation formula is applied to measured SAR values. At frequencies above 3 GHz, the validity of tissue parameters (ε and σ) is restricted to ±5%. The uncertainty is the RSS of the ConvF uncertainty for indicated target tissue parameters. <sup>G</sup> Alpha/Depth are determined during calibration. SPEAG warrants that the remaining deviation due to the boundary effect after compensation is always less than  $\pm$  1% for frequencies below 3 GHz and below  $\pm$  2% for the frequencies between 3-6 GHz at any distance larger than half the probe tip diameter from the boundary.

Certificate No: Z21-98671

Page 5 of 11

#### Shenzhen Anbotek Compliance Laboratory Limited

Address:1/F.,Building D,Sogood Science and Technology Park, Sanwei Community, Hangcheng Street, Bao'an District, Shenzhen, Guangdong, China. Tel:(86) 0755-26066440 Fax:(86) 0755-26014772 Email:service@anbotek.com

# Code:AB-RF-05-b



Anbote

**Product Safety** 

FCC ID: 2AT6X-LITERADIO1

Page 48 of 76



 Add: No.51 Xueyuan Road, Haidian District, Beijing, 100191, China

 Tel: +86-10-62304633-2218
 Fax: +86-10-62304633-2209

 E-mail: cttl@chinattl.com
 <u>Http://www.chinattl.cn</u>

# DASY/EASY – Parameters of Probe: EX3DV4 – SN: 7396

## Calibration Parameter Determined in Body Tissue Simulating Media

f [MHz] <sup>C</sup>	Relative Permittivity <sup>F</sup>	Conductivity (S/m) <sup>F</sup>	ConvF X	ConvF Y	ConvF Z	Alpha <sup>G</sup>	Depth <sup>G</sup> (mm)	Unct. (k=2)
750	55.5	0.96	10.09	10.09	10.09	0.30	0.90	±12.1%
835	55.2	0.97	9.88	9.88	9.88	0.19	1.32	±12.1%
900	55.0	1.05	9.82	9.82	9.82	0.23	1.15	±12.1%
1750	53.4	1.49	8.24	8.24	8.24	0.24	1.06	±12.1%
1900	53.3	1.52	7.97	7.97	7.97	0.19	1.24	±12.1%
2100	53.2	1.62	8.18	8.18	8.18	0.19	1.39	±12.1%
2300	52.9	1.81	7.88	7.88	7.88	0.55	0.80	±12.1%
2450	52.7	1.95	7.53	7.53	7.53	0.46	0.89	±12.1%
2600	52.5	2.16	7.38	7.38	7.38	0.52	0.80	±12.1%
5250	48.9	5.36	4.93	4.93	4.93	0.45	1.80	±13.3%
5600	48.5	5.77	4.19	4.19	4.19	0.48	1.90	±13.3%
5750	48.3	5.94	4.52	4.52	4.52	0.48	1.95	±13.3%

<sup>c</sup> Frequency validity above 300 MHz of  $\pm$ 100MHz only applies for DASY v4.4 and higher (Page 2), else it is restricted to  $\pm$ 50MHz. The uncertainty is the RSS of ConvF uncertainty at calibration frequency and the uncertainty for the indicated frequency band. Frequency validity below 300 MHz is  $\pm$  10, 25, 40, 50 and 70 MHz for ConvF assessments at 30, 64, 128, 150 and 220 MHz respectively. Above 5 GHz frequency validity can be extended to  $\pm$  110 MHz.

<sup>F</sup> At frequency below 3 GHz, the validity of tissue parameters ( $\epsilon$  and  $\sigma$ ) can be relaxed to ±10% if liquid compensation formula is applied to measured SAR values. At frequencies above 3 GHz, the validity of tissue parameters ( $\epsilon$  and  $\sigma$ ) is restricted to ±5%. The uncertainty is the RSS of the ConvF uncertainty for indicated target tissue parameters. <sup>G</sup> Alpha/Depth are determined during calibration. SPEAG warrants that the remaining deviation due to the boundary effect after compensation is always less than ± 1% for frequencies below 3 GHz and below ± 2% for the frequencies between 3-6 GHz at any distance larger than half the probe tip diameter from the boundary.

Certificate No: Z21-98671

Page 6 of 11

#### Shenzhen Anbotek Compliance Laboratory Limited

Address:1/F.,Building D,Sogood Science and Technology Park, Sanwei Community, Hangcheng Street, Bao'an District, Shenzhen, Guangdong, China. Tel:(86) 0755–26066440 Fax:(86) 0755–26014772 Email:service@anbotek.com

# Code:AB-RF-05-b



ADDOTE Product Safety

FCC ID: 2AT6X-LITERADIO1

Page 49 of 76




 Add: No.51 Xueyuan Road, Haidian District, Beijing, 100191, China

 Tel: +86-10-62304633-2218
 Fax: +86-10-62304633-2209

 E-mail: cttl@chinattl.com
 <u>Http://www.chinattl.cn</u>

# Frequency Response of E-Field (TEM-Cell: ifi110 EXX, Waveguide: R22)

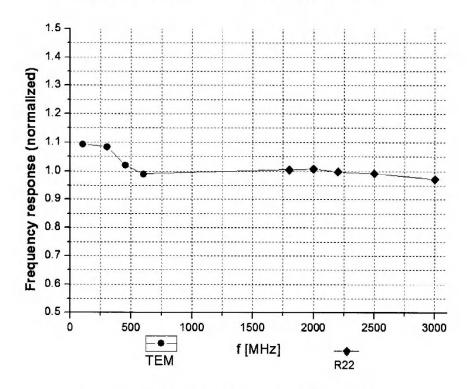



Certificate No: Z21-98671

Page 7 of 11

## Shenzhen Anbotek Compliance Laboratory Limited

Address:1/F.,Building D,Sogood Science and Technology Park, Sanwei Community, Hangcheng Street, Bao'an District, Shenzhen, Guangdong, China. Tel:(86) 0755–26066440 Fax:(86) 0755–26014772 Email:service@anbotek.com

# Code:AB-RF-05-b



Anbote

**Product Safety** 

FCC ID: 2AT6X-LITERADIO1



 Add: No.51 Xueyuan Road, Haidian District, Beijing, 100191, China

 Tel: +86-10-62304633-2218
 Fax: +86-10-62304633-2209


 E-mail: cttl@chinattl.com
 <u>Http://www.chinattl.cn</u>


# Receiving Pattern (Φ), θ=0°


f=600 MHz, TEM

f=1800 MHz, R22

Page 50 of 76

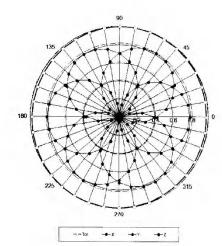

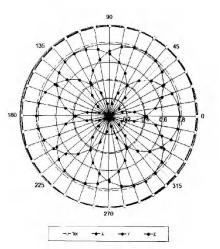

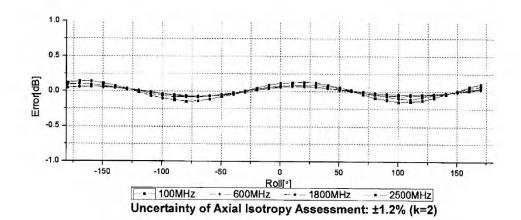

Certificate No: Z21-98671

Page 8 of 11

### Shenzhen Anbotek Compliance Laboratory Limited

Address:1/F.,Building D,Sogood Science and Technology Park, Sanwei Community, Hangcheng Street, Bao'an District, Shenzhen, Guangdong, China. Tel:(86) 0755–26066440 Fax:(86) 0755–26014772 Email:service@anbotek.com

# Code:AB-RF-05-b

