



Product number • OS-M375C1-V-R22WFC-0101





Dear customer,

Thank you for using our product. For better use, please carefully read this instruction. If you have any issues not mentioned here, please contact the provider. All parts of this booklet are reserved by our company, including words, pictures and graphics. Without written permission, no unit or individual shall extract, copy, translate or edit the content in this instruction.

Device introduction

Parts list
Dimensional drawing
Platform/Software Operating Instruction
Appearance description

Installation

lllumination intensity Position Height Steps

Wiring connection

Product description

Features FAQ


Product warranty

Warranty description

Parts list

No.	Name	Quantity
1	Host	1
2	DC 12V power adapter, green sockets	1
3	Support, wall-mount stickers	1
4	Countersunk screws, L-type hexagon s crew driver	1
5	Expansion pipe, self-tapping screws	3
6	Cables	1

Dimensional Drawing

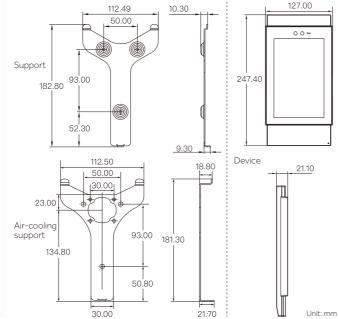


Operating Instruction

The software carried by the product divides into 2 versions: GS (WO platform, provides the secondary development) and LAN (LAN or offline version, provides the secondary development). Please mark the need for software version when place the order. Please contact the customer service for another version if required. For more detailed platform/software instruction manual, please login into the official website to download or contact the customer services.

Appearance description

Instruction

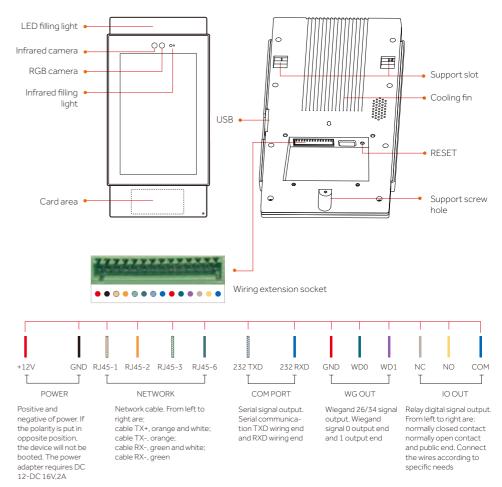


(Pictures for reference only, subject to our products)

Illumination intensity

The recognized face, of which, the illumination intensity ("intensity" in short) shall not be lower than 30 Lux. The device has filling light itself, so when the device put in a totally dark environment, the face illumination intensity, 0.5m distance to the device, is about 100 Lux. The nearer to the device, the higher the intensity is. If there is overexposure on the face, the face characteristics will be unable to be extracted and may lead to hard recognition.

Intensity test

The test standard is as shown on the picture: the angle between dotted line A and dotted line B is 90 °, the test adopts the common light meter with full spectrum, and applies U30 standard light source, adjust the distance between source light and test object, subject to the illumination intensity of the object face at this time.



Reference to intensity



30 Lux, dim 50 Lux, normal



100 Lux, bright




300 Lux. slight exposure

overexposure

500Lux.

Illumination intensity in actual scenarios

Light issues may lead to big differences between site image and registered image; backlight, side-light and strong light will influence the recognition experience. (Analysis: from the view of human eyes, the color changes on face skin may result in wrong recognition of identity; unclear exposure area, no matter large or small, may result the identity judgement.)

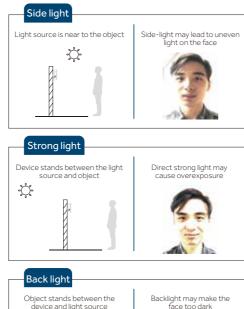



Improvements

- 1. Install the device in a place with little impact from light source.
- 2. Add a registered image according to the site condition, and it is suggested to use this product to enroll images.
- 3. Properly lower the threshold value according to usage.


Position

Device shall be installed in places avoiding backlight, side-light and strong light.



Sunlight shines indoor


When the sunlight shines indoor through the window, the face recognition terminal device shall not be installed in shown black shadow area, instead, shall be installed in place with little sunlight impact, no side-light and no backlight. (Glass window can be deemed as no walls)

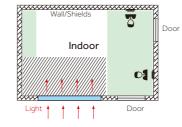




Glass window

If the room has glass wall, there is no shield for sunlight, then it is suggested to hang curtains over the window, and install the device in place with shield to avoid direct sunlight influencing the recognition. (Glass window can be deemed as no walls)

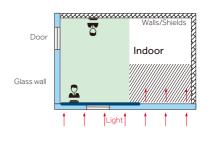


Sunlight shines through the door, with glass window at one side

Sunlight shines through the door, the device shall be installed at the place with shields and little light impact. Glass window can be deemed as no shields, the device shall be installed at the side without glass window or with curtain hung.

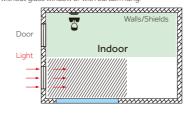

Sunlight shines through the door, the device shall be installed at the place with shields and little light impact.


Sunlight shines through the door

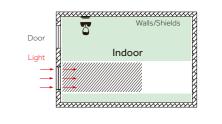

Height

Camera vertical wide-angle

Camera horizontal wide-angle



Suggested installation height (distance between the screen and the ground) is 1.4m, as the recognizable body height range, 0.5m distance away from the device, is 1.3m-1.7m; the recognizable body height range, 1m distance away from the device, is 1m-2m, (There are some deviations)

3/4


2

Wiring instruction (set power wire as an example, the rest can be done in the same manner)



• Attention: If the polarity of the power cable is connected in opposite direction, then the device will not be booted; if connected in right direction, then the device will be normally booted; power adapter requires DC12-16V, 2A

Paste hole papers, and keep the horizontal line parallel with the ground and the red line 1.4m distance to the ground. Drill 3 screw holes on the wall according to the reminder of hole paper, drill 1-2 outlet holes according to wiring needs, and use expansion pipe in the parts to knock into the hole.

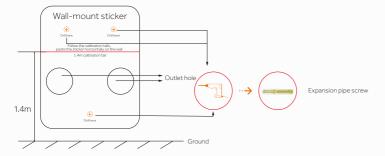


According to the support position, punch out the green socket with connected wires from the outlet hole. Punch out the RESET cable and HDMI cable from the hole as well.






Align the green socket with interface on the device back, and insert.

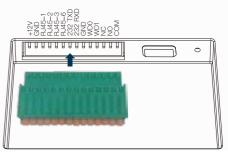




Twist the countersunk screw around the device, align the slot at the device bottom with the hook at the support bottom, use hexagon tool or hexagonal screwdriver to tighten the countersunk screw follow the direction indicated, to complete the installation.

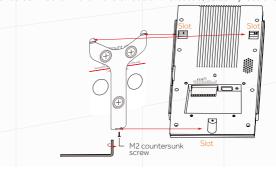



Wiring for magnetic door

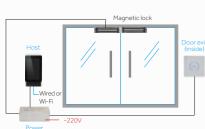

Power (access control)


System installation schematic drawing for magnetic door

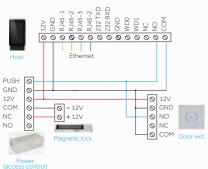

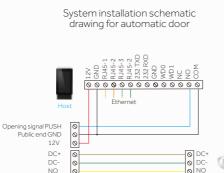


Controller of auto

Wiring schematic drawing for touching switch of magnetic door

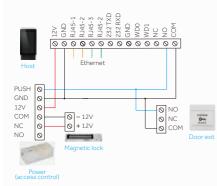

Wiring schematic drawing for mechanical switch of magnetic door

Wiring for automatic door

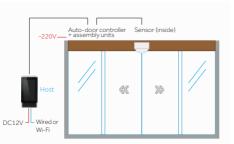


Controller of auto-door (only used terminals will be listed)


Wiring schematic drawing for sensor switch of automatic door

Installation notes


1. Cables inside of the touch switch board shall keep far away from the center area of the board back.



2. When arrange the wires, if the 12V power supply cable of the host does not adopt the "Special power strip" and is in long distance, resulting in large resistance, then abnormal phenomena may occur easily such as insufficient voltage (\leq 11V), repeat restart, system crash and so on. Wiring connection of voltage metering is shown as follow.



3. The power adapter with the device is shown as follow, 1m in total length, with 40cm low voltage power cable and 40cm high voltage power cable.



- Extension of power cable (weak current) cannot exceed 2m, otherwise, it may cause insufficient power supply for the host end, and abnormal phenomena like repeat restart, system crash may occur. If the power is far away from the device, the power cable can be extended (strong current).
- If use other power adapter, 9V 1A as an example, then insufficient voltage and too weak current may cause repeat restart.
- The cable cannot be too fine (such as network cable and fine line), it is suggested to connect multi-strand cable in parallel or use copper core bold cable, to ensure voltage >11V.
- 1 Attention: If use network cable, the extension cable use 4-strand cable as positive pole and 4-strand cable as negative pole.
- If not clear with how to extend, please contact the provider to change "Special power strip".

Characteristics

Completely resolve image frauds in all kinds of carriers with infrared and RGB dual-camera dynamic anti-forgery; when face database is 100000, the recognition accuracy is 99.99% ((99.77% recognition rate under 1% false accept rate; 99.27% recognition rate under 0.1% false accept rate).

Store 10-thousand level database in local

(a) Device using cloud platform supports storing 100 thousand pieces of face images (smaller than 400KB), 1 million pieces of recognition records (0.45KB) and about 10 thousand pieces of on-site capture images;
(b) Device using LAN support storing 100 thousand pieces of face images (each image by 100KB) and 1 million pieces of recognition records (including the latest 100 thousand pieces of on-site capture images)

Quick recognition speed

Recognition speed less than 1s.

Secondary development (integrated)

Support the interface connection in HTTP; supports 232 serial output, Wiegand 26 and 34 output, custom the configuration of output content.

Complete functions

Supports recognition distance configuration; supports stranger detection, and the stranger level can be configured; supports saving the on-site images of face recognition and stranger detection; supports card recognition.

High extensibility

Supports deployment methods like public network and LAN; supports screen display content configuration.

Try to restart and reset

When the device stops in some interface for a long time, users can plug out the power switch, power-on reset and then restart. If it does not take effect, then can long press RESET hole for 8-12s to restart the device. Besides, users can contact our staff and make some feedback.

Dustproof & Waterproof

This device possesses the protection grade of IP42.

Drop resistance

Please avoid operations such as falling, breaking, bending, heavily pressing and so on.

Cleaning

Please use soft cloth or such materials, lightly wipe the display screen or panel, and to avoid scrubbing with water and cleaner.

Low-temperature environment

The normal working temperature for this device is -10° C -50° C, if the actual temperature exceeds this range, that may influence the normal use of the device.





Warranty description

Dear customer,

Thank you for purchasing and using this product. To better guarantee your satisfaction, please carefully read this warranty clauses after purchase.

1. Warranty service

If the Uface device, following the user manual and operating instruction, still breaks down, contact after-sales staff at once, as they will judge the cause on basis of customer description and give remote guidance; if the guidance does not work, then the customer can send back the device for maintenance and test; if the device are unable to be sent back, contact after-sales staff in advance and ask them to head for the site to do the field maintenance. However, if the device problem is found not resulted by hardware or software system of our company after the field maintenance, then customer shall pay the extra fee incurred by the onsite service.

2. Instruction

There is a piece of product booklet inside the device package, and customer can contact after-sales staff and ask for installation guidance.

3. Warranty period

Uface product carries a 1-year guarantee period since the delivery date, and the whole set enjoys free warranty service within this period.

4. Warranty scope

Device breakdown caused by following conditions is not included within the warranty scope:

- Any damages caused by incorrect use, maintenance or storage, as not follow the user manual;
- Damages caused by falling, water intaking, improper storage or any other man-mad malicious damages;
- Malfunction caused by force majeure such as natural disasters and external causes such as abnormal voltage;
- Damages caused by shipment, please contact the department of transportation;
- Malfunction or damages caused by unfavorable operating environment, such as too high or too low temperature, poor condition, abnormal power system and so on;

• Parts (power adapter, cables, screws) are not within the warranty scope. If parts are lost or damaged, please contact our staff to purchase.

5. Maintenance period

When receive the product to be repaired, after-sales staff shall complete the maintenance and send it back within 5 working days. Further communication can be carried out if there are special circumstances.

6. Supplemental instruction

• Product damages, caused by natural disasters, external factors or improper operations, are not included within warranty scope. Our company will make the final judgement of whether the damage is caused by above mentioned terms. Users open the product secretly without permission, and cause certain damage, which is also not included within replacement or warranty scope.

• If the device expires the warranty period or not meets the warranty conditions, users may pay for the maintenance cost and shipping cost.

• If the device is sent back without communication, it will not be maintained or repaired normally or will not be refunded, damages caused by this issue will not be compensated.



CE Caution:

Trade Name:

Use the Product in the environment with the temperature Between -10° C and 50° C; Otherwise, it may damage your product. Products can only be used below 2000m altitude For the following equipment:

Product Name: Face recognition terminal

Model: M375C1-V-R22WFC-0101, M37081-0607-R22WFC, M375C1-V-R22WFC-0101



Universal Ubiquitous Co.,Ltd. E-mail: wangjianhao@uni-ubi.com

Adapter shall be installed near the equipment and shall be easily accessible. Only can use adapter as below: Power Adapter Model: XED-RZ120200S Input: AC100-240V, 0.6A, 50/60Hz; Output: DC12V, 2A SHENZHEN XED POWER SUPPLY CO., LTD The plug considered as disconnect device of adapter. This product is intended for sale and application in a business environment. RED Article 10 2 -This product can be used across EU member states RED Article 10 10 -The product is class 1 product, No restrictions The RF distance between body and product is 20cm

Wi-Fi (2.4G) Support Standards: 802.11b, 802.11g, 802.11n-HT20/40 Frequency Range: 2412-2472MHz for 802.11b/g/n(HT20); 2422-2462MHz for 802.11b/g/n(HT40) Max. RF Output Power: 16.95dBm (EIRP)

NFC Frequency Range: 13.56MHz Radiated H-Field: -1.71dBuA/m(@10m)

FCC Warning

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1) This device may not cause harmful interference, and (2) This device must accept any interference received, including interference that may cause undesired operation.

NOTE 1: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

NOTE 2: Any changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

FCC Radiation Exposure Statement:

The transmitter must not be colocated or operated in conjunction with any other antenna or transmitter. This equipment complies with the FCC RF radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with a minimum distance of 20cm between the radiator and any part of your body.