

pure
enrichment

5 YEAR
WARRANTY

wave
SOUND THERAPY
NECK WRAP
WITH BUILT-IN SPEAKERS



 **Bluetooth®**

USER MANUAL
MODEL: PESDNECK-G

IMPORTANT SAFETY INSTRUCTIONS DO NOT DESTROY

1. Read and follow all operating instructions prior to using this product.
2. Stop using this product immediately if it becomes damaged or is found to be defective.
3. Do not attempt to disassemble the battery unit if the battery unit is broken, cracked, or ruptured. If it is broken, avoid contact with skin and discard immediately. In the event of contact with skin, mouth, or eyes, flush immediately with cold water and consult a physician.

4. Keep out of reach of children.
5. Do not use this product if the battery unit will be directly exposed to water or wet conditions.
6. This device contains a lithium-ion battery. The battery must be recycled or disposed of properly. Contact your local waste management office for information on battery recycling or disposal.

PRODUCT SPECIFICATIONS

Size:	15" x 11.4" x 1.5"
Weight:	1.7 lbs
Charger Input:	100-240V, 50/60Hz
Output:	DC 5V 1A
Battery Type:	Lithium-ion 2000mAh 3.7V
Battery Life:	16-20 hours
Battery Charge Time:	Approximately 4 hours
Material:	100% polyester

INTRODUCTION


Thank you for purchasing the Wave Sound Therapy Neck Wrap with Built-In Speakers from Pure Enrichment. This ultra-comfortable neck and shoulder wrap is lightweight and portable to help you relax and unwind at home or on the go.

PRODUCT FEATURES

We designed the sound therapy neck wrap with several features that make it both comforting and easy to use. These include:

- Easy Touch Controls
- Built-In Rechargeable Battery
- Light Weighted Pressure (simulates a gentle touch)
- Soothing Aromatherapy
- Removable Cover
- Contoured Design
- Bluetooth Connectivity
- 3 Nature Sounds: Rain, Stream, and Ocean

CONTROL PANEL DIAGRAM

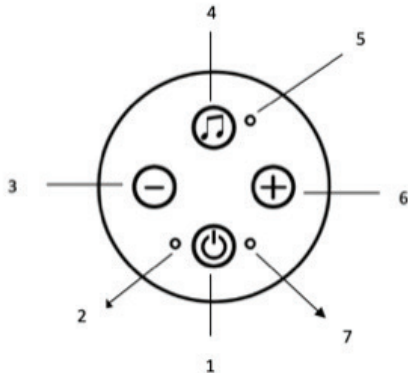

- | | |
|---------------------------|---------------------------|
| 1. Power Button | 5. Music Indicator Light |
| 2. Charging Light | 6. Volume Increase Button |
| 3. Volume Decrease Button | 7. Power Light |
| 4. Music Button | |

USING THE SOUND THERAPY NECK WRAP

Turn On/Off Power

To turn on: Press and hold the Power Button until the blue Power Light comes on. **To turn off:** Press and hold the Power Button until the blue Power Light turns off.

Turn On Sound

Press the Music Button. The blue Music Indicator Light will turn on:

- 1st press - Nature Sound #1
- 2nd press - Nature Sound #2
- 3rd press - Nature Sound #3
- 4th press - Bluetooth Mode (use to stream music or podcasts)

NOTE: Wave is designed with soft speaker technology to help you relax. It is best used to play soft, soothing sounds.

Pairing Bluetooth

1. Disconnect your phone or electronic device from other Bluetooth devices.
2. Turn on the sound and Bluetooth Mode as described above.
3. Access Bluetooth pairing on your phone or electronic device.
4. Connect to the Bluetooth device named "PESDNECK-G".

Adjusting Volume

- Press the (-) Volume Decrease Button to lower the volume.
- Press the (+) Volume Increase Button to increase the volume.

Answering or Making Phone Calls

There is no phone call setting built into this device. Please make and answer calls directly from the smartphone paired to the device.

Adding Aromatherapy

- Remove the scent pad from the hidden pocket in the cover.
- Place a few drops of your favorite essential oil on the pad.
- Place the scent pad back inside the pocket and let it rest on top of the neck wrap to enjoy the benefits of aromatherapy.
- When done, tuck the hidden pocket back into the cover.
- Scent pads are reusable up to 20 times when the same essential oil is used. Shop pureenrichment.com to replace scent pads once they lose absorbency.

USING THE SOUND THERAPY NECK WRAP

Low Power Warning

When the sound therapy neck wrap is low on power, you will hear a reminder sound. Please charge the device with the included charger. While the device is charging, the charging light is red. When the battery is fully charged the charging light turns off.

CARE & MAINTENANCE

To prolong the life of your sound therapy neck wrap, proper care and cleaning are essential:

1. Always unplug the neck wrap from the electrical outlet, charging cable, and battery before cleaning.
2. Remove the outer cover.
3. Spot clean with a damp cloth or hand wash in cold water with mild detergent. Do not place it in the washing machine.
4. Hang dry.

WARRANTY

The Wave Sound Therapy Neck Wrap comes with an industry-leading 5 Year Warranty that begins on the date of purchase.

The warranty applies to the sound therapy neck wrap and necessary parts and labor relating thereto. The warranty does not apply to damage resulting from failure to follow the operating instructions, accidents, abuse, alterations, or disassembly by unauthorized individuals.

PRODUCT REGISTRATION

To ensure your full warranty and to receive product updates and streamlined customer support, remember to register your product at:

www.pureenrichment.com/productregistration

FCC NOTICE

Model: Wave Sound Therapy Neck Wrap (PESDNECK-G)

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Bear Down Brands LLC
14505 Astronautics Lane
Huntington Beach, CA 92647

The product is protected against unauthorized use. DO NOT modify it without the authorization of the manufacturer, or the user's authority to operate could be voided.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.



Huntington Beach, CA 92647
www.pureenrichment.com

REV: 03-2020