


Self-Cleaning Cat Litter Box


User Manual

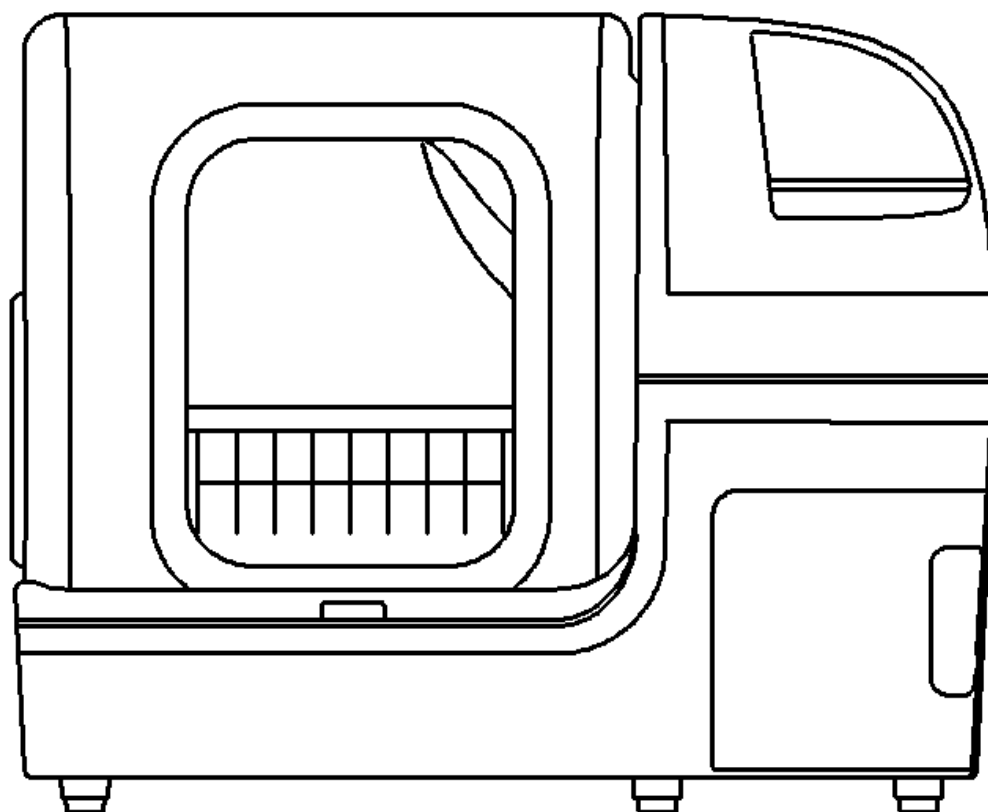

Thank you for buying this Self-cleaning cat litter box, the following are the instructions for using this device, please read it and start using.

This device is suitable for cats weighing between 2.0 to 25 pounds. Cats weighing less than 2.0 pounds will not be identified, and may cause danger to your kitten.

Cats weighing more than 25 pounds can be inconvenient or reluctant to use

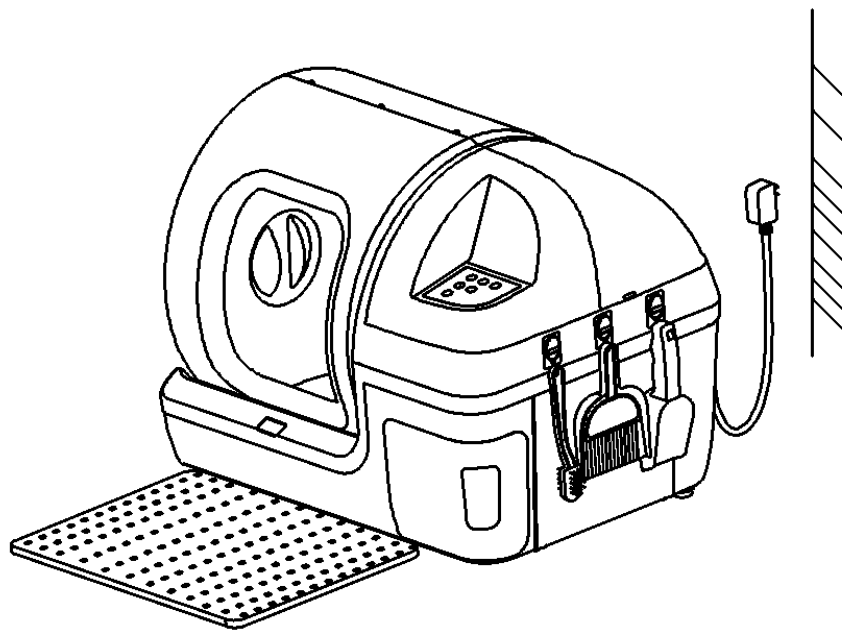

If your cat hasn't used the self-cleaning cat litter box previously, they may be less willing to use it at first.

Put the cat in the drum of the self-cleaning cat litter box from time to time, and two days later, maybe the cat will use it.

Assemble your device

Equipment list


Auto-clean cat litter box device	×1
Cat litter control pad	×1
Cat litter clearing frame	×1
Power adapter	×1
Garbage bags	×1
Cleaning Kits	×1
Use manual	×1
Quick use guide	×1

The device, cat litter control pad are in the packing box. Power adapter, garbage bags, dustpan and broom, shovel, brush, hooks, use manual, quick use guide are packaged and placed inside the device.

Before use the device, remove the cat litter clearing frame and keep it properly.


This device should be used indoors to avoid direct sunlight and high temperature, high humidity environment.

The device must be placed on a solid, horizontal ground. The ground should not be too soft to avoid deviation in the gravity sensor readings. Use the power adapter of the original DC12V/1.5A, or it may damage the device or cause the device will not work properly.

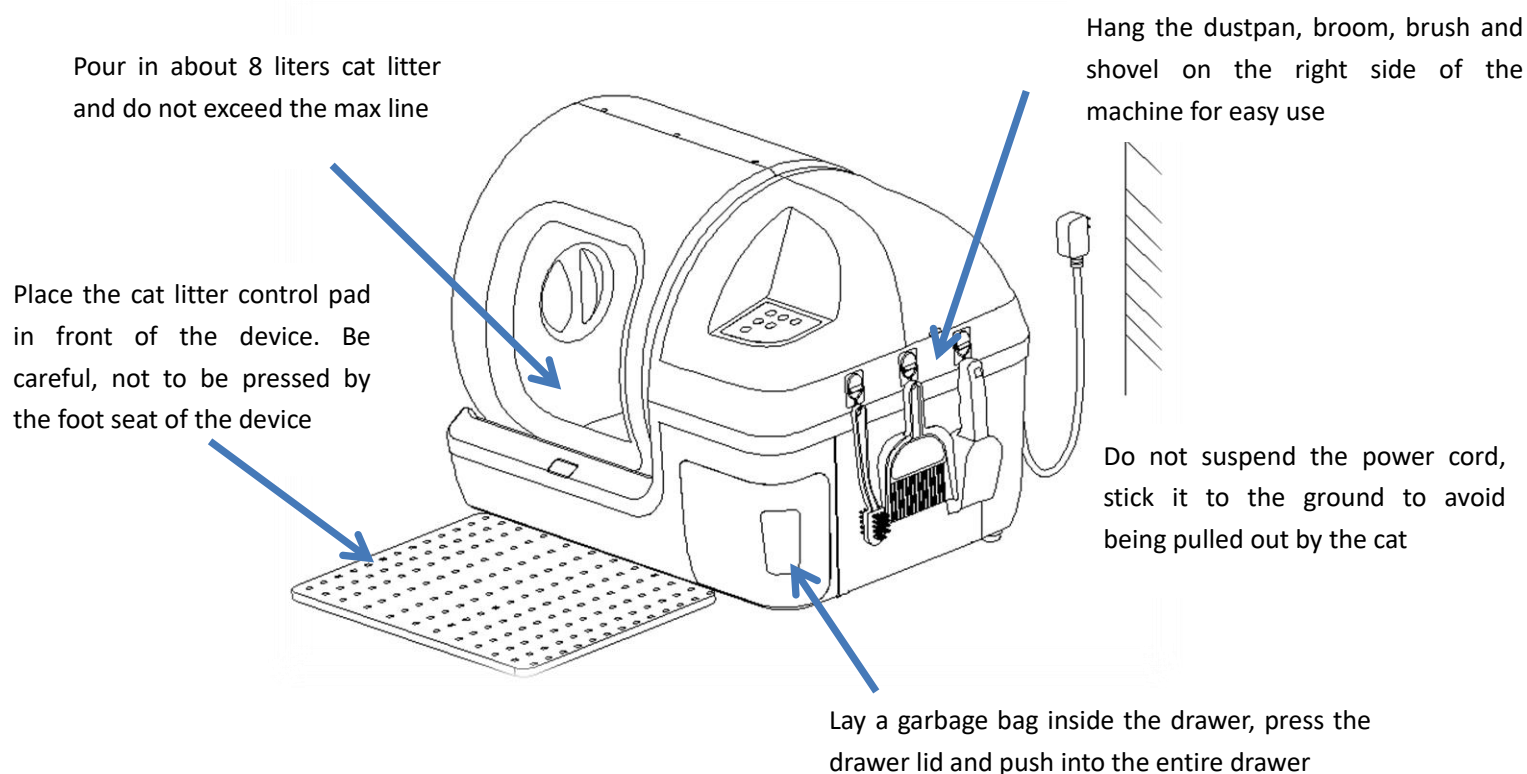


After set the device according to the figure above, plug in the power

adapter, connect the power supply. Press

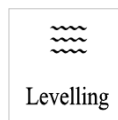


key first, then press

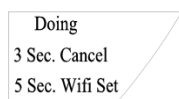


key, the device drum will roll, and smooth the cat litter.


If you connect the power supply first, and then add cat litter into the

drum, the  image and cat weight data will be displayed on the

device panel. But you can still press

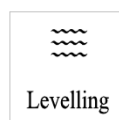

key and

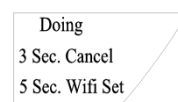

key

Congratulations, your cat can use this self-cleaning cat litter box.



When your cat enters the drum of the device to excretion, the image and cat weight data will be displayed on the device panel. The device will clean the excrement automatically, after the cat excretion finished and comes out, which is very intelligent and convenient.

About cat litter

Cat litter that can be used in this device includes tofu, clay, clumping clay and mix.

Note: The length of tofu litter should not exceed 8mm.

Note: This device cannot use crystal litter.


Key operation

There are 6 keys on the device panel to facilitate the necessary operation.


Empty cat litter — Empty all the remaining cat litter in the drum into



the drawer. Press key first, then press key. The drum will roll forward 4 cycles to empty the cat litter into the drawer.

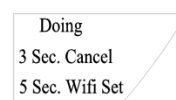

Note: Before emptying operations, make sure the following two things are completed. 1, Replace a new garbage bag in case the drawer can not hold all the remaining cat litter in the drum. 2, Install the cat litter clearing frame on the entrance/exit in place.



Level cat litter — Levelling the cat litter in the drum. Press

key first, then press

Doing
3 Sec. Cancel
5 Sec. Wifi Set

key. The drum will roll back and forth

once to levelling the cat litter.

Clean the excrement — Press



key first, then press

Doing
3 Sec. Cancel
5 Sec. Wifi Set

key. The drum will roll back and forth to clean the

excrement into the drawer.

Deodorization — Press the



key on/off deodorization. The

deodorization will turn off after 15 minutes when you turn it.

Infrared monitoring — Monitor the infrared rays at the entrance/exit

whether are obscured. Long press the

3 Second
IR Det. On/Off

key for 3 seconds

can on/off the infrared monitor.

Task cancellation — Performing emptying, or cleaning task, long

press the

Doing
3 Sec. Cancel
5 Sec. Wifi Set

key for 3 seconds can cancel them, and then level

the cat litter. **Note: When the infrared rays are obscured, can not**

cancel these tasks.

Connect your phone — On the “Idle” mode, long press the

Doing
3 Sec. Cancel
5 Sec. Wifi Set


key for 5 seconds, the device can connect your phone

through WIFI.

Infrared monitoring

The device has an infrared monitor at the entrance/exit of the cat, when the cat is in/out which can be detected.

The clean task will be suspended if the infrared is obscured during clean to protect the cat.

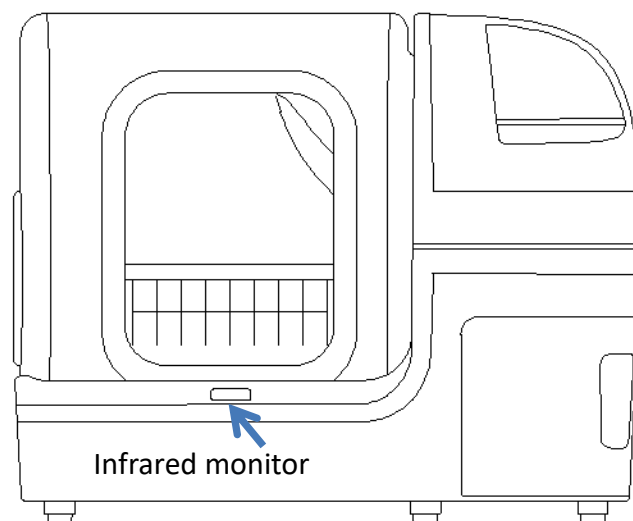


Please keep the infrared monitor panel clean during use to avoid monitoring errors

This device provides the function to turn off the infrared monitor. The clean task will not be suspended during the infrared is obscured when the infrared monitor is turned off.

3 Second
IR Det. On/Off

Long press the key for 3 seconds can on/off the infrared

monitor. The display panel will display logo  , when the infrared detector is turned off.

Deodorization

The deodorization will on for 15 minutes automatically when the device performs emptying, levelling, or cleaning.



You can press the key on/off deodorization (the deodorization function, which lasts for 15 minutes after turn on, is then automatically



turned off). The logo will be displayed when the function on. In addition, deodorization schedule rules can be set on the APP to get better results.

Clean and eliminate odors

Replace the garbage bag


The storage drawer capacity is 9.5 liters, with one cat can use for 20 days and two cats for 10 days.

In order to reduce the odor, it is recommended that the garbage bag be replaced for not more than 3 days when conditions permit!

In the idle status, pull out the drawer, remove the lid, and carry out the garbage bag which with feces. Replace a new garbage bag, press the lid, and push the drawer into the device.

Drawer clean

After using for a period of time, you need to clean the drawer with water, in order to eliminate the odor on the drawer completely. You'd better do this operation once every half a month

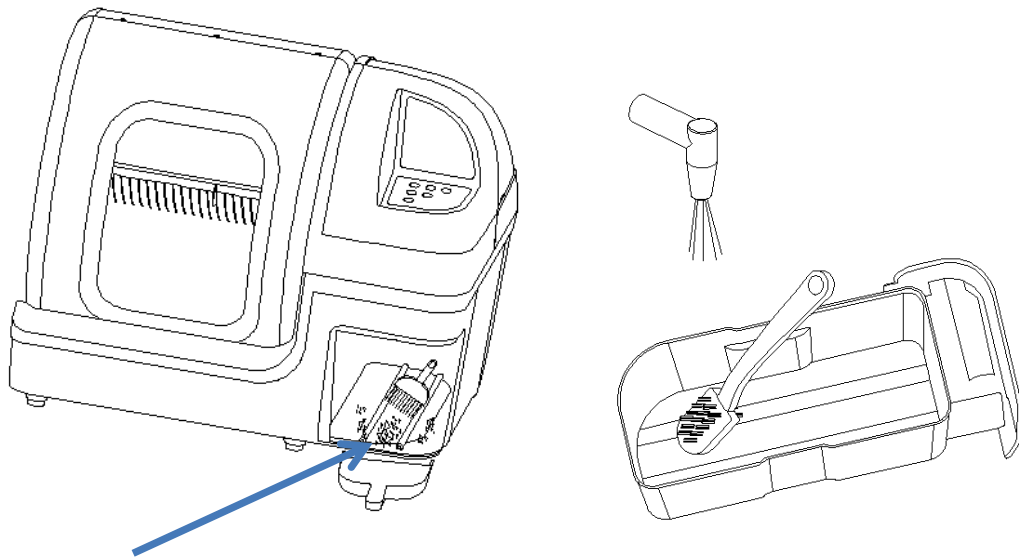

You will see some cat litter leakage on the drawer track. You can use the broom and dustpan to clean up them.

Note: After washing the drawer, place it in a ventilated place and dry it thoroughly before using it again.

Empty cat litter and Drum cleaning


Even if the device can clean the cat's excrement into the drawer in time, the device will still leave a large odor after a period of use.

To eliminate these odors, you need to clean the drum with water. We recommend that cleaning drum once in two weeks for one cat and once in a week for multiple cats.

Empty cat litter

Before cleaning the drum with water, you need to empty the remaining cat litter in the drum. Emptying cat litter procedure is performed as follows.

1, Replace a new garbage bag in case the bin can't hold all the cat litter in the drum

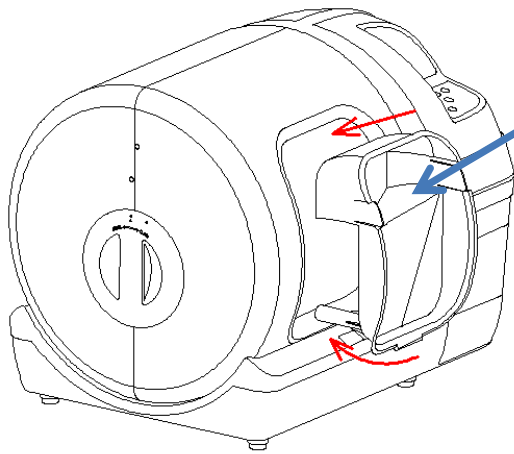

2, Install the cat litter clearing frame on the entrance/exit according to the arrow direction. Note: it must be buckled in place



3, Press


Doing
3 Sec. Cancel
5 Sec. Wifi Set

key first, then press

key. The drum will roll


forward 4 cycles to empty the cat litter into the drawer.

Note: if the emptying process is stopped midway, please check whether the clearing frame is installed in place.

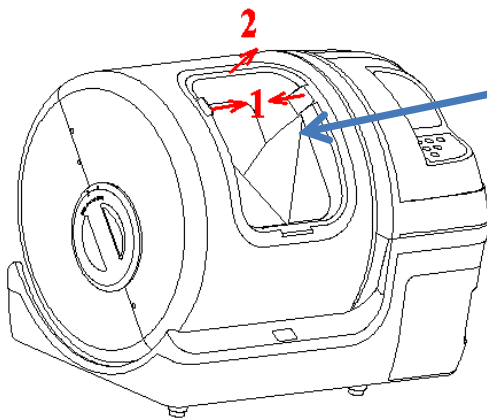


4, Remove the cat litter clearing frame as shown in the arrow and keep it properly.

Clean drum


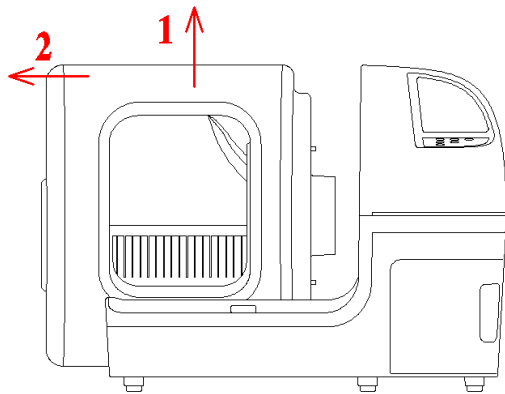


Follow the arrow 1 and then arrow 2 direction remove the entire drum.

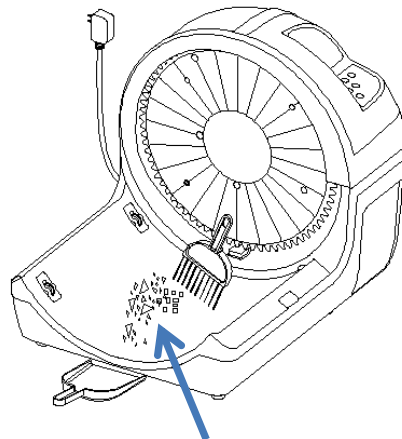


You will see some cat litter leakage on the base. You can use the broom and dustpan to clean up them.

Wash the inside of the drum with clear water.

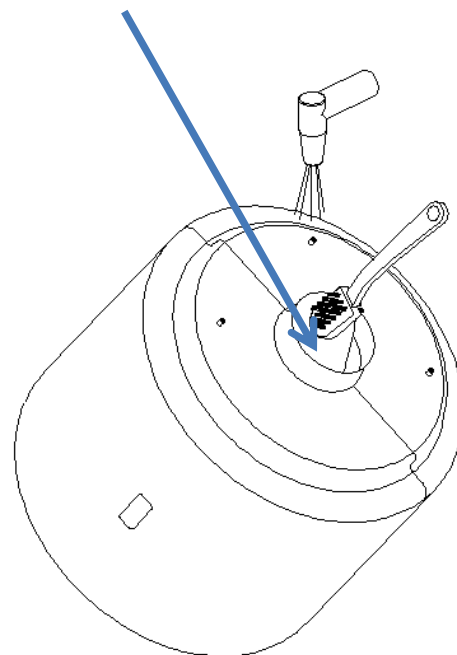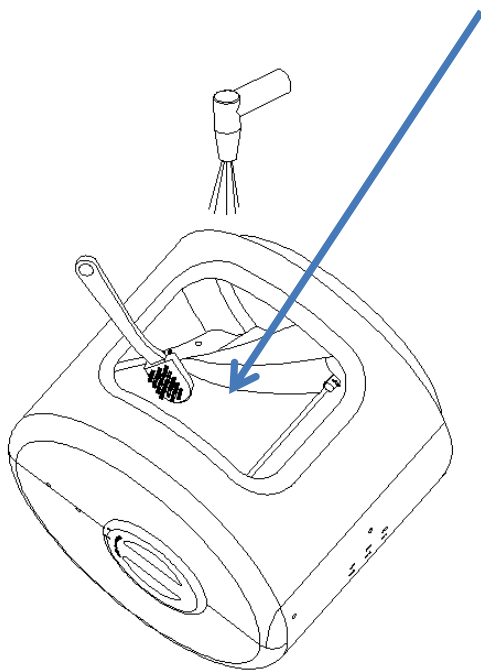

Note: After washing the drum, place it in a ventilated place and dry it thoroughly before using it again.

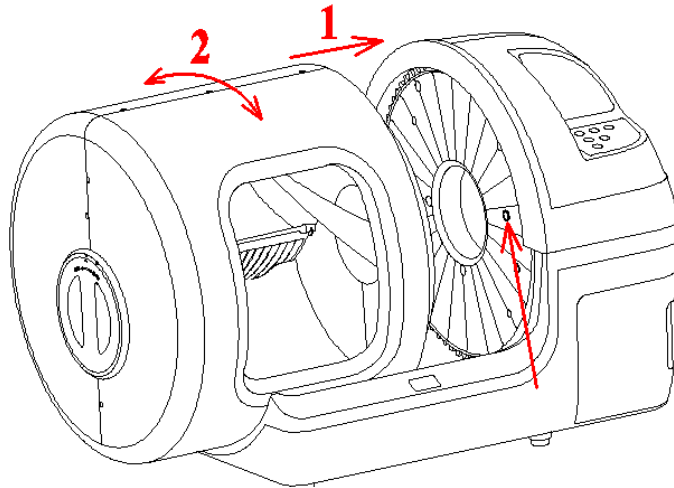


Align the circular silicone marks on the drum and on the gear. Follow the arrow 1 and then arrow 2 direction until the drum is secured.

The phenomenon of bottom sticking

The mixture of urine and cat litter was stuck to the bottom of the drum is a very common phenomenon. We reduce the sticking phenomenon by a special drum structure design, and increasing the cat litter capacity (8 L). But we still haven't stopped this phenomenon completely.

Tips: 1, Tofu litter is not very easy to stick to the bottom (But the tofu litter with a length must no more than 8 mm), clumping clay litter is most easily stuck.

2, Add cat litter near the max line in time can greatly reduce sticking phenomenon also.

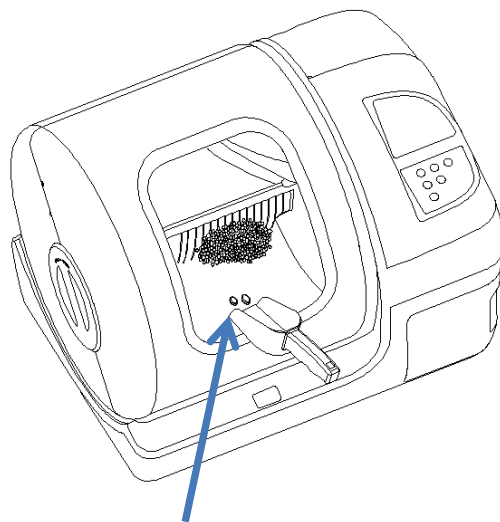


When sticking occurs, you can remove it with a small shovel as the drum rolling.


Abnormal situation: the drawer flip cover can't be opened



When the icon **Cn't Open** displayed on the panel, it indicates that the drawer flip cover cannot be opened in time when cleaning. This is most likely some feces pressed on the cover so that it does not open properly. Please refer to the two figures below to clean up the feces pressed on the flip cover.

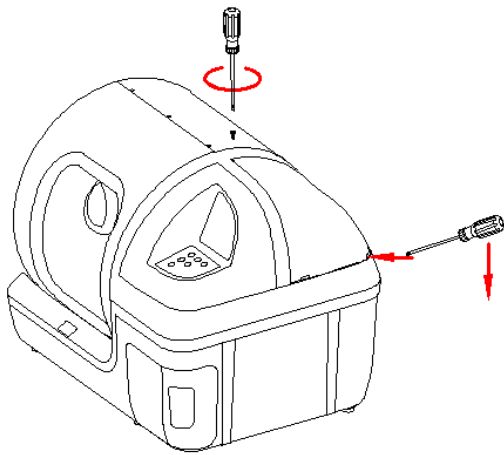

Unscrew the screw on the cover plate, and then pry the cover plate down through three gaps with a screwdriver.

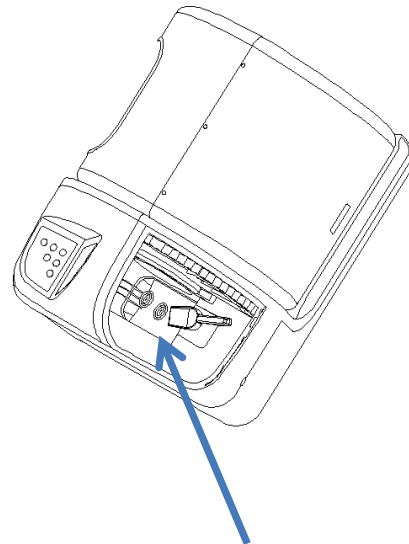

Use a small shovel to remove the feces on the flip cover.

After completing the above operation, install the cover plate and screw on the screw.


Web links and APP

Install the APP and link the device to your mobile phone to enjoy more personalized features, giving you more information about your cat's living habits and health. At the same time, you can also share this information with your friends.


Note: This device supports the 2.4G and 5G WIFI networks

First, scan the QR code on the right, follow the prompts, install the APP software to your phone.

Second, on the "Idle" mode, long press

the  key for 5 seconds, until the "dilililili" beep is issued.


Open the Bluetooth function of the mobile phone, enter the app home page, and enter "Add Device"

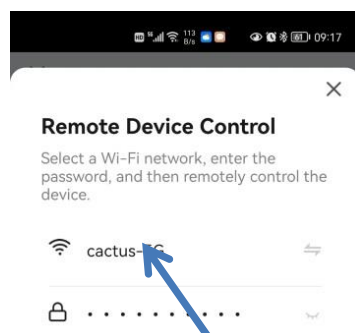

Select your WIFI network, enter the password, press next, then the device connect to your phone.



[Skip and Connect over Bluetooth](#)

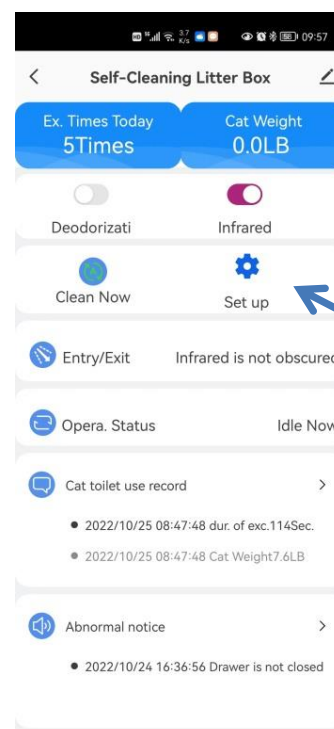

Go to set up page

Main page of the device

Select drum rolling forth/back once or twice for cleaning.
Twice for clean better.



Select the minimum cat weight that the device can identify.

Select the minimum effective length of the excretion time.

Select the delay seconds of cleaning after excretion.


Select the on/off schedule of deodorization and sterilization.

Set up regular cleaning schedule, can set up multiple schedule.

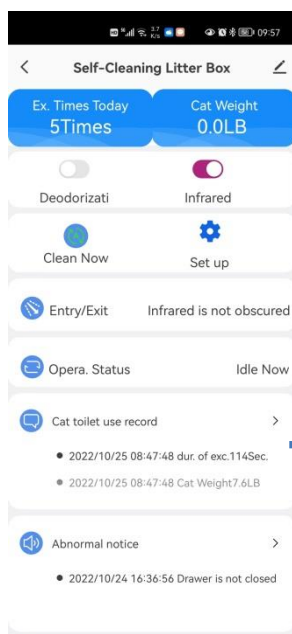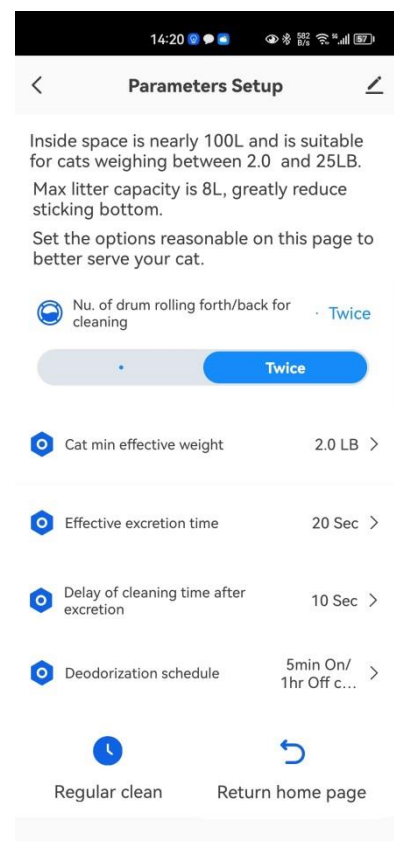

This section records the detail history information of your cat excretion. And you can distinguish multiple cats based on cat weight. You can also use this information to understand your cat's habits and judge their health.

The number of shares shared must be greater than 2

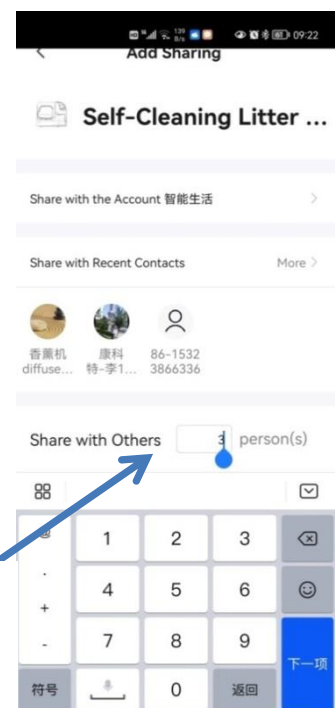

You can also push this APP to your friends and family to share the joy of your cat.

Parameters

Name	Self-cleaning cat litter box
Product size	720mm × 560mm × 585mm
Package size	780mm × 590mm × 620mm
Gross weight	about 20Kg
Material	PP, ABS
Power supply	Input AC100-240V 50/60Hz Output DC12V/1.5A
Power	12W

FCC Warning:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Caution: Any changes or modifications to this device not explicitly approved by manufacturer could void your authority to operate this equipment.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 20cm between the radiator and your body.