




Test Graphs Channel Power

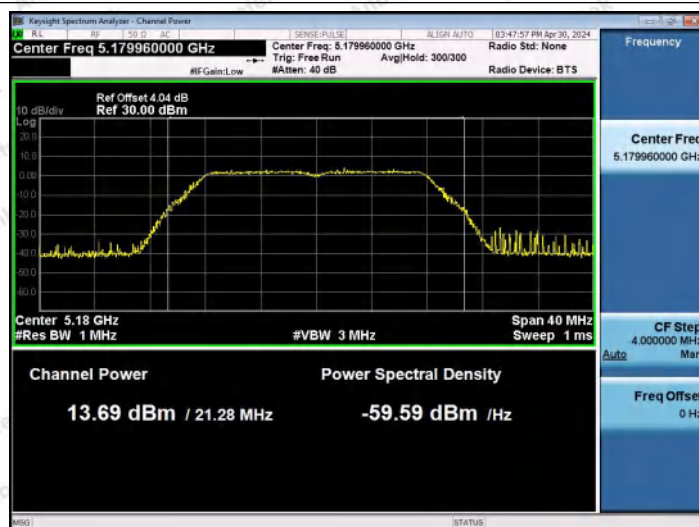

11A-Ant0-5180-PASS

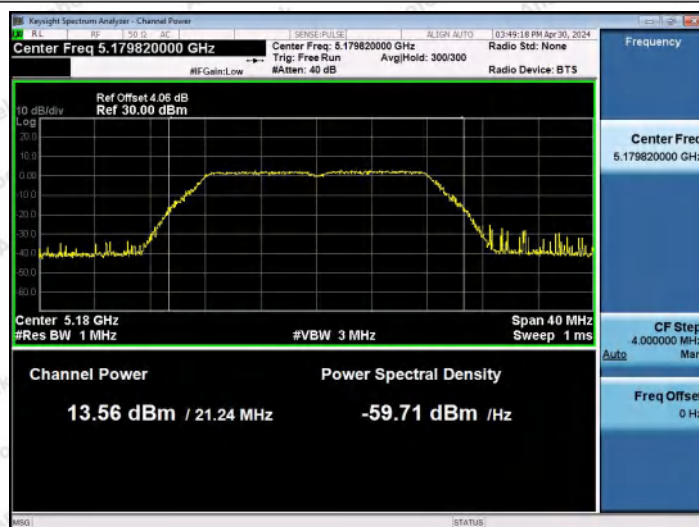

11A-Ant1-5180-PASS

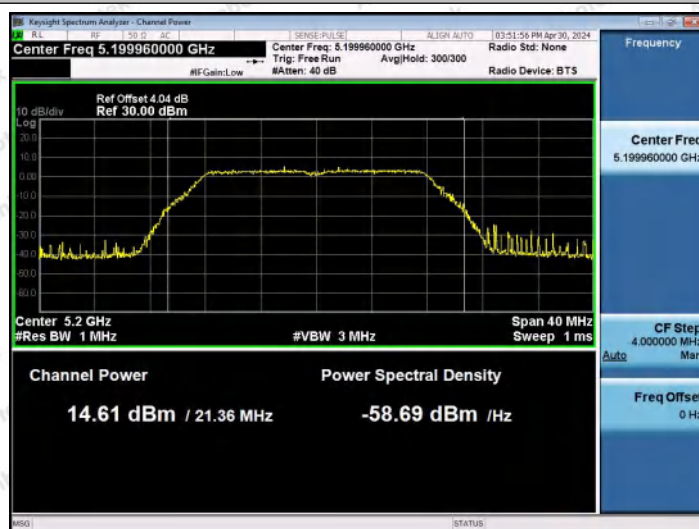

11A-Ant0-5200-PASS

Shenzhen Anbotek Compliance Laboratory Limited

Address: 1/F., Building D, Sogood Science and Technology Park, Sanwei Community, Hangcheng Street, Bao'an District, Shenzhen, Guangdong, China.
Tel: (86) 0755-26066440 Fax: (86) 0755-26014772 Email: service@anbotek.com




Hotline


400-003-0500

www.anbotek.com.cn




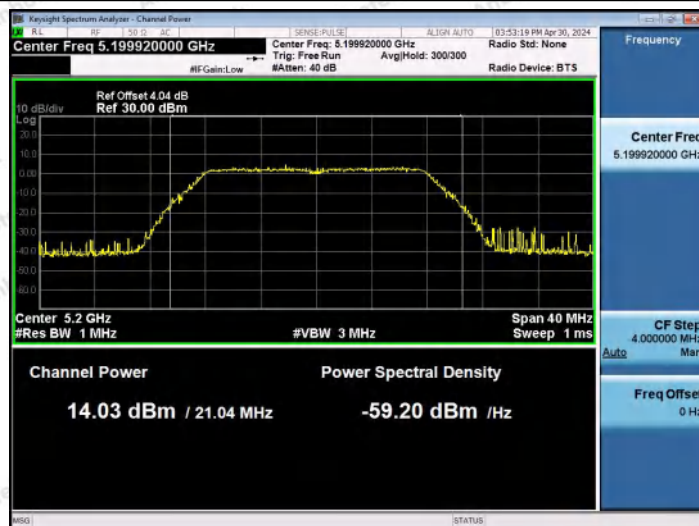

11A-Ant1-5200-PASS

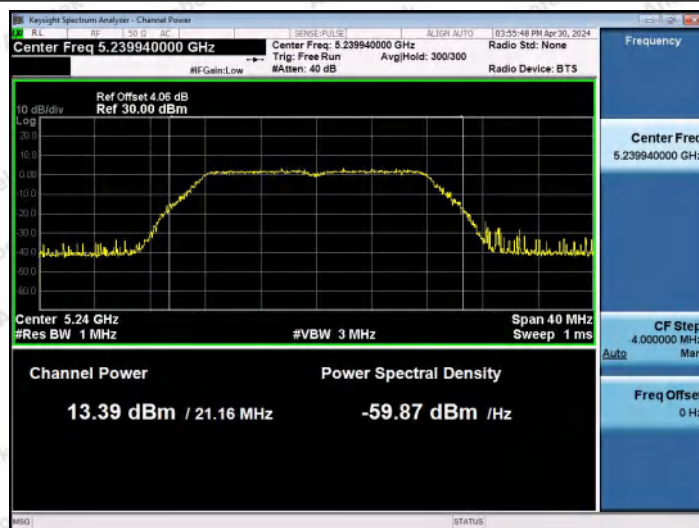


11A-Ant0-5240-PASS

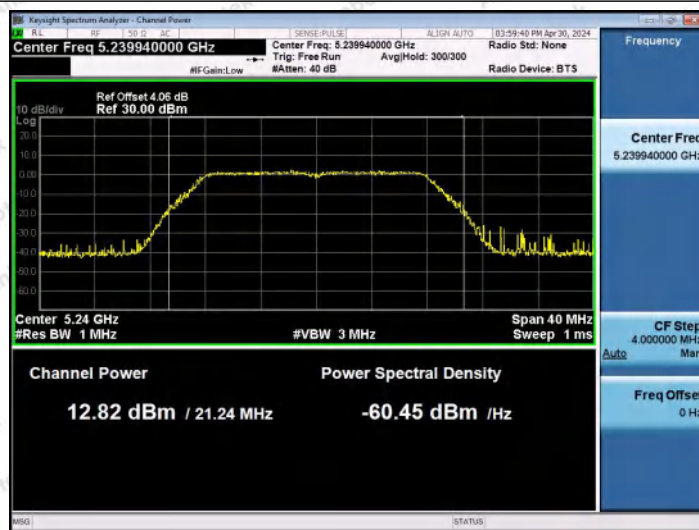


11A-Ant1-5240-PASS




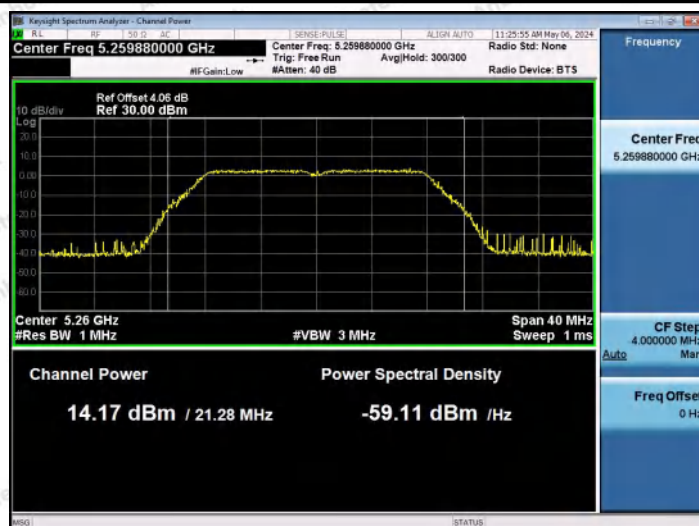

11A-Ant0-5260-PASS

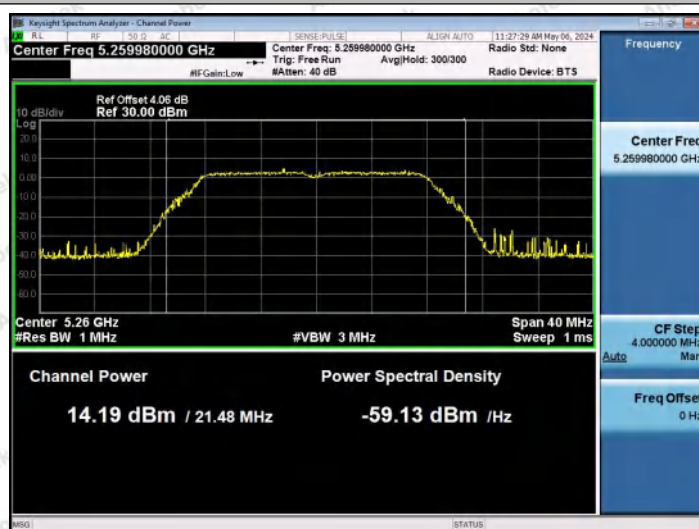


11A-Ant1-5260-PASS

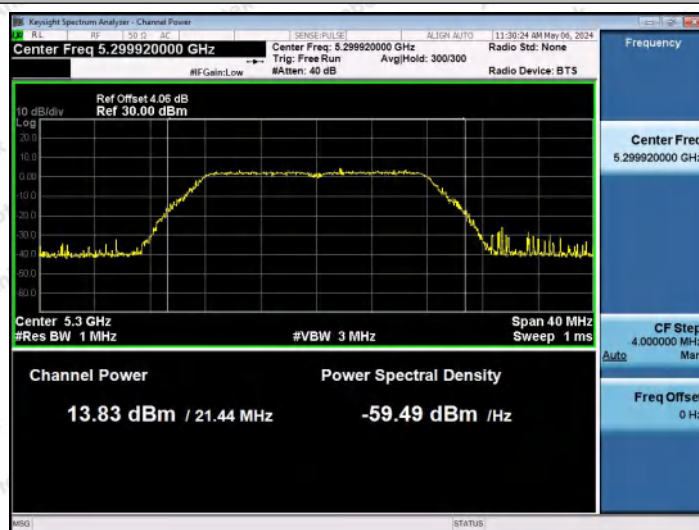


11A-Ant0-5300-PASS




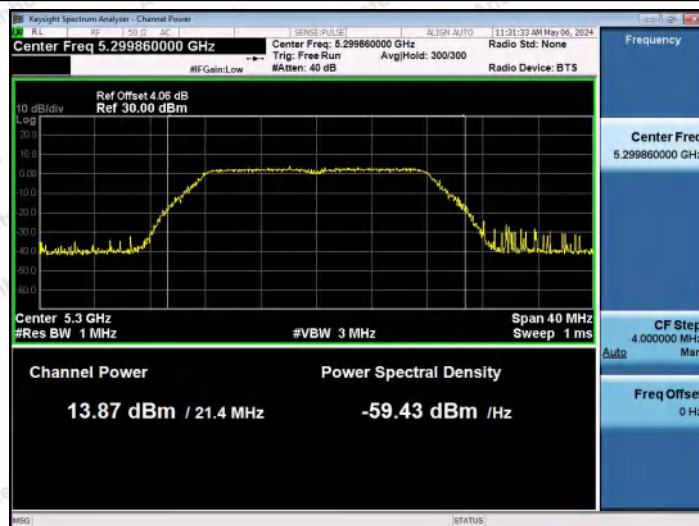

11A-Ant1-5300-PASS

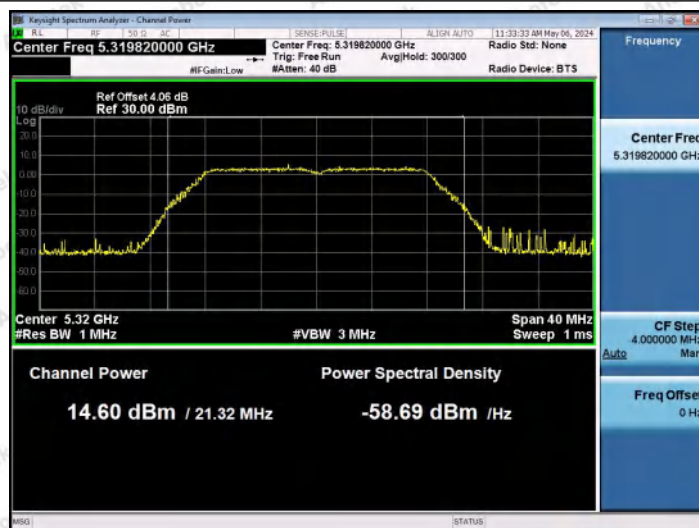

11A-Ant0-5320-PASS

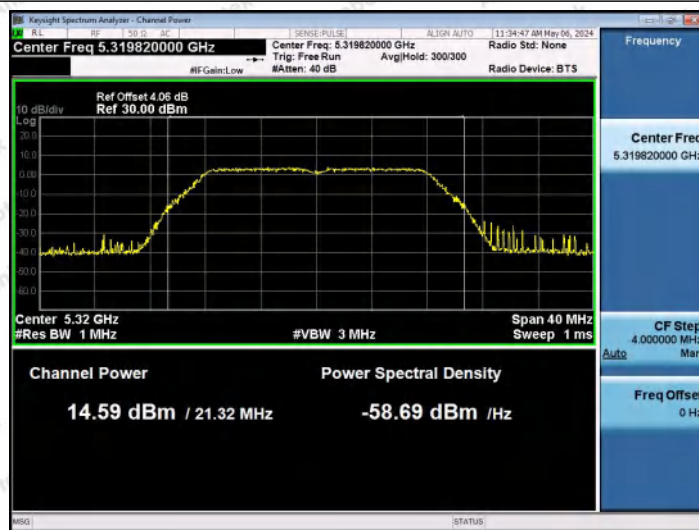

11A-Ant1-5320-PASS

Shenzhen Anbotek Compliance Laboratory Limited

Address: 1/F., Building D, Sogood Science and Technology Park, Sanwei Community, Hangcheng Street, Bao'an District, Shenzhen, Guangdong, China.
Tel: (86) 0755-26066440 Fax: (86) 0755-26014772 Email: service@anbotek.com




Hotline


400-003-0500

www.anbotek.com.cn




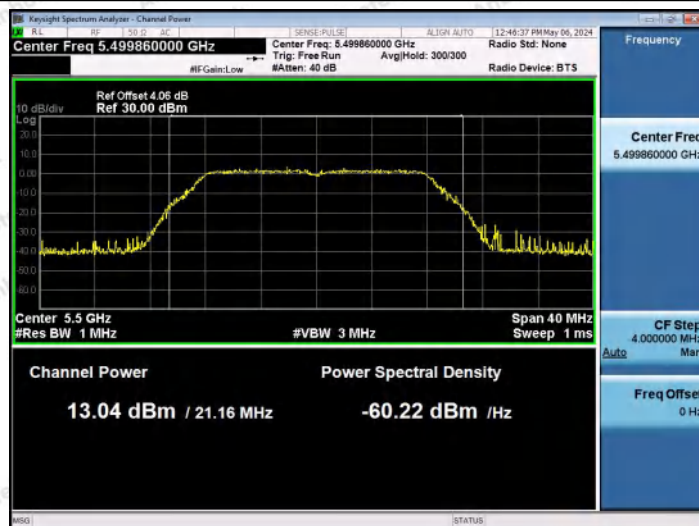

11A-Ant0-5500-PASS

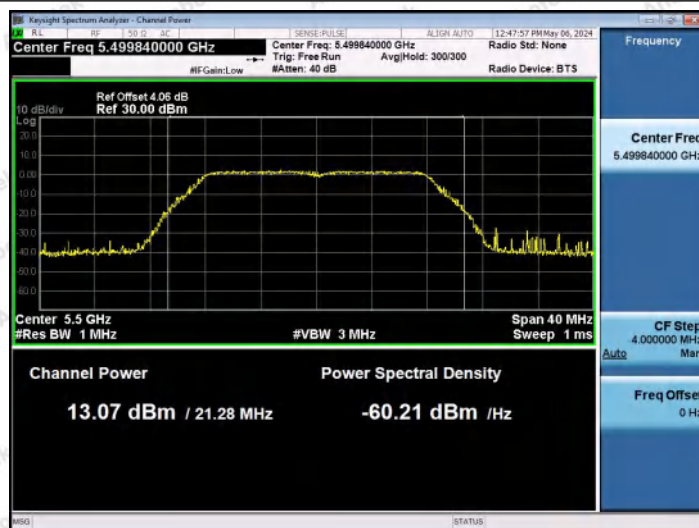


11A-Ant1-5500-PASS

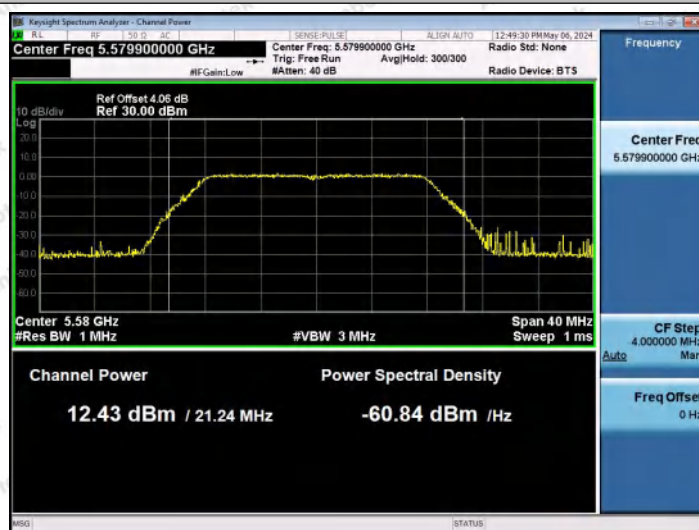


11A-Ant0-5580-PASS




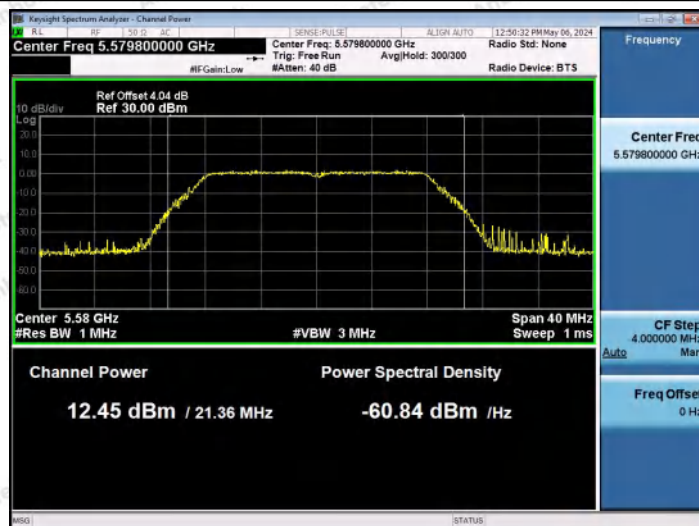

11A-Ant1-5580-PASS

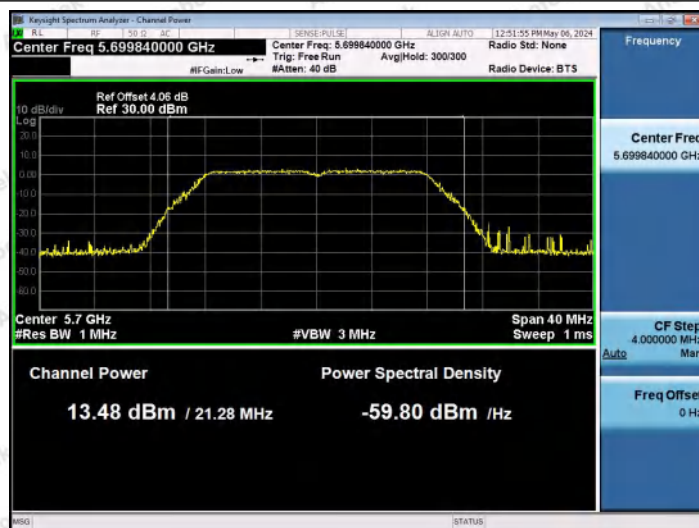

11A-Ant0-5700-PASS

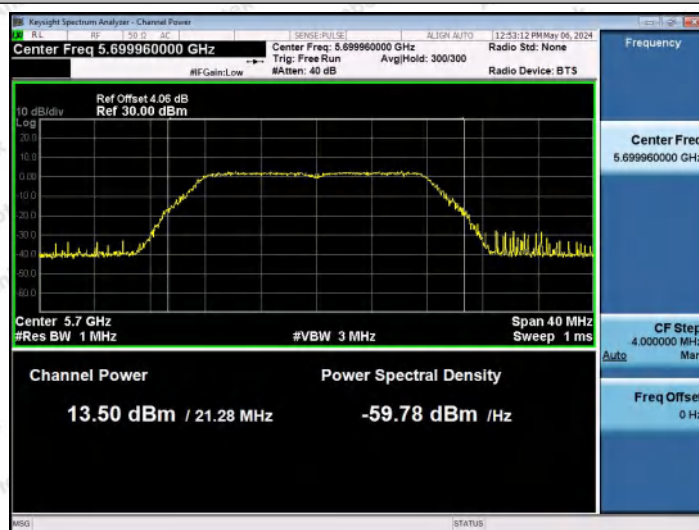

11A-Ant1-5700-PASS

Shenzhen Anbotek Compliance Laboratory Limited

Address: 1/F., Building D, Sogood Science and Technology Park, Sanwei Community, Hangcheng Street, Bao'an District, Shenzhen, Guangdong, China.
Tel: (86) 0755-26066440 Fax: (86) 0755-26014772 Email: service@anbotek.com




Hotline


400-003-0500

www.anbotek.com.cn




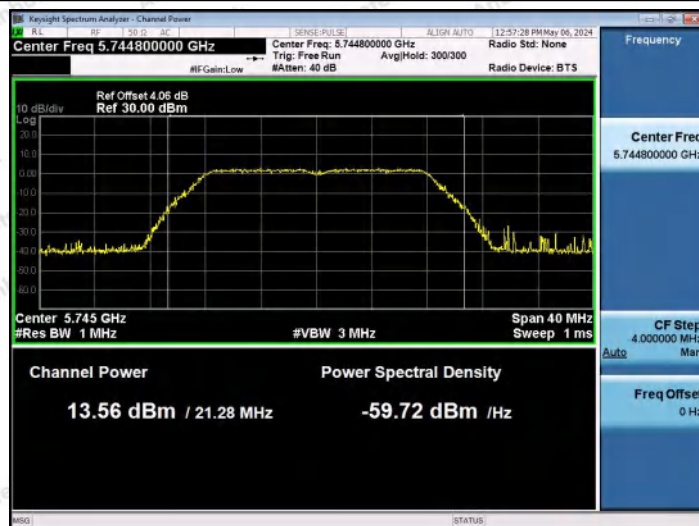

11A-Ant0-5745-PASS

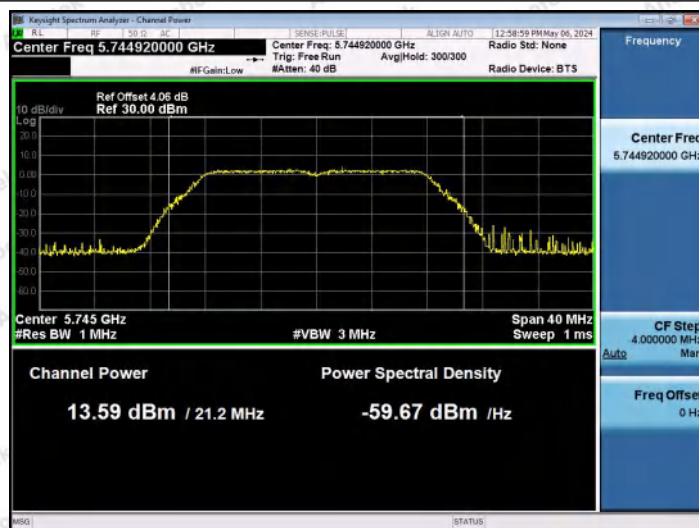


11A-Ant1-5745-PASS

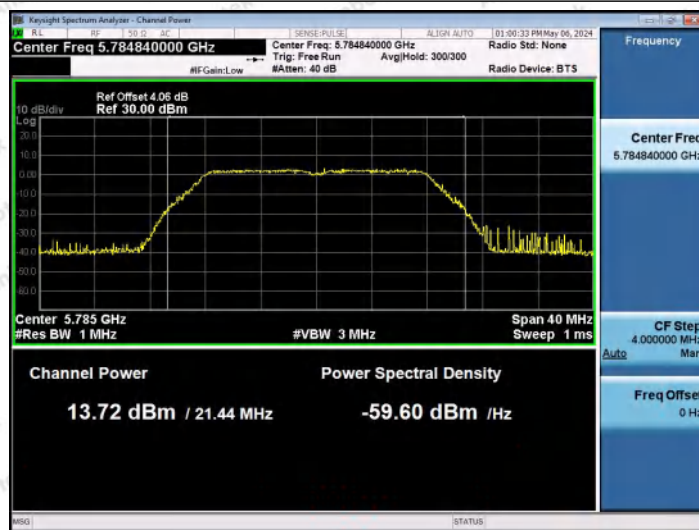


11A-Ant1-5785-PASS




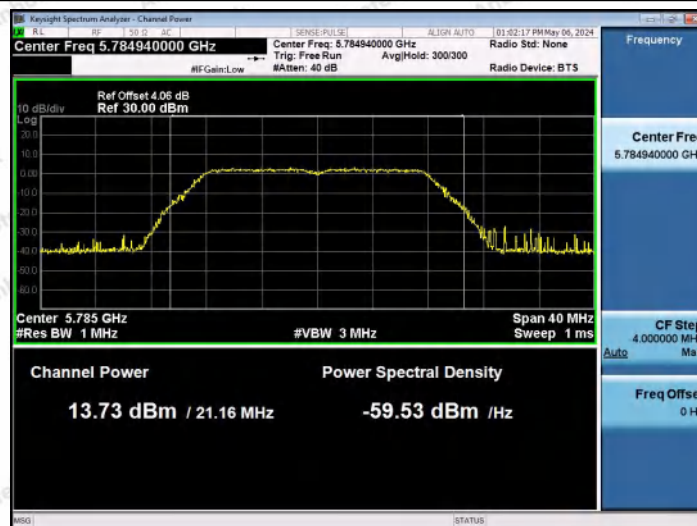

11A-Ant0-5785-PASS

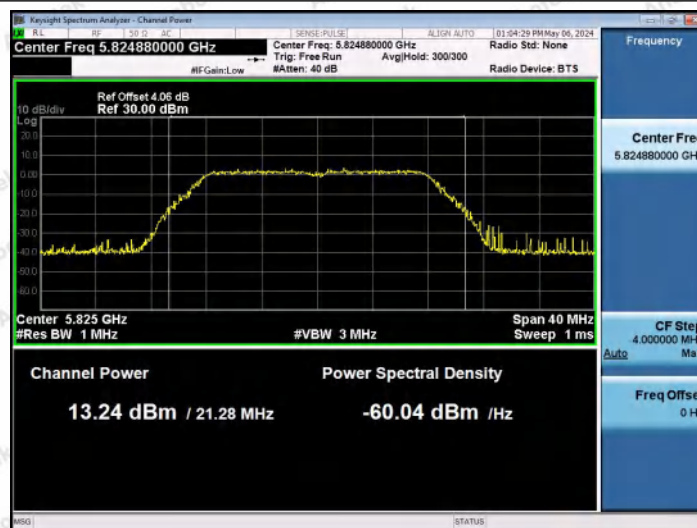


11A-Ant0-5825-PASS

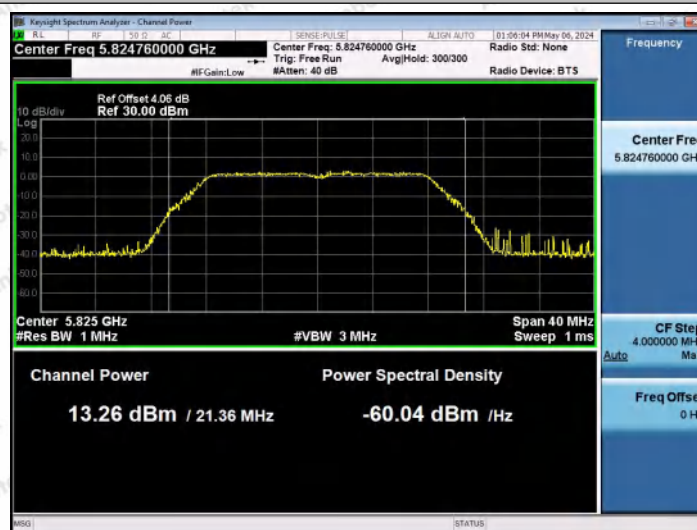


11A-Ant1-5825-PASS




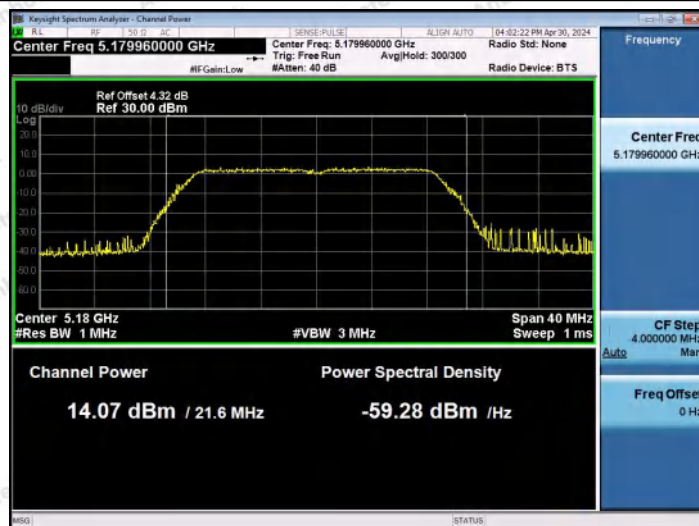

11N20MIMO-Ant0-5180-PASS

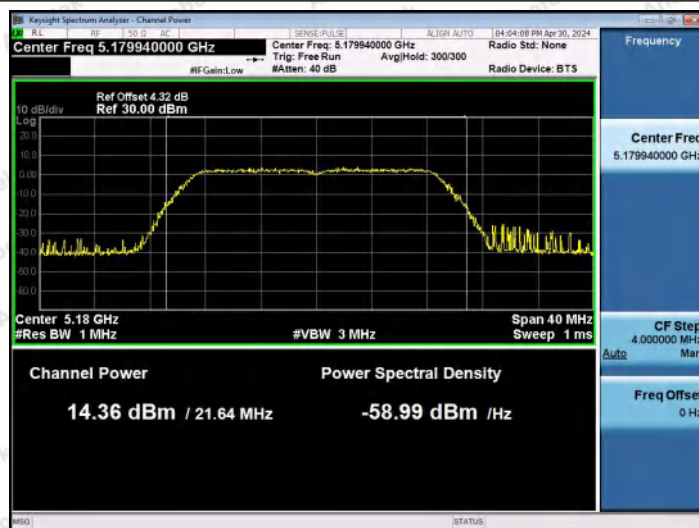


11N20MIMO-Ant1-5180-PASS

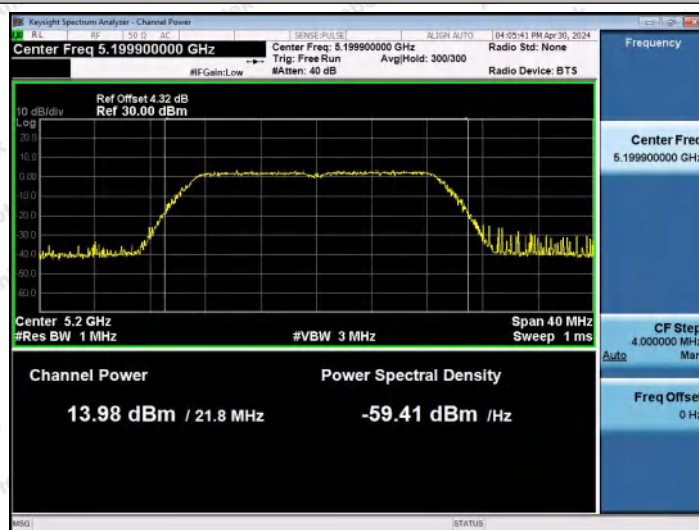


11N20MIMO-Ant0-5200-PASS




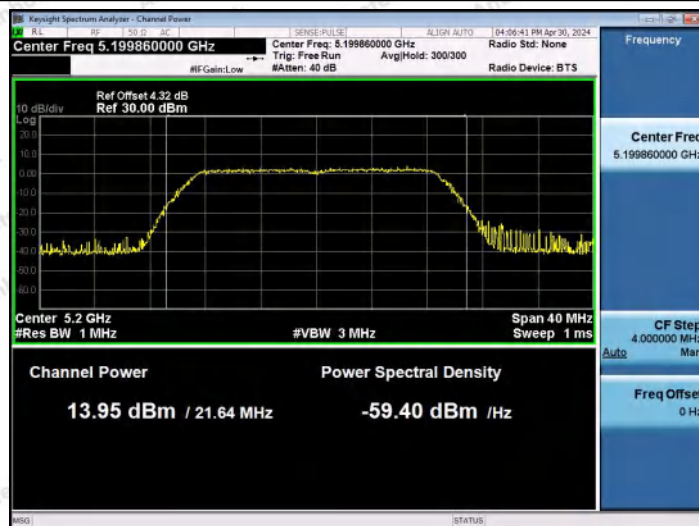

11N20MIMO-Ant1-5200-PASS

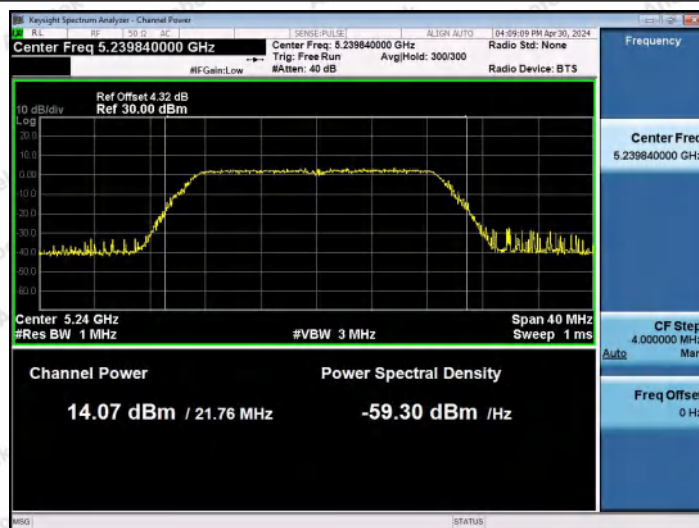

11N20MIMO-Ant0-5240-PASS

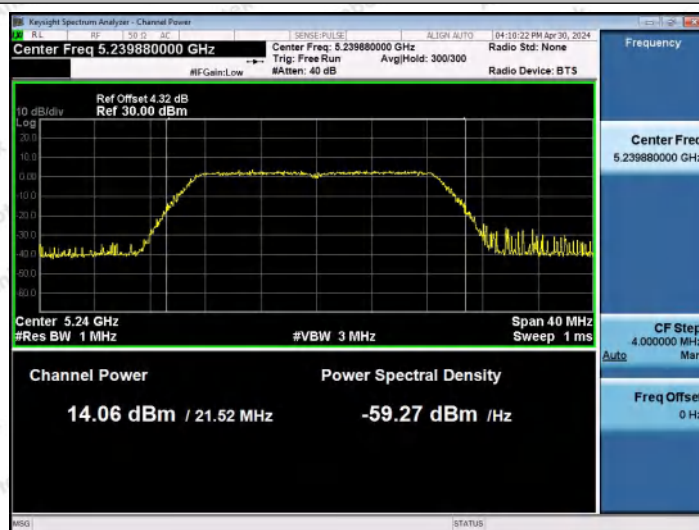

11N20MIMO-Ant1-5240-PASS

Shenzhen Anbotek Compliance Laboratory Limited

Address: 1/F., Building D, Sogood Science and Technology Park, Sanwei Community, Hangcheng Street, Bao'an District, Shenzhen, Guangdong, China.
Tel: (86) 0755-26066440 Fax: (86) 0755-26014772 Email: service@anbotek.com




Hotline


400-003-0500

www.anbotek.com.cn




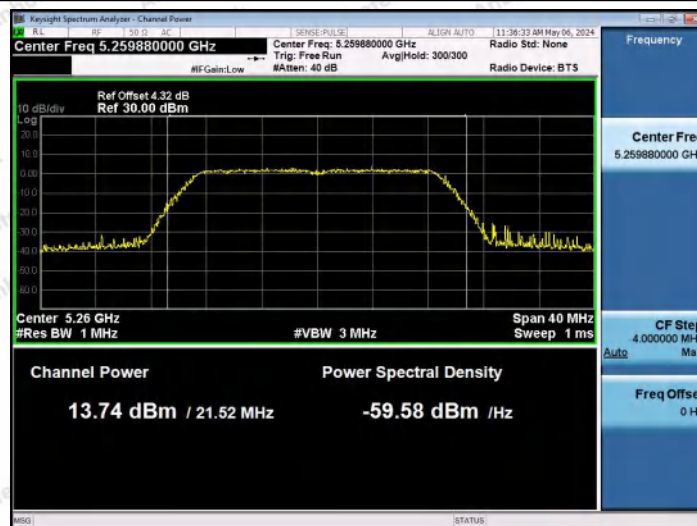

11N20MIMO-Ant0-5260-PASS

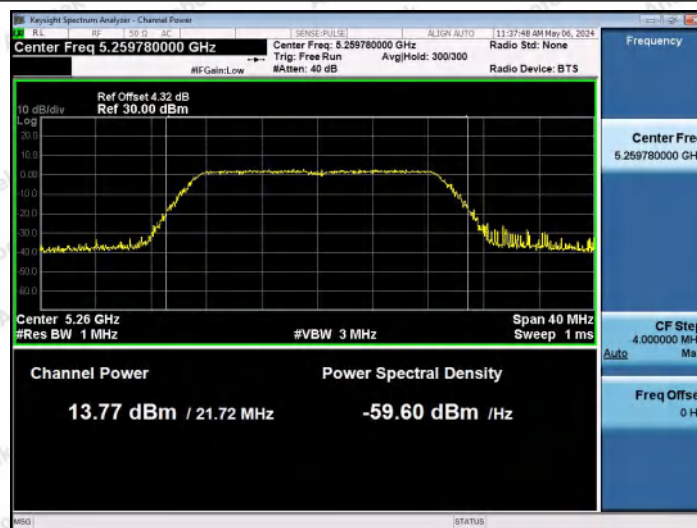


11N20MIMO-Ant1-5260-PASS

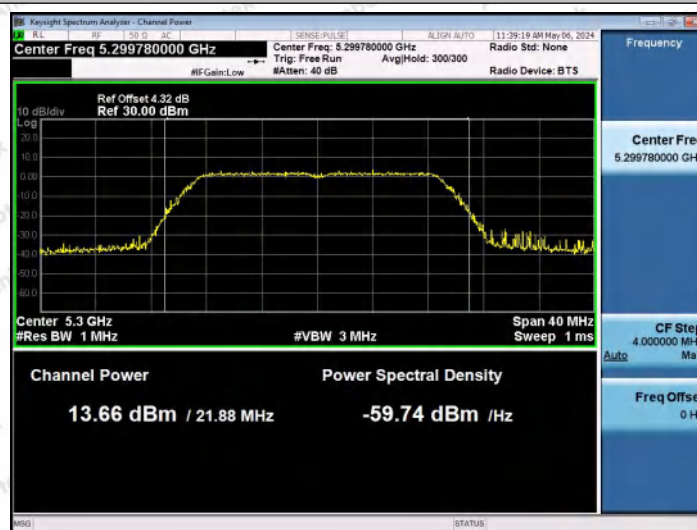


11N20MIMO-Ant0-5300-PASS




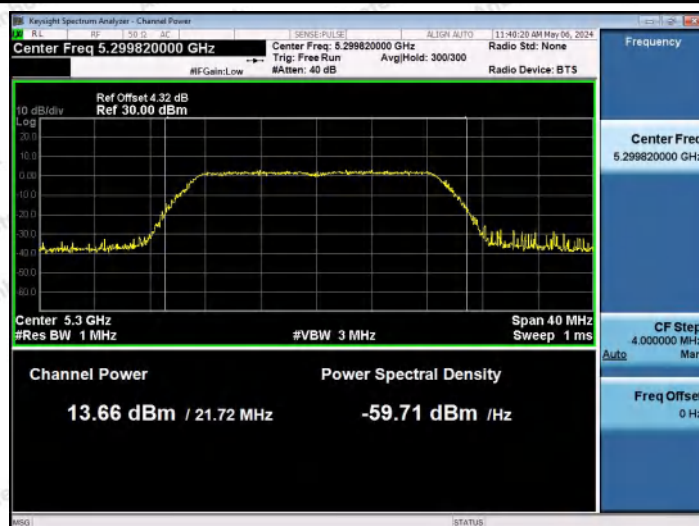

11N20MIMO-Ant1-5300-PASS

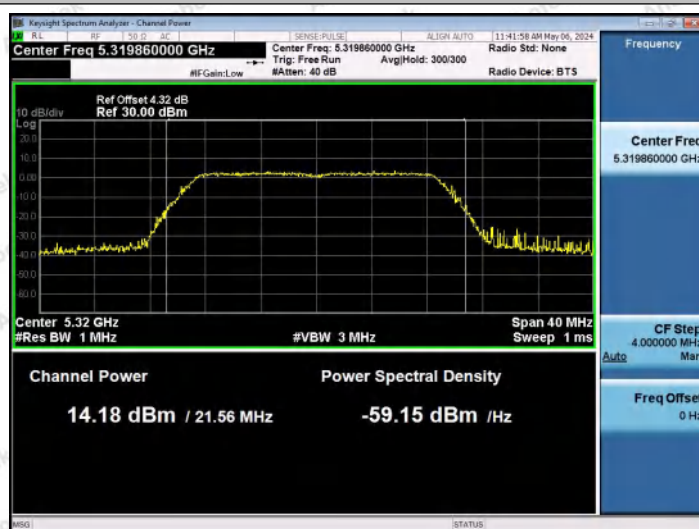


11N20MIMO-Ant0-5320-PASS

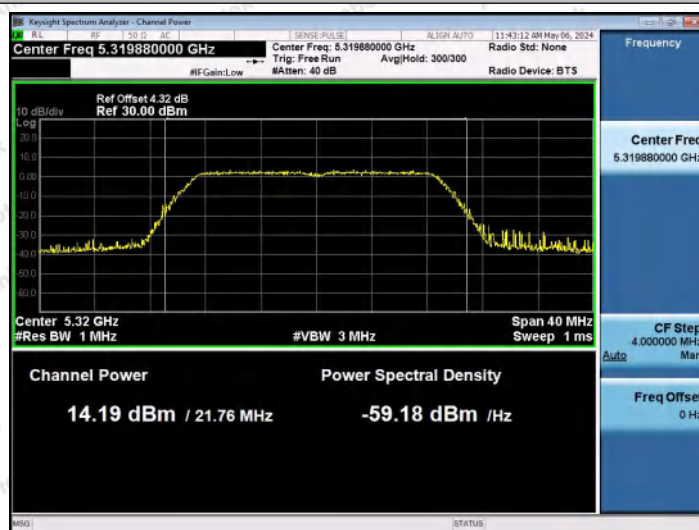


11N20MIMO-Ant1-5320-PASS




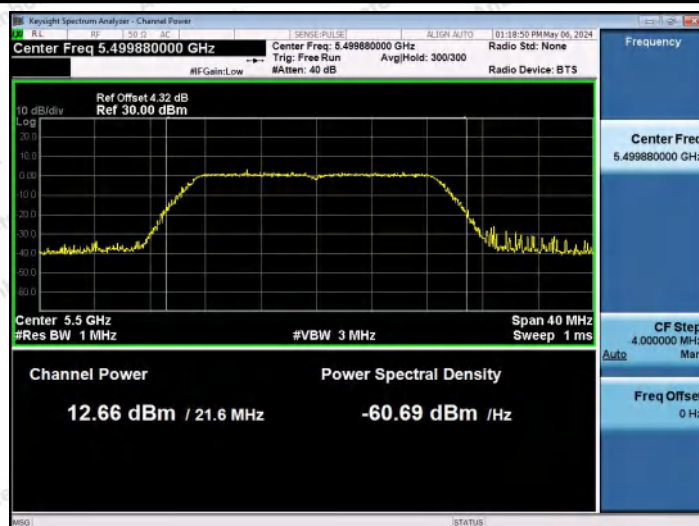

11N20MIMO-Ant0-5500-PASS

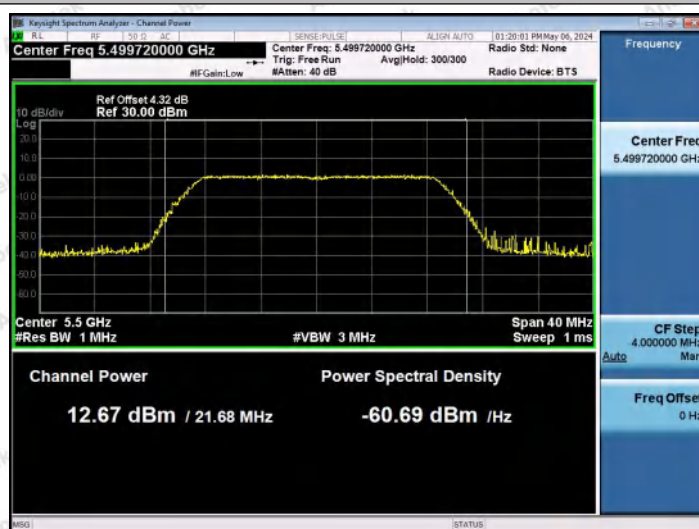

11N20MIMO-Ant1-5500-PASS

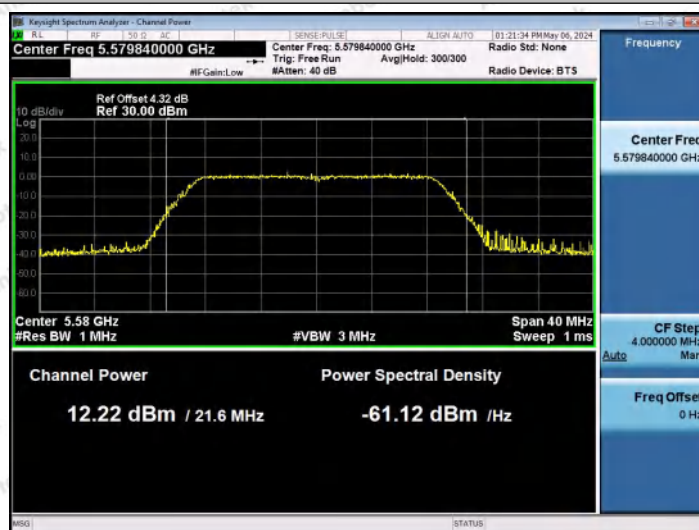

11N20MIMO-Ant0-5580-PASS

Shenzhen Anbotek Compliance Laboratory Limited

Address: 1/F., Building D, Sogood Science and Technology Park, Sanwei Community, Hangcheng Street, Bao'an District, Shenzhen, Guangdong, China.
 Tel: (86) 0755-26066440 Fax: (86) 0755-26014772 Email: service@anbotek.com




Hotline


400-003-0500

www.anbotek.com.cn




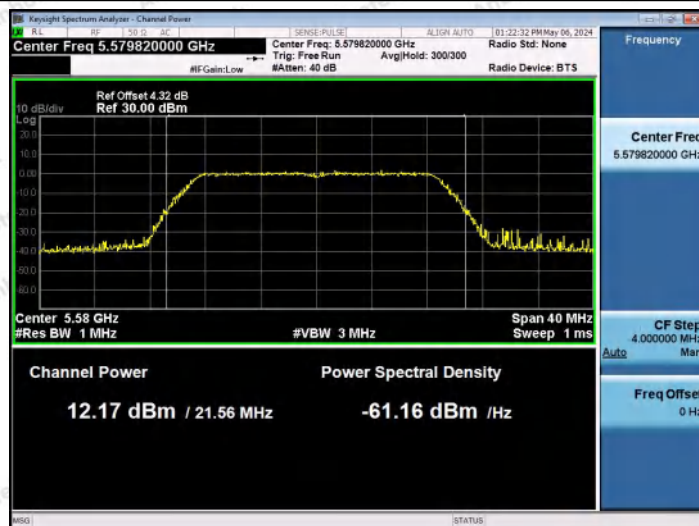

11N20MIMO-Ant1-5580-PASS

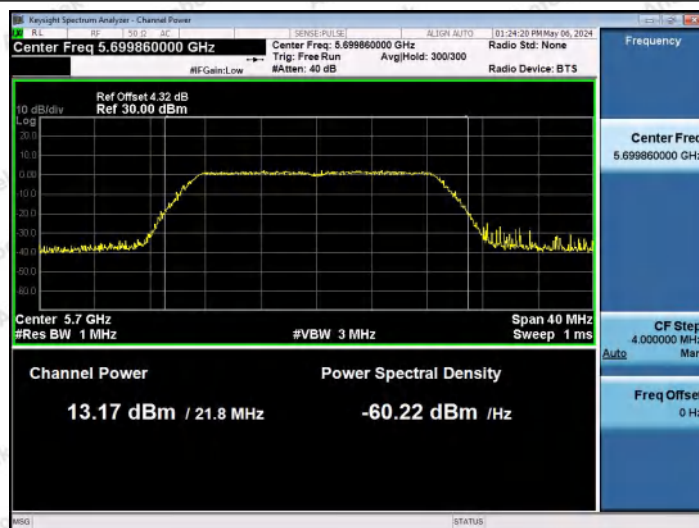

11N20MIMO-Ant0-5700-PASS

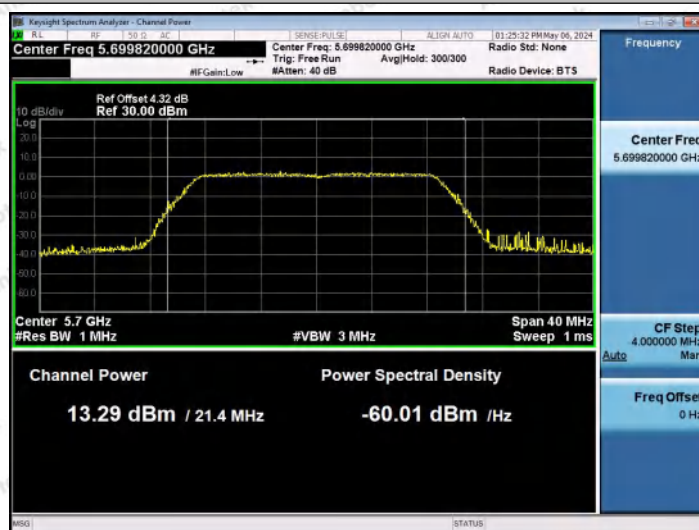

11N20MIMO-Ant1-5700-PASS

Shenzhen Anbotek Compliance Laboratory Limited

Address: 1/F., Building D, Sogood Science and Technology Park, Sanwei Community, Hangcheng Street, Bao'an District, Shenzhen, Guangdong, China.
Tel: (86) 0755-26066440 Fax: (86) 0755-26014772 Email: service@anbotek.com




Hotline


400-003-0500

www.anbotek.com.cn




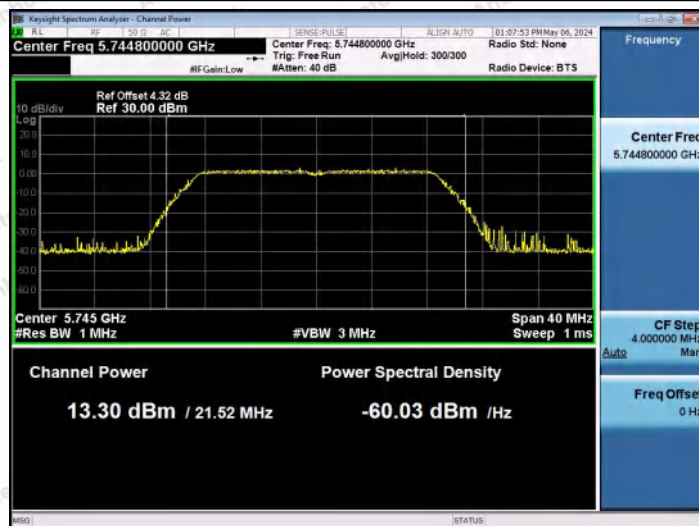

11N20MIMO-Ant0-5745-PASS

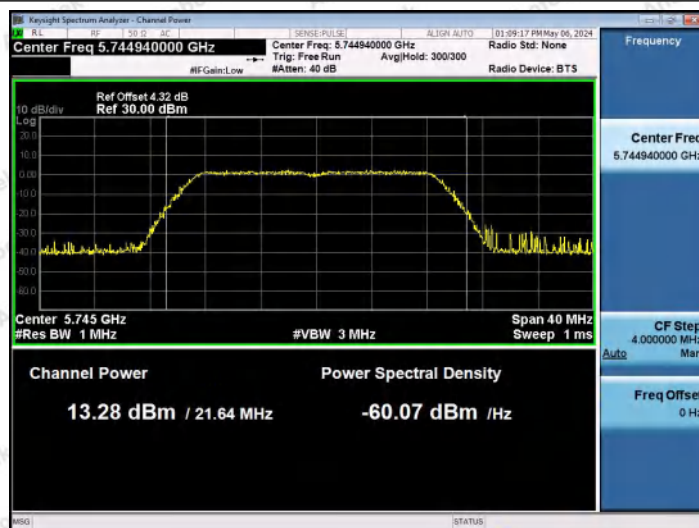

11N20MIMO-Ant1-5745-PASS

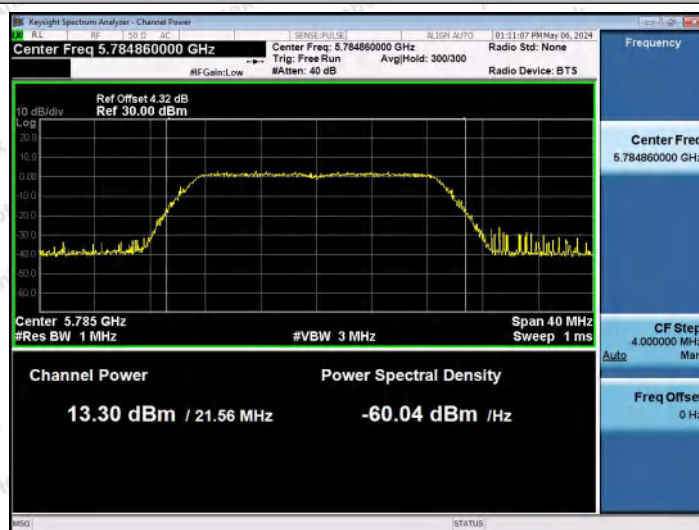

11N20MIMO-Ant0-5785-PASS

Shenzhen Anbotek Compliance Laboratory Limited

Address: 1/F., Building D, Sogood Science and Technology Park, Sanwei Community, Hangcheng Street, Bao'an District, Shenzhen, Guangdong, China.
Tel: (86) 0755-26066440 Fax: (86) 0755-26014772 Email: service@anbotek.com




Hotline


400-003-0500

www.anbotek.com.cn




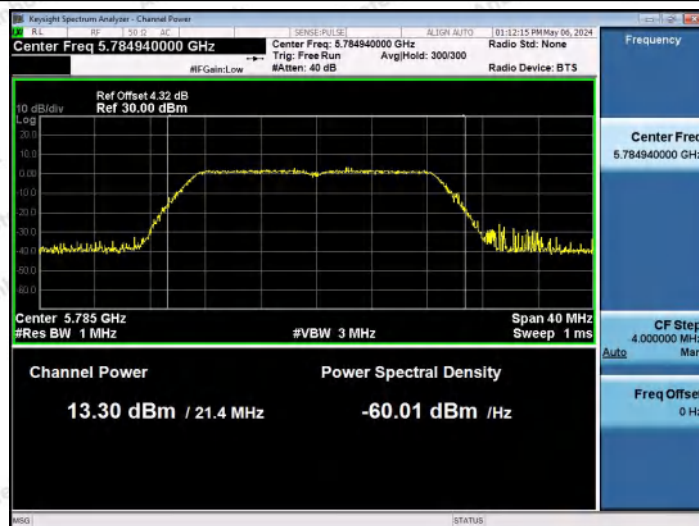

11N20MIMO-Ant1-5785-PASS

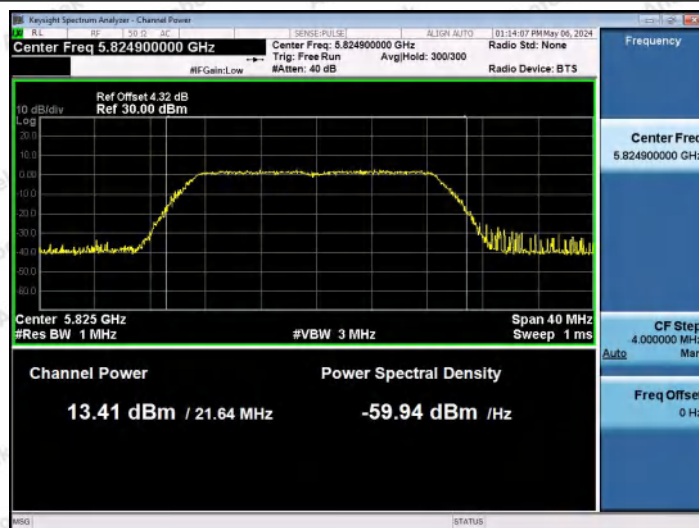

11N20MIMO-Ant0-5825-PASS

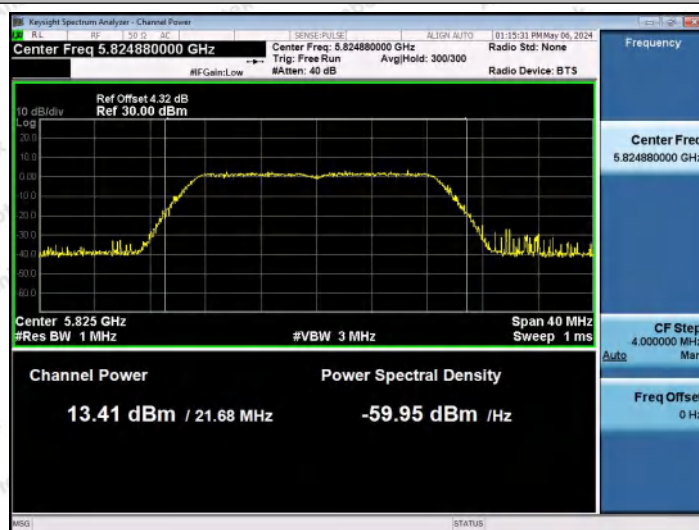

11N20MIMO-Ant1-5825-PASS

Shenzhen Anbotek Compliance Laboratory Limited

Address: 1/F., Building D, Sogood Science and Technology Park, Sanwei Community, Hangcheng Street, Bao'an District, Shenzhen, Guangdong, China.
Tel: (86) 0755-26066440 Fax: (86) 0755-26014772 Email: service@anbotek.com




Hotline


400-003-0500

www.anbotek.com.cn




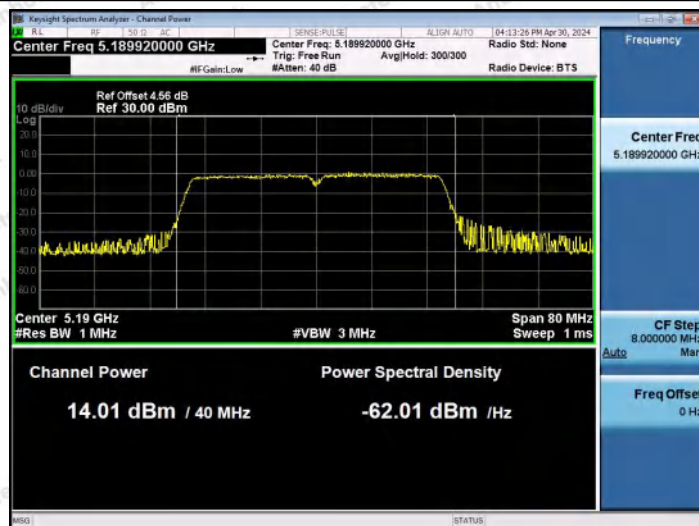

11N40MIMO-Ant0-5190-PASS

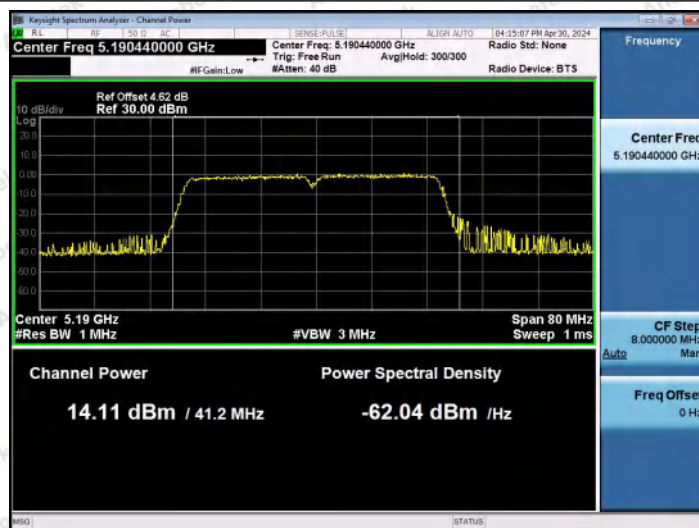


11N40MIMO-Ant1-5190-PASS

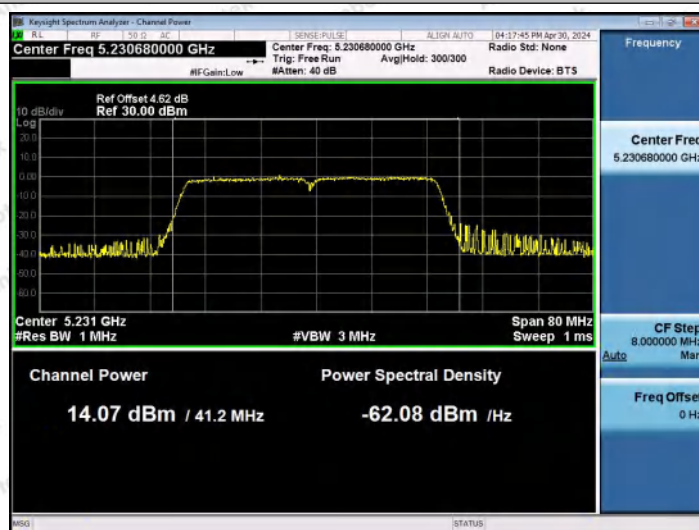


11N40MIMO-Ant0-5230-PASS




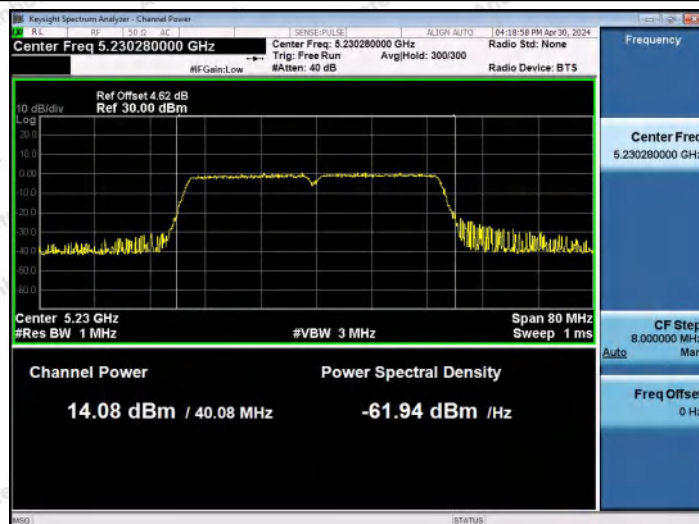

11N40MIMO-Ant1-5230-PASS

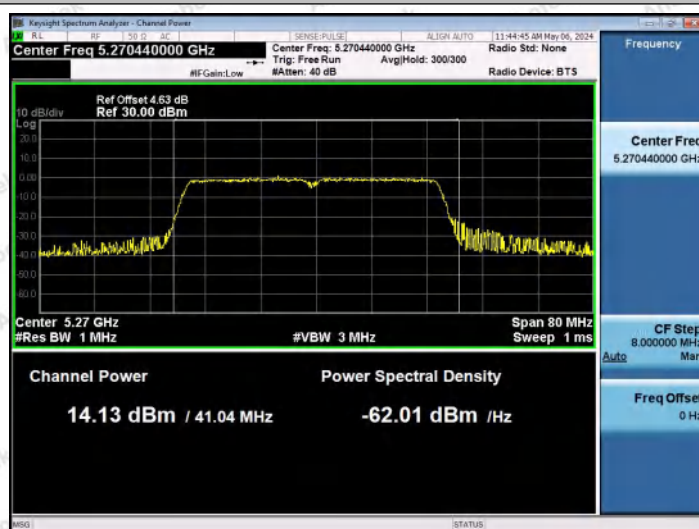

11N40MIMO-Ant0-5270-PASS

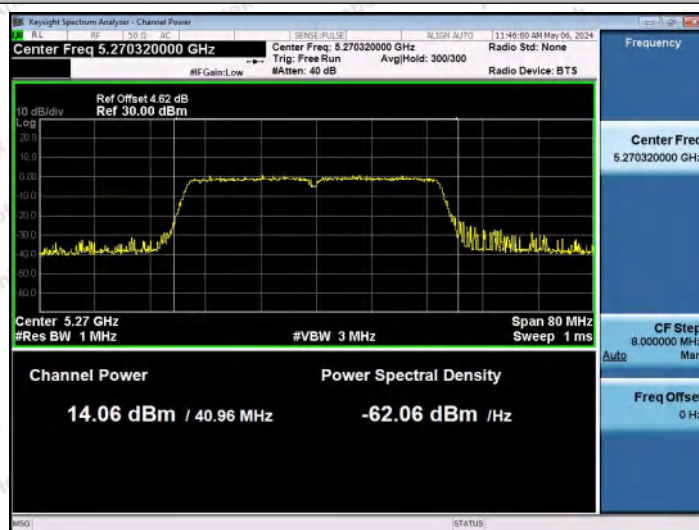

11N40MIMO-Ant1-5270-PASS

Shenzhen Anbotek Compliance Laboratory Limited

Address: 1/F., Building D, Sogood Science and Technology Park, Sanwei Community, Hangcheng Street, Bao'an District, Shenzhen, Guangdong, China.
Tel: (86) 0755-26066440 Fax: (86) 0755-26014772 Email: service@anbotek.com




Hotline


400-003-0500

www.anbotek.com.cn




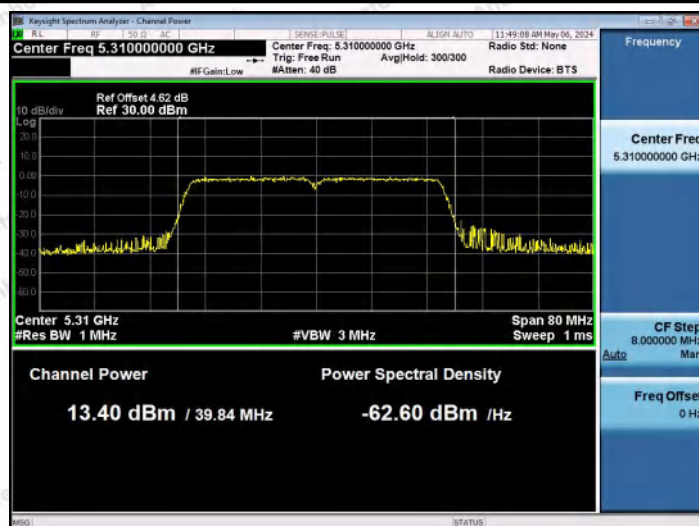

11N40MIMO-Ant0-5310-PASS

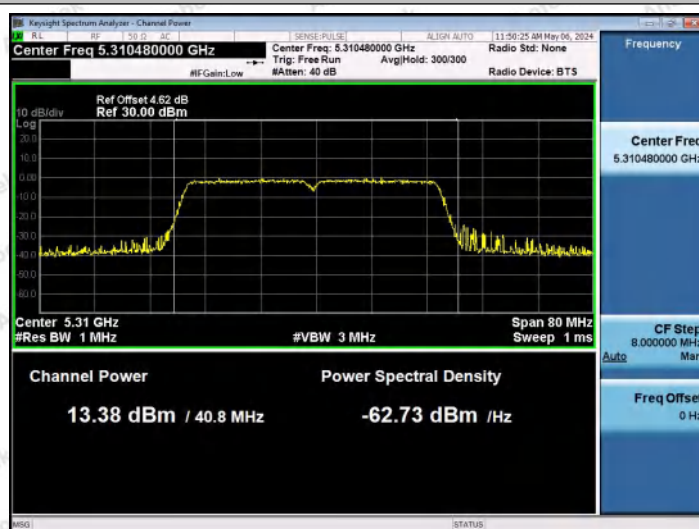


11N40MIMO-Ant1-5310-PASS

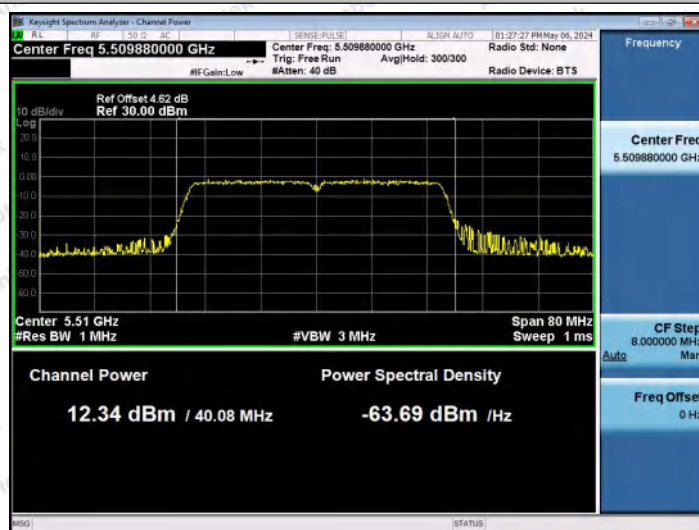


11N40MIMO-Ant0-5510-PASS




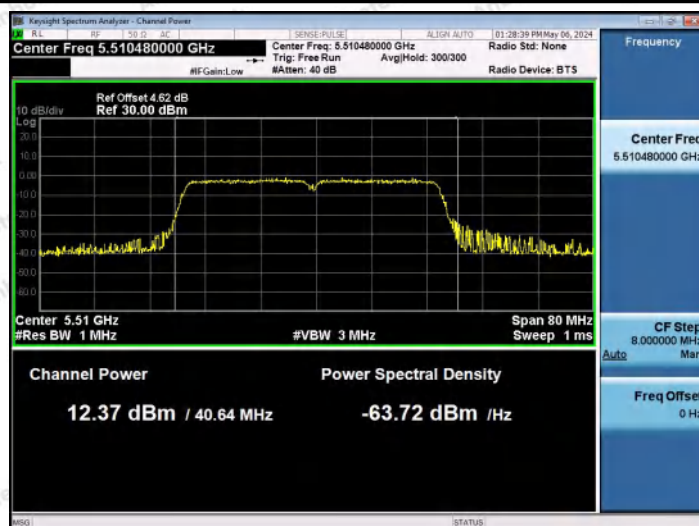

11N40MIMO-Ant1-5510-PASS

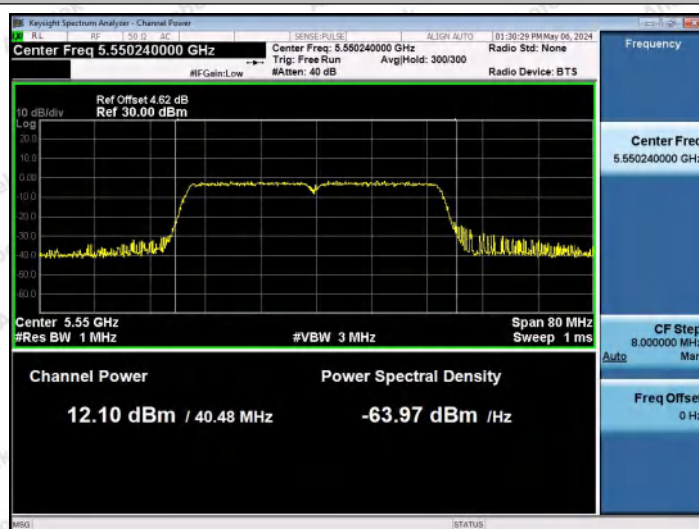

11N40MIMO-Ant0-5550-PASS

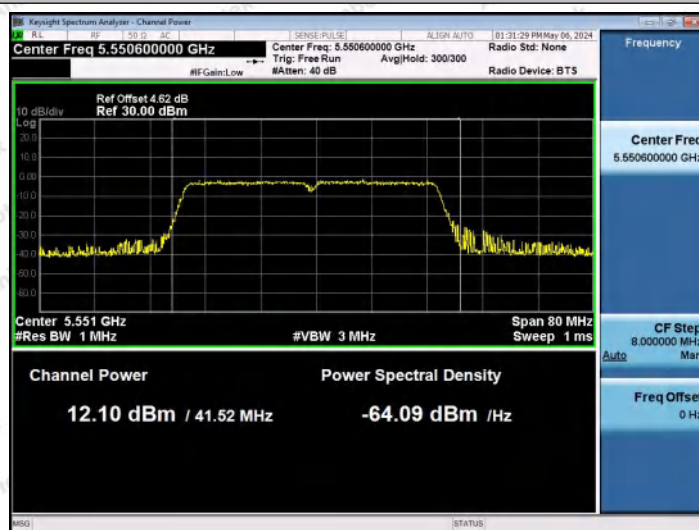

11N40MIMO-Ant1-5550-PASS

Shenzhen Anbotek Compliance Laboratory Limited

Address: 1/F., Building D, Sogood Science and Technology Park, Sanwei Community, Hangcheng Street, Bao'an District, Shenzhen, Guangdong, China.
Tel: (86) 0755-26066440 Fax: (86) 0755-26014772 Email: service@anbotek.com




Hotline


400-003-0500

www.anbotek.com.cn




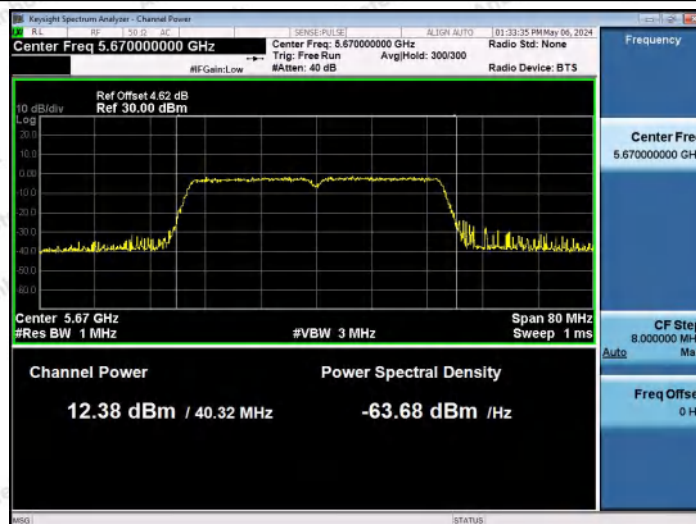

11N40MIMO-Ant0-5670-PASS

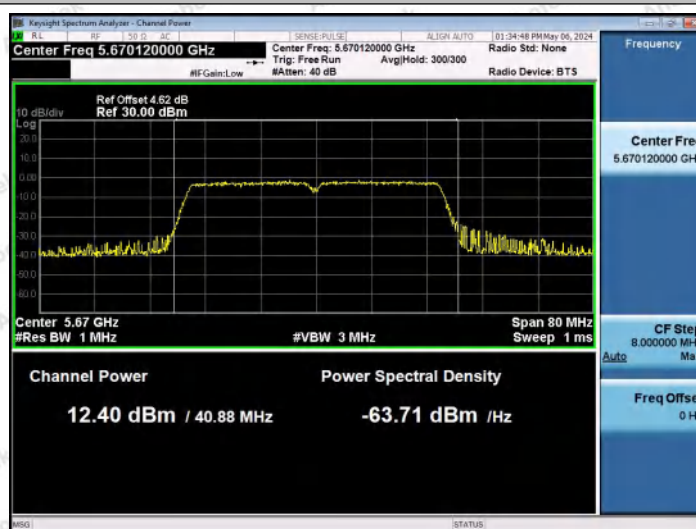


11N40MIMO-Ant1-5670-PASS

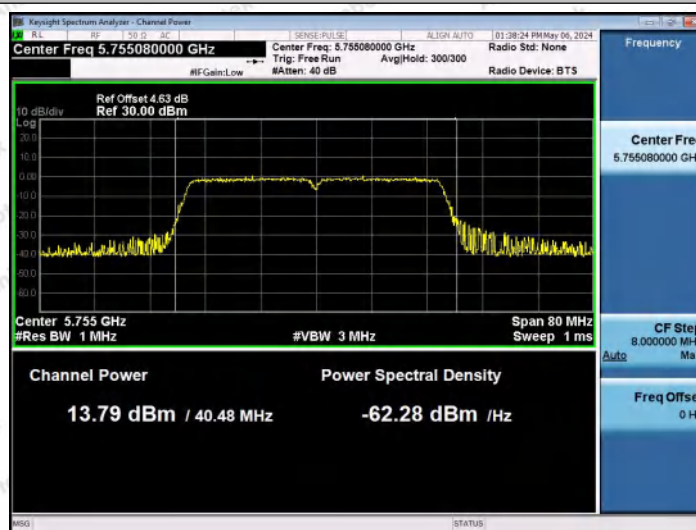


11N40MIMO-Ant0-5755-PASS




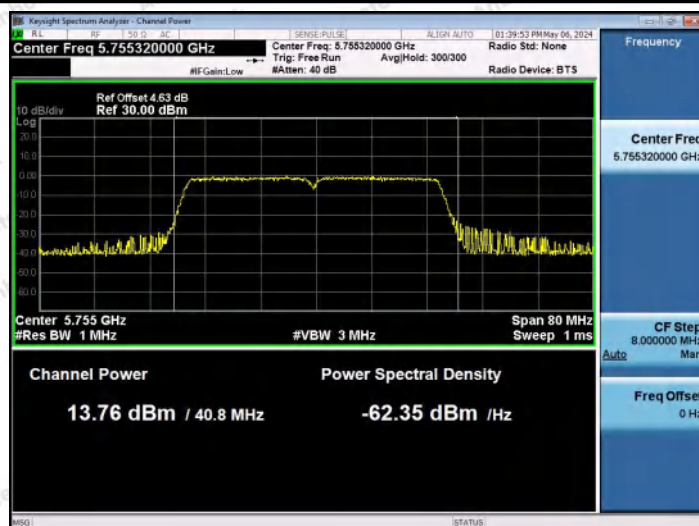

11N40MIMO-Ant1-5755-PASS

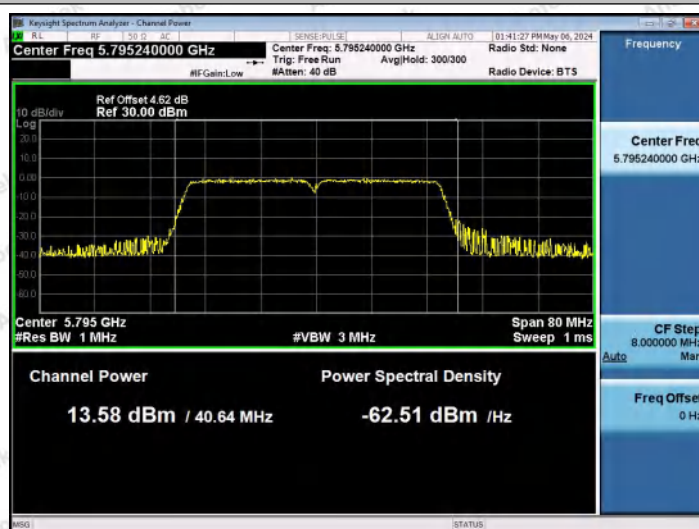


11N40MIMO-Ant0-5795-PASS

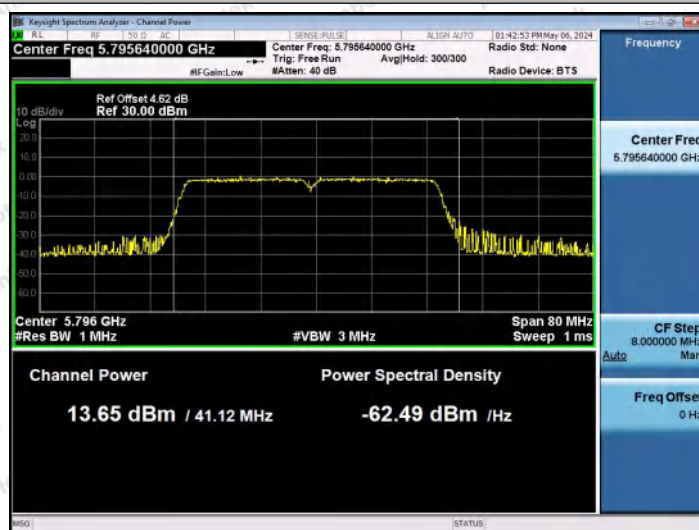


11N40MIMO-Ant1-5795-PASS




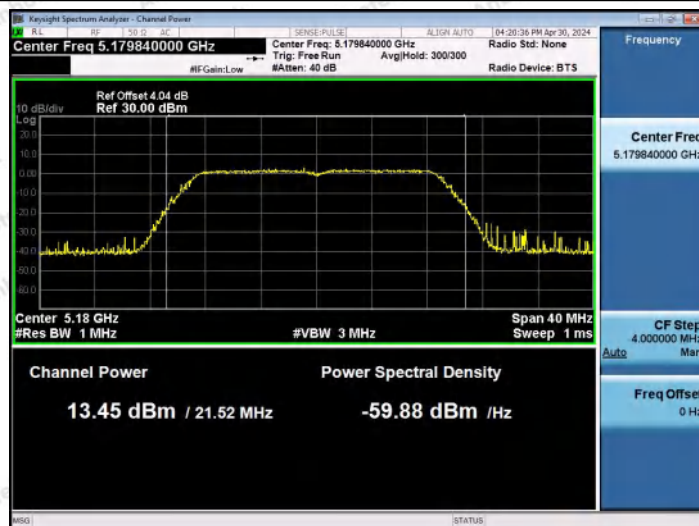

11AC20MIMO-Ant0-5180-PASS

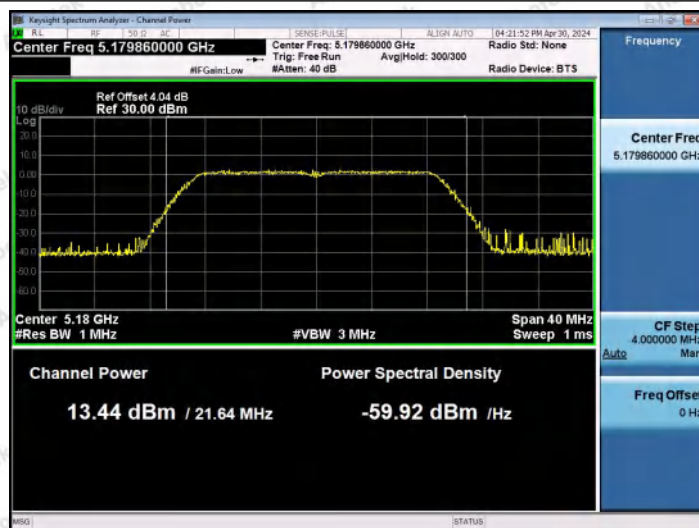

11AC20MIMO-Ant1-5180-PASS

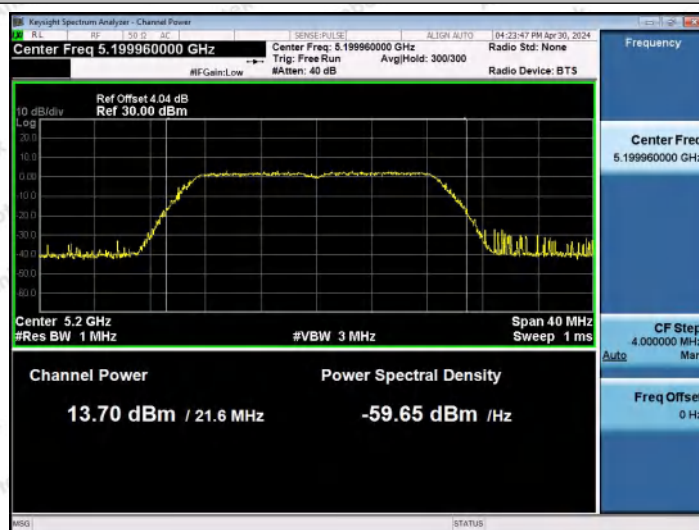

11AC20MIMO-Ant0-5200-PASS

Shenzhen Anbotek Compliance Laboratory Limited

Address: 1/F., Building D, Sogood Science and Technology Park, Sanwei Community, Hangcheng Street, Bao'an District, Shenzhen, Guangdong, China.
Tel: (86) 0755-26066440 Fax: (86) 0755-26014772 Email: service@anbotek.com




Hotline


400-003-0500

www.anbotek.com.cn




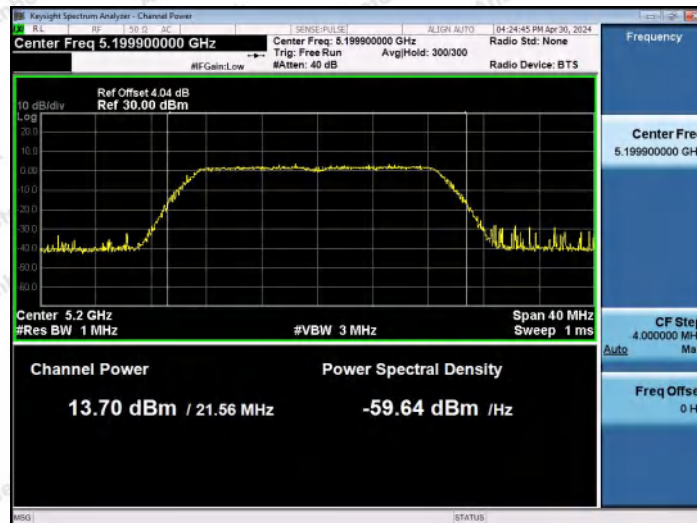

11AC20MIMO-Ant1-5200-PASS

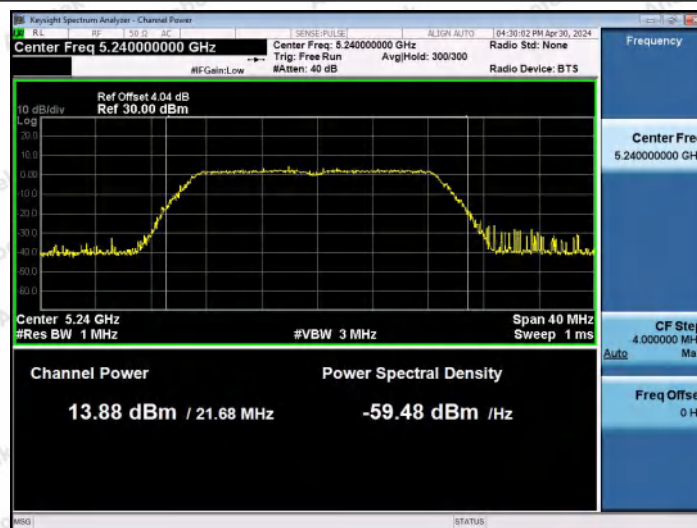


11AC20MIMO-Ant0-5240-PASS

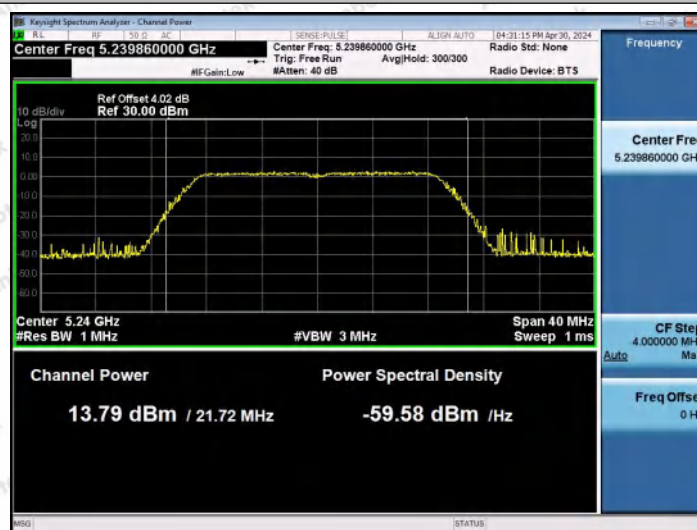


11AC20MIMO-Ant1-5240-PASS




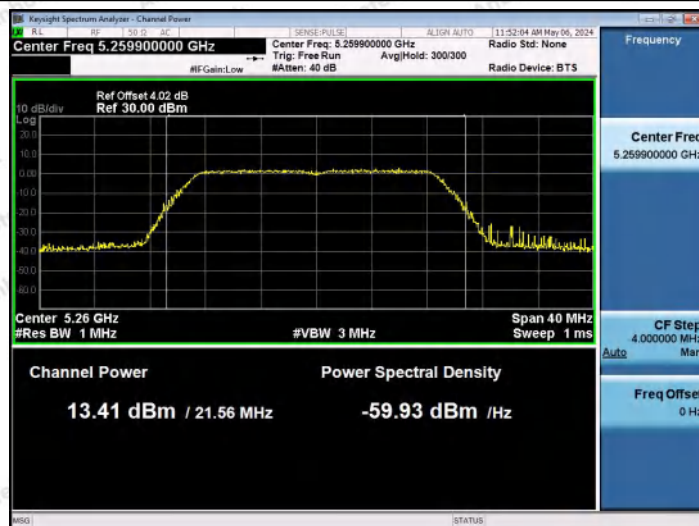

11AC20MIMO-Ant0-5260-PASS

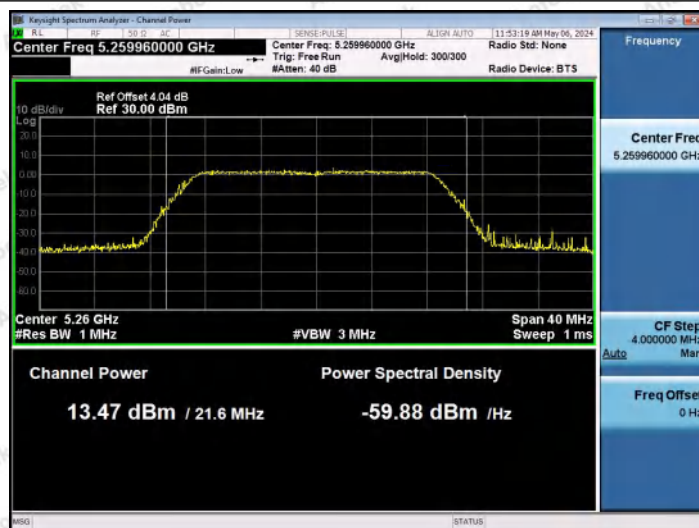

11AC20MIMO-Ant1-5260-PASS

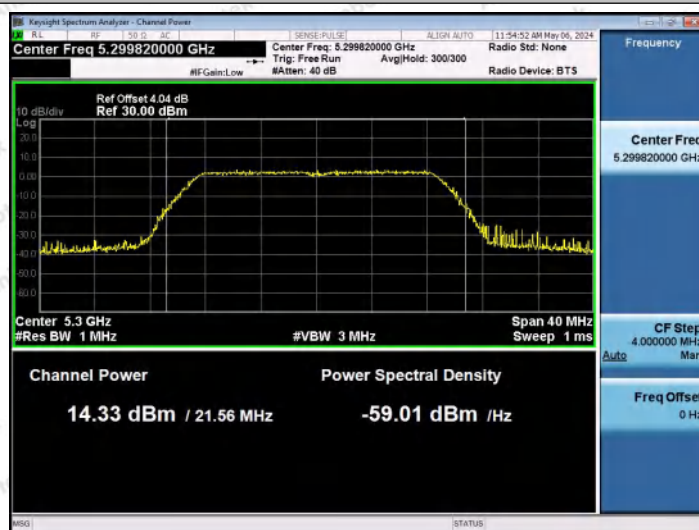

11AC20MIMO-Ant0-5300-PASS

Shenzhen Anbotek Compliance Laboratory Limited

Address: 1/F., Building D, Sogood Science and Technology Park, Sanwei Community, Hangcheng Street, Bao'an District, Shenzhen, Guangdong, China.
 Tel: (86) 0755-26066440 Fax: (86) 0755-26014772 Email: service@anbotek.com




Hotline


400-003-0500

www.anbotek.com.cn




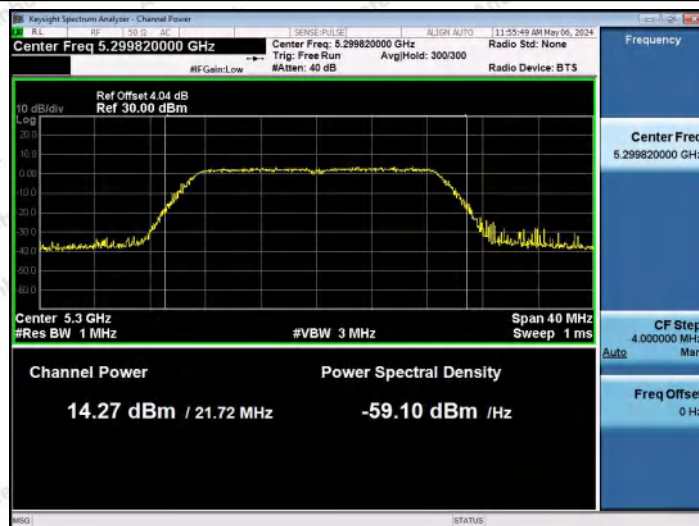

11AC20MIMO-Ant1-5300-PASS

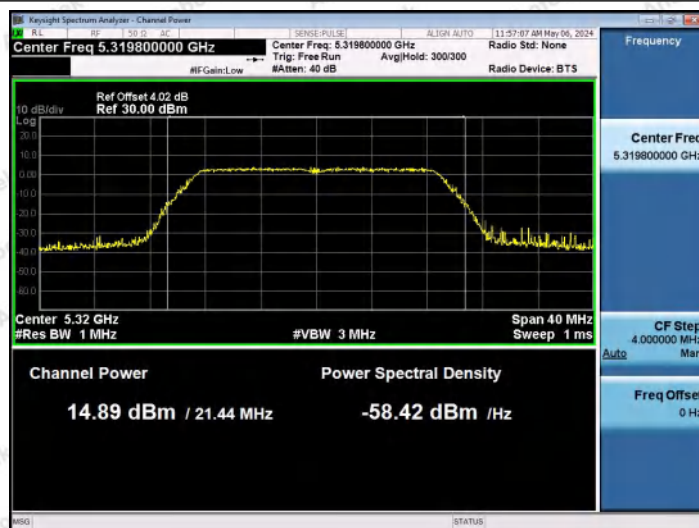


11AC20MIMO-Ant0-5320-PASS

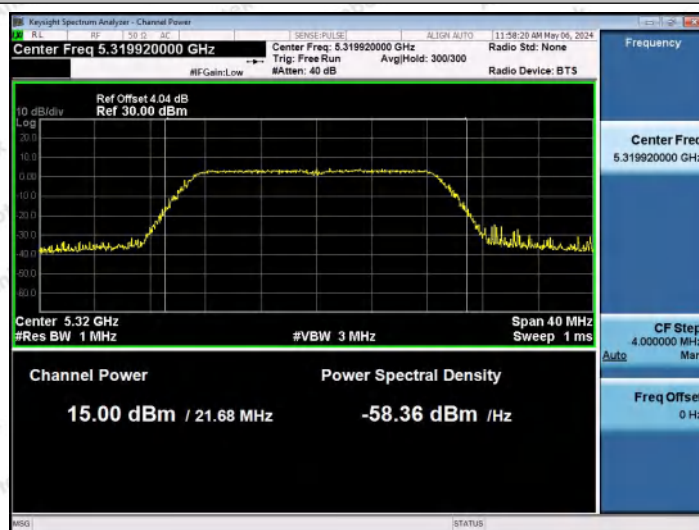


11AC20MIMO-Ant1-5320-PASS




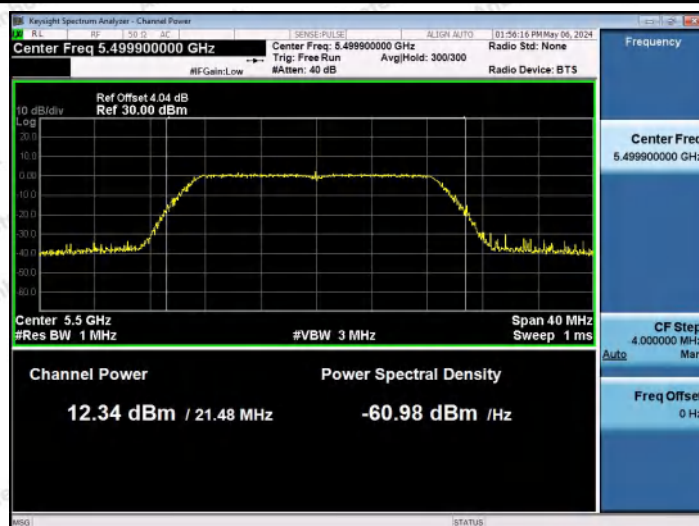

11AC20MIMO-Ant0-5500-PASS

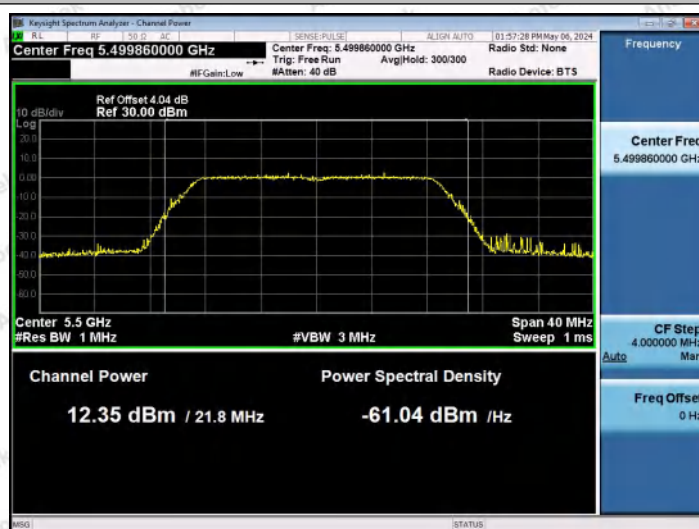

11AC20MIMO-Ant1-5500-PASS

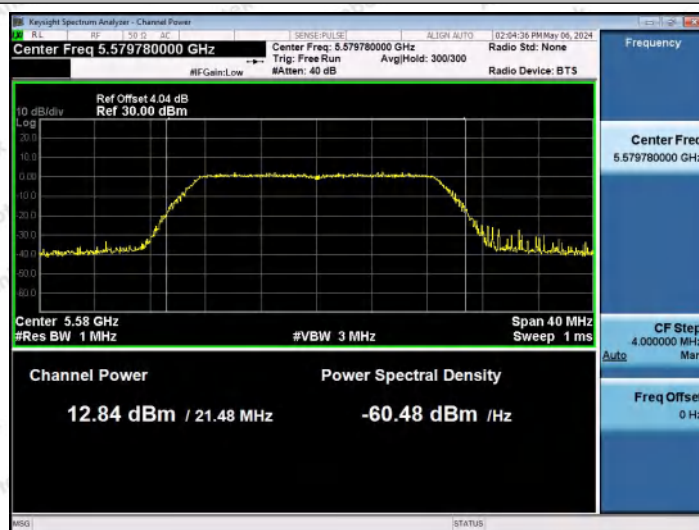

11AC20MIMO-Ant0-5580-PASS

Shenzhen Anbotek Compliance Laboratory Limited

Address: 1/F., Building D, Sogood Science and Technology Park, Sanwei Community, Hangcheng Street, Bao'an District, Shenzhen, Guangdong, China.
 Tel: (86) 0755-26066440 Fax: (86) 0755-26014772 Email: service@anbotek.com




Hotline


400-003-0500

www.anbotek.com.cn




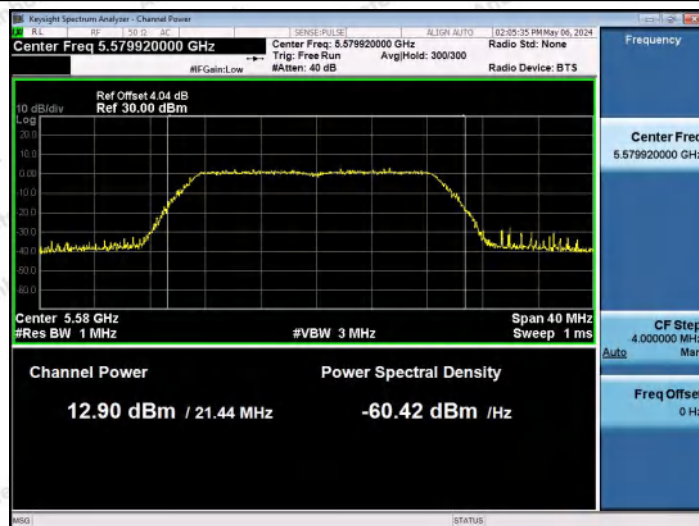

11AC20MIMO-Ant1-5580-PASS

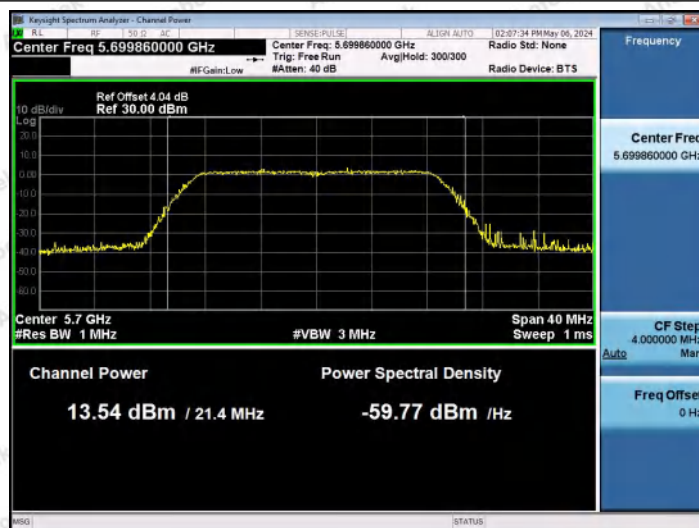

11AC20MIMO-Ant0-5700-PASS

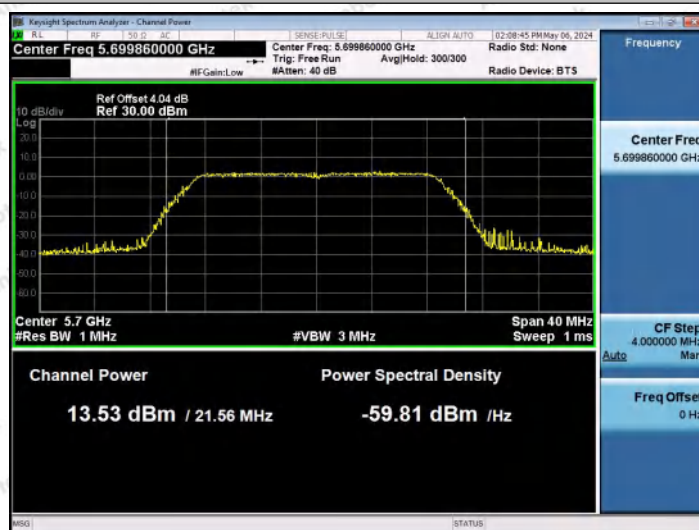

11AC20MIMO-Ant1-5700-PASS

Shenzhen Anbotek Compliance Laboratory Limited

Address: 1/F., Building D, Sogood Science and Technology Park, Sanwei Community, Hangcheng Street, Bao'an District, Shenzhen, Guangdong, China.
 Tel: (86) 0755-26066440 Fax: (86) 0755-26014772 Email: service@anbotek.com




Hotline


400-003-0500

www.anbotek.com.cn




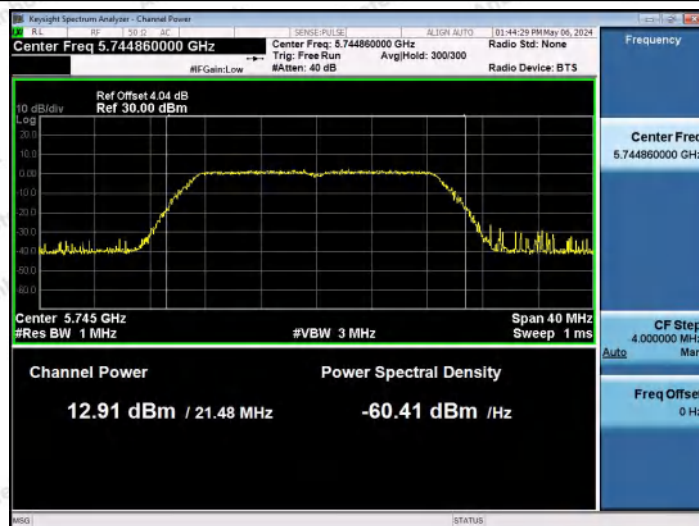

11AC20MIMO-Ant0-5745-PASS

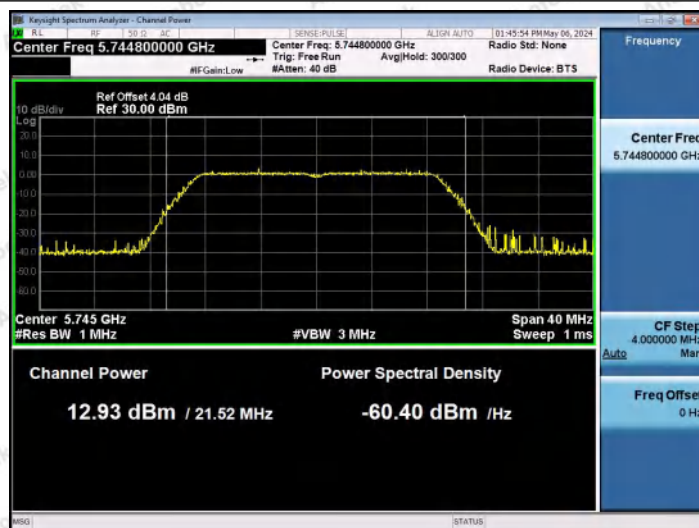

11AC20MIMO-Ant1-5745-PASS

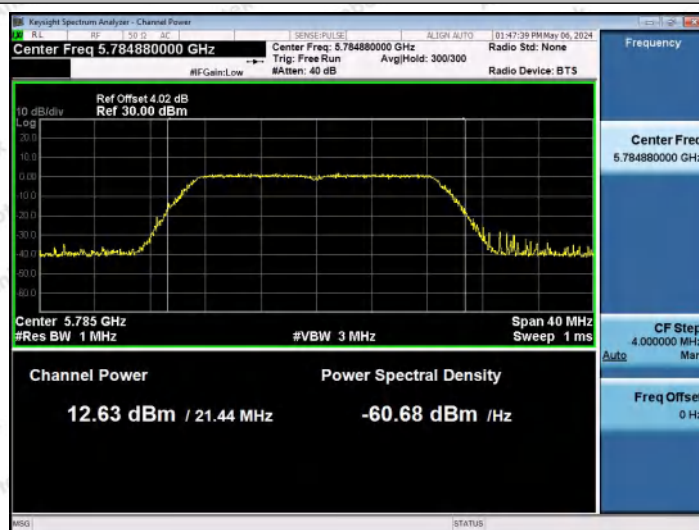

11AC20MIMO-Ant0-5785-PASS

Shenzhen Anbotek Compliance Laboratory Limited

Address: 1/F., Building D, Sogood Science and Technology Park, Sanwei Community, Hangcheng Street, Bao'an District, Shenzhen, Guangdong, China.
Tel: (86) 0755-26066440 Fax: (86) 0755-26014772 Email: service@anbotek.com




Hotline


400-003-0500

www.anbotek.com.cn




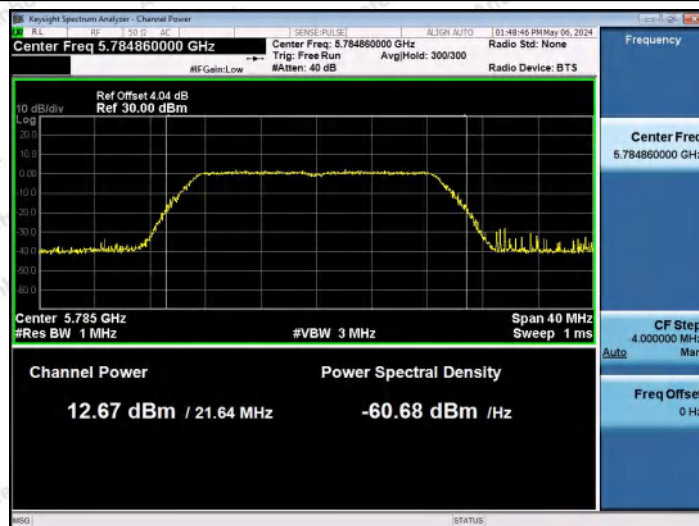

11AC20MIMO-Ant1-5785-PASS

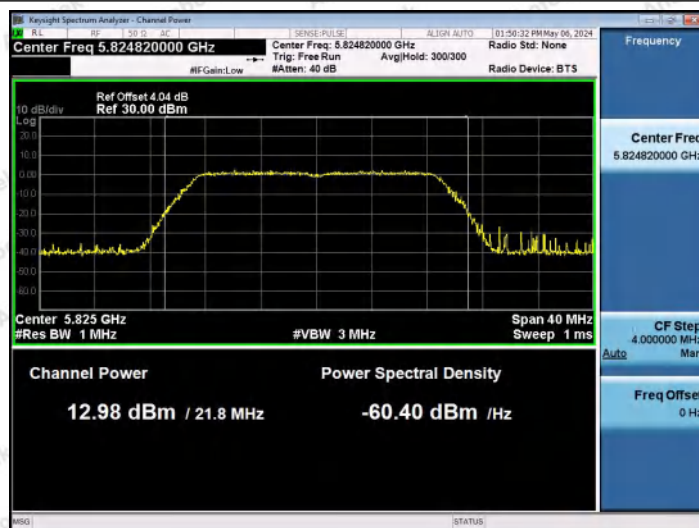

11AC20MIMO-Ant0-5825-PASS

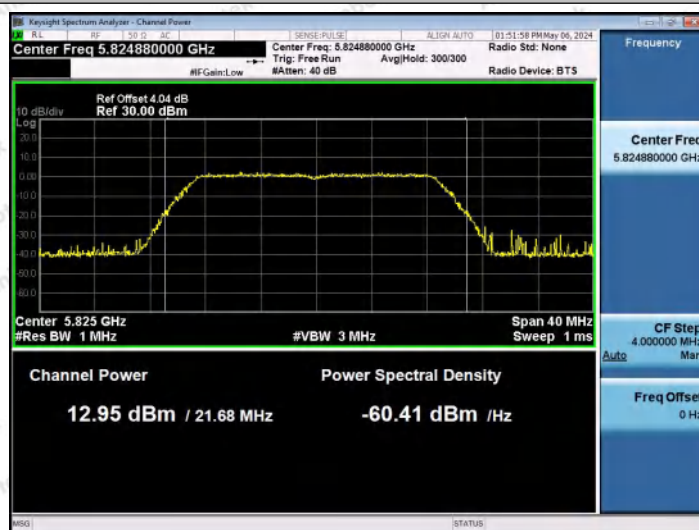

11AC20MIMO-Ant1-5825-PASS

Shenzhen Anbotek Compliance Laboratory Limited

Address: 1/F., Building D, Sogood Science and Technology Park, Sanwei Community, Hangcheng Street, Bao'an District, Shenzhen, Guangdong, China.
Tel: (86) 0755-26066440 Fax: (86) 0755-26014772 Email: service@anbotek.com




Hotline


400-003-0500

www.anbotek.com.cn




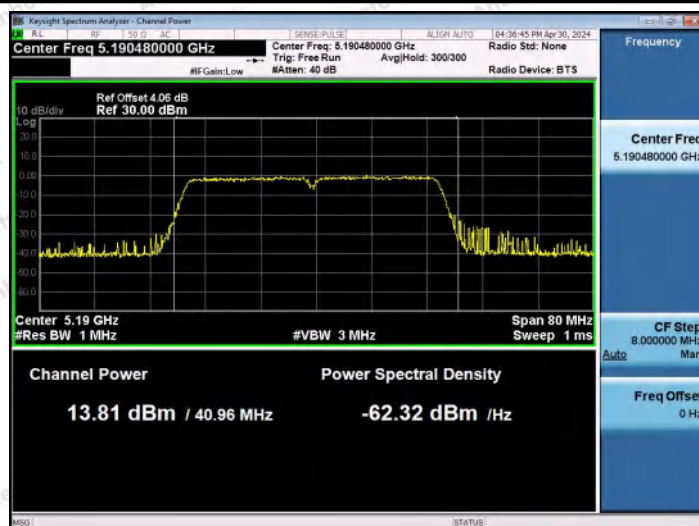

11AC40MIMO-Ant0-5190-PASS

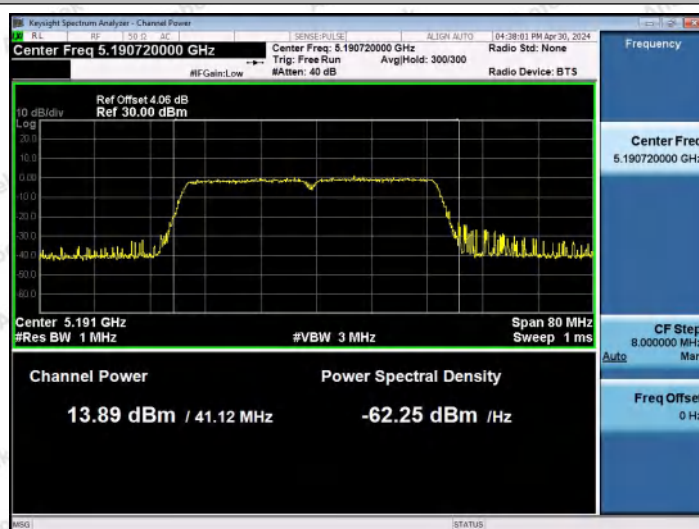

11AC40MIMO-Ant1-5190-PASS

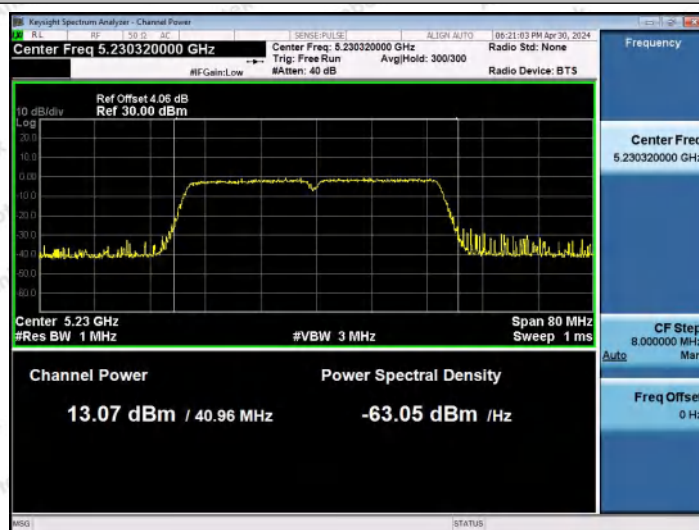

11AC40MIMO-Ant0-5230-PASS

Shenzhen Anbotek Compliance Laboratory Limited

Address: 1/F., Building D, Sogood Science and Technology Park, Sanwei Community, Hangcheng Street, Bao'an District, Shenzhen, Guangdong, China.
 Tel: (86) 0755-26066440 Fax: (86) 0755-26014772 Email: service@anbotek.com




Hotline


400-003-0500

www.anbotek.com.cn




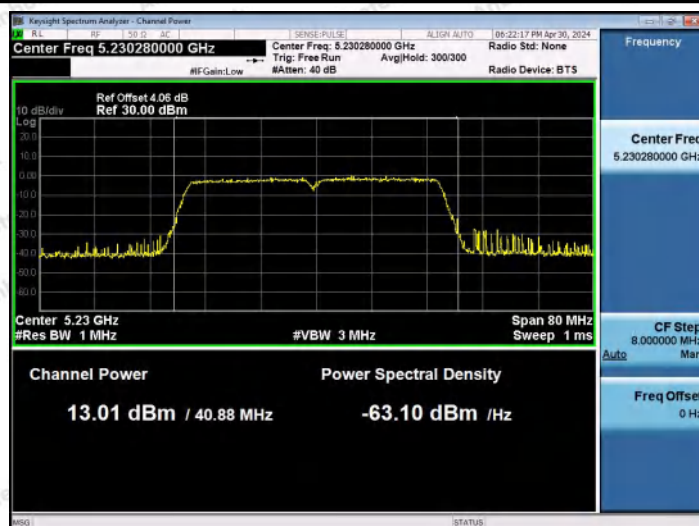

11AC40MIMO-Ant1-5230-PASS

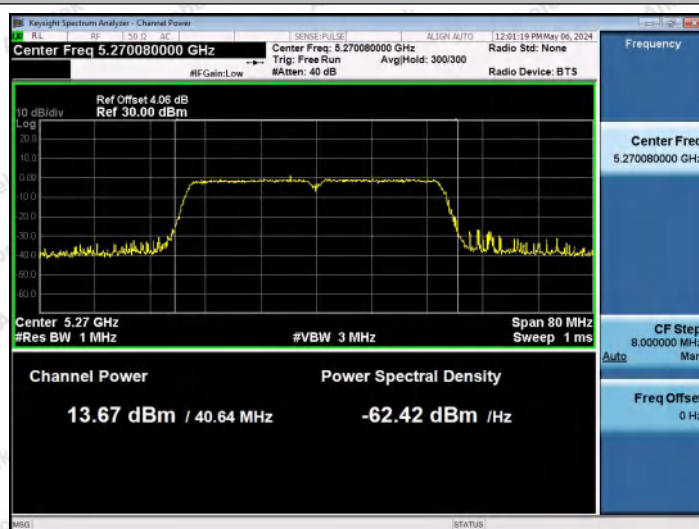

11AC40MIMO-Ant0-5270-PASS

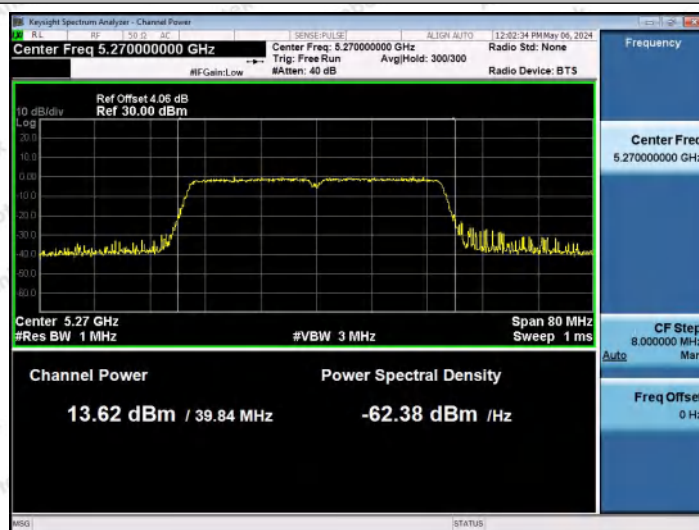

11AC40MIMO-Ant1-5270-PASS

Shenzhen Anbotek Compliance Laboratory Limited

Address: 1/F., Building D, Sogood Science and Technology Park, Sanwei Community, Hangcheng Street, Bao'an District, Shenzhen, Guangdong, China.
Tel: (86) 0755-26066440 Fax: (86) 0755-26014772 Email: service@anbotek.com




Hotline


400-003-0500

www.anbotek.com.cn




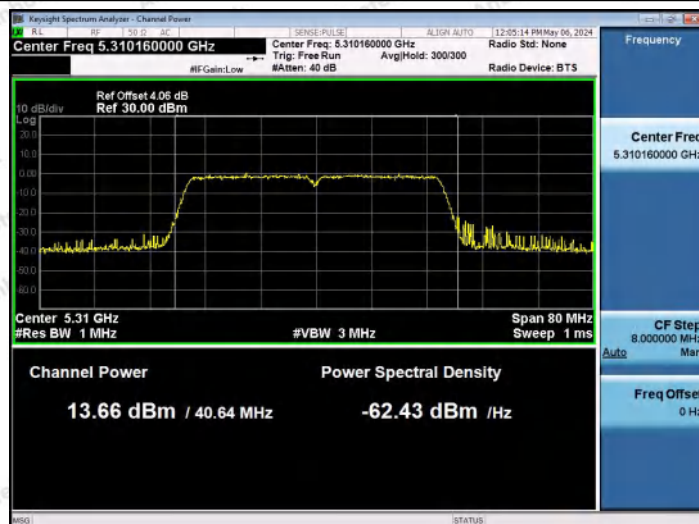

11AC40MIMO-Ant0-5310-PASS

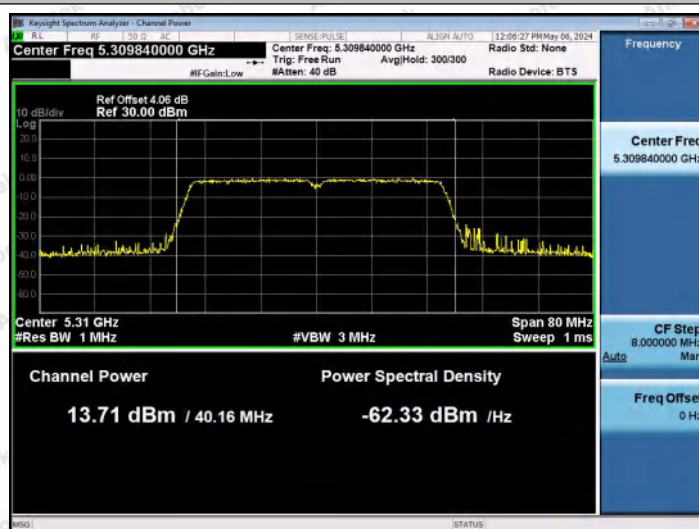

11AC40MIMO-Ant1-5310-PASS

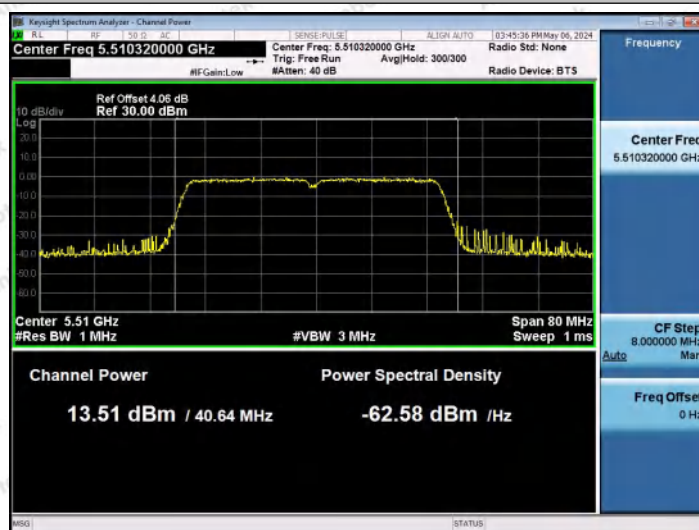

11AC40MIMO-Ant0-5510-PASS

Shenzhen Anbotek Compliance Laboratory Limited

Address: 1/F., Building D, Sogood Science and Technology Park, Sanwei Community, Hangcheng Street, Bao'an District, Shenzhen, Guangdong, China.
 Tel: (86) 0755-26066440 Fax: (86) 0755-26014772 Email: service@anbotek.com




Hotline


400-003-0500

www.anbotek.com.cn




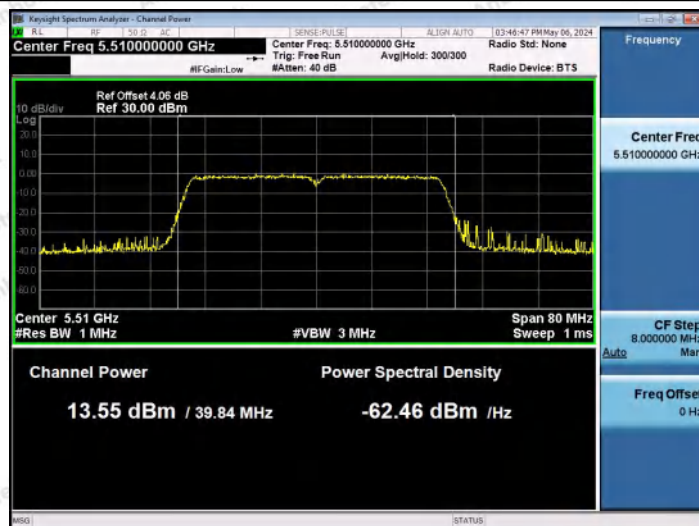

11AC40MIMO-Ant1-5510-PASS

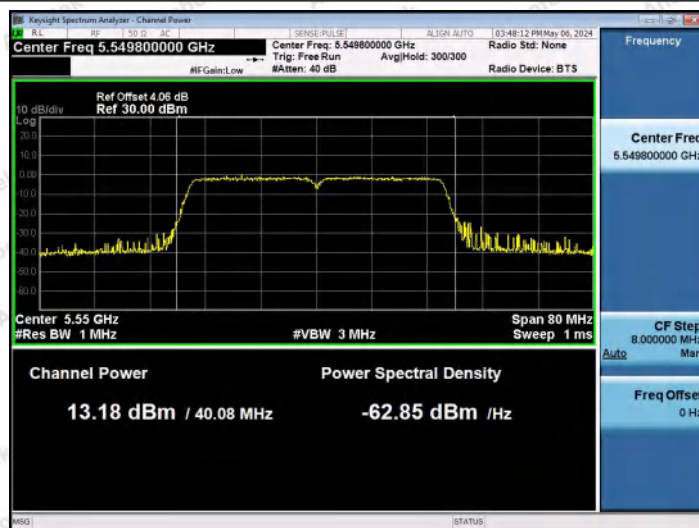

11AC40MIMO-Ant0-5550-PASS

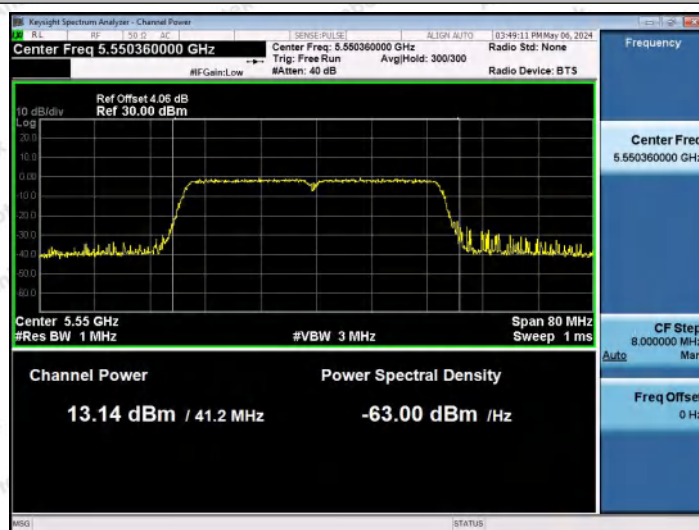

11AC40MIMO-Ant1-5550-PASS

Shenzhen Anbotek Compliance Laboratory Limited

Address: 1/F., Building D, Sogood Science and Technology Park, Sanwei Community, Hangcheng Street, Bao'an District, Shenzhen, Guangdong, China.
Tel: (86) 0755-26066440 Fax: (86) 0755-26014772 Email: service@anbotek.com




Hotline


400-003-0500

www.anbotek.com.cn




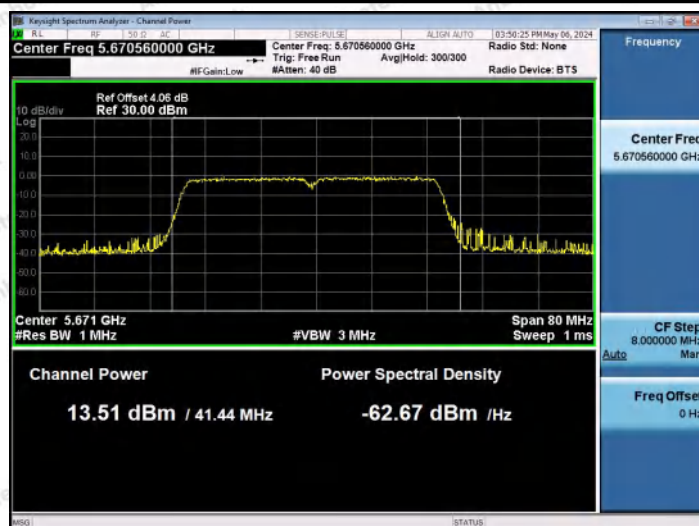

11AC40MIMO-Ant0-5670-PASS

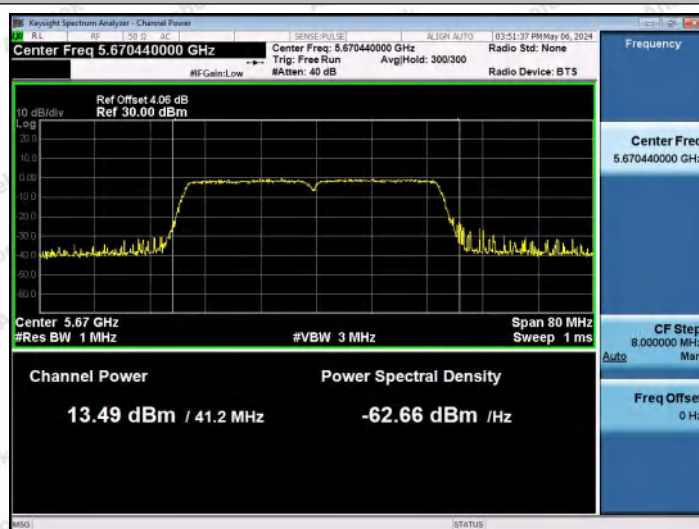


11AC40MIMO-Ant1-5670-PASS

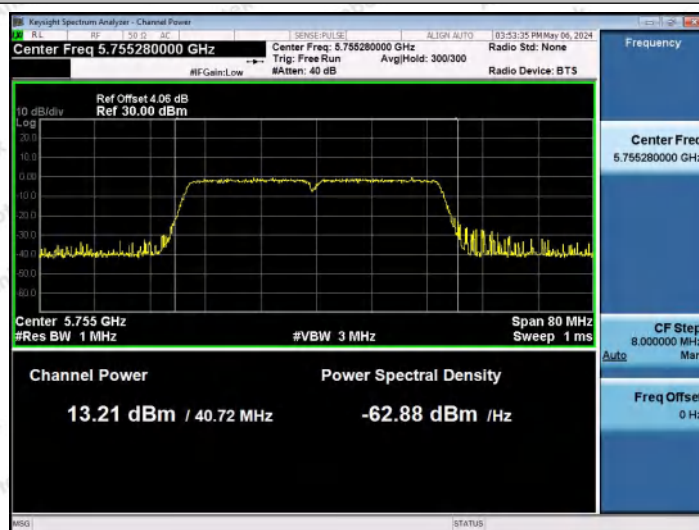


11AC40MIMO-Ant0-5755-PASS




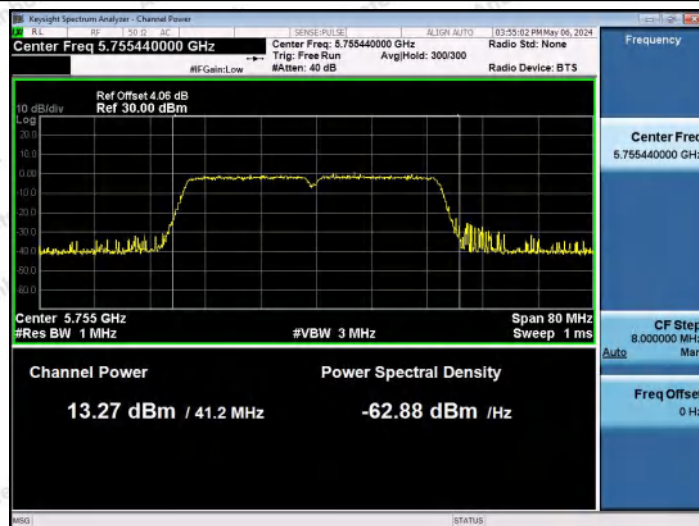

11AC40MIMO-Ant1-5755-PASS

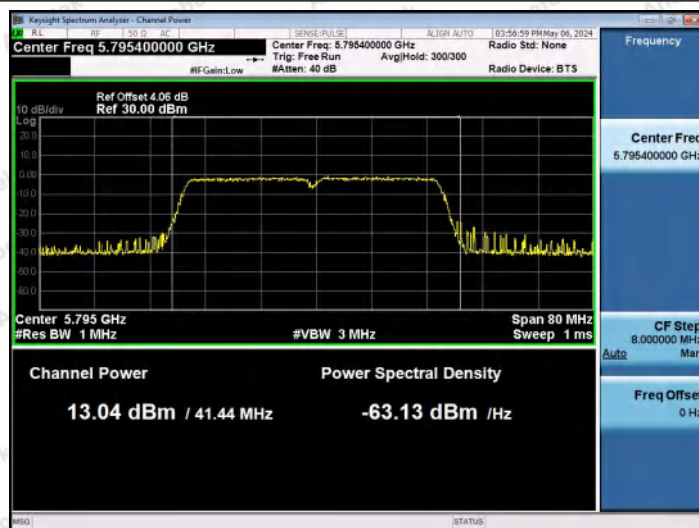


11AC40MIMO-Ant0-5795-PASS

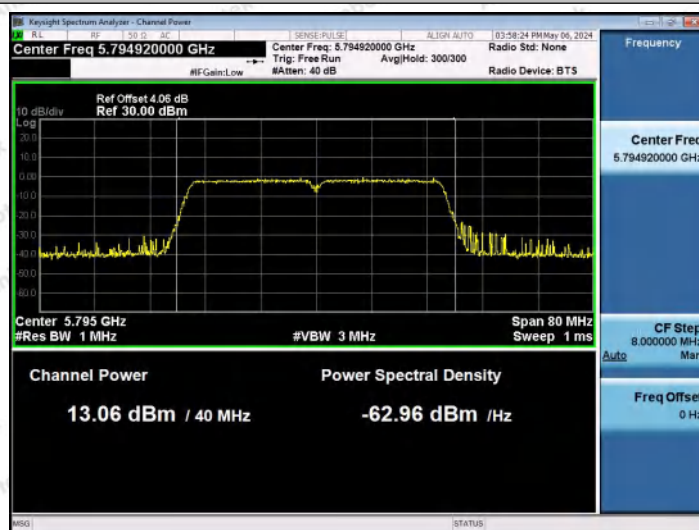

11AC40MIMO-Ant1-5795-PASS



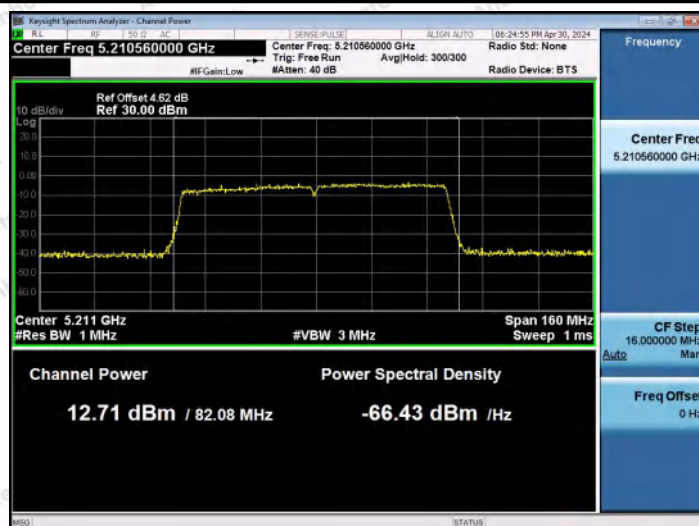

11AC80MIMO-Ant0-5210-PASS



11AC80MIMO-Ant1-5210-PASS



11AC80MIMO-Ant0-5290-PASS

Shenzhen Anbotek Compliance Laboratory Limited

Address: 1/F., Building D, Sogood Science and Technology Park, Sanwei Community, Hangcheng Street, Bao'an District, Shenzhen, Guangdong, China.
 Tel: (86) 0755-26066440 Fax: (86) 0755-26014772 Email: service@anbotek.com



Hotline


400-003-0500

www.anbotek.com.cn






11AC80MIMO-Ant1-5290-PASS

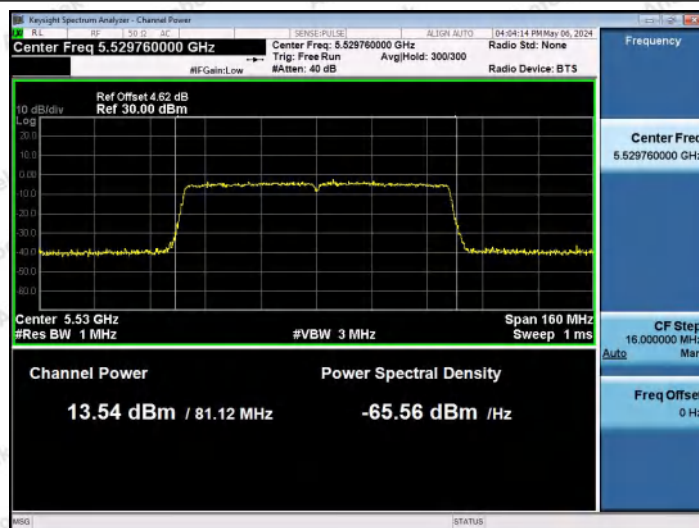

11AC80MIMO-Ant0-5530-PASS

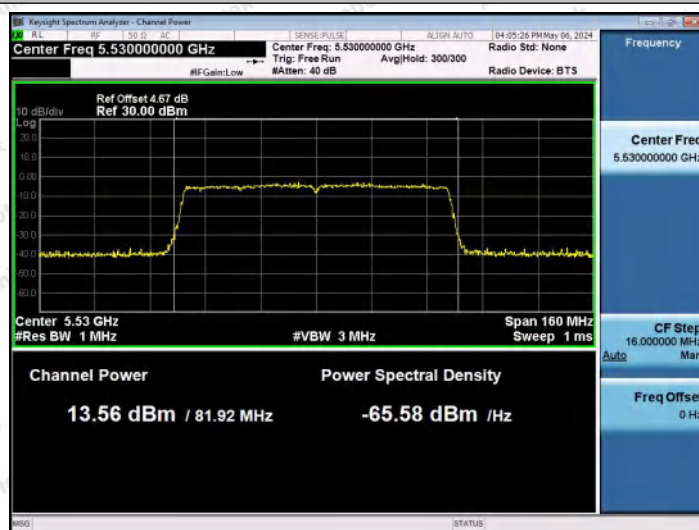

11AC80MIMO-Ant1-5530-PASS

Shenzhen Anbotek Compliance Laboratory Limited

Address: 1/F., Building D, Sogood Science and Technology Park, Sanwei Community, Hangcheng Street, Bao'an District, Shenzhen, Guangdong, China.
Tel: (86) 0755-26066440 Fax: (86) 0755-26014772 Email: service@anbotek.com



Hotline

400-003-0500

www.anbotek.com.cn






11AC80MIMO-Ant0-5610-PASS



11AC80MIMO-Ant1-5610-PASS

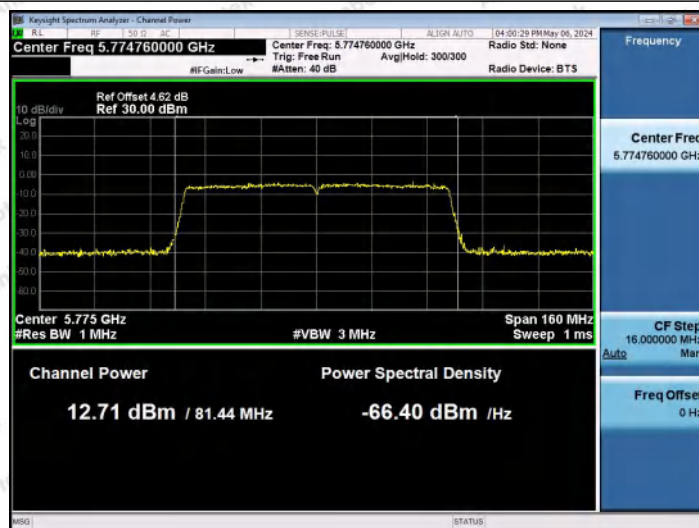

11AC80MIMO-Ant0-5775-PASS

Shenzhen Anbotek Compliance Laboratory Limited

Address: 1/F., Building D, Sogood Science and Technology Park, Sanwei Community, Hangcheng Street, Bao'an District, Shenzhen, Guangdong, China.
Tel: (86) 0755-26066440 Fax: (86) 0755-26014772 Email: service@anbotek.com




Hotline


400-003-0500

www.anbotek.com.cn




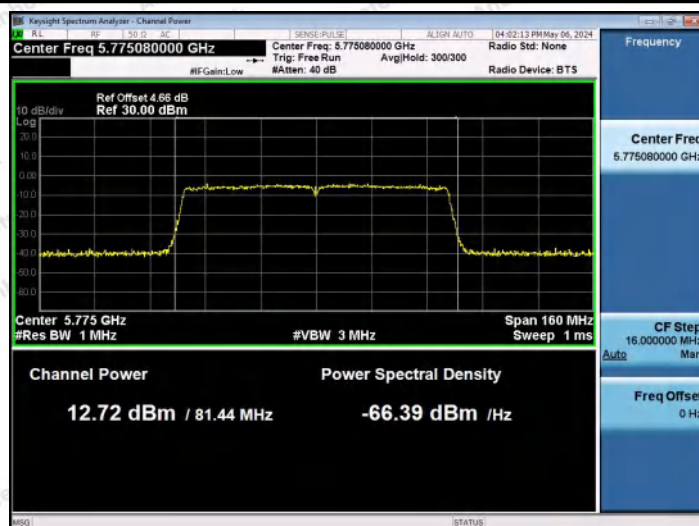

11AC80MIMO-Ant1-5775-PASS

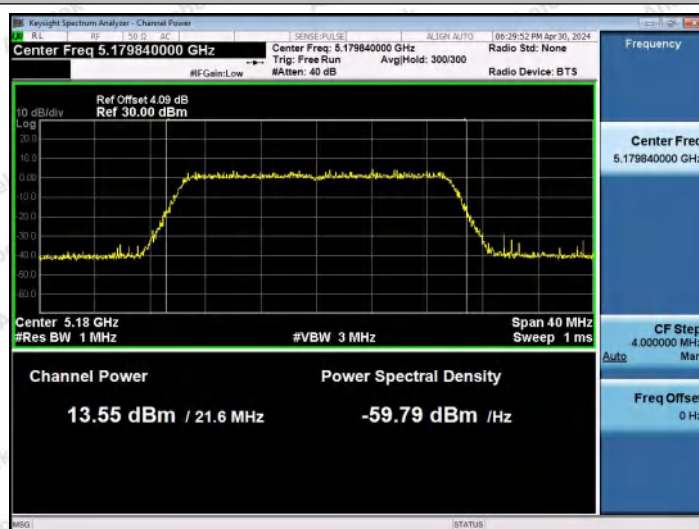

11AX20MIMO-Ant0-5180-PASS

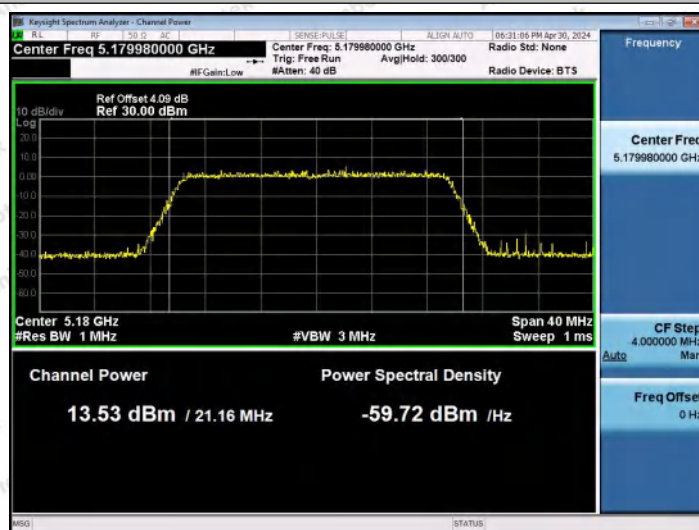

11AX20MIMO-Ant1-5180-PASS

Shenzhen Anbotek Compliance Laboratory Limited

Address: 1/F., Building D, Sogood Science and Technology Park, Sanwei Community, Hangcheng Street, Bao'an District, Shenzhen, Guangdong, China.
 Tel: (86) 0755-26066440 Fax: (86) 0755-26014772 Email: service@anbotek.com




Hotline


400-003-0500

www.anbotek.com.cn




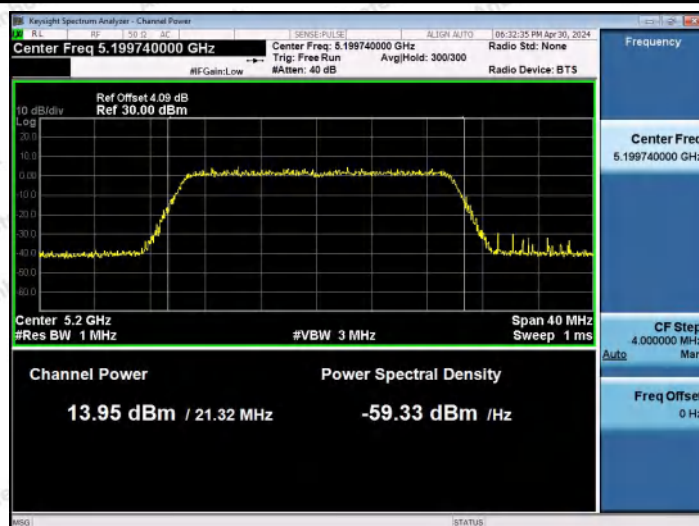

11AX20MIMO-Ant0-5200-PASS

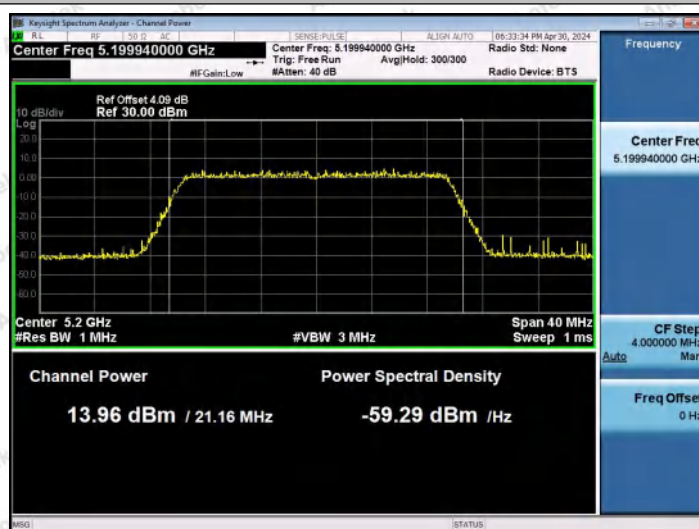

11AX20MIMO-Ant1-5200-PASS

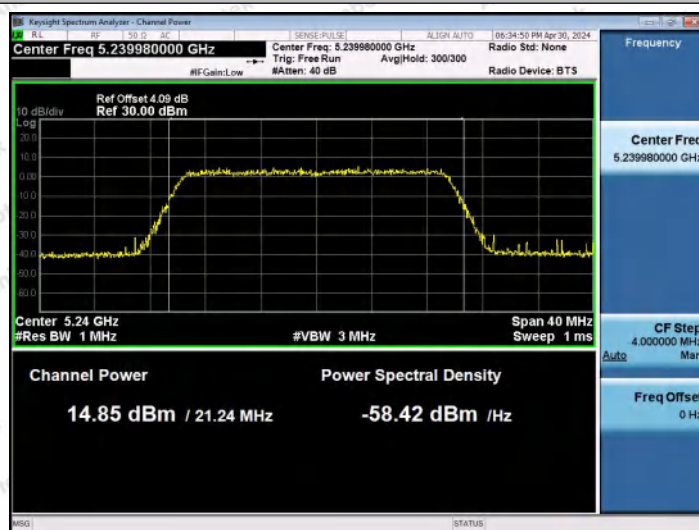

11AX20MIMO-Ant0-5240-PASS

Shenzhen Anbotek Compliance Laboratory Limited

Address: 1/F., Building D, Sogood Science and Technology Park, Sanwei Community, Hangcheng Street, Bao'an District, Shenzhen, Guangdong, China.
 Tel: (86) 0755-26066440 Fax: (86) 0755-26014772 Email: service@anbotek.com




Hotline


400-003-0500

www.anbotek.com.cn




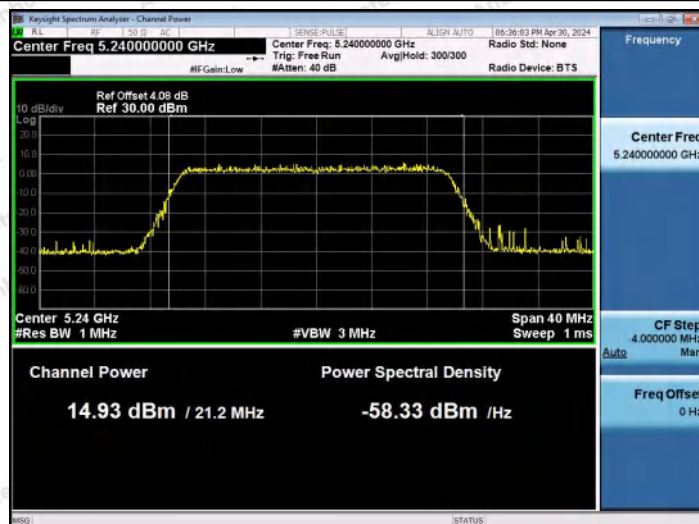

11AX20MIMO-Ant1-5240-PASS

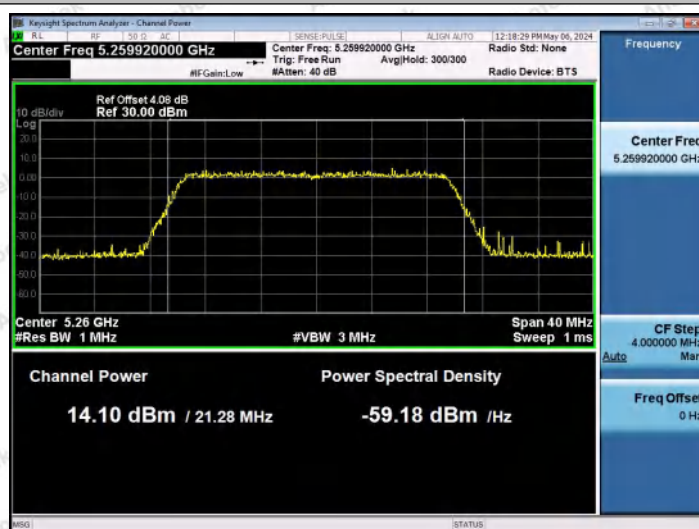

11AX20MIMO-Ant0-5260-PASS

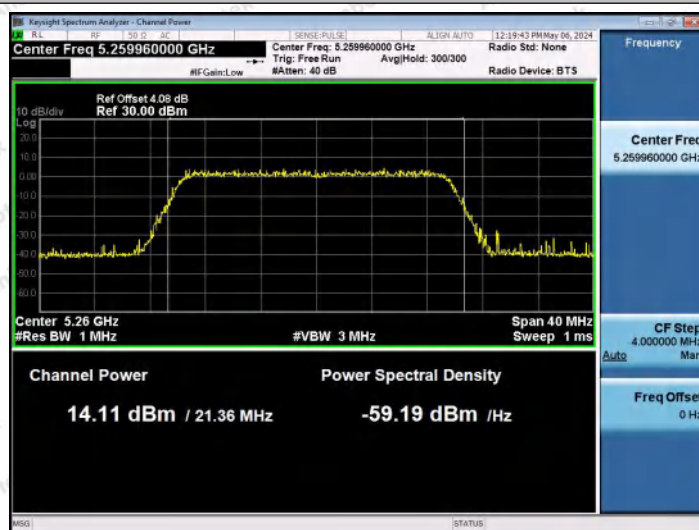

11AX20MIMO-Ant1-5260-PASS

Shenzhen Anbotek Compliance Laboratory Limited

Address: 1/F., Building D, Sogood Science and Technology Park, Sanwei Community, Hangcheng Street, Bao'an District, Shenzhen, Guangdong, China.
Tel: (86) 0755-26066440 Fax: (86) 0755-26014772 Email: service@anbotek.com




Hotline


400-003-0500

www.anbotek.com.cn




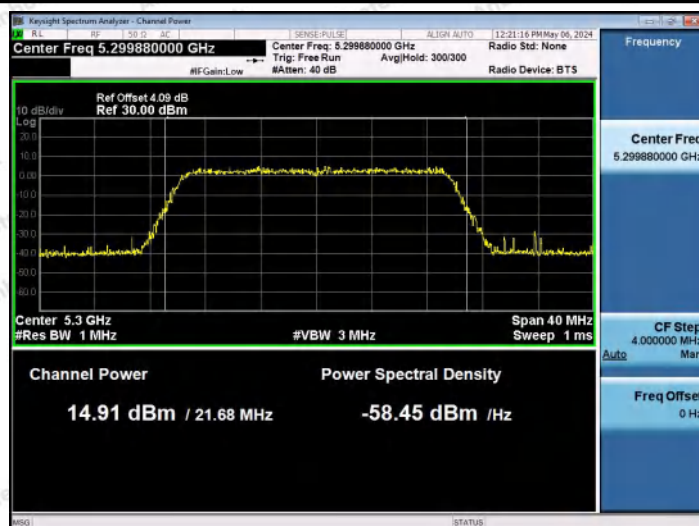

11AX20MIMO-Ant0-5300-PASS

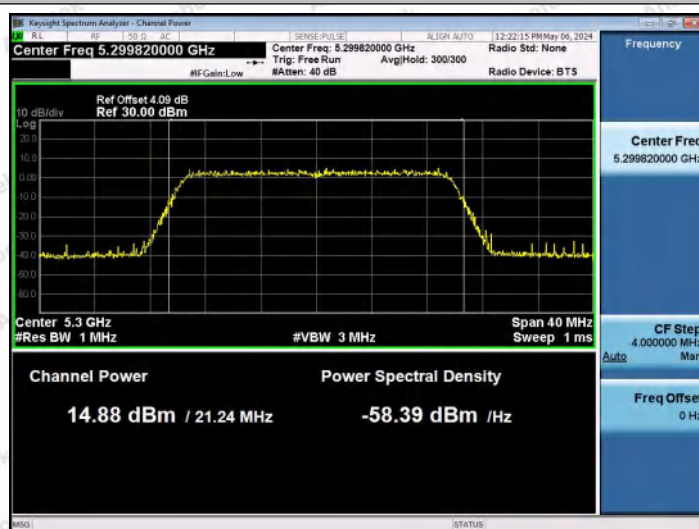

11AX20MIMO-Ant1-5300-PASS

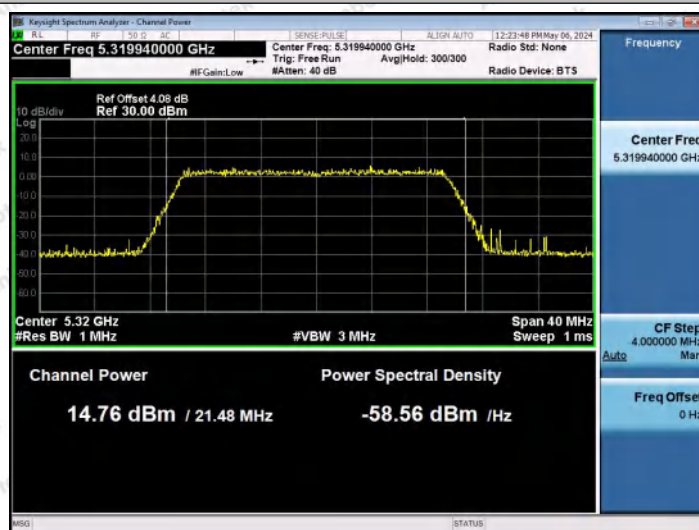

11AX20MIMO-Ant0-5320-PASS

Shenzhen Anbotek Compliance Laboratory Limited

Address: 1/F., Building D, Sogood Science and Technology Park, Sanwei Community, Hangcheng Street, Bao'an District, Shenzhen, Guangdong, China.
Tel: (86) 0755-26066440 Fax: (86) 0755-26014772 Email: service@anbotek.com




Hotline


400-003-0500

www.anbotek.com.cn




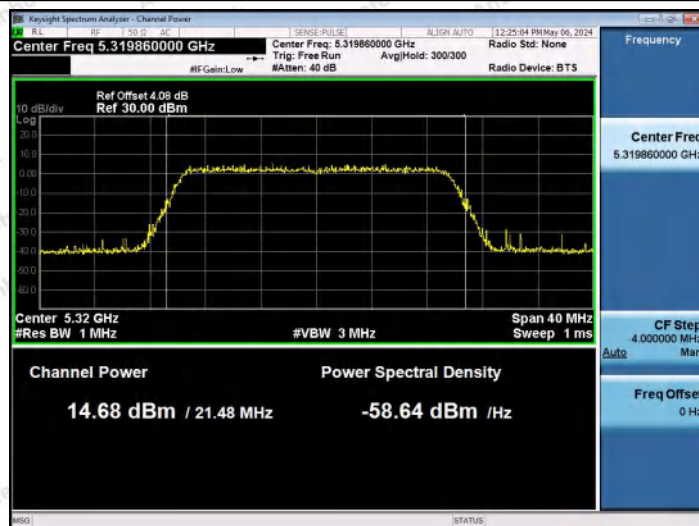

11AX20MIMO-Ant1-5320-PASS

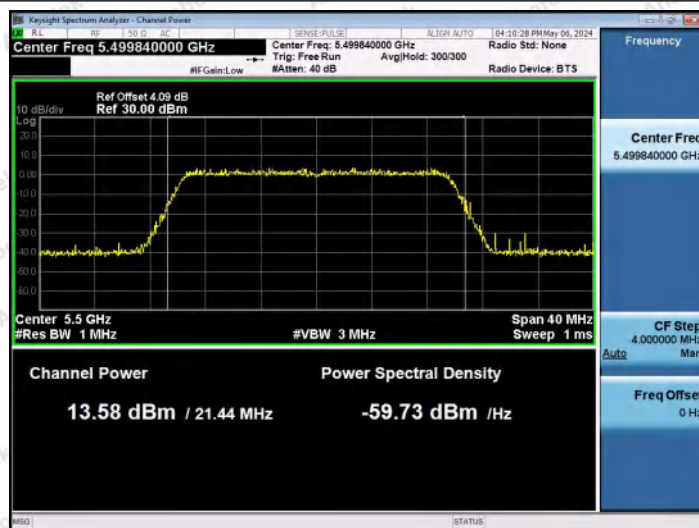

11AX20MIMO-Ant0-5500-PASS

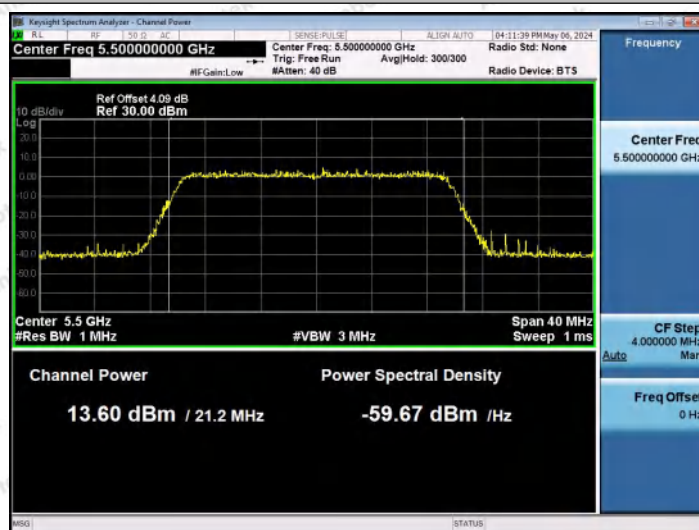

11AX20MIMO-Ant1-5500-PASS

Shenzhen Anbotek Compliance Laboratory Limited

Address: 1/F., Building D, Sogood Science and Technology Park, Sanwei Community, Hangcheng Street, Bao'an District, Shenzhen, Guangdong, China.
Tel: (86) 0755-26066440 Fax: (86) 0755-26014772 Email: service@anbotek.com




Hotline


400-003-0500

www.anbotek.com.cn




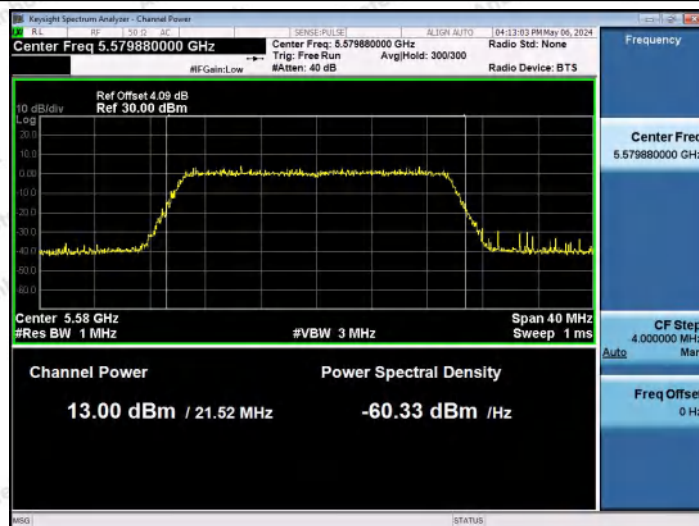

11AX20MIMO-Ant0-5580-PASS

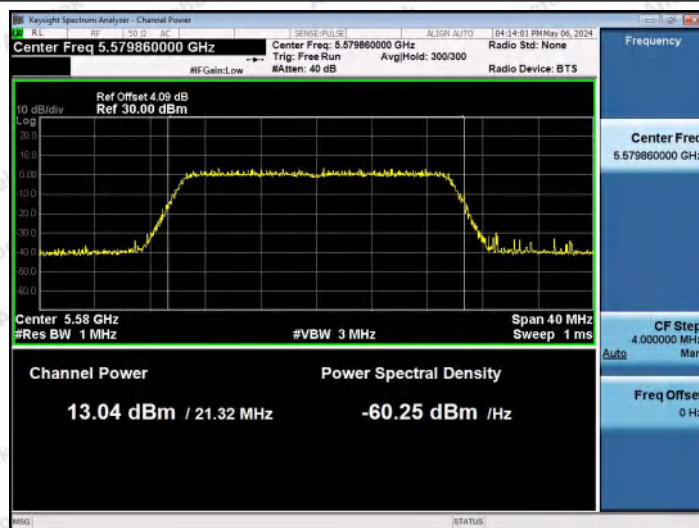


11AX20MIMO-Ant1-5580-PASS

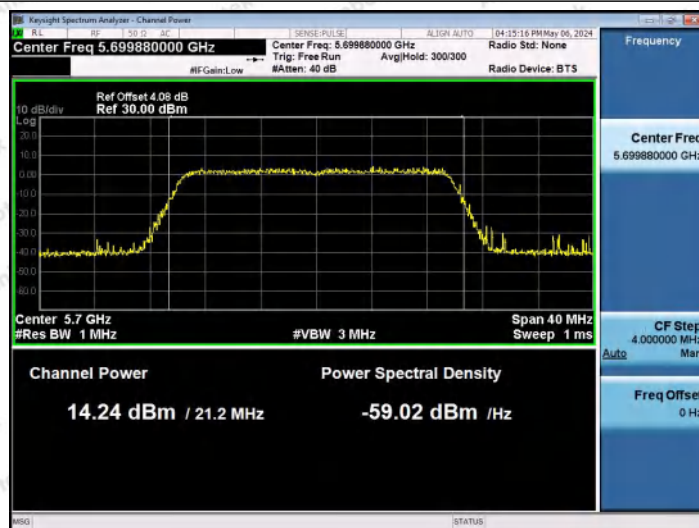


11AX20MIMO-Ant0-5700-PASS




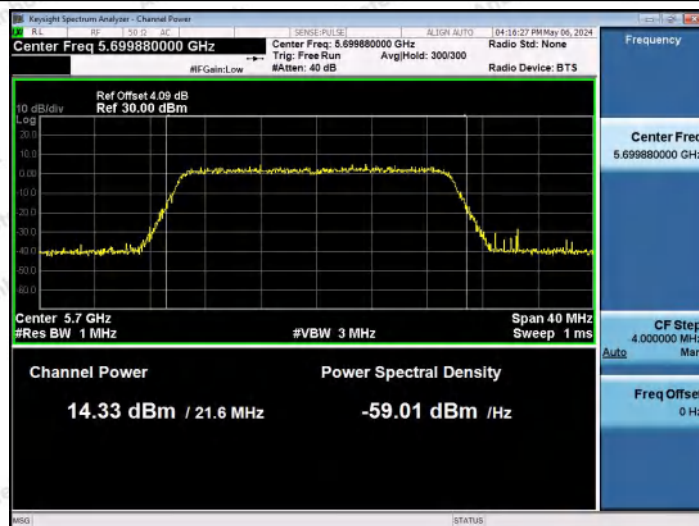

11AX20MIMO-Ant1-5700-PASS

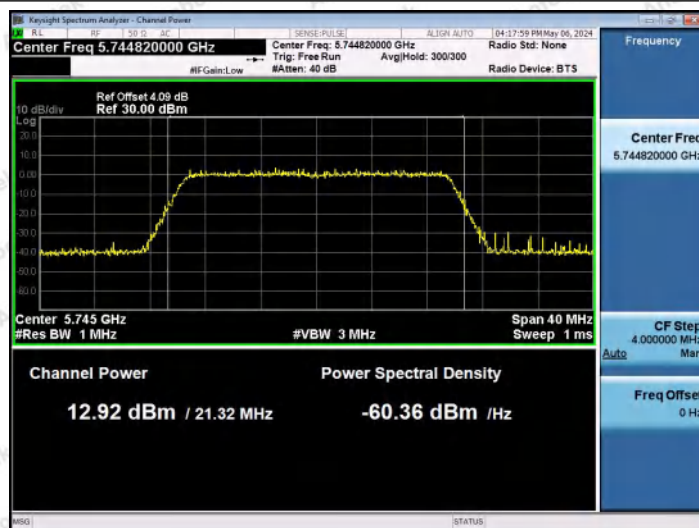

11AX20MIMO-Ant0-5745-PASS

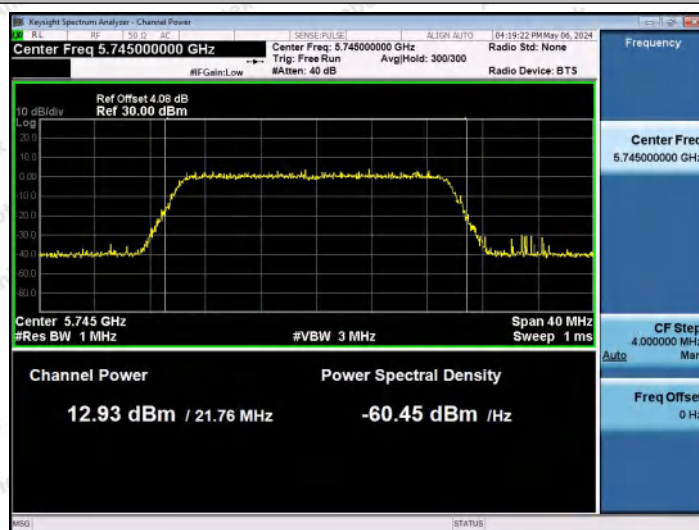

11AX20MIMO-Ant1-5745-PASS

Shenzhen Anbotek Compliance Laboratory Limited

Address: 1/F., Building D, Sogood Science and Technology Park, Sanwei Community, Hangcheng Street, Bao'an District, Shenzhen, Guangdong, China.
Tel: (86) 0755-26066440 Fax: (86) 0755-26014772 Email: service@anbotek.com




Hotline


400-003-0500

www.anbotek.com.cn




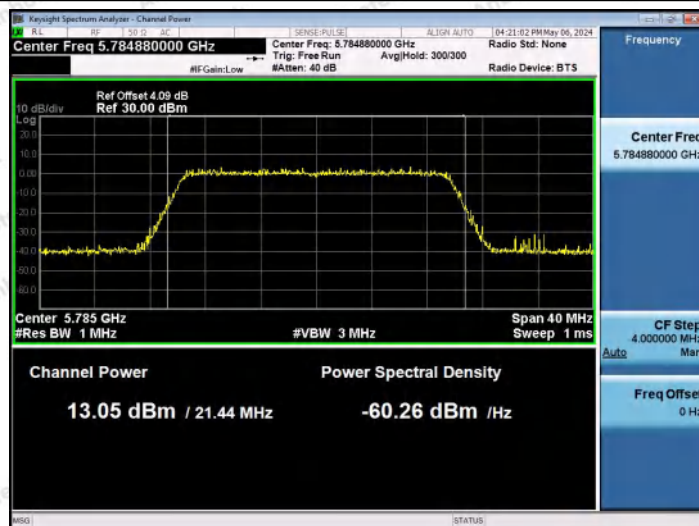

11AX20MIMO-Ant0-5785-PASS

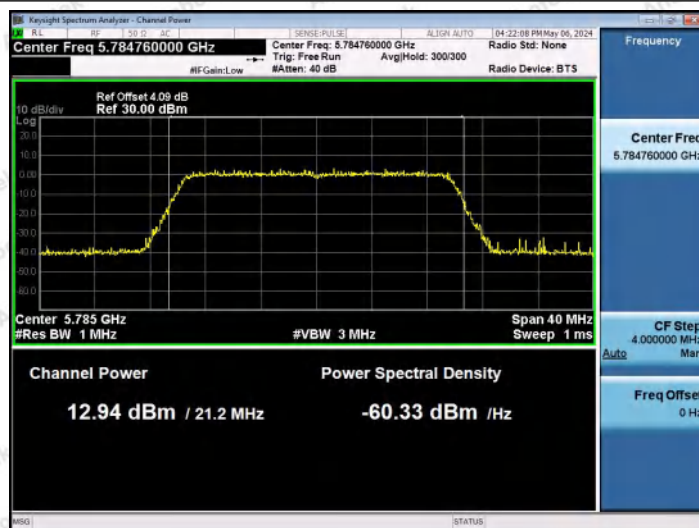


11AX20MIMO-Ant1-5785-PASS

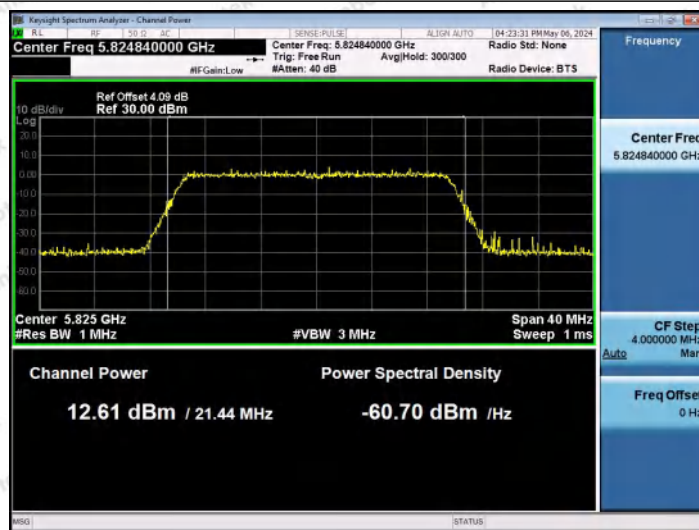


11AX20MIMO-Ant0-5825-PASS




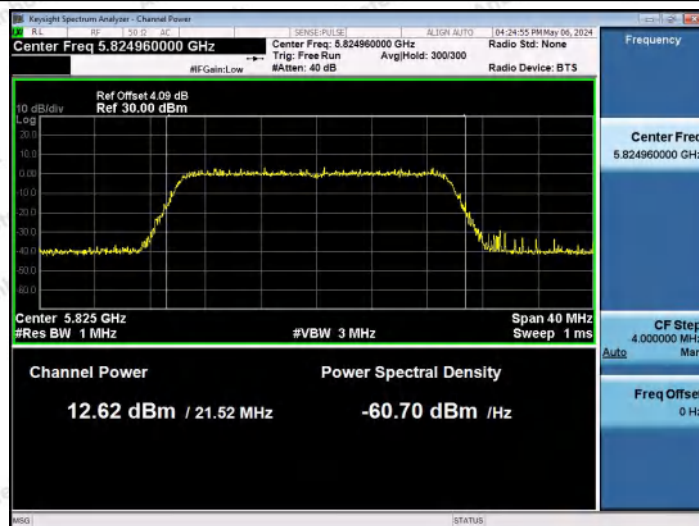

11AX20MIMO-Ant1-5825-PASS

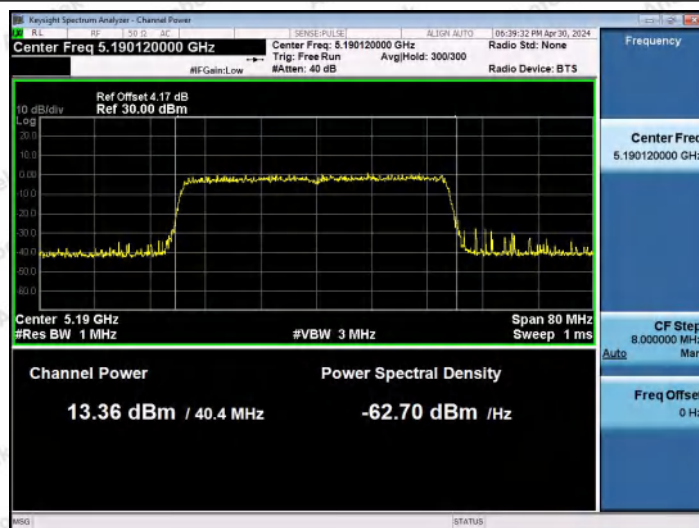

11AX40MIMO-Ant0-5190-PASS

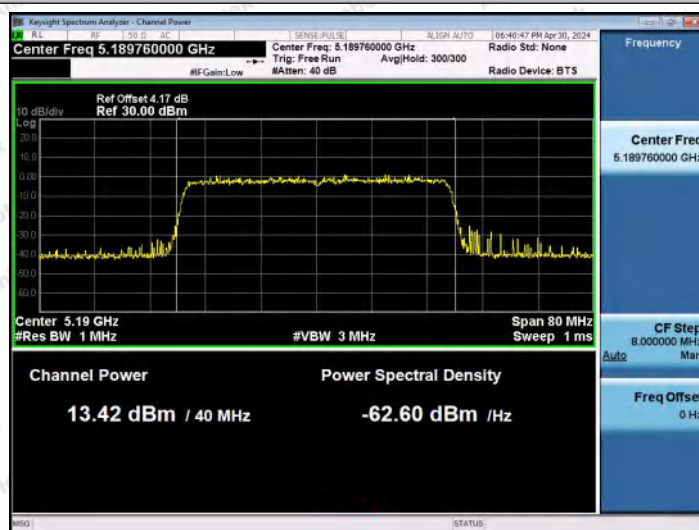

11AX40MIMO-Ant1-5190-PASS

Shenzhen Anbotek Compliance Laboratory Limited

Address: 1/F., Building D, Sogood Science and Technology Park, Sanwei Community, Hangcheng Street, Bao'an District, Shenzhen, Guangdong, China.
Tel: (86) 0755-26066440 Fax: (86) 0755-26014772 Email: service@anbotek.com




Hotline


400-003-0500

www.anbotek.com.cn




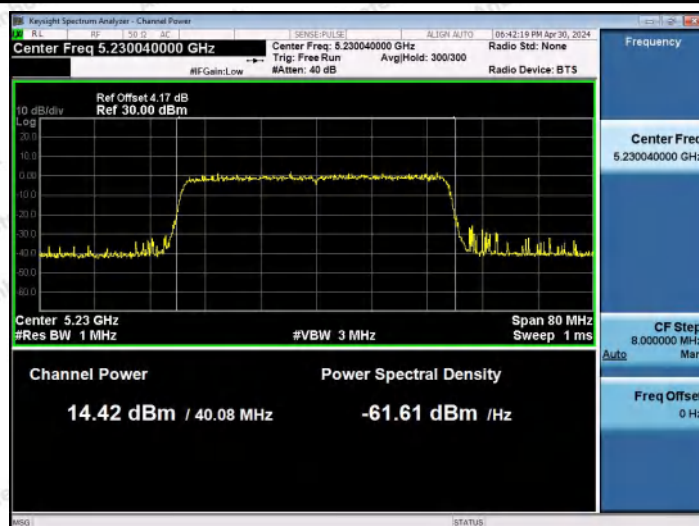

11AX40MIMO-Ant0-5230-PASS

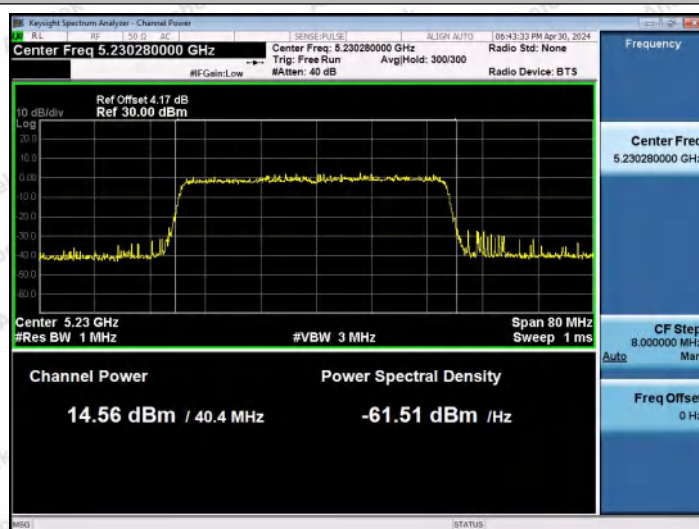

11AX40MIMO-Ant1-5230-PASS

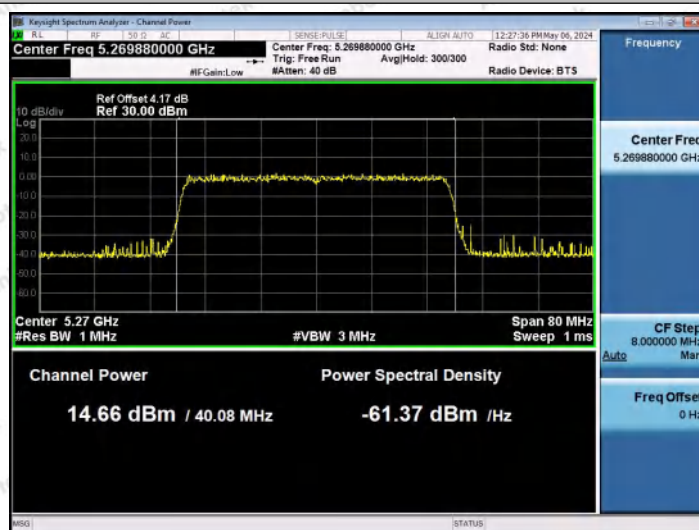

11AX40MIMO-Ant0-5270-PASS

Shenzhen Anbotek Compliance Laboratory Limited

Address: 1/F., Building D, Sogood Science and Technology Park, Sanwei Community, Hangcheng Street, Bao'an District, Shenzhen, Guangdong, China.
Tel: (86) 0755-26066440 Fax: (86) 0755-26014772 Email: service@anbotek.com




Hotline


400-003-0500

www.anbotek.com.cn




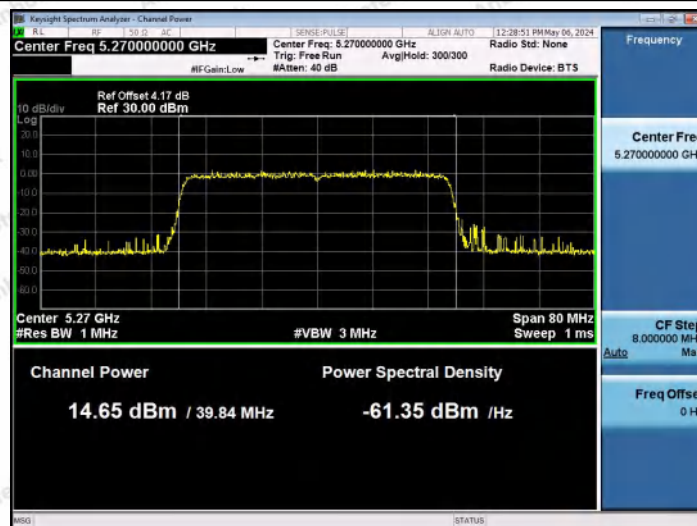

11AX40MIMO-Ant1-5270-PASS

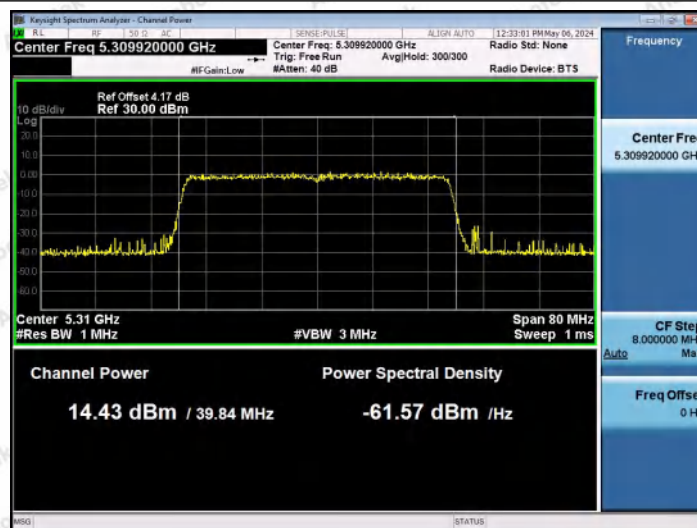


11AX40MIMO-Ant0-5310-PASS

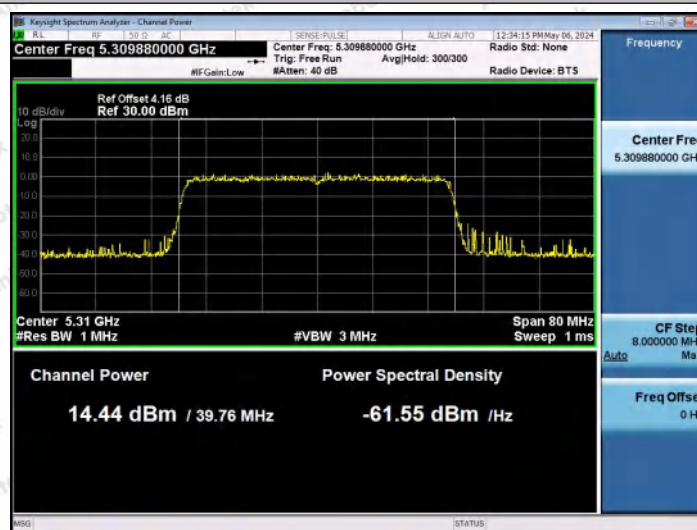


11AX40MIMO-Ant1-5310-PASS




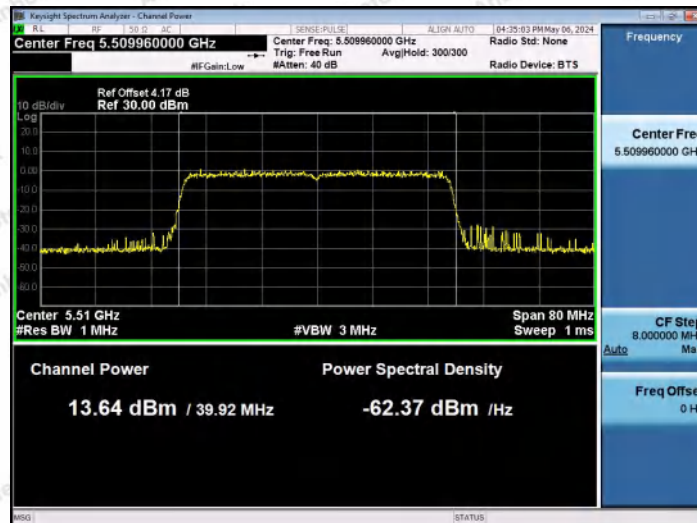

11AX40MIMO-Ant0-5510-PASS

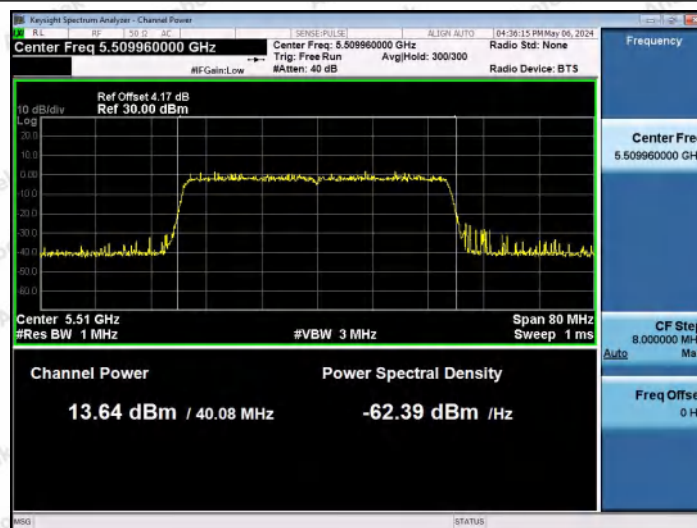


11AX40MIMO-Ant1-5510-PASS

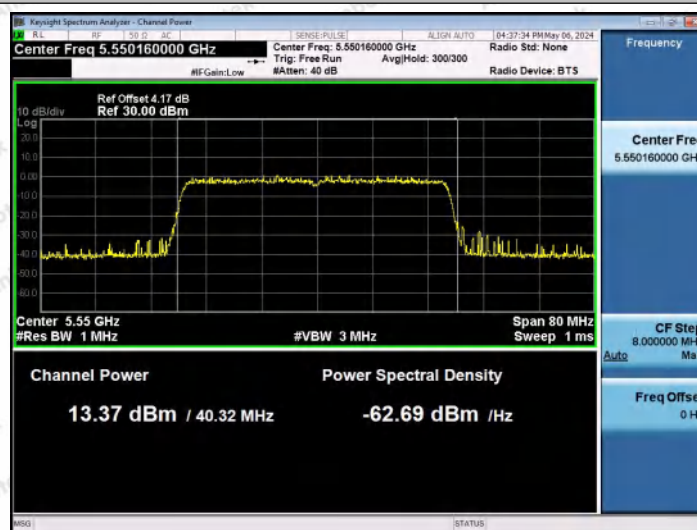


11AX40MIMO-Ant0-5550-PASS




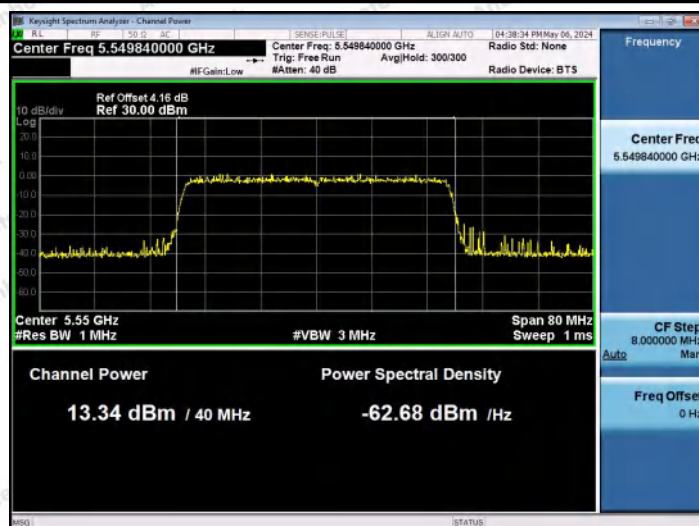

11AX40MIMO-Ant1-5550-PASS

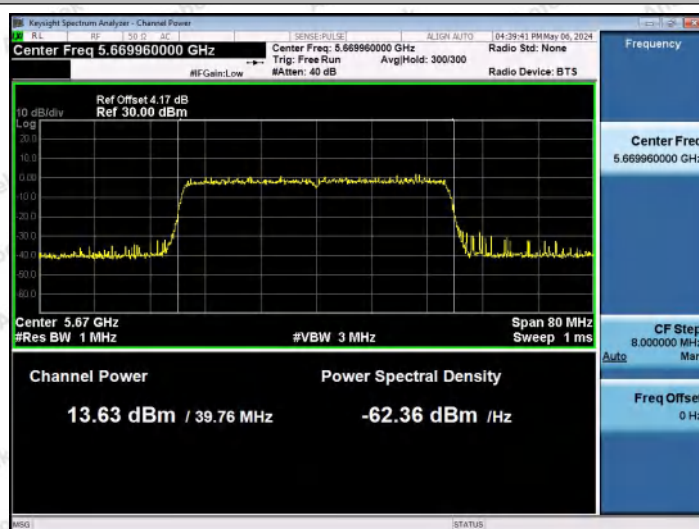

11AX40MIMO-Ant0-5670-PASS

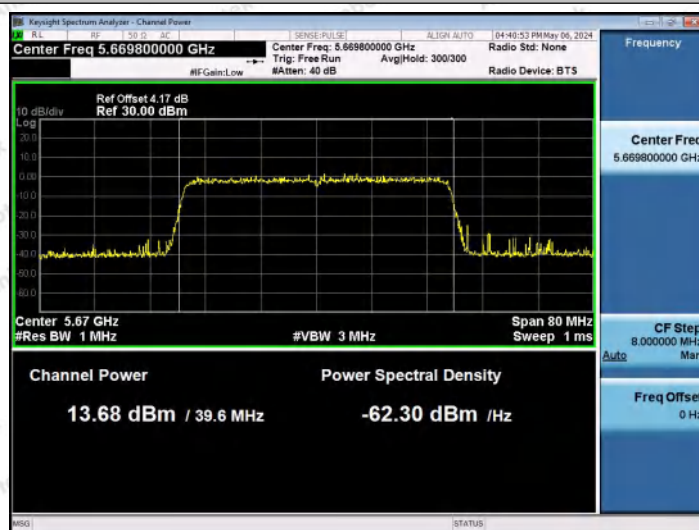

11AX40MIMO-Ant1-5670-PASS

Shenzhen Anbotek Compliance Laboratory Limited

Address: 1/F., Building D, Sogood Science and Technology Park, Sanwei Community, Hangcheng Street, Bao'an District, Shenzhen, Guangdong, China.
Tel: (86) 0755-26066440 Fax: (86) 0755-26014772 Email: service@anbotek.com




Hotline


400-003-0500

www.anbotek.com.cn




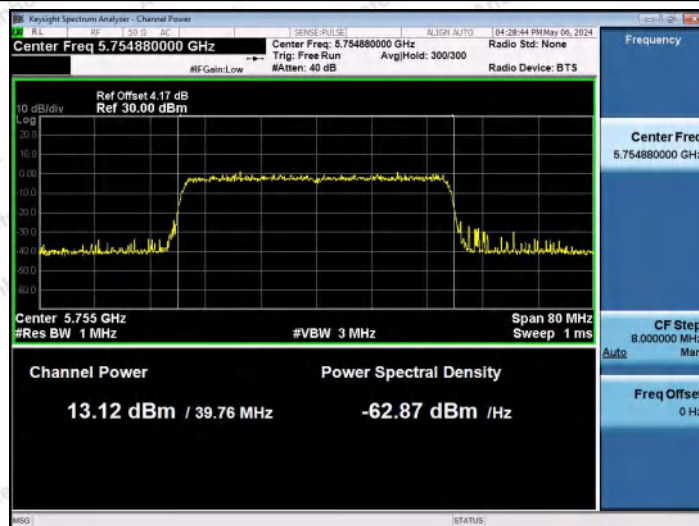

11AX40MIMO-Ant0-5755-PASS

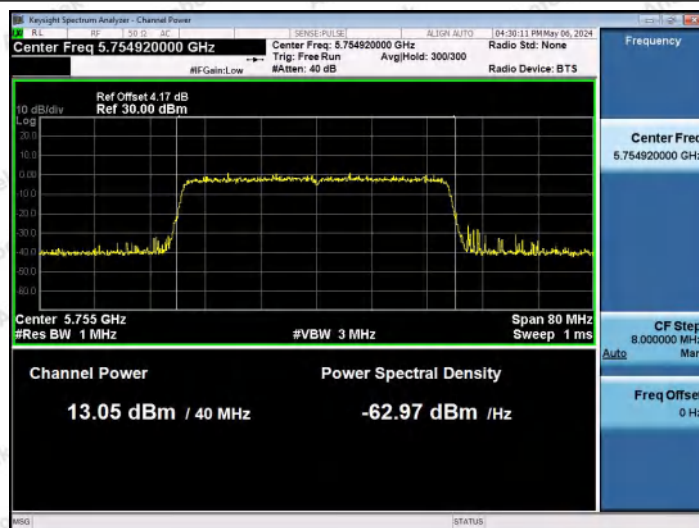


11AX40MIMO-Ant1-5755-PASS

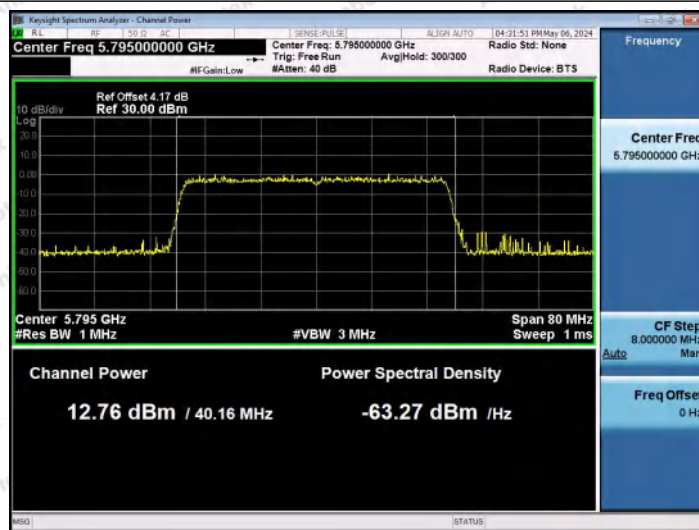


11AX40MIMO-Ant0-5795-PASS




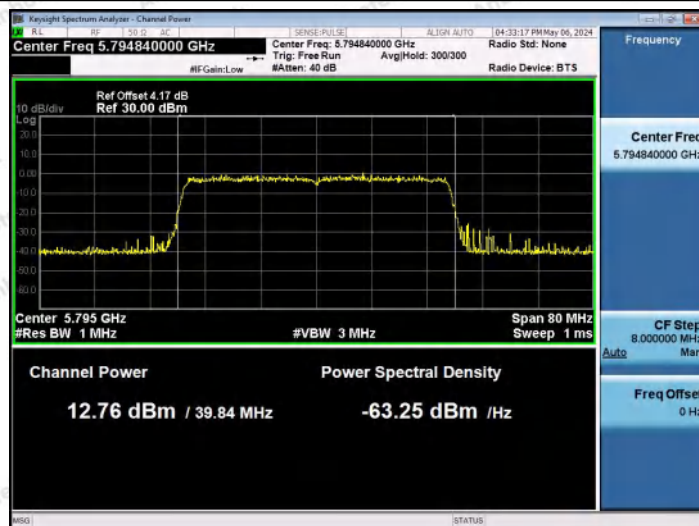

11AX40MIMO-Ant1-5795-PASS

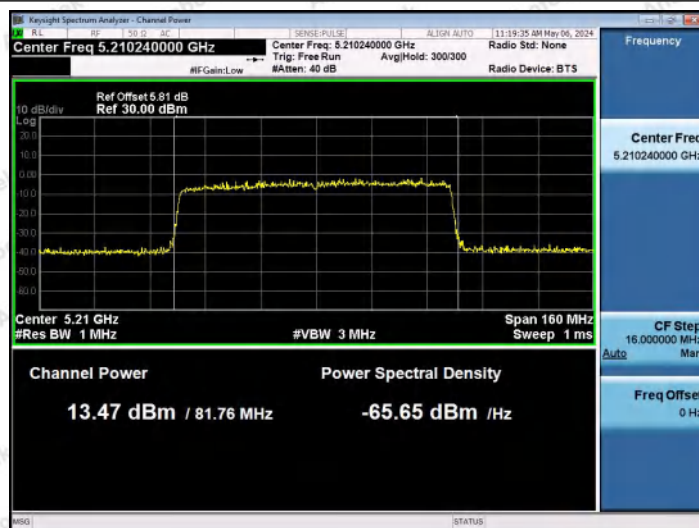

11AX80MIMO-Ant0-5210-PASS

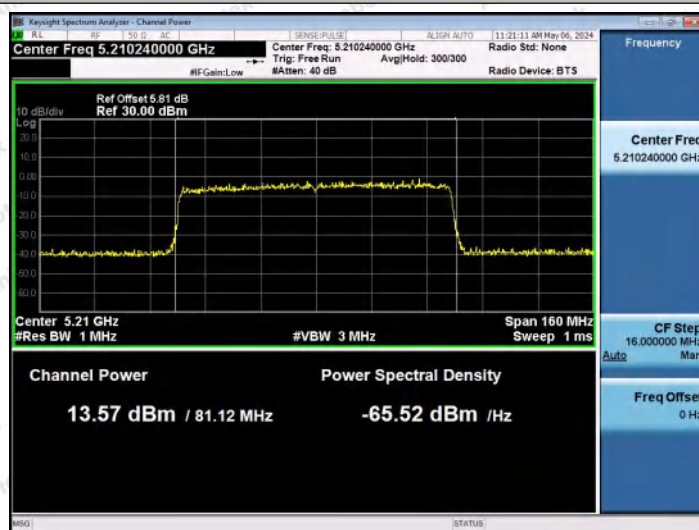

11AX80MIMO-Ant1-5210-PASS

Shenzhen Anbotek Compliance Laboratory Limited

Address: 1/F., Building D, Sogood Science and Technology Park, Sanwei Community, Hangcheng Street, Bao'an District, Shenzhen, Guangdong, China.
Tel: (86) 0755-26066440 Fax: (86) 0755-26014772 Email: service@anbotek.com




Hotline


400-003-0500

www.anbotek.com.cn




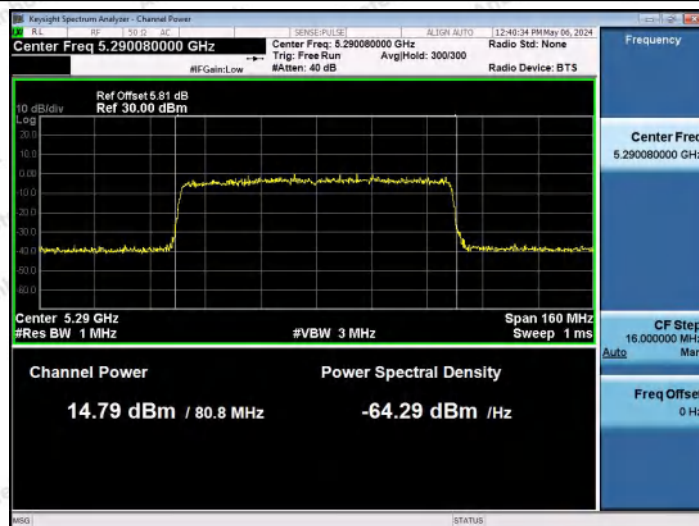

11AX80MIMO-Ant0-5290-PASS

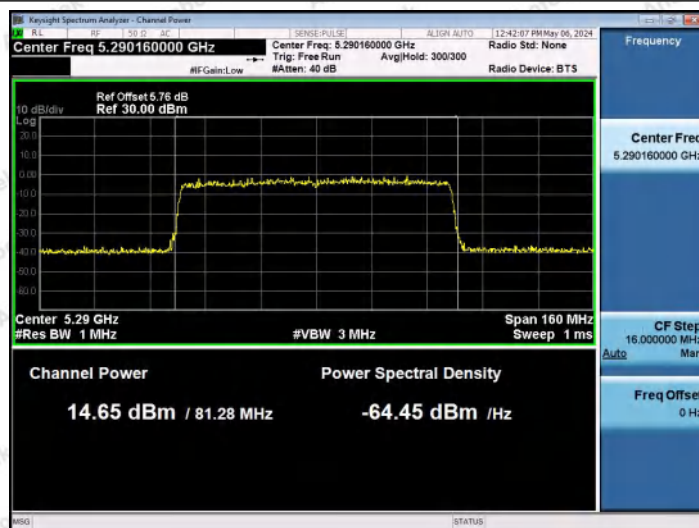


11AX80MIMO-Ant1-5290-PASS

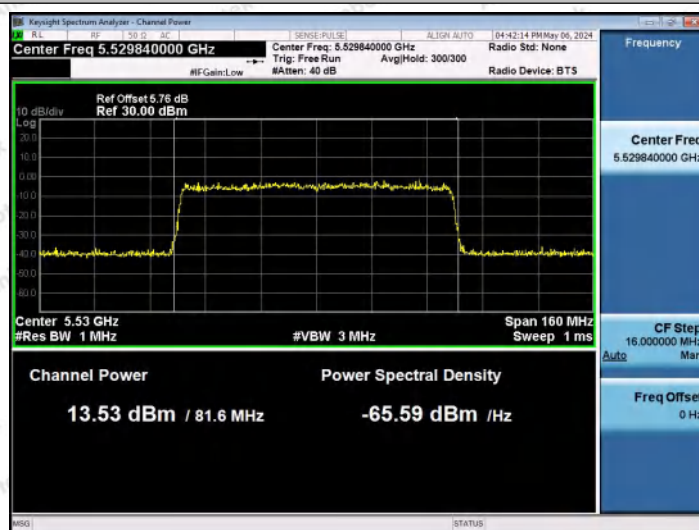


11AX80MIMO-Ant0-5530-PASS




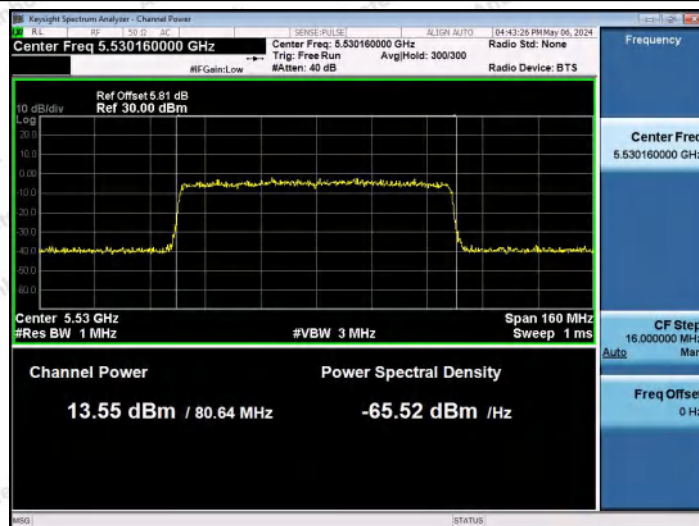

11AX80MIMO-Ant1-5530-PASS

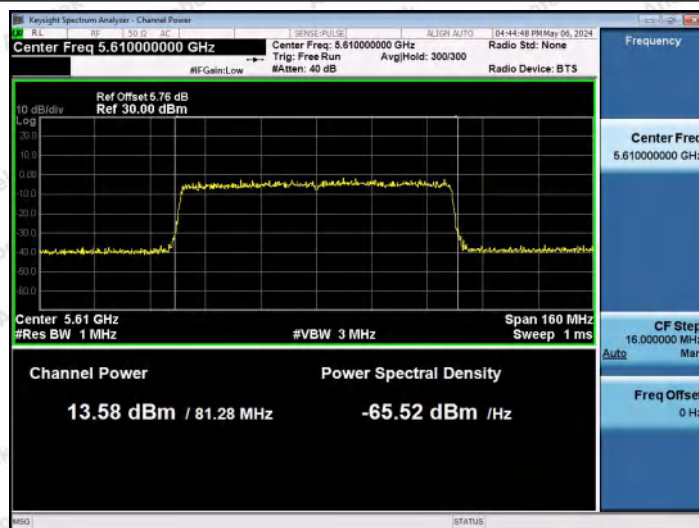

11AX80MIMO-Ant0-5610-PASS

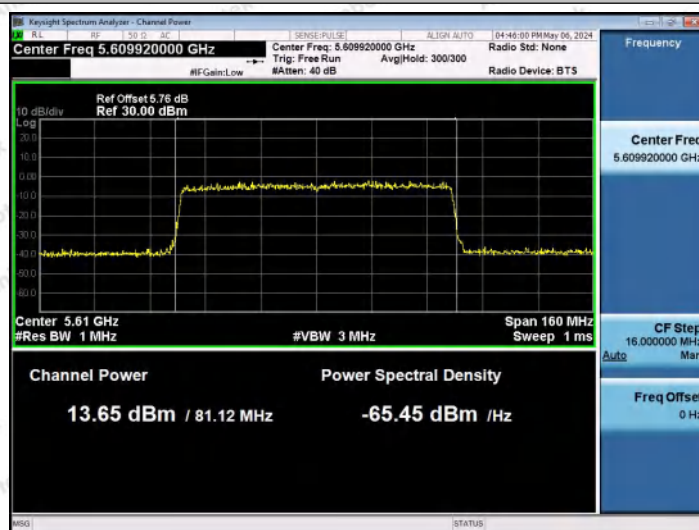

11AX80MIMO-Ant1-5610-PASS

Shenzhen Anbotek Compliance Laboratory Limited

Address: 1/F., Building D, Sogood Science and Technology Park, Sanwei Community, Hangcheng Street, Bao'an District, Shenzhen, Guangdong, China.
Tel: (86) 0755-26066440 Fax: (86) 0755-26014772 Email: service@anbotek.com




Hotline


400-003-0500

www.anbotek.com.cn



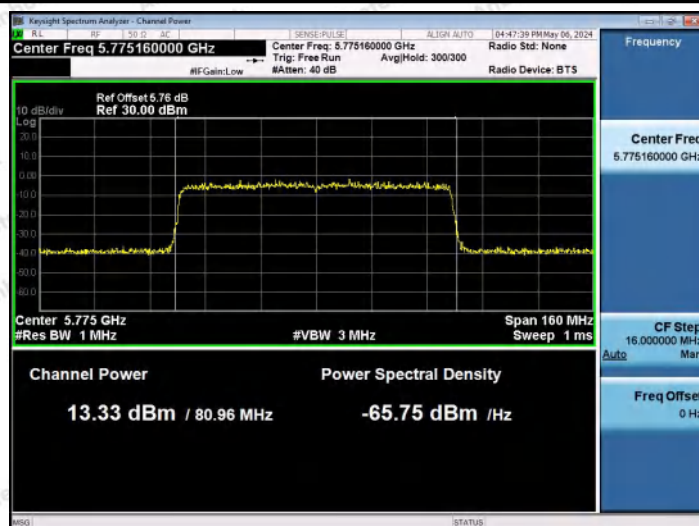

11AX80MIMO-Ant0-5775-PASS

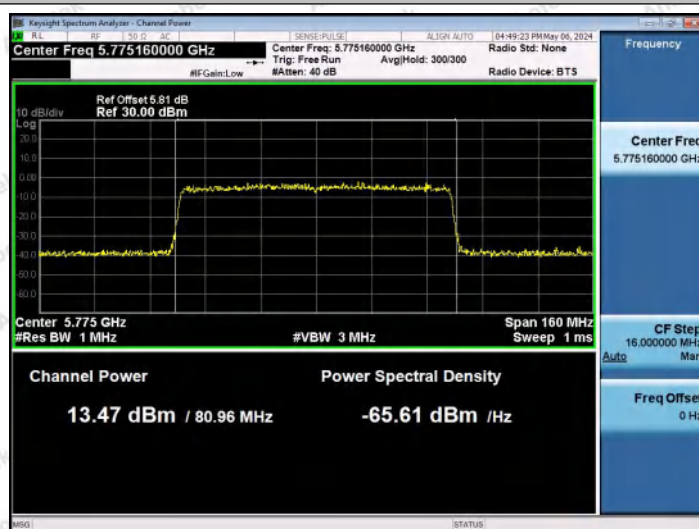

11AX80MIMO-Ant1-5775-PASS



Appendix D: Maximum Power Spectral Density

Test Result B1/2/3

TestMode	Antenna	Frequency[MHz]	Result [dBm/MHz]	Limit[dBm/MHz]	Verdict
11A	Ant0	5180	-2.55	≤11.00	PASS
11A	Ant1	5180	-3.19	≤11.00	PASS
11A	Ant0	5200	-1.77	≤11.00	PASS
11A	Ant1	5200	-2.20	≤11.00	PASS
11A	Ant0	5240	-2.86	≤11.00	PASS
11A	Ant1	5240	-3.28	≤11.00	PASS
11A	Ant0	5260	-2.06	≤11.00	PASS
11A	Ant1	5260	-2.03	≤11.00	PASS
11A	Ant0	5300	-2.46	≤11.00	PASS
11A	Ant1	5300	-2.43	≤11.00	PASS
11A	Ant0	5320	-1.52	≤11.00	PASS
11A	Ant1	5320	-1.64	≤11.00	PASS
11A	Ant0	5500	-3.08	≤11.00	PASS
11A	Ant1	5500	-3.20	≤11.00	PASS
11A	Ant0	5580	-3.68	≤11.00	PASS
11A	Ant1	5580	-3.60	≤11.00	PASS
11A	Ant0	5700	-2.75	≤11.00	PASS
11A	Ant1	5700	-2.54	≤11.00	PASS
11N20MIMO	Ant0	5180	-2.33	≤11.00	PASS
11N20MIMO	Ant1	5180	-2.17	≤11.00	PASS
11N20MIMO	total	5180	0.76	≤10.58	PASS
11N20MIMO	Ant0	5200	-2.85	≤11.00	PASS
11N20MIMO	Ant1	5200	-2.66	≤11.00	PASS
11N20MIMO	total	5200	0.26	≤10.58	PASS
11N20MIMO	Ant0	5240	-2.38	≤11.00	PASS
11N20MIMO	Ant1	5240	-2.69	≤11.00	PASS
11N20MIMO	total	5240	0.48	≤10.58	PASS
11N20MIMO	Ant0	5260	-3.01	≤11.00	PASS
11N20MIMO	Ant1	5260	-3.01	≤11.00	PASS
11N20MIMO	total	5260	0.00	≤10.33	PASS
11N20MIMO	Ant0	5300	-3.02	≤11.00	PASS
11N20MIMO	Ant1	5300	-3.01	≤11.00	PASS
11N20MIMO	total	5300	0.00	≤10.33	PASS
11N20MIMO	Ant0	5320	-2.69	≤11.00	PASS
11N20MIMO	Ant1	5320	-2.40	≤11.00	PASS
11N20MIMO	total	5320	0.47	≤10.33	PASS
11N20MIMO	Ant0	5500	-3.99	≤11.00	PASS

Shenzhen Anbotek Compliance Laboratory Limited

Address: 1/F., Building D, Sogood Science and Technology Park, Sanwei Community,
 Hangcheng Street, Bao'an District, Shenzhen, Guangdong, China.
 Tel: (86) 0755-26066440 Fax: (86) 0755-26014772 Email: service@anbotek.com



Hotline

400-003-0500

www.anbotek.com.cn



11N20MIMO	Ant1	5500	-3.50	≤11.00	PASS
11N20MIMO	total	5500	-0.73	≤10.01	PASS
11N20MIMO	Ant0	5580	-4.53	≤11.00	PASS
11N20MIMO	Ant1	5580	-4.36	≤11.00	PASS
11N20MIMO	total	5580	-1.43	≤10.01	PASS
11N20MIMO	Ant0	5700	-3.34	≤11.00	PASS
11N20MIMO	Ant1	5700	-3.35	≤11.00	PASS
11N20MIMO	total	5700	-0.33	≤10.01	PASS
11N40MIMO	Ant0	5190	-5.63	≤11.00	PASS
11N40MIMO	Ant1	5190	-5.81	≤11.00	PASS
11N40MIMO	total	5190	-2.71	≤10.58	PASS
11N40MIMO	Ant0	5230	-5.70	≤11.00	PASS
11N40MIMO	Ant1	5230	-5.83	≤11.00	PASS
11N40MIMO	total	5230	-2.75	≤10.58	PASS
11N40MIMO	Ant0	5270	-5.84	≤11.00	PASS
11N40MIMO	Ant1	5270	-5.89	≤11.00	PASS
11N40MIMO	total	5270	-2.85	≤10.33	PASS
11N40MIMO	Ant0	5310	-6.43	≤11.00	PASS
11N40MIMO	Ant1	5310	-6.42	≤11.00	PASS
11N40MIMO	total	5310	-3.41	≤10.33	PASS
11N40MIMO	Ant0	5510	-7.50	≤11.00	PASS
11N40MIMO	Ant1	5510	-7.57	≤11.00	PASS
11N40MIMO	total	5510	-4.52	≤10.01	PASS
11N40MIMO	Ant0	5550	-7.80	≤11.00	PASS
11N40MIMO	Ant1	5550	-7.77	≤11.00	PASS
11N40MIMO	total	5550	-4.77	≤10.01	PASS
11N40MIMO	Ant0	5670	-7.31	≤11.00	PASS
11N40MIMO	Ant1	5670	-7.45	≤11.00	PASS
11N40MIMO	total	5670	-4.37	≤10.01	PASS
11AC20MIMO	Ant0	5180	-2.98	≤11.00	PASS
11AC20MIMO	Ant1	5180	-3.10	≤11.00	PASS
11AC20MIMO	total	5180	-0.03	≤10.58	PASS
11AC20MIMO	Ant0	5200	-2.80	≤11.00	PASS
11AC20MIMO	Ant1	5200	-2.83	≤11.00	PASS
11AC20MIMO	total	5200	0.20	≤10.58	PASS
11AC20MIMO	Ant0	5240	-2.70	≤11.00	PASS
11AC20MIMO	Ant1	5240	-2.57	≤11.00	PASS
11AC20MIMO	total	5240	0.38	≤10.58	PASS
11AC20MIMO	Ant0	5260	-3.13	≤11.00	PASS
11AC20MIMO	Ant1	5260	-3.01	≤11.00	PASS
11AC20MIMO	total	5260	-0.06	≤10.33	PASS
11AC20MIMO	Ant0	5300	-2.17	≤11.00	PASS

Shenzhen Anbotek Compliance Laboratory Limited

Address: 1/F., Building D, Sogood Science and Technology Park, Sanwei Community,
 Hangcheng Street, Bao'an District, Shenzhen, Guangdong, China.
 Tel: (86) 0755-26066440 Fax: (86) 0755-26014772 Email: service@anbotek.com



Hotline

400-003-0500

www.anbotek.com.cn



11AC20MIMO	Ant1	5300	-2.33	≤11.00	PASS
11AC20MIMO	total	5300	0.76	≤10.33	PASS
11AC20MIMO	Ant0	5320	-1.40	≤11.00	PASS
11AC20MIMO	Ant1	5320	-1.61	≤11.00	PASS
11AC20MIMO	total	5320	1.51	≤10.33	PASS
11AC20MIMO	Ant0	5500	-4.14	≤11.00	PASS
11AC20MIMO	Ant1	5500	-4.08	≤11.00	PASS
11AC20MIMO	total	5500	-1.10	≤10.01	PASS
11AC20MIMO	Ant0	5580	-3.48	≤11.00	PASS
11AC20MIMO	Ant1	5580	-3.57	≤11.00	PASS
11AC20MIMO	total	5580	-0.51	≤10.01	PASS
11AC20MIMO	Ant0	5700	-2.93	≤11.00	PASS
11AC20MIMO	Ant1	5700	-2.90	≤11.00	PASS
11AC20MIMO	total	5700	0.10	≤10.01	PASS
11AC40MIMO	Ant0	5190	-5.63	≤11.00	PASS
11AC40MIMO	Ant1	5190	-5.49	≤11.00	PASS
11AC40MIMO	total	5190	-2.55	≤10.58	PASS
11AC40MIMO	Ant0	5230	-6.13	≤11.00	PASS
11AC40MIMO	Ant1	5230	-6.35	≤11.00	PASS
11AC40MIMO	total	5230	-3.23	≤10.58	PASS
11AC40MIMO	Ant0	5270	-5.76	≤11.00	PASS
11AC40MIMO	Ant1	5270	-5.85	≤11.00	PASS
11AC40MIMO	total	5270	-2.79	≤10.33	PASS
11AC40MIMO	Ant0	5310	-5.87	≤11.00	PASS
11AC40MIMO	Ant1	5310	-5.80	≤11.00	PASS
11AC40MIMO	total	5310	-2.82	≤10.33	PASS
11AC40MIMO	Ant0	5510	-6.02	≤11.00	PASS
11AC40MIMO	Ant1	5510	-5.96	≤11.00	PASS
11AC40MIMO	total	5510	-2.98	≤10.01	PASS
11AC40MIMO	Ant0	5550	-6.21	≤11.00	PASS
11AC40MIMO	Ant1	5550	-6.30	≤11.00	PASS
11AC40MIMO	total	5550	-3.24	≤10.01	PASS
11AC40MIMO	Ant0	5670	-5.87	≤11.00	PASS
11AC40MIMO	Ant1	5670	-6.02	≤11.00	PASS
11AC40MIMO	total	5670	-2.93	≤10.01	PASS
11AC80MIMO	Ant0	5210	-9.78	≤11.00	PASS
11AC80MIMO	Ant1	5210	-10.15	≤11.00	PASS
11AC80MIMO	total	5210	-6.95	≤10.58	PASS
11AC80MIMO	Ant0	5290	-8.43	≤11.00	PASS
11AC80MIMO	Ant1	5290	-8.66	≤11.00	PASS
11AC80MIMO	total	5290	-5.53	≤10.33	PASS
11AC80MIMO	Ant0	5530	-9.23	≤11.00	PASS

Shenzhen Anbotek Compliance Laboratory Limited

Address: 1/F., Building D, Sogood Science and Technology Park, Sanwei Community,
 Hangcheng Street, Bao'an District, Shenzhen, Guangdong, China.
 Tel: (86) 0755-26066440 Fax: (86) 0755-26014772 Email: service@anbotek.com



Hotline

400-003-0500

www.anbotek.com.cn



11AC80MIMO	Ant1	5530	-9.15	≤11.00	PASS
11AC80MIMO	total	5530	-6.18	≤10.01	PASS
11AC80MIMO	Ant0	5610	-10.13	≤11.00	PASS
11AC80MIMO	Ant1	5610	-9.83	≤11.00	PASS
11AC80MIMO	total	5610	-6.97	≤10.01	PASS
11AX20MIMO	Ant0	5180	-4.36	≤11.00	PASS
11AX20MIMO	Ant1	5180	-4.34	≤11.00	PASS
11AX20MIMO	total	5180	-1.34	≤10.58	PASS
11AX20MIMO	Ant0	5200	-3.99	≤11.00	PASS
11AX20MIMO	Ant1	5200	-3.85	≤11.00	PASS
11AX20MIMO	total	5200	-0.91	≤10.58	PASS
11AX20MIMO	Ant0	5240	-2.62	≤11.00	PASS
11AX20MIMO	Ant1	5240	-2.80	≤11.00	PASS
11AX20MIMO	total	5240	0.30	≤10.58	PASS
11AX20MIMO	Ant0	5260	-3.82	≤11.00	PASS
11AX20MIMO	Ant1	5260	-3.61	≤11.00	PASS
11AX20MIMO	total	5260	-0.70	≤10.33	PASS
11AX20MIMO	Ant0	5300	-2.72	≤11.00	PASS
11AX20MIMO	Ant1	5300	-2.88	≤11.00	PASS
11AX20MIMO	total	5300	0.21	≤10.33	PASS
11AX20MIMO	Ant0	5320	-3.22	≤11.00	PASS
11AX20MIMO	Ant1	5320	-2.92	≤11.00	PASS
11AX20MIMO	total	5320	-0.06	≤10.33	PASS
11AX20MIMO	Ant0	5500	-4.17	≤11.00	PASS
11AX20MIMO	Ant1	5500	-4.31	≤11.00	PASS
11AX20MIMO	total	5500	-1.23	≤10.01	PASS
11AX20MIMO	Ant0	5580	-4.72	≤11.00	PASS
11AX20MIMO	Ant1	5580	-4.83	≤11.00	PASS
11AX20MIMO	total	5580	-1.76	≤10.01	PASS
11AX20MIMO	Ant0	5700	-3.60	≤11.00	PASS
11AX20MIMO	Ant1	5700	-3.53	≤11.00	PASS
11AX20MIMO	total	5700	-0.55	≤10.01	PASS
11AX40MIMO	Ant0	5190	-7.34	≤11.00	PASS
11AX40MIMO	Ant1	5190	-7.24	≤11.00	PASS
11AX40MIMO	total	5190	-4.28	≤10.58	PASS
11AX40MIMO	Ant0	5230	-6.07	≤11.00	PASS
11AX40MIMO	Ant1	5230	-5.96	≤11.00	PASS
11AX40MIMO	total	5230	-3.00	≤10.58	PASS
11AX40MIMO	Ant0	5270	-6.12	≤11.00	PASS
11AX40MIMO	Ant1	5270	-5.98	≤11.00	PASS
11AX40MIMO	total	5270	-3.04	≤10.33	PASS
11AX40MIMO	Ant0	5310	-6.35	≤11.00	PASS

Shenzhen Anbotek Compliance Laboratory Limited

Address: 1/F., Building D, Sogood Science and Technology Park, Sanwei Community,
 Hangcheng Street, Bao'an District, Shenzhen, Guangdong, China.
 Tel: (86) 0755-26066440 Fax: (86) 0755-26014772 Email: service@anbotek.com



Hotline

400-003-0500

www.anbotek.com.cn



11AX40MIMO	Ant1	5310	-6.24	≤11.00	PASS
11AX40MIMO	total	5310	-3.28	≤10.33	PASS
11AX40MIMO	Ant0	5510	-7.04	≤11.00	PASS
11AX40MIMO	Ant1	5510	-6.99	≤11.00	PASS
11AX40MIMO	total	5510	-4.00	≤10.01	PASS
11AX40MIMO	Ant0	5550	-7.51	≤11.00	PASS
11AX40MIMO	Ant1	5550	-7.48	≤11.00	PASS
11AX40MIMO	total	5550	-4.48	≤10.01	PASS
11AX40MIMO	Ant0	5670	-7.06	≤11.00	PASS
11AX40MIMO	Ant1	5670	-6.92	≤11.00	PASS
11AX40MIMO	total	5670	-3.98	≤10.01	PASS
11AX80MIMO	Ant0	5210	-11.07	≤11.00	PASS
11AX80MIMO	Ant1	5210	-10.89	≤11.00	PASS
11AX80MIMO	total	5210	-7.97	≤10.58	PASS
11AX80MIMO	Ant0	5290	-9.64	≤11.00	PASS
11AX80MIMO	Ant1	5290	-9.57	≤11.00	PASS
11AX80MIMO	total	5290	-6.59	≤10.33	PASS
11AX80MIMO	Ant0	5530	-10.84	≤11.00	PASS
11AX80MIMO	Ant1	5530	-11.20	≤11.00	PASS
11AX80MIMO	total	5530	-8.01	≤10.01	PASS
11AX80MIMO	Ant0	5610	-11.09	≤11.00	PASS
11AX80MIMO	Ant1	5610	-11.22	≤11.00	PASS
11AX80MIMO	total	5610	-8.14	≤10.01	PASS

Note: 1.The Duty Cycle Factor and cable loss are compensated in the graph.



Test Result B4

TestMode	Antenna	Frequency[MHz]	Result [dBm/510KHz]	Limit[dBm/500KHz]	Verdict
11A	Ant0	5745	-5.46	≤30.00	PASS
11A	Ant1	5745	-5.38	≤30.00	PASS
11A	Ant1	5785	-5.54	≤30.00	PASS
11A	Ant0	5785	-5.33	≤30.00	PASS
11A	Ant0	5825	-5.93	≤30.00	PASS
11A	Ant1	5825	-5.91	≤30.00	PASS
11N20MIMO	Ant0	5745	-6.17	≤30.00	PASS
11N20MIMO	Ant1	5745	-6.28	≤30.00	PASS
11N20MIMO	total	5745	-3.21	≤29.17	PASS
11N20MIMO	Ant0	5785	-6.15	≤30.00	PASS
11N20MIMO	Ant1	5785	-6.17	≤30.00	PASS
11N20MIMO	total	5785	-3.15	≤29.17	PASS
11N20MIMO	Ant0	5825	-5.99	≤30.00	PASS
11N20MIMO	Ant1	5825	-5.95	≤30.00	PASS
11N20MIMO	total	5825	-2.96	≤29.17	PASS
11N40MIMO	Ant0	5755	-8.69	≤30.00	PASS
11N40MIMO	Ant1	5755	-9.05	≤30.00	PASS
11N40MIMO	total	5755	-5.86	≤29.17	PASS
11N40MIMO	Ant0	5795	-9.36	≤30.00	PASS
11N40MIMO	Ant1	5795	-9.18	≤30.00	PASS
11N40MIMO	total	5795	-6.26	≤29.17	PASS
11AC20MIMO	Ant0	5745	-6.43	≤30.00	PASS
11AC20MIMO	Ant1	5745	-6.33	≤30.00	PASS
11AC20MIMO	total	5745	-3.37	≤29.17	PASS
11AC20MIMO	Ant0	5785	-6.83	≤30.00	PASS
11AC20MIMO	Ant1	5785	-6.57	≤30.00	PASS
11AC20MIMO	total	5785	-3.69	≤29.17	PASS
11AC20MIMO	Ant0	5825	-6.36	≤30.00	PASS
11AC20MIMO	Ant1	5825	-6.21	≤30.00	PASS
11AC20MIMO	total	5825	-3.27	≤29.17	PASS
11AC40MIMO	Ant0	5755	-9.14	≤30.00	PASS
11AC40MIMO	Ant1	5755	-9.13	≤30.00	PASS
11AC40MIMO	total	5755	-6.12	≤29.17	PASS
11AC40MIMO	Ant0	5795	-9.37	≤30.00	PASS
11AC40MIMO	Ant1	5795	-9.19	≤30.00	PASS
11AC40MIMO	total	5795	-6.27	≤29.17	PASS
11AC80MIMO	Ant0	5775	-13.05	≤30.00	PASS
11AC80MIMO	Ant1	5775	-13.09	≤30.00	PASS
11AC80MIMO	total	5775	-10.06	≤29.17	PASS

Shenzhen Anbotek Compliance Laboratory Limited

Address: 1/F., Building D, Sogood Science and Technology Park, Sanwei Community,
 Hangcheng Street, Bao'an District, Shenzhen, Guangdong, China.
 Tel: (86) 0755-26066440 Fax: (86) 0755-26014772 Email: service@anbotek.com



Hotline

400-003-0500

www.anbotek.com.cn



11AX20MIMO	Ant0	5745	-7.69	≤30.00	PASS
11AX20MIMO	Ant1	5745	-7.64	≤30.00	PASS
11AX20MIMO	total	5745	-4.65	≤29.17	PASS
11AX20MIMO	Ant0	5785	-7.62	≤30.00	PASS
11AX20MIMO	Ant1	5785	-7.69	≤30.00	PASS
11AX20MIMO	total	5785	-4.64	≤29.17	PASS
11AX20MIMO	Ant0	5825	-8.21	≤30.00	PASS
11AX20MIMO	Ant1	5825	-7.93	≤30.00	PASS
11AX20MIMO	total	5825	-5.06	≤29.17	PASS
11AX40MIMO	Ant0	5755	-10.47	≤30.00	PASS
11AX40MIMO	Ant1	5755	-10.29	≤30.00	PASS
11AX40MIMO	total	5755	-7.37	≤29.17	PASS
11AX40MIMO	Ant0	5795	-10.84	≤30.00	PASS
11AX40MIMO	Ant1	5795	-10.48	≤30.00	PASS
11AX40MIMO	total	5795	-7.65	≤29.17	PASS
11AX80MIMO	Ant0	5775	-14.15	≤30.00	PASS
11AX80MIMO	Ant1	5775	-13.98	≤30.00	PASS
11AX80MIMO	total	5775	-11.05	≤29.17	PASS

Note: The Duty Cycle Factor and cable loss are compensated in the graph.

Shenzhen Anbotek Compliance Laboratory Limited

Address: 1/F., Building D, Sogood Science and Technology Park, Sanwei Community, Hangcheng Street, Bao'an District, Shenzhen, Guangdong, China.
Tel: (86) 0755-26066440 Fax: (86) 0755-26014772 Email: service@anbotek.com



Hotline
400-003-0500
www.anbotek.com.cn

