



Test Graphs B1/2/3



11A-Ant0-5180-PASS

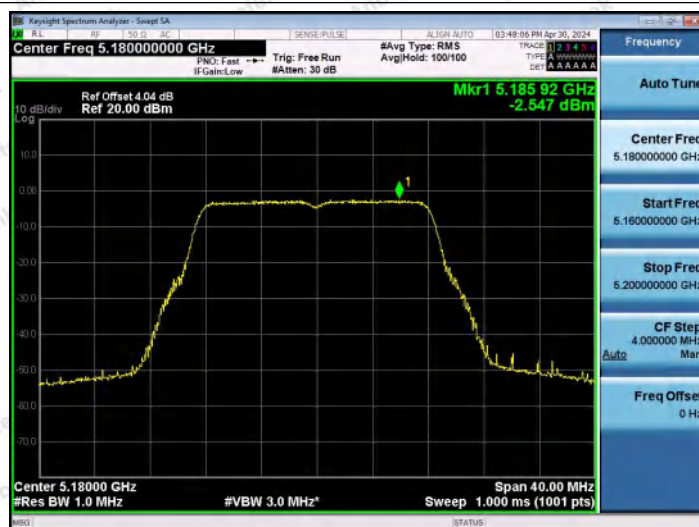

11A-Ant1-5180-PASS

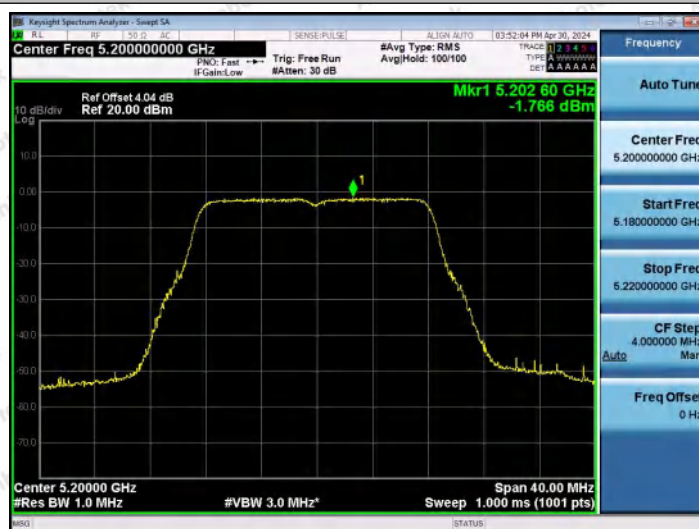

11A-Ant0-5200-PASS

Shenzhen Anbotek Compliance Laboratory Limited

Address: 1/F., Building D, Sogood Science and Technology Park, Sanwei Community, Hangcheng Street, Bao'an District, Shenzhen, Guangdong, China.
 Tel: (86) 0755-26066440 Fax: (86) 0755-26014772 Email: service@anbotek.com



Hotline


400-003-0500

www.anbotek.com.cn






11A-Ant1-5200-PASS

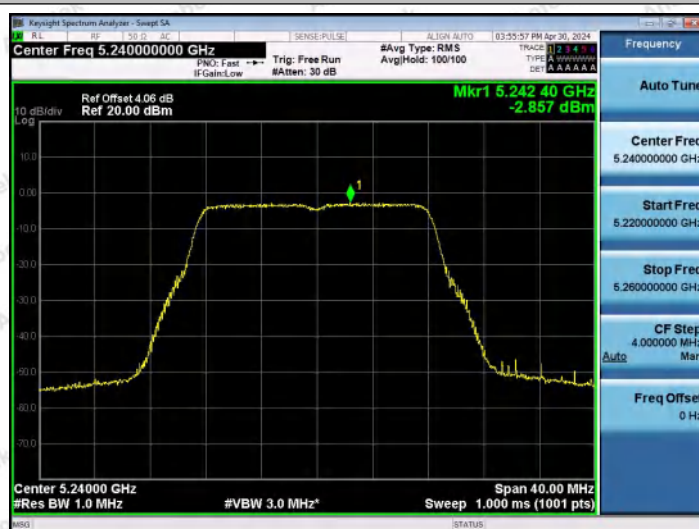

11A-Ant0-5240-PASS

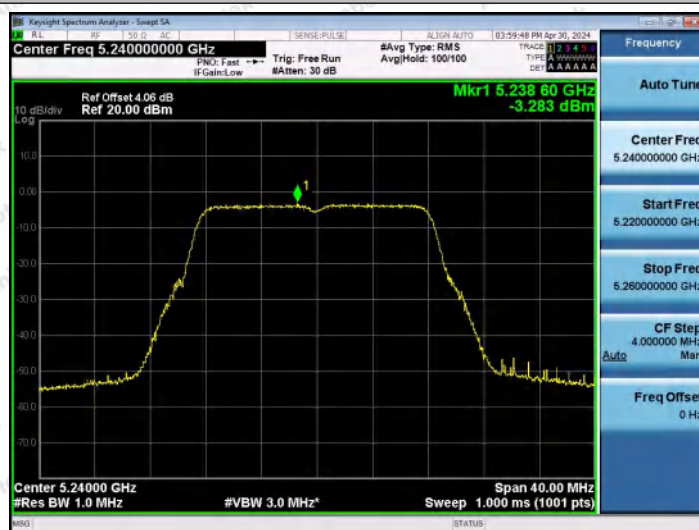

11A-Ant1-5240-PASS

Shenzhen Anbotek Compliance Laboratory Limited

Address: 1/F., Building D, Sogood Science and Technology Park, Sanwei Community, Hangcheng Street, Bao'an District, Shenzhen, Guangdong, China.
Tel: (86) 0755-26066440 Fax: (86) 0755-26014772 Email: service@anbotek.com



Hotline

400-003-0500

www.anbotek.com.cn






11A-Ant0-5260-PASS



11A-Ant1-5260-PASS

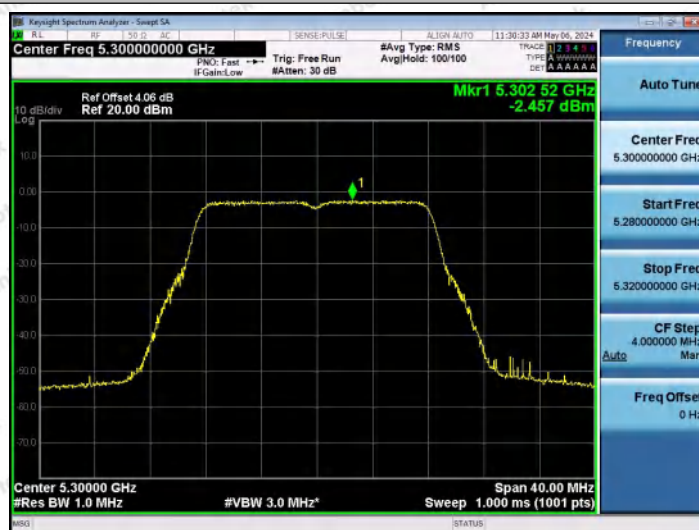

11A-Ant0-5300-PASS

Shenzhen Anbotek Compliance Laboratory Limited

Address: 1/F., Building D, Sogood Science and Technology Park, Sanwei Community, Hangcheng Street, Bao'an District, Shenzhen, Guangdong, China.
Tel: (86) 0755-26066440 Fax: (86) 0755-26014772 Email: service@anbotek.com



Hotline

400-003-0500

www.anbotek.com.cn






11A-Ant1-5300-PASS



11A-Ant0-5320-PASS

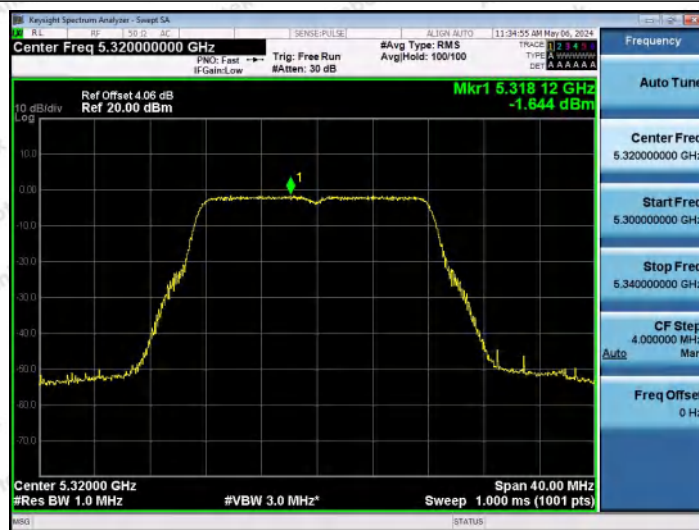

11A-Ant1-5320-PASS

Shenzhen Anbotek Compliance Laboratory Limited

Address: 1/F., Building D, Sogood Science and Technology Park, Sanwei Community, Hangcheng Street, Bao'an District, Shenzhen, Guangdong, China.
Tel: (86) 0755-26066440 Fax: (86) 0755-26014772 Email: service@anbotek.com



Hotline
400-003-0500
www.anbotek.com.cn





11A-Ant0-5500-PASS



11A-Ant1-5500-PASS



11A-Ant0-5580-PASS

Shenzhen Anbotek Compliance Laboratory Limited

Address: 1/F., Building D, Sogood Science and Technology Park, Sanwei Community, Hangcheng Street, Bao'an District, Shenzhen, Guangdong, China.
Tel: (86) 0755-26066440 Fax: (86) 0755-26014772 Email: service@anbotek.com



Hotline
400-003-0500
www.anbotek.com.cn






11A-Ant1-5580-PASS



11A-Ant0-5700-PASS

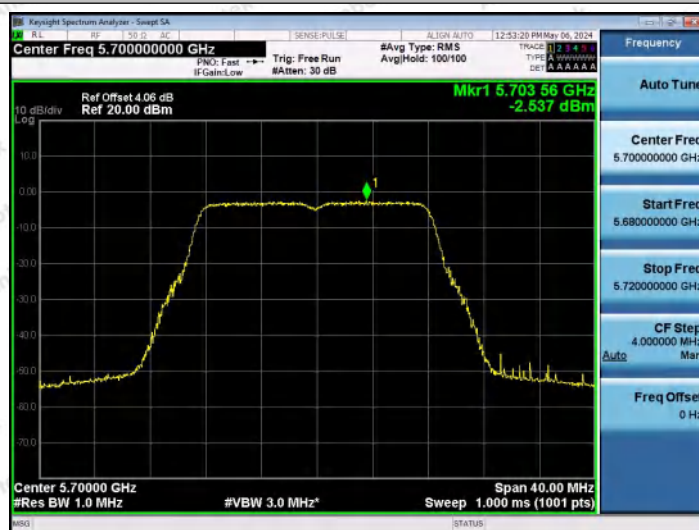

11A-Ant1-5700-PASS

Shenzhen Anbotek Compliance Laboratory Limited

Address: 1/F., Building D, Sogood Science and Technology Park, Sanwei Community, Hangcheng Street, Bao'an District, Shenzhen, Guangdong, China.
Tel: (86) 0755-26066440 Fax: (86) 0755-26014772 Email: service@anbotek.com



Hotline

400-003-0500

www.anbotek.com.cn





11N20MIMO-Ant0-5180-PASS



11N20MIMO-Ant1-5180-PASS



11N20MIMO-Ant0-5200-PASS

Shenzhen Anbotek Compliance Laboratory Limited

Address: 1/F., Building D, Sogood Science and Technology Park, Sanwei Community, Hangcheng Street, Bao'an District, Shenzhen, Guangdong, China.
Tel: (86) 0755-26066440 Fax: (86) 0755-26014772 Email: service@anbotek.com




Hotline

400-003-0500

www.anbotek.com.cn



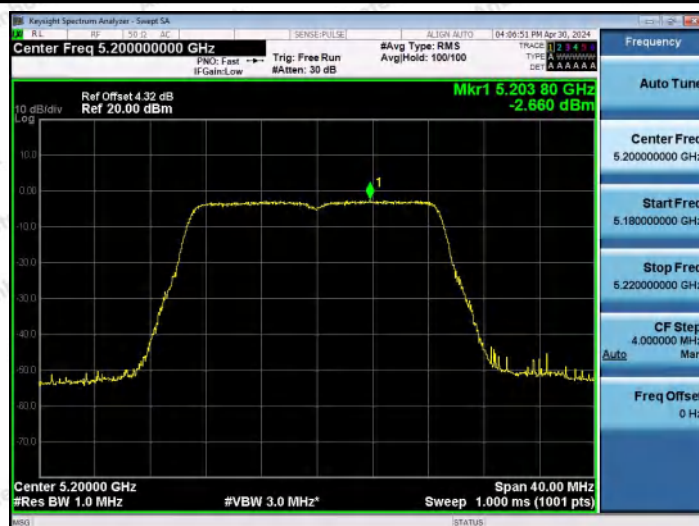

11N20MIMO-Ant1-5200-PASS



11N20MIMO-Ant0-5240-PASS



11N20MIMO-Ant1-5240-PASS

Shenzhen Anbotek Compliance Laboratory Limited

Address: 1/F., Building D, Sogood Science and Technology Park, Sanwei Community, Hangcheng Street, Bao'an District, Shenzhen, Guangdong, China.
Tel: (86) 0755-26066440 Fax: (86) 0755-26014772 Email: service@anbotek.com



Hotline


400-003-0500

www.anbotek.com.cn






11N20MIMO-Ant0-5260-PASS

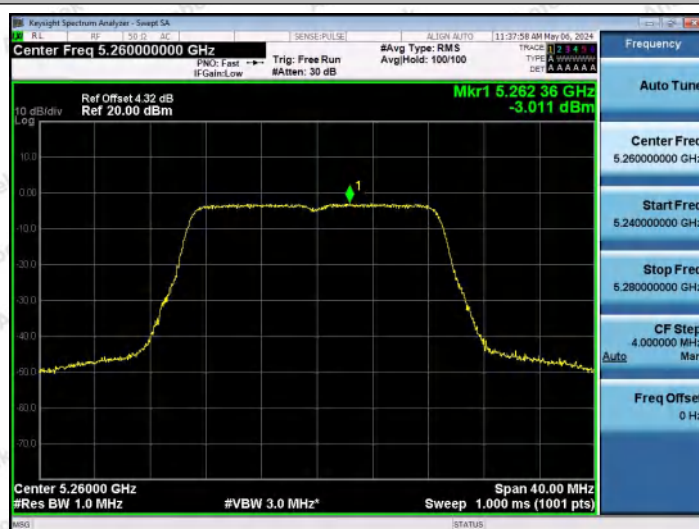

11N20MIMO-Ant1-5260-PASS

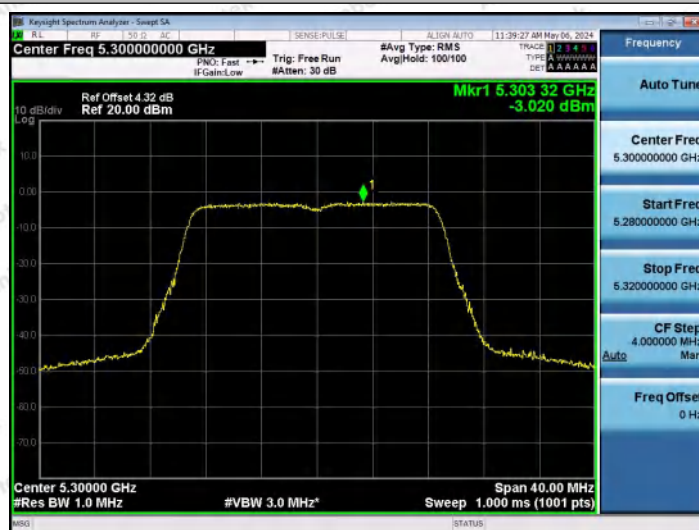

11N20MIMO-Ant0-5300-PASS

Shenzhen Anbotek Compliance Laboratory Limited

Address: 1/F., Building D, Sogood Science and Technology Park, Sanwei Community, Hangcheng Street, Bao'an District, Shenzhen, Guangdong, China.
Tel: (86) 0755-26066440 Fax: (86) 0755-26014772 Email: service@anbotek.com



Hotline

400-003-0500

www.anbotek.com.cn






11N20MIMO-Ant1-5300-PASS



11N20MIMO-Ant0-5320-PASS

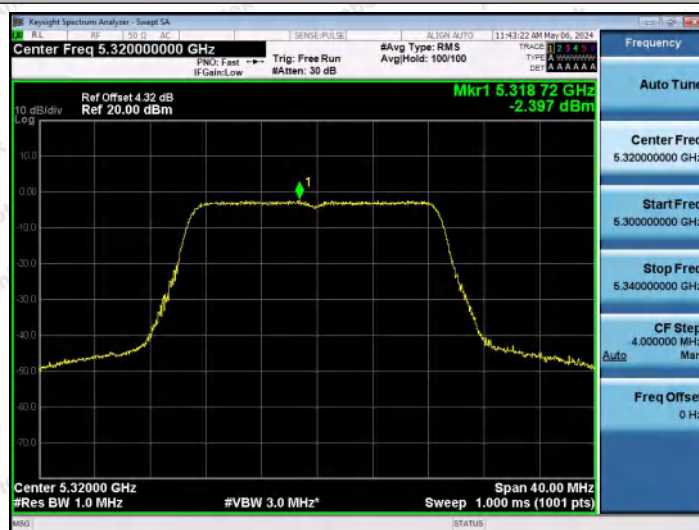

11N20MIMO-Ant1-5320-PASS

Shenzhen Anbotek Compliance Laboratory Limited

Address: 1/F., Building D, Sogood Science and Technology Park, Sanwei Community, Hangcheng Street, Bao'an District, Shenzhen, Guangdong, China.
Tel: (86) 0755-26066440 Fax: (86) 0755-26014772 Email: service@anbotek.com



Hotline


400-003-0500

www.anbotek.com.cn





11N20MIMO-Ant0-5500-PASS

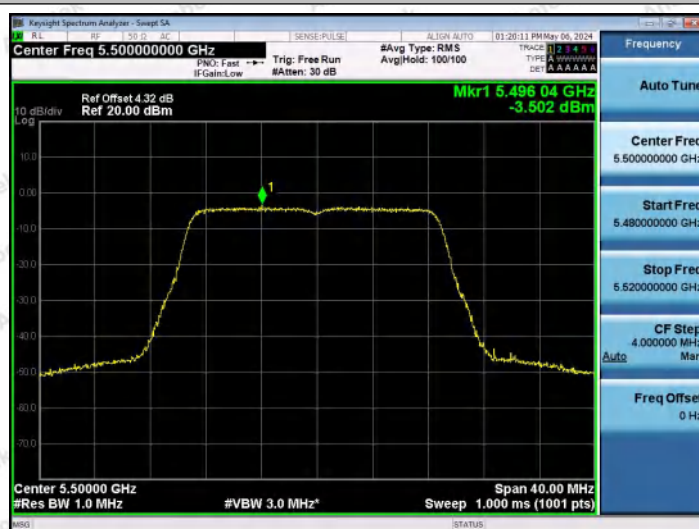

11N20MIMO-Ant1-5500-PASS



11N20MIMO-Ant0-5580-PASS

Shenzhen Anbotek Compliance Laboratory Limited

Address: 1/F., Building D, Sogood Science and Technology Park, Sanwei Community, Hangcheng Street, Bao'an District, Shenzhen, Guangdong, China.
Tel: (86) 0755-26066440 Fax: (86) 0755-26014772 Email: service@anbotek.com



Hotline


400-003-0500

www.anbotek.com.cn






11N20MIMO-Ant1-5580-PASS

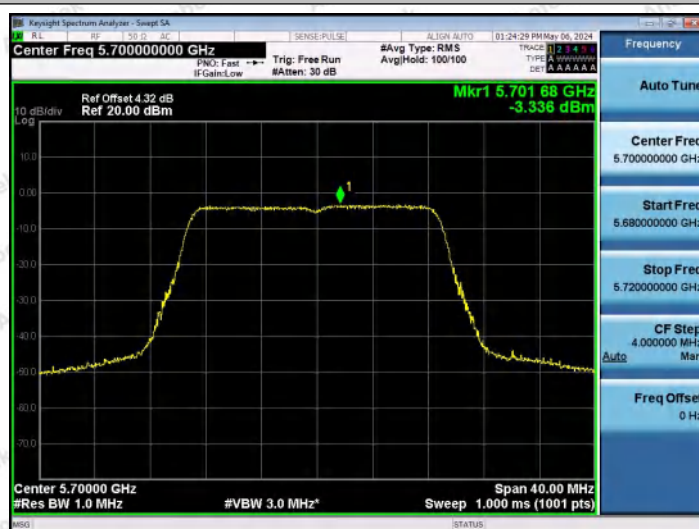

11N20MIMO-Ant0-5700-PASS

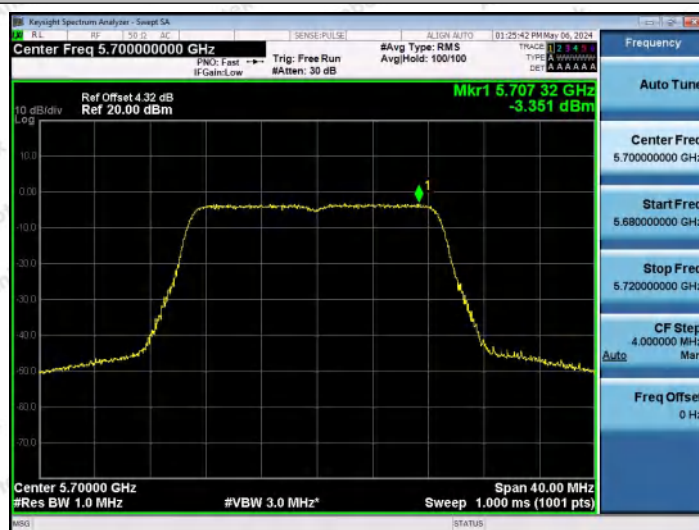

11N20MIMO-Ant1-5700-PASS

Shenzhen Anbotek Compliance Laboratory Limited

Address: 1/F., Building D, Sogood Science and Technology Park, Sanwei Community, Hangcheng Street, Bao'an District, Shenzhen, Guangdong, China.
Tel: (86) 0755-26066440 Fax: (86) 0755-26014772 Email: service@anbotek.com




Hotline

400-003-0500

www.anbotek.com.cn




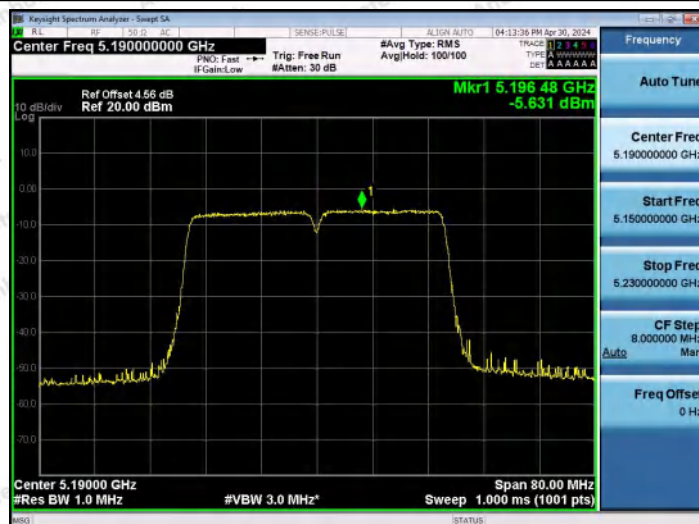

11N40MIMO-Ant0-5190-PASS



11N40MIMO-Ant1-5190-PASS

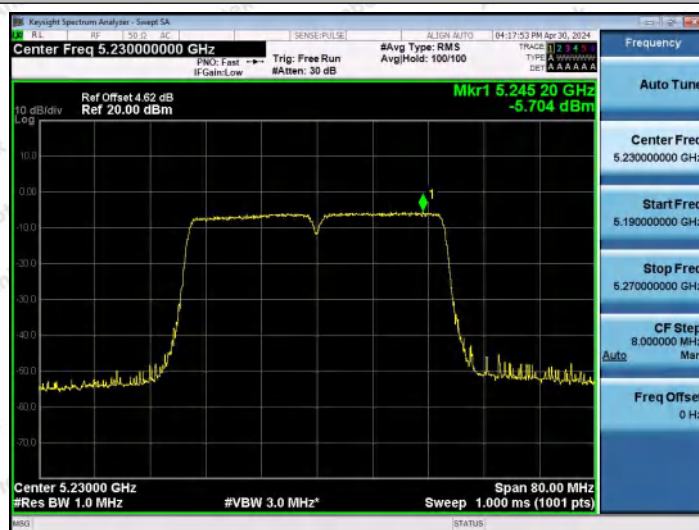

11N40MIMO-Ant0-5230-PASS

Shenzhen Anbotek Compliance Laboratory Limited

Address: 1/F., Building D, Sogood Science and Technology Park, Sanwei Community, Hangcheng Street, Bao'an District, Shenzhen, Guangdong, China.
 Tel: (86) 0755-26066440 Fax: (86) 0755-26014772 Email: service@anbotek.com



Hotline


400-003-0500

www.anbotek.com.cn






11N40MIMO-Ant1-5230-PASS

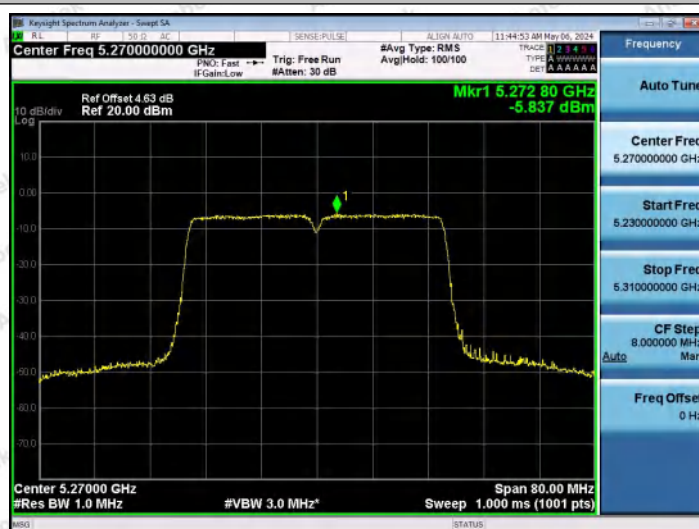

11N40MIMO-Ant0-5270-PASS

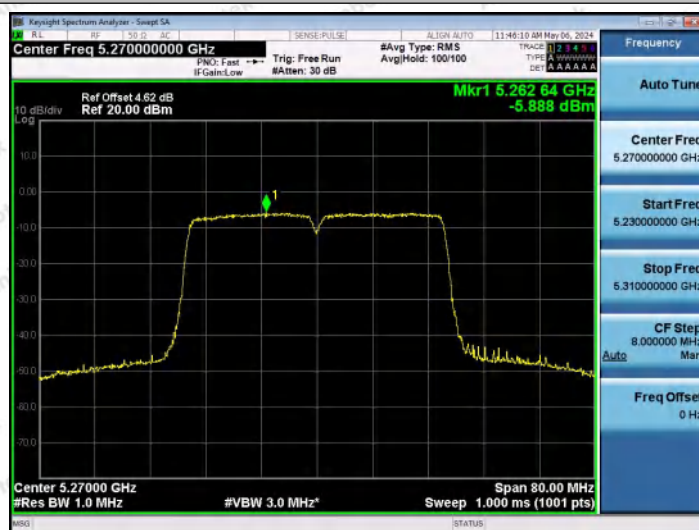

11N40MIMO-Ant1-5270-PASS

Shenzhen Anbotek Compliance Laboratory Limited

Address: 1/F., Building D, Sogood Science and Technology Park, Sanwei Community, Hangcheng Street, Bao'an District, Shenzhen, Guangdong, China.
 Tel: (86) 0755-26066440 Fax: (86) 0755-26014772 Email: service@anbotek.com



Hotline

400-003-0500

www.anbotek.com.cn






11N40MIMO-Ant0-5310-PASS



11N40MIMO-Ant1-5310-PASS

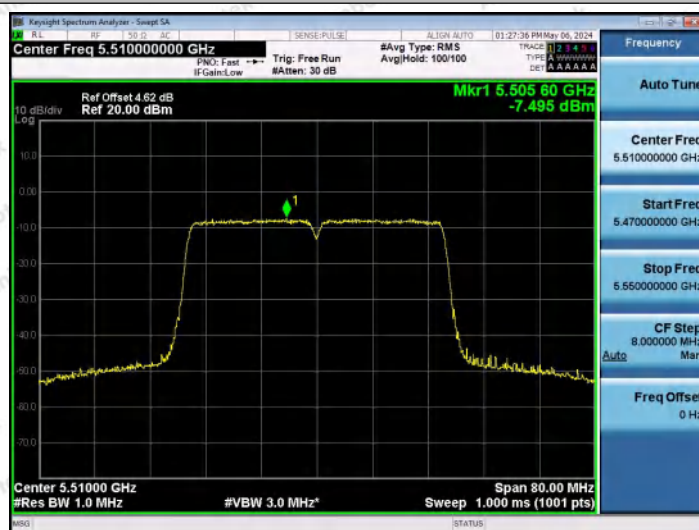

11N40MIMO-Ant0-5510-PASS

Shenzhen Anbotek Compliance Laboratory Limited

Address: 1/F., Building D, Sogood Science and Technology Park, Sanwei Community, Hangcheng Street, Bao'an District, Shenzhen, Guangdong, China.
 Tel: (86) 0755-26066440 Fax: (86) 0755-26014772 Email: service@anbotek.com




Hotline


400-003-0500

www.anbotek.com.cn




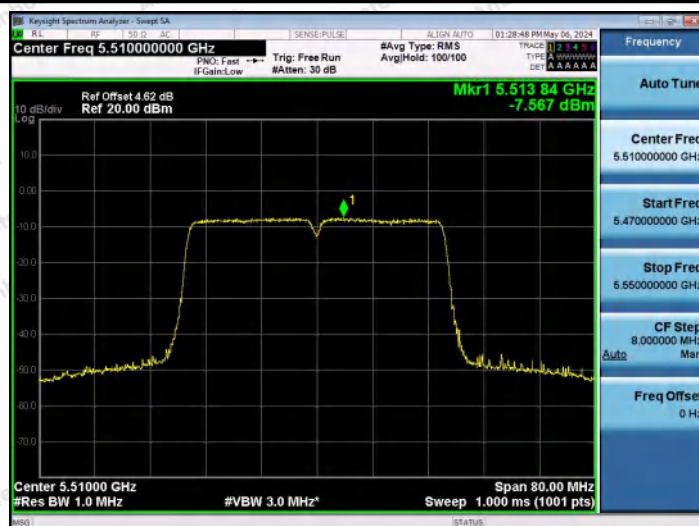

11N40MIMO-Ant1-5510-PASS

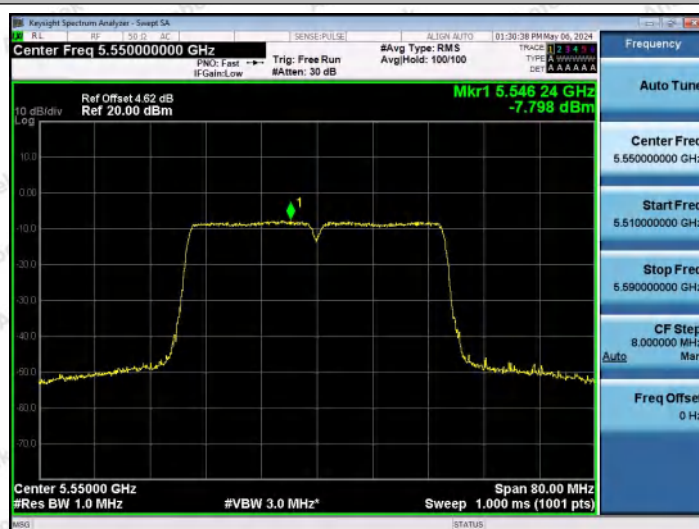

11N40MIMO-Ant0-5550-PASS

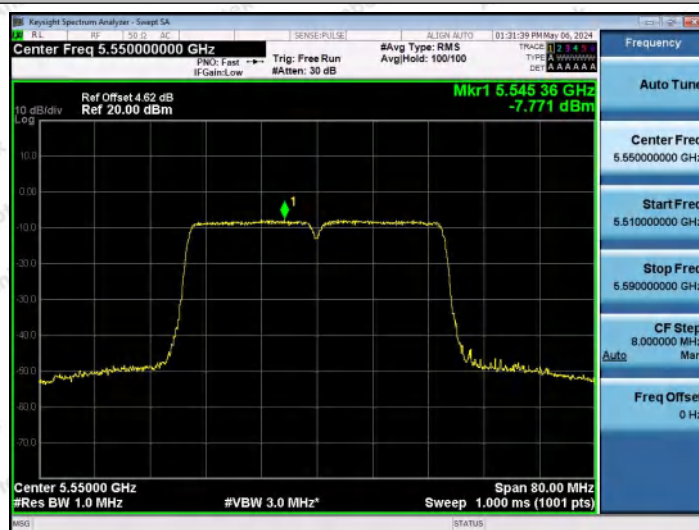

11N40MIMO-Ant1-5550-PASS

Shenzhen Anbotek Compliance Laboratory Limited

Address: 1/F., Building D, Sogood Science and Technology Park, Sanwei Community, Hangcheng Street, Bao'an District, Shenzhen, Guangdong, China.
Tel: (86) 0755-26066440 Fax: (86) 0755-26014772 Email: service@anbotek.com



Hotline


400-003-0500

www.anbotek.com.cn





11N40MIMO-Ant0-5670-PASS

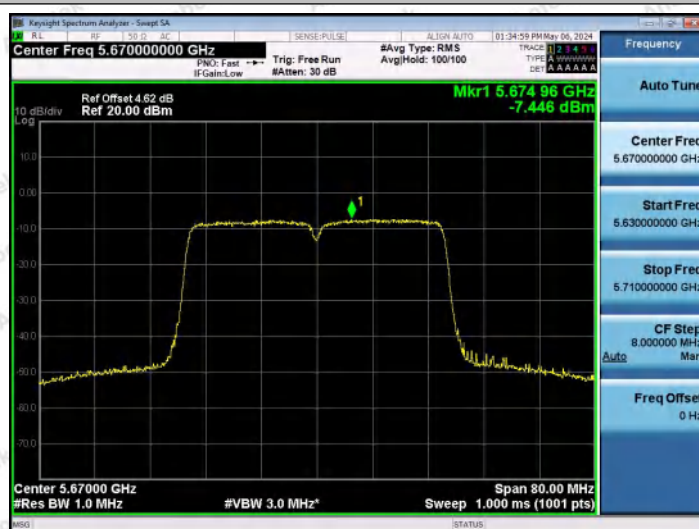

11N40MIMO-Ant1-5670-PASS



11AC20MIMO-Ant0-5180-PASS

Shenzhen Anbotek Compliance Laboratory Limited

Address: 1/F., Building D, Sogood Science and Technology Park, Sanwei Community, Hangcheng Street, Bao'an District, Shenzhen, Guangdong, China.
Tel: (86) 0755-26066440 Fax: (86) 0755-26014772 Email: service@anbotek.com



Hotline


400-003-0500

www.anbotek.com.cn





11AC20MIMO-Ant1-5180-PASS

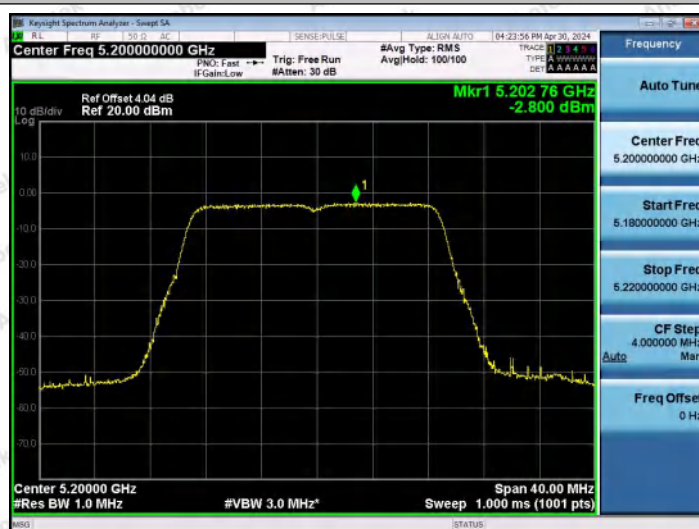

11AC20MIMO-Ant0-5200-PASS



11AC20MIMO-Ant1-5200-PASS

Shenzhen Anbotek Compliance Laboratory Limited

Address: 1/F., Building D, Sogood Science and Technology Park, Sanwei Community, Hangcheng Street, Bao'an District, Shenzhen, Guangdong, China.
 Tel: (86) 0755-26066440 Fax: (86) 0755-26014772 Email: service@anbotek.com



Hotline
 400-003-0500
 www.anbotek.com.cn





11AC20MIMO-Ant0-5240-PASS



11AC20MIMO-Ant1-5240-PASS



11AC20MIMO-Ant0-5260-PASS

Shenzhen Anbotek Compliance Laboratory Limited

Address: 1/F., Building D, Sogood Science and Technology Park, Sanwei Community, Hangcheng Street, Bao'an District, Shenzhen, Guangdong, China.
Tel: (86) 0755-26066440 Fax: (86) 0755-26014772 Email: service@anbotek.com



Hotline


400-003-0500

www.anbotek.com.cn






11AC20MIMO-Ant1-5260-PASS

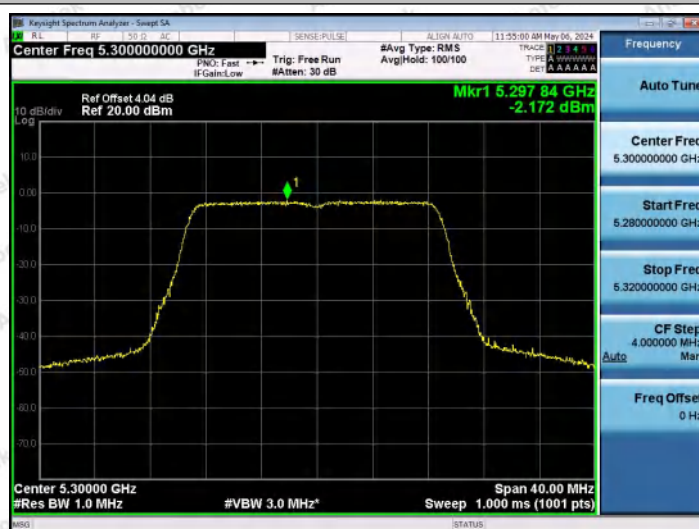

11AC20MIMO-Ant0-5300-PASS

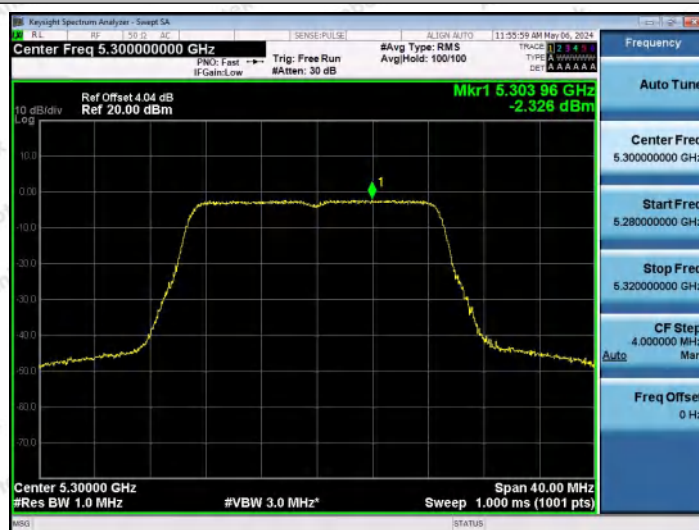

11AC20MIMO-Ant1-5300-PASS

Shenzhen Anbotek Compliance Laboratory Limited

Address: 1/F., Building D, Sogood Science and Technology Park, Sanwei Community, Hangcheng Street, Bao'an District, Shenzhen, Guangdong, China.
 Tel: (86) 0755-26066440 Fax: (86) 0755-26014772 Email: service@anbotek.com



Hotline


400-003-0500

www.anbotek.com.cn






11AC20MIMO-Ant0-5320-PASS

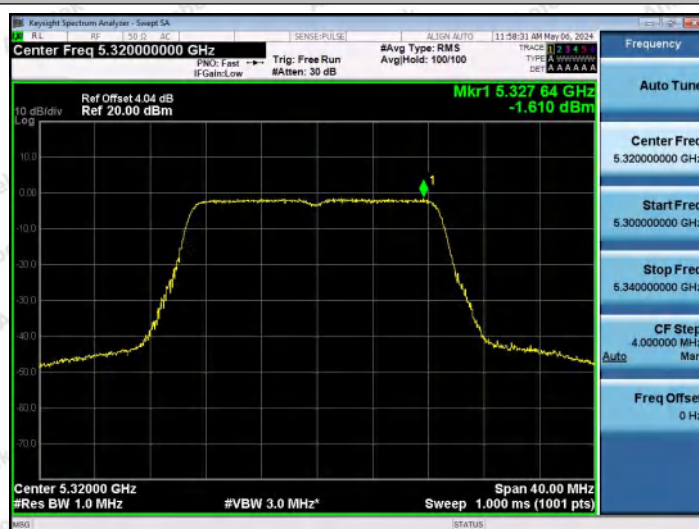

11AC20MIMO-Ant1-5320-PASS

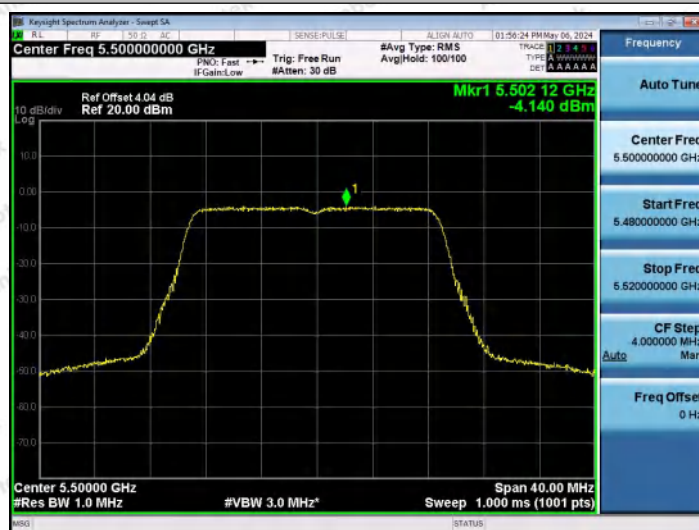

11AC20MIMO-Ant0-5500-PASS






11AC20MIMO-Ant1-5500-PASS



11AC20MIMO-Ant0-5580-PASS

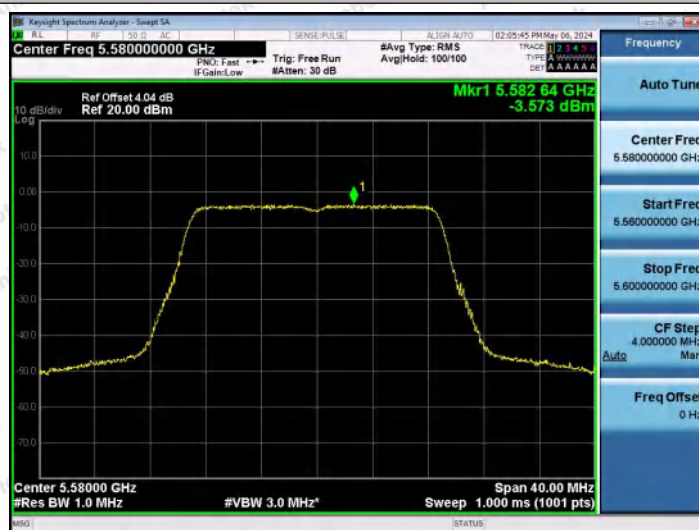

11AC20MIMO-Ant1-5580-PASS

Shenzhen Anbotek Compliance Laboratory Limited

Address: 1/F., Building D, Sogood Science and Technology Park, Sanwei Community, Hangcheng Street, Bao'an District, Shenzhen, Guangdong, China.
Tel: (86) 0755-26066440 Fax: (86) 0755-26014772 Email: service@anbotek.com



Hotline


400-003-0500

www.anbotek.com.cn





11AC20MIMO-Ant0-5700-PASS

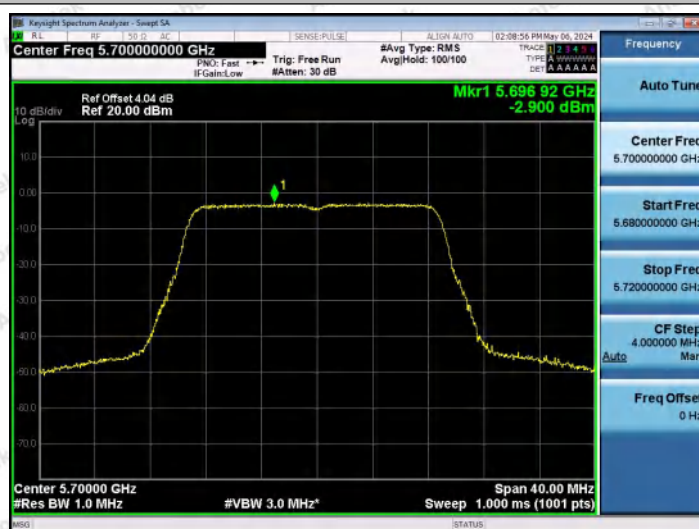

11AC20MIMO-Ant1-5700-PASS



11AC40MIMO-Ant0-5190-PASS

Shenzhen Anbotek Compliance Laboratory Limited

Address: 1/F., Building D, Sogood Science and Technology Park, Sanwei Community, Hangcheng Street, Bao'an District, Shenzhen, Guangdong, China.
Tel: (86) 0755-26066440 Fax: (86) 0755-26014772 Email: service@anbotek.com



Hotline


400-003-0500

www.anbotek.com.cn





11AC40MIMO-Ant1-5190-PASS

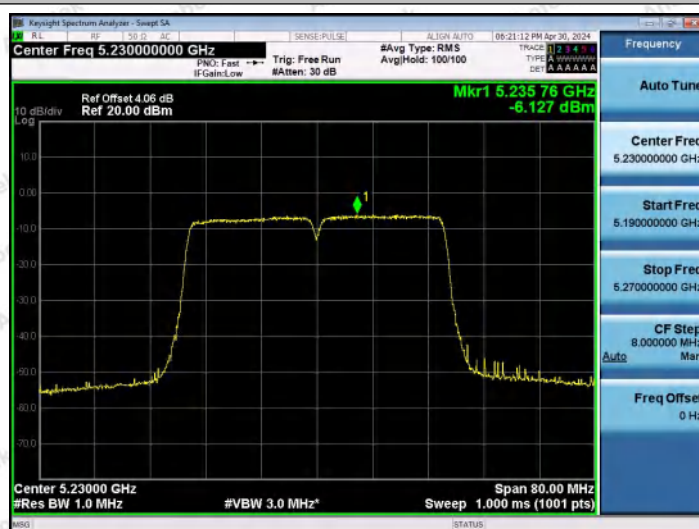

11AC40MIMO-Ant0-5230-PASS



11AC40MIMO-Ant1-5230-PASS

Shenzhen Anbotek Compliance Laboratory Limited

Address: 1/F., Building D, Sogood Science and Technology Park, Sanwei Community, Hangcheng Street, Bao'an District, Shenzhen, Guangdong, China.
Tel: (86) 0755-26066440 Fax: (86) 0755-26014772 Email: service@anbotek.com



Hotline


400-003-0500

www.anbotek.com.cn





11AC40MIMO-Ant0-5270-PASS

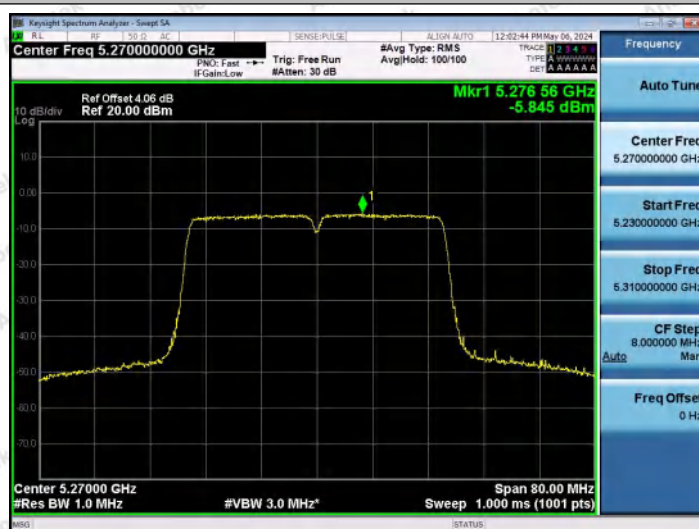

11AC40MIMO-Ant1-5270-PASS



11AC40MIMO-Ant0-5310-PASS

Shenzhen Anbotek Compliance Laboratory Limited

Address: 1/F., Building D, Sogood Science and Technology Park, Sanwei Community, Hangcheng Street, Bao'an District, Shenzhen, Guangdong, China.
Tel: (86) 0755-26066440 Fax: (86) 0755-26014772 Email: service@anbotek.com



Hotline


400-003-0500

www.anbotek.com.cn






11AC40MIMO-Ant1-5310-PASS

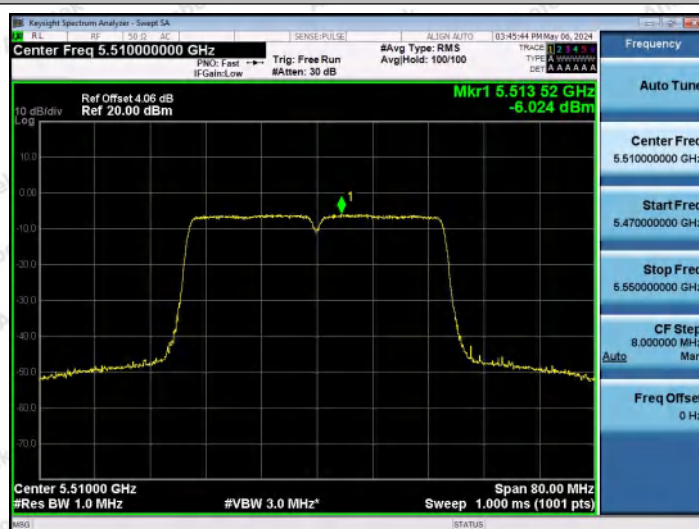

11AC40MIMO-Ant0-5510-PASS

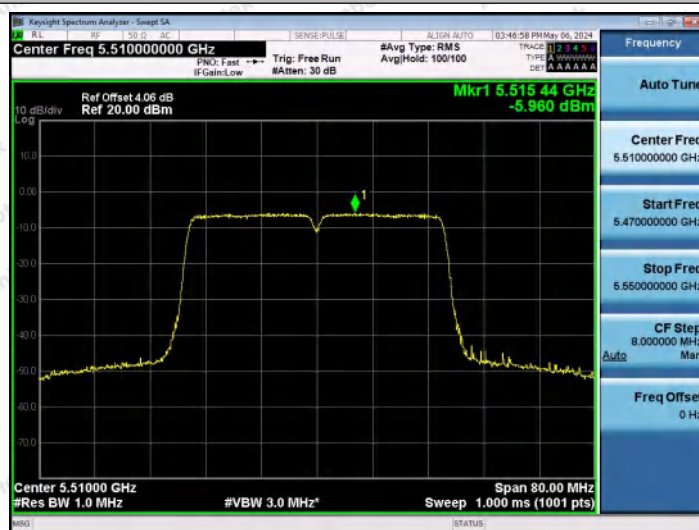

11AC40MIMO-Ant1-5510-PASS

Shenzhen Anbotek Compliance Laboratory Limited

Address: 1/F., Building D, Sogood Science and Technology Park, Sanwei Community, Hangcheng Street, Bao'an District, Shenzhen, Guangdong, China.
 Tel: (86) 0755-26066440 Fax: (86) 0755-26014772 Email: service@anbotek.com



Hotline


400-003-0500

www.anbotek.com.cn






11AC40MIMO-Ant0-5550-PASS

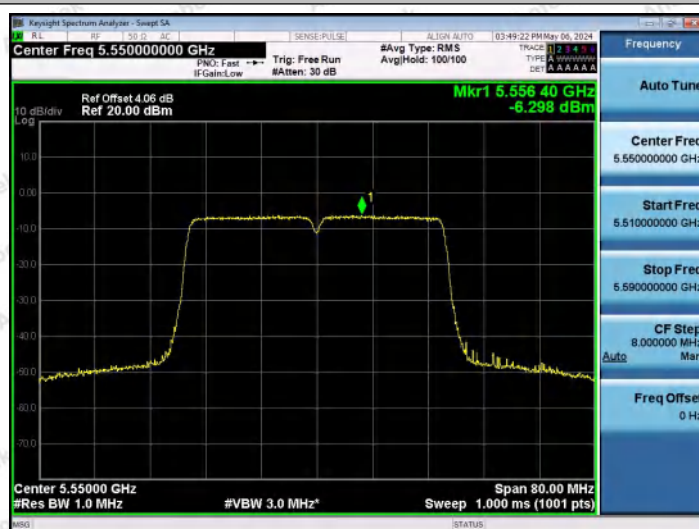

11AC40MIMO-Ant1-5550-PASS

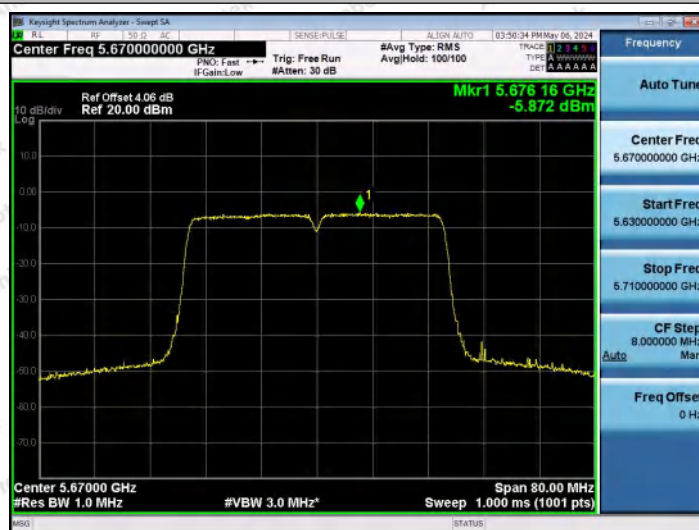


11AC40MIMO-Ant0-5670-PASS





11AC40MIMO-Ant1-5670-PASS

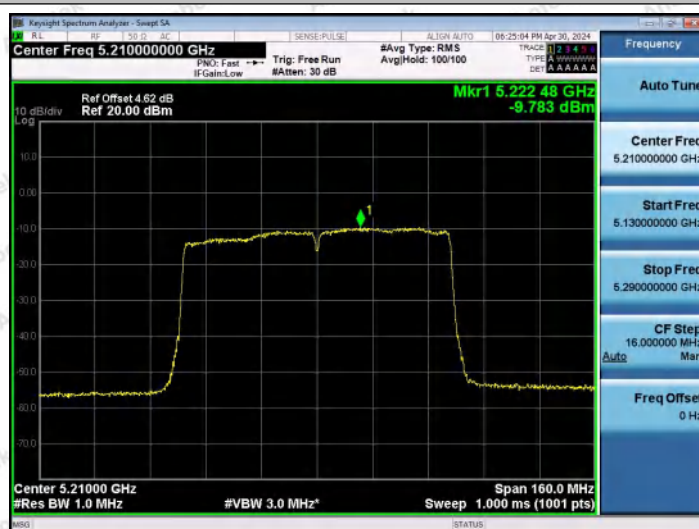

11AC80MIMO-Ant0-5210-PASS



11AC80MIMO-Ant1-5210-PASS

Shenzhen Anbotek Compliance Laboratory Limited

Address: 1/F., Building D, Sogood Science and Technology Park, Sanwei Community, Hangcheng Street, Bao'an District, Shenzhen, Guangdong, China.
 Tel: (86) 0755-26066440 Fax: (86) 0755-26014772 Email: service@anbotek.com



Hotline

400-003-0500

www.anbotek.com.cn






11AC80MIMO-Ant0-5290-PASS



11AC80MIMO-Ant1-5290-PASS

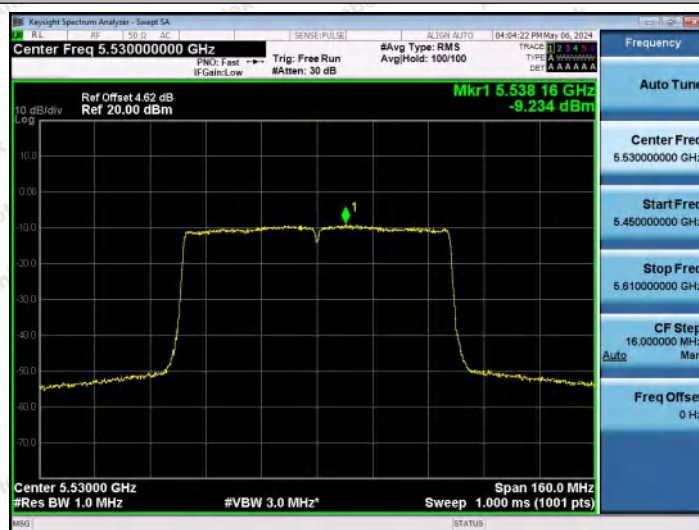

11AC80MIMO-Ant0-5530-PASS

Shenzhen Anbotek Compliance Laboratory Limited

Address: 1/F., Building D, Sogood Science and Technology Park, Sanwei Community, Hangcheng Street, Bao'an District, Shenzhen, Guangdong, China.
 Tel: (86) 0755-26066440 Fax: (86) 0755-26014772 Email: service@anbotek.com



Hotline

400-003-0500

www.anbotek.com.cn






11AC80MIMO-Ant1-5530-PASS



11AC80MIMO-Ant0-5610-PASS

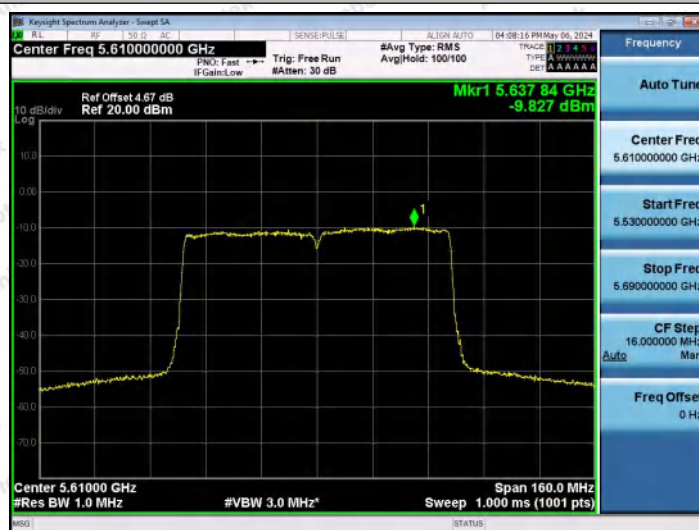

11AC80MIMO-Ant1-5610-PASS

Shenzhen Anbotek Compliance Laboratory Limited

Address: 1/F., Building D, Sogood Science and Technology Park, Sanwei Community, Hangcheng Street, Bao'an District, Shenzhen, Guangdong, China.
Tel: (86) 0755-26066440 Fax: (86) 0755-26014772 Email: service@anbotek.com




Hotline
400-003-0500
www.anbotek.com.cn






11AX20MIMO-Ant0-5180-PASS

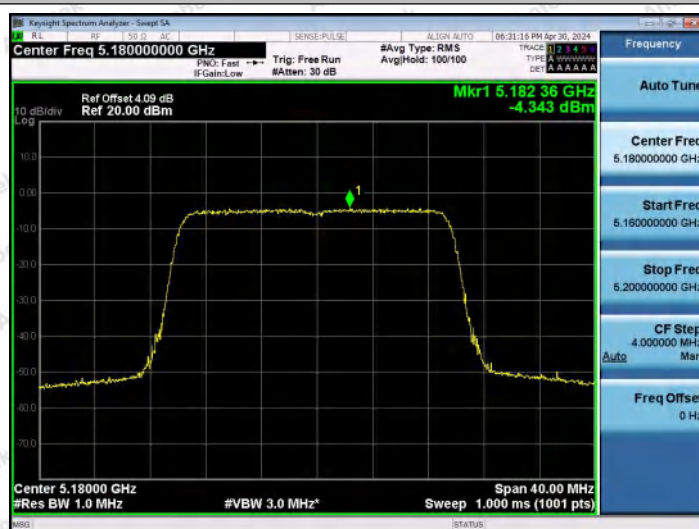


11AX20MIMO-Ant1-5180-PASS

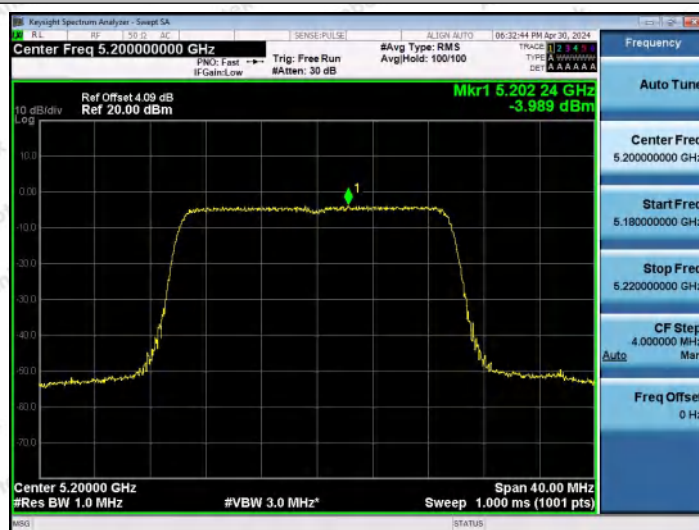


11AX20MIMO-Ant0-5200-PASS



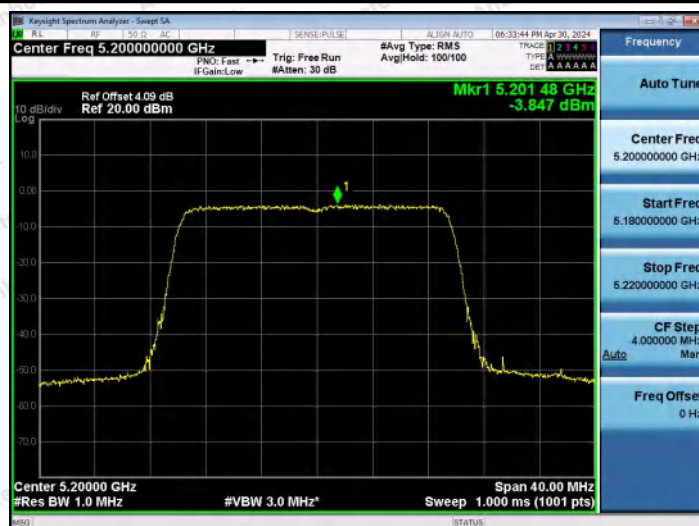

11AX20MIMO-Ant1-5200-PASS

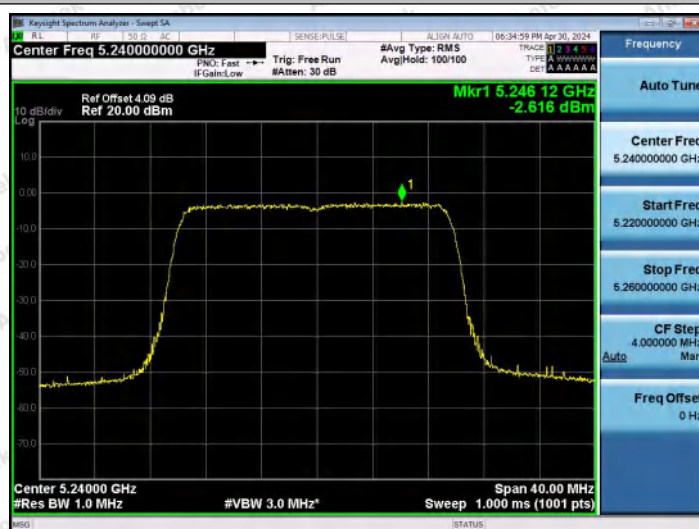

11AX20MIMO-Ant0-5240-PASS



11AX20MIMO-Ant1-5240-PASS

Shenzhen Anbotek Compliance Laboratory Limited

Address: 1/F., Building D, Sogood Science and Technology Park, Sanwei Community, Hangcheng Street, Bao'an District, Shenzhen, Guangdong, China.
Tel: (86) 0755-26066440 Fax: (86) 0755-26014772 Email: service@anbotek.com




Hotline


400-003-0500

www.anbotek.com.cn



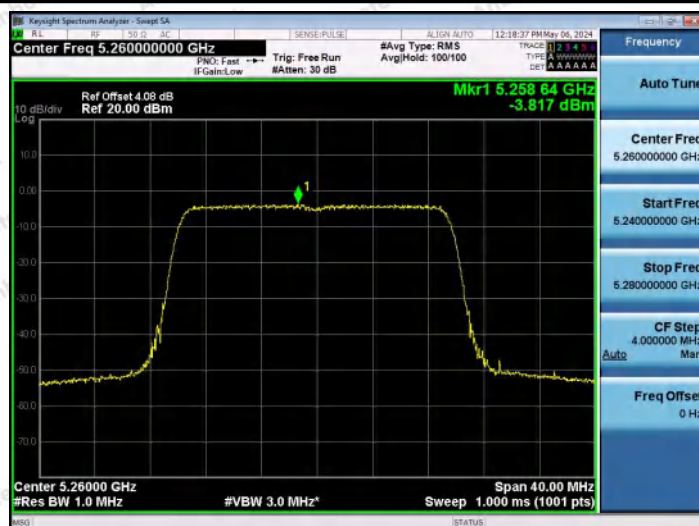

11AX20MIMO-Ant0-5260-PASS

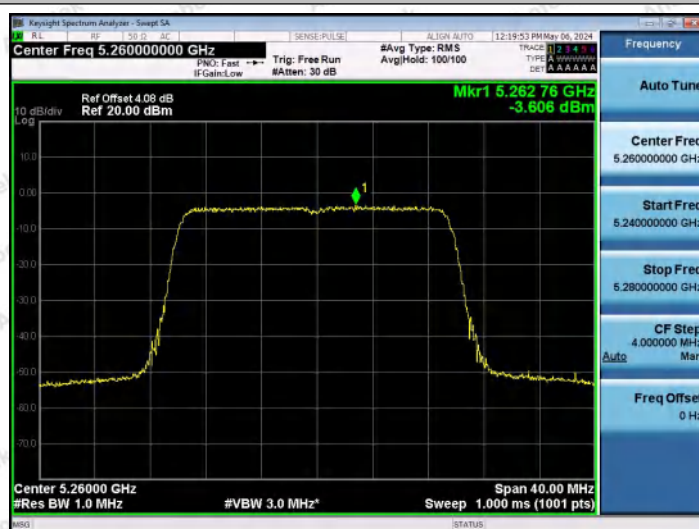

11AX20MIMO-Ant1-5260-PASS



11AX20MIMO-Ant0-5300-PASS

Shenzhen Anbotek Compliance Laboratory Limited

Address: 1/F., Building D, Sogood Science and Technology Park, Sanwei Community, Hangcheng Street, Bao'an District, Shenzhen, Guangdong, China.
 Tel: (86) 0755-26066440 Fax: (86) 0755-26014772 Email: service@anbotek.com



Hotline


400-003-0500

www.anbotek.com.cn






11AX20MIMO-Ant1-5300-PASS

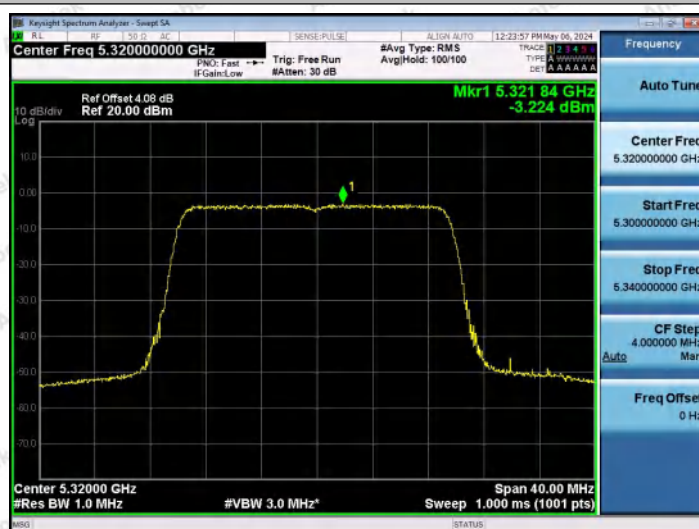

11AX20MIMO-Ant0-5320-PASS

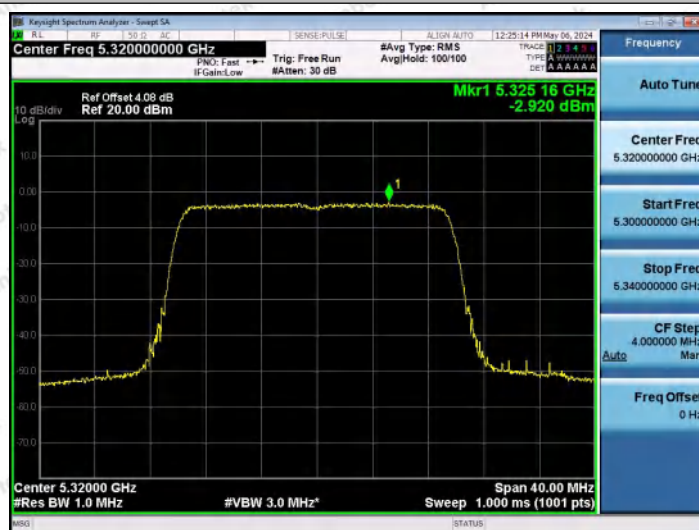

11AX20MIMO-Ant1-5320-PASS

Shenzhen Anbotek Compliance Laboratory Limited

Address: 1/F., Building D, Sogood Science and Technology Park, Sanwei Community, Hangcheng Street, Bao'an District, Shenzhen, Guangdong, China.
Tel: (86) 0755-26066440 Fax: (86) 0755-26014772 Email: service@anbotek.com



Hotline

400-003-0500

www.anbotek.com.cn






11AX20MIMO-Ant0-5500-PASS



11AX20MIMO-Ant1-5500-PASS

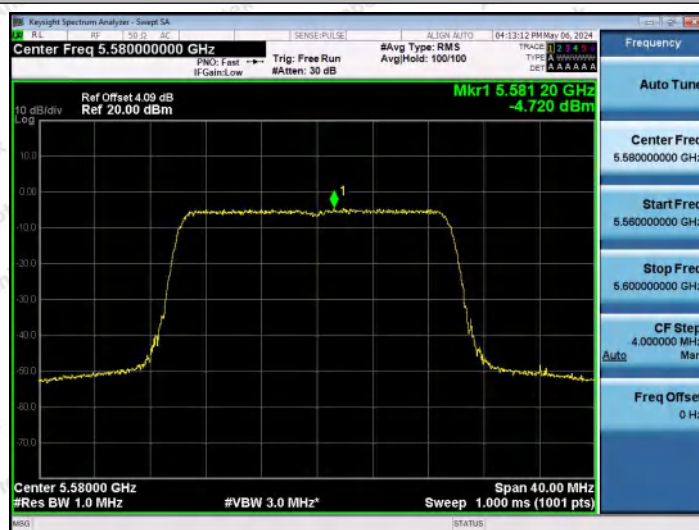

11AX20MIMO-Ant0-5580-PASS

Shenzhen Anbotek Compliance Laboratory Limited

Address: 1/F., Building D, Sogood Science and Technology Park, Sanwei Community, Hangcheng Street, Bao'an District, Shenzhen, Guangdong, China.
Tel: (86) 0755-26066440 Fax: (86) 0755-26014772 Email: service@anbotek.com



Hotline

400-003-0500

www.anbotek.com.cn






11AX20MIMO-Ant1-5580-PASS



11AX20MIMO-Ant0-5700-PASS

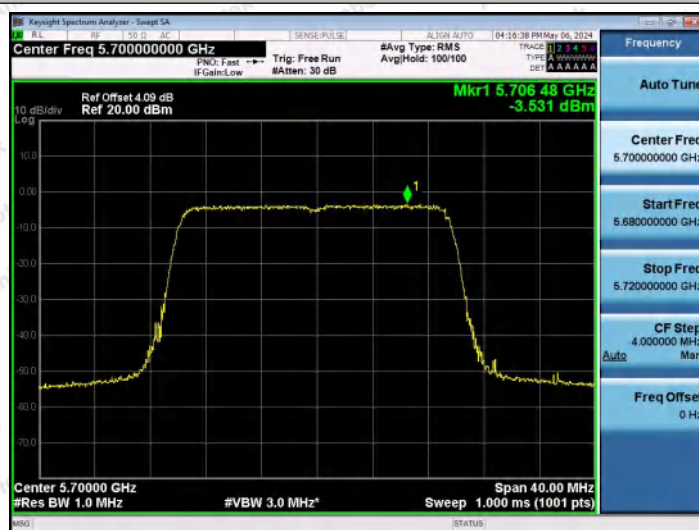

11AX20MIMO-Ant1-5700-PASS

Shenzhen Anbotek Compliance Laboratory Limited

Address: 1/F., Building D, Sogood Science and Technology Park, Sanwei Community, Hangcheng Street, Bao'an District, Shenzhen, Guangdong, China.
Tel: (86) 0755-26066440 Fax: (86) 0755-26014772 Email: service@anbotek.com




Hotline


400-003-0500

www.anbotek.com.cn



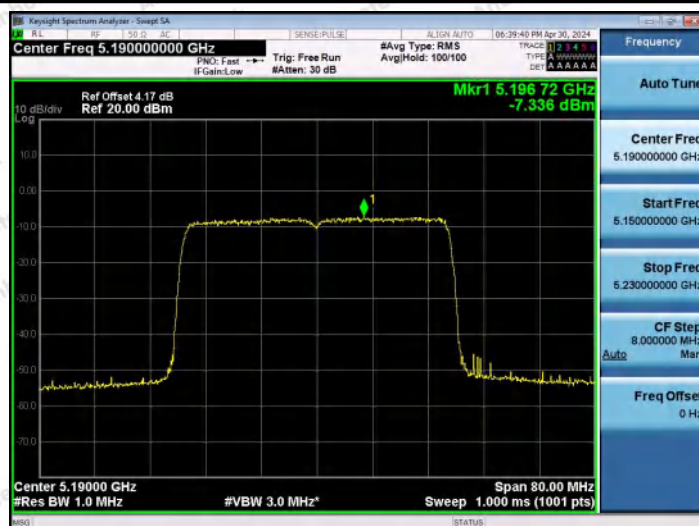

11AX40MIMO-Ant0-5190-PASS

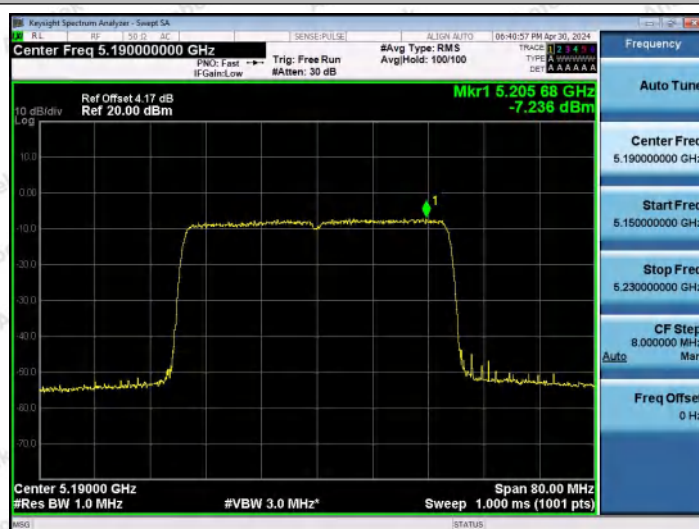

11AX40MIMO-Ant1-5190-PASS



11AX40MIMO-Ant0-5230-PASS


Shenzhen Anbotek Compliance Laboratory Limited

Address: 1/F., Building D, Sogood Science and Technology Park, Sanwei Community, Hangcheng Street, Bao'an District, Shenzhen, Guangdong, China.
Tel: (86) 0755-26066440 Fax: (86) 0755-26014772 Email: service@anbotek.com




Hotline
400-003-0500
www.anbotek.com.cn



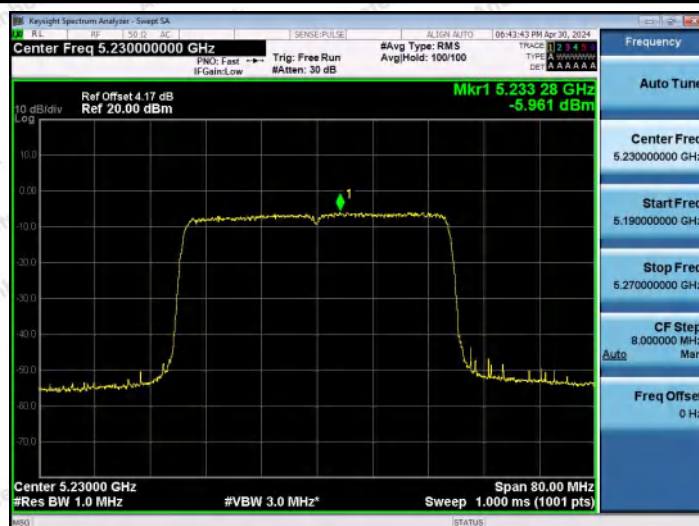

11AX40MIMO-Ant1-5230-PASS

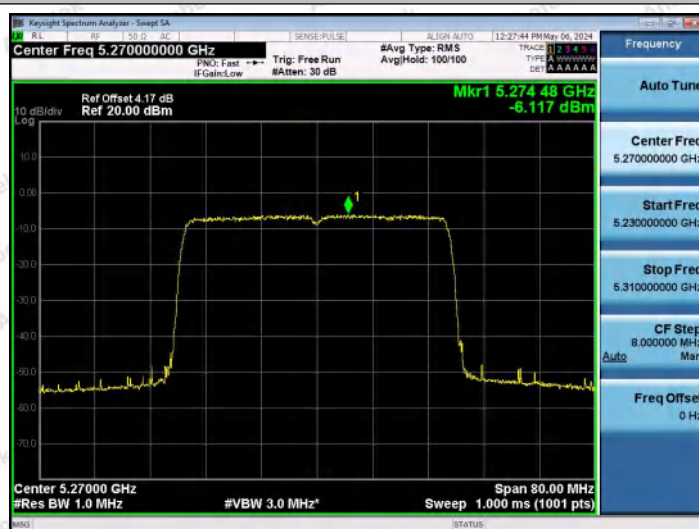

11AX40MIMO-Ant0-5270-PASS



11AX40MIMO-Ant1-5270-PASS

Shenzhen Anbotek Compliance Laboratory Limited

Address: 1/F., Building D, Sogood Science and Technology Park, Sanwei Community, Hangcheng Street, Bao'an District, Shenzhen, Guangdong, China.
 Tel: (86) 0755-26066440 Fax: (86) 0755-26014772 Email: service@anbotek.com



Hotline

400-003-0500

www.anbotek.com.cn





11AX40MIMO-Ant0-5310-PASS



11AX40MIMO-Ant1-5310-PASS



11AX40MIMO-Ant0-5510-PASS

Shenzhen Anbotek Compliance Laboratory Limited

Address: 1/F., Building D, Sogood Science and Technology Park, Sanwei Community, Hangcheng Street, Bao'an District, Shenzhen, Guangdong, China.
Tel: (86) 0755-26066440 Fax: (86) 0755-26014772 Email: service@anbotek.com



Hotline


400-003-0500

www.anbotek.com.cn





11AX40MIMO-Ant1-5510-PASS

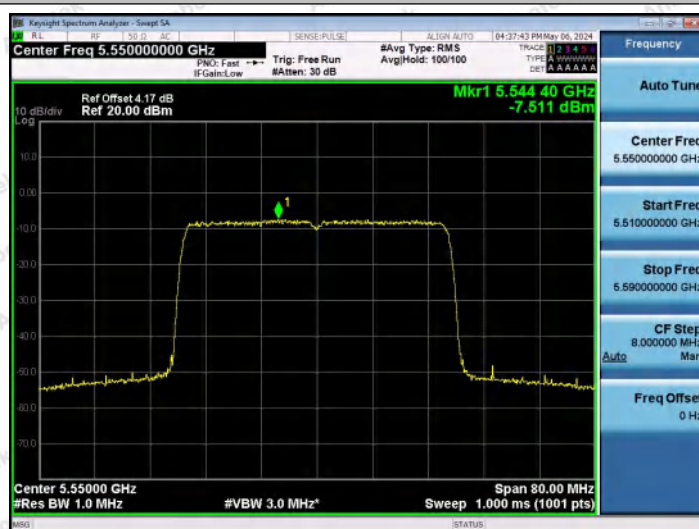

11AX40MIMO-Ant0-5550-PASS



11AX40MIMO-Ant1-5550-PASS

Shenzhen Anbotek Compliance Laboratory Limited

Address: 1/F., Building D, Sogood Science and Technology Park, Sanwei Community, Hangcheng Street, Bao'an District, Shenzhen, Guangdong, China.
 Tel: (86) 0755-26066440 Fax: (86) 0755-26014772 Email: service@anbotek.com



Hotline
 400-003-0500
www.anbotek.com.cn






11AX40MIMO-Ant0-5670-PASS



11AX40MIMO-Ant1-5670-PASS

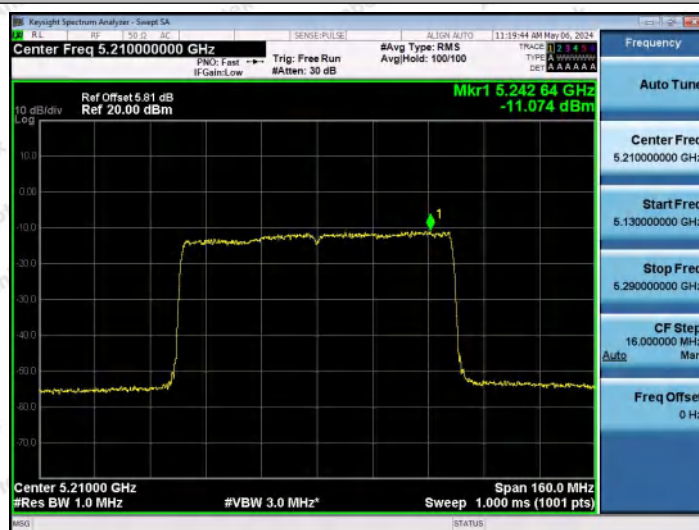

11AX80MIMO-Ant0-5210-PASS

Shenzhen Anbotek Compliance Laboratory Limited

Address: 1/F., Building D, Sogood Science and Technology Park, Sanwei Community, Hangcheng Street, Bao'an District, Shenzhen, Guangdong, China.
Tel: (86) 0755-26066440 Fax: (86) 0755-26014772 Email: service@anbotek.com



Hotline

400-003-0500

www.anbotek.com.cn






11AX80MIMO-Ant1-5210-PASS



11AX80MIMO-Ant0-5290-PASS

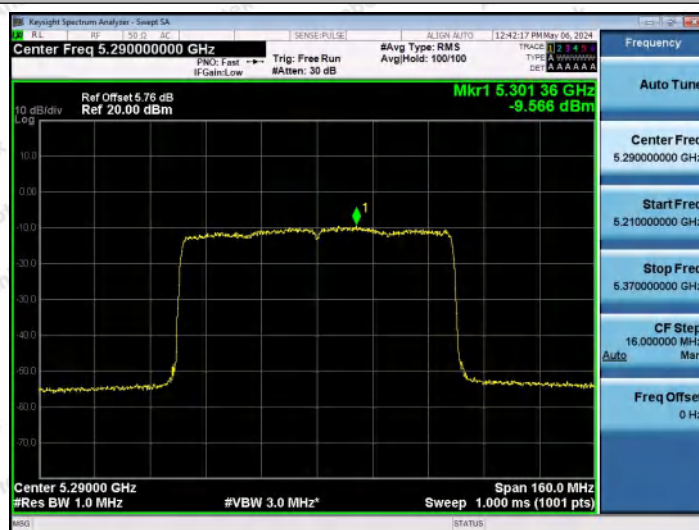

11AX80MIMO-Ant1-5290-PASS

Shenzhen Anbotek Compliance Laboratory Limited

Address: 1/F., Building D, Sogood Science and Technology Park, Sanwei Community, Hangcheng Street, Bao'an District, Shenzhen, Guangdong, China.
Tel: (86) 0755-26066440 Fax: (86) 0755-26014772 Email: service@anbotek.com



Hotline

400-003-0500

www.anbotek.com.cn





11AX80MIMO-Ant0-5530-PASS



11AX80MIMO-Ant1-5530-PASS



11AX80MIMO-Ant0-5610-PASS

Shenzhen Anbotek Compliance Laboratory Limited

Address: 1/F., Building D, Sogood Science and Technology Park, Sanwei Community, Hangcheng Street, Bao'an District, Shenzhen, Guangdong, China.
Tel: (86) 0755-26066440 Fax: (86) 0755-26014772 Email: service@anbotek.com



Hotline
400-003-0500
www.anbotek.com.cn





Test Graphs B4



Shenzhen Anbotek Compliance Laboratory Limited

Address: 1/F., Building D, Sogood Science and Technology Park, Sanwei Community, Hangcheng Street, Bao'an District, Shenzhen, Guangdong, China.
 Tel: (86) 0755-26066440 Fax: (86) 0755-26014772 Email: service@anbotek.com



Hotline

400-003-0500


www.anbotek.com.cn




11A-Ant1-5745-PASS



11A-Ant1-5785-PASS

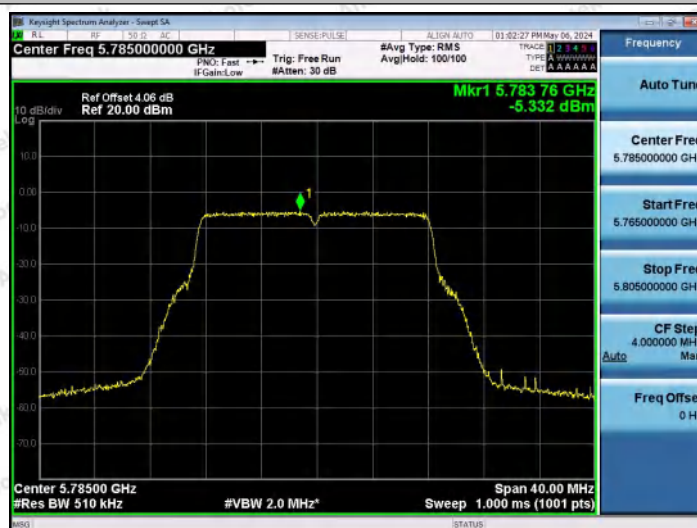

11A-Ant0-5785-PASS

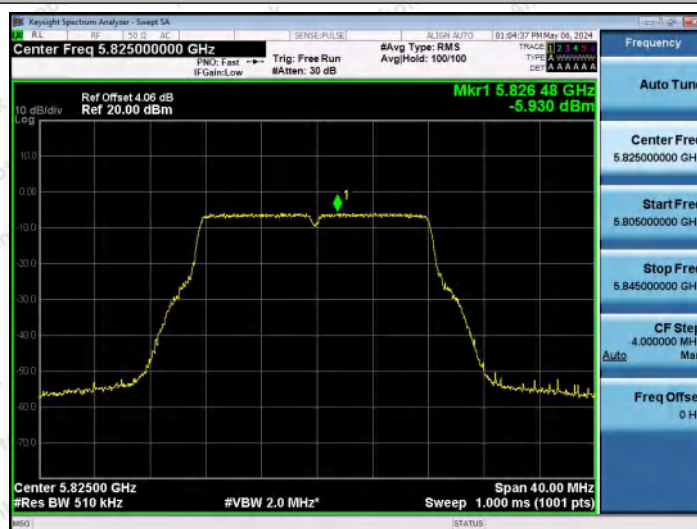

11A-Ant0-5825-PASS

Shenzhen Anbotek Compliance Laboratory Limited

Address: 1/F., Building D, Sogood Science and Technology Park, Sanwei Community, Hangcheng Street, Bao'an District, Shenzhen, Guangdong, China.
Tel: (86) 0755-26066440 Fax: (86) 0755-26014772 Email: service@anbotek.com



Hotline


400-003-0500

www.anbotek.com.cn






11A-Ant1-5825-PASS

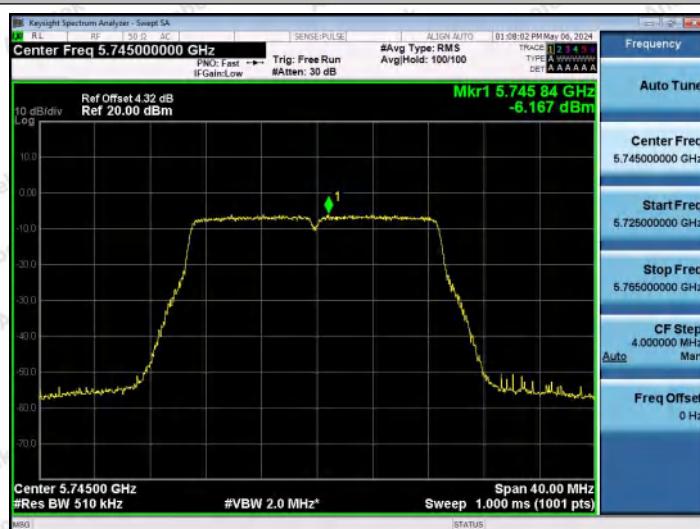

11N20MIMO-Ant0-5745-PASS

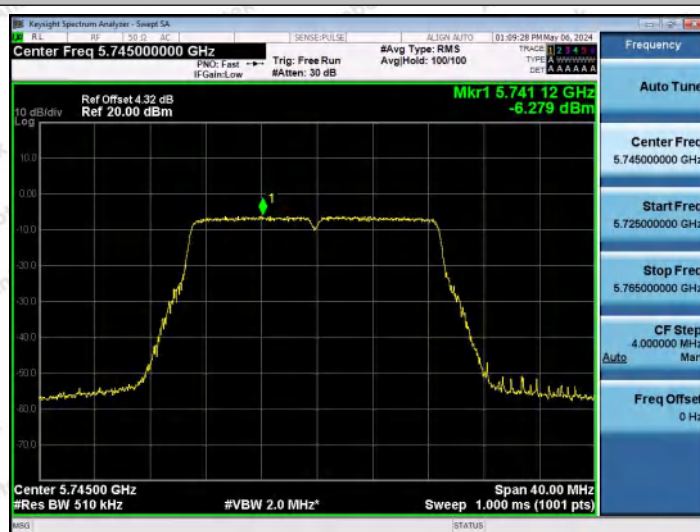

11N20MIMO-Ant1-5745-PASS


Shenzhen Anbotek Compliance Laboratory Limited

Address: 1/F., Building D, Sogood Science and Technology Park, Sanwei Community, Hangcheng Street, Bao'an District, Shenzhen, Guangdong, China.
 Tel: (86) 0755-26066440 Fax: (86) 0755-26014772 Email: service@anbotek.com




Hotline
 400-003-0500
www.anbotek.com.cn




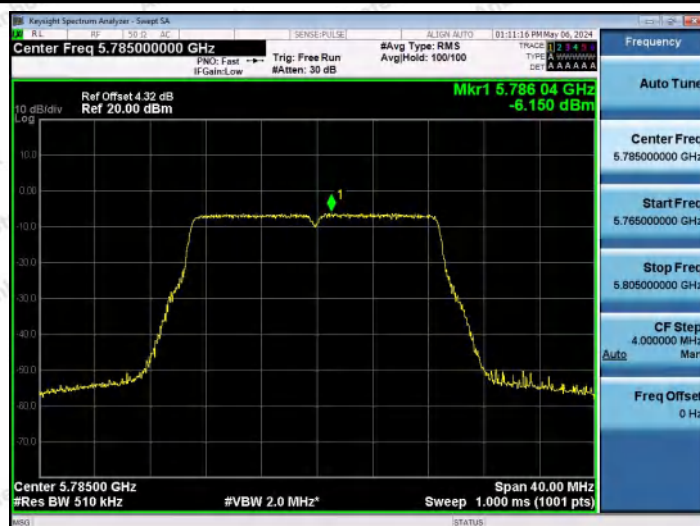

11N20MIMO-Ant0-5785-PASS

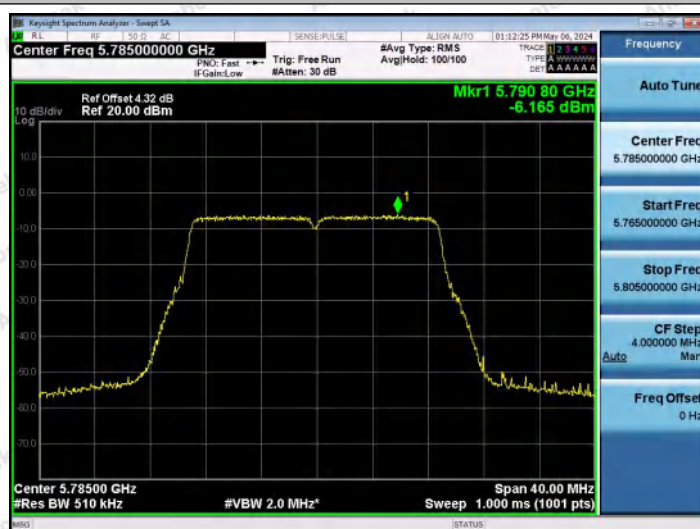

11N20MIMO-Ant1-5785-PASS

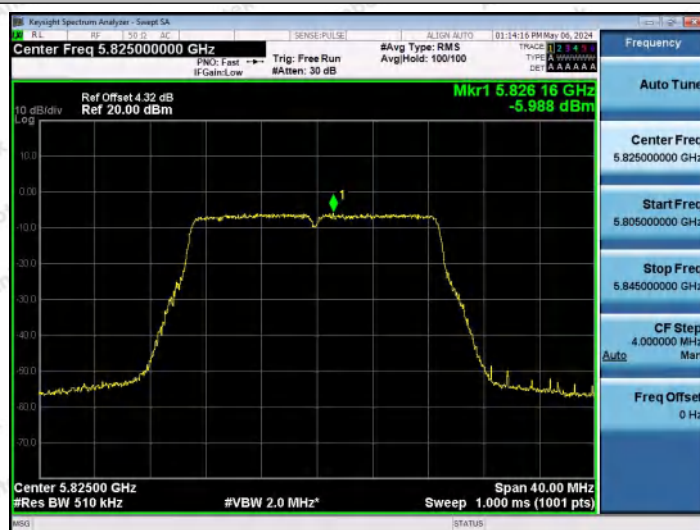

11N20MIMO-Ant0-5825-PASS

Shenzhen Anbotek Compliance Laboratory Limited

Address: 1/F., Building D, Sogood Science and Technology Park, Sanwei Community, Hangcheng Street, Bao'an District, Shenzhen, Guangdong, China.
Tel: (86) 0755-26066440 Fax: (86) 0755-26014772 Email: service@anbotek.com



Hotline


400-003-0500

www.anbotek.com.cn





11N20MIMO-Ant1-5825-PASS

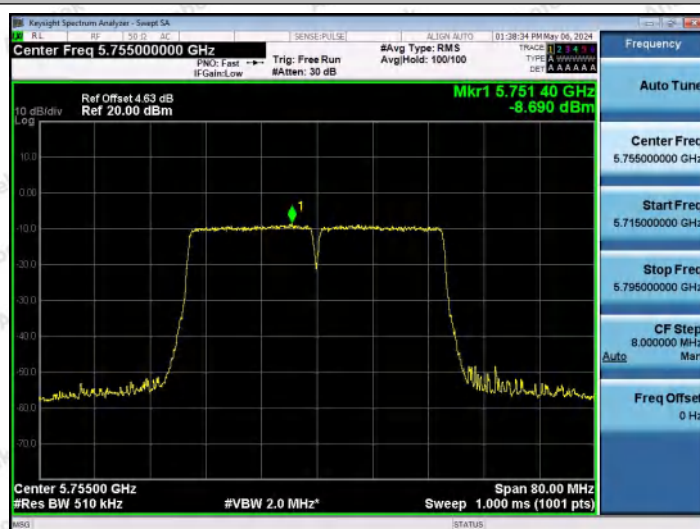

11N40MIMO-Ant0-5755-PASS



11N40MIMO-Ant1-5755-PASS

Shenzhen Anbotek Compliance Laboratory Limited

Address: 1/F., Building D, Sogood Science and Technology Park, Sanwei Community, Hangcheng Street, Bao'an District, Shenzhen, Guangdong, China.
 Tel: (86) 0755-26066440 Fax: (86) 0755-26014772 Email: service@anbotek.com




Hotline


400-003-0500

www.anbotek.com.cn




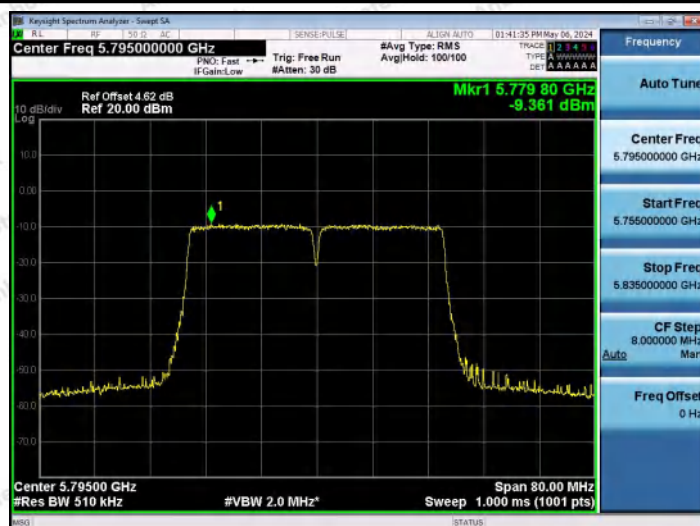

11N40MIMO-Ant0-5795-PASS

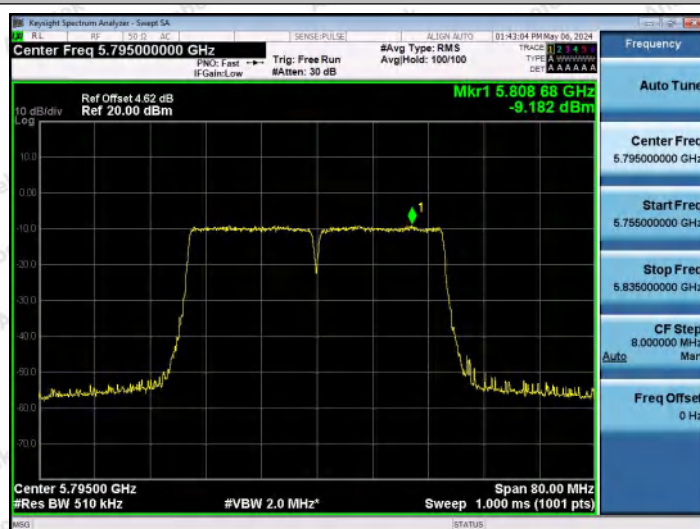

11N40MIMO-Ant1-5795-PASS

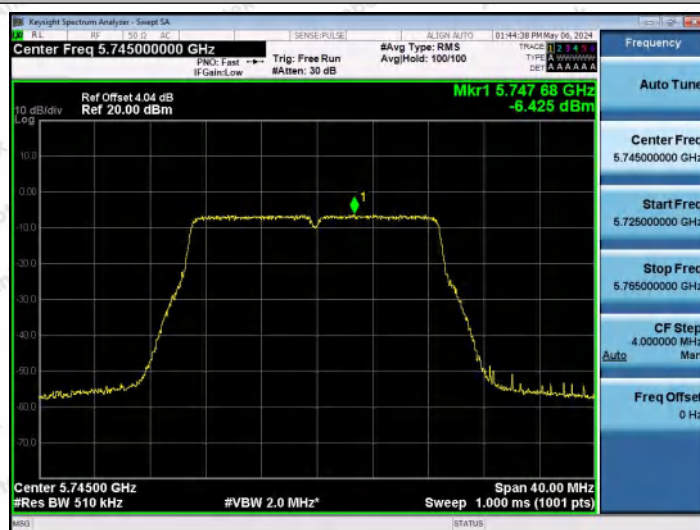

11AC20MIMO-Ant0-5745-PASS

Shenzhen Anbotek Compliance Laboratory Limited

Address: 1/F., Building D, Sogood Science and Technology Park, Sanwei Community, Hangcheng Street, Bao'an District, Shenzhen, Guangdong, China.
Tel: (86) 0755-26066440 Fax: (86) 0755-26014772 Email: service@anbotek.com




Hotline


400-003-0500

www.anbotek.com.cn




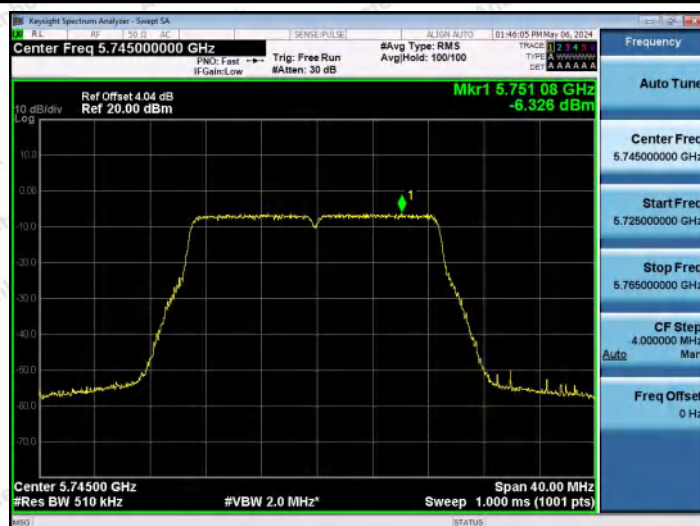

11AC20MIMO-Ant1-5745-PASS

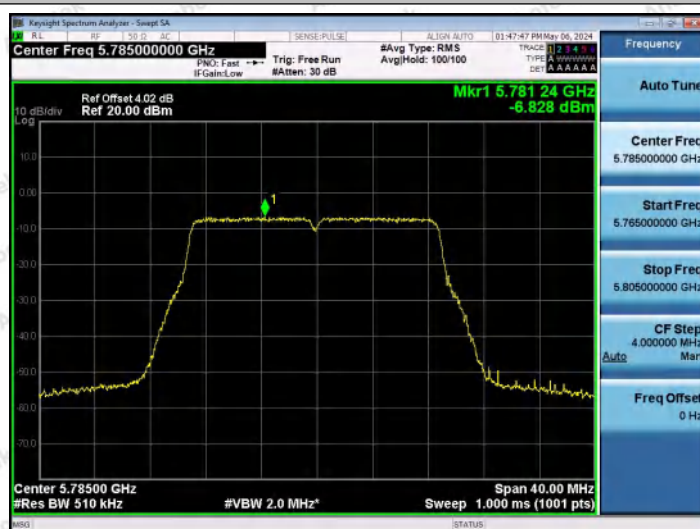

11AC20MIMO-Ant0-5785-PASS

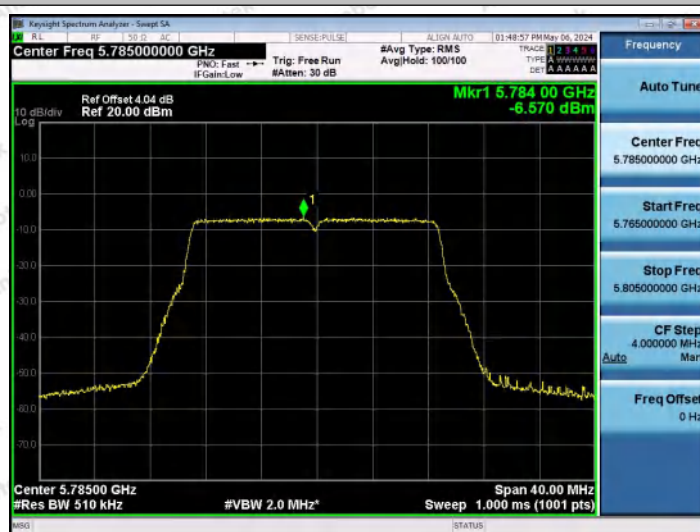

11AC20MIMO-Ant1-5785-PASS

Shenzhen Anbotek Compliance Laboratory Limited

Address: 1/F., Building D, Sogood Science and Technology Park, Sanwei Community, Hangcheng Street, Bao'an District, Shenzhen, Guangdong, China.
Tel: (86) 0755-26066440 Fax: (86) 0755-26014772 Email: service@anbotek.com



Hotline


400-003-0500

www.anbotek.com.cn






11AC20MIMO-Ant0-5825-PASS

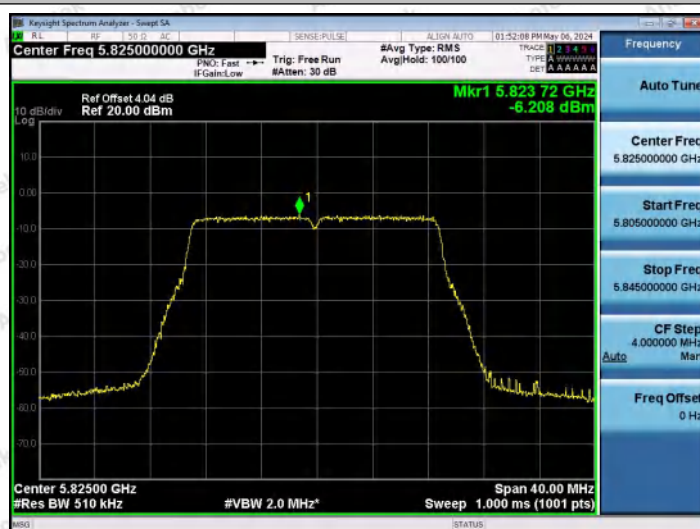

11AC20MIMO-Ant1-5825-PASS

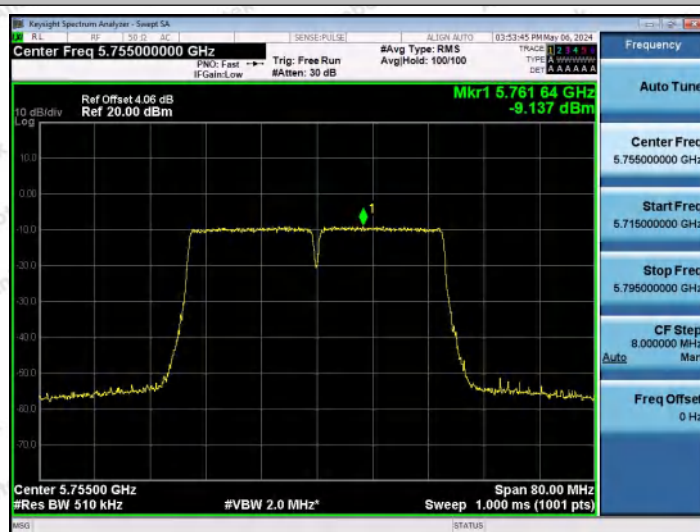

11AC40MIMO-Ant0-5755-PASS


Shenzhen Anbotek Compliance Laboratory Limited

Address: 1/F., Building D, Sogood Science and Technology Park, Sanwei Community, Hangcheng Street, Bao'an District, Shenzhen, Guangdong, China.
 Tel: (86) 0755-26066440 Fax: (86) 0755-26014772 Email: service@anbotek.com




Hotline
 400-003-0500
www.anbotek.com.cn




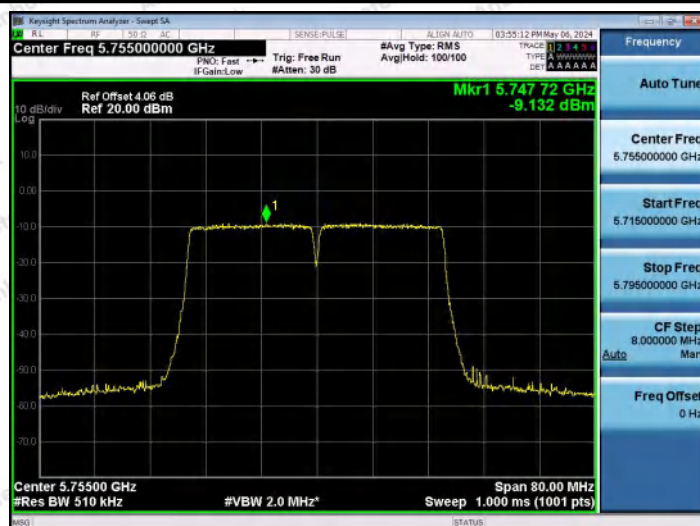

11AC40MIMO-Ant1-5755-PASS

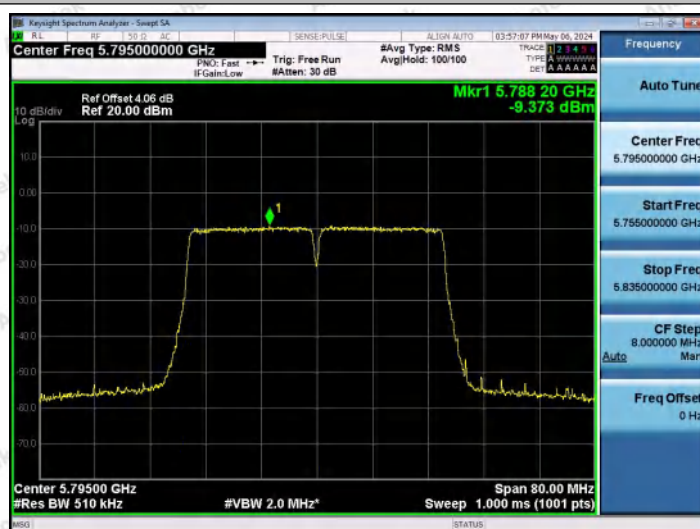

11AC40MIMO-Ant0-5795-PASS

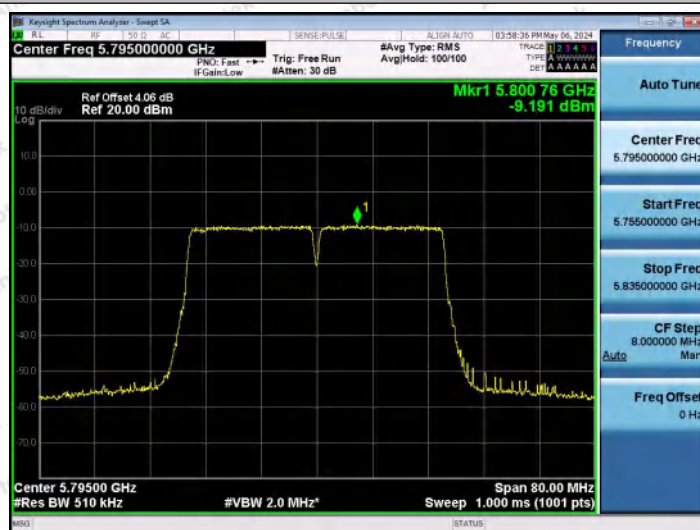

11AC40MIMO-Ant1-5795-PASS

Shenzhen Anbotek Compliance Laboratory Limited

Address: 1/F., Building D, Sogood Science and Technology Park, Sanwei Community, Hangcheng Street, Bao'an District, Shenzhen, Guangdong, China.
 Tel: (86) 0755-26066440 Fax: (86) 0755-26014772 Email: service@anbotek.com




Hotline


400-003-0500

www.anbotek.com.cn




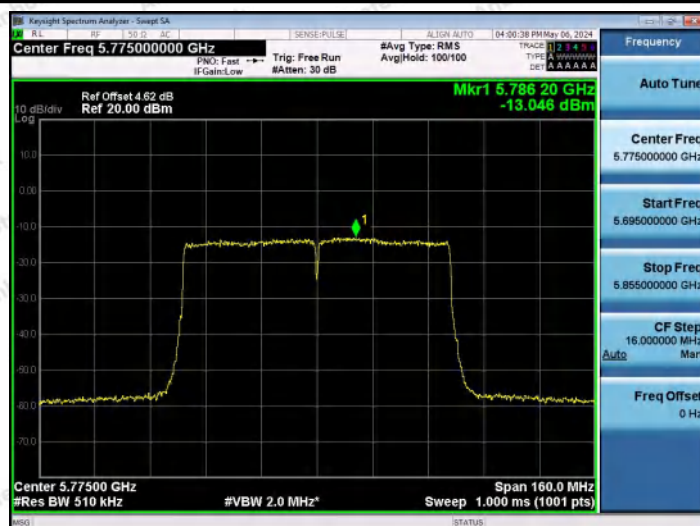

11AC80MIMO-Ant0-5775-PASS

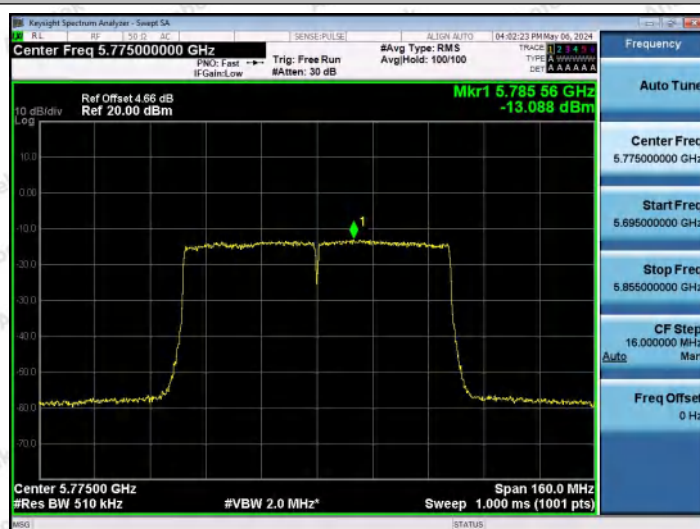

11AC80MIMO-Ant1-5775-PASS

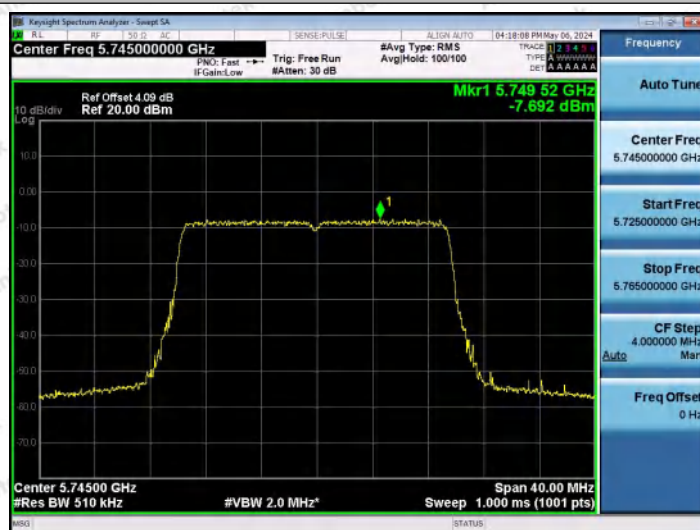

11AX20MIMO-Ant0-5745-PASS

Shenzhen Anbotek Compliance Laboratory Limited

Address: 1/F., Building D, Sogood Science and Technology Park, Sanwei Community, Hangcheng Street, Bao'an District, Shenzhen, Guangdong, China.
Tel: (86) 0755-26066440 Fax: (86) 0755-26014772 Email: service@anbotek.com




Hotline


400-003-0500

www.anbotek.com.cn




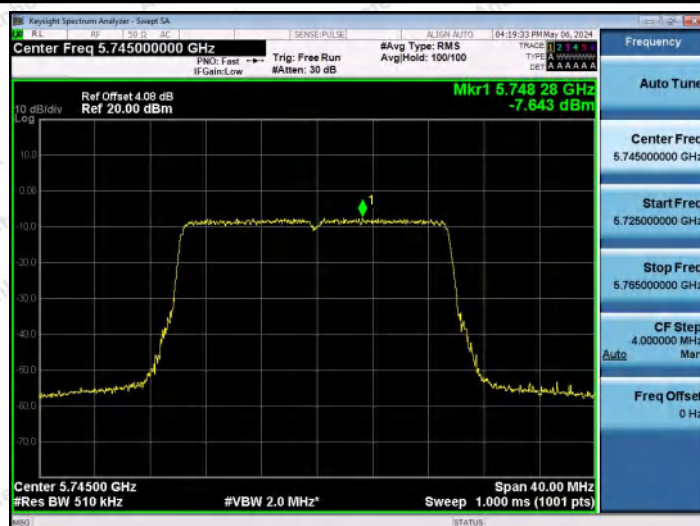

11AX20MIMO-Ant1-5745-PASS

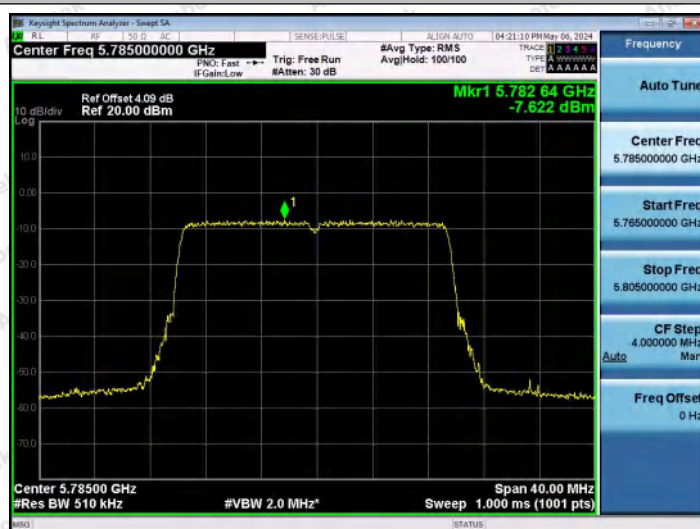

11AX20MIMO-Ant0-5785-PASS

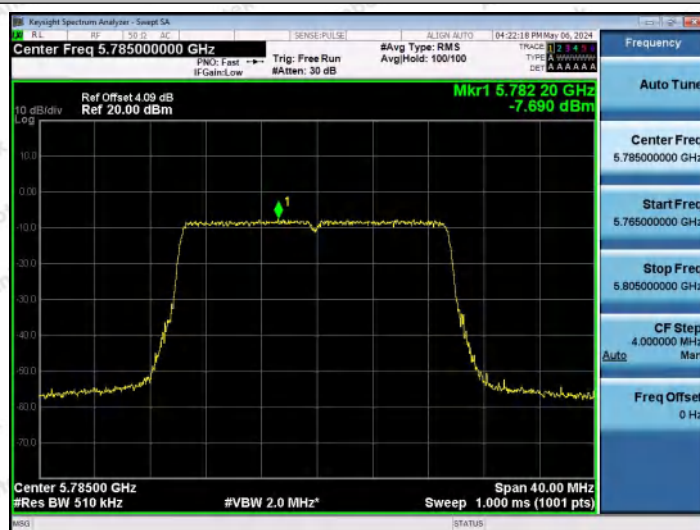

11AX20MIMO-Ant1-5785-PASS

Shenzhen Anbotek Compliance Laboratory Limited

Address: 1/F., Building D, Sogood Science and Technology Park, Sanwei Community, Hangcheng Street, Bao'an District, Shenzhen, Guangdong, China.
 Tel: (86) 0755-26066440 Fax: (86) 0755-26014772 Email: service@anbotek.com




Hotline
 400-003-0500
www.anbotek.com.cn






11AX20MIMO-Ant0-5825-PASS

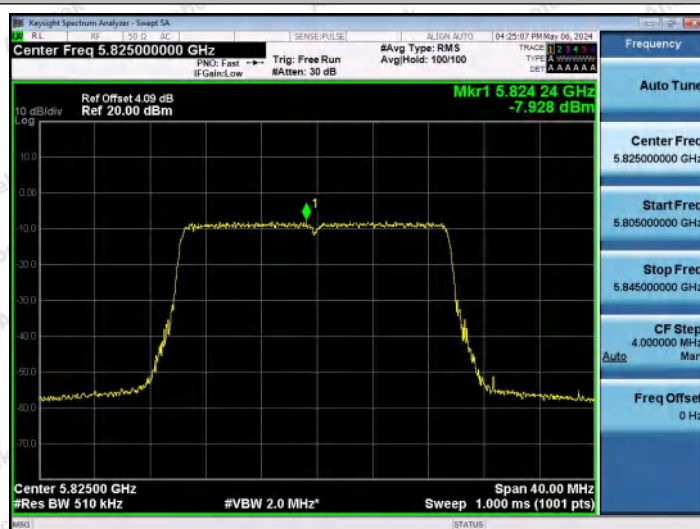

11AX20MIMO-Ant1-5825-PASS

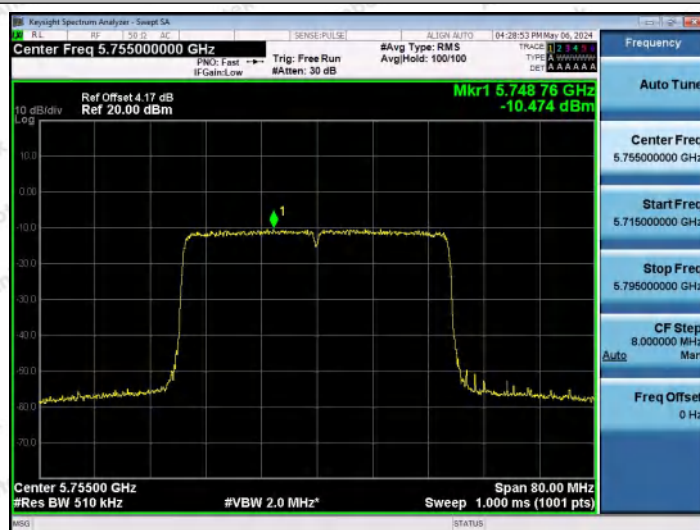

11AX40MIMO-Ant0-5755-PASS

Shenzhen Anbotek Compliance Laboratory Limited

Address: 1/F., Building D, Sogood Science and Technology Park, Sanwei Community, Hangcheng Street, Bao'an District, Shenzhen, Guangdong, China.
 Tel: (86) 0755-26066440 Fax: (86) 0755-26014772 Email: service@anbotek.com



Hotline

400-003-0500

www.anbotek.com.cn






11AX40MIMO-Ant1-5755-PASS



11AX40MIMO-Ant0-5795-PASS

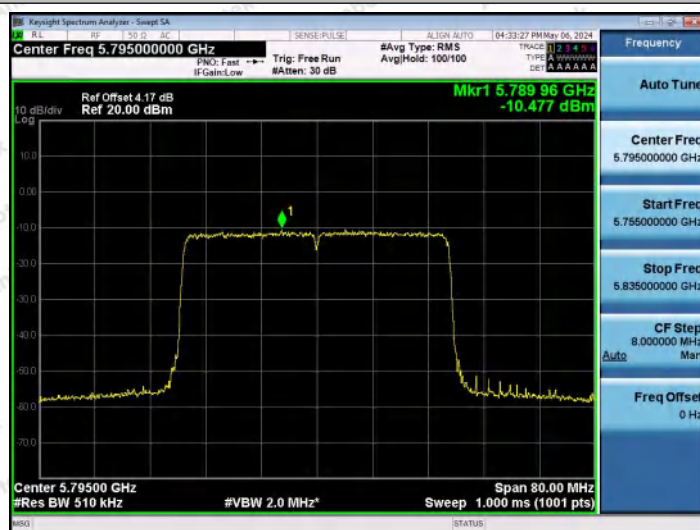

11AX40MIMO-Ant1-5795-PASS

Shenzhen Anbotek Compliance Laboratory Limited

Address: 1/F., Building D, Sogood Science and Technology Park, Sanwei Community, Hangcheng Street, Bao'an District, Shenzhen, Guangdong, China.
 Tel: (86) 0755-26066440 Fax: (86) 0755-26014772 Email: service@anbotek.com



Hotline

400-003-0500

www.anbotek.com.cn





11AX80MIMO-Ant0-5775-PASS



11AX80MIMO-Ant1-5775-PASS



Appendix E: Band edge measurements

Test Result B1/2/3

TestMode	Antenna	ChName	Frequency[MHz]	Result[dBm]	Limit[dBm]	Verdict
11A	Ant0	Low	5180	-40.95	≤-27	PASS
11A	Ant1	Low	5180	-45.09	≤-27	PASS
11A	Ant0	High	5240	-44.67	≤-27	PASS
11A	Ant1	High	5240	-45.9	≤-27	PASS
11A	Ant0	Low	5260	-44.85	≤-27	PASS
11A	Ant1	Low	5260	-45.39	≤-27	PASS
11A	Ant0	High	5320	-34.81	≤-27	PASS
11A	Ant1	High	5320	-34.83	≤-27	PASS
11A	Ant0	Low	5500	-38.18	≤-27	PASS
11A	Ant1	Low	5500	-37.85	≤-27	PASS
11A	Ant0	High	5700	-40.64	≤-27	PASS
11A	Ant1	High	5700	-39.34	≤-27	PASS
11N20MIMO	Ant0	Low	5180	-39.67	≤-27	PASS
11N20MIMO	Ant1	Low	5180	-37.48	≤-27	PASS
11N20MIMO	Ant0	High	5240	-45.5	≤-27	PASS
11N20MIMO	Ant1	High	5240	-45.64	≤-27	PASS
11N20MIMO	Ant0	Low	5260	-45.29	≤-27	PASS
11N20MIMO	Ant1	Low	5260	-44.34	≤-27	PASS
11N20MIMO	Ant0	High	5320	-41.21	≤-27	PASS
11N20MIMO	Ant1	High	5320	-41.17	≤-27	PASS
11N20MIMO	Ant0	Low	5500	-38.46	≤-27	PASS
11N20MIMO	Ant1	Low	5500	-38.5	≤-27	PASS
11N20MIMO	Ant0	High	5700	-37.35	≤-27	PASS
11N20MIMO	Ant1	High	5700	-37.95	≤-27	PASS
11N40MIMO	Ant0	Low	5190	-37.2	≤-27	PASS
11N40MIMO	Ant1	Low	5190	-37.83	≤-27	PASS
11N40MIMO	Ant0	High	5230	-45.57	≤-27	PASS
11N40MIMO	Ant1	High	5230	-45.11	≤-27	PASS
11N40MIMO	Ant0	Low	5270	-45.13	≤-27	PASS
11N40MIMO	Ant1	Low	5270	-45.19	≤-27	PASS
11N40MIMO	Ant0	High	5310	-37.09	≤-27	PASS
11N40MIMO	Ant1	High	5310	-37.03	≤-27	PASS
11N40MIMO	Ant0	Low	5510	-36.83	≤-27	PASS
11N40MIMO	Ant1	Low	5510	-35.64	≤-27	PASS
11N40MIMO	Ant0	High	5670	-35.19	≤-27	PASS
11N40MIMO	Ant1	High	5670	-36.48	≤-27	PASS
11AC20MIMO	Ant0	Low	5180	-39.68	≤-27	PASS

Shenzhen Anbotek Compliance Laboratory Limited

Address: 1/F., Building D, Sogood Science and Technology Park, Sanwei Community, Hangcheng Street, Bao'an District, Shenzhen, Guangdong, China.
Tel: (86) 0755-26066440 Fax: (86) 0755-26014772 Email: service@anbotek.com



Hotline
400-003-0500
www.anbotek.com.cn



11AC20MIMO	Ant1	Low	5180	-39.42	≤-27	PASS
11AC20MIMO	Ant0	High	5240	-45.15	≤-27	PASS
11AC20MIMO	Ant1	High	5240	-45.37	≤-27	PASS
11AC20MIMO	Ant0	Low	5260	-45.05	≤-27	PASS
11AC20MIMO	Ant1	Low	5260	-45.03	≤-27	PASS
11AC20MIMO	Ant0	High	5320	-41.86	≤-27	PASS
11AC20MIMO	Ant1	High	5320	-40.7	≤-27	PASS
11AC20MIMO	Ant0	Low	5500	-38.61	≤-27	PASS
11AC20MIMO	Ant1	Low	5500	-40.19	≤-27	PASS
11AC20MIMO	Ant0	High	5700	-38.09	≤-27	PASS
11AC20MIMO	Ant1	High	5700	-38.02	≤-27	PASS
11AC40MIMO	Ant0	Low	5190	-36.37	≤-27	PASS
11AC40MIMO	Ant1	Low	5190	-36.93	≤-27	PASS
11AC40MIMO	Ant0	High	5230	-45.17	≤-27	PASS
11AC40MIMO	Ant1	High	5230	-44.98	≤-27	PASS
11AC40MIMO	Ant0	Low	5270	-45.81	≤-27	PASS
11AC40MIMO	Ant1	Low	5270	-45.13	≤-27	PASS
11AC40MIMO	Ant0	High	5310	-37.67	≤-27	PASS
11AC40MIMO	Ant1	High	5310	-41.32	≤-27	PASS
11AC40MIMO	Ant0	Low	5510	-35.11	≤-27	PASS
11AC40MIMO	Ant1	Low	5510	-35.48	≤-27	PASS
11AC40MIMO	Ant0	High	5670	-37.21	≤-27	PASS
11AC40MIMO	Ant1	High	5670	-36.81	≤-27	PASS
11AC80MIMO	Ant0	Low	5210	-44.41	≤-27	PASS
11AC80MIMO	Ant0	High	5210	-45.07	≤-27	PASS
11AC80MIMO	Ant1	Low	5210	-45.42	≤-27	PASS
11AC80MIMO	Ant1	High	5210	-45.61	≤-27	PASS
11AC80MIMO	Ant0	Low	5290	-45.45	≤-27	PASS
11AC80MIMO	Ant0	High	5290	-39.94	≤-27	PASS
11AC80MIMO	Ant1	Low	5290	-44.74	≤-27	PASS
11AC80MIMO	Ant1	High	5290	-40.34	≤-27	PASS
11AC80MIMO	Ant0	Low	5530	-42.5	≤-27	PASS
11AC80MIMO	Ant1	Low	5530	-42.3	≤-27	PASS
11AC80MIMO	Ant0	High	5610	-45.45	≤-27	PASS
11AC80MIMO	Ant1	High	5610	-44.1	≤-27	PASS
11AX20MIMO	Ant0	Low	5180	-44.19	≤-27	PASS
11AX20MIMO	Ant1	Low	5180	-41.6	≤-27	PASS
11AX20MIMO	Ant0	High	5240	-45.1	≤-27	PASS
11AX20MIMO	Ant1	High	5240	-45.21	≤-27	PASS
11AX20MIMO	Ant0	Low	5260	-44.12	≤-27	PASS
11AX20MIMO	Ant1	Low	5260	-45.62	≤-27	PASS
11AX20MIMO	Ant0	High	5320	-38.41	≤-27	PASS

Shenzhen Anbotek Compliance Laboratory Limited

Address: 1/F., Building D, Sogood Science and Technology Park, Sanwei Community,
 Hangcheng Street, Bao'an District, Shenzhen, Guangdong, China.
 Tel: (86) 0755-26066440 Fax: (86) 0755-26014772 Email: service@anbotek.com



Hotline

400-003-0500

www.anbotek.com.cn



11AX20MIMO	Ant1	High	5320	-38.96	≤-27	PASS
11AX20MIMO	Ant0	Low	5500	-38.11	≤-27	PASS
11AX20MIMO	Ant1	Low	5500	-38.73	≤-27	PASS
11AX20MIMO	Ant1	High	5700	-37.04	≤-27	PASS
11AX20MIMO	Ant0	High	5700	-37.4	≤-27	PASS
11AX40MIMO	Ant0	Low	5190	-40.06	≤-27	PASS
11AX40MIMO	Ant1	Low	5190	-38.84	≤-27	PASS
11AX40MIMO	Ant0	High	5230	-44.92	≤-27	PASS
11AX40MIMO	Ant1	High	5230	-45.71	≤-27	PASS
11AX40MIMO	Ant0	Low	5270	-45.14	≤-27	PASS
11AX40MIMO	Ant1	Low	5270	-45.06	≤-27	PASS
11AX40MIMO	Ant0	High	5310	-37.88	≤-27	PASS
11AX40MIMO	Ant1	High	5310	-38.43	≤-27	PASS
11AX40MIMO	Ant0	Low	5510	-36.74	≤-27	PASS
11AX40MIMO	Ant1	Low	5510	-36.44	≤-27	PASS
11AX40MIMO	Ant0	High	5670	-36.45	≤-27	PASS
11AX40MIMO	Ant1	High	5670	-37.82	≤-27	PASS
11AX80MIMO	Ant0	Low	5210	-45.72	≤-27	PASS
11AX80MIMO	Ant0	High	5210	-45.93	≤-27	PASS
11AX80MIMO	Ant1	Low	5210	-45.12	≤-27	PASS
11AX80MIMO	Ant1	High	5210	-45.98	≤-27	PASS
11AX80MIMO	Ant0	Low	5290	-45.05	≤-27	PASS
11AX80MIMO	Ant0	High	5290	-43.11	≤-27	PASS
11AX80MIMO	Ant1	Low	5290	-45.28	≤-27	PASS
11AX80MIMO	Ant1	High	5290	-44.4	≤-27	PASS
11AX80MIMO	Ant0	Low	5530	-45.47	≤-27	PASS
11AX80MIMO	Ant1	Low	5530	-45.32	≤-27	PASS
11AX80MIMO	Ant0	High	5610	-37.79	≤-27	PASS
11AX80MIMO	Ant1	High	5610	-39.47	≤-27	PASS

Note: The margin is at least greater than the antenna gain plus the cable loss plus 3.01.

Shenzhen Anbotek Compliance Laboratory Limited

Address: 1/F., Building D, Sogood Science and Technology Park, Sanwei Community, Hangcheng Street, Bao'an District, Shenzhen, Guangdong, China.
Tel: (86) 0755-26066440 Fax: (86) 0755-26014772 Email: service@anbotek.com



Hotline
400-003-0500
www.anbotek.com.cn



Test Result B4

TestMode	Antenna	ChName	Frequency[MHz]	FreqRange [MHz]	Result [dBm]	Limit [dBm]	Verdict
11A	Ant0	Low	5745	5720~5725	-34.93	≤19.75	PASS
11A	Ant0	Low	5745	5700~5720	-38.72	≤11.63	PASS
11A	Ant0	Low	5745	5650~5700	-45.94	≤-25.93	PASS
11A	Ant0	Low	5745	5645~5650	-46.61	≤-27	PASS
11A	Ant1	Low	5745	5720~5725	-34.64	≤21.32	PASS
11A	Ant1	Low	5745	5700~5720	-36.85	≤13.86	PASS
11A	Ant1	Low	5745	5650~5700	-46.85	≤-26.53	PASS
11A	Ant1	Low	5745	5645~5650	-45.26	≤-27	PASS
11A	Ant0	High	5825	5850~5855	-33.96	≤18.50	PASS
11A	Ant0	High	5825	5855~5875	-36.34	≤14.63	PASS
11A	Ant0	High	5825	5875~5925	-46.82	≤-26.41	PASS
11A	Ant0	High	5825	5925~5935	-46.18	≤-27	PASS
11A	Ant1	High	5825	5850~5855	-34.99	≤16.34	PASS
11A	Ant1	High	5825	5855~5875	-36.4	≤13.80	PASS
11A	Ant1	High	5825	5875~5925	-46.16	≤-26.41	PASS
11A	Ant1	High	5825	5925~5935	-46.59	≤-27	PASS
11N20MI MO	Ant0	Low	5745	5720~5725	-34.53	≤18.44	PASS
11N20MI MO	Ant0	Low	5745	5700~5720	-40.87	≤10.35	PASS
11N20MI MO	Ant0	Low	5745	5650~5700	-45.98	≤-26.70	PASS
11N20MI MO	Ant0	Low	5745	5645~5650	-46.89	≤-27	PASS
11N20MI MO	Ant1	Low	5745	5720~5725	-35.8	≤16.60	PASS
11N20MI MO	Ant1	Low	5745	5700~5720	-36.28	≤14.44	PASS
11N20MI MO	Ant1	Low	5745	5650~5700	-47.65	≤-26.87	PASS
11N20MI MO	Ant1	Low	5745	5645~5650	-45.96	≤-27	PASS
11N20MI MO	Ant0	High	5825	5850~5855	-35.59	≤16.03	PASS
11N20MI MO	Ant0	High	5825	5855~5875	-37.4	≤12.74	PASS
11N20MI MO	Ant0	High	5825	5875~5925	-46.51	≤-26.71	PASS
11N20MI	Ant0	High	5825	5925~5935	-45.69	≤-27	PASS

Shenzhen Anbotek Compliance Laboratory Limited

Address: 1/F., Building D, Sogood Science and Technology Park, Sanwei Community,
 Hangcheng Street, Bao'an District, Shenzhen, Guangdong, China.
 Tel: (86) 0755-26066440 Fax: (86) 0755-26014772 Email: service@anbotek.com



Hotline

400-003-0500

www.anbotek.com.cn



MO							
11N20MI MO	Ant1	High	5825	5850~5855	-34.78	≤19.42	PASS
11N20MI MO	Ant1	High	5825	5855~5875	-36.75	≤13.80	PASS
11N20MI MO	Ant1	High	5825	5875~5925	-47.57	≤-26.81	PASS
11N20MI MO	Ant1	High	5825	5925~5935	-44.74	≤-27	PASS
11N40MI MO	Ant0	Low	5755	5720~5725	-32.29	≤17.28	PASS
11N40MI MO	Ant0	Low	5755	5700~5720	-33.35	≤15.09	PASS
11N40MI MO	Ant0	Low	5755	5650~5700	-45.95	≤-26.20	PASS
11N40MI MO	Ant0	Low	5755	5645~5650	-46.37	≤-27	PASS
11N40MI MO	Ant1	Low	5755	5720~5725	-34.02	≤15.74	PASS
11N40MI MO	Ant1	Low	5755	5700~5720	-33.56	≤14.97	PASS
11N40MI MO	Ant1	Low	5755	5650~5700	-46.19	≤-26.10	PASS
11N40MI MO	Ant1	Low	5755	5645~5650	-46.25	≤-27	PASS
11N40MI MO	Ant0	High	5795	5850~5855	-38.65	≤16.03	PASS
11N40MI MO	Ant0	High	5795	5855~5875	-42.45	≤10.11	PASS
11N40MI MO	Ant0	High	5795	5875~5925	-47.43	≤-26.95	PASS
11N40MI MO	Ant0	High	5795	5925~5935	-46.46	≤-27	PASS
11N40MI MO	Ant1	High	5795	5850~5855	-37.31	≤17.91	PASS
11N40MI MO	Ant1	High	5795	5855~5875	-40.45	≤12.93	PASS
11N40MI MO	Ant1	High	5795	5875~5925	-47.48	≤-26.83	PASS
11N40MI MO	Ant1	High	5795	5925~5935	-45.83	≤-27	PASS
11AC20M IMO	Ant0	Low	5745	5720~5725	-35.17	≤16.08	PASS

Shenzhen Anbotek Compliance Laboratory Limited

Address: 1/F., Building D, Sogood Science and Technology Park, Sanwei Community,
 Hangcheng Street, Bao'an District, Shenzhen, Guangdong, China.
 Tel: (86) 0755-26066440 Fax: (86) 0755-26014772 Email: service@anbotek.com



Hotline

400-003-0500

www.anbotek.com.cn



11AC20M IMO	Ant0	Low	5745	5700~5720	-36.56	≤15.05	PASS
11AC20M IMO	Ant0	Low	5745	5650~5700	-44.73	≤-25.93	PASS
11AC20M IMO	Ant0	Low	5745	5645~5650	-45.75	≤-27	PASS
11AC20M IMO	Ant1	Low	5745	5720~5725	-36.24	≤16.60	PASS
11AC20M IMO	Ant1	Low	5745	5700~5720	-36.74	≤13.89	PASS
11AC20M IMO	Ant1	Low	5745	5650~5700	-46.39	≤-26.96	PASS
11AC20M IMO	Ant1	Low	5745	5645~5650	-45.32	≤-27	PASS
11AC20M IMO	Ant0	High	5825	5850~5855	-33.67	≤18.50	PASS
11AC20M IMO	Ant0	High	5825	5855~5875	-36.47	≤14.44	PASS
11AC20M IMO	Ant0	High	5825	5875~5925	-47.43	≤-26.81	PASS
11AC20M IMO	Ant0	High	5825	5925~5935	-45.99	≤-27	PASS
11AC20M IMO	Ant1	High	5825	5850~5855	-36.07	≤19.42	PASS
11AC20M IMO	Ant1	High	5825	5855~5875	-39.97	≤10.89	PASS
11AC20M IMO	Ant1	High	5825	5875~5925	-47.1	≤-26.91	PASS
11AC20M IMO	Ant1	High	5825	5925~5935	-46.38	≤-27	PASS
11AC40M IMO	Ant0	Low	5755	5720~5725	-35.16	≤16.04	PASS
11AC40M IMO	Ant0	Low	5755	5700~5720	-37.76	≤10.78	PASS
11AC40M IMO	Ant0	Low	5755	5650~5700	-46.36	≤-25.90	PASS
11AC40M IMO	Ant0	Low	5755	5645~5650	-46.18	≤-27	PASS
11AC40M IMO	Ant1	Low	5755	5720~5725	-32.69	≤18.81	PASS
11AC40M IMO	Ant1	Low	5755	5700~5720	-33.71	≤15.09	PASS
11AC40M	Ant1	Low	5755	5650~5700	-46.73	≤-26.80	PASS

Shenzhen Anbotek Compliance Laboratory Limited

Address: 1/F., Building D, Sogood Science and Technology Park, Sanwei Community,
 Hangcheng Street, Bao'an District, Shenzhen, Guangdong, China.
 Tel: (86) 0755-26066440 Fax: (86) 0755-26014772 Email: service@anbotek.com



Hotline

400-003-0500

www.anbotek.com.cn



IMO							
11AC40M IMO	Ant1	Low	5755	5645~5650	-46.74	≤ -27	PASS
11AC40M IMO	Ant0	High	5795	5850~5855	-40.44	≤ 16.03	PASS
11AC40M IMO	Ant0	High	5795	5855~5875	-39.66	≤ 13.99	PASS
11AC40M IMO	Ant0	High	5795	5875~5925	-47.73	≤ -26.83	PASS
11AC40M IMO	Ant0	High	5795	5925~5935	-45.73	≤ -27	PASS
11AC40M IMO	Ant1	High	5795	5850~5855	-38.27	≤ 19.04	PASS
11AC40M IMO	Ant1	High	5795	5855~5875	-37.58	≤ 15.28	PASS
11AC40M IMO	Ant1	High	5795	5875~5925	-46.56	≤ -26.83	PASS
11AC40M IMO	Ant1	High	5795	5925~5935	-46.71	≤ -27	PASS
11AC80M IMO	Ant0	Low	5775	5720~5725	-46.38	≤ 15.65	PASS
11AC80M IMO	Ant0	Low	5775	5700~5720	-45.26	≤ 10.14	PASS
11AC80M IMO	Ant0	Low	5775	5650~5700	-46.83	≤ -26.91	PASS
11AC80M IMO	Ant0	Low	5775	5645~5650	-47.12	≤ -27	PASS
11AC80M IMO	Ant0	High	5775	5850~5855	-46.29	≤ 15.84	PASS
11AC80M IMO	Ant0	High	5775	5855~5875	-46.4	≤ 10.04	PASS
11AC80M IMO	Ant0	High	5775	5875~5925	-47.59	≤ -26.87	PASS
11AC80M IMO	Ant0	High	5775	5925~5935	-46.49	≤ -27	PASS
11AC80M IMO	Ant1	Low	5775	5720~5725	-45.16	≤ 16.35	PASS
11AC80M IMO	Ant1	Low	5775	5700~5720	-44.46	≤ 10.44	PASS
11AC80M IMO	Ant1	Low	5775	5650~5700	-46.44	≤ -25.88	PASS
11AC80M IMO	Ant1	Low	5775	5645~5650	-46.71	≤ -27	PASS

Shenzhen Anbotek Compliance Laboratory Limited

Address: 1/F., Building D, Sogood Science and Technology Park, Sanwei Community,
 Hangcheng Street, Bao'an District, Shenzhen, Guangdong, China.
 Tel: (86) 0755-26066440 Fax: (86) 0755-26014772 Email: service@anbotek.com



Hotline

400-003-0500

www.anbotek.com.cn



11AC80M IMO	Ant1	High	5775	5850~5855	-46.45	≤15.84	PASS
11AC80M IMO	Ant1	High	5775	5855~5875	-46.84	≤10.04	PASS
11AC80M IMO	Ant1	High	5775	5875~5925	-46.31	≤-26.73	PASS
11AC80M IMO	Ant1	High	5775	5925~5935	-46.14	≤-27	PASS
11AX20M IMO	Ant0	Low	5745	5720~5725	-41.2	≤16.60	PASS
11AX20M IMO	Ant0	Low	5745	5700~5720	-41.89	≤12.47	PASS
11AX20M IMO	Ant0	Low	5745	5650~5700	-46.44	≤-26.62	PASS
11AX20M IMO	Ant0	Low	5745	5645~5650	-46.32	≤-27	PASS
11AX20M IMO	Ant1	Low	5745	5720~5725	-36.93	≤17.91	PASS
11AX20M IMO	Ant1	Low	5745	5700~5720	-42.78	≤10.15	PASS
11AX20M IMO	Ant1	Low	5745	5650~5700	-47.51	≤-26.79	PASS
11AX20M IMO	Ant1	Low	5745	5645~5650	-46.25	≤-27	PASS
11AX20M IMO	Ant0	High	5825	5850~5855	-44.21	≤16.34	PASS
11AX20M IMO	Ant0	High	5825	5855~5875	-40.51	≤13.84	PASS
11AX20M IMO	Ant0	High	5825	5875~5925	-46.78	≤-26.91	PASS
11AX20M IMO	Ant0	High	5825	5925~5935	-46.59	≤-27	PASS
11AX20M IMO	Ant1	High	5825	5850~5855	-35.1	≤26.50	PASS
11AX20M IMO	Ant1	High	5825	5855~5875	-41.08	≤14.78	PASS
11AX20M IMO	Ant1	High	5825	5875~5925	-47.93	≤-26.91	PASS
11AX20M IMO	Ant1	High	5825	5925~5935	-46.9	≤-27	PASS
11AX40M IMO	Ant0	Low	5755	5720~5725	-35.12	≤16.66	PASS
11AX40M	Ant0	Low	5755	5700~5720	-38.93	≤11.72	PASS

Shenzhen Anbotek Compliance Laboratory Limited

Address: 1/F., Building D, Sogood Science and Technology Park, Sanwei Community,
 Hangcheng Street, Bao'an District, Shenzhen, Guangdong, China.
 Tel: (86) 0755-26066440 Fax: (86) 0755-26014772 Email: service@anbotek.com



Hotline

400-003-0500

www.anbotek.com.cn



IMO							
11AX40M IMO	Ant0	Low	5755	5650~5700	-45.97	≤-26.70	PASS
11AX40M IMO	Ant0	Low	5755	5645~5650	-46.54	≤-27	PASS
11AX40M IMO	Ant1	Low	5755	5720~5725	-35.24	≤18.20	PASS
11AX40M IMO	Ant1	Low	5755	5700~5720	-34.83	≤14.94	PASS
11AX40M IMO	Ant1	Low	5755	5650~5700	-46.15	≤-26.60	PASS
11AX40M IMO	Ant1	Low	5755	5645~5650	-47.11	≤-27	PASS
11AX40M IMO	Ant0	High	5795	5850~5855	-40.41	≤18.29	PASS
11AX40M IMO	Ant0	High	5795	5855~5875	-42.41	≤13.07	PASS
11AX40M IMO	Ant0	High	5795	5875~5925	-46.85	≤-26.34	PASS
11AX40M IMO	Ant0	High	5795	5925~5935	-46.79	≤-27	PASS
11AX40M IMO	Ant1	High	5795	5850~5855	-41.63	≤15.66	PASS
11AX40M IMO	Ant1	High	5795	5855~5875	-42.44	≤11.63	PASS
11AX40M IMO	Ant1	High	5795	5875~5925	-47.05	≤-26.34	PASS
11AX40M IMO	Ant1	High	5795	5925~5935	-46.64	≤-27	PASS
11AX80M IMO	Ant0	Low	5775	5720~5725	-45.7	≤15.65	PASS
11AX80M IMO	Ant0	Low	5775	5700~5720	-46.01	≤10.18	PASS
11AX80M IMO	Ant0	Low	5775	5650~5700	-47.14	≤-26.57	PASS
11AX80M IMO	Ant0	Low	5775	5645~5650	-46.66	≤-27	PASS
11AX80M IMO	Ant0	High	5775	5850~5855	-46.9	≤16.68	PASS
11AX80M IMO	Ant0	High	5775	5855~5875	-46.46	≤10.04	PASS
11AX80M IMO	Ant0	High	5775	5875~5925	-46.71	≤-26.87	PASS

Shenzhen Anbotek Compliance Laboratory Limited

Address: 1/F., Building D, Sogood Science and Technology Park, Sanwei Community,
 Hangcheng Street, Bao'an District, Shenzhen, Guangdong, China.
 Tel: (86) 0755-26066440 Fax: (86) 0755-26014772 Email: service@anbotek.com



Hotline

400-003-0500

www.anbotek.com.cn



11AX80M IMO	Ant0	High	5775	5925~5935	-45.13	≤-27	PASS
11AX80M IMO	Ant1	Low	5775	5720~5725	-44.35	≤16.35	PASS
11AX80M IMO	Ant1	Low	5775	5700~5720	-45.77	≤10.53	PASS
11AX80M IMO	Ant1	Low	5775	5650~5700	-46.64	≤-26.91	PASS
11AX80M IMO	Ant1	Low	5775	5645~5650	-47.08	≤-27	PASS
11AX80M IMO	Ant1	High	5775	5850~5855	-46.89	≤15.84	PASS
11AX80M IMO	Ant1	High	5775	5855~5875	-45.41	≤10.92	PASS
11AX80M IMO	Ant1	High	5775	5875~5925	-47.6	≤-26.32	PASS
11AX80M IMO	Ant1	High	5775	5925~5935	-46.81	≤-27	PASS

Note: The margin is at least greater than the antenna gain plus the cable loss plus 3.01.

