7. SETUP PHOTOGRAPHS

The relative location of the DUT to the probe is the same for each configuration. Photographs for configurations 1 and 2 are provided below.

Top and bottom configurations are the same but the relative positions are swapped. I.E charging phone is below the DUT.

Example photographs for the other configurations are provided to show the locations of the devices under charge. The position of the DUT was the same as for configuration 1 and 2.

For edge measurements the DUT was placed against a line drawn 15 cm from the center of the probe.


For top and bottom measurements a foam spacer was used to maintain a vertical distance of 15 cm from the center of the probe.




Page 15 of 19



Configuration 1 & 2 Edge 1 (15cm)



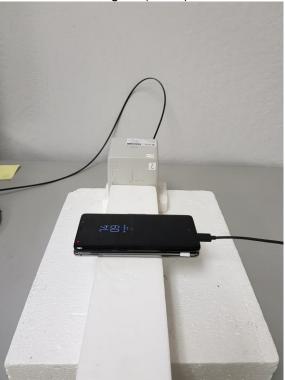

Page 16 of 19





Edge 4 (15cm distance)



UL VERIFICATION SERVICES INC. 47173 BENICIA STREET, FREMONT, CA 94538, USA This report shall not be reproduced except in full, without the written approval of UL Verification Services Inc. FORM NO: CCSUP4701I TEL: (510) 771-1000 FAX: (510) 661-0888

Page 17 of 19



Configuration 3 & 4 Location of phone on DUT



Page 18 of 19



Configuration 5 & 6 Location of watch on DUT

End of Report

UL VERIFICATION SERVICES INC. FORM NO: CCSUP4701I TEL: (510) 771-1000 47173 BENICIA STREET, FREMONT, CA 94538, USA TEL: (510) 771-1000 FAX: (510) 661-0 This report shall not be reproduced except in full, without the written approval of UL Verification Services Inc. FAX: (510) 661-0888

Page 19 of 19