

Attachment 8.

- SETUP PHOTOGRAPHS

The relative location of the DUT to the probe is the same for each configuration. Photographs for configurations 1 and 2 are provided below.


Top and bottom configurations are the same but the relative positions are swapped. i.e. charging phone is below the DUT.

Example photographs for the other configurations are provided to show the locations of the devices under charge. The position of the DUT was the same as for configuration 1 and 2.

For edge measurements the DUT was place against a line drawn 15 cm from the center of the probe.

For top the bottom measurements a foam spacer was used to maintain a vertical distance of 15 cm from the center of the probe.



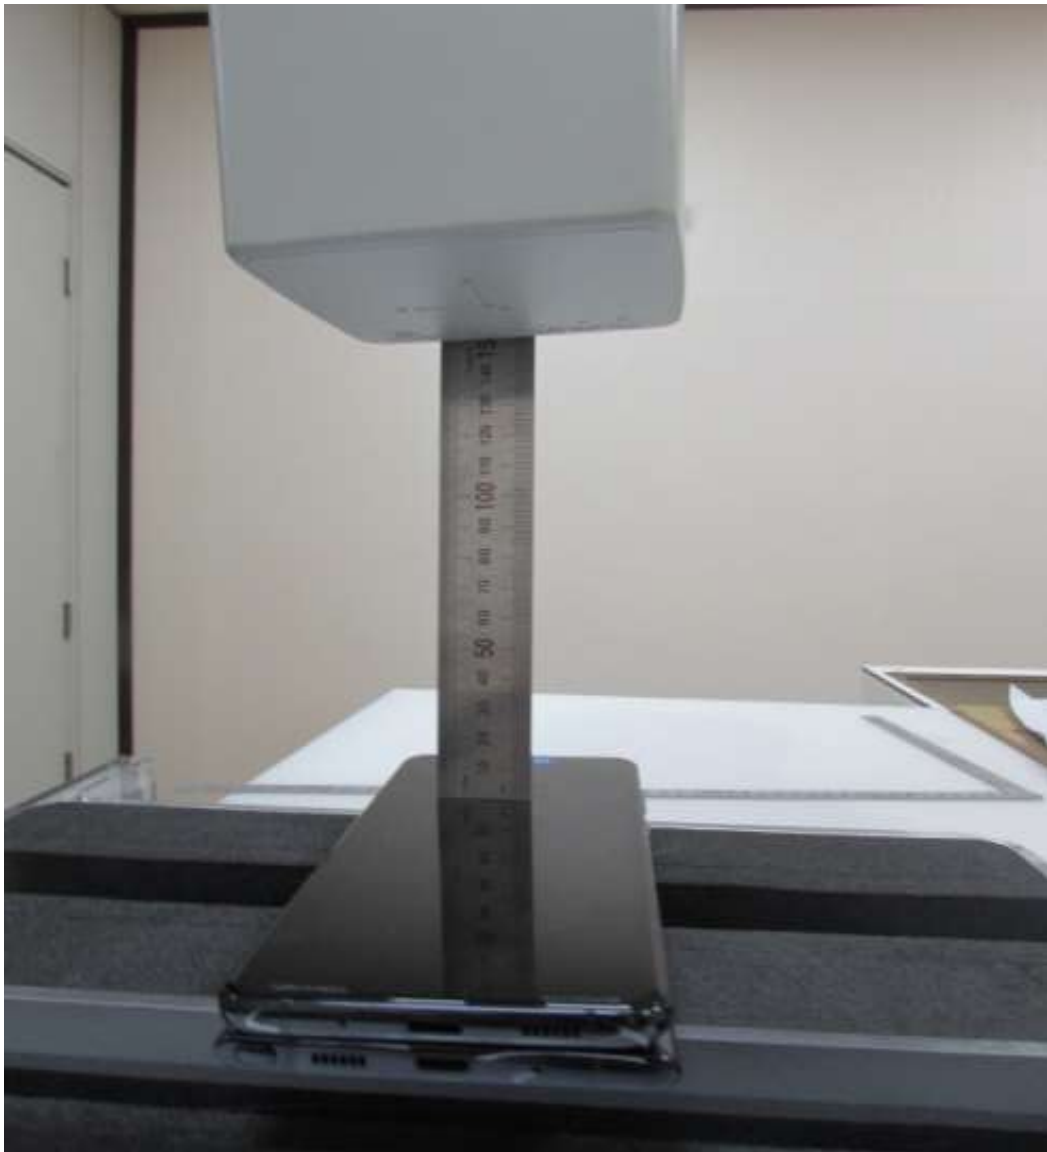

DUT to phone test Configuration 1 & 2
Edge 1 (15cm)



Edge 2 (15cm)




Edge 3 (15cm)



Edge 4 (15cm)



Top (15mm)

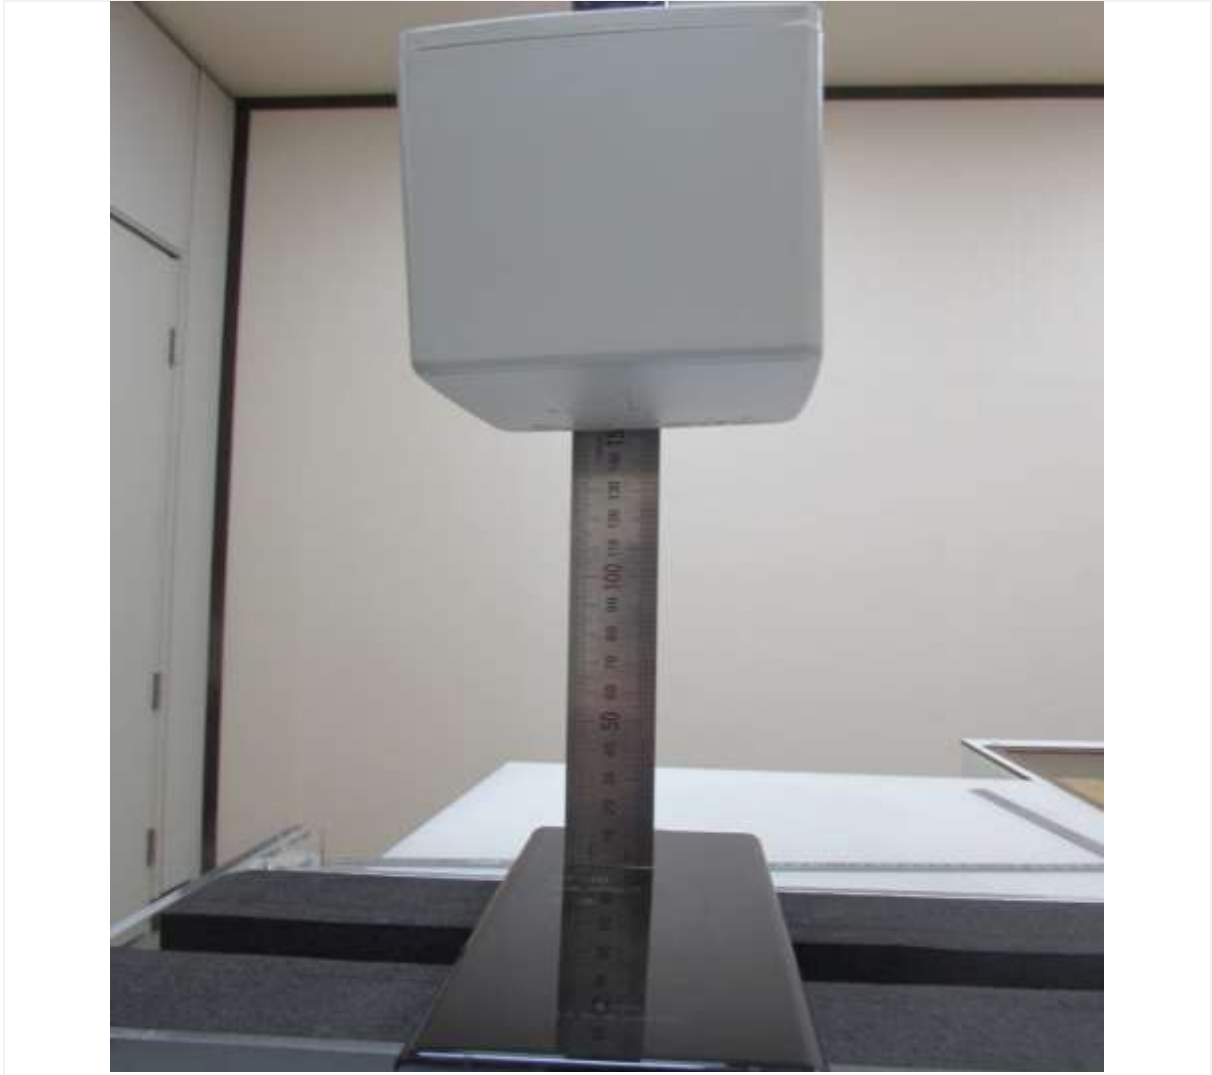

Configuration 2




Configuration 3 & 4

Location of Phone on DUT



Configuration 5 & 6

Location of Watch on DUT (15mm)

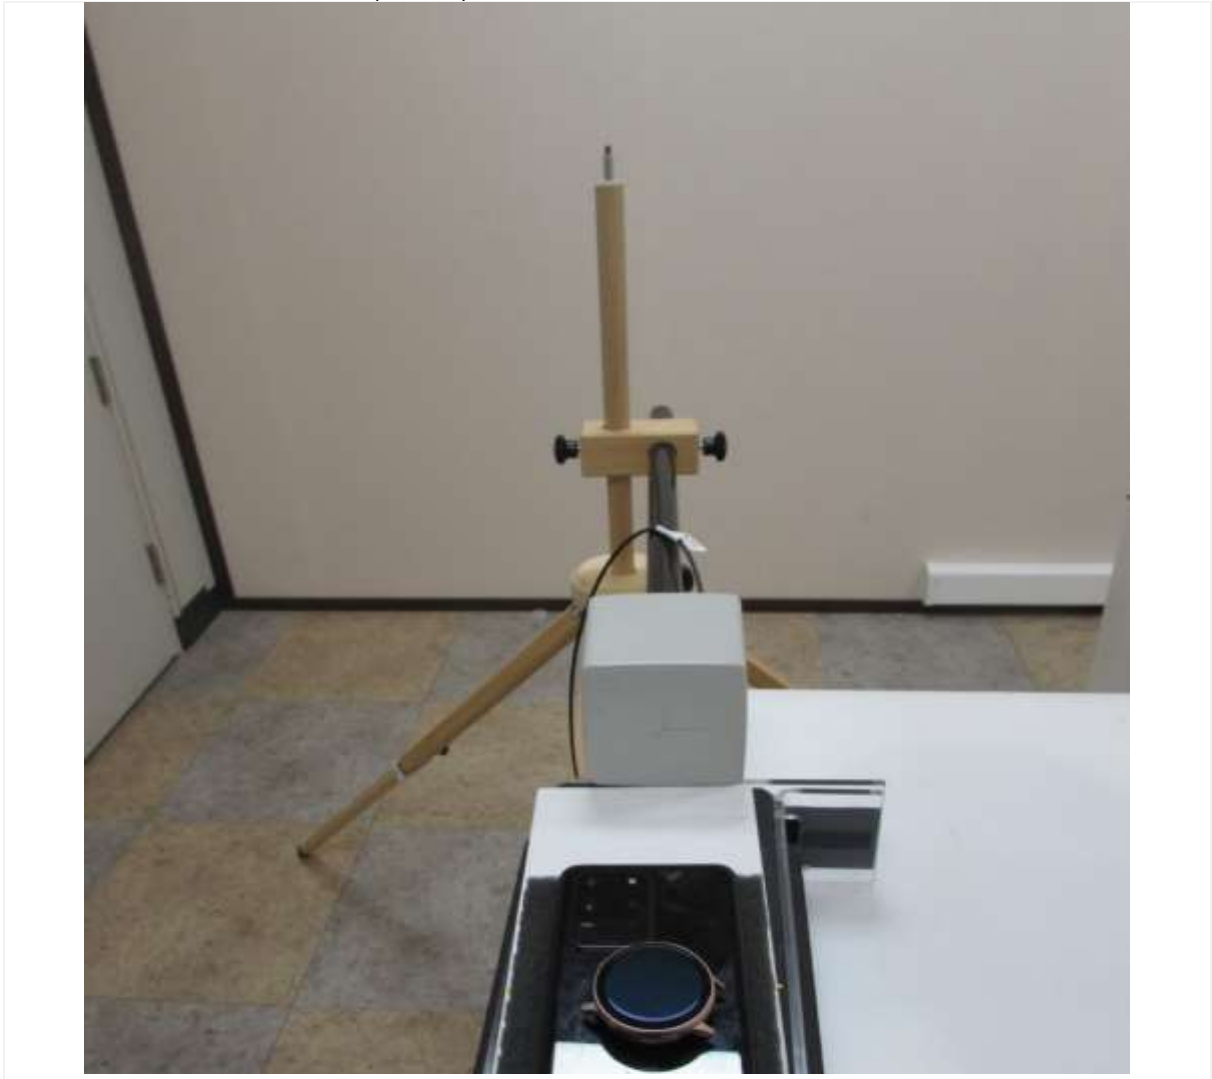

Configuration 5 & 6

Location of Watch on DUT (15mm)

