

SAR TEST REPORT

for

Harman International Industries, Inc.

Portable Bluetooth Speaker

Model No.: FLIP6T

FCC ID: APIJBLFLIP6T

IC: 6132A-JBLFLIP6T

The MAX SAR(1g)					
Body SAR(DSS)	0.1117W/Kg				

Prepared for: Harman International Industries, Inc.

8500 Balboa Boulevard, Northridge, CA 91329, UNITED

STATES

Prepared By: Audix Technology (Shenzhen) Co., Ltd.

No. 6, Kefeng Road, Science & Technology Park, Nanshan District, Shenzhen, Guangdong, China

Tel: (0755) 26639496 Fax: (0755) 26632877

Report Number : ACS-SF21015
Date of Test : Jul.16, 2021
Date of Report : Sep.03, 2021



TABLE OF CONTENTS

1.1. Description of Equipment Under Test 1.2. Feature of Equipment Under Test 1.2. Feature of Equipment Under Test GENERAL DESCRIPTION 2.1. Product Description For EUT 2.2. Applied Standards 2.3. Device Category and SAR Limits 2.4. Test Conditions 2.5. Exposure Positions Consideration 2.6. Standalone SAR Test Exclusion Considerations 2.7. EUT Configuration and operation conditions for test 2.8. Test Equipments 2.9. Laboratory Environment 2.10. Measurement Uncertainty 1 2.10. Measurement Uncertainty 1 3.1. General description of test procedures 3.1. SAR MEASUREMENTS SYSTEM 4.1. SAR Measurement Set-up 4.2. ELI Phantom 4.3. Device Holder for SAM Twin Phantom 4.4. DASY5 E-field Probe System 4.5. E-field Probe Calibration 4.6. Scanning procedure 2. DATA STORAGE AND EVALUATION 2.5.1. Data Storage 2 5.2. Data Evaluation by SEMCAD 2 5.2. Data Evaluation by SEMCAD 2 SYSTEM CHECK 2 TEST RESULTS 2 <	<u>Des</u>	<u>cripti</u>	on	<u>Page</u>
GENERAL INFORMATION	Tes	t Repo	ort Verification	
1.2. Feature of Equipment Under Test GENERAL DESCRIPTION. 2.1. Product Description For EUT 2.2. Applied Standards 2.3. Device Category and SAR Limits 2.4. Test Conditions 2.5. Exposure Positions Consideration. 2.6. Standalone SAR Test Exclusion Considerationss 2.7. EUT Configuration and operation conditions for test. 1 2.8. Test Equipments 1 2.9. Laboratory Environment 1 2.10. Measurement Uncertainty 1 MEASURE PROCEDURES 1 3.1. General description of test procedures 1 3.1. SAR MEASUREMENTS SYSTEM 1 4.1. SAR Measurement Set-up 1 4.2. ELI Phantom 1 4.3. Device Holder for SAM Twin Phantom 1 4.4. DASY5 E-field Probe System 1 4.5. E-field Probe Calibration 1 4.6. Scanning procedure 2 DATA STORAGE AND EVALUATION 2 5.1. Data Storage 2 5.2. Data Evaluation by SEMCAD 2 SYSTEM CHECK 2 TEST RESULTS 2 7.1. Output power 2	1.			
CENERAL DESCRIPTION		1.1.	Description of Equipment Under Test	4
2.1. Product Description For EUT 2.2. Applied Standards 2.3. Device Category and SAR Limits 2.4. Test Conditions 2.5. Exposure Positions Consideration 2.5. Exposure Positions Considerations 2.7. EUT Configuration and operation conditions for test 1 2.8. Test Equipments 1 2.9. Laboratory Environment 1 2.10. Measurement Uncertainty 1 MEASURE PROCEDURES 1 3.1. General description of test procedures 1 SAR MEASUREMENTS SYSTEM 1 4.1. SAR Measurement Set-up 1 4.2. ELI Phantom 1 4.3. Device Holder for SAM Twin Phantom 1 4.4. DASY5 E-field Probe System 1 4.5. E-field Probe Calibration 1 4.6. Scanning procedure 2 DATA STORAGE AND EVALUATION 2 5.1. Data Storage 2 5.2. Data Evaluation by SEMCAD 2 SYSTEM CHECK 2 TEST RESULTS 2 7.1. Output power 2 7.2. System Check for Head Tissue simulating liquid 2		1.2.	Feature of Equipment Under Test	
2.1. Product Description For EUT 2.2. Applied Standards 2.3. Device Category and SAR Limits 2.4. Test Conditions 2.5. Exposure Positions Consideration 2.5. Exposure Positions Considerations 2.7. EUT Configuration and operation conditions for test 1 2.8. Test Equipments 1 2.9. Laboratory Environment 1 2.10. Measurement Uncertainty 1 MEASURE PROCEDURES 1 3.1. General description of test procedures 1 SAR MEASUREMENTS SYSTEM 1 4.1. SAR Measurement Set-up 1 4.2. ELI Phantom 1 4.3. Device Holder for SAM Twin Phantom 1 4.4. DASY5 E-field Probe System 1 4.5. E-field Probe Calibration 1 4.6. Scanning procedure 2 DATA STORAGE AND EVALUATION 2 5.1. Data Storage 2 5.2. Data Evaluation by SEMCAD 2 SYSTEM CHECK 2 TEST RESULTS 2 7.1. Output power 2 7.2. System Check for Head Tissue simulating liquid 2	2.	GEN	NERAL DESCRIPTION	
2.2. Applied Standards 2.3. Device Category and SAR Limits 2.4. Test Conditions 2.5. Exposure Positions Consideration 2.5. Exposure Positions Considerations 2.6. Standalone SAR Test Exclusion Considerations 1 2.7. EUT Configuration and operation conditions for test 1 2.8. Test Equipments 1 2.9. Laboratory Environment 1 2.10. Measurement Uncertainty 1 MEASURE PROCEDURES 1 3.1. General description of test procedures 1 SAR MEASUREMENTS SYSTEM 1 4.1. SAR Measurement Set-up 1 4.2. ELI Phantom 1 4.3. Device Holder for SAM Twin Phantom 1 4.4. DASY5 E-field Probe System 1 4.5. E-field Probe Calibration 1 4.6. Scanning procedure 2 DATA STORAGE AND EVALUATION 2 5.1. Data Storage 2 5.2. Data Evaluation by SEMCAD 2 SYSTEM CHECK 2 7.1. Output power 2 7.2. System Check for Head Tissue simulating liquid 2				
2.3. Device Category and SAR Limits 2.4 Test Conditions 2.5. Exposure Positions Consideration 2.6 Standalone SAR Test Exclusion Considerations 2.7. EUT Configuration and operation conditions for test 1 2.8. Test Equipments 1 2.9. Laboratory Environment 1 2.10. Measurement Uncertainty 1 MEASURE PROCEDURES 1 3.1. General description of test procedures 1 SAR MEASUREMENTS SYSTEM 1 4.1. SAR Measurement Set-up 1 4.2. ELI Phantom 1 4.3. Device Holder for SAM Twin Phantom 1 4.4. DASY5 E-field Probe System 1 4.5. E-field Probe Calibration 1 4.6. Scanning procedure 2 DATA STORAGE AND EVALUATION 2 5.1. Data Storage 2 5.2. Data Evaluation by SEMCAD 2 SYSTEM CHECK 2 7.1. Output power 2 7.2. System Check for Head Tissue simulating liquid 2		2.2.		
2.4. Test Conditions 2.5. Exposure Positions Consideration 2.6. Standalone SAR Test Exclusion Considerations		2.3.		
2.6. Standalone SAR Test Exclusion Considerations 2.7. EUT Configuration and operation conditions for test. 1 2.8. Test Equipments. 1 2.9. Laboratory Environment 1 2.10. Measurement Uncertainty 1 MEASURE PROCEDURES 1 3.1. General description of test procedures. 1 SAR MEASUREMENTS SYSTEM 1 4.1. SAR Measurement Set-up 1 4.2. ELI Phantom 1 4.3. Device Holder for SAM Twin Phantom 1 4.4. DASY5 E-field Probe System 1 4.5. E-field Probe Calibration 1 4.6. Scanning procedure 2 DATA STORAGE AND EVALUATION 2 5.1. Data Storage 2 5.2. Data Evaluation by SEMCAD 2 SYSTEM CHECK 2 7.1. Output power 2 7.2. System Check for Head Tissue simulating liquid 2		2.4.		
2.6. Standalone SAR Test Exclusion Considerations 2.7. EUT Configuration and operation conditions for test. 1 2.8. Test Equipments. 1 2.9. Laboratory Environment 1 2.10. Measurement Uncertainty 1 MEASURE PROCEDURES 1 3.1. General description of test procedures. 1 SAR MEASUREMENTS SYSTEM 1 4.1. SAR Measurement Set-up 1 4.2. ELI Phantom 1 4.3. Device Holder for SAM Twin Phantom 1 4.4. DASY5 E-field Probe System 1 4.5. E-field Probe Calibration 1 4.6. Scanning procedure 2 DATA STORAGE AND EVALUATION 2 5.1. Data Storage 2 5.2. Data Evaluation by SEMCAD 2 SYSTEM CHECK 2 7.1. Output power 2 7.2. System Check for Head Tissue simulating liquid 2		2.5.		
2.8. Test Equipments 1 2.9. Laboratory Environment 1 2.10. Measurement Uncertainty 1 MEASURE PROCEDURES 1 3.1. General description of test procedures 1 SAR MEASUREMENTS SYSTEM 1 4.1. SAR Measurement Set-up 1 4.2. ELI Phantom 1 4.3. Device Holder for SAM Twin Phantom 1 4.4. DASY5 E-field Probe System 1 4.5. E-field Probe Calibration 1 4.6. Scanning procedure 2 DATA STORAGE AND EVALUATION 2 5.1. Data Storage 2 5.2. Data Evaluation by SEMCAD 2 SYSTEM CHECK 2 TEST RESULTS 2 7.1. Output power 2 7.2. System Check for Head Tissue simulating liquid 2		2.6.	Standalone SAR Test Exclusion Considerations	8
2.9. Laboratory Environment 1 2.10. Measurement Uncertainty 1 MEASURE PROCEDURES 1 3.1. General description of test procedures 1 SAR MEASUREMENTS SYSTEM 1 4.1. SAR Measurement Set-up 1 4.2. ELI Phantom 1 4.3. Device Holder for SAM Twin Phantom 1 4.4. DASY5 E-field Probe System 1 4.5. E-field Probe Calibration 1 4.6. Scanning procedure 2 DATA STORAGE AND EVALUATION 2 5.1. Data Storage 2 5.2. Data Evaluation by SEMCAD 2 SYSTEM CHECK 2 TEST RESULTS 2 7.1. Output power 2 7.2. System Check for Head Tissue simulating liquid 2		2.7.	EUT Configuration and operation conditions for test	10
2.10. Measurement Uncertainty 1 MEASURE PROCEDURES 1 3.1. General description of test procedures 1 SAR MEASUREMENTS SYSTEM 1 4.1. SAR Measurement Set-up 1 4.2. ELI Phantom 1 4.3. Device Holder for SAM Twin Phantom 1 4.4. DASY5 E-field Probe System 1 4.5. E-field Probe Calibration 1 4.6. Scanning procedure 2 DATA STORAGE AND EVALUATION 2 5.1. Data Storage 2 5.2. Data Evaluation by SEMCAD 2 SYSTEM CHECK 2 TEST RESULTS 2 7.1. Output power 2 7.2. System Check for Head Tissue simulating liquid 2		2.8.	Test Equipments	10
MEASURE PROCEDURES 1 3.1. General description of test procedures 1 SAR MEASUREMENTS SYSTEM 1 4.1. SAR Measurement Set-up 1 4.2. ELI Phantom 1 4.3. Device Holder for SAM Twin Phantom 1 4.4. DASY5 E-field Probe System 1 4.5. E-field Probe Calibration 1 4.6. Scanning procedure 2 DATA STORAGE AND EVALUATION 2 5.1. Data Storage 2 5.2. Data Evaluation by SEMCAD 2 SYSTEM CHECK 2 TEST RESULTS 2 7.1. Output power 2 7.2. System Check for Head Tissue simulating liquid 2		2.9.	Laboratory Environment	1
3.1. General description of test procedures 1 SAR MEASUREMENTS SYSTEM 1 4.1. SAR Measurement Set-up 1 4.2. ELI Phantom 1 4.3. Device Holder for SAM Twin Phantom 1 4.4. DASY5 E-field Probe System 1 4.5. E-field Probe Calibration 1 4.6. Scanning procedure 2 DATA STORAGE AND EVALUATION 2 5.1. Data Storage 2 5.2. Data Evaluation by SEMCAD 2 SYSTEM CHECK 2 TEST RESULTS 2 7.1. Output power 2 7.2. System Check for Head Tissue simulating liquid 2		2.10.	Measurement Uncertainty	1
SAR MEASUREMENTS SYSTEM 1 4.1. SAR Measurement Set-up 1 4.2. ELI Phantom 1 4.3. Device Holder for SAM Twin Phantom 1 4.4. DASY5 E-field Probe System 1 4.5. E-field Probe Calibration 1 4.6. Scanning procedure 2 DATA STORAGE AND EVALUATION 2 5.1. Data Storage 2 5.2. Data Evaluation by SEMCAD 2 SYSTEM CHECK 2 TEST RESULTS 2 7.1. Output power 2 7.2. System Check for Head Tissue simulating liquid 2	3.	MEA	ASURE PROCEDURES	14
SAR MEASUREMENTS SYSTEM 1 4.1. SAR Measurement Set-up 1 4.2. ELI Phantom 1 4.3. Device Holder for SAM Twin Phantom 1 4.4. DASY5 E-field Probe System 1 4.5. E-field Probe Calibration 1 4.6. Scanning procedure 2 DATA STORAGE AND EVALUATION 2 5.1. Data Storage 2 5.2. Data Evaluation by SEMCAD 2 SYSTEM CHECK 2 TEST RESULTS 2 7.1. Output power 2 7.2. System Check for Head Tissue simulating liquid 2		3.1.	General description of test procedures	14
4.2. ELI Phantom 1 4.3. Device Holder for SAM Twin Phantom 1 4.4. DASY5 E-field Probe System 1 4.5. E-field Probe Calibration 1 4.6. Scanning procedure 2 DATA STORAGE AND EVALUATION 2 5.1. Data Storage 2 5.2. Data Evaluation by SEMCAD 2 SYSTEM CHECK 2 7.1. Output power 2 7.2. System Check for Head Tissue simulating liquid 2	1.	SAR	MEASUREMENTS SYSTEM	
4.2. ELI Phantom 1 4.3. Device Holder for SAM Twin Phantom 1 4.4. DASY5 E-field Probe System 1 4.5. E-field Probe Calibration 1 4.6. Scanning procedure 2 DATA STORAGE AND EVALUATION 2 5.1. Data Storage 2 5.2. Data Evaluation by SEMCAD 2 SYSTEM CHECK 2 7.1. Output power 2 7.2. System Check for Head Tissue simulating liquid 2				
4.3. Device Holder for SAM Twin Phantom 1 4.4. DASY5 E-field Probe System 1 4.5. E-field Probe Calibration 1 4.6. Scanning procedure 2 DATA STORAGE AND EVALUATION 2 5.1. Data Storage 2 5.2. Data Evaluation by SEMCAD 2 SYSTEM CHECK 2 TEST RESULTS 2 7.1. Output power 2 7.2. System Check for Head Tissue simulating liquid 2			<u>*</u>	
4.4. DASY5 E-field Probe System 1 4.5. E-field Probe Calibration 1 4.6. Scanning procedure 2 DATA STORAGE AND EVALUATION 2 5.1. Data Storage 2 5.2. Data Evaluation by SEMCAD 2 SYSTEM CHECK 2 TEST RESULTS 2 7.1. Output power 2 7.2. System Check for Head Tissue simulating liquid 2		4.3.		
4.5. E-field Probe Calibration 1 4.6. Scanning procedure 2 DATA STORAGE AND EVALUATION 2 5.1. Data Storage 2 5.2. Data Evaluation by SEMCAD 2 SYSTEM CHECK 2 TEST RESULTS 2 7.1. Output power 2 7.2. System Check for Head Tissue simulating liquid 2		4.4.		
DATA STORAGE AND EVALUATION. 2 5.1. Data Storage. 2 5.2. Data Evaluation by SEMCAD. 2 SYSTEM CHECK. 2 TEST RESULTS. 2 7.1. Output power. 2 7.2. System Check for Head Tissue simulating liquid. 2		4.5.		
5.1. Data Storage 2 5.2. Data Evaluation by SEMCAD 2 SYSTEM CHECK TEST RESULTS 7.1. Output power 2 7.2. System Check for Head Tissue simulating liquid 2		4.6.	Scanning procedure	20
5.1. Data Storage 2 5.2. Data Evaluation by SEMCAD 2 SYSTEM CHECK TEST RESULTS 7.1. Output power 2 7.2. System Check for Head Tissue simulating liquid 2	5.	DAT	- ·	
5.2. Data Evaluation by SEMCAD				
SYSTEM CHECK		5.2.		
7.1. Output power	6.	SYS'	•	
7.1. Output power	7.			
7.2. System Check for Head Tissue simulating liquid	•			
7.3. Test Results				
ANNEX A: SYSTEM CHECK RESULTS				
ANNEX B: TEST PLOTS ANNEX C: DASY CARLIBRATION CERTIFICATE				

ANNEX D: TEST SETUP PHOTOS



SAR TEST REPORT

Applicant : Harman International Industries, Inc.

Product : Portable Bluetooth Speaker

FCC ID : APIJBLFLIP6T IC : 6132A-JBLFLIP6T

(A) Model No. : FLIP6T

(B) Test Voltage : DC 3.6V (built-in battery)

Measurement Standard Used:

· FCC 47 CFR Part 2 (2.1093)

· IEEE C95.1-1999

· IEEE 1528-2013

· IEC62209-1:2016

· IEC62209-2:2010

· FCC OET Bulletin 65 Supplement C (Edition 01-01)

· RSS-102 ISSUE 5: 2015

· FCC KDB 447498 D01 v06

· FCC KDB 865664 D01/D02

The device described above is tested by Audix Technology (Shenzhen) Co., Ltd. to determine the maximum emission levels emanating from the device and the severe levels of the device can endure and its performance criterion. The test results are contained in this test report and Audix Technology (Shenzhen) Co., Ltd. is assumed full responsibility for the accuracy and completeness of test. This report contains data that are not covered by the NVLAP accreditation. Also, this report shows that the EUT is technically compliant with the FCC and RSS-102 requirements.

This report applies to single evaluation of one sample of above mentioned product. This report shall not be reproduced in part without written approval of Audix Technology (Shenzhen) Co., Ltd.

The report must not be used by the client to claim product certification, approval, or endorsement by NVLAP, NIST, or any agency of the federal government.

Date of Test:	Jul.16, 2021	Report of date: _	Sep.03, 2021		
Prepared by : _	Kayli He /Assistant	Reviewed by :		<i>N</i>	
	AUD	№ 信華科技 (深圳) 有所	Sunny Lu / Deputy	Manager	
	₩ MINI	Audix Technology (SI EMC 部門報告專	nenzhen) Co., Ltd.		
Approved & Aut	thorized Signer S	tamp only for EMG be			



1. GENERAL INFORMATION

1.1. Description of Equipment Under Test

	1
Applicant	Harman International Industries, Inc. 8500 Balboa Boulevard, Northridge, CA 91329, UNITED STATES
Manufacturer	Harman International Industries, Inc. 8500 Balboa Boulevard, Northridge, CA 91329, UNITED STATES
Product	Portable Bluetooth Speaker
Model No.	FLIP6T
FCC ID	APIJBLFLIP6T
IC	6132A-JBLFLIP6T
Sample Type	Prototype production
Date of Receipt	Jul.14, 2021
Date of Test	Jul.16, 2021



1.2. Feature of Equipment Under Test

Product Feature & Specification						
Product Portable Bluetooth Speaker						
Model No.	FLIP6T					
FCC ID	APIJBLFLIP6T					
IC	6132A-JBLFLIP6T					
Radio	Bluetooth BDR+EDR; BLE; SRI)				
Power Source	Commercial Power	AC V				
	External Power Source	DC V				
	Polymer Li-ion battery DC 3.6V, 4800mAh					
	☐ UM battery	DC V				
Bluetooth						
Frequency Range	2402-2480MHz					
Type of Modulation	GFSK, π/4DQPSK, 8DPSK					
Data Rate	1Mbps, 2Mbps, 3Mbps					
Quantity of Channels	79/40					
Channel Separation 1MHz/2MHz						
SRD						
Frequency Range	2407-2475MHz					
Type of Modulation	GFSK, π/4DQPSK, 8DPSK					

Antenna System

Antenna Information				
Type of Antenna	FPC Antenna			
Antenna number	1			
Antenna Peak Gain	1.49dBi			



2. GENERAL DESCRIPTION

2.1. Product Description For EUT [None]

2.2. Applied Standards

The Specific Absorption Rate (SAR) testing specification, method and procedure for this device is in accordance with the following standards:

- •FCC 47 CFR Part 2 (2.1093)
- ·IEEE C95.1-1999
- ·IEEE 1528-2013
- ·IEC62209-1:2016
- ·IEC62209-2:2010
- ·FCC OET Bulletin 65 Supplement C (Edition 01-01)
- ·RSS-102 ISSUE 5: 2015
- ·FCC KDB 447498 D01 v06
- ·FCC KDB 865664 D01/D02

2.3. Device Category and SAR Limits

This device belongs to portable device category because its radiating structure is allowed to be used within 20 centimeters of the body of the user. Limit for General

Population/Uncontrolled exposure should be applied for this device, it is 1.6 W/kg as averaged over any 1 gram of tissue.

2.4. Test Conditions

2.4.1. Ambient Condition


Ambient Temperature	20 to 24 ℃
Humidity	< 60 %


2.4.2. Test Configuration

The distance between the EUT and the antenna of the emulator is larger than 50 cm and the output power radiated from the emulator antenna is at least 30dB smaller than the output power of EUT. The EUT was set from the emulator to radiate maximum output power during all tests.



2.5. Exposure Positions Consideration



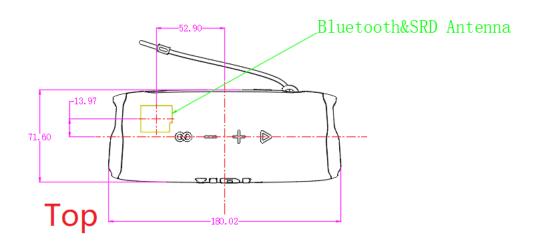

Antenna	Description
antenna	Bluetooth BDR+EDR; SRD

Sides for SAR tests Test distance: 0 mm(Body)										
							Head	Head (15 °)		
Band	Back	Front	Top	Bottom	Left	Right	Left	Right	Left	Right
Bluetooth	X	X	V	X		X	X	X	X	X
SRD	X	X	$\sqrt{}$	X	$\sqrt{}$	X	X	X	X	X



2.6. Standalone SAR Test Exclusion Considerations

According to RSS-102 Table 1, the SAR test exclusion threshold for 2450MHz at 5mm test separation distances is 4mW.

Frequency	Exemption Limits (mW)							
(MHz)	At separation distance of	At separation distance of	At separation distance of	At separation distance of	At separation distance of			
	≤5 mm	10 mm	15 mm	20 mm	25 mm			
≤300	71 mW	101 mW	132 mW	162 mW	193 mW			
450	52 mW	70 mW	88 mW	106 mW	123 mW			
835	17 mW	30 mW	42 mW	55 mW	67 mW			
1900	7 mW	10 mW	18 mW	34 mW	60 mW			
2450	4 mW	7 mW	15 mW	30 mW	52 mW			
3500	2 mW	6 mW	16 mW	32 mW	55 mW			
5800	1 mW	6 mW	15 mW	27 mW	41 mW			

Frequency	ency Exemption Limits (mW)							
(MHz)	At separation distance of 30 mm	At separation distance of 35 mm	At separation distance of 40 mm	At separation distance of 45 mm	At separation distance of ≥50 mm			
≤300	223 mW	254 mW	284 mW	315 mW	345 mW			
450	141 mW	159 mW	177 mW	195 mW	213 mW			
835	80 mW	92 mW	105 mW	117 mW	130 mW			
1900	99 mW	153 mW	225 mW	316 mW	431 mW			
2450	83 mW	123 mW	173 mW	235 mW	309 mW			
3500	86 mW	124 mW	170 mW	225 mW	290 mW			
5800	56 mW	71 mW	85 mW	97 mW	106 mW			

Standalone 1-g head or body SAR evaluation by measurement or numerical simulation is not required when the corresponding SAR Exclusion Threshold condition, listed below, is satisfied. The 1-g SAR test exclusion threshold for 100 MHz to 6 GHz at test separation distances \leq 50 mm are determined by:

[(max. power of channel, including tune-up tolerance, mW) / (min. test separation distance, mm)] $\{ \sqrt{f(GHz)} \} \le 3.0 \text{ for } 1\text{-g SAR}, \text{ where}$

- f(GHz) is the RF channel transmit frequency in GHz
- Power and distance are rounded to the nearest mW and mm before calculation
- The result is rounded to one decimal place for comparison

AUDIX Technology (Shenzhen) Co., Ltd.

According to the KDB447498 appendix A, the SAR test exclusion threshold for 2450MHz at 5mm test separation distances is 10 mW.

Appendix A

SAR Test Exclusion Thresholds for 100 MHz – 6 GHz and \leq 50 mm

Approximate SAR Test Exclusion Power Thresholds at Selected Frequencies and Test Separation Distances are illustrated in the following Table.

MHz	5	10	15	20	25	mm
150	39	77	116	155	194	
300	27	55	82	110	137	
450	22	45	67	89	112	
835	16	33	49	66	82	
900	16	32	47	63	79	SAR Test Exclusion Threshold (mW)
1500	12	24	37	49	61	
1900	11	22	33	44	54	
2450	10	19	29	38	48	
3600	8	16	24	32	40	
5200	7	13	20	26	33	
5400	6	13	19	26	32	
5800	6	12	19	25	31	



2.7. EUT Configuration and operation conditions for test.

EUT

(EUT: Portable Bluetooth Speaker)

2.8. Test Equipments

	2.6. Test Eqt				Calibration	Calibration	Calibration
Item	Equipment	Manufacturer	Model No.	Serial No.	Date	Due Date	Body
1.	DASY5 SAR Test System	Speag	TX60 L speag	F09/5B1H1/01	NCR	NCR	N/A
2.	ENA Series Analyzer	Agilent	E5071B	MY42403549	2021.04.08	2022.04.08	CCIC
3.	ENA Series Network Analyzer	Agilent	E5071C	MY46316760	2020.10.10	2021.10.10	CCIC
4.	Power Meter	Anritsu	ML2487A	6K00002472	2021.04.07	2022.04.07	CCIC
5.	Power Sensor	Anritsu	MA2491A	033005	2021.04.06	2022.04.06	CCIC
6.	Signal Generator	Rohde&Schwarz	SMB100A	181375	2021.04.08	2022.04.07	CCIC
7.	Amplifier	Milmega	ZHL-42W	C620601316	NCR	NCR	N/A
8.	Dipole Validation Kits	Speag	D2450V2	862	2020.06.15	2023.06.15	SPEAG
9.	Attenuator	N/A	1527	001	2020.10.10	2021.10.10	CCIC
10.	Date Acquisition Electronics	Speag	DAE4	899	2021.03.23	2022.03.23	CCTL
11.	E-Field Probe	Speag	EX3DV4	3767	2021.04.26	2022.04.26	CCTL
12.	Test Software	Schmid&Partner Englinnering AG	DASY5	52.8.7.1137	NCR	NCR	NCR
13.	Radio Communication Analyzer	ANRITSU	MT8820C	6201091003	2020.10.10	2021.10.10	CCIC
14.	Radio Communication Analyzer	R&S	CMW500	103249	2020.10.10	2021.10.10	CCIC

Note: Dipole antenna calibration interval is 3 year, annual check result to be follow (Refer to KDB 865664, Dipole calibration)



2.9. Laboratory Environment

Temperature	Min:20℃,Max.25℃					
Relative humidity	Min. = 30%, Max. = 70%					
Note: Ambient noise is checked and found very low and in compliance with						
requirement of standards.						

2.10. Measurement Uncertainty

Test Item	Uncertainty		
Uncertainty for SAR test	1g: 21.1		
Checitanity for Start test	10g: 20.6		
Uncertainty for test site temperature and	$0.6^{\circ}\mathbb{C}$		
humidity			



Source	Туре	Uncertainly Value (%)	Probability Distribution	К	C1(1g)	C1(10g)	Standard uncertaint y ul(%)1g	Standard uncertaint y ul(%)10g	Degree of freedom Veff or Vi
Measurement system repetivity	Α	0.5	N	1		1	0.5	0.5	9
Probe calibration	В	5.9	N	1	1	1	5.9	5.9	∞
Isotropy	В	4.7	R	√3	1	1	2.7	2.7	∞
Linearity	В	4.7	R	√3	1	1	2.7	2.7	∞
Probe modulation response	В	0	R	√3	1	1	0	0	∞
Detection limits	В	1.0	R	√3	1	1	0.6	0.6	∞
Boundary effect	В	1.9	R	√3	1	1	1.1	1.1	∞
Readout electronics	В	1.0	N	1	1	1	1.0	1.0	∞
Response time	В	0	R	√3	1	1	0	0	∞
Integration time	В	4.32	R	√3	1	1	2.5	2.5	∞
RF ambient conditions – noise	В	0	R	√3	1	1	0	0	∞
RF ambient conditions – reflections	В	3	R	√3	1	1	1.73	1.73	∞
Probe positioner mech. restrictions	В	0.4	R	√3	1	1	0.2	0.2	∞
Probe positioning with respect to phantom shell	В	2.9	R	√3	1	1	1.7	1.7	∞
Post-processing	В	0	R	√3	1	1	0	0	∞
			Test san	nple re	lated				
Device holder uncertainty	Α	2.94	N	1	1	1	2.94	2.94	M-1
Test sample positioning	Α	4.1	N	1	1	1	4.1	4.1	M-1
Power scaling	В	5.0	R	√3	1	1	2.9	2.9	∞
Drift of output power (measured SAR drift)	В	5.0	R	√3	1	1	2.9	2.9	∞
			Phanton	n and s	et-up				
Phantom uncertainty (shape and thickness tolerances)	В	4.0	R	√3	1	1	2.3	2.1	∞
Algorithm for correcting SAR for deviations in permittivity and conductivity	В	1.9	N	1	1	0,84	1,9	1,6	∞
Liquid conductivity (meas.)	А	0.55	N	1	0.78	0.71	0.24	0.21	M-1
Liquid permittivity (meas.)	Α	0.19	N	1	0.23	0.26	0.09	0.06	М
Liquid permittivity – temperature uncertainty	Α	5.0	R	√3	0,78	0,71	1.4	1.1	∞
Liquid conductivity – temperature uncertainty	Α	5.0	R	√3	0.23	0,26	1.2	0.8	∞
Combined standard uncertainty	u' =	$\sqrt{\sum_{i=1}^{25} c_i^2 u_i^2}$		ı			10.57	10.32	
Expanded uncertainty (95 % conf. interval)	и	<u> </u>	N		K=	:2	21.14	20.64	



The following tissue formulations are provided for reference only as some of the parameters have not been thoroughly verified. The composition of ingredients may be modified accordingly to achieve the desired target tissue parameters required for routine SAR evaluation.

Ingredients	Frequency (MHz)									
(% by weight)	450		835		915		- 1900		2450	
Tissue Type	Head	Body	Head	Body	Head	Body	Head	Body	Head	Body
Water	38.56	51.16	41.45	52.4	41.05	56.0	54.9	40.4	62.7	73.2
Salt (NaCl)	3.95	1.49	1.45	1.4	1.35	0.76	0.18	0.5	0.5	0.04
Sugar	56.32	46.78	56.0	45.0	56.5	41.76	0.0	58.0	0.0	0.0
HEC	0.98	0.52	1.0	1.0	1.0	1.21	0.0	1.0	0.0	0.0
Bactericide	0.19	0.05	0.1	0.1	0.1	0.27	0.0	0.1	0.0	0.0
Triton X-100	0.0	0.0	0.0	0.0	0.0	0.0	0.0	0.0	36.8	0.0
DGBE	0.0	0.0	0.0	0.0	0.0	0.0	44.92	0.0	0.0	26.7
Dielectric Constant	43.42	58.0	42.54	56.1	42.0	56.8	39.9	54.0	39.8	52.5
Conductivity (S/m)	0.85	0.83	0.91	0.95	1.0	1.07	1.42	1.45	1.88	1.78

Salt: 99+% Pure Sodium Chloride

Sugar: 98+% Pure Sucrose

Water: De-ionized, 16 MΩ+ resistivity

HEC: Hydroxyethyl Cellulose

DGBE: 99+% Di(ethylene glycol) butyl ether, [2-(2-butoxyethoxy)ethanol] Triton X-100 (ultra pure): Polyethylene glycol mono [4-(1,1, 3, 3-tetramethylbutyl)phenyl]ether

Simulating Liquids for 5 GHz, Manufactured by SPEAG

Ingredients	(% by weight)		
Water	78		
Mineral oil	11		
Emulsifiers	9		
Additives and Salt	2		



3. MEASURE PROCEDURES

3.1. General description of test procedures

This is a Bluetooth Headset and it is appropriate for head SAR test, each side of the EUT should be tested. Choose the channel which has the maximum power as the priority test channel, if the test result less than 0.8W/Kg, then other channel can be excluded, otherwise, the channel which has a secondary highest power should be tested instead.

Please apply the following guidance for SAR testing:

- 1. Please use a 0 mm (touching) test separation distance on the flat phantom during SAR testing of this device. This separation distance is based on the guidance found in FCC KDB Publication 447498 D01, Section 5.2.3 3)
- 2. Please utilize a head tissue simulating liquid (TSL) of the appropriate frequency during SAR testing.
- 3. Please use the guidance found in FCC KDB Publication 447498 D01 to determine which sides of the device need to be tested for SAR.



4. SAR MEASUREMENTS SYSTEM

4.1. SAR Measurement Set-up

DASY5 system for performing compliance tests consists of the following items:

- (1) A standard high precision 6-axis robot (St äubli RX family) with controller and software. An arm extension for accommodating the data acquisition electronics (DAE).
- (2) A dosimetric probe, i.e. an isotropic E-field probe optimized and calibrated for usage It issue simulating liquid. The probe is equipped with an optical surface detector system.
- (3) A data acquisition electronic (DAE) which performs the signal amplification, signal multiplexing, AD-conversion, offset measurements, mechanical surface detection, collision detection, etc. The unit is battery powered with standard or rechargeable batteries. The signal is optically transmitted to the EOC.
- (4) A unit to operate the optical surface detector which is connected to the EOC.
- (5) The Electro-Optical Coupler (EOC) performs the conversion from the optical into a digital electric signal of the DAE. The EOC is connected to the DASY5 measurement server.
- (6) The DASY5 measurement server, which performs all real-time data evaluation for field measurements and surface detection, controls robot movements and handles safety operation. A computer operating Windows 2003.
- (7) DASY5 software and SEMCAD data evaluation software.
- (8) Remote control with teach panel and additional circuitry for robot safety such as warning lamps, etc.
- (9) The generic twin phantom enabling the testing of left-hand and right-hand usage.
- (10) The device holder for handheld mobile phones.
- (11) Tissue simulating liquid mixed according to the given recipes.
- (12) System validation dipoles allowing to validate the proper functioning of the system.

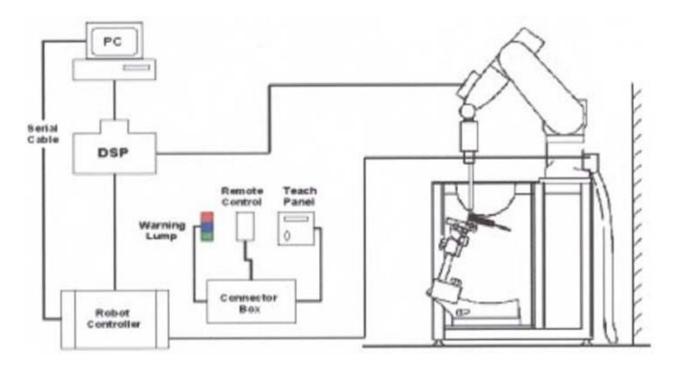


Figure 4.1 SAR Lab Test Measurement Set-up



4.2. ELI Phantom

Phantom for compliance testing of handheld and body-mounted wireless devices in the frequency range of 30 MHz to 6 GHz. ELI is fully compatible with the IEC 62209-2 standard and all known tissue simulating liquids. ELI has been optimized regarding its performance and can be integrated into our standard phantom tables. A cover prevents evaporation of the liquid. Reference markings on the phantom allow installation of the complete setup, including all predefined phantom positions and measurement grids, by teaching three points. The phantom is compatible with all SPEAG dosimetric probes and dipoles.



Material	Vinylester, glass fiber reinforced (VE-GF)		
Liquid Compatibility	Compatible with all SPEAG tissue simulating liquids (incl. DGBE type)		
Shell Thickness	$2.0 \pm 0.2 \text{ mm (bottom plate)}$		
Dimensions	Major axis: 600 mm Minor axis: 400 mm		
Filling Volume	approx. 30 liters		
Wooden Support	SPEAG standard phantom table		

The bottom plate contains three pair of bolts for locking the device holder. The device holder positions are adjusted to the standard measurement positions in the three sections.

Figure 6.2 Top View of Twin Phantom

A white cover is provided to tap the phantom during off-periods to prevent water evaporation and changes in the liquid parameters.

On the phantom top, three reference markers are provided to identify the phantom position with respect to the robot.

The phantom can be used with the following tissue simulating liquids:

^{*}Water-sugar based liquid

^{*}Glycol based liquids



4.3. Device Holder for SAM Twin Phantom

The SAR in the Phantom is approximately inversely proportional to the square of the distance between the source and the liquid surface. For a source in 5 mm distance, a positioning uncertainty of ± 0.5 mm would produce a SAR uncertainty of $\pm 20\%$. An accurate device position is therefore crucial for accurate and repeatable measurement. The position in which the devices must be measured, are defined by the standards.

The DASY5 device holder is designed to cope with different positions given in the standard. It has two scales for the device rotation (with respect to the body axis) and the device inclination (with respect to the line between the ear reference points). The rotation centers for both scales is the ear reference point (EPR).

Thus the device needs no repositioning when changing the angles.

The DASY5 device holder has been made out of low-loss POM material having the following dielectric parameters: relative permitti' $\varepsilon_{r'}$ =3 and loss tange δ = 0.02. The amount of dielectric material has been reduced in the closest vicinity of the device, since measurements have suggested that the influence of the clamp on the test results could thus be lowered.



Figure 4.3 Device Holder



4.4. DASY5 E-field Probe System

The SAR measurements were conducted with the dosimetric probe EX3DV4 (manufactured by SPEAG), designed in the classical triangul -ar configuration and optimized for dosimetric evaluation.

4.4.1. EX3DV4 Probe Specification



Figure 4.4 EX3DV4 E-field Probe

Construction Symmetrical design with triangular core

Built-in shielding against static charges PEEK enclosure material (resistant to

organic solvents, e.g., DGBE)

Calibration ISO/IEC 17025 calibration service

available

Frequency 10 MHz to > 6 GHz

Linearity: $\pm 0.2 \text{ dB}$ (30 MHz to 6 GHz)

Directivity ± 0.3 dB in HSL (rotation around probe axis)

 ± 0.5 dB in tissue material (rotation normal to

probe axis)

Dynamic Range 10 μ W/g to > 100 mW/g Linearity:

 ± 0.2 dB (noise: typically < 1 μ W/g)

Dimensions Overall length: PRS-T2 mm (Tip: 20 mm) Tip

diameter: 2.5 mm (Body: 12 mm) Typical distance from probe tip to dipole centers:

1 mm

Application High precision dosimetric

measurements in any exposure

scenario (e.g., very strong gradient fields). Only probe which enables compliance testing for frequencies up to 6 GHz with

precision of better 30%.



4.5. E-field Probe Calibration

Each probe is calibrated according to a dosimetric assessment procedure with accuracy better than $\pm 10\%$. The spherical isotropy was evaluated and found to be better than $\pm 0.25 dB$. The sensitivity parameters (NormX, NormY, NormZ), the diode compression parameter (DCP) and the conversion factor (ConvF) of the probe are tested.

The free space E-field from amplified probe outputs is determined in a test chamber. This is performed in a TEM cell for frequencies bellow 1 GHz, and in a wave guide above 1 GHz for free space. For the free space calibration, the probe is placed in the volumetric center of the cavity and at the proper orientation with the field. The probe is then rotated 360 degrees.

E-field temperature correlation calibration is performed in a flat phantom filled with the appropriate simulated brain tissue. The measured free space E-field in the medium correlates to temperature rise in a dielectric medium. For temperature correlation calibration a RF transparent thermistor-based temperature probe is used in conjunction with the E-field probe.

$$\mathbf{SAR} = \mathbf{C} \frac{\Delta T}{\Delta t}$$

Where: Δt = Exposure time (30 seconds), C = Heat capacity of tissue (brain or muscle), ΔT = Temperature increase due to RF exposure. Or

$$SAR = \frac{|E|^2 \sigma}{\rho}$$

Where:

 σ = Simulated tissue conductivity,

 ρ = Tissue density (kg/m3).



4.6. Scanning procedure

The DASY5 installation includes predefined files with recommended procedures for measurements and validation. They are read-only document files and destined as fully defined but unmeasured masks. All test positions (head or body-worn) are tested with the same configuration of test steps differing only in the grid definition for the different test positions.

The "reference" and "drift" measurements are located at the beginning and end of the batch process. They measure the field drift at one single point in the liquid over the complete procedure. The indicated drift is mainly the variation of the EUT's output power and should vary max. ± 5 %.

The "surface check" measurement tests the optical surface detection system of the DASY5 system by repeatedly detecting the surface with the optical and mechanical surface detector and comparing the results. The output gives the detecting heights of both systems, the difference between the two systems and the standard deviation of the detection repeatability. Air bubbles or refraction in the liquid due to separation of the sugar-water mixture gives poor repeatability (above ± 0.1 mm). To prevent wrong results tests are only executed when the liquid is free of air bubbles.

The difference between the optical surface detection and the actual surface depends on the Probe and is specified with each probe. (It does not depend on the surface reflectivity or the probe angle to the surface within $\pm 30^{\circ}$.)

Area Scan

The Area Scan is used as a fast scan in two dimensions to find the area of high field values before running a detailed measurement around the hot spot. Before starting the area scan a grid spacing of 15 mm x 15 mm is set. During the scan the distance of the probe to the phantom remains unchanged.

After finishing area scan, the field maxima within a range of 2 dB will be ascertained.

Zoom Scan

Zoom Scans are used to estimate the peak spatial SAR values within a cubic averaging volume containing 1 g and 10 g of simulated tissue. The default Zoom Scan is done by 7x7x7 points within a cube whose base is centered around the maxima found in the preceding area scan.



Spatial Peak Detection

The procedure for spatial peak SAR evaluation has been implemented and can determine values of masses of 1g and 10g, as well as for user-specific masses. The DASY5 system allows evaluations that combine measured data and robot positions, such as:

- ·maximum search
- ·extrapolation
- ·boundary correction
- ·peak search for averaged SAR

During a maximum search, global and local maxima searches are automatically performed in 2-D after each Area Scan measurement with at least 6 measurement points. It is based on the evaluation of the local SAR gradient calculated by the Quadratic Shepard's method. The algorithm will find the global maximum and all local maxima within -2 dB of the global maxima for all SAR distributions.

Extrapolation routines are used to obtain SAR values between the lowest measurement points and the inner phantom surface. The extrapolation distance is determined by the surface detection distance and the probe sensor offset. Several measurements at different distances are necessary for the extrapolation. Extrapolation routines require at least 10 measurement points in 3-D space. They are used in the Zoom Scan to obtain SAR values between the lowest measurement points and the inner phantom surface. The routine uses the modified Quadratic Shepard's method for extrapolation. For a grid using 7x7x7 measurement points with 5mm resolution amounting to 343 measurement points, the uncertainty of the extrapolation routines is less than 1% for 1g and 10g cubes.

A Z-axis scan measures the total SAR value at the x-and y-position of the maximum SAR value found during the cube 7x7x7 scan. The probe is moved away in z-direction from the bottom of the SAM phantom in 5mm steps.



5. DATA STORAGE AND EVALUATION

5.1. Data Storage

The DASY5 software stores the acquired data from the data acquisition electronics as raw data (in microvolt readings from the probe sensors), together with all necessary software parameters for thedata evaluation (probe calibration data, liquid parameters and device frequency and modulation data) in measurement files with the extension ".DA4". The software evaluates the desired unit and format for output each time the data is visualized or exported. This allows verification of the complete software setup even after the measurement and allows correction of incorrect parameter settings. For example, if a measurement has been performed with a wrong crest factor parameter in the device setup, the parameter can be corrected afterwards and the data can be re-evaluated.

The measured data can be visualized or exported in different units or formats, depending on the selected probe type ([V/m], [A/m], [C], [mW/g], [mW/cm], [dBrel], etc.). Some of these units are not available in certain situations or show meaningless results, e.g., a SAR output in a lossless media will always be zero. Raw data can also be exported to perform the evaluation with other software packages.

5.2. Data Evaluation by SEMCAD

The SEMCAD software automatically executes the following procedures to calculate the field units from the microvolt readings at the probe connector. The parameters used in the evaluation are stored in the configuration modules of the software:

Probe parameters: - Sensitivity Normi, ai0, ai1, ai2

Conversion factor ConvFiDiode compression point Dcpi

Device parameters: - Frequency f

- Crest factor cf

Media parameters: - Conductivity

- Density

These parameters must be set correctly in the software. They can be found in the component documents or they can be imported into the software from the configuration files issued for the DASY5 components. In the direct measuring mode of the multimeter option, the parameters of the actual system setup are used. In the scan visualization and export modes, the parameters stored in the corresponding document files are used.

The first step of the evaluation is a linearization of the filtered input signal to account for the compression characteristics of the detector diode. The compensation depends on the input signal, the diode type and the DC-transmission factor from the diode to the evaluation electronics.

If the exciting field is pulsed, the crest factor of the signal must be known to correctly compensate for peak power. The formula for each channel can be given as:

$$Vi = Ui + Ui2 \cdot c f / d c pi$$



With Vi = compensated signal of channel i (i = x, y, z)

Ui = input signal of channel i (i = x, y, z)

cf = crest factor of exciting field (DASY parameter)

dcpi = diode compression point (DASY parameter)

From the compensated input signals the primary field data for each channel can be evaluated:

E-field probes: $Ei = (Vi / Normi \cdot ConvF)1/2$

H-field probes: $Hi = (Vi)1/2 \cdot (ai0 + ai1f + ai2f2)/f$

With Vi = compensated signal of channel i (i = x, y, z)

Normi = sensor sensitivity of channel i (i = x, y, z)

ConvF = sensitivity enhancement in solution

aij = sensor sensitivity factors for H-field probes

f = carrier frequency [GHz]

Ei = electric field strength of channel i in V/m

Hi = magnetic field strength of channel i in A/m

The RSS value of the field components gives the total field strength (Hermitian magnitude):

$$Etot = (Ex2 + EY2 + Ez2)1/2$$

The primary field data are used to calculate the derived field units.

$$SAR = (Etot2 \cdot) / (\cdot 1000)$$

with

SAR = local specific absorption rate in mW/g

Etot = total field strength in V/m

= conductivity in [mho/m] or [Siemens/m]

= equivalent tissue density in g/cm³

Note that the density is normally set to 1 (or 1.06), to account for actual brain density rather than the density of the simulation liquid. The power flow density is calculated assuming the excitation field to be a free space field.

Ppwe = Etot2 / 3770 or $Ppwe = Htot2 \cdot 37.7$

with *Ppwe* = equivalent power density of a plane wave in mW/cm2

Etot = total electric field strength in V/m

Htot = total magnetic field strength in A/m



6. SYSTEM CHECK

The manufacturer calibrates the probes annually. Dielectric parameters of the tissue simulates were measured every day using the dielectric probe kit and the network analyzer. A system check measurement was made following the determination of the dielectric parameters of the simulates, using the dipole validation kit. A power level of 250 mW was supplied to the dipole antenna, which was placed under the flat section of the twin SAM phantom. The system check results (dielectric parameters and SAR values) are given in the ANNEX A.

System check results have to be equal or near the values determined during dipole calibration with the relevant liquids and test system ($\pm 10\%$).

System check is performed regularly on all frequency bands where tests are performed with the DASY5 system.

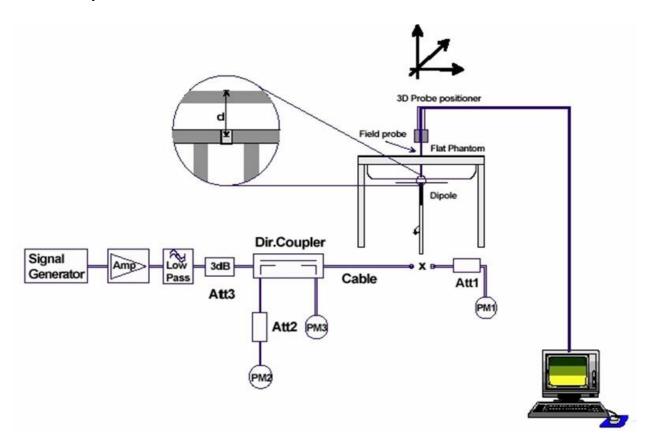


Figure 6.1: System Check Set-up





Figure 6.3: photos of system



7. TEST RESULTS

7.1. Output power

(Bluetooth BDR+EDR)

Test Mode	Frequency (MHz) Output power (dBm) Duty Cycle (%)		Maximum Tune-up Power (dBm)	
DH5	2402	8.39		8.5
DH5	2441	7.64	77.54	8.5
DH5	2480	7.11		8.5
2DH5	2402	1.74		2.5
2DH5	2441	1.47	77.72	2.5
2DH5	2480	1.60		2.5
3DH5	2402	1.77		2.5
3DH5	2441	1.46	77.82	2.5
3DH5	2480	1.57		2.5

(BLE)

Test Mode	Frequency (MHz)	Output power (dBm)	Duty Cycle (%)	Maximum Tune-up Power (dBm)
	2402	2.35		2.5
GFSK	2440	1.97	61.00	2.5
	2480	1.35		2.5



(SRD)

Test Mode	Frequency (MHz)	Output power (dBm)	Duty Cycle (%)	Maximum Tune-up Power (dBm)
DH5	2407	14.55		15
DH5	2441	13.68	77.23	15
DH5	2475	13.71		15
2DH5	2407	14.65		15
2DH5	2441	13.90	76.92	15
2DH5	2475	13.88		15
3DH5	2407	14.63		15
3DH5	2441	13.91	76.65	15
3DH5	2475	13.87		15

Note:

Use the data rate with the maximum output level for the SAR test.

7.2. System Check for Head Tissue simulating liquid

Frequency	Description	SAR((±10% v	W/kg) window)	Dielectric I (±10% v	Temp	
requency	Description	1g	10g	εr	σ(s/m)	°C
	Recommended value	52.70 47.43 – 57.97	24.20 21.78 – 26.62	39.20 35.28 – 43.12	1.80 1.62 – 1.98	/
2450MHz	Measurement value 2021-07-16	50.8	22.72	39.15	1.81	22.03

Note: Recommended Values used derive from the calibration certificate and 250 mW is used as feeding power to the calibrated dipole.



7.3. Test Results

		Dielectric Parameters (±10% window)					
Fre	equency		er	σ(s/m)			
		Measurement	Recommended	Measurement	Recommended		
		value	value	value	value		
	2402MHz	38.734		1.878			
	2402WIHZ	-1.19%		4.33%			
2450MHz	2441MHz	38.734	20.2	1.878	1.00		
(Bluetooth)		-1.19%	39.2	4.33%	1.80		
	2480MHz	38.579		1.917			
		-1.58%		6.50%			
	24073411	38.877		1.834			
	2407MHz	-0.82%		1.89%			
2450MHz	2441MII	38.734	20.2	1.878	1.00		
(SRD)	2441MHz	-1.19%	39.2	4.33%	1.80		
	2475MHz	38.61		1.911			
	24/5NIHZ	-1.51%		6.17%			



Figure 4.4: Liquid depth in the Flat Phantom



AUDIX Technology (Shenzhen) Co., Ltd.

BT3.0	Channel	Test Position	Output Power		Measured Results		Scaled-1		Scaled-Final		D
			Max. Scaled AV Power (dBm)	Measured AV Power (dBm)	SAR1g (W/kg)	SAR10g (W/kg)	SAR1g (W/kg)	SAR10g (W/kg)	SAR1g (W/kg)	SAR10g (W/kg)	Power Drift (dBm)
	СНО	Left	8.50	8.39	0.00485	0.0021	0.0050	0.0022	0.0064	0.0028	0.01
		Тор			0.020	0.00704	0.0205	0.007	0.0265	0.0093	0.18
	СН39	Тор	8.50	7.64	0.020	0.00731	0.0244	0.009	0.0314	0.0115	0.18
	CH78	Тор	8.50	7.11	0.024	0.00736	0.0331	0.010	0.0426	0.0131	0.20
SRD	2407	Left	15.00	14.63	0.027	0.013	0.0294	0.014	0.0384	0.0185	0.20
		Тор			0.063	0.020	0.0686	0.022	0.0895	0.0284	-0.10
	2441	Тор	15.00	13.91	0.052	0.019	0.0668	0.024	0.0872	0.0319	-0.11
	2475	Тор	15.00	13.87	0.066	0.021	0.0856	0.027	0.1117	0.0355	0.10

Conclusion: PASS

Note:

Factor= Max. Scaled AV Power(W)/Measured Power(W)
Scaled SAR-1= Measured SAR*Factor
Scaled-Final= Scaled SAR-1*(1/Duty Cycle)

The Max.Reported SAR : 0. 1117W/kg for 1g SAR



ANNEX A: SYSTEM CHECK RESULTS

Test Laboratory: Audix SAR Lab Date: 16/07/2021

CW 2450

DUT: Dipole 2450 MHz D2450V2; Type: D2450V2; Serial: D2450V2 - SN:862 Communication System: UID 0, CW (0); Communication System Band: D2450 (2450.0

MHz); Frequency: 2450 MHz; Communication System PAR: 0 dB

Medium parameters used: f = 2450 MHz; $\sigma = 1.81$ S/m; $\varepsilon_r = 39.15$; $\rho = 1000$ kg/m³

Phantom section: Flat Section DASY5 Configuration:

• Probe: EX3DV4 - SN3767; ConvF(7.55, 7.55, 7.55); Calibrated: 26/04/2021;

• Modulation Compensation:

• Sensor-Surface: 4mm (Mechanical Surface Detection)

• Electronics: DAE4 Sn899; Calibrated: 23/03/2021

Phantom: SAM1; Type: SAM; Serial: TP-1543

Measurement SW: DASY52, Version 52.8 (8); SEMCAD X Version 14.6.10 (7331)

Configuration/CW 2450MHz/Area Scan (61x71x1): Interpolated grid: dx=2.000 mm, dy=2.000 mm

Maximum value of SAR (interpolated) = 16.3 W/kg

Configuration/CW 2450MHz/Zoom Scan (7x7x7)/Cube 0: Measurement grid:


dx=5mm, dy=5mm, dz=5mm

Reference Value = 88.50 V/m; Power Drift = -0.07 dB

Peak SAR (extrapolated) = 28.6 W/kg

 $\mathrm{SAR}(1~\mathrm{g}) = 12.7~\mathrm{W/kg};~\mathrm{SAR}(10~\mathrm{g}) = 5.68~\mathrm{W/kg}$

Maximum value of SAR (measured) = 14.5 W/kg

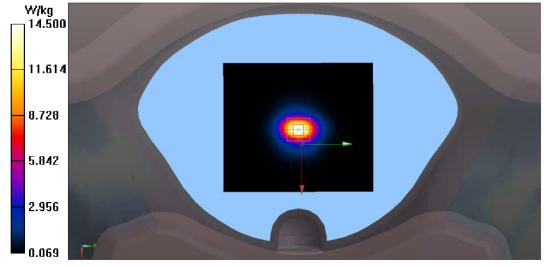



ANNEX B: TEST PLOTS

Bluetooth BDR+EDR:

Test Laboratory: Audix SAR Lab Date: 16/07/2021

CH0(2402MHz Left)

DUT: Portable Bluetooth Speaker M/N:FLIP6T

Communication System: UID 0, Blue Tooth (0); Communication System Band: Mid;

Frequency: 2441 MHz; Communication System PAR: 0 dB

Medium parameters used (interpolated): f = 2441 MHz; $\sigma = 1.878$ S/m; $\epsilon_r = 38.734$; $\rho = 1.878$ Medium parameters used (interpolated): $\epsilon_r = 1.878$ S/m; $\epsilon_r = 38.734$; $\epsilon_r = 38.734$;

 1000 kg/m^3

Phantom section: Flat Section DASY5 Configuration:

• Probe: EX3DV4 - SN3767; ConvF(7.55, 7.55, 7.55); Calibrated: 26/04/2021;

• Modulation Compensation:

• Sensor-Surface: 4mm (Mechanical Surface Detection)

Electronics: DAE4 Sn899; Calibrated: 23/03/2021

• Phantom: SAM1; Type: SAM; Serial: TP-1543

Measurement SW: DASY52, Version 52.8 (8); SEMCAD X Version 14.6.10 (7331)

Configuration/CH0(2402MHz Left)/Area Scan (51x51x1): Interpolated grid:

dx=1.500 mm, dy=1.500 mm

Maximum value of SAR (interpolated) = 0.00599 W/kg

Configuration/CH0(2402MHz Left)/Zoom Scan (5x5x7)/Cube 0: Measurement


grid: dx=8mm, dy=8mm, dz=5mm

Reference Value = 0.9060 V/m; Power Drift = 0.01 dB

Peak SAR (extrapolated) = 0.0190 W/kg

SAR(1 g) = 0.00485 W/kg; SAR(10 g) = 0.0021 W/kg

Maximum value of SAR (measured) = 0.00578 W/kg

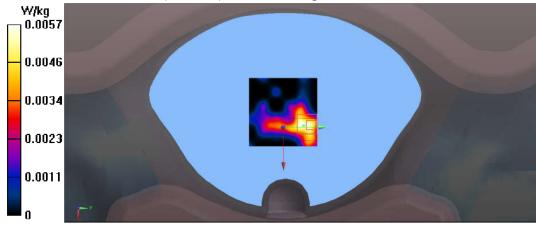



CH0(2402MHz Top)

DUT: Portable Bluetooth Speaker M/N:FLIP6T

Communication System: UID 0, Blue Tooth (0); Communication System Band: Mid;

Frequency: 2441 MHz; Communication System PAR: 0 dB

Medium parameters used (interpolated): f = 2441 MHz; $\sigma = 1.878$ S/m; $\epsilon_r = 38.734$; $\rho = 1.878$ S/m; $\epsilon_r = 38.734$; $\epsilon_r = 38.734$;

 1000 kg/m^3

Phantom section: Flat Section DASY5 Configuration:

• Probe: EX3DV4 - SN3767; ConvF(7.55, 7.55, 7.55); Calibrated: 26/04/2021;

• Modulation Compensation:

• Sensor-Surface: 4mm (Mechanical Surface Detection)

Electronics: DAE4 Sn899; Calibrated: 23/03/2021

Phantom: SAM1; Type: SAM; Serial: TP-1543

Measurement SW: DASY52, Version 52.8 (8); SEMCAD X Version 14.6.10 (7331)

Configuration/CH0(2402MHz Top)/Area Scan (51x51x1): Interpolated grid:

dx=1.500 mm, dy=1.500 mm

Maximum value of SAR (interpolated) = 0.0331 W/kg

Configuration/CH0(2402MHz Top)/Zoom Scan (5x5x7)/Cube 0: Measurement

grid: dx=8mm, dy=8mm, dz=5mm

Reference Value = 1.643 V/m; Power Drift = 0.18 dB

Peak SAR (extrapolated) = 0.0460 W/kg

SAR(1 g) = 0.020 W/kg; SAR(10 g) = 0.00704 W/kg Maximum value of SAR (measured) = 0.0293 W/kg

0.029 0.023 0.018 0.012 0.0058



CH39(2441MHz Top)

DUT: Portable Bluetooth Speaker M/N:FLIP6T

Communication System: UID 0, Blue Tooth (0); Communication System Band: Mid;

Frequency: 2441 MHz; Communication System PAR: 0 dB

Medium parameters used (interpolated): f = 2441 MHz; $\sigma = 1.878$ S/m; $\epsilon_r = 38.734$; $\rho = 1.878$ S/m; $\epsilon_r = 38.734$; $\epsilon_r = 38.734$;

 1000 kg/m^3

Phantom section: Flat Section DASY5 Configuration:

Probe: EX3DV4 - SN3767; ConvF(7.55, 7.55, 7.55); Calibrated: 26/04/2021;

• Modulation Compensation:

• Sensor-Surface: 4mm (Mechanical Surface Detection)

Electronics: DAE4 Sn899; Calibrated: 23/03/2021

• Phantom: SAM1; Type: SAM; Serial: TP-1543

Measurement SW: DASY52, Version 52.8 (8); SEMCAD X Version 14.6.10 (7331)

Configuration/CH39(2441MHz Top)/Area Scan (51x51x1): Interpolated grid:

dx=1.500 mm, dy=1.500 mm

Maximum value of SAR (interpolated) = 0.0305 W/kg


Configuration/CH39(2441MHz Top)/Zoom Scan (5x5x7)/Cube 0: Measurement

grid: dx=8mm, dy=8mm, dz=5mm

Reference Value = 1.747 V/m; Power Drift = 0.18 dB

Peak SAR (extrapolated) = 0.0440 W/kg

SAR(1 g) = 0.020 W/kg; SAR(10 g) = 0.00731 W/kg

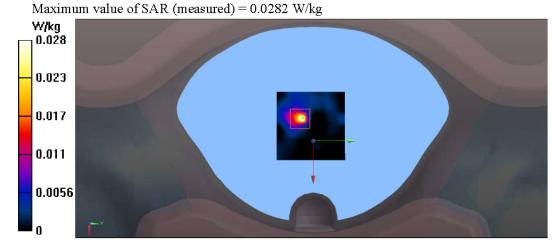



CH78(2480MHz Top)

DUT: Portable Bluetooth Speaker M/N:FLIP6T

Communication System: UID 0, Blue Tooth (0); Communication System Band: Mid;

Frequency: 2480 MHz; Communication System PAR: 0 dB

Medium parameters used: f = 2480 MHz; $\sigma = 1.917$ S/m; $\epsilon_r = 38.579$; $\rho = 1000$ kg/m³

Phantom section: Flat Section DASY5 Configuration:

• Probe: EX3DV4 - SN3767; ConvF(7.55, 7.55, 7.55); Calibrated: 26/04/2021;

• Modulation Compensation:

• Sensor-Surface: 4mm (Mechanical Surface Detection)

• Electronics: DAE4 Sn899; Calibrated: 23/03/2021

Phantom: SAM1; Type: SAM; Serial: TP-1543

• Measurement SW: DASY52, Version 52.8 (8); SEMCAD X Version 14.6.10 (7331)

Configuration/CH78(2480MHz Top)/Area Scan (51x51x1): Interpolated grid:

dx=1.500 mm, dy=1.500 mm

Maximum value of SAR (interpolated) = 0.0332 W/kg


Configuration/CH78(2480MHz Top)/Zoom Scan (5x5x7)/Cube 0: Measurement

grid: dx=8mm, dy=8mm, dz=5mm

Reference Value = 1.534 V/m; Power Drift = 0.20 dB

Peak SAR (extrapolated) = 0.0930 W/kg

SAR(1 g) = 0.024 W/kg; SAR(10 g) = 0.00736 W/kg Maximum value of SAR (measured) = 0.0298 W/kg

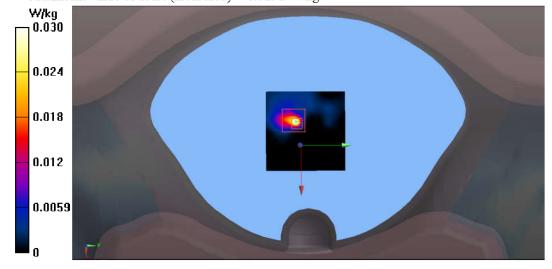



SRD:

Test Laboratory: Audix SAR Lab Date: 16/07/2021

CH(2407MHz Left)

DUT: Portable Bluetooth Speaker M/N:FLIP6T

Communication System: UID 0, Blue Tooth (0); Communication System Band: Mid;

Frequency: 2407 MHz; Communication System PAR: 0 dB

Medium parameters used (interpolated): f = 2407 MHz; $\sigma = 1.834$ S/m; $\epsilon_r = 38.877$; $\rho = 1.834$ S/m; $\epsilon_r = 38.877$; $\epsilon_r = 38.877$;

 1000 kg/m^3

Phantom section: Flat Section DASY5 Configuration:

• Probe: EX3DV4 - SN3767; ConvF(7.55, 7.55, 7.55); Calibrated: 26/04/2021;

Modulation Compensation:

• Sensor-Surface: 4mm (Mechanical Surface Detection)

Electronics: DAE4 Sn899; Calibrated: 23/03/2021

Phantom: SAM1; Type: SAM; Serial: TP-1543

Measurement SW: DASY52, Version 52.8 (8); SEMCAD X Version 14.6.10 (7331)

Configuration/CH(2407MHz Left)/Area Scan (51x51x1): Interpolated grid:

dx=1.500 mm, dy=1.500 mm

Maximum value of SAR (interpolated) = 0.0261 W/kg


Configuration/CH(2407MHz Left)/Zoom Scan (5x5x7)/Cube 0: Measurement

grid: dx=8mm, dy=8mm, dz=5mm

Reference Value = 2.769 V/m; Power Drift = 0.20 dB

Peak SAR (extrapolated) = 0.0570 W/kg

SAR(1 g) = 0.027 W/kg; SAR(10 g) = 0.013 W/kgMaximum value of SAR (measured) = 0.0316 W/kg

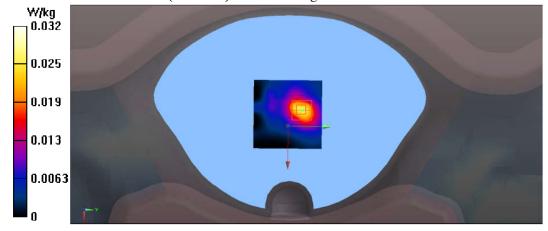



CH(2407MHz Top)

DUT: Portable Bluetooth Speaker M/N:FLIP6T

Communication System: UID 0, Blue Tooth (0); Communication System Band: Mid;

Frequency: 2407 MHz; Communication System PAR: 0 dB

Medium parameters used (interpolated): f = 2407 MHz; $\sigma = 1.834$ S/m; $\epsilon_r = 38.877$; $\rho =$

 1000 kg/m^3

Phantom section: Flat Section DASY5 Configuration:

Probe: EX3DV4 - SN3767; ConvF(7.55, 7.55, 7.55); Calibrated: 26/04/2021;

Modulation Compensation:

• Sensor-Surface: 4mm (Mechanical Surface Detection)

Electronics: DAE4 Sn899; Calibrated: 23/03/2021

• Phantom: SAM1; Type: SAM; Serial: TP-1543

Measurement SW: DASY52, Version 52.8 (8); SEMCAD X Version 14.6.10 (7331)

Configuration/CH(2407MHz Top)/Area Scan (51x51x1): Interpolated grid:

dx=1.500 mm, dy=1.500 mm

Maximum value of SAR (interpolated) = 0.0624 W/kg


Configuration/CH(2407MHz Top)/Zoom Scan (5x5x7)/Cube 0: Measurement

grid: dx=8mm, dy=8mm, dz=5mm

Reference Value = 2.655 V/m; Power Drift = -0.10 dB

Peak SAR (extrapolated) = 0.312 W/kg

SAR(1 g) = 0.063 W/kg; SAR(10 g) = 0.020 W/kgMaximum value of SAR (measured) = 0.0619 W/kg

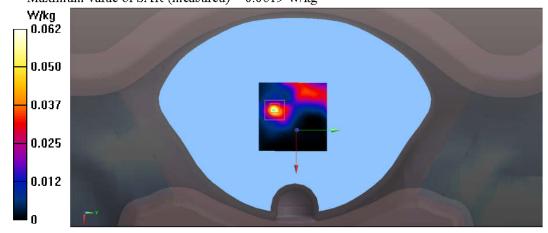



CH(2441MHz Top)

DUT: Portable Bluetooth Speaker M/N:FLIP6T

Communication System: UID 0, Blue Tooth (0); Communication System Band: Mid;

Frequency: 2441 MHz; Communication System PAR: 0 dB

Medium parameters used (interpolated): f = 2441 MHz; $\sigma = 1.878$ S/m; $\epsilon_r = 38.734$; $\rho =$

 1000 kg/m^3

Phantom section: Flat Section DASY5 Configuration:

Probe: EX3DV4 - SN3767; ConvF(7.55, 7.55, 7.55); Calibrated: 26/04/2021;

• Modulation Compensation:

• Sensor-Surface: 4mm (Mechanical Surface Detection)

Electronics: DAE4 Sn899; Calibrated: 23/03/2021

Phantom: SAM1; Type: SAM; Serial: TP-1543

• Measurement SW: DASY52, Version 52.8 (8); SEMCAD X Version 14.6.10 (7331)

Configuration/CH(2441MHz Top)/Area Scan (51x51x1): Interpolated grid:

dx=1.500 mm, dy=1.500 mm

Maximum value of SAR (interpolated) = 0.0684 W/kg


Configuration/CH(2441MHz Top)/Zoom Scan (5x5x7)/Cube 0: Measurement

grid: dx=8mm, dy=8mm, dz=5mm

Reference Value = 2.362 V/m; Power Drift = -0.11 dB

Peak SAR (extrapolated) = 0.143 W/kg

SAR(1 g) = 0.052 W/kg; SAR(10 g) = 0.019 W/kg Maximum value of SAR (measured) = 0.0683 W/kg

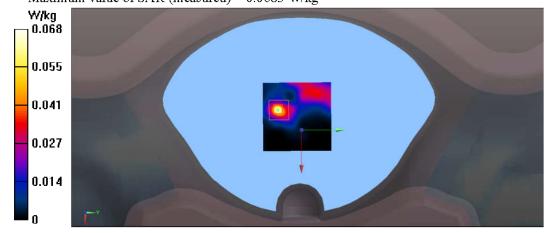



CH(2475MHz Top)

DUT: Portable Bluetooth Speaker M/N:FLIP6T

Communication System: UID 0, Blue Tooth (0); Communication System Band: Mid;

Frequency: 2475 MHz; Communication System PAR: 0 dB

Medium parameters used (interpolated): f = 2475 MHz; $\sigma = 1.911$ S/m; $\epsilon_r = 38.61$; $\rho = 1000$

kg/m³

Phantom section: Flat Section DASY5 Configuration:

• Probe: EX3DV4 - SN3767; ConvF(7.55, 7.55, 7.55); Calibrated: 26/04/2021;

• Modulation Compensation:

Sensor-Surface: 4mm (Mechanical Surface Detection)

Electronics: DAE4 Sn899; Calibrated: 23/03/2021

• Phantom: SAM1; Type: SAM; Serial: TP-1543

Measurement SW: DASY52, Version 52.8 (8); SEMCAD X Version 14.6.10 (7331)

Configuration/CH(2475MHz Top)/Area Scan (51x51x1): Interpolated grid:

dx=1.500 mm, dy=1.500 mm

Maximum value of SAR (interpolated) = 0.0712 W/kg


Configuration/CH(2475MHz Top)/Zoom Scan (5x5x7)/Cube 0: Measurement

grid: dx=8mm, dy=8mm, dz=5mm

Reference Value = 2.196 V/m; Power Drift = 0.10 dB

Peak SAR (extrapolated) = 0.295 W/kg

SAR(1 g) = 0.066 W/kg; SAR(10 g) = 0.021 W/kg Maximum value of SAR (measured) = 0.0697 W/kg

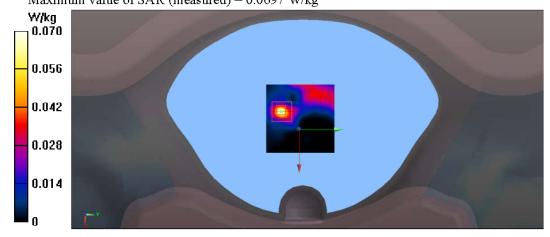



ANNEX C: DASY CABLIBRATION CERTIFICATE



In Collaboration with







Add: No.51 Xueyuan Road, Haidian District, Beijing, 100191, China Tel: +86-10-62304633-2079 E-mail: cttl@chinattl.com

Client

Fax: +86-10-62304633-2504 http://www.chinattl.cn

> Certificate No: Z20-60216

CALIBRATION CERTIFICATE

Audix

Object D2450V2 - SN: 862

Calibration Procedure(s) FF-Z11-003-01

Calibration Procedures for dipole validation kits

Calibration date: June 15, 2020

This calibration Certificate documents the traceability to national standards, which realize the physical units of measurements(SI). The measurements and the uncertainties with confidence probability are given on the following pages and are part of the certificate.

All calibrations have been conducted in the closed laboratory facility: environment temperature(22±3)°C and humidity<70%.

Calibration Equipment used (M&TE critical for calibration)

ID#	Cal Date(Calibrated by, Certificate No.)	Scheduled Calibration		
106277	04-Sep-19 (CTTL, No.J19X07825)	Sep-20		
104291	04-Sep-19 (CTTL, No.J19X07825)	Sep-20		
SN 7514	27-Sep-19(CTTL-SPEAG,No.Z19-60306)	Sep-20		
SN 1555	22-Aug-19(CTTL-SPEAG,No.Z19-60295)	Aug-20		
ID#	Cal Date(Calibrated by, Certificate No.)	Scheduled Calibration		
MY49071430	25-Feb-20 (CTTL, No.J20X00516)	Feb-21		
MY46107873	10-Feb-20 (CTTL, No.J20X00515)	Feb-21		
	106277 104291 SN 7514 SN 1555 ID # MY49071430	106277 04-Sep-19 (CTTL, No.J19X07825) 104291 04-Sep-19 (CTTL, No.J19X07825) SN 7514 27-Sep-19(CTTL-SPEAG,No.Z19-60306) SN 1555 22-Aug-19(CTTL-SPEAG,No.Z19-60295) ID# Cal Date(Calibrated by, Certificate No.) MY49071430 25-Feb-20 (CTTL, No.J20X00516)		

Name Function Calibrated by: Zhao Jing SAR Test Engineer Reviewed by: SAR Test Engineer Lin Hao

Approved by: Qi Dianyuan SAR Project Leader

Issued: June 21, 2020

This calibration certificate shall not be reproduced except in full without written approval of the laboratory.

Certificate No: Z20-60216

Page 1 of 8