

802 N. Twin Oaks Valley Road, Suite 105 • San Marcos, CA 92069 • U.S.A. TEL (760) 471-2100 • FAX (760) 471-2121 http://www.rfexposurelab.com

# CERTIFICATE OF COMPLIANCE SAR EVALUATION

Tait Limited 245 Wooldridge Road Harewood

Christchurch 8051 New Zealand

Aug. 6-8, 2019, Dec. 14, 2020 Dates of Test: Test Report Number: SAR.20190805 Revision A

FCC ID: CASTPDH7C IC Certificate: 737A-TPDH7C TPDH7C Model(s):

Test Sample: Engineering Unit Same as Production

Serial Number: 26111476

Equipment Type: Push-To-Talk Handheld Radio for Occupational Use Classification: Portable Transmitter Next to Face and Body

TX Frequency Range: 450 - 520 MHz; 2402 - 2480 MHz

Frequency Tolerance: ± 0.5 ppm

Maximum RF Output: 450 MHz - 36.02 dBm; 2450 MHz - 12.04 dBm Conducted

Signal Modulation:

Audio Accessories:

Body Worn Accessories: Model T03-00038-0001, T03-00038-0002, T03-00038-0003, T03-00038-0004, T03-00038-0005,

T03-00038-0006, T03-00038-0007, T03-00038-0008, T03-00038-0009, T03-00038-0010, T03-00038-0011, T03-00038-0012, T03-00038-0013, T03-00038-0014, T03-00038-0015, T03-00038-0016, T03-00038-0017, T03-00038-0018, T03-00038-0019, T03-00038-0020, T03-00038-0021, T03-00038-0022, T03-00038-0023, T03-00038-0024, T03-00038-0025, T03-00038-0026, T03-00038-0027, T03-00038-0028, T03-00038-0029, T03-00038-0030, T03-00038-0031, T03-00038-0032, T03-00038-0033, T03-00038-0034, T03-00038-0035, T03-00038-0036, T03-00038-0037, TPA-CA-201, TPA-CA-206, TPA-CA-207, TPA-CA-208

Model T03-00045-Dxxx, T03-00045-Exxx, T03-00045-Fxxx, T03-00045-Jxxx, T03-00045-Kxxx,

T03-00045-Lxxx, T03-00045-Mxxx, T03-00045-Nxxx, T03-00046-Exxx, T03-00046-Fxxx, T03-00046-Gxxx, T03-00046-Hxxx, T03-00046-Jxxx, T03-00047-Axxx, T03-00047-Bxxx, T03-00047-Cxxx, T03-00086-01xx, T03-00086-02xx, T03-00086-03xx, T03-00120-xAAD, T03-00120-xAAE, T03-00120-xAAJ, T03-00053-0451,

Antenna: Model TPA-AN-012, TPA-AN-015

Model T03-00011-Axxx, T03-00011-Bxxx, T03-00011-Cxxx, T03-00011-Exxx (where x denotes different Battery:

regulatory approvals and suppliers)

Application Type: Certification FCC Rule Parts: Part 2.90

KDB Test Methodology: KDB 447498 DO1 v06, KDB 643646 D01 v01r03, KDB 865664 D01 v01r04, KDB 865664 D02 v01r01

RSS-102 Issue 5, Safety Code 6 Industry Canada:

Maximum SAR Value: 2.60 W/kg for Face; 4.97 W/kg for Body Reported

Simultaneous SAR Value: 0.45 for Face: 0.75 for Body Limit Ratio Separation Distance: 25 mm for Face; 0 mm for Body

This wireless mobile and/or portable device has been shown to be compliant for localized specific absorption rate (SAR) for uncontrolled environment/general exposure limits specified in ANSI/IEEE Std. C95.1-1992 and had been tested in accordance with the measurement procedures specified in IEEE 1528-2013 and EN/IEC 62209:2010 (See test report).

I attest to the accuracy of the data. All measurements were performed by myself or were made under my supervision and are correct to the best of my knowledge and belief. I assume full responsibility for the completeness of these measurements and vouch for the qualifications of all persons taking them.

RF Exposure Lab, LLC certifies that no party to this application is subject to a denial of Federal benefits that includes FCC benefits pursuant to Section 5301 of the Anti-Drug Abuse Act of 1988, 21 U.S.C. 853(a).



Jay M. Moulton Vice President





# **Table of Contents**

1.	Introduction	4
	SAR Definition [5]	5
2.	SAR Measurement Setup	6
	Robotic System	6
	System Hardware	6
	System Electronics	7
	Probe Measurement System	7
3.	Probe and Dipole Calibration	.15
4.	Phantom & Simulating Tissue Specifications	.16
	Head & Body Simulating Mixture Characterization	.16
5.	ANSI/IEEE C95.1 – 1992 RF Exposure Limits [2]	.17
	Uncontrolled Environment	.17
	Controlled Environment	.17
6.	Measurement Uncertainty	.18
7.	System Validation	.19
	Tissue Verification	.19
	Test System Verification	.19
8.	SAR Test Data Summary	.20
	Procedures Used To Establish Test Signal	.20
	Device Test Condition	.20
	SAR Data Summary – Head SAR Face Measurements	.38
	SAR Data Summary – Body SAR Measurements	.39
	SAR Data Summary – Simultaneous Evaluation	
9.	Test Equipment List	.41
10	). Conclusion	.42
11	. References	.43
Αŗ	ppendix A – System Validation Plots and Data	.44
Αŗ	pendix B – SAR Test Data Plots	.50
Αŗ	ppendix C – SAR Test Setup Photos	.53
Αŗ	ppendix D – Probe Calibration Data Sheets	.61
Αŗ	ppendix E – Dipole Calibration Data Sheets	.81
	ppendix F – Phantom Calibration Data Sheets	
	pendix G – Validation Summary1	



Comment/Revision	Date
Original Release	September 17, 2019
Revision A – Add Battery Exxx and Audio Accessories	December 23, 2020



## 1. Introduction

This measurement report shows compliance of the Tait Limited Model(s) TPDH7C FCC ID: CASTPDH7C with FCC Part 2, 1093, ET Docket 93-62 Rules for mobile and portable devices and IC Certificate: 737A-TPDH7C with RSS102 Issue 5 & Safety Code 6. The FCC have adopted the guidelines for evaluating the environmental effects of radio frequency radiation in ET Docket 93-62 on August 6, 1996 to protect the public and workers from the potential hazards of RF emissions due to FCC regulated portable devices. [1], [6]

The test results recorded herein are based on a single type test of Tait Limited Model TPDH7C and therefore apply only to the tested sample.

The test procedures and limits, as described in ANSI C95.1 – 1992 Standard for Safety Levels with Respect to Human Exposure to Radio Frequency Electromagnetic Fields, 3 kHz to 300 GHz [2], ANSI C95.3 – 2002 Recommended Practice for the Measurement of Potentially Hazardous Electromagnetic Fields [3], , IEEE Std.1528 – 2013 Recommended Practice [4], and Industry Canada Safety Code 6 Limits of Human Exposure to Radiofrequency Electromagnetic Fields in the Frequency Range from 3kHz to 300 GHz were employed.

The following table indicates all the wireless technologies operating in the Model TPDH7C PTT. The table also shows the tolerance for the power level for each mode.

Band	Technology	Class	Nominal Power dBm	Setpoint Nominal Power dBm	Tolerance dBm	Lower Tolerance dBm	Upper Tolerance dBm
450 MHz	FM	N/A	N/A	N/A	N/A	N/A	36.02
2450 MHz	Bluetooth	N/A	N/A	N/A	N/A	N/A	12.04



# **SAR Definition [5]**

Specific Absorption Rate is defined as the time derivative (rate) of the incremental energy (dW) absorbed by (dissipated in) an incremental mass (dm) contained in a volume element (dV) of a given density ( $\rho$ ).

$$SAR = \frac{d}{dt} \left( \frac{dW}{dm} \right) = \frac{d}{dt} \left( \frac{dW}{\rho dV} \right)$$

SAR is expressed in units of watts per kilogram (W/kg). SAR can be related to the electric field at a point by

$$SAR = \frac{\sigma \mid E \mid^2}{\rho}$$

where:

 $\sigma$  = conductivity of the tissue (S/m)

 $\rho$  = mass density of the tissue (kg/m<sup>3</sup>)

E = rms electric field strength (V/m)



# 2. SAR Measurement Setup

# **Robotic System**

These measurements are performed using the DASY52 automated dosimetric assessment system. The DASY52 is made by Schmid & Partner Engineering AG (SPEAG) in Zurich, Switzerland and consists of high precision robotics system (Staubli), robot controller, Intel Core2 computer, near-field probe, probe alignment sensor, and the generic twin phantom containing the brain equivalent material. The robot is a six-axis industrial robot performing precise movements to position the probe to the location (points) of maximum electromagnetic field (EMF) (see Fig. 2.1).

## **System Hardware**

A cell controller system contains the power supply, robot controller teach pendant (Joystick), and a remote control used to drive the robot motors. The PC consists of the HP Intel Core2 computer with Windows XP system and SAR Measurement Software DASY52, A/D interface card, monitor, mouse, and keyboard. The Staubli Robot is connected to the cell controller to allow software manipulation of the robot. A data acquisition electronic (DAE) circuit that performs the signal amplification, signal multiplexing, AD-conversion, offset measurements, mechanical surface detection, collision detection, etc. is connected to the Electro-optical coupler (EOC). The EOC performs the conversion from the optical into digital electric signal of the DAE and transfers data to the PC plug-in card.

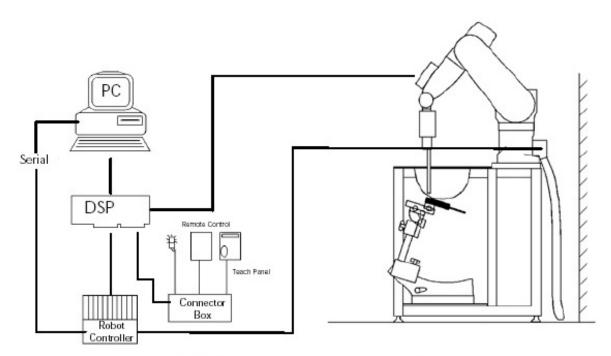


Figure 2.1 SAR Measurement System Setup



# **System Electronics**

The DAE4 consists of a highly sensitive electrometer-grade preamplifier with auto-zeroing, a channel and gain-switching multiplexer, a fast 16 bit AD-converter and a command decoder and control logic unit. Transmission to the PC-card is accomplished through an optical downlink for data and status information and an optical uplink for commands and clock lines. The mechanical probe mounting device includes two different sensor systems for frontal and sidewise probe contacts. They are also used for mechanical surface detection and probe collision detection. The robot uses its own controller with a built in VME-bus computer. The system is described in detail in.

# **Probe Measurement System**

The SAR measurements were conducted with the dosimetric probe ES3DV3, designed in the classical triangular configuration (see Fig. 2.2) and optimized for dosimetric evaluation. The probe is constructed using the thick film technique; with printed resistive lines on ceramic substrates. The probe is equipped with an optical multi fiber line ending at the front of the probe tip. (see Fig. 2.3) It is connected to the EOC box on the robot arm and provides an automatic detection of the phantom surface. Half of the fibers are connected to a pulsed infrared transmitter, the other half to a synchronized receiver. As the probe approaches the surface, the reflection from the surface produces a coupling from the transmitting to the receiving fibers. This reflection increases first during the approach, reaches maximum and then decreases. If the probe is flatly touching the surface, the coupling is zero. The distance of the coupling maximum to the surface is independent of the surface reflectivity and largely independent of the surface to probe angle. The DASY52 software reads the reflection during a software approach and looks for the maximum using a 2nd order fitting. The approach is stopped at reaching the maximum.



**DAE System** 



# **Probe Specifications**

**Calibration:** In air from 10 MHz to 6.0 GHz

In brain and muscle simulating tissue at Frequencies of 450 MHz, 835 MHz, 1750 MHz, 1900 MHz, 2450 MHz, 2600 MHz, 3500 MHz, 5200

MHz, 5300 MHz, 5600 MHz, 5800 MHz

Frequency: 10 MHz to 6 GHz

**Linearity:** ±0.2dB (30 MHz to 6 GHz)

**Dynamic:** 10 mW/kg to 100 W/kg

Range: Linearity: ±0.2dB

**Dimensions:** Overall length: 330 mm

**Tip length:** 20 mm


Body diameter: 12 mm

Tip diameter: 2.5 mm

Distance from probe tip to sensor center: 1 mm

**Application:** SAR Dosimetry Testing

Compliance tests of wireless device

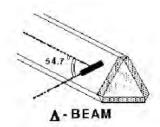

**Figure 2.2 Triangular Probe Configurations** 



Figure 2.3 Probe Thick-Film Technique



#### **Probe Calibration Process**

#### **Dosimetric Assessment Procedure**

Each probe is calibrated according to a dosimetric assessment procedure described in with accuracy better than +/- 10%. The spherical isotropy was evaluated with the procedure described in and found to be better than +/-0.25dB. The sensitivity parameters (Norm X, Norm Y, Norm Z), the diode compression parameter (DCP) and the conversion factor (Conv F) of the probe is tested.

#### **Free Space Assessment**

The free space E-field from amplified probe outputs is determined in a test chamber. This is performed in a TEM cell for frequencies below 1 GHz, and in a waveguide above 1GHz for free space. For the free space calibration, the probe is placed in the volumetric center of the cavity at the proper orientation with the field. The probe is then rotated 360 degrees until the three channels show the maximum reading. The power density readings equates to 1 mW/cm<sup>2</sup>.

#### Temperature Assessment \*

E-field temperature correlation calibration is performed in a flat phantom filled with the appropriate simulated brain tissue. The measured free space E-field in the medium, correlates to temperature rise in a dielectric medium. For temperature correlation calibration a RF transparent thermistor based temperature probe is used in conjunction with the E-field probe

$$SAR = C \frac{\Delta T}{\Delta t}$$

$$SAR = \frac{\left|E\right|^2 \cdot \sigma}{\rho}$$

where: where:

 $\Delta t$  = exposure time (30 seconds),

 $\sigma$  = simulated tissue conductivity,

C = heat capacity of tissue (brain or muscle),

 $\rho$  = Tissue density (1.25 g/cm<sup>3</sup> for brain tissue)

 $\Delta T$  = temperature increase due to RF exposure.

SAR is proportional to  $\Delta T \, / \, \Delta t$  , the initial rate of tissue

heating, before thermal diffusion takes place.

Now it's possible to quantify the electric field in the simulated tissue by equating the thermally derived SAR to the E- field;

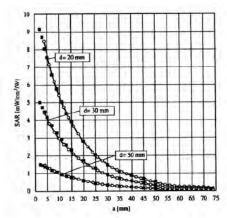


Figure 2.4 E-Field and Temperature Measurements at 900MHz

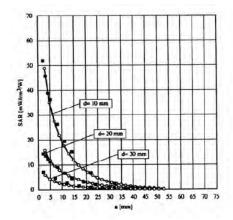


Figure 2.5 E-Field and Temperature Measurements at 1800MHz



### **Data Extrapolation**

The DASY52 software automatically executes the following procedures to calculate the field units from the microvolt readings at the probe connector. The first step of the evaluation is a linearization of the filtered input signal to account for the compression characteristics of the detector diode. The compensation depends on the input signal, the diode type and the DC-transmission factor from the diode to the evaluation electronics. If the exciting field is pulsed, the crest factor of the signal must be known to correctly compensate for peak power. The formula for each channel can be given like below:

with 
$$V_i = \text{compensated signal of channel i}$$

$$U_i = \text{input signal of channel i}$$

$$U_i = \text{input signal of channel i}$$

$$C = \text{crest factor of exciting field}$$

$$C = \text{diode compression point}$$

(i=x,y,z)U; = input signal of channel i (i=x,y,z)cf = crest factor of exciting field (DASY parameter) dcp; = diode compression point (DASY parameter)

From the compensated input signals the primary field data for each channel can be evaluated:

V<sub>i</sub> = compensated signal of channel i (i = x,y,z) E-field probes: Norm, = sensor sensitivity of channel i (i = x,y,z)μV/(V/m)2 for E-field probes ConvF = sensitivity of enhancement in solution = electric field strength of channel i in V/m

The RSS value of the field components gives the total field strength (Hermetian magnitude):

$$E_{tot} = \sqrt{E_x^2 + E_y^2 + E_z^2}$$

The primary field data are used to calculate the derived field units.

 local specific absorption rate in W/g  $SAR = E_{tot}^2 \cdot \frac{\sigma}{\rho \cdot 1000}$ = total field strength in V/m = conductivity in [mho/m] or [Siemens/m] = equivalent tissue density in g/cm3

The power flow density is calculated assuming the excitation field to be a free space field.

 $P_{pur} = \frac{E_{tot}^2}{2770}$ = equivalent power density of a plane wave in W/cm² = total electric field strength in V/m



#### Scanning procedure

- The DASY installation includes predefined files with recommended procedures for measurements and system check. They are read-only document files and destined as fully defined but unmeasured masks. All test positions (head or body-worn) are tested with the same configuration of test steps differing only in the grid definition for the different test positions.
- The "reference" and "drift" measurements are located at the beginning and end of the batch process. They measure the field drift at one single point in the liquid over the complete procedure. The indicated drift is mainly the variation of the DUT's output power and should vary max. +/- 5 %.
- The highest integrated SAR value is the main concern in compliance test applications. These values can mostly be found at the inner surface of the phantom and cannot be measured directly due to the sensor offset in the probe. To extrapolate the surface values, the measurement distances to the surface must be known accurately. A distance error of 0.5mm could produce SAR errors of 6% at 1800 MHz. Using predefined locations for measurements is not accurate enough. Any shift of the phantom (e.g., slight deformations after filling it with liquid) would produce high uncertainties. For an automatic and accurate detection of the phantom surface, the DASY5 system uses the mechanical surface detection. The detection is always at touch, but the probe will move backward from the surface the indicated distance before starting the measurement.
- The "area scan" measures the SAR above the DUT or verification dipole on a parallel plane to the surface. It is used to locate the approximate location of the peak SAR with 2D spline interpolation. The robot performs a stepped movement along one grid axis while the local electrical field strength is measured by the probe. The probe is touching the surface of the SAM during acquisition of measurement values. The scan uses different grid spacings for different frequency measurements. Standard grid spacing for head measurements in frequency ranges 2GHz is 15 mm in x and y- dimension. For higher frequencies a finer resolution is needed, thus for the grid spacing is reduced according the following table:

Area scan grid spacing for different frequency ranges			
Frequency range	Grid spacing		
≤ 2 GHz	≤ 15 mm		
2 – 4 GHz	≤ 12 mm		
4 – 6 GHz	≤ 10 mm		

Grid spacing and orientation have no influence on the SAR result. For special applications where the standard scan method does not find the peak SAR within the grid, e.g. mobile phones with flip cover, the grid can be adapted in orientation. Results of this coarse scan are shown in annex B.



• A "zoom scan" measures the field in a volume around the 2D peak SAR value acquired in the previous "coarse" scan. It uses a fine meshed grid where the robot moves the probe in steps along all the 3 axis (x,y and z-axis) starting at the bottom of the Phantom. The grid spacing for the cube measurement is varied according to the measured frequency range, the dimensions are given in the following table:

Zoom scan grid spacing and volume for different frequency ranges				
Frequency range	Grid spacing	Grid spacing	Minimum zoom	
Frequency range	for x, y axis	for z axis	scan volume	
≤ 2 GHz	≤ 8 mm	≤ 5 mm	≥ 30 mm	
2 – 3 GHz	≤ 5 mm	≤ 5 mm	≥ 28 mm	
3 – 4 GHz	≤ 5 mm	≤ 4 mm	≥ 28 mm	
4 – 5 GHz	≤ 4 mm	≤ 3 mm	≥ 25 mm	
5 – 6 GHz	≤ 4 mm	≤ 2 mm	≥ 22 mm	

DASY is also able to perform repeated zoom scans if more than 1 peak is found during area scan. In this document, the evaluated peak 1g and 10g averaged SAR values are shown in the 2D-graphics in annex B. Test results relevant for the specified standard (see section 3) are shown in table form in section 7.



#### **Spatial Peak SAR Evaluation**

The spatial peak SAR - value for 1 and 10 g is evaluated after the Cube measurements have been done. The basis of the evaluation are the SAR values measured at the points of the fine cube grid consisting of all points in the three directions x, y and z. The algorithm that finds the maximal averaged volume is separated into three different stages.

- The data between the dipole center of the probe and the surface of the phantom are extrapolated. This data cannot be measured since the center of the dipole is 1 to 2.7 mm away from the tip of the probe and the distance between the surface and the lowest measuring point is about 1 mm (see probe calibration sheet). The extrapolated data from a cube measurement can be visualized by selecting 'Graph Evaluated'.
- The maximum interpolated value is searched with a straight-forward algorithm. Around this maximum the SAR values averaged over the spatial volumes (1g or 10 g) are computed using the 3d-spline interpolation algorithm. If the volume cannot be evaluated (i.e., if a part of the grid was cut off by the boundary of the measurement area) the evaluation will be started on the corners of the bottom plane of the cube.
- All neighbouring volumes are evaluated until no neighbouring volume with a higher average value is found.

#### **Extrapolation**

The extrapolation is based on a least square algorithm [W. Gander, Computermathematik, p.168-180]. Through the points in the first 3 cm along the z-axis, polynomials of order four are calculated. These polynomials are then used to evaluate the points between the surface and the probe tip. The points, calculated from the surface, have a distance of 1 mm from each other.

#### Interpolation

The interpolation of the points is done with a 3d-Spline. The 3d-Spline is composed of three one-dimensional splines with the "Not a knot"-condition [W. Gander, Computermathematik, p.141-150] (x, y and z -direction) [Numerical Recipes in C, Second Edition, p.123ff].

#### **Volume Averaging**

At First the size of the cube is calculated. Then the volume is integrated with the trapezoidal algorithm. 8000 points (20x20x20) are interpolated to calculate the average.

#### **Advanced Extrapolation**

DASY uses the advanced extrapolation option which is able to compensate boundary effects on Efield probes.



#### **SAM PHANTOM**

The SAM Twin Phantom V4.0 is constructed of a fiberglass shell integrated in a wooden table. The shape of the shell is based on data from an anatomical study designed to determine the maximum exposure in at least 90% of all users. It enables the dosimetric evaluation of left and right hand phone usage as well as body mounted usage at the flat phantom region. A cover prevents the evaporation of the liquid. Reference markings on the Phantom allow the complete setup of all predefined phantom positions and measurement grids by manually teaching three points in the robot. (see Fig. 2.6)

#### **Phantom Specification**

**Phantom:** SAM Twin Phantom (V4.0) **Shell Material:** Vivac Composite

Thickness:  $2.0 \pm 0.2 \text{ mm}$ 

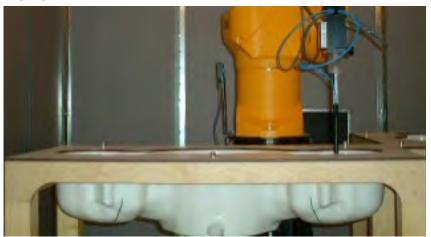


Figure 2.6 SAM Twin Phantom

#### **Device Holder for Transmitters**

In combination with the SAM Twin Phantom V4.0 the Mounting Device (see Fig. 2.7), enables the rotation of the mounted transmitter in spherical coordinates whereby the rotation point is the ear opening. The devices can be easily, accurately, and repeat ably be positioned according to the FCC, CENELEC, IEC and IEEE specifications. The device holder can be locked at different phantom locations (left head, right head, flat phantom).



**Figure 2.7 Mounting Device** 

Note: A simulating human hand is not used due to the complex anatomical and geometrical structure of the hand that may produce infinite number of configurations. To produce the worst-case condition (the hand absorbs antenna output power), the hand is omitted during the tests.



# 3. Probe and Dipole Calibration

See Appendix D and E.



# 4. Phantom & Simulating Tissue Specifications

## **Head & Body Simulating Mixture Characterization**

The head and body mixtures consist of the material based on the table listed below. The mixture is calibrated to obtain proper dielectric constant (permittivity) and conductivity of the desired tissue. Body tissue parameters that have not been specified in IEEE1528-2013 are derived from the issue dielectric parameters computed from the 4-Cole-Cole equations.

**Table 4.1 Typical Composition of Ingredients for Tissue** 

		Simulating Tissue
Ingredients		450 MHz Head
Mixing Percentage		
Water		
Sugar		
Salt		Proprietary Mixture
HEC		Procured from Speag
Bactericide		
DGBE		
Dielectric Constant Target		43.50
Conductivity (S/m) Target		0.87



# 5. ANSI/IEEE C95.1 – 1992 RF Exposure Limits [2]

#### **Uncontrolled Environment**

Uncontrolled Environments are defined as locations where there is the exposure of individuals who have no knowledge or control of their exposure. The general population/uncontrolled exposure limits are applicable to situations in which the general public may be exposed or in which persons who are exposed as a consequence of their employment may not be made fully aware of the potential for exposure or cannot exercise control over their exposure. Members of the general public would come under this category when exposure is not employment-related; for example, in the case of a wireless transmitter that exposes persons in its vicinity.

#### **Controlled Environment**

Controlled Environments are defined as locations where there is exposure that may be incurred by persons who are aware of the potential for exposure, (i.e. as a result of employment or occupation). In general, occupational/controlled exposure limits are applicable to situations in which persons are exposed as a consequence of their employment, who have been made fully aware of the potential for exposure and can exercise control over their exposure. This exposure category is also applicable when the exposure is of a transient nature due to incidental passage through a location where the exposure levels may be higher than the general population/uncontrolled limits, but the exposed person is fully aware of the potential for exposure and can exercise control over his or her exposure by leaving the area or by some other appropriate means.

**Table 5.1 Human Exposure Limits** 

	UNCONTROLLED ENVIRONMENT General Population (W/kg) or (mW/g)	CONTROLLED ENVIROMENT Professional Population (W/kg) or (mW/g)
SPATIAL PEAK SAR <sup>1</sup> Head	1.60	8.00
SPATIAL AVERAGE SAR <sup>2</sup> Whole Body	0.08	0.40
SPATIAL PEAK SAR <sup>3</sup> Hands, Feet, Ankles, Wrists	4.00	20.00

<sup>&</sup>lt;sup>1</sup> The Spatial Peak value of the SAR averaged over any 1 gram of tissue (defined as a tissue volume in the shape of a cube) and over the appropriate averaging time.

<sup>&</sup>lt;sup>2</sup> The Spatial Average value of the SAR averaged over the whole body.

<sup>&</sup>lt;sup>3</sup> The Spatial Peak value of the SAR averaged over any 10 grams of tissue (defined as a tissue volume in the shape of a cube) and over the appropriate averaging time.



# 6. Measurement Uncertainty

Measurement uncertainty table is not required per KDB 865664 D01 v01r04 section 2.8.2 page 12. SAR measurement uncertainty analysis is required in the SAR report only when the highest measured SAR in a frequency band is ≥ 1.5 W/kg for 1-g SAR. The equivalent ratio (1.5/1.6) should be applied to extremity and occupational exposure conditions. The highest reported value is less than 1.5 W/kg. Therefore, the measurement uncertainty table is not required.



# 7. System Validation

#### **Tissue Verification**

**Table 7.1 Measured Tissue Parameters** 

Table 1.1 Weasured 1155ue Parameters				
		450 MHz Head		
Date(s)		Aug. 6, 2019		
Liquid Temperature (°C) 20.0 Target Measu		Measured		
Dielectric Constant: ε		43.50 42.86		
Conductivity: σ		0.87 0.88		
		450 MHz Head		
Date(s)		Dec.	20, 2020	
Liquid Temperature (°C) 20.0 Target Measur			Measured	
Dielectric Constant: ε		43.50	42.93	
Conductivity: σ		0.87	0.89	

See Appendix A for data printout.

# **Test System Verification**

Prior to assessment, the system is verified to the  $\pm 10\%$  of the specifications at the test frequency by using the system kit. Power is normalized to 1 watt. (Graphic Plots Attached,  $P_{IN}=100$  mW)

**Table 7.2 System Dipole Validation Target & Measured** 

		, ,					
		Test Frequency	Targeted SAR <sub>1g</sub> (W/kg)	Measure SAR <sub>1g</sub> (W/kg)	Tissue Used for Verification	Deviation (%)	Plot
	06-Aug-2019	450 MHz	4.48	4.54	Head	+ 1.34	1
Ī	14-Dec-2020	450 MHz	4.48	4.55	Head	+ 1.56	2

See Appendix A for data plots.

Spacer

Signal Dir. Coupler

Cable

Att1

Att2

Pas

Att2

A

Figure 7.1 Dipole Validation Test Setup



# 8. SAR Test Data Summary See Measurement Result Data Pages

See Appendix B for SAR Test Data Plots. See Appendix C for SAR Test Setup Photos.

# **Procedures Used To Establish Test Signal**

The device was either placed into simulated transmit mode using the manufacturer's test codes or the actual transmission is activated through a base station simulator or similar equipment. See data pages for actual procedure used in measurement.

#### **Device Test Condition**

The power drift of each test is measured at the start of the test and again at the end of the test. The drift is calculated returned in dBs. The drift is calculated into the resultant SAR value on the data sheet for each test.

The TPDH7C was tested in the face position with the front of the device 25 mm away from the flat phantom. The TPDH7C was then tested in the body position with the body accessory in contact with the flat phantom. The audio accessory (T03-00045-DMAA) was used for all body measurements. All other audio accessories have been excluded per KDB 643646 D01 v01r03 section A2. All the audio accessories are 50 ohm connections to the radio and the standard audio accessory was used for all measurements next to the body per KDB 643646 D01 v01r03 section A2. For each of the tests conducted, the device was set to continuously transmit at a maximum output power on the channel specified in the test data. The SAR was scaled to 50% duty cycle per KDB 643646 D01 v01r03. All test reductions were reduced based on the reductions in KDB 643646 D01 v01r03. See pages 22-30 for a table of test reductions.

The Bluetooth testing was excluded from SAR testing due to the low power of the transmitter. For the FCC, the exclusion was based on the calculation in KDB447498 v06 section 4.3.1 a). The following is the formula for the Bluetooth transmitter.

 $[(16 \text{ mW})/(17 \text{ mm})]^*\sqrt{2.48}=1.48 \text{ which is equal to or less than } 3.0$ 

For ISED, the exclusion is based on RSS-102 Issue 5 section 2.5.1 table 1. For devices evaluated to the controlled environment limit of 8.0 W/kg, the numbers in the table are multiplied by 5. Therefore, for a separation distance of 15 mm in the table, the exclusion limit is (15mW\*5)=75 mW. The Bluetooth transmitter has a maximum transmit power of 16 mW which is below the 75 mW threshold.

Battery C and Battery D are identical batteries. The only difference is the manufacturer for each part number. Therefore, the testing was conducted with the two batteries interchanged.



## **Optional Accessories**

Battery A         Li-Ion, 1880 mAh         T03-00011-Axxx           Battery B         Li-Ion, 2300 mAh         T03-00011-Exxx           Battery C         Li-Ion, 2400 mAh         T03-00011-Exxx           Battery D         Li-Ion, 2400 mAh         T03-00011-Exxx           Antenna A         X Wave Whip (450-520 MHz)         TPA-AN-012           Antenna B         Helical (450-520 MHz)         TPA-AN-015           Audio Accessory A         Spkr Mic Genesis         T03-00045-Exxx           Audio Accessory B         Spkr Mic Light-Weight 3.5mm-Jack         T03-00045-Exxx           Audio Accessory C         Spkr Mic Medium-Weight 3.5mm-Jack         T03-00045-Exxx           Audio Accessory F         Spkr Mic Storm IP68 E-Button 12.5mm-Jack & 2.5mm-Jack         T03-00045-Exx           Audio Accessory F         Spkr Mic C-C500 IP67 E-Button 3.5mm-Jack & 2.5mm-Jack         T03-00045-Exx           Audio Accessory F         Spkr Mic C-C500 IP67 E-Button 13.5mm-Jack 4-pole-Jack         T03-00045-Mxx           Audio Accessory J         Spkr Mic C-C500 IP67 E-Button 3.5mm-Jack 4-pole-Jack         T03-00045-Mxx           Audio Accessory J         Headset Light-Weight Behind-Head Boom-Mic-with-PTT         T03-00046-Exx           Audio Accessory J         Headset Heavy-Duty Overhead & Behind-Head         T03-00046-Exx           Audio Accessory M         <	Accessory	Description	Part Number
Battery C Li-lon, 2400 mAh T03-00011-Cxxx Battery D Li-lon, 3300 mAh T03-00011-Exxx Antenna A ¼ Wave Whip (450-520 MHz) TPA-AN-012 Antenna B Helical (450-520 MHz) TPA-AN-015 Audio Accessory A Spkr Mic Genesis T03-00045-Exxx Audio Accessory B Spkr Mic Light-Weight 3.5mm-Jack T03-00045-Exxx Audio Accessory C Spkr Mic Medium-Weight 3.5mm-Jack T03-00045-Exxx Audio Accessory D Spkr Mic Evolution E-Button 3.5mm-Jack T03-00045-Exxx Audio Accessory E Spkr Mic Evolution E-Button 3.5mm-Jack 2.5mm-Jack T03-00045-Exxx Audio Accessory E Spkr Mic C-C500 E-Button Quick Release Jack T03-00045-Exxx Audio Accessory F Spkr Mic C-C500 E-Button Quick Release Jack T03-00045-Exxx Audio Accessory F Spkr Mic C-C500 E-Button 3.5mm-Jack 4-pole-Jack T03-00045-Mxxx Audio Accessory H Spkr Mic C-C500 P67 E-Button 3.5mm-Jack 4-pole-Jack T03-00045-Mxxx Audio Accessory H Headset Light-Weight Behind-Head Boom-Mic-with-PTT T03-00046-Exxx Audio Accessory J Headset Heavy-Duty Overhead & Behind-Head T03-00046-Exxx Audio Accessory H Headset Heavy-Duty Overhead & Behind-Head T03-00046-Exxx Audio Accessory L Headset Huricane II Behind Head T03-00046-Exxx Audio Accessory M Headset T03-00046-Exxx Audio Accessory D Covert Kit Eartube-In-Ear Lapel-Mic-With-PTT T03-00047-Exxx Audio Accessory D Earphone In-Ear 2.5mm T03-00046-Exxx Audio Accessory D Earphone In-Ear 2.5mm T03-00046-Exxx Audio Accessory D Earphone In-Ear 2.5mm T03-00046-Exxx Audio Accessory D Earphone In-Ear 2.5mm T03-00047-Exxx Audio Accessory D Earphone In-Ear 3.5mm Ra-Jack 0.3m-Lead T03-00086-01xx Audio Accessory D Earphone In-Ear 3.5mm Ra-Jack 0.3m-Lead T03-00086-01xx Audio Accessory D Earphone In-Ear 5.5mm T03-00038-0038-0038-0038-0038-0038-0038-	Battery A	Li-lon, 1880 mAh	T03-00011-Axxx
Battery D Li-lon, 3300 mAh T03-00011-Exxx Antenna A ¼ Wave Whip (450-520 MHz) TPA-AN-012 TPA-AN-015 Antenna B Helical (450-520 MHz) TPA-AN-015 TPA-AN-015 Audio Accessory A Spkr Mic Genesis T03-00045-Exxx Audio Accessory B Spkr Mic Light-Weight 3.5mm-Jack T03-00045-Exxx Audio Accessory C Spkr Mic Medium-Weight 3.5mm-Jack T03-00045-Exxx Audio Accessory D Spkr Mic Evolution E-Button 3.5mm-Jack T03-00045-Exxx Audio Accessory E Spkr Mic Evolution E-Button 3.5mm-Jack 2.5mm-Jack T03-00045-Exxx Audio Accessory F Spkr Mic C-C500 E-Button Quick Release Jack T03-00045-Exxx Audio Accessory F Spkr Mic C-C500 IP67 E-Button 3.5mm-Jack 4-pole-Jack T03-00045-Mxxx Audio Accessory H Spkr Mic C-C500 IP67 E-Button 3.5mm-Jack 4-pole-Jack T03-00045-Mxxx Audio Accessory H Spkr Mic TSM3e 2W IP67 Function-Button-Orange 3.5mm-Jack T03-00045-Mxxx Audio Accessory H Headset Light-Weight Behind-Head Boom-Mic-with-PTT T03-00046-Exxx Audio Accessory H Headset Heavy-Duty Overhead & Behind-Head T03-00046-Exxx Audio Accessory H Headset Heavy-Duty Overhead & Behind-Head T03-00046-Exxx Audio Accessory L Headset Savox HC-100 Helmet-Com Boom Mic Noise-Cancel 4-Pole T03-00046-Exxx Audio Accessory L Headset Savox HC-100 Helmet-Com Boom Mic Noise-Cancel 4-Pole T03-00046-Ixxx Audio Accessory W Wire Surveillance Kit T03-00047-Axxx Audio Accessory D Covert Kit Eartube-In-Ear Lapel-Mic-With-PTT T03-00047-Axxx Audio Accessory P Covert Kit Eartube-In-Ear Lapel-Mic-With-PTT T03-00047-Axxx Audio Accessory P Covert Kit Eartabe-In-Ear Lapel-Mic-With-PTT T03-00047-Axxx Audio Accessory P Earphone In-Ear 2.5mm T03-00046-Dxxx Audio Accessory D Earphone In-Ear 2.5mm T03-00046-Dxx Audio Accessory B Earpiece In-Ear Acoustic-Tube 3.5mm-RA-Jack 0.3m-Lead T03-00086-01xx Audio Accessory V Eartube In-Ear 2.5mm T03-00038-0038-0038-0038-0038-0038-0038-	Battery B	Li-lon, 2300 mAh	T03-00011-Bxxx
Antenna A ¼ Wave Whip (450-520 MHz) TPA-AN-012 Antenna B Helical (450-520 MHz) TPA-AN-015 Audio Accessory A Spkr Mic Genesis TO3-0045-Dxxx Audio Accessory B Spkr Mic Light-Weight 3.5mm-Jack T03-00045-Exxx Audio Accessory C Spkr Mic Medium-Weight 3.5mm-Jack T03-00045-Exxx Audio Accessory D Spkr Mic Evolution E-Button 3.5mm-Jack & 2.5mm-Jack T03-00045-Exxx Audio Accessory E Spkr Mic Evolution E-Button 3.5mm-Jack & 2.5mm-Jack T03-00045-Exxx Audio Accessory F Spkr Mic Evolution E-Button 3.5mm-Jack & 2.5mm-Jack T03-00045-Exxx Audio Accessory F Spkr Mic C-C500 E-Button Quick Release Jack T03-00045-Exxx Audio Accessory G Spkr Mic C-C500 1P67 E-Button 3.5mm-Jack 4-pole-Jack T03-00045-Mxxx Audio Accessory H Spkr Mic TSM3e 2W 1P67 Function-Button-Orange 3.5mm-Jack T03-00045-Mxxx Audio Accessory I Headset Light-Weight Behind-Head Boom-Mic-with-PTT T03-00046-Exxx Audio Accessory I Headset Heavy-Duty Overhead & Behind-Head T03-00046-Exxx Audio Accessory K Headset Hurricane II Behind Head T03-00046-Fxxx Audio Accessory L Headset Savox HC-100 Helmet-Com Boom Mic Noise-Cancel 4-Pole T03-00046-Fxxx Audio Accessory M Headset Wire Surveillance Kit T03-00046-Mxx Audio Accessory O Covert Kit Eartube-In-Ear Lapel-Mic-With-PTT T03-00047-Axxx Audio Accessory O Covert Kit Eartube-In-Ear Lapel-Mic-With-PTT T03-00047-Axxx Audio Accessory O Earphone In-Ear 2.5mm T03-00047-Cxxx Audio Accessory C Earphone In-Ear 2.5mm T03-00047-Cxxx Audio Accessory C Earphone In-Ear 2.5mm T03-00047-Cxxx Audio Accessory C Earphone In-Ear 2.5mm T03-00047-Cxx Audio Accessory C Earphone In-Ear 2.5mm T03-00047-Cxxx Audio Accessory	Battery C	Li-lon, 2400 mAh	T03-00011-Cxxx
Antenna B Helical (450-520 MHz) TPA-AN-015 Audio Accessory A Spkr Mic Genesis T03-00045-Dxxx Audio Accessory B Spkr Mic Light-Weight 3.5mm-Jack T03-00045-Exxx Audio Accessory C Spkr Mic Evolution E-Button 3.5mm-Jack 2.5mm-Jack T03-00045-Jxxx Audio Accessory D Spkr Mic Evolution E-Button 3.5mm-Jack & 2.5mm-Jack T03-00045-Jxxx Audio Accessory E Spkr Mic Storm IP68 E-Button 2.5mm-Jack T03-00045-Jxxx Audio Accessory F Spkr Mic C-C500 E-Button Quick Release Jack T03-00045-Lxxx Audio Accessory G Spkr Mic C-C500 IP67 E-Button T03-00045-Mxx Audio Accessory H Spkr Mic TSM3e 2W IP67 Function-Button-Orange 3.5mm-Jack T03-00045-Nxxx Audio Accessory I Headset Light-Weight Behind-Head Boom-Mic-with-PTT T03-00046-Exxx Audio Accessory J Headset Heavy-Duty Overhead & Behind-Head T03-00046-Exxx Audio Accessory J Headset Heavy-Duty Overhead & Behind-Head T03-00046-Exxx Audio Accessory L Headset Hurricane II Behind Head T03-00046-Exxx Audio Accessory L Headset Savox HC-100 Helmet-Com Boom Mic Noise-Cancel 4-Pole T03-00046-Ixxx Audio Accessory M Headset Savox HC-100 Helmet-Com Boom Mic Noise-Cancel 4-Pole T03-00046-Ixxx Audio Accessory O Covert Kit Eartube-In-Ear Lapel-Mic-With-PTT T03-00047-Bxxx Audio Accessory O Covert Kit Eartube-In-Ear Lapel-Mic-With-PTT T03-00047-Bxxx Audio Accessory O Earphone In-Ear 2.5mm T03-00045-0xx Audio Accessory B Earpiece In-Ear Acoustic-Tube 3.5mm-RA-Jack 0.3m-Lead T03-00086-01xx Audio Accessory C Earpiece Ear-Bud C-Hook Black 3.5mm-RA-Jack 0.3m-Lead T03-00086-01xx Audio Accessory V Eartube In-Ear 2.5mm T03-00120-xAAD Audio Accessory V Eartube In-Ear 2.5mm T03-00120-xAAD Audio Accessory V Eartube In-Ear 2.5mm T03-00120-xAAD Audio Accessory V Eartube In-Ear 3.5mm Right Angle Jack T03-00120-xAAD F03-00120-xAAD F03-00120-xA	Battery D	Li-lon, 3300 mAh	T03-00011-Exxx
Audio Accessory A  Spkr Mic Light-Weight 3.5mm-Jack  Audio Accessory C  Spkr Mic Medium-Weight 3.5mm-Jack  Audio Accessory C  Spkr Mic Evolution E-Button 3.5mm-Jack & 2.5mm-Jack  Audio Accessory E  Spkr Mic Evolution E-Button 3.5mm-Jack & 2.5mm-Jack  Audio Accessory E  Spkr Mic Storm IP68 E-Button 2.5mm-Jack & 2.5mm-Jack  Audio Accessory F  Spkr Mic C-C500 E-Button Quick Release Jack  Audio Accessory G  Spkr Mic C-C500 IP67 E-Button 3.5mm-Jack 4-pole-Jack  Audio Accessory G  Spkr Mic C-C500 IP67 E-Button 3.5mm-Jack 4-pole-Jack  Audio Accessory H  Spkr Mic T-C500 IP67 E-Button 3.5mm-Jack 4-pole-Jack  Audio Accessory H  Spkr Mic T-Smale 2W IP67 Function-Button-Orange 3.5mm-Jack  Audio Accessory I  Headset Light-Weight Behind-Head Boom-Mic-with-PTT  T03-00045-Mxxx  Audio Accessory J  Headset Heavy-Duty Overhead & Behind-Head  T03-00046-Exxx  Audio Accessory L  Headset Hurricane II Behind Head  T03-00046-Exxx  Audio Accessory L  Headset Savox HC-100 Helmet-Com Boom Mic Noise-Cancel 4-Pole  T03-00046-Dxxx  Audio Accessory M  Headset Wire Surveillance Kit  T03-00047-Axxx  Audio Accessory O  Covert Kit Earthager Lapel-Mic-With-PTT  T03-00047-Dxxx  Audio Accessory Q  Earphone In-Ear 2.5mm  T03-00047-Cxxx  Audio Accessory C  Earphone In-Ear 2.5mm  T03-00086-01xx  Audio Accessory C  Earphone In-Ear 2.5mm  T03-00086-01xx  Audio Accessory V  Earpiece In-Ear Acoustic-Tube 3.5mm-RA-Jack 0.3m-Lead  T03-00086-01xx  Audio Accessory V  Earpiece In-Ear D-Ring Black 3.5mm-RA-Jack 0.3m-Lead  T03-00086-03xx  Audio Accessory V  Eartube In-Ear 2.5mm  T03-00120-xAAD  Audio Accessory V  Eartube In-Ear 2.5mm  T03-00120-xAAD  Audio Accessory V  Eartube In-Ear 3.5mm Right Angle Jack  T03-00120-xAAD  Audio Accessory V  Eartube In-Ear 3.5mm Right Angle Jack  T03-00120-xAAD  T03-00120-xAAD  Audio Accessory V  Eartube In-Ear 3.5mm Right Angle Jack  T03-00120-xAAD  T03-00120-xAAD  T03-00120-xAAD  T03-00120-xAAD  Audio Accessory S  TP8/9 Belt Liop For D-Clip 55mm  TPA-CA-206  Body Worn Accessory C  TP8/9 Belt Liop For D-Clip 55mm  TPA-CA-206  Bo	Antenna A	¼ Wave Whip (450-520 MHz)	TPA-AN-012
Audio Accessory B Spkr Mic Light-Weight 3.5mm-Jack T03-00045-Exxx Audio Accessory C Spkr Mic Medium-Weight 3.5mm-Jack T03-00045-Fxxx Audio Accessory D Spkr Mic Evolution E-Button 3.5mm-Jack 8.2.5mm-Jack T03-00045-Fxxx Audio Accessory E Spkr Mic Storm IP68 E-Button 2.5mm-Jack 8.2.5mm-Jack Audio Accessory F Spkr Mic C-C500 E-Button Quick Release Jack T03-00045-Lxxx Audio Accessory G Spkr Mic C-C500 IP67 E-Button 3.5mm-Jack 4-pole-Jack T03-00045-Lxxx Audio Accessory H Spkr Mic TSM3e 2W IP67 Function-Button-Orange 3.5mm-Jack Audio Accessory I Headset Light-Weight Behind-Head Boom-Mic-with-PTT T03-00046-Exxx Audio Accessory J Headset Heavy-Duty Overhead & Behind-Head T03-00046-Exxx Audio Accessory L Headset Haevy-Duty Overhead & Behind-Head T03-00046-Exxx Audio Accessory L Headset Savox HC-100 Helmet-Com Boom Mic Noise-Cancel 4-Pole T03-00046-Ixxx Audio Accessory N Wire Surveillance Kit T03-00047-Axxx Audio Accessory N Vire Surveillance Kit T03-00047-Exxx Audio Accessory O Covert Kit Eartube-In-Ear Lapel-Mic-With-PTT T03-00047-Exxx Audio Accessory Q Earphone In-Ear 2.5mm T03-00047-Exxx Audio Accessory R Earpiece In-Ear Acoustic-Tube 3.5mm-RA-Jack 0.3m-Lead T03-00038-01xx Audio Accessory S Earpiece Ear-Bud C-Hook Black 3.5mm-RA-Jack 0.3m-Lead T03-00086-01xx Audio Accessory V Eartube In-Ear 2.5mm T03-00020-XAAD Audio Accessory V Eartube In-Ear 2.5mm T03-00120-XAAD Audio Accessory V Eartube In-Ear 2.5mm T03-00120-XAAD Audio Accessory V Eartube In-Ear 2.5mm T03-00120-XAAD Audio Accessory V Eartube In-Ear 3.5mm Right Angle Jack T03-00120-XAAD T03-00120-XAAD T03-00120-XAAD T03-00120-XAAD Audio Accessory R Earpiece On-Ear D-Ring Black 3.5mm-RA-Jack 0.3m-Lead T03-00120-XAAD T03-00120-X	Antenna B	Helical (450-520 MHz)	TPA-AN-015
Audio Accessory C Spkr Mic Medium-Weight 3.5mm-Jack Audio Accessory D Spkr Mic Evolution E-Button 3.5mm-Jack & 2.5mm-Jack Audio Accessory E Spkr Mic Storm IP68 E-Button 2.5mm-Jack Audio Accessory F Spkr Mic C-C500 E-Button Quick Release Jack Audio Accessory G Spkr Mic C-C500 IP67 E-Button 3.5mm-Jack & pole-Jack Audio Accessory H Spkr Mic C-C500 IP67 E-Button 3.5mm-Jack & pole-Jack Audio Accessory H Spkr Mic TSM3e 2W IP67 Function-Button-Orange 3.5mm-Jack Audio Accessory I Headset Light-Weight Behind-Head Boom-Mic-with-PTT T03-00045-Nxxx Audio Accessory J Headset Heavy-Duty Overhead & Behind-Head T03-00046-Exxx Audio Accessory L Headset Hurricane II Behind Head T03-00046-Fxxx Audio Accessory L Headset Savox HC-100 Helmet-Com Boom Mic Noise-Cancel 4-Pole Audio Accessory N Headset Wire Surveillance Kit T03-00046-Jxxx Audio Accessory N Wire Surveillance Kit T03-00047-Axxx Audio Accessory O Covert Kit Eartube-In-Ear Lapel-Mic-With-PTT T03-00047-Bxxx Audio Accessory P Covert Kit Eartube-In-Ear Lapel-Mic-With-PTT T03-00047-Bxxx Audio Accessory Q Earphone In-Ear 2.5mm T03-00035-0451 Audio Accessory S Earpiece In-Ear Acoustic-Tube 3.5mm-RA-Jack 0.3m-Lead T03-00086-01xx Audio Accessory T Earpiece On-Ear D-Ring Black 3.5mm-RA-Jack 0.3m-Lead T03-00086-02xx Audio Accessory V Eartube In-Ear 2.5mm T03-00120-xAAD Audio Accessory W C-Hook Shirt Lead Straight Jack 3.5mm T03-0120-xAAD Audio Accessory W Eartube In-Ear 3.5mm Right Angle Jack T03-00120-xAAD Audio Accessory W TPA-CA-201 Body Worn Accessory C TP8/9 Belt Clip 55mm (fits to battery) TPA-CA-206 Body Worn Accessory C TP8/9 Belt Clip 55mm (fits to battery) TPA-CA-207 Body Worn Accessory F TPA-CA-208 TPA-CA-208 Body Worn Accessory F TPA-Garry Case Heavy Duty Leather No Key D-Stud Belt Loop T03-00038-0003 Body Worn Accessory G TP93/94 Carry Case Heavy Duty Leather No Key Belt Loop T03-00038-0003	Audio Accessory A	Spkr Mic Genesis	T03-00045-Dxxx
Audio Accessory D Spkr Mic Evolution E-Button 3.5mm-Jack & 2.5mm-Jack Audio Accessory E Spkr Mic Storm IP68 E-Button 2.5mm-Jack T03-00045-kxxx Audio Accessory F Spkr Mic C-C500 IP67 E-Button Quick Release Jack T03-00045-Lxxx Audio Accessory G Spkr Mic C-C500 IP67 E-Button 3.5mm-Jack 4-pole-Jack T03-00045-Lxxx Audio Accessory H Spkr Mic T5M3e 2W IP67 Function-Button-Orange 3.5mm-Jack T03-00045-Mxxx Audio Accessory I Headset Light-Weight Behind-Head Boom-Mic-with-PTT T03-00046-Exxx Audio Accessory J Headset Heavy-Duty Overhead & Behind-Head T03-00046-Fxxx Audio Accessory K Headset Heavy-Duty Overhead & Behind-Head T03-00046-Fxxx Audio Accessory L Headset Heavy-Duty Overhead & Behind-Head T03-00046-Fxxx Audio Accessory W Headset Savox HC-100 Helmet-Com Boom Mic Noise-Cancel 4-Pole T03-00046-Hxxx Audio Accessory M Headset T03-00047-Mxx Audio Accessory W T03-00047-Mxx Audio Accessory O Covert Kit Eartube-In-Ear Lapel-Mic-With-PTT T03-00047-Bxxx Audio Accessory P Covert Kit Eartube-In-Ear Lapel-Mic-With-PTT T03-00047-Cxxx Audio Accessory Q Earphone In-Ear 2.5mm T03-00047-Cxxx Audio Accessory R Earpiece In-Ear Acoustic-Tube 3.5mm-RA-Jack 0.3m-Lead T03-00086-01xx Audio Accessory T Earpiece On-Ear D-Ring Black 3.5mm-RA-Jack 0.3m-Lead T03-00086-01xx Audio Accessory U Eartube In-Ear 2.5mm T03-00120-xAAD Audio Accessory V Eartube In-Ear 3.5mm Right Angle Jack T03-00120-xAAD Audio Accessory W C-Hook Shirt Lead Straight Jack 3.5mm T03-00120-xAAD Audio Accessory A TP8/9 Belt Clip S5mm (fits to battery) TPA-CA-201 Body Worn Accessory A TP8/9 Belt Clip S5mm (fits to battery) TPA-CA-206 Body Worn Accessory C TPB-99/94 Carry Case Heavy Duty Leather No Key Spring Clip T03-00038-0002 Body Worn Accessory G TP93/94 Carry Case Heavy Duty Leather No Key Spring Clip T03-00038-0003 Body Worn Accessory G TP93/94 Carry Case Heavy Duty Leather No Key D-Stud Belt Loop	Audio Accessory B	Spkr Mic Light-Weight 3.5mm-Jack	T03-00045-Exxx
Audio Accessory E Spkr Mic Storm IP68 E-Button 2.5mm-Jack T03-00045-Kxxx Audio Accessory F Spkr Mic C-C500 E-Button Quick Release Jack T03-00045-Lxxx Audio Accessory G Spkr Mic C-C500 IP67 E-Button 3.5mm-Jack 4-pole-Jack T03-00045-Lxxx Audio Accessory H Spkr Mic TSM3e 2W IP67 Function-Button-Orange 3.5mm-Jack T03-00045-Nxxx Audio Accessory I Headset Light-Weight Behind-Head Boom-Mic-with-PTT T03-00046-Exxx Audio Accessory K Headset Heavy-Duty Overhead & Behind-Head T03-00046-Exxx Audio Accessory K Headset Hurricane II Behind Head T03-00046-Gxxx Audio Accessory L Headset Savox HC-100 Helmet-Com Boom Mic Noise-Cancel 4-Pole T03-00046-Ixxx Audio Accessory N Wire Surveillance Kit T03-00046-Ixxx Audio Accessory N Wire Surveillance Kit T03-00047-Axxx Audio Accessory O Covert Kit Earthager Lapel-Mic-With-PTT T03-00047-Bxxx Audio Accessory Q Earphone In-Ear 2.5mm T03-00033-0451 Audio Accessory R Earpiece In-Ear Acoustic-Tube 3.5mm-RA-Jack 0.3m-Lead T03-00036-01xx Audio Accessory T Earpiece Ear-Bud C-Hook Black 3.5mm-RA-Jack 0.3m-Lead T03-00086-01xx Audio Accessory U Eartube In-Ear 2.5mm T03-00020-xAAD Audio Accessory V Eartube In-Ear 2.5mm T03-00120-xAAD Audio Accessory W Eartube In-Ear 3.5mm Right Angle Jack T03-00120-xAAD Audio Accessory W Eartube In-Ear 3.5mm Right Angle Jack T03-00120-xAAD Audio Accessory W Eartube In-Ear 3.5mm Right Angle Jack T03-00120-xAAD T03-0012	Audio Accessory C	Spkr Mic Medium-Weight 3.5mm-Jack	T03-00045-Fxxx
Audio Accessory F Spkr Mic C-C500 E-Button Quick Release Jack T03-00045-Lxxx Audio Accessory G Spkr Mic C-C500 IP67 E-Button 3.5mm-Jack 4-pole-Jack T03-00045-Mxxx Audio Accessory H Spkr Mic TSM3e 2W IP67 Function-Button-Orange 3.5mm-Jack T03-00045-Mxxx Audio Accessory I Headset Light-Weight Behind-Head Boom-Mic-with-PTT T03-00046-Exxx Audio Accessory J Headset Heavy-Duty Overhead & Behind-Head T03-00046-Exxx Audio Accessory K Headset Hurricane II Behind Head T03-00046-Gxxx Audio Accessory L Headset Savox HC-100 Helmet-Com Boom Mic Noise-Cancel 4-Pole T03-00046-Hxxx Audio Accessory M Headset T03-00046-Hxxx Audio Accessory N Wire Surveillance Kit T03-00047-Axxx Audio Accessory O Covert Kit Eartube-In-Ear Lapel-Mic-With-PTT T03-00047-Axxx Audio Accessory P Covert Kit Earthube-In-Ear Lapel-Mic-With-PTT T03-00047-Cxxx Audio Accessory Q Earphone In-Ear 2.5mm T03-00045-01xx Audio Accessory S Earpiece In-Ear Acoustic-Tube 3.5mm-RA-Jack 0.3m-Lead T03-00086-01xx Audio Accessory T Earpiece On-Ear D-Ring Black 3.5mm-RA-Jack 0.3m-Lead T03-00086-02xx Audio Accessory U Eartube In-Ear 2.5mm T03-00120-xAAD Audio Accessory V Eartube In-Ear 3.5mm Right Angle Jack T03-00120-xAAD Audio Accessory W C-Hook Shirt Lead Straight Jack 3.5mm T03-00120-xAAD Audio Accessory X Eartube In-Ear 3.5mm (fits to battery) T04-CA-201 Body Worn Accessory B TP8/9 Belt Clip 55mm (fits to battery) TPA-CA-201 Body Worn Accessory C TP8/9 Belt Loop For D-Clip 75mm TPA-CA-206 Body Worn Accessory C TP8/9 Belt Loop For D-Clip 75mm TPA-CA-200 Body Worn Accessory C TP8/9 Belt Loop For D-Clip 75mm TPA-CA-200 Body Worn Accessory G TP93/94 Carry Case Heavy Duty Leather No Key D-Stud Belt Loop T03-00038-0001 Body Worn Accessory G TP93/94 Carry Case Heavy Duty Leather No Key Belt Loop T03-00038-0001 Body Worn Accessory H TP93/94 Carry Case Heavy Duty Leather No Key Belt Loop T03-00038-0001	Audio Accessory D	Spkr Mic Evolution E-Button 3.5mm-Jack & 2.5mm-Jack	T03-00045-Jxxx
Audio Accessory G Spkr Mic C-C500 IP67 E-Button 3.5mm-Jack 4-pole-Jack T03-00045-Mxxx Audio Accessory H Spkr Mic TSM3e 2W IP67 Function-Button-Orange 3.5mm-Jack T03-00046-Nxxx Audio Accessory J Headset Light-Weight Behind-Head Boom-Mic-with-PTT T03-00046-Exxx Audio Accessory J Headset Heavy-Duty Overhead & Behind-Head T03-00046-Fxxx Audio Accessory K Headset Heavy-Duty Overhead & Behind-Head T03-00046-Fxxx Audio Accessory L Headset Savox HC-100 Helmet-Com Boom Mic Noise-Cancel 4-Pole T03-00046-Jxxx Audio Accessory M Headset Audio Accessory M Headset T03-00046-Jxxx Audio Accessory N Wire Surveillance Kit T03-00047-Axxx Audio Accessory O Covert Kit Eartube-In-Ear Lapel-Mic-With-PTT T03-00047-Bxxx Audio Accessory P Covert Kit Earhanger Lapel-Mic-With-PTT T03-00047-Cxxx Audio Accessory Q Earphone In-Ear 2.5mm T03-00047-Cxxx Audio Accessory R Earpiece In-Ear Acoustic-Tube 3.5mm-RA-Jack 0.3m-Lead T03-00086-01xx Audio Accessory S Earpiece Ear-Bud C-Hook Black 3.5mm-RA-Jack 0.2m-Lead T03-00086-02xx Audio Accessory U Eartube In-Ear 2.5mm T03-00086-02xx Audio Accessory U Eartube In-Ear 2.5mm T03-00120-xAAD Audio Accessory V Eartube In-Ear 3.5mm Right Angle Jack T03-00120-xAAD Audio Accessory W C-Hook Shirt Lead Straight Jack 3.5mm T03-00120-xAAD Audio Accessory X Earhanger 2.5mm T03-00120-xAAD Audio Accessory B TP8/9 Belt Clip 55mm (fits to battery) TPA-CA-201 Body Worn Accessory B TP8/9 Belt Clip 55mm Belt Clip TPA-CA-206 Body Worn Accessory E TP8/9 Belt Clip F5mm Belt Clip TPA-CA-207 Body Worn Accessory E TP8/9 Belt Clip Adptr for 55mm Belt Clip TPA-CA-208 Body Worn Accessory E TP93/94 Carry Case Heavy Duty Leather No Key Spring Clip T03-00038-0001 Body Worn Accessory H TP93/94 Carry Case Heavy Duty Leather No Key Belt Loop T03-00038-0001	Audio Accessory E	Spkr Mic Storm IP68 E-Button 2.5mm-Jack	T03-00045-Kxxx
Audio Accessory H  Spkr Mic TSM3e 2W IP67 Function-Button-Orange 3.5mm-Jack  T03-00045-Nxxx  Audio Accessory I  Headset Light-Weight Behind-Head Boom-Mic-with-PTT  T03-00046-Exxx  Audio Accessory J  Headset Heavy-Duty Overhead & Behind-Head  T03-00046-Fxxx  Audio Accessory K  Headset Hurricane II Behind Head  T03-00046-Fxxx  Audio Accessory L  Headset Savox HC-100 Helmet-Com Boom Mic Noise-Cancel 4-Pole  T03-00046-Jxxx  Audio Accessory M  Headset  T03-00046-Jxxx  Audio Accessory N  Wire Surveillance Kit  T03-00047-Axxx  Audio Accessory O  Covert Kit Eartube-In-Ear Lapel-Mic-With-PTT  T03-00047-Cxxx  Audio Accessory Q  Earphone In-Ear 2.5mm  T03-00047-Cxxx  Audio Accessory R  Earpiece In-Ear Acoustic-Tube 3.5mm-RA-Jack 0.3m-Lead  T03-00086-01xx  Audio Accessory S  Earpiece Ear-Bud C-Hook Black 3.5mm-RA-Jack 0.3m-Lead  T03-00086-02xx  Audio Accessory U  Eartube In-Ear 2.5mm  T03-00086-03xx  Audio Accessory V  Eartube In-Ear 3.5mm Right Angle Jack  T03-00120-xAAD  Audio Accessory W  C-Hook Shirt Lead Straight Jack 3.5mm  T03-00120-xAAD  Audio Accessory X  Earhanger 2.5mm  T03-00120-xAAD  Audio Accessory X  Earhanger 2.5mm  T03-00120-xAAD  Audio Accessory C  TP8/9 Belt Clip 55mm (fits to battery)  TPA-CA-201  Body Worn Accessory C  TP8/9 Belt Clip F5mm Belt Clip  TPA-CA-207  Body Worn Accessory C  TP8/9 Belt Clip Adptr for 55mm Belt Clip  TPA-CA-208  Body Worn Accessory F  TP93/94 Carry Case Heavy Duty Leather No Key D-Stud Belt Loop  T03-00038-0003  Body Worn Accessory G  TP93/94 Carry Case Heavy Duty Leather No Key Spring Clip  T03-00038-0003  Body Worn Accessory H  TP93/94 Carry Case Heavy Duty Leather No Key Belt Loop  T03-00038-0003	Audio Accessory F	Spkr Mic C-C500 E-Button Quick Release Jack	T03-00045-Lxxx
Audio Accessory I Headset Light-Weight Behind-Head Boom-Mic-with-PTT T03-00046-Exxx Audio Accessory J Headset Heavy-Duty Overhead & Behind-Head T03-00046-Fxxx Audio Accessory K Headset Hurricane II Behind Head T03-00046-Fxxx Audio Accessory L Headset Savox HC-100 Helmet-Com Boom Mic Noise-Cancel 4-Pole T03-00046-Hxxx Audio Accessory M Headset T03-00046-Hxxx Audio Accessory M Headset T03-00046-Hxxx Audio Accessory N Wire Surveillance Kit T03-00047-Axxx Audio Accessory O Covert Kit Earthube-In-Ear Lapel-Mic-With-PTT T03-00047-Exxx Audio Accessory P Covert Kit Earthube-In-Ear Lapel-Mic-With-PTT T03-00047-Cxxx Audio Accessory Q Earphone In-Ear 2.5mm T03-00047-Axxx Audio Accessory R Earpiece In-Ear Acoustic-Tube 3.5mm-RA-Jack 0.3m-Lead T03-00053-0451 Audio Accessory S Earpiece Ear-Bud C-Hook Black 3.5mm-RA-Jack 0.2m-Lead T03-00086-01xx Audio Accessory T Earpiece On-Ear D-Ring Black 3.5mm-RA-Jack 0.3m-Lead T03-00086-02xx Audio Accessory U Eartube In-Ear 2.5mm T03-00120-xAAD Audio Accessory V Eartube In-Ear 3.5mm Right Angle Jack T03-00120-xAAD Audio Accessory W C-Hook Shirt Lead Straight Jack 3.5mm T03-00120-xAAD Audio Accessory W Earhanger 2.5mm T03-00120-xAAD Audio Accessory X Earhanger 2.5mm T952-055 Body Worn Accessory A TP8/9 Belt Clip 55mm (fits to battery) TPA-CA-201 Body Worn Accessory C TP8/9 Belt Clip 55mm Belt Clip TPA-CA-201 Body Worn Accessory D TP8/9 Belt Clip Adptr for 55mm Belt Clip TPA-CA-208 Body Worn Accessory F TP9/944 Carry Case Heavy Duty Leather No Key D-Stud Belt Loop T03-00038-0001 Body Worn Accessory H TP9/944 Carry Case Heavy Duty Leather No Key Belt Loop T03-00038-0003 Body Worn Accessory H TP9/944 Carry Case Heavy Duty Leather No Key Belt Loop T03-00038-0003 Body Worn Accessory H TP9/944 Carry Case Heavy Duty Leather No Key Belt Loop T03-00038-0003 Body Worn Accessory H TP9/944 Carry Case Heavy Duty Leather No Key Belt Loop T03-00038-0003	Audio Accessory G	Spkr Mic C-C500 IP67 E-Button 3.5mm-Jack 4-pole-Jack	T03-00045-Mxxx
Audio Accessory J Headset Heavy-Duty Overhead & Behind-Head T03-00046-Fxxx Audio Accessory K Headset Hurricane II Behind Head T03-00046-Gxxx Audio Accessory L Headset Savox HC-100 Helmet-Com Boom Mic Noise-Cancel 4-Pole T03-00046-Hxxx Audio Accessory M Headset T03-00046-Hxxx Audio Accessory N Wire Surveillance Kit T03-00047-Axxx Audio Accessory O Covert Kit Eartube-In-Ear Lapel-Mic-With-PTT T03-00047-Bxxx Audio Accessory P Covert Kit Earthanger Lapel-Mic-With-PTT T03-00047-Cxxx Audio Accessory Q Earphone In-Ear 2.5mm T03-00053-0451 Audio Accessory R Earpiece In-Ear Acoustic-Tube 3.5mm-RA-Jack 0.3m-Lead T03-00086-01xx Audio Accessory S Earpiece Ear-Bud C-Hook Black 3.5mm-RA-Jack 0.2m-Lead T03-00086-02xx Audio Accessory T Earpiece On-Ear D-Ring Black 3.5mm-RA-Jack 0.3m-Lead T03-00086-03xx Audio Accessory U Eartube In-Ear 2.5mm T03-00120-xAAD T03-00120-xAAD Audio Accessory W C-Hook Shirt Lead Straight Angle Jack T03-00120-xAAD Audio Accessory W C-Hook Shirt Lead Straight Jack 3.5mm T03-00120-xAAD T03-00120-xADD T03-0030-00120-xADD T03-00120-xADD T03-00120-xADD T03-00120-xA	Audio Accessory H	Spkr Mic TSM3e 2W IP67 Function-Button-Orange 3.5mm-Jack	T03-00045-Nxxx
Audio Accessory K Audio Accessory L Headset Savox HC-100 Helmet-Com Boom Mic Noise-Cancel 4-Pole T03-00046-Gxxx Audio Accessory M Headset T03-00046-Hxxx Audio Accessory M Headset T03-00046-Jxxx Audio Accessory N Wire Surveillance Kit T03-00047-Axxx Audio Accessory O Covert Kit Eartube-In-Ear Lapel-Mic-With-PTT T03-00047-Bxxx Audio Accessory P Covert Kit Earhanger Lapel-Mic-With-PTT T03-00047-Cxxx Audio Accessory Q Earphone In-Ear 2.5mm T03-00053-0451 Audio Accessory R Earpiece In-Ear Acoustic-Tube 3.5mm-RA-Jack 0.3m-Lead T03-00086-01xx Audio Accessory S Earpiece Ear-Bud C-Hook Black 3.5mm-RA-Jack 0.2m-Lead T03-00086-02xx Audio Accessory T Earpiece On-Ear D-Ring Black 3.5mm-RA-Jack 0.3m-Lead T03-00086-03xx Audio Accessory U Eartube In-Ear 2.5mm T03-00120-xAAD Audio Accessory V Eartube In-Ear 3.5mm Right Angle Jack T03-00120-xAAD Audio Accessory W C-Hook Shirt Lead Straight Jack 3.5mm T03-00120-xAAD Audio Accessory X Earhanger 2.5mm T03-00120-xAAD T03-00120-xAD T	Audio Accessory I	Headset Light-Weight Behind-Head Boom-Mic-with-PTT	T03-00046-Exxx
Audio Accessory LHeadset Savox HC-100 Helmet-Com Boom Mic Noise-Cancel 4-PoleT03-00046-HxxxAudio Accessory MHeadsetT03-00046-JxxxAudio Accessory NWire Surveillance KitT03-00047-AxxxAudio Accessory OCovert Kit Eartube-In-Ear Lapel-Mic-With-PTTT03-00047-BxxxAudio Accessory PCovert Kit Earhanger Lapel-Mic-With-PTTT03-00047-CxxxAudio Accessory QEarphone In-Ear 2.5mmT03-00053-0451Audio Accessory REarpiece In-Ear Acoustic-Tube 3.5mm-RA-Jack 0.3m-LeadT03-00086-01xxAudio Accessory SEarpiece Ear-Bud C-Hook Black 3.5mm-RA-Jack 0.2m-LeadT03-00086-02xxAudio Accessory TEarpiece On-Ear D-Ring Black 3.5mm-RA-Jack 0.3m-LeadT03-00086-03xxAudio Accessory UEartube In-Ear 2.5mmT03-00120-xAADAudio Accessory VEartube In-Ear 3.5mm Right Angle JackT03-00120-xAAEAudio Accessory WC-Hook Shirt Lead Straight Jack 3.5mmT03-00120-xAAJAudio Accessory XEarhanger 2.5mmT03-00120-xAAJAudio Accessory ATP8/9 Belt Clip 55mm (fits to battery)TPA-CA-201Body Worn Accessory BTP8/9 Belt Loop For D-Clip 55mmTPA-CA-206Body Worn Accessory CTP8/9 Belt Loop For D-Clip 75mmTPA-CA-208Body Worn Accessory FTP93/94 Carry Case Heavy Duty Leather No Key D-Stud Belt LoopT03-00038-0001Body Worn Accessory GTP93/94 Carry Case Heavy Duty Leather No Key Belt LoopT03-00038-0003Body Worn Accessory HTP93/94 Carry Case Heavy Duty Leather No Key Belt LoopT03-00038-0003	Audio Accessory J	Headset Heavy-Duty Overhead & Behind-Head	T03-00046-Fxxx
Audio Accessory M  Headset  T03-00046-Jxxx  Audio Accessory N  Wire Surveillance Kit  T03-00047-Axxx  Audio Accessory O  Covert Kit Eartube-In-Ear Lapel-Mic-With-PTT  T03-00047-Bxxx  Audio Accessory P  Covert Kit Eartube-In-Ear Lapel-Mic-With-PTT  T03-00047-Bxxx  Audio Accessory Q  Earphone In-Ear 2.5mm  T03-00053-0451  Audio Accessory R  Earpiece In-Ear Acoustic-Tube 3.5mm-RA-Jack 0.3m-Lead  T03-00086-01xx  Audio Accessory S  Earpiece Ear-Bud C-Hook Black 3.5mm-RA-Jack 0.2m-Lead  T03-00086-02xx  Audio Accessory T  Earpiece On-Ear D-Ring Black 3.5mm-RA-Jack 0.3m-Lead  T03-00086-03xx  Audio Accessory U  Eartube In-Ear 2.5mm  T03-00120-xAAD  Audio Accessory V  Eartube In-Ear 3.5mm Right Angle Jack  T03-00120-xAAD  Audio Accessory W  C-Hook Shirt Lead Straight Jack 3.5mm  T03-00120-xAAJ  Audio Accessory X  Earhanger 2.5mm  T03-00120-xAAJ  Audio Accessory X  Earhanger 2.5mm  T952-055  Body Worn Accessory A  TP8/9 Belt Clip 55mm (fits to battery)  TPA-CA-201  Body Worn Accessory C  TP8/9 Belt Loop For D-Clip 55mm  TPA-CA-206  Body Worn Accessory C  TP8/9 Belt Loop For D-Clip 75mm  TPA-CA-207  Body Worn Accessory E  TP93/94 Carry Case Heavy Duty Leather No Key D-Stud Belt Loop  T03-00038-0002  Body Worn Accessory G  TP93/94 Carry Case Heavy Duty Leather No Key Belt Loop  T03-00038-0003  Body Worn Accessory H  TP93/94 Carry Case Heavy Duty Leather No Key Belt Loop  T03-00038-0003	Audio Accessory K	Headset Hurricane II Behind Head	T03-00046-Gxxx
Audio Accessory N Wire Surveillance Kit T03-00047-Axxx Audio Accessory O Covert Kit Eartube-In-Ear Lapel-Mic-With-PTT T03-00047-Bxxx Audio Accessory P Covert Kit Earhanger Lapel-Mic-With-PTT T03-00047-Cxxx Audio Accessory Q Earphone In-Ear 2.5mm T03-00053-0451 Audio Accessory R Earpiece In-Ear Acoustic-Tube 3.5mm-RA-Jack 0.3m-Lead T03-00086-01xx Audio Accessory S Earpiece Ear-Bud C-Hook Black 3.5mm-RA-Jack 0.2m-Lead T03-00086-02xx Audio Accessory T Earpiece On-Ear D-Ring Black 3.5mm-RA-Jack 0.3m-Lead T03-00086-03xx Audio Accessory U Eartube In-Ear 2.5mm T03-00120-xAAD Audio Accessory V Eartube In-Ear 3.5mm Right Angle Jack T03-00120-xAAE Audio Accessory W C-Hook Shirt Lead Straight Jack 3.5mm T03-00120-xAAJ Audio Accessory X Earhanger 2.5mm T03-00120-xAAJ Audio Accessory X Earhanger 2.5mm T952-055 Body Worn Accessory A TP8/9 Belt Clip 55mm (fits to battery) TPA-CA-201 Body Worn Accessory C TP8/9 Belt Loop For D-Clip 75mm TPA-CA-206 Body Worn Accessory C TP8/9 Belt Loop For D-Clip 75mm Belt Clip TPA-CA-208 Body Worn Accessory E TP93/94 Carry Case Heavy Duty Leather No Key D-Stud Belt Loop T03-00038-0002 Body Worn Accessory G TP93/94 Carry Case Heavy Duty Leather No Key Belt Loop T03-00038-0003 Body Worn Accessory H TP93/94 Carry Case Heavy Duty Leather No Key Belt Loop T03-00038-0003	Audio Accessory L	Headset Savox HC-100 Helmet-Com Boom Mic Noise-Cancel 4-Pole	T03-00046-Hxxx
Audio Accessory O Covert Kit Eartube-In-Ear Lapel-Mic-With-PTT T03-00047-Bxxx Audio Accessory P Covert Kit Earhanger Lapel-Mic-With-PTT T03-00047-Cxxx Audio Accessory Q Earphone In-Ear 2.5mm T03-00053-0451 Audio Accessory R Earpiece In-Ear Acoustic-Tube 3.5mm-RA-Jack 0.3m-Lead T03-00086-01xx Audio Accessory S Earpiece Ear-Bud C-Hook Black 3.5mm-RA-Jack 0.2m-Lead T03-00086-02xx Audio Accessory T Earpiece On-Ear D-Ring Black 3.5mm-RA-Jack 0.3m-Lead T03-00086-03xx Audio Accessory U Eartube In-Ear 2.5mm T03-00120-xAAD Audio Accessory V Eartube In-Ear 3.5mm Right Angle Jack T03-00120-xAAE Audio Accessory W C-Hook Shirt Lead Straight Jack 3.5mm T03-00120-xAAJ Audio Accessory X Earhanger 2.5mm T03-00120-xAAJ Audio Accessory A TP8/9 Belt Clip 55mm (fits to battery) TPA-CA-201 Body Worn Accessory B TP8/9 Belt Loop For D-Clip 55mm TPA-CA-206 Body Worn Accessory C TP8/9 Belt Loop For D-Clip 75mm TPA-CA-207 Body Worn Accessory E TP93/94 Carry Case Heavy Duty Leather No Key D-Stud Belt Loop T03-00038-0002 Body Worn Accessory G TP93/94 Carry Case Heavy Duty Leather No Key Belt Loop T03-00038-0003 Body Worn Accessory H TP93/94 Carry Case Heavy Duty Leather No Key Belt Loop T03-00038-0003	Audio Accessory M Headset		T03-00046-Jxxx
Audio Accessory P Covert Kit Earhanger Lapel-Mic-With-PTT T03-00047-Cxxx Audio Accessory Q Earphone In-Ear 2.5mm T03-00053-0451 Audio Accessory R Earpiece In-Ear Acoustic-Tube 3.5mm-RA-Jack 0.3m-Lead T03-00086-01xx Audio Accessory S Earpiece Ear-Bud C-Hook Black 3.5mm-RA-Jack 0.2m-Lead T03-00086-02xx Audio Accessory T Earpiece On-Ear D-Ring Black 3.5mm-RA-Jack 0.3m-Lead T03-00086-03xx Audio Accessory U Eartube In-Ear 2.5mm T03-00120-xAAD Audio Accessory V Eartube In-Ear 3.5mm Right Angle Jack T03-00120-xAAE Audio Accessory W C-Hook Shirt Lead Straight Jack 3.5mm T03-00120-xAAJ Audio Accessory X Earhanger 2.5mm T03-00120-xAAJ Audio Accessory X Earhanger 2.5mm T78/9 Belt Clip 55mm (fits to battery) TPA-CA-201 Body Worn Accessory B TP8/9 Belt Loop For D-Clip 75mm TPA-CA-206 Body Worn Accessory C TP8/9 Belt Loop For D-Clip 75mm TPA-CA-207 Body Worn Accessory E TP93/94 Carry Case Heavy Duty Leather No Key D-Stud Belt Loop T03-00038-0002 Body Worn Accessory G TP93/94 Carry Case Heavy Duty Leather No Key Spring Clip T03-00038-0003 Body Worn Accessory G TP93/94 Carry Case Heavy Duty Leather No Key Belt Loop T03-00038-0003	Audio Accessory N	Wire Surveillance Kit	T03-00047-Axxx
Audio Accessory Q Earphone In-Ear 2.5mm T03-00053-0451 Audio Accessory R Earpiece In-Ear Acoustic-Tube 3.5mm-RA-Jack 0.3m-Lead T03-00086-01xx Audio Accessory S Earpiece Ear-Bud C-Hook Black 3.5mm-RA-Jack 0.2m-Lead T03-00086-02xx Audio Accessory T Earpiece On-Ear D-Ring Black 3.5mm-RA-Jack 0.3m-Lead T03-00086-03xx Audio Accessory U Eartube In-Ear 2.5mm T03-00120-xAAD Audio Accessory V Eartube In-Ear 3.5mm Right Angle Jack T03-00120-xAAE Audio Accessory W C-Hook Shirt Lead Straight Jack 3.5mm T03-00120-xAAJ Audio Accessory X Earhanger 2.5mm T03-00120-xAAJ Audio Accessory X Earhanger 2.5mm T952-055 Body Worn Accessory A TP8/9 Belt Clip 55mm (fits to battery) TPA-CA-201 Body Worn Accessory B TP8/9 Belt Loop For D-Clip 55mm TPA-CA-206 Body Worn Accessory C TP8/9 Belt Loop For D-Clip 75mm TPA-CA-207 Body Worn Accessory E TP93/94 Carry Case Heavy Duty Leather No Key D-Stud Belt Loop T03-00038-0002 Body Worn Accessory G TP93/94 Carry Case Heavy Duty Leather No Key Belt Loop T03-00038-0003 Body Worn Accessory G TP93/94 Carry Case Heavy Duty Leather No Key Belt Loop T03-00038-0003 Body Worn Accessory H TP93/94 Carry Case Heavy Duty Leather No Key Belt Loop T03-00038-0003	Audio Accessory O	Covert Kit Eartube-In-Ear Lapel-Mic-With-PTT	T03-00047-Bxxx
Audio Accessory R Earpiece In-Ear Acoustic-Tube 3.5mm-RA-Jack 0.3m-Lead T03-00086-01xx Audio Accessory S Earpiece Ear-Bud C-Hook Black 3.5mm-RA-Jack 0.2m-Lead T03-00086-02xx Audio Accessory T Earpiece On-Ear D-Ring Black 3.5mm-RA-Jack 0.3m-Lead T03-00086-03xx Audio Accessory U Eartube In-Ear 2.5mm T03-00120-xAAD Audio Accessory V Eartube In-Ear 3.5mm Right Angle Jack T03-00120-xAAD Audio Accessory W C-Hook Shirt Lead Straight Jack 3.5mm T03-00120-xAAJ Audio Accessory X Earhanger 2.5mm T952-055 Body Worn Accessory A TP8/9 Belt Clip 55mm (fits to battery) TPA-CA-201 Body Worn Accessory B TP8/9 Belt Loop For D-Clip 55mm TPA-CA-206 Body Worn Accessory C TP8/9 Belt Loop For D-Clip 75mm TPA-CA-207 Body Worn Accessory D TP8/9 Belt Clip Adptr for 55mm Belt Clip TPA-CA-208 Body Worn Accessory E TP93/94 Carry Case Heavy Duty Leather No Key D-Stud Belt Loop T03-00038-0002 Body Worn Accessory G TP93/94 Carry Case Heavy Duty Leather No Key Belt Loop T03-00038-0003 Body Worn Accessory H TP93/94 Carry Case Heavy Duty Leather No Key Belt Loop T03-00038-0003 Body Worn Accessory H TP93/94 Carry Case Heavy Duty Leather No Key Belt Loop T03-00038-0003	Audio Accessory P Covert Kit Earhanger Lapel-Mic-With-PTT		T03-00047-Cxxx
Audio Accessory S Earpiece Ear-Bud C-Hook Black 3.5mm-RA-Jack 0.2m-Lead T03-00086-02xx Audio Accessory T Earpiece On-Ear D-Ring Black 3.5mm-RA-Jack 0.3m-Lead T03-00086-03xx Audio Accessory U Eartube In-Ear 2.5mm T03-00120-xAAD Audio Accessory V Eartube In-Ear 3.5mm Right Angle Jack T03-00120-xAAE Audio Accessory W C-Hook Shirt Lead Straight Jack 3.5mm T03-00120-xAAJ Audio Accessory X Earhanger 2.5mm T03-00120-xAAJ Audio Accessory X Earhanger 2.5mm TP8/9 Belt Clip 55mm (fits to battery) TPA-CA-201 Body Worn Accessory B TP8/9 Belt Loop For D-Clip 55mm TPA-CA-206 Body Worn Accessory C TP8/9 Belt Loop For D-Clip 75mm TPA-CA-207 Body Worn Accessory D TP8/9 Belt Clip Adptr for 55mm Belt Clip TPA-CA-208 Body Worn Accessory E TP93/94 Carry Case Heavy Duty Leather No Key D-Stud Belt Loop T03-00038-0001 Body Worn Accessory G TP93/94 Carry Case Heavy Duty Leather No Key Belt Loop T03-00038-0003 Body Worn Accessory H TP93/94 Carry Case Heavy Duty Leather No Key Belt Loop T03-00038-0003	Audio Accessory Q	Earphone In-Ear 2.5mm	T03-00053-0451
Audio Accessory T Earpiece On-Ear D-Ring Black 3.5mm-RA-Jack 0.3m-Lead T03-00086-03xx Audio Accessory U Eartube In-Ear 2.5mm T03-00120-xAAD Audio Accessory V Eartube In-Ear 3.5mm Right Angle Jack T03-00120-xAAE Audio Accessory W C-Hook Shirt Lead Straight Jack 3.5mm T03-00120-xAAJ Audio Accessory X Earhanger 2.5mm T952-055 Body Worn Accessory A TP8/9 Belt Clip 55mm (fits to battery) TPA-CA-201 Body Worn Accessory C TP8/9 Belt Loop For D-Clip 55mm TPA-CA-206 Body Worn Accessory C TP8/9 Belt Clip Adptr for 55mm Belt Clip TPA-CA-208 Body Worn Accessory E TP93/94 Carry Case Heavy Duty Leather No Key D-Stud Belt Loop T03-00038-0002 Body Worn Accessory G TP93/94 Carry Case Heavy Duty Leather No Key Belt Loop T03-00038-0003 Body Worn Accessory H TP93/94 Carry Case Heavy Duty Leather No Key Belt Loop T03-00038-0003	Audio Accessory R	Earpiece In-Ear Acoustic-Tube 3.5mm-RA-Jack 0.3m-Lead	T03-00086-01xx
Audio Accessory U Eartube In-Ear 2.5mm T03-00120-xAAD Audio Accessory V Eartube In-Ear 3.5mm Right Angle Jack T03-00120-xAAE Audio Accessory W C-Hook Shirt Lead Straight Jack 3.5mm T03-00120-xAAJ Audio Accessory X Earhanger 2.5mm T952-055 Body Worn Accessory A TP8/9 Belt Clip 55mm (fits to battery) TPA-CA-201 Body Worn Accessory B TP8/9 Belt Loop For D-Clip 55mm TPA-CA-206 Body Worn Accessory C TP8/9 Belt Loop For D-Clip 75mm TPA-CA-207 Body Worn Accessory D TP8/9 Belt Clip Adptr for 55mm Belt Clip TPA-CA-208 Body Worn Accessory E TP93/94 Carry Case Heavy Duty Leather No Key D-Stud Belt Loop T03-00038-0002 Body Worn Accessory G TP93/94 Carry Case Heavy Duty Leather No Key Belt Loop T03-00038-0003 Body Worn Accessory H TP93/94 Carry Case Heavy Duty Leather No Key Belt Loop T03-00038-0003 Body Worn Accessory H TP93/94 Carry Case Heavy Duty Leather No Key Belt Loop T03-00038-0003	Audio Accessory S	Earpiece Ear-Bud C-Hook Black 3.5mm-RA-Jack 0.2m-Lead	T03-00086-02xx
Audio Accessory V  Eartube In-Ear 3.5mm Right Angle Jack  O-Hook Shirt Lead Straight Jack 3.5mm  T03-00120-xAAJ  Audio Accessory X  Earhanger 2.5mm  T952-055  Body Worn Accessory A  TP8/9 Belt Clip 55mm (fits to battery)  TPA-CA-201  Body Worn Accessory B  TP8/9 Belt Loop For D-Clip 55mm  TPA-CA-206  Body Worn Accessory C  TP8/9 Belt Loop For D-Clip 75mm  TPA-CA-207  Body Worn Accessory D  TP8/9 Belt Clip Adptr for 55mm Belt Clip  TPA-CA-208  Body Worn Accessory E  TP93/94 Carry Case Heavy Duty Leather No Key D-Stud Belt Loop  T03-00038-0002  Body Worn Accessory G  TP93/94 Carry Case Heavy Duty Leather No Key Belt Loop  T03-00038-0003  Body Worn Accessory H  TP93/94 Carry Case Heavy Duty Leather No Key Belt Loop  T03-00038-0003  T03-00038-0003	Audio Accessory T	Earpiece On-Ear D-Ring Black 3.5mm-RA-Jack 0.3m-Lead	T03-00086-03xx
Audio Accessory W  C-Hook Shirt Lead Straight Jack 3.5mm  T03-00120-xAAJ  Audio Accessory X  Earhanger 2.5mm  TP8/9 Belt Clip 55mm (fits to battery)  TPA-CA-201  Body Worn Accessory B  TP8/9 Belt Loop For D-Clip 55mm  TPA-CA-206  Body Worn Accessory C  TP8/9 Belt Loop For D-Clip 75mm  TPA-CA-207  Body Worn Accessory D  TP8/9 Belt Clip Adptr for 55mm Belt Clip  TPA-CA-208  Body Worn Accessory E  TP93/94 Carry Case Heavy Duty Leather No Key D-Stud Belt Loop  T03-00038-0001  Body Worn Accessory G  TP93/94 Carry Case Heavy Duty Leather No Key Spring Clip  T03-00038-0002  Body Worn Accessory G  TP93/94 Carry Case Heavy Duty Leather No Key Belt Loop  T03-00038-0003  Body Worn Accessory H  TP93/94 Carry Case Heavy Duty Leather No Key Belt Loop  T03-00038-0003	Audio Accessory U	Eartube In-Ear 2.5mm	T03-00120-xAAD
Audio Accessory X  Earhanger 2.5mm  TP8/9 Belt Clip 55mm (fits to battery)  TPA-CA-201  Body Worn Accessory B  TP8/9 Belt Loop For D-Clip 55mm  TPA-CA-206  Body Worn Accessory C  TP8/9 Belt Loop For D-Clip 75mm  TPA-CA-207  Body Worn Accessory D  TP8/9 Belt Clip Adptr for 55mm Belt Clip  TPA-CA-208  Body Worn Accessory E  TP93/94 Carry Case Heavy Duty Leather No Key D-Stud Belt Loop  T03-00038-0001  Body Worn Accessory G  TP93/94 Carry Case Heavy Duty Leather No Key Belt Loop  T03-00038-0002  Body Worn Accessory G  TP93/94 Carry Case Heavy Duty Leather No Key Belt Loop  T03-00038-0003  Body Worn Accessory H  TP93/94 Carry Case Heavy Duty Leather 4Key D-Stud Belt Loop  T03-00038-0004	Audio Accessory V	Eartube In-Ear 3.5mm Right Angle Jack	T03-00120-xAAE
Body Worn Accessory ATP8/9 Belt Clip 55mm (fits to battery)TPA-CA-201Body Worn Accessory BTP8/9 Belt Loop For D-Clip 55mmTPA-CA-206Body Worn Accessory CTP8/9 Belt Loop For D-Clip 75mmTPA-CA-207Body Worn Accessory DTP8/9 Belt Clip Adptr for 55mm Belt ClipTPA-CA-208Body Worn Accessory ETP93/94 Carry Case Heavy Duty Leather No Key D-Stud Belt LoopT03-00038-0001Body Worn Accessory FTP93/94 Carry Case Heavy Duty Leather No Key Spring ClipT03-00038-0002Body Worn Accessory GTP93/94 Carry Case Heavy Duty Leather No Key Belt LoopT03-00038-0003Body Worn Accessory HTP93/94 Carry Case Heavy Duty Leather 4Key D-Stud Belt LoopT03-00038-0004	Audio Accessory W	C-Hook Shirt Lead Straight Jack 3.5mm	T03-00120-xAAJ
Body Worn Accessory BTP8/9 Belt Loop For D-Clip 55mmTPA-CA-206Body Worn Accessory CTP8/9 Belt Loop For D-Clip 75mmTPA-CA-207Body Worn Accessory DTP8/9 Belt Clip Adptr for 55mm Belt ClipTPA-CA-208Body Worn Accessory ETP93/94 Carry Case Heavy Duty Leather No Key D-Stud Belt LoopT03-00038-0001Body Worn Accessory FTP93/94 Carry Case Heavy Duty Leather No Key Spring ClipT03-00038-0002Body Worn Accessory GTP93/94 Carry Case Heavy Duty Leather No Key Belt LoopT03-00038-0003Body Worn Accessory HTP93/94 Carry Case Heavy Duty Leather 4Key D-Stud Belt LoopT03-00038-0004	Audio Accessory X	Earhanger 2.5mm	T952-055
Body Worn Accessory C TP8/9 Belt Loop For D-Clip 75mm TPA-CA-207  Body Worn Accessory D TP8/9 Belt Clip Adptr for 55mm Belt Clip TPA-CA-208  Body Worn Accessory E TP93/94 Carry Case Heavy Duty Leather No Key D-Stud Belt Loop T03-00038-0001  Body Worn Accessory F TP93/94 Carry Case Heavy Duty Leather No Key Spring Clip T03-00038-0002  Body Worn Accessory G TP93/94 Carry Case Heavy Duty Leather No Key Belt Loop T03-00038-0003  Body Worn Accessory H TP93/94 Carry Case Heavy Duty Leather 4Key D-Stud Belt Loop T03-00038-0004	Body Worn Accessory A	TP8/9 Belt Clip 55mm (fits to battery)	TPA-CA-201
Body Worn Accessory DTP8/9 Belt Clip Adptr for 55mm Belt ClipTPA-CA-208Body Worn Accessory ETP93/94 Carry Case Heavy Duty Leather No Key D-Stud Belt LoopT03-00038-0001Body Worn Accessory FTP93/94 Carry Case Heavy Duty Leather No Key Spring ClipT03-00038-0002Body Worn Accessory GTP93/94 Carry Case Heavy Duty Leather No Key Belt LoopT03-00038-0003Body Worn Accessory HTP93/94 Carry Case Heavy Duty Leather 4Key D-Stud Belt LoopT03-00038-0004	Body Worn Accessory B	TP8/9 Belt Loop For D-Clip 55mm	TPA-CA-206
Body Worn Accessory E TP93/94 Carry Case Heavy Duty Leather No Key D-Stud Belt Loop T03-00038-0001  Body Worn Accessory F TP93/94 Carry Case Heavy Duty Leather No Key Spring Clip T03-00038-0002  Body Worn Accessory G TP93/94 Carry Case Heavy Duty Leather No Key Belt Loop T03-00038-0003  Body Worn Accessory H TP93/94 Carry Case Heavy Duty Leather 4Key D-Stud Belt Loop T03-00038-0004	Body Worn Accessory C TP8/9 Belt Loop For D-Clip 75mm		TPA-CA-207
Body Worn Accessory FTP93/94 Carry Case Heavy Duty Leather No Key Spring ClipT03-00038-0002Body Worn Accessory GTP93/94 Carry Case Heavy Duty Leather No Key Belt LoopT03-00038-0003Body Worn Accessory HTP93/94 Carry Case Heavy Duty Leather 4Key D-Stud Belt LoopT03-00038-0004	Body Worn Accessory D	TP8/9 Belt Clip Adptr for 55mm Belt Clip	TPA-CA-208
Body Worn Accessory GTP93/94 Carry Case Heavy Duty Leather No Key Belt LoopT03-00038-0003Body Worn Accessory HTP93/94 Carry Case Heavy Duty Leather 4Key D-Stud Belt LoopT03-00038-0004	Body Worn Accessory E	TP93/94 Carry Case Heavy Duty Leather No Key D-Stud Belt Loop	T03-00038-0001
Body Worn Accessory H TP93/94 Carry Case Heavy Duty Leather 4Key D-Stud Belt Loop T03-00038-0004	Body Worn Accessory F	TP93/94 Carry Case Heavy Duty Leather No Key Spring Clip	T03-00038-0002
	Body Worn Accessory G	TP93/94 Carry Case Heavy Duty Leather No Key Belt Loop	T03-00038-0003
Body Worn Accessory I TP93/94 Carry Case Heavy Duty Leather 4Key Spring Clip T03-00038-0005	Body Worn Accessory H	TP93/94 Carry Case Heavy Duty Leather 4Key D-Stud Belt Loop	T03-00038-0004
	Body Worn Accessory I	TP93/94 Carry Case Heavy Duty Leather 4Key Spring Clip	T03-00038-0005



Body Worn Accessory J	TP93/94 Carry Case Heavy Duty Leather 4Key Belt Loop	T03-00038-0006
Body Worn Accessory K	TP93/94 Carry Case Heavy Duty Leather 16Key D-Stud Belt Loop	T03-00038-0007
Body Worn Accessory L	TP93/94 Carry Case Heavy Duty Leather 16Key Spring Clip	T03-00038-0008
Body Worn Accessory M	TP93/94 Carry Case Heavy Duty Leather 16Key Belt Loop	T03-00038-0009
Body Worn Accessory N	TP93/94 Carry Case Nylon No Key D-Stud Belt Loop	T03-00038-0010
Body Worn Accessory O	TP93/94 Carry Case Nylon No Key Belt Loop	T03-00038-0011
Body Worn Accessory P	TP93/94 Carry Case Nylon No Key Use Battery Belt Clip	T03-00038-0012
Body Worn Accessory Q	TP93/94 Carry Case Nylon 4Key D-Stud Belt Loop	T03-00038-0013
Body Worn Accessory R	TP93/94 Carry Case Nylon 4Key Belt Loop	T03-00038-0014
Body Worn Accessory S	TP93/94 Carry Case Nylon 4Key Use Battery Belt Clip	T03-00038-0015
Body Worn Accessory T	TP93/94 Carry Case Nylon 16Key D-Stud Belt loop	T03-00038-0016
Body Worn Accessory U	TP93/94 Carry Case Nylon 16Key Belt Loop	T03-00038-0017
Body Worn Accessory V	TP93/94 Carry Case Nylon 16Key Use Battery Belt Clip	T03-00038-0018
Body Worn Accessory W	TP93/94 Carry Case Soft Leather No Key Use Battery Belt Clip	T03-00038-0019
Body Worn Accessory X	TP93/94 Carry Case Soft Leather 4Key Use Battery Belt Clip	T03-00038-0020
Body Worn Accessory Y	TP93/94 Carry Case Soft Leather 16Key Use Battery Belt Clip	T03-00038-0021
Body Worn Accessory Z	TP8/9 Belt Loop For D-Stud 55mm	T03-00038-0022
Body Worn Accessory AA	TP8/9 Spring Clip For D-Stud 40mm	T03-00038-0023
Body Worn Accessory AB	TP93/94 Carry Case Nylon Orange No Key Use Battery Belt Clip	T03-00038-0024
Body Worn Accessory AC	TP93/94 Carry Case Nylon Orange 4Key Use Battery Belt Clip	T03-00038-0025
Body Worn Accessory AD	TP93/94 Carry Case Nylon Orange 16Key Use Battery Belt Clip	T03-00038-0026
Body Worn Accessory AE	TP93/94 Carry Case Nylon No Key D-Stud plus Chest Harness	T03-00038-0027
Body Worn Accessory AF	TP93/94 Carry Case Nylon 4Key D-Stud plus Chest Harness	T03-00038-0028
Body Worn Accessory AG	TP93/94 Carry Case Nylon 16Key D-Stud plus Chest Harness	T03-00038-0029
Body Worn Accessory AH	TP93/94 Battery Spacer For Carry Case Heavy Duty Leather	T03-00038-0030
Body Worn Accessory Al	TP93/94 Carry Case Polyester Green No Key Use Battery Belt Clip	T03-00038-0031
Body Worn Accessory AJ	TP93/94 Carry Case Polyester Green 4Key Use Battery Belt Clip	T03-00038-0032
Body Worn Accessory AK	TP93/94 Carry Case Polyester Green 16Key Use Battery Belt Clip	T03-00038-0033
Body Worn Accessory AL	TP8/9 Shoulder Strap For Carry Case Heavy Duty Leather	T03-00038-0034
Body Worn Accessory AM	TP93/94 Carry Case Heavy Duty Leather No Key Belt Loop D-rings	T03-00038-0035
Body Worn Accessory AN	TP93/94 Carry Case Heavy Duty Leather 4Key Belt Loop D-rings	T03-00038-0036
Body Worn Accessory AO	TP93/94 Carry Case Heavy Duty Leather 16Key Belt Loop D-rings	T03-00038-0037

Audio Accessory A was chosen for the testing body worn radio configuration. Audio Accessory B-X are excluded per KDB 643646 D01 v01r01 page 10 1) A). The following tables shows all combinations with the tested combination marked yes.

## **Radio Face Test**

An	tenna A	An	tenna B
Battery A Battery B/C/D		Battery A	Battery B/C/D
Yes Yes		Yes	Yes



# **Radio Body Test**

						Ante	enna A					
Audio Accessory	Audi	o Accessory	/ A	Audio	Accessory			Accessory	С	Audio	Accessory	D
	Bat A	Bat B/C	Bat D	Bat A	Bat B/C	Bat D	Bat A	Bat B/C	Bat D	Bat A	Bat B/C	Bat D
Body Worn A	Yes	Yes	Yes	No	No	No	No	No	No	No	No	No
Body Worn B	No	No	No	No	No	No	No	No	No	No	No	No
Body Worn C	No	No	No	No	No	No	No	No	No	No	No	No
Body Worn D	No	No	No	No	No	No	No	No	No	No	No	No
Body Worn E	No	No	No	No	No	No	No	No	No	No	No	No
Body Worn F	No	No	No	No	No	No	No	No	No	No	No	No
Body Worn G	No	No	No	No	No	No	No	No	No	No	No	No
Body Worn H	No	No	No	No	No	No	No	No	No	No	No	No
Body Worn I	No	No	No	No	No	No	No	No	No	No	No	No
Body Worn J	No	No	No	No	No	No	No	No	No	No	No	No
Body Worn K	No	No	No	No	No	No	No	No	No	No	No	No
Body Worn L	No	No	No	No	No	No	No	No	No	No	No	No
Body Worn M	No	No	No	No	No	No	No	No	No	No	No	No
Body Worn N	No	No	No	No	No	No	No	No	No	No	No	No
Body Worn O	No	No	No	No	No	No	No	No	No	No	No	No
Body Worn P	No	No	No	No	No	No	No	No	No	No	No	No
Body Worn Q	No	No	No	No	No	No	No	No	No	No	No	No
Body Worn R	No	No	No	No	No	No	No	No	No	No	No	No
Body Worn S	No	No	No	No	No	No	No	No	No	No	No	No
Body Worn T	No	No	No	No	No	No	No	No	No	No	No	No
Body Worn U	No	No	No	No	No	No	No	No	No	No	No	No
Body Worn V	No	No	No	No	No	No	No	No	No	No	No	No
Body Worn W	No	No	No	No	No	No	No	No	No	No	No	No
Body Worn X	No	No	No	No	No	No	No	No	No	No	No	No
Body Worn Y	No	No	No	No	No	No	No	No	No	No	No	No
Body Worn Z	No	No	No	No	No	No	No	No	No	No	No	No
Body Worn AA	No	No	No	No	No	No	No	No	No	No	No	No
Body Worn AB	No	No	No	No	No	No	No	No	No	No	No	No
Body Worn AC	No	No	No	No	No	No	No	No	No	No	No	No
Body Worn AD	No	No	No	No	No	No	No	No	No	No	No	No
Body Worn AE	No	No	No	No	No	No	No	No	No	No	No	No
Body Worn AF	No	No	No	No	No	No	No	No	No	No	No	No
Body Worn AG	No	No	No	No	No	No	No	No	No	No	No	No
Body Worn AH	No	No	No	No	No	No	No	No	No	No	No	No
Body Worn Al	No	No	No	No	No	No	No	No	No	No	No	No
Body Worn AJ	No	No	No	No	No	No	No	No	No	No	No	No
Body Worn AK	No	No	No	No	No	No	No	No	No	No	No	No
Body Worn AL	No	No	No	No	No	No	No	No	No	No	No	No
Body Worn AM	No	No	No	No	No	No	No	No	No	No	No	No
Body Worn AN	No	No	No	No	No	No	No	No	No	No	No	No
Body Worn AO	Yes	Yes	Yes	No	No	No	No	No	No	No	No	No



						Ante	enna A					
Audio Accessory	Audi	io Accessory	/ E	Audi	o Accessor	y F	Audio	Accessory	G	Audio	Accessory	Н
	Bat A	Bat B/C	Bat D	Bat A	Bat B/C	Bat D	Bat A	Bat B/C	Bat D	Bat A	Bat B/C	Bat D
Body Worn A	No	No	No	No	No	No	No	No	No	No	No	No
Body Worn B	No	No	No	No	No	No	No	No	No	No	No	No
Body Worn C	No	No	No	No	No	No	No	No	No	No	No	No
Body Worn D	No	No	No	No	No	No	No	No	No	No	No	No
Body Worn E	No	No	No	No	No	No	No	No	No	No	No	No
Body Worn F	No	No	No	No	No	No	No	No	No	No	No	No
Body Worn G	No	No	No	No	No	No	No	No	No	No	No	No
Body Worn H	No	No	No	No	No	No	No	No	No	No	No	No
Body Worn I	No	No	No	No	No	No	No	No	No	No	No	No
Body Worn J	No	No	No	No	No	No	No	No	No	No	No	No
Body Worn K	No	No	No	No	No	No	No	No	No	No	No	No
Body Worn L	No	No	No	No	No	No	No	No	No	No	No	No
Body Worn M	No	No	No	No	No	No	No	No	No	No	No	No
Body Worn N	No	No	No	No	No	No	No	No	No	No	No	No
Body Worn O	No	No	No	No	No	No	No	No	No	No	No	No
Body Worn P	No	No	No	No	No	No	No	No	No	No	No	No
Body Worn Q	No	No	No	No	No	No	No	No	No	No	No	No
Body Worn R	No	No	No	No	No	No	No	No	No	No	No	No
Body Worn S	No	No	No	No	No	No	No	No	No	No	No	No
Body Worn T	No	No	No	No	No	No	No	No	No	No	No	No
Body Worn U	No	No	No	No	No	No	No	No	No	No	No	No
Body Worn V	No	No	No	No	No	No	No	No	No	No	No	No
Body Worn W	No	No	No	No	No	No	No	No	No	No	No	No
Body Worn X	No	No	No	No	No	No	No	No	No	No	No	No
Body Worn Y	No	No	No	No	No	No	No	No	No	No	No	No
Body Worn Z	No	No	No	No	No	No	No	No	No	No	No	No
Body Worn AA	No	No	No	No	No	No	No	No	No	No	No	No
Body Worn AB	No	No	No	No	No	No	No	No	No	No	No	No
Body Worn AC	No	No	No	No	No	No	No	No	No	No	No	No
Body Worn AD	No	No	No	No	No	No	No	No	No	No	No	No
Body Worn AE	No	No	No	No	No	No	No	No	No	No	No	No
Body Worn AF	No	No	No	No	No	No	No	No	No	No	No	No
Body Worn AG	No	No	No	No	No	No	No	No	No	No	No	No
Body Worn AH	No	No	No	No	No	No	No	No	No	No	No	No
Body Worn Al	No	No	No	No	No	No	No	No	No	No	No	No
Body Worn AJ	No	No	No	No	No	No	No	No	No	No	No	No
Body Worn AK	No	No	No	No	No	No	No	No	No	No	No	No
Body Worn AL	No	No	No	No	No	No	No	No	No	No	No	No
Body Worn AM	No	No	No	No	No	No	No	No	No	No	No	No
Body Worn AN	No	No	No	No	No	No	No	No	No	No	No	No
Body Worn AO	No	No	No	No	No	No	No	No	No	No	No	No



						Anto	enna A					
Audio Accessory	Aud	io Accessor	y I	Audi	o Accessor	y J	Audio	Accessory	K	Audio	Accessory	<sup>/</sup> L
	Bat A	Bat B/C	Bat D	Bat A	Bat B/C	Bat D	Bat A	Bat B/C	Bat D	Bat A	Bat B/C	Bat D
Body Worn A	No	No	No	No	No	No	No	No	No	No	No	No
Body Worn B	No	No	No	No	No	No	No	No	No	No	No	No
Body Worn C	No	No	No	No	No	No	No	No	No	No	No	No
Body Worn D	No	No	No	No	No	No	No	No	No	No	No	No
Body Worn E	No	No	No	No	No	No	No	No	No	No	No	No
Body Worn F	No	No	No	No	No	No	No	No	No	No	No	No
Body Worn G	No	No	No	No	No	No	No	No	No	No	No	No
Body Worn H	No	No	No	No	No	No	No	No	No	No	No	No
Body Worn I	No	No	No	No	No	No	No	No	No	No	No	No
Body Worn J	No	No	No	No	No	No	No	No	No	No	No	No
Body Worn K	No	No	No	No	No	No	No	No	No	No	No	No
Body Worn L	No	No	No	No	No	No	No	No	No	No	No	No
Body Worn M	No	No	No	No	No	No	No	No	No	No	No	No
Body Worn N	No	No	No	No	No	No	No	No	No	No	No	No
Body Worn O	No	No	No	No	No	No	No	No	No	No	No	No
Body Worn P	No	No	No	No	No	No	No	No	No	No	No	No
Body Worn Q	No	No	No	No	No	No	No	No	No	No	No	No
Body Worn R	No	No	No	No	No	No	No	No	No	No	No	No
Body Worn S	No	No	No	No	No	No	No	No	No	No	No	No
Body Worn T	No	No	No	No	No	No	No	No	No	No	No	No
Body Worn U	No	No	No	No	No	No	No	No	No	No	No	No
Body Worn V	No	No	No	No	No	No	No	No	No	No	No	No
Body Worn W	No	No	No	No	No	No	No	No	No	No	No	No
Body Worn X	No	No	No	No	No	No	No	No	No	No	No	No
Body Worn Y	No	No	No	No	No	No	No	No	No	No	No	No
Body Worn Z	No	No	No	No	No	No	No	No	No	No	No	No
Body Worn AA	No	No	No	No	No	No	No	No	No	No	No	No
Body Worn AB	No	No	No	No	No	No	No	No	No	No	No	No
Body Worn AC	No	No	No	No	No	No	No	No	No	No	No	No
Body Worn AD	No	No	No	No	No	No	No	No	No	No	No	No
Body Worn AE	No	No	No	No	No	No	No	No	No	No	No	No
Body Worn AF	No	No	No	No	No	No	No	No	No	No	No	No
Body Worn AG	No	No	No	No	No	No	No	No	No	No	No	No
Body Worn AH	No	No	No	No	No	No	No	No	No	No	No	No
Body Worn Al	No	No	No	No	No	No	No	No	No	No	No	No
Body Worn AJ	No	No	No	No	No	No	No	No	No	No	No	No
Body Worn AK	No	No	No	No	No	No	No	No	No	No	No	No
Body Worn AL	No	No	No	No	No	No	No	No	No	No	No	No
•		+				No					1	
Body Worn AM	No	No	No	No No	No		No	No	No	No	No	No
Body Worn AN	No	No	No	No No	No	No	No	No	No	No	No	No
Body Worn AO	No	No	No	No	No	No	No	No	No	No	No	No



						Ante	enna A					
Audio Accessory	Audi	o Accessory	М	Audio	Accessory	' N	Audio	Accessory	0	Audio	o Accessory	Р
·	Bat A	Bat B/C	Bat D	Bat A	Bat B/C	Bat D	Bat A	Bat B/C	Bat D	Bat A	Bat B/C	Bat D
Body Worn A	No	No	No	No	No	No	No	No	No	No	No	No
Body Worn B	No	No	No	No	No	No	No	No	No	No	No	No
Body Worn C	No	No	No	No	No	No	No	No	No	No	No	No
Body Worn D	No	No	No	No	No	No	No	No	No	No	No	No
Body Worn E	No	No	No	No	No	No	No	No	No	No	No	No
Body Worn F	No	No	No	No	No	No	No	No	No	No	No	No
Body Worn G	No	No	No	No	No	No	No	No	No	No	No	No
Body Worn H	No	No	No	No	No	No	No	No	No	No	No	No
Body Worn I	No	No	No	No	No	No	No	No	No	No	No	No
Body Worn J	No	No	No	No	No	No	No	No	No	No	No	No
Body Worn K	No	No	No	No	No	No	No	No	No	No	No	No
Body Worn L	No	No	No	No	No	No	No	No	No	No	No	No
Body Worn M	No	No	No	No	No	No	No	No	No	No	No	No
Body Worn N	No	No	No	No	No	No	No	No	No	No	No	No
Body Worn O	No	No	No	No	No	No	No	No	No	No	No	No
Body Worn P	No	No	No	No	No	No	No	No	No	No	No	No
Body Worn Q	No	No	No	No	No	No	No	No	No	No	No	No
Body Worn R	No	No	No	No	No	No	No	No	No	No	No	No
Body Worn S	No	No	No	No	No	No	No	No	No	No	No	No
Body Worn T	No	No	No	No	No	No	No	No	No	No	No	No
Body Worn U	No	No	No	No	No	No	No	No	No	No	No	No
Body Worn V	No	No	No	No	No	No	No	No	No	No	No	No
Body Worn W	No	No	No	No	No	No	No	No	No	No	No	No
Body Worn X	No	No	No	No	No	No	No	No	No	No	No	No
Body Worn Y	No	No	No	No	No	No	No	No	No	No	No	No
Body Worn Z	No	No	No	No	No	No	No	No	No	No	No	No
Body Worn AA	No	No	No	No	No	No	No	No	No	No	No	No
Body Worn AB	No	No	No	No	No	No	No	No	No	No	No	No
Body Worn AC	No	No	No	No	No	No	No	No	No	No	No	No
Body Worn AD	No	No	No	No	No	No	No	No	No	No	No	No
Body Worn AE	No	No	No	No	No	No	No	No	No	No	No	No
Body Worn AF	No	No	No	No	No	No	No	No	No	No	No	No
Body Worn AG	No	No	No	No	No	No	No	No	No	No	No	No
Body Worn AH	No	No	No	No	No	No	No	No	No	No	No	No
Body Worn Al	No	No	No	No	No	No	No	No	No	No	No	No
Body Worn AJ	No	No	No	No	No	No	No	No	No	No	No	No
Body Worn AK	No	No	No	No	No	No	No	No	No	No	No	No
Body Worn AL	No	No	No	No	No	No	No	No	No	No	No	No
Body Worn AM	No	No	No	No	No	No	No	No	No	No	No	No
Body Worn AN	No	No	No	No	No	No	No	No	No	No	No	No
Body Worn AO	No	No	No	No	No	No	No	No	No	No	No	No



						Ante	enna A					
<b>Audio Accessory</b>	Audi	o Accessory	, Q	Audi	o Accessory	/ R	Audio	Accessory	S	Audio	Accessory	T
	Bat A	Bat B/C	Bat D	Bat A	Bat B/C	Bat D	Bat A	Bat B/C	Bat D	Bat A	Bat B/C	Bat D
Body Worn A	No	No	No	No	No	No	No	No	No	No	No	No
Body Worn B	No	No	No	No	No	No	No	No	No	No	No	No
Body Worn C	No	No	No	No	No	No	No	No	No	No	No	No
Body Worn D	No	No	No	No	No	No	No	No	No	No	No	No
Body Worn E	No	No	No	No	No	No	No	No	No	No	No	No
Body Worn F	No	No	No	No	No	No	No	No	No	No	No	No
Body Worn G	No	No	No	No	No	No	No	No	No	No	No	No
Body Worn H	No	No	No	No	No	No	No	No	No	No	No	No
Body Worn I	No	No	No	No	No	No	No	No	No	No	No	No
Body Worn J	No	No	No	No	No	No	No	No	No	No	No	No
Body Worn K	No	No	No	No	No	No	No	No	No	No	No	No
Body Worn L	No	No	No	No	No	No	No	No	No	No	No	No
Body Worn M	No	No	No	No	No	No	No	No	No	No	No	No
Body Worn N	No	No	No	No	No	No	No	No	No	No	No	No
Body Worn O	No	No	No	No	No	No	No	No	No	No	No	No
Body Worn P	No	No	No	No	No	No	No	No	No	No	No	No
Body Worn Q	No	No	No	No	No	No	No	No	No	No	No	No
Body Worn R	No	No	No	No	No	No	No	No	No	No	No	No
Body Worn S	No	No	No	No	No	No	No	No	No	No	No	No
Body Worn T	No	No	No	No	No	No	No	No	No	No	No	No
Body Worn U	No	No	No	No	No	No	No	No	No	No	No	No
Body Worn V	No	No	No	No	No	No	No	No	No	No	No	No
Body Worn W	No	No	No	No	No	No	No	No	No	No	No	No
Body Worn X	No	No	No	No	No	No	No	No	No	No	No	No
Body Worn Y	No	No	No	No	No	No	No	No	No	No	No	No
Body Worn Z	No	No	No	No	No	No	No	No	No	No	No	No
Body Worn AA	No	No	No	No	No	No	No	No	No	No	No	No
Body Worn AB	No	No	No	No	No	No	No	No	No	No	No	No
Body Worn AC	No	No	No	No	No	No	No	No	No	No	No	No
Body Worn AD	No	No	No	No	No	No	No	No	No	No	No	No
Body Worn AE	No	No	No	No	No	No	No	No	No	No	No	No
Body Worn AF	No	No	No	No	No	No	No	No	No	No	No	No
Body Worn AG	No	No	No	No	No	No	No	No	No	No	No	No
Body Worn AH	No	No	No	No	No	No	No	No	No	No	No	No
Body Worn Al	No	No	No	No	No	No	No	No	No	No	No	No
Body Worn AJ	No	No	No	No	No	No	No	No	No	No	No	No
Body Worn AK	No	No	No	No	No	No	No	No	No	No	No	No
Body Worn AL	No	No	No	No	No	No	No	No	No	No	No	No
Body Worn AM	No	No	No	No	No	No	No	No	No	No	No	No
Body Worn AN	No	No	No	No	No	No	No	No	No	No	No	No
Body Worn AO	No	No	No	No	No	No	No	No	No	No	No	No
BODY WOITI AO	INU	INU	NO	INU	INU	INU	INU	INU	INU	INU	INU	INU



						Ante	enna A					
<b>Audio Accessory</b>	Audi	o Accessory	/ U	Audio	o Accessory	/ V	Audio	Accessory	W	Audio	Accessory	Χ
	Bat A	Bat B/C	Bat D	Bat A	Bat B/C	Bat D	Bat A	Bat B/C	Bat D	Bat A	Bat B/C	Bat D
Body Worn A	No	No	No	No	No	No	No	No	No	No	No	No
Body Worn B	No	No	No	No	No	No	No	No	No	No	No	No
Body Worn C	No	No	No	No	No	No	No	No	No	No	No	No
Body Worn D	No	No	No	No	No	No	No	No	No	No	No	No
Body Worn E	No	No	No	No	No	No	No	No	No	No	No	No
Body Worn F	No	No	No	No	No	No	No	No	No	No	No	No
Body Worn G	No	No	No	No	No	No	No	No	No	No	No	No
Body Worn H	No	No	No	No	No	No	No	No	No	No	No	No
Body Worn I	No	No	No	No	No	No	No	No	No	No	No	No
Body Worn J	No	No	No	No	No	No	No	No	No	No	No	No
Body Worn K	No	No	No	No	No	No	No	No	No	No	No	No
Body Worn L	No	No	No	No	No	No	No	No	No	No	No	No
Body Worn M	No	No	No	No	No	No	No	No	No	No	No	No
Body Worn N	No	No	No	No	No	No	No	No	No	No	No	No
Body Worn O	No	No	No	No	No	No	No	No	No	No	No	No
Body Worn P	No	No	No	No	No	No	No	No	No	No	No	No
Body Worn Q	No	No	No	No	No	No	No	No	No	No	No	No
Body Worn R	No	No	No	No	No	No	No	No	No	No	No	No
Body Worn S	No	No	No	No	No	No	No	No	No	No	No	No
Body Worn T	No	No	No	No	No	No	No	No	No	No	No	No
Body Worn U	No	No	No	No	No	No	No	No	No	No	No	No
Body Worn V	No	No	No	No	No	No	No	No	No	No	No	No
Body Worn W	No	No	No	No	No	No	No	No	No	No	No	No
Body Worn X	No	No	No	No	No	No	No	No	No	No	No	No
Body Worn Y	No	No	No	No	No	No	No	No	No	No	No	No
Body Worn Z	No	No	No	No	No	No	No	No	No	No	No	No
Body Worn AA	No	No	No	No	No	No	No	No	No	No	No	No
Body Worn AB	No	No	No	No	No	No	No	No	No	No	No	No
Body Worn AC	No	No	No	No	No	No	No	No	No	No	No	No
Body Worn AD	No	No	No	No	No	No	No	No	No	No	No	No
Body Worn AE	No	No	No	No	No	No	No	No	No	No	No	No
Body Worn AF	No	No	No	No	No	No	No	No	No	No	No	No
Body Worn AG	No	No	No	No	No	No	No	No	No	No	No	No
Body Worn AH	No	No	No	No	No	No	No	No	No	No	No	No
Body Worn Al	No	No	No	No	No	No	No	No	No	No	No	No
Body Worn AJ	No	No	No	No	No	No	No	No	No	No	No	No
Body Worn AK	No	No	No	No	No	No	No	No	No	No	No	No
Body Worn AL	No	No	No	No	No	No	No	No	No	No	No	No
Body Worn AM	No	No	No	No	No	No	No	No	No	No	No	No
Body Worn AN	No	No	No	No	No	No	No	No	No	No	No	No
Body Worn AO	No	No	No	No	No	No	No	No	No	No	No	No



# **Radio Body Test**

				- i tuu	по вос		enna B					
Audio Accessory	Audi	o Accessory	/ A	Audi	o Accessory			Accessory	С	Audio	Accessory	D
,	Bat A	Bat B/C	Bat D	Bat A	Bat B/C	Bat D	Bat A	Bat B/C	Bat D	Bat A	Bat B/C	Bat D
Body Worn A	Yes	Yes	Yes	No	No	No	No	No	No	No	No	No
Body Worn B	No	No	No	No	No	No	No	No	No	No	No	No
Body Worn C	No	No	No	No	No	No	No	No	No	No	No	No
Body Worn D	No	No	No	No	No	No	No	No	No	No	No	No
Body Worn E	No	No	No	No	No	No	No	No	No	No	No	No
Body Worn F	No	No	No	No	No	No	No	No	No	No	No	No
Body Worn G	No	No	No	No	No	No	No	No	No	No	No	No
Body Worn H	No	No	No	No	No	No	No	No	No	No	No	No
Body Worn I	No	No	No	No	No	No	No	No	No	No	No	No
Body Worn J	No	No	No	No	No	No	No	No	No	No	No	No
Body Worn K	No	No	No	No	No	No	No	No	No	No	No	No
Body Worn L	No	No	No	No	No	No	No	No	No	No	No	No
Body Worn M	No	No	No	No	No	No	No	No	No	No	No	No
Body Worn N	No	No	No	No	No	No	No	No	No	No	No	No
Body Worn O	No	No	No	No	No	No	No	No	No	No	No	No
Body Worn P	No	No	No	No	No	No	No	No	No	No	No	No
Body Worn Q	No	No	No	No	No	No	No	No	No	No	No	No
Body Worn R	No	No	No	No	No	No	No	No	No	No	No	No
Body Worn S	No	No	No	No	No	No	No	No	No	No	No	No
Body Worn T	No	No	No	No	No	No	No	No	No	No	No	No
Body Worn U	No	No	No	No	No	No	No	No	No	No	No	No
Body Worn V	No	No	No	No	No	No	No	No	No	No	No	No
Body Worn W	No	No	No	No	No	No	No	No	No	No	No	No
Body Worn X	No	No	No	No	No	No	No	No	No	No	No	No
Body Worn Y	No	No	No	No	No	No	No	No	No	No	No	No
Body Worn Z	No	No	No	No	No	No	No	No	No	No	No	No
Body Worn AA	No	No	No	No	No	No	No	No	No	No	No	No
Body Worn AB	No	No	No	No	No	No	No	No	No	No	No	No
Body Worn AC	No	No	No	No	No	No	No	No	No	No	No	No
Body Worn AD	No	No	No	No	No	No	No	No	No	No	No	No
Body Worn AE	No	No	No	No	No	No	No	No	No	No	No	No
Body Worn AF	No	No	No	No	No	No	No	No	No	No	No	No
Body Worn AG	No	No	No	No	No	No	No	No	No	No	No	No
Body Worn AH	No	No	No	No	No	No	No	No	No	No	No	No
Body Worn Al	No	No	No	No	No	No	No	No	No	No	No	No
Body Worn AJ	No	No	No	No	No	No	No	No	No	No	No	No
Body Worn AK	No	No	No	No	No	No	No	No	No	No	No	No
Body Worn AL	No	No	No	No	No	No	No	No	No	No	No	No
Body Worn AM	No	No	No	No	No	No	No	No	No	No	No	No
Body Worn AN	No	No	No	No	No	No	No	No	No	No	No	No
Body Worn AO	Yes	Yes	Yes	No	No	No	No	No	No	No	No	No



						Ante	enna B					
<b>Audio Accessory</b>	Aud	io Accessory	/ E	Audi	o Accessor	/ F	Audio	Accessory	G	Audio	o Accessory	Н
	Bat A	Bat B/C	Bat D	Bat A	Bat B/C	Bat D	Bat A	Bat B/C	Bat D	Bat A	Bat B/C	Bat D
Body Worn A	No	No	No	No	No	No	No	No	No	No	No	No
Body Worn B	No	No	No	No	No	No	No	No	No	No	No	No
Body Worn C	No	No	No	No	No	No	No	No	No	No	No	No
Body Worn D	No	No	No	No	No	No	No	No	No	No	No	No
Body Worn E	No	No	No	No	No	No	No	No	No	No	No	No
Body Worn F	No	No	No	No	No	No	No	No	No	No	No	No
Body Worn G	No	No	No	No	No	No	No	No	No	No	No	No
Body Worn H	No	No	No	No	No	No	No	No	No	No	No	No
Body Worn I	No	No	No	No	No	No	No	No	No	No	No	No
Body Worn J	No	No	No	No	No	No	No	No	No	No	No	No
Body Worn K	No	No	No	No	No	No	No	No	No	No	No	No
Body Worn L	No	No	No	No	No	No	No	No	No	No	No	No
Body Worn M	No	No	No	No	No	No	No	No	No	No	No	No
Body Worn N	No	No	No	No	No	No	No	No	No	No	No	No
Body Worn O	No	No	No	No	No	No	No	No	No	No	No	No
Body Worn P	No	No	No	No	No	No	No	No	No	No	No	No
Body Worn Q	No	No	No	No	No	No	No	No	No	No	No	No
Body Worn R	No	No	No	No	No	No	No	No	No	No	No	No
Body Worn S	No	No	No	No	No	No	No	No	No	No	No	No
Body Worn T	No	No	No	No	No	No	No	No	No	No	No	No
Body Worn U	No	No	No	No	No	No	No	No	No	No	No	No
Body Worn V	No	No	No	No	No	No	No	No	No	No	No	No
Body Worn W	No	No	No	No	No	No	No	No	No	No	No	No
Body Worn X	No	No	No	No	No	No	No	No	No	No	No	No
Body Worn Y	No	No	No	No	No	No	No	No	No	No	No	No
Body Worn Z	No	No	No	No	No	No	No	No	No	No	No	No
Body Worn AA	No	No	No	No	No	No	No	No	No	No	No	No
Body Worn AB	No	No	No	No	No	No	No	No	No	No	No	No
Body Worn AC	No	No	No	No	No	No	No	No	No	No	No	No
Body Worn AD	No	No	No	No	No	No	No	No	No	No	No	No
Body Worn AE	No	No	No	No	No	No	No	No	No	No	No	No
Body Worn AF	No	No	No	No	No	No	No	No	No	No	No	No
Body Worn AG	No	No	No	No	No	No	No	No	No	No	No	No
Body Worn AH	No	No	No	No	No	No	No	No	No	No	No	No
Body Worn Al	No	No	No	No	No	No	No	No	No	No	No	No
Body Worn AJ	No	No	No	No	No	No	No	No	No	No	No	No
Body Worn AK	No	No	No	No	No	No	No	No	No	No	No	No
Body Worn AL	No	No	No	No	No	No	No	No	No	No	No	No
Body Worn AM	No	No	No	No	No	No	No	No	No	No	No	No
Body Worn AN	No	No	No	No	No	No	No	No	No	No	No	No
Body Worn AO	No	No	No	No	No	No	No	No	No	No	No	No



						Ante	enna B					
Audio Accessory	Aud	io Accessor	y I	Audi	o Accessor	y J	Audio	Accessory	K	Audio	Accessory	L
	Bat A	Bat B/C	Bat D	Bat A	Bat B/C	Bat D	Bat A	Bat B/C	Bat D	Bat A	Bat B/C	Bat D
Body Worn A	No	No	No	No	No	No	No	No	No	No	No	No
Body Worn B	No	No	No	No	No	No	No	No	No	No	No	No
Body Worn C	No	No	No	No	No	No	No	No	No	No	No	No
Body Worn D	No	No	No	No	No	No	No	No	No	No	No	No
Body Worn E	No	No	No	No	No	No	No	No	No	No	No	No
Body Worn F	No	No	No	No	No	No	No	No	No	No	No	No
Body Worn G	No	No	No	No	No	No	No	No	No	No	No	No
Body Worn H	No	No	No	No	No	No	No	No	No	No	No	No
Body Worn I	No	No	No	No	No	No	No	No	No	No	No	No
Body Worn J	No	No	No	No	No	No	No	No	No	No	No	No
Body Worn K	No	No	No	No	No	No	No	No	No	No	No	No
Body Worn L	No	No	No	No	No	No	No	No	No	No	No	No
Body Worn M	No	No	No	No	No	No	No	No	No	No	No	No
Body Worn N	No	No	No	No	No	No	No	No	No	No	No	No
Body Worn O	No	No	No	No	No	No	No	No	No	No	No	No
Body Worn P	No	No	No	No	No	No	No	No	No	No	No	No
Body Worn Q	No	No	No	No	No	No	No	No	No	No	No	No
Body Worn R	No	No	No	No	No	No	No	No	No	No	No	No
Body Worn S	No	No	No	No	No	No	No	No	No	No	No	No
Body Worn T	No	No	No	No	No	No	No	No	No	No	No	No
Body Worn U	No	No	No	No	No	No	No	No	No	No	No	No
Body Worn V	No	No	No	No	No	No	No	No	No	No	No	No
Body Worn W	No	No	No	No	No	No	No	No	No	No	No	No
Body Worn X	No	No	No	No	No	No	No	No	No	No	No	No
Body Worn Y	No	No	No	No	No	No	No	No	No	No	No	No
Body Worn Z	No	No	No	No	No	No	No	No	No	No	No	No
Body Worn AA	No	No	No	No	No	No	No	No	No	No	No	No
Body Worn AB	No	No	No	No	No	No	No	No	No	No	No	No
Body Worn AC	No	No	No	No	No	No	No	No	No	No	No	No
Body Worn AD	No	No	No	No	No	No	No	No	No	No	No	No
Body Worn AE	No	No	No	No	No	No	No	No	No	No	No	No
Body Worn AF	No	No	No	No	No	No	No	No	No	No	No	No
Body Worn AG	No	No	No	No	No	No	No	No	No	No	No	No
Body Worn AH	No	No	No	No	No	No	No	No	No	No	No	No
Body Worn Al	No	No	No	No	No	No	No	No	No	No	No	No
Body Worn AJ	No	No	No	No	No	No	No	No	No	No	No	No
Body Worn AK	No	No	No	No	No	No	No	No	No	No	No	No
Body Worn AL	No	No	No	No	No	No	No	No	No	No	No	No
•		+									1	
Body Worn AM	No	No	No	No	No	No	No	No	No	No	No	No
Body Worn AN	No	No	No	No	No	No	No	No	No	No	No	No
Body Worn AO	No	No	No	No	No	No	No	No	No	No	No	No



						Ante	enna B			T		
Audio Accessory	Audi	o Accessory	M	Audio	Accessory	N	Audio	Accessory	0	Audio	Accessory	Р
	Bat A	Bat B/C	Bat D	Bat A	Bat B/C	Bat D	Bat A	Bat B/C	Bat D	Bat A	Bat B/C	Bat D
Body Worn A	No	No	No	No	No	No	No	No	No	No	No	No
Body Worn B	No	No	No	No	No	No	No	No	No	No	No	No
Body Worn C	No	No	No	No	No	No	No	No	No	No	No	No
Body Worn D	No	No	No	No	No	No	No	No	No	No	No	No
Body Worn E	No	No	No	No	No	No	No	No	No	No	No	No
Body Worn F	No	No	No	No	No	No	No	No	No	No	No	No
Body Worn G	No	No	No	No	No	No	No	No	No	No	No	No
Body Worn H	No	No	No	No	No	No	No	No	No	No	No	No
Body Worn I	No	No	No	No	No	No	No	No	No	No	No	No
Body Worn J	No	No	No	No	No	No	No	No	No	No	No	No
Body Worn K	No	No	No	No	No	No	No	No	No	No	No	No
Body Worn L	No	No	No	No	No	No	No	No	No	No	No	No
Body Worn M	No	No	No	No	No	No	No	No	No	No	No	No
Body Worn N	No	No	No	No	No	No	No	No	No	No	No	No
Body Worn O	No	No	No	No	No	No	No	No	No	No	No	No
Body Worn P	No	No	No	No	No	No	No	No	No	No	No	No
Body Worn Q	No	No	No	No	No	No	No	No	No	No	No	No
Body Worn R	No	No	No	No	No	No	No	No	No	No	No	No
Body Worn S	No	No	No	No	No	No	No	No	No	No	No	No
Body Worn T	No	No	No	No	No	No	No	No	No	No	No	No
Body Worn U	No	No	No	No	No	No	No	No	No	No	No	No
Body Worn V	No	No	No	No	No	No	No	No	No	No	No	No
Body Worn W	No	No	No	No	No	No	No	No	No	No	No	No
Body Worn X	No	No	No	No	No	No	No	No	No	No	No	No
Body Worn Y	No	No	No	No	No	No	No	No	No	No	No	No
Body Worn Z	No	No	No	No	No	No	No	No	No	No	No	No
Body Worn AA	No	No	No	No	No	No	No	No	No	No	No	No
Body Worn AB	No	No	No	No	No	No	No	No	No	No	No	No
Body Worn AC	No	No	No	No	No	No	No	No	No	No	No	No
Body Worn AD	No	No	No	No	No	No	No	No	No	No	No	No
Body Worn AE	No	No	No	No	No	No	No	No	No	No	No	No
Body Worn AF	No	No	No	No	No	No	No	No	No	No	No	No
Body Worn AG	No	No	No	No	No	No	No	No	No	No	No	No
Body Worn AH	No	No	No	No	No	No	No	No	No	No	No	No
Body Worn Al	No	No	No	No	No	No	No	No	No	No	No	No
Body Worn AJ	No	No	No	No	No	No	No	No	No	No	No	No
Body Worn AK	No	No	No	No	No	No	No	No	No	No	No	No
Body Worn AL	No	No	No	No	No	No	No	No	No	No	No	No
Body Worn AM	No	No	No	No	No	No	No	No	No	No	No	No
Body Worn AN	No	No	No	No	No	No	No		No		No	
Body Worn AO	No	No	No	No	No	No	No	No No	No	No No	No	No No
Body Worll AU	I NO	INU	INO	INU	INO	INO	INO	INU	INO	INO	INU	INO



				,		Ante	enna B					
<b>Audio Accessory</b>	Audi	o Accessory	, Q	Audi	o Accessory	/ R	Audio	Accessory	S	Audio	Accessory	T
	Bat A	Bat B/C	Bat D	Bat A	Bat B/C	Bat D	Bat A	Bat B/C	Bat D	Bat A	Bat B/C	Bat D
Body Worn A	No	No	No	No	No	No	No	No	No	No	No	No
Body Worn B	No	No	No	No	No	No	No	No	No	No	No	No
Body Worn C	No	No	No	No	No	No	No	No	No	No	No	No
Body Worn D	No	No	No	No	No	No	No	No	No	No	No	No
Body Worn E	No	No	No	No	No	No	No	No	No	No	No	No
Body Worn F	No	No	No	No	No	No	No	No	No	No	No	No
Body Worn G	No	No	No	No	No	No	No	No	No	No	No	No
Body Worn H	No	No	No	No	No	No	No	No	No	No	No	No
Body Worn I	No	No	No	No	No	No	No	No	No	No	No	No
Body Worn J	No	No	No	No	No	No	No	No	No	No	No	No
Body Worn K	No	No	No	No	No	No	No	No	No	No	No	No
Body Worn L	No	No	No	No	No	No	No	No	No	No	No	No
Body Worn M	No	No	No	No	No	No	No	No	No	No	No	No
Body Worn N	No	No	No	No	No	No	No	No	No	No	No	No
Body Worn O	No	No	No	No	No	No	No	No	No	No	No	No
Body Worn P	No	No	No	No	No	No	No	No	No	No	No	No
Body Worn Q	No	No	No	No	No	No	No	No	No	No	No	No
Body Worn R	No	No	No	No	No	No	No	No	No	No	No	No
Body Worn S	No	No	No	No	No	No	No	No	No	No	No	No
Body Worn T	No	No	No	No	No	No	No	No	No	No	No	No
Body Worn U	No	No	No	No	No	No	No	No	No	No	No	No
Body Worn V	No	No	No	No	No	No	No	No	No	No	No	No
Body Worn W	No	No	No	No	No	No	No	No	No	No	No	No
Body Worn X	No	No	No	No	No	No	No	No	No	No	No	No
Body Worn Y	No	No	No	No	No	No	No	No	No	No	No	No
Body Worn Z	No	No	No	No	No	No	No	No	No	No	No	No
Body Worn AA	No	No	No	No	No	No	No	No	No	No	No	No
Body Worn AB	No	No	No	No	No	No	No	No	No	No	No	No
Body Worn AC	No	No	No	No	No	No	No	No	No	No	No	No
Body Worn AD	No	No	No	No	No	No	No	No	No	No	No	No
Body Worn AE	No	No	No	No	No	No	No	No	No	No	No	No
Body Worn AF	No	No	No	No	No	No	No	No	No	No	No	No
Body Worn AG	No	No	No	No	No	No	No	No	No	No	No	No
Body Worn AH	No	No	No	No	No	No	No	No	No	No	No	No
Body Worn Al	No	No	No	No	No	No	No	No	No	No	No	No
Body Worn AJ	No	No	No	No	No	No	No	No	No	No	No	No
Body Worn AK	No	No	No	No	No	No	No	No	No	No	No	No
Body Worn AL	No	No	No	No	No	No	No	No	No	No	No	No
Body Worn AM	No	No	No	No	No	No	No	No	No	No	No	No
Body Worn AN	No	No	No	No	No	No	No		No		No	
Body Worn AO	No	No	No	No	No	No	No	No No	No	No No	No	No No
BOUY WOITI AU	INU	INU	INO	INO	INO	INO	INU	INO	INO	INO	INO	INO



							enna B					
Audio Accessory	Audi	o Accessory	<i>t</i> U	Audi	o Accessory	/ V	Audio	Accessory	W	Audio	Accessory	/ X
	Bat A	Bat B/C	Bat D	Bat A	Bat B/C	Bat D	Bat A	Bat B/C	Bat D	Bat A	Bat B/C	Bat D
Body Worn A	No	No	No	No	No	No	No	No	No	No	No	No
Body Worn B	No	No	No	No	No	No	No	No	No	No	No	No
Body Worn C	No	No	No	No	No	No	No	No	No	No	No	No
Body Worn D	No	No	No	No	No	No	No	No	No	No	No	No
Body Worn E	No	No	No	No	No	No	No	No	No	No	No	No
Body Worn F	No	No	No	No	No	No	No	No	No	No	No	No
Body Worn G	No	No	No	No	No	No	No	No	No	No	No	No
Body Worn H	No	No	No	No	No	No	No	No	No	No	No	No
Body Worn I	No	No	No	No	No	No	No	No	No	No	No	No
Body Worn J	No	No	No	No	No	No	No	No	No	No	No	No
Body Worn K	No	No	No	No	No	No	No	No	No	No	No	No
Body Worn L	No	No	No	No	No	No	No	No	No	No	No	No
Body Worn M	No	No	No	No	No	No	No	No	No	No	No	No
Body Worn N	No	No	No	No	No	No	No	No	No	No	No	No
Body Worn O	No	No	No	No	No	No	No	No	No	No	No	No
Body Worn P	No	No	No	No	No	No	No	No	No	No	No	No
Body Worn Q	No	No	No	No	No	No	No	No	No	No	No	No
Body Worn R	No	No	No	No	No	No	No	No	No	No	No	No
Body Worn S	No	No	No	No	No	No	No	No	No	No	No	No
Body Worn T	No	No	No	No	No	No	No	No	No	No	No	No
Body Worn U	No	No	No	No	No	No	No	No	No	No	No	No
Body Worn V	No	No	No	No	No	No	No	No	No	No	No	No
Body Worn W	No	No	No	No	No	No	No	No	No	No	No	No
Body Worn X	No	No	No	No	No	No	No	No	No	No	No	No
Body Worn Y	No	No	No	No	No	No	No	No	No	No	No	No
Body Worn Z	No	No	No	No	No	No	No	No	No	No	No	No
Body Worn AA	No	No	No	No	No	No	No	No	No	No	No	No
Body Worn AB	No	No	No	No	No	No	No	No	No	No	No	No
Body Worn AC	No	No	No	No	No	No	No	No	No	No	No	No
Body Worn AD	No	No	No	No	No	No	No	No	No	No	No	No
Body Worn AE	No	No	No	No	No	No	No	No	No	No	No	No
Body Worn AF	No	No	No	No	No	No	No	No	No	No	No	No
Body Worn AG	No	No	No	No	No	No	No	No	No	No	No	No
Body Worn AH	No	No	No	No	No	No	No	No	No	No	No	No
Body Worn Al	No	No	No	No	No	No	No	No	No	No	No	No
Body Worn AJ	No	No	No	No	No	No	No	No	No	No	No	No
Body Worn AK	No	No	No	No	No	No	No	No	No	No	No	No
Body Worn AL	No	No	No	No	No	No	No	No	No	No	No	No
Body Worn AM	No	No	No	No	No	No	No	No	No	No	No	No
Body Worn AN		No		No	No	No	No				No	+
Body Worn AO	No No	No	No No	No	No	No	No	No No	No No	No No	No	No No
BOUY WOITI AU	INU	INU	INU	INO	INU	INU	INU	INU	INU	No	INU	INU



UHF				
Freq	Channel	Power (dB)		
450	1	35.81		
467	2	35.86		
485	3	35.92		
502	4	35.84		
520	5	35.79		

Per KDB 447498 D01 v06 page 7 section 6) pages 7-8, the number of channels required to be tested is as follows:

 $F_{high} = 520 \text{ MHz}$ 

 $F_c = 485 \text{ MHz}$ 

 $F_{low} = 450 \text{ MHz}$ 

 $N_c = Round \; \{[100(f_{high} - f_{low})/f_c]^{0.5} \; x \; (f_c/100)^{0.2}\} = Round \; \{[100(520-450)/485]^{0.5} \; x \; (485/100)^{0.2}\} = 5$ 

Therefore, for the frequency band from 450 MHz to 520 MHz, 5 channels are required for testing.

Band	Mode	Channel	Frequency (MHz)	Data Rate	Avg Power (dBm)	Tune-up Pwr (dBm)
2450 MHz	Bluetooth	0	2402	Basic Rate GFSK	11.63	12.04
		39	2441		11.33	12.04
		78	2480		11.31	12.04

UHF				
Freq	Channel	Power (dB)		
467	1	35.59		
485	2	35.92		



Head SAR – In Front of Face (Handset)					
	Channel Freq. (MHz)	Batt	ery A <sup>1</sup>	Battery B/C <sup>1</sup>	
Antenna		Measured	Reported SAR	Measured	Reported SAR
		Power (dBm)	(W/kg)	Power (dBm)	(W/kg)
A <sup>1</sup> 450 – 520 MHz	450	35.81	2	35.81	2
	467	35.86	2	35.86	2
	485	34.92	2.30	34.92	2.60
	502	35.84	2	35.84	2
	520	35.79	2	35.79	2
B <sup>1</sup> 450 – 520 MHz	450	35.81	2	35.81	2
	467	35.86	2	35.86	2
	485	34.92	1.83	34.92	1.97
	502	35.84	2	35.84	2
	520	35.79	2	35.79	2

<sup>&</sup>lt;sup>1</sup>See Accessory table on page 20 of this report.

<sup>&</sup>lt;sup>2</sup>Measurement was reduced.

Body SAR (Handset)						
Antenna	Channel Freq. (MHz)	Battery A <sup>1</sup>				
		Audio Accessory A <sup>1</sup>				
		Body Worn A <sup>1</sup>		Body Worn H <sup>1</sup>		
		Measured	Reported	Measured	Reported	
		Power (dBm)	SAR (W/kg)	Power (dBm)	SAR (W/kg)	
	450	35.81	4.42	35.81	3.91	
A 1	467	35.86	4.97	35.86	4.51	
A <sup>1</sup> 450 – 520 MHz	485	34.92	4.08	34.92	4.46	
430 – 320 IVITZ	502	35.84	4.88	35.84	4.12	
	520	35.79	4.00	35.79	3.39	
B <sup>1</sup> 450 – 520 MHz	450	35.81	2	35.81	2	
	467	35.86	2	35.86	2	
	485	34.92	3.34	34.92	2.44	
	502	35.84	2	35.84	2	
	520	35.79	2	35.79	2	

<sup>&</sup>lt;sup>1</sup>See Accessory table on page 20 of this report. <sup>2</sup>Measurement was reduced.



	Body SAR (Handset)								
		Battery B/C <sup>1</sup>							
	Channel		Audio Ac	cessory A <sup>1</sup>					
Antenna	Freq. (MHz)	Body W	orn A <sup>1</sup>	Body V	√orn H¹				
	rieq. (IVIIIZ)	Measured	Reported	Measured	Reported				
		Power (dBm)	SAR (W/kg)	Power (dBm)	SAR (W/kg)				
	450	35.81	3.82	35.81	3.65				
$A^1$	467	35.86	4.35	35.86	4.03				
450 – 520 MHz	485	34.92	4.32	34.92	4.31				
430 - 320 1011 12	502	35.84	4.00	35.84	3.98				
	520	35.79	3.23	35.79	3.21				
	450	35.81	2	35.81	2				
$B^1$	467	35.86	2	35.86	2				
450 – 520 MHz	485	34.92	3.06	34.92	0.76				
450 - 520 NITZ	502	35.84	2	35.84	2				
	520	35.79	2	35.79	2				

<sup>&</sup>lt;sup>1</sup>See Accessory table on page 20 of this report. <sup>2</sup>Measurement was reduced.



## **SAR Data Summary – Head SAR Face Measurements**

ME	ASUR	EMEN	IT RES	ULTS	3							
Gap	Plot	Conf.	Battery	Freque	ency	Mod.	Ant.	End Power	Drift (dB)	Measured SAR	Adjusted SAR	SAR (W/kg) 50% Duty
				MHz	Ch.			(dBm)	(ub)	(W/kg)	(W/kg)	Cycle
			Α	485	3	FM	Α	35.92	-0.42	4.08	4.60	2.30
25			A	485	3	FM	В	35.92	-0.49	3.20	3.67	1.83
mm	1	Radio	B/C	485	3	FM	Α	35.92	-0.53	4.49	5.19	2.60
111111			B/C	485	3	FM	В	35.92	-0.38	3.52	3.93	1.97
			D	485	2	FM	Α	35.92	-0.41	3.96	4.45	2.23

Head Tissue 8.0 W/kg (mW/g) averaged over 1 gram

2. SAR Measurement Phantom Configuration SAR Configuration SAR Configuration  Test Signal Call Mode Test Code  With Belt Clip  Without Belt Clip	
Phantom Configuration ☐ Left Head ☐ Eli4 ☐ SAR Configuration ☐ Head ☐ Body  3. Test Signal Call Mode ☐ Test Code ☐ Base Station Simulato  4. Test Configuration ☐ With Belt Clip ☐ Without Belt Clip ☐	☐EIRP
SAR Configuration  Body  Test Signal Call Mode  Test Configuration  With Belt Clip  Without Belt Clip	
<ul> <li>3. Test Signal Call Mode</li> <li>4. Test Configuration</li> <li>Image: Test Code</li></ul>	Right Head
4. Test Configuration	
	or
5 Tissue Donth is at least 15.0 am	⊠N/A
5. Tissue Depth is at least 15.0 cm	

Jay M. Moulton Vice President

The adjusted SAR value was calculated by first scaling the SAR value up by the drift. This value was then scaled up based on the difference of the upper end of the tolerance (36.02 dB) and the measured conducted power. The resultant value is then multiplied by 0.5 to give the SAR value at 50% duty cycle.



## **SAR Data Summary – Body SAR Measurements**

## MEASUREMENT RESULTS

Gap	Plot	Body Worn	Battery	_			Ant.	End Power	Drift (dB)	Measured SAR	Adjusted SAR	SAR (W/kg) 50% Duty
		Acc.		MHz	Ch.			(dBm)	(GD)	(W/kg)	(W/kg)	Cycle
				450	1	FM		35.81	-0.41	7.66	8.84	4.42
	2			467	2	FM		35.86	-0.49	8.56	9.94	4.97
		Α		485	3	FM	Α	35.92	-0.46	7.17	8.16	4.08
				502	4	FM		35.84	-0.43	8.48	9.76	4.88
				520	5	FM		35.79	-0.39	6.94	8.01	4.00
			Α	485	3	FM	В	35.92	-0.44	5.89	6.67	3.34
			A	450	1	FM		35.81	-0.39	6.81	7.82	3.91
				467	2	FM		35.86	-0.37	7.98	9.02	4.51
		AO		485	3	FM	Α	35.92	-0.40	7.95	8.92	4.46
		AU		502	502 4 FM		35.84	-0.33	7.32	8.23	4.12	
				520	5	FM		35.79	-0.38	5.88	6.77	3.39
				485	3	FM	В	35.92	-0.41	4.34	4.88	2.44
0				450	1	FM		35.81	-0.38	6.67	7.64	3.82
mm				467	2	FM		35.86	-0.41	7.63	8.70	4.35
		^		485	3	FM	Α	35.92	-0.44	7.62	8.63	4.32
		A		502	4	FM		35.84	-0.46	6.90	8.00	4.00
				520	5	FM		35.79	-0.37	5.62	6.45	3.23
			B/C	485	3	FM	В	35.92	-0.43	5.42	6.12	3.06
			Б/С	450	1	FM		35.81	-0.40	6.34	7.30	3.65
				467	2	FM		35.86	-0.35	7.17	8.06	4.03
		AO		485	3	FM	Α	35.92	-0.45	7.59	8.61	4.31
		AU		502	4	FM		35.84	-0.41	6.94	7.95	3.98
				520	5	FM		35.79	-0.44	5.50	6.42	3.21
				485	3	FM	В	35.92	-0.47	1.32	1.51	0.76
		Rep	eated	467	2	FM	Α	35.86	-0.48	8.31	9.63	4.81
		Α	D	467	1	FM	Α	35.59	-0.42	8.07	9.82	4.91

He	ad 1	Tissue	
۱ 0.8	N/kg	(mW/g	ı)
ave	raged of	ver 1 gram	

1.	Battery is fully charged for all tests	5 <b>.</b>		
	Power Measured	⊠Conducted	□ERP	□EIRP
2.	SAR Measurement			
	Phantom Configuration	☐Left Head	⊠Eli4	Right Head
	SAR Configuration	Head	⊠Body	
3.	Test Signal Call Mode	⊠Test Code	☐Base Station Simulator	
4.	Test Configuration	☐With Belt Clip	☐Without Belt Clip	⊠N/A
5.	Tissue Depth is at least 15.0 cm			



Jay M. Moulton Vice President

The adjusted SAR value was calculated by first scaling the SAR value up by the drift. This value was then scaled up based on the difference of the upper end of the tolerance (36.02 dB) and the measured conducted power. The resultant value is then multiplied by 0.5 to give the SAR value at 50% duty cycle.



## **SAR Data Summary – Simultaneous Evaluation**

MEASU	MEASUREMENT RESULTS										
Config.	Freque	ency	Modulation Frequency Modulation SAR <sub>1</sub> SAR <sub>2</sub>								
Jonnig.	MHz	Ch.		MHz	Ch.		<b>9</b> 7 (	<b>3</b> 7 11 12			
Head	485	3	FM	2440	39	GFSK	2.60	0.20			
Body	467	2	FM	2440	39	GFSK	4.97	0.20			

The calculated value for the Bluetooth radio is based on KDB447498 D01 v06 section 4.3.2 b) 1). Below is the formula used.

[(max. power, mW) / (min. distance, mm)] \*  $[\sqrt{f_{(GHz)}/x}]$  where x=7.5 for 1 g SAR

[16 mW/17mm]\*[√2.48/7.5]=0.20

For a device with one transmitter used in a controlled environment and the second transmitter used in an uncontrolled environment, the ratio of the two transmitters to the respective limit must be less than 1.0. Below are the calculations.

$$(2.60/8.0) + (0.20/1.6) = 0.45$$
  
 $(4.97/8.0) + (0.20/1.6) = 0.75$ 

Both configurations are less than or equal to 1.0; therefore, simultaneous Tx meets the requirements of the FCC guidelines.



## 9. Test Equipment List

**Table 9.1 Equipment Specifications** 

Туре	Calibration Due Date	Calibration Done Date	<b>Serial Number</b>
Staubli Robot TX60L	N/A	N/A	F07/55M6A1/A/01
Measurement Controller CS8c	N/A	N/A	1012
ELI4 Flat Phantom	N/A	N/A	1065
ELI5 Flat Phantom	N/A	N/A	2037
Device Holder	N/A	N/A	N/A
Data Acquisition Electronics 4	02/15/2020	02/15/2019	1217
Data Acquisition Electronics 4	04/21/2021	04/21/2020	1416
SPEAG E-Field Probe ES3DV3	06/03/2020	06/03/2019	7531
SPEAG E-Field Probe ES3DV3	02/24/2021	02/24/2020	3311
Speag Validation Dipole D450V3	01/15/2020	01/15/2019	1085
Speag Validation Dipole D450V3	01/15/2021	01/15/2019	1085
Agilent N1911A Power Meter	04/27/2020	04/27/2019	GB45100254
Agilent N1922A Power Sensor	04/27/2020	04/27/2019	MY45240464
Advantest R3261A Spectrum Analyzer	03/25/2020	03/25/2019	31720068
Agilent (HP) 8350B Signal Generator	03/20/2020	03/20/2019	2749A10226
Agilent (HP) 83525A RF Plug-In	03/20/2020	03/20/2019	2647A01172
Agilent (HP) 8753C Vector Network Analyzer	03/20/2020	03/20/2019	3135A01724
Agilent (HP) 85047A S-Parameter Test Set	03/20/2020	03/20/2019	2904A00595
Anritsu MT8820C	03/19/2020	03/19/2019	6201176199
Agilent N1911A Power Meter	04/27/2021	04/27/2020	GB45100254
Agilent N1922A Power Sensor	04/27/2021	04/27/2020	MY45240464
Advantest R3261A Spectrum Analyzer	03/16/2021	03/16/2020	31720068
Agilent (HP) 8350B Signal Generator	03/16/2021	03/16/2020	2749A10226
Agilent (HP) 83525A RF Plug-In	03/16/2021	03/16/2020	2647A01172
Agilent (HP) 8753C Vector Network Analyzer	03/16/2021	03/16/2020	3135A01724
Agilent (HP) 85047A S-Parameter Test Set	03/17/2021	03/17/2020	2904A00595
Agilent (HP) 8960 Base Station Sim.	05/31/2021	05/31/2019	MY48360364
Anritsu MT8820C	07/14/2021	07/14/2020	6201176199
Agilent 778D Dual Directional Coupler	N/A	N/A	MY48220184
MiniCircuits BW-N20W5+ Fixed 20 dB	N/A	N/A	N/A
Attenuator			
MiniCircuits SPL-10.7+ Low Pass Filter	N/A	N/A	R8979513746
Aprel Dielectric Probe Assembly	N/A	N/A	0011
Head Equivalent Matter (450 MHz)	N/A	N/A	N/A



### 10. Conclusion


The SAR measurement indicates that the EUT complies with the RF radiation exposure limits of the FCC/IC. These measurements are taken to simulate the RF effects exposure under worst-case conditions. Precise laboratory measures were taken to assure repeatability of the tests. The tested device complies with the requirements in respect to all parameters subject to the test. The test results and statements relate only to the item(s) tested.

Please note that the absorption and distribution of electromagnetic energy in the body is a very complex phenomena that depends on the mass, shape, and size of the body; the orientation of the body with respect to the field vectors; and, the electrical properties of both the body and the environment. Other variables that may play a substantial role in possible biological effects are those that characterize the environment (e.g. ambient temperature, air velocity, relative humidity, and body insulation) and those that characterize the individual (e.g. age, gender, activity level, debilitation, or disease). Because innumerable factors may interact to determine the specific biological outcome of an exposure to electromagnetic fields, any protection guide shall consider maximal amplification of biological effects as a result of field-body interactions, environmental conditions, and physiological variables.



#### 11. References

- [1] Federal Communications Commission, ET Docket 93-62, Guidelines for Evaluating the Environmental Effects of Radio Frequency Radiation, August 1996
- [2] ANSI/IEEE C95.1 1992, American National Standard Safety Levels with respect to Human Exposure to Radio Frequency Electromagnetic Fields, 300kHz to 100GHz, New York: IEEE, 1992.
- [3] ANSI/IEEE C95.3 2002, IEEE Recommended Practice for the Measurement of Potentially Hazardous Electromagnetic Fields RF and Microwave, New York: IEEE, 2002.
- [4] International Electrotechnical Commission, IEC 62209-2 (Edition 1.0), Human Exposure to radio frequency fields from hand-held and body mounted wireless communication devices Human models, instrumentation, and procedures Part 2: Procedure to determine the specific absorption rate (SAR) for wireless communication devices used in close proximity to the human body (frequency range of 30 MHz to 6 GHz), March 2010.
- [5] IEEE Standard 1528 2013, IEEE Recommended Practice for Determining the Peak-Spatial Average Specific Absorption Rate (SAR) in the Human Head from Wireless Communication Devices: Measurement Techniques, June 2013.
- [6] Industry Canada, RSS 102 Issue 5, Radio Frequency Exposure Compliance of Radiocommunication Apparatus (All Frequency Bands), March 2015.
- [7] Health Canada, Safety Code 6, Limits of Human Exposure to Radiofrequency Electromagnetic Fields in the Frequency Range from 3kHz to 300 GHz, 2009.





## Appendix A – System Validation Plots and Data

#### Limits for Head

<sup>\*</sup> value interpolated



#### Limits for Head

\*\*\*\*\*\*\*\*\*\*\*\*\*\*\*\* Test Result for UIM Dielectric Parameter Mon 14/Dec/2020 Freq Frequency(GHz) FCC\_eH Limits for Head Epsilon FCC\_sH Limits for Head Sigma Test\_e Epsilon of UIM

Test\_s Sigma of UIM \*\*\*\*\*\*\*\*\*\*\*\*\*\*\*

<sup>\*</sup> value interpolated



# RF Exposure Lab

### Plot 1

DUT: Dipole 450 MHz D450V2; Type: D450V2; Serial: D450V2 - SN:1085

Communication System: CW; Frequency: 450 MHz; Duty Cycle: 1:1

Medium: HSL450; Medium parameters used: f = 450 MHz;  $\sigma = 0.88 \text{ S/m}$ ;  $\varepsilon_f = 42.86$ ;  $\rho = 1000 \text{ kg/m}^3$ 

Phantom section: Flat Section

Test Date: Date: 8/6/2019; Ambient Temp: 23 °C; Tissue Temp: 21 °C

Probe: EX3DV4 - SN7531; ConvF(11.43, 11.43, 11.43); Calibrated: 6/3/2019;

Sensor-Surface: 2mm (Mechanical Surface Detection) Electronics: DAE4 Sn1217; Calibrated: 2/15/2019 Phantom: ELI v4.0; Type: QDOVA001BB; Serial: 1065

Measurement SW: DASY52, Version 52.10 (0); SEMCAD X Version 14.6.10 (7417)

#### **Procedure Notes:**

**450 MHz Head/Verification/Area Scan (7x17x1):** Measurement grid: dx=15mm, dy=15mm Maximum value of SAR (measured) = 2.69 W/kg


450 MHz Head/Verification/Zoom Scan (5x5x7)/Cube 0: Measurement grid: dx=8mm, dy=8mm, dz=5mm

Reference Value = 52.439 V/m; Power Drift = -0.02 dB


Peak SAR (extrapolated) = 3.85 W/kg

 $P_{IN}$ =500 mW

SAR(1 g) = 2.27 W/kg; SAR(10 g) = 1.53 W/kg Maximum value of SAR (measured) = 2.82 W/kg

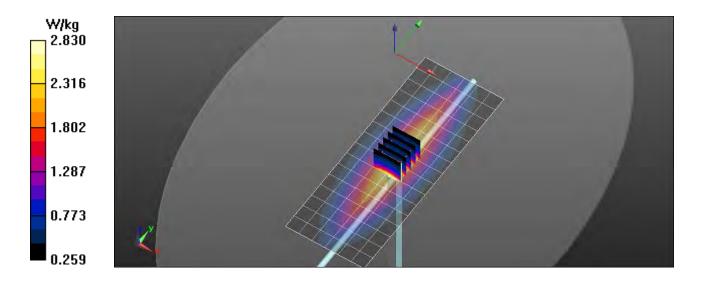



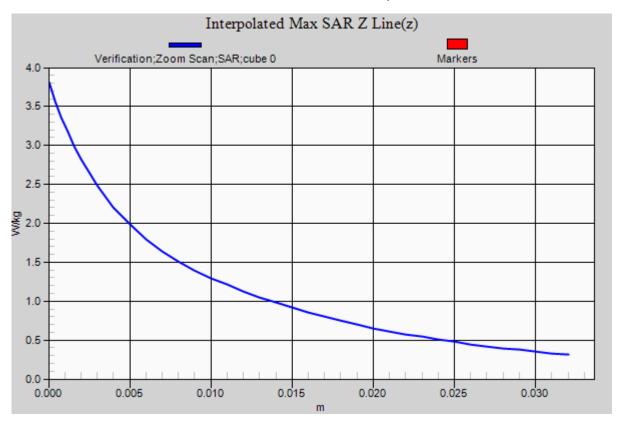



# **RF Exposure Lab**

### Plot 2

DUT: Dipole 450 MHz D450V2; Type: D450V2; Serial: D450V2 - SN:1085

Communication System: CW; Frequency: 450 MHz; Duty Cycle: 1:1

Medium: HSL450; Medium parameters used: f = 450 MHz;  $\sigma$  = 0.89 S/m;  $\epsilon_r$  = 42.93;  $\rho$  = 1000 kg/m<sup>3</sup>

Phantom section: Flat Section

Test Date: Date: 12/14/2020; Ambient Temp: 23 °C; Tissue Temp: 21 °C

Probe: ES3DV3 - SN3311; ConvF(7.14, 7.14, 7.14); Calibrated: 2/24/2020;

Sensor-Surface: 3mm (Mechanical Surface Detection) Electronics: DAE4 Sn1416; Calibrated: 4/21/2020 Phantom: ELI v5.0; Type: QDOVA002AA; Serial: 2037

Measurement SW: DASY52, Version 52.10 (0); SEMCAD X Version 14.6.10 (7417)

#### **Procedure Notes:**


**450 MHz Head/Verification/Area Scan (7x15x1):** Measurement grid: dx=15mm, dy=15mm Maximum value of SAR (measured) = 0.560 W/kg

450 MHz Head/Verification/Zoom Scan (5x5x7)/Cube 0: Measurement grid: dx=8mm, dy=8mm, dz=5mm


Reference Value = 24.573 V/m; Power Drift = -0.01 dB

Peak SAR (extrapolated) = 0.739 W/kg

SAR(1 g) = 0.455 W/kg; SAR(10 g) = 0.319 W/kg Maximum value of SAR (measured) = 0.566 W/kg

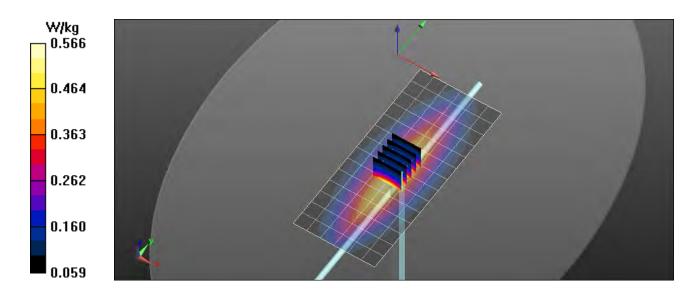



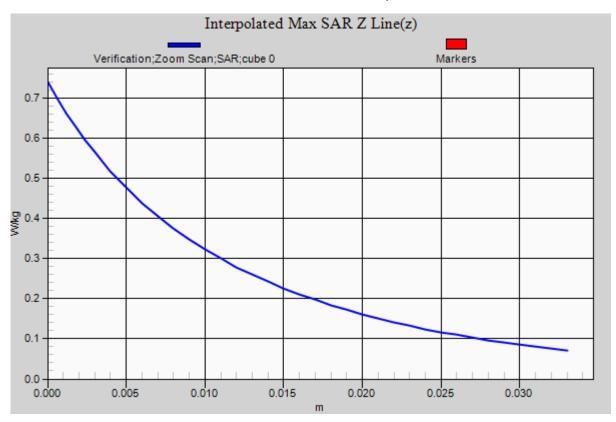



## **Appendix B – SAR Test Data Plots**



# **RF Exposure Lab**

### Plot 1

DUT: TPDH7C; Type: PTT; Serial: 26111476

Communication System: FM; Frequency: 485 MHz; Duty Cycle: 1:1

Medium: HSL450; Medium parameters used (interpolated): f = 485 MHz;  $\sigma$  = 0.9 S/m;  $\varepsilon_r$  = 42.66;  $\rho$  = 1000 kg/m<sup>3</sup>

Phantom section: Flat Section

Test Date: Date: 8/6/2019; Ambient Temp: 23 °C; Tissue Temp: 21 °C

Probe: EX3DV4 - SN7531; ConvF(11.43, 11.43, 11.43); Calibrated: 6/3/2019;

Sensor-Surface: 2mm (Mechanical Surface Detection) Electronics: DAE4 Sn1217; Calibrated: 2/15/2019 Phantom: ELI v4.0; Type: QDOVA001BB; Serial: 1065

Measurement SW: DASY52, Version 52.10 (0); SEMCAD X Version 14.6.10 (7417)

#### **Procedure Notes:**

Face/Ant 012, Ext Bat 485/Area Scan (7x21x1): Measurement grid: dx=15mm, dy=15mm

Info: Interpolated medium parameters used for SAR evaluation.

Maximum value of SAR (measured) = 5.44 W/kg

Face/Ant 012, Ext Bat 485/Zoom Scan (5x5x7)/Cube 0: Measurement grid: dx=8mm, dy=8mm, dz=5mm


Reference Value = 69.39 V/m; Power Drift = -0.53 dB

Peak SAR (extrapolated) = 6.20 W/kg

SAR(1 g) = 4.49 W/kg; SAR(10 g) = 3.27 W/kg

Info: Interpolated medium parameters used for SAR evaluation.

Maximum value of SAR (measured) = 5.40 W/kg

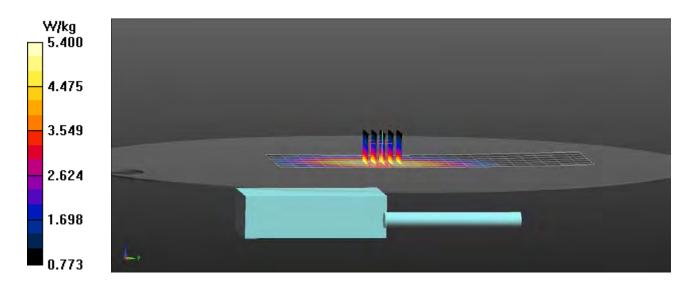



# **RF Exposure Lab**

### Plot 2

DUT: TPDH7C; Type: PTT; Serial: 26111476

Communication System: FM; Frequency: 467 MHz; Duty Cycle: 1:1

Medium: HSL450; Medium parameters used (interpolated): f = 467 MHz;  $\sigma = 0.897 \text{ S/m}$ ;  $\epsilon_r = 42.768$ ;  $\rho = 1000 \text{ kg/m}^3$ 

Phantom section: Flat Section

Test Date: Date: 8/7/2019; Ambient Temp: 23 °C; Tissue Temp: 21 °C

Probe: EX3DV4 - SN7531; ConvF(11.43, 11.43, 11.43); Calibrated: 6/3/2019;

Sensor-Surface: 2mm (Mechanical Surface Detection) Electronics: DAE4 Sn1217; Calibrated: 2/15/2019 Phantom: ELI v4.0; Type: QDOVA001BB; Serial: 1065

Measurement SW: DASY52, Version 52.10 (0); SEMCAD X Version 14.6.10 (7417)

#### **Procedure Notes:**

Body/Ant 012, Std Bat Spring Clip 467/Area Scan (7x21x1): Measurement grid: dx=15mm, dy=15mm

Info: Interpolated medium parameters used for SAR evaluation.

Maximum value of SAR (measured) = 10.2 W/kg

Body/Ant 012, Std Bat Spring Clip 467/Zoom Scan (5x5x7)/Cube 0: Measurement grid: dx=8mm, dy=8mm,

dz=5mm


Reference Value = 96.25 V/m; Power Drift = -0.49 dB

Peak SAR (extrapolated) = 12.5 W/kg

SAR(1 g) = 8.56 W/kg; SAR(10 g) = 5.95 W/kg

Info: Interpolated medium parameters used for SAR evaluation.

Maximum value of SAR (measured) = 10.6 W/kg

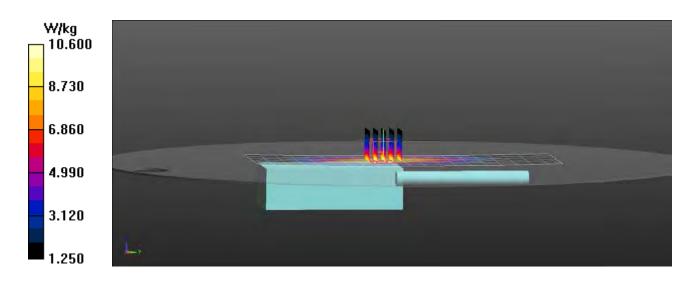



## **Appendix C – SAR Test Setup Photos**



**Handset Face Ant A Configuration** 





Handset with Antenna B, Audio A and Body A Accessories Configuration





Handset with Antenna B, Audio A and Body AO Accessories Configuration





**Front of Device** 





**Back of Device** 





Battery (A, B, C)





**Body Worn and Audio Accessories** 





Antennas (A, B)



## **Appendix D – Probe Calibration Data Sheets**



Calibration Laboratory of Schmid & Partner Engineering AG Zeughausstrasse 43, 8004 Zurich, Switzerland





Schweizerischer Kalibrierdienst Service suisse d'étalonnage Servizio svizzero di taratura Swiss Calibration Service

Accreditation No.: SCS 0108

Accredited by the Swiss Accreditation Service (SAS)

The Swiss Accreditation Service is one of the signatories to the EA

Multilateral Agreement for the recognition of calibration certificates

Client

**RF Exposure Lab** 

Certificate No: EX3-7531\_Jun19

S

C

## CALIBRATION CERTIFICATE

Object

EX3DV4 - SN:7531

Calibration procedure(s)

QA CAL-01.v9, QA CAL-12.v9, QA CAL-14.v5, QA CAL-23.v5,

**QA CAL-25.v7** 

Calibration procedure for dosimetric E-field probes

Calibration date:

June 3, 2019

This calibration certificate documents the traceability to national standards, which realize the physical units of measurements (SI). The measurements and the uncertainties with confidence probability are given on the following pages and are part of the certificate.

All calibrations have been conducted in the closed laboratory facility: environment temperature ( $22 \pm 3$ )°C and humidity < 70%.

Calibration Equipment used (M&TE critical for calibration)

Primary Standards	ID	Cal Date (Certificate No.)	Scheduled Calibration
Power meter NRP	SN: 104778	03-Apr-19 (No. 217-02892/02893)	Apr-20
Power sensor NRP-Z91	SN: 103244	03-Apr-19 (No. 217-02892)	Apr-20
Power sensor NRP-Z91	SN: 103245	03-Apr-19 (No. 217-02893)	Apr-20
Reference 20 dB Attenuator	SN: S5277 (20x)	04-Apr-19 (No. 217-02894)	Apr-20
DAE4	SN: 660	19-Dec-18 (No. DAE4-660_Dec18)	Dec-19
Reference Probe ES3DV2	SN: 3013	31-Dec-18 (No. ES3-3013_Dec18)	Dec-19
Secondary Standards	ID	Check Date (in house)	Scheduled Check
Power meter E4419B	SN: GB41293874	06-Apr-16 (in house check Jun-18)	In house check: Jun-20
Power sensor E4412A	SN: MY41498087	06-Apr-16 (in house check Jun-18)	In house check: Jun-20
Power sensor E4412A	SN: 000110210	06-Apr-16 (in house check Jun-18)	In house check: Jun-20
RF generator HP 8648C	SN: US3642U01700	04-Aug-99 (in house check Jun-18)	In house check: Jun-20
Network Analyzer E8358A	SN: US41080477	31-Mar-14 (in house check Oct-18)	In house check: Jun-20

Name

Function

Signature

Calibrated by:

Jeton Kastrati

Laboratory Technician

Approved by:

Katja Pokovic

**Technical Manager** 

Issued: June 3, 2019

This calibration certificate shall not be reproduced except in full without written approval of the laboratory.

Certificate No: EX3-7531\_Jun19

Page 1 of 10

#### **Calibration Laboratory of**

Schmid & Partner **Engineering AG** Zeughausstrasse 43, 8004 Zurich, Switzerland





Schweizerischer Kalibrierdienst S

Service suisse d'étalonnage

C Servizio svizzero di taratura S **Swiss Calibration Service** 

Accreditation No.: SCS 0108

Accredited by the Swiss Accreditation Service (SAS)

The Swiss Accreditation Service is one of the signatories to the EA Multilateral Agreement for the recognition of calibration certificates

Glossary:

TSL NORMx,y,z tissue simulating liquid sensitivity in free space

ConvF DCP

sensitivity in TSL / NORMx,y,z diode compression point

CF

crest factor (1/duty\_cycle) of the RF signal modulation dependent linearization parameters

A, B, C, D Polarization φ

φ rotation around probe axis

Polarization 9

9 rotation around an axis that is in the plane normal to probe axis (at measurement center),

i.e.,  $\vartheta = 0$  is normal to probe axis

Connector Angle

information used in DASY system to align probe sensor X to the robot coordinate system

## Calibration is Performed According to the Following Standards:

a) IEEE Std 1528-2013, "IEEE Recommended Practice for Determining the Peak Spatial-Averaged Specific Absorption Rate (SAR) in the Human Head from Wireless Communications Devices: Measurement Techniques", June 2013

b) IEC 62209-1, ", "Measurement procedure for the assessment of Specific Absorption Rate (SAR) from handheld and body-mounted devices used next to the ear (frequency range of 300 MHz to 6 GHz)", July 2016

IEC 62209-2, "Procedure to determine the Specific Absorption Rate (SAR) for wireless communication devices used in close proximity to the human body (frequency range of 30 MHz to 6 GHz)", March 2010

d) KDB 865664, "SAR Measurement Requirements for 100 MHz to 6 GHz"

## Methods Applied and Interpretation of Parameters:

- NORMx,y,z: Assessed for E-field polarization  $\vartheta = 0$  (f  $\leq 900$  MHz in TEM-cell; f > 1800 MHz: R22 waveguide). NORMx,y,z are only intermediate values, i.e., the uncertainties of NORMx,y,z does not affect the E²-field uncertainty inside TSL (see below ConvF).
- $NORM(f)x,y,z = NORMx,y,z * frequency_response$  (see Frequency Response Chart). This linearization is implemented in DASY4 software versions later than 4.2. The uncertainty of the frequency response is included in the stated uncertainty of ConvF.
- DCPx,y,z: DCP are numerical linearization parameters assessed based on the data of power sweep with CW signal (no uncertainty required). DCP does not depend on frequency nor media.
- PAR: PAR is the Peak to Average Ratio that is not calibrated but determined based on the signal characteristics
- Ax,y,z; Bx,y,z; Cx,y,z; Dx,y,z; VRx,y,z: A, B, C, D are numerical linearization parameters assessed based on the data of power sweep for specific modulation signal. The parameters do not depend on frequency nor media. VR is the maximum calibration range expressed in RMS voltage across the diode.
- ConvF and Boundary Effect Parameters: Assessed in flat phantom using E-field (or Temperature Transfer Standard for  $f \le 800$  MHz) and inside waveguide using analytical field distributions based on power measurements for f > 800 MHz. The same setups are used for assessment of the parameters applied for boundary compensation (alpha, depth) of which typical uncertainty values are given. These parameters are used in DASY4 software to improve probe accuracy close to the boundary. The sensitivity in TSL corresponds to NORMx,y,z \* ConvF whereby the uncertainty corresponds to that given for ConvF. A frequency dependent ConvF is used in DASY version 4.4 and higher which allows extending the validity from ± 50 MHz to ± 100 MHz.
- Spherical isotropy (3D deviation from isotropy): in a field of low gradients realized using a flat phantom exposed by a patch antenna.
- Sensor Offset: The sensor offset corresponds to the offset of virtual measurement center from the probe tip (on probe axis). No tolerance required.
- Connector Angle: The angle is assessed using the information gained by determining the NORMx (no uncertainty required).

Certificate No: EX3-7531 Jun19

#### **Basic Calibration Parameters**

	Sensor X	Sensor Y	Sensor Z	Unc (k=2)
Norm $(\mu V/(V/m)^2)^A$	0.39	0.47	0.39	± 10.1 %
DCP (mV) <sup>B</sup>	97.9	95.2	100.9	

Calibration Results for Modulation Response

UID	Communication System Name		A dB	B dB√μV	С	D dB	VR mV	Max dev.	Unc <sup>E</sup> (k=2)
0	CW	X	0.0	0.0	1.0	0.00	139.8	±3.5 %	± 4.7 %
		Υ	0.0	0.0	1.0		132.9		
		Υ	0.0	0.0	1.0		137.4		

The reported uncertainty of measurement is stated as the standard uncertainty of measurement multiplied by the coverage factor k=2, which for a normal distribution corresponds to a coverage probability of approximately 95%.

A The uncertainties of Norm X,Y,Z do not affect the E²-field uncertainty inside TSL (see Pages 5 and 6).

B Numerical linearization parameter: uncertainty not required.

E Uncertainty is determined using the max. deviation from linear response applying rectangular distribution and is expressed for the square of the field value.

## **Other Probe Parameters**

Sensor Arrangement	Triangular
Connector Angle (°)	
Mechanical Surface Detection Mode	6.4
Optical Surface Detection Mode	enabled
	disabled
Probe Overall Length	337 mm
Probe Body Diameter	10 mm
Tip Length	9 mm
Tip Diameter	
Probe Tip to Sensor X Calibration Point	2.5 mm
Probe Tip to Sensor Y Calibration Point	1 mm
	1 mm
Probe Tip to Sensor Z Calibration Point	1 mm
Recommended Measurement Distance from Surface	1.4 mm

Calibration Parameter Determined in Head Tissue Simulating Media

	D-1-41	- Indiana in the contract of t						
f (MHz) <sup>c</sup>	Relative Permittivity <sup>F</sup>	Conductivity (S/m) F	ConvF X	ConvF Y	ConvF Z	Alpha <sup>G</sup>	Depth <sup>G</sup> (mm)	Unc (k=2)
150	52.3	0.76	13.01	13.01	13.01	0.00	1.00	± 13.3 %
220	49.0	0.81	12.68	12.68	12.68	0.00	1.00	± 13.3 %
300	45.3	0.87	12.23	12.23	12.23	0.06	1.30	± 13.3 %
450	43.5	0.87	11.43	11.43	11.43	0.13	1.30	± 13.3 %
600	42.7	0.88	10.58	10.58	10.58	0.03	1.30	± 13.3 %
1450	40.5	1.20	8.85	8.85	8.85	0.38	0.80	± 12.0 %
1640	40.2	1.31	8.71	8.71	8.71	0.28	0.91	± 12.0 %
2450	39.2	1.80	7.58	7.58	7.58	0.28	0.96	± 12.0 %
5250	35.9	4.71	5.24	5.24	5.24	0.40	1.80	± 13.1 %
5600	35.5	5.07	4.69	4.69	4.69	0.40	1.80	± 13.1 %
5750	35.4	5.22	4.78	4.78	4.78	0.40	1.80	± 13.1 %

<sup>&</sup>lt;sup>c</sup> Frequency validity above 300 MHz of ± 100 MHz only applies for DASY v4.4 and higher (see Page 2), else it is restricted to ± 50 MHz. The uncertainty is the RSS of the ConvF uncertainty at calibration frequency and the uncertainty for the indicated frequency band. Frequency validity below 300 MHz is ± 10, 25, 40, 50 and 70 MHz for ConvF assessments at 30, 64, 128, 150 and 220 MHz respectively. Validity of ConvF assessed at 13 MHz is 9-19 MHz. Above 5 GHz frequency validity can be extended to ± 110 MHz.

At frequencies below 3 GHz, the validity of tissue parameters ( $\epsilon$  and  $\sigma$ ) can be relaxed to  $\pm$  10% if liquid compensation formula is applied to measured SAR values. At frequencies above 3 GHz, the validity of tissue parameters ( $\epsilon$  and  $\sigma$ ) is restricted to  $\pm$  5%. The uncertainty is the RSS of the ConvF uncertainty for indicated target tissue parameters.

the ConvF uncertainty for indicated target tissue parameters.

Alpha/Depth are determined during calibration. SPEAG warrants that the remaining deviation due to the boundary effect after compensation is always less than ± 1% for frequencies below 3 GHz and below ± 2% for frequencies between 3-6 GHz at any distance larger than half the probe tip diameter from the boundary.

## Calibration Parameter Determined in Body Tissue Simulating Media

f (MHz) <sup>C</sup>	Relative Permittivity <sup>F</sup>	Conductivity (S/m) <sup>F</sup>	ConvF X	ConvF Y	ConvF Z	Alpha <sup>G</sup>	Depth <sup>G</sup> (mm)	Unc (k=2)
150	61.9	0.80	12.57	12.57	12.57	0.00	1.00	± 13.3 %
220	60.2	0.86	12.08	12.08	12.08	0.00	1.00	± 13.3 %
300	58.2	0.92	11.64	11.64	11.64	0.03	1.20	± 13.3 %
450	56.7	0.94	11.18	11.18	11.18	0.09	1.20	± 13.3 %
600	56.1	0.95	10.55	10.55	10.55	0.08	1.20	± 13.3 %
1640	53.7	1.42	8.53	8.53	8.53	0.26	0.99	± 12.0 %
2450	52.7	1.95	7.62	7.62	7.62	0.28	0.95	± 12.0 %
5250	48.9	5.36	4.52	4.52	4.52	0.50	1.90	± 13.1 %
5600	48.5	5.77	4.01	4.01	4.01	0.50	1.90	± 13.1 %
5750	48.3	5.94	4.08	4.08	4.08	0.50	1.90	± 13.1 %


 $<sup>^{\</sup>rm C}$  Frequency validity above 300 MHz of  $\pm$  100 MHz only applies for DASY v4.4 and higher (see Page 2), else it is restricted to  $\pm$  50 MHz. The uncertainty is the RSS of the ConvF uncertainty at calibration frequency and the uncertainty for the indicated frequency band. Frequency validity below 300 MHz is  $\pm$  10, 25, 40, 50 and 70 MHz for ConvF assessments at 30, 64, 128, 150 and 220 MHz respectively. Validity of ConvF assessed at 6 MHz is 4-9 MHz, and ConvF assessed at 13 MHz is 9-19 MHz. Above 5 GHz frequency validity can be extended to  $\pm$  110 MHz.

At frequencies below 3 GHz, the validity of tissue parameters ( $\epsilon$  and  $\sigma$ ) can be relaxed to  $\pm$  10% if liquid compensation formula is applied to measured SAR values. At frequencies above 3 GHz, the validity of tissue parameters ( $\epsilon$  and  $\sigma$ ) is restricted to  $\pm$  5%. The uncertainty is the RSS of the ConvF uncertainty for indicated target tissue parameters.

the ConvF uncertainty for indicated target tissue parameters.

Alpha/Depth are determined during calibration. SPEAG warrants that the remaining deviation due to the boundary effect after compensation is always less than ± 1% for frequencies below 3 GHz and below ± 2% for frequencies between 3-6 GHz at any distance larger than half the probe tip diameter from the boundary.

# Frequency Response of E-Field (TEM-Cell:ifi110 EXX, Waveguide: R22)

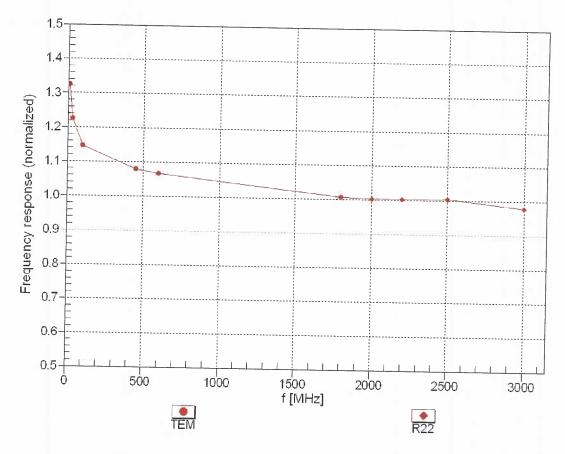



Uncertainty of Frequency Response of E-field: ± 6.3% (k=2)


## Receiving Pattern ( $\phi$ ), $\vartheta = 0^{\circ}$



f=1800 MHz,R22

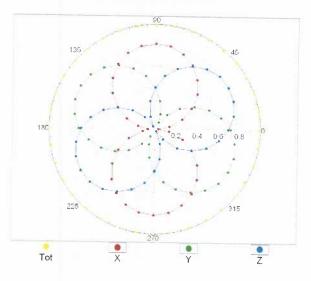


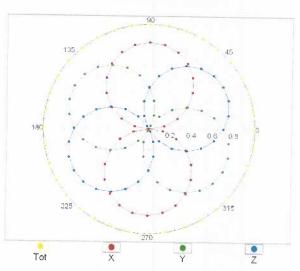


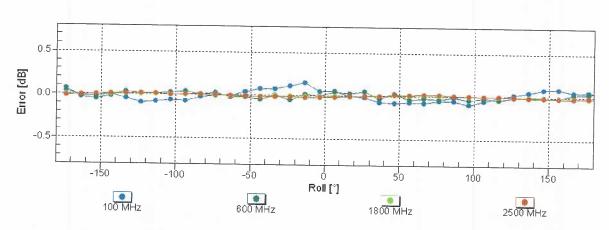

Uncertainty of Axial Isotropy Assessment: ± 0.5% (k=2)


## Dynamic Range f(SAR<sub>head</sub>) (TEM cell , f<sub>eval</sub>= 1900 MHz)

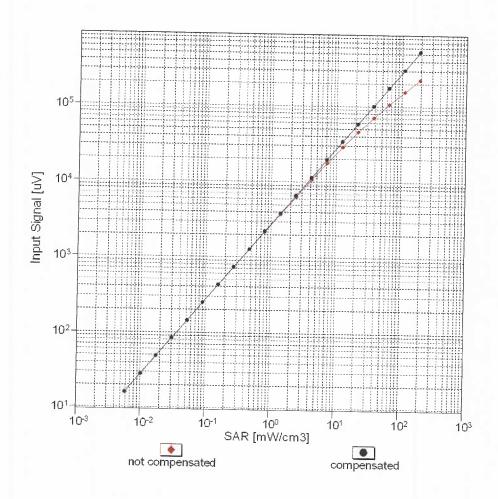

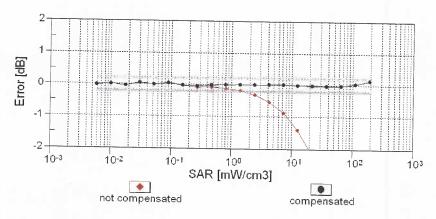


Uncertainty of Linearity Assessment: ± 0.6% (k=2)


## **Conversion Factor Assessment**

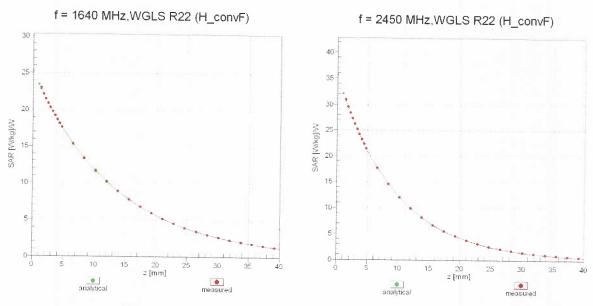

## **Deviation from Isotropy in Liquid**

Error ( $\phi$ ,  $\vartheta$ ), f = 900 MHz

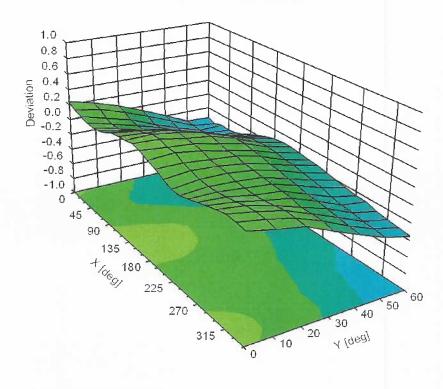





**Calibration Laboratory of** Schmid & Partner **Engineering AG** Zeughausstrasse 43, 8004 Zurich, Switzerland





Schweizerischer Kalibrierdienst Service suisse d'étalonnage Servizio svizzero di taratura **Swiss Calibration Service** 

Accreditation No.: SCS 0108

Signature

Accredited by the Swiss Accreditation Service (SAS)

The Swiss Accreditation Service is one of the signatories to the EA Multilateral Agreement for the recognition of calibration certificates

Client

RF Exposure Lab

Certificate No: ES3-3311\_Feb20

### CALIBRATION CERTIFICATE

Object

ES3DV3 - SN:3311

Calibration procedure(s)

QA CAL-01.v9, QA CAL-12.v9, QA CAL-23.v5, QA CAL-25.v7

Calibration procedure for dosimetric E-field probes

Calibration date:

Approved by:

February 24, 2020

This calibration certificate documents the traceability to national standards, which realize the physical units of measurements (SI). The measurements and the uncertainties with confidence probability are given on the following pages and are part of the certificate.

All calibrations have been conducted in the closed laboratory facility: environment temperature (22 ± 3)°C and humidity < 70%.

Calibration Equipment used (M&TE critical for calibration)

ID	Cal Date (Certificate No.)	Scheduled Calibration
SN: 104778	03-Apr-19 (No. 217-02892/02893)	Apr-20
SN: 103244	03-Apr-19 (No. 217-02892)	Apr-20
SN: 103245	03-Apr-19 (No. 217-02893)	Apr-20
SN: S5277 (20x)	04-Apr-19 (No. 217-02894)	Apr-20
SN: 660	27-Dec-19 (No. DAE4-660_Dec19)	Dec-20
SN: 3013	31-Dec-19 (No. ES3-3013_Dec19)	Dec-20
ID	Check Date (in house)	Scheduled Check
SN: GB41293874	06-Apr-16 (in house check Jun-18)	In house check: Jun-20
SN: MY41498087	06-Apr-16 (in house check Jun-18)	In house check: Jun-20
SN: 000110210	06-Apr-16 (in house check Jun-18)	In house check: Jun-20
SN: US3642U01700	04-Aug-99 (in house check Jun-18)	In house check: Jun-20
SN: US41080477	31-Mar-14 (in house check Oct-19)	In house check: Oct-20
	SN: 104778 SN: 103244 SN: 103245 SN: 55277 (20x) SN: 660 SN: 3013  ID SN: GB41293874 SN: MY41498087 SN: 000110210 SN: US3642U01700	SN: 104778       03-Apr-19 (No. 217-02892/02893)         SN: 103244       03-Apr-19 (No. 217-02892)         SN: 103245       03-Apr-19 (No. 217-02893)         SN: S5277 (20x)       04-Apr-19 (No. 217-02894)         SN: 660       27-Dec-19 (No. DAE4-660_Dec19)         SN: 3013       31-Dec-19 (No. ES3-3013_Dec19)         ID       Check Date (in house)         SN: GB41293874       06-Apr-16 (in house check Jun-18)         SN: MY41498087       06-Apr-16 (in house check Jun-18)         SN: US3642U01700       04-Aug-99 (in house check Jun-18)

Function Name Jeton Kastrati Laboratory Technician Calibrated by:

Technical Manager

Issued: February 25, 2020

This calibration certificate shall not be reproduced except in full without written approval of the laboratory.

Page 1 of 9 Certificate No: ES3-3311\_Feb20

Katja Pokovic

#### Calibration Laboratory of

Schmid & Partner
Engineering AG
Zeughausstrasse 43, 8004 Zurich, Switzerland





Schweizerischer Kalibrierdienst

C Service suisse d'étalonnage Servizio svizzero di taratura

Swiss Calibration Service

Accreditation No.: SCS 0108

Accredited by the Swiss Accreditation Service (SAS)

The Swiss Accreditation Service is one of the signatories to the EA Multilateral Agreement for the recognition of calibration certificates

#### Glossary:

TSL tissue simulating liquid NORMx,y,z sensitivity in free space

ConvF sensitivity in TSL / NORMx,y,z
DCP diode compression point

CF crest factor (1/duty\_cycle) of the RF signal modulation dependent linearization parameters

Polarization  $\varphi$   $\varphi$  rotation around probe axis

Polarization 9 9 rotation around an axis that is in the plane normal to probe axis (at measurement center),

i.e.,  $\vartheta = 0$  is normal to probe axis

Connector Angle information used in DASY system to align probe sensor X to the robot coordinate system

#### Calibration is Performed According to the Following Standards:

- a) IEEE Std 1528-2013, "IEEE Recommended Practice for Determining the Peak Spatial-Averaged Specific Absorption Rate (SAR) in the Human Head from Wireless Communications Devices: Measurement Techniques", June 2013
- b) IEC 62209-1, ", "Measurement procedure for the assessment of Specific Absorption Rate (SAR) from hand-held and body-mounted devices used next to the ear (frequency range of 300 MHz to 6 GHz)", July 2016
- c) IEC 62209-2, "Procedure to determine the Specific Absorption Rate (SAR) for wireless communication devices used in close proximity to the human body (frequency range of 30 MHz to 6 GHz)", March 2010
- d) KDB 865664, "SAR Measurement Requirements for 100 MHz to 6 GHz"

#### Methods Applied and Interpretation of Parameters:

- NORMx,y,z: Assessed for E-field polarization θ = 0 (f ≤ 900 MHz in TEM-cell; f > 1800 MHz: R22 waveguide). NORMx,y,z are only intermediate values, i.e., the uncertainties of NORMx,y,z does not affect the E²-field uncertainty inside TSL (see below ConvF).
- NORM(f)x,y,z = NORMx,y,z \* frequency\_response (see Frequency Response Chart). This linearization is implemented in DASY4 software versions later than 4.2. The uncertainty of the frequency response is included in the stated uncertainty of ConvF.
- DCPx,y,z: DCP are numerical linearization parameters assessed based on the data of power sweep with CW signal (no uncertainty required). DCP does not depend on frequency nor media.
- PAR: PAR is the Peak to Average Ratio that is not calibrated but determined based on the signal characteristics
- Ax,y,z; Bx,y,z; Cx,y,z; Dx,y,z; VRx,y,z: A, B, C, D are numerical linearization parameters assessed based on the data of power sweep for specific modulation signal. The parameters do not depend on frequency nor media. VR is the maximum calibration range expressed in RMS voltage across the diode.
- ConvF and Boundary Effect Parameters: Assessed in flat phantom using E-field (or Temperature Transfer Standard for f ≤ 800 MHz) and inside waveguide using analytical field distributions based on power measurements for f > 800 MHz. The same setups are used for assessment of the parameters applied for boundary compensation (alpha, depth) of which typical uncertainty values are given. These parameters are used in DASY4 software to improve probe accuracy close to the boundary. The sensitivity in TSL corresponds to NORMx,y,z \* ConvF whereby the uncertainty corresponds to that given for ConvF. A frequency dependent ConvF is used in DASY version 4.4 and higher which allows extending the validity from ± 50 MHz to ± 100 MHz
- Spherical isotropy (3D deviation from isotropy): in a field of low gradients realized using a flat phantom exposed by a patch antenna.
- Sensor Offset: The sensor offset corresponds to the offset of virtual measurement center from the probe tip (on probe axis). No tolerance required.
- Connector Angle: The angle is assessed using the information gained by determining the NORMx (no uncertainty required).

Certificate No: ES3-3311\_Feb20 Page 2 of 9

February 24, 2020 ES3DV3 - SN:3311

# DASY/EASY - Parameters of Probe: ES3DV3 - SN:3311

#### **Basic Calibration Parameters**

	Sensor X	Sensor Y	Sensor Z	Unc (k=2)
Norm $(\mu V/(V/m)^2)^A$	1.23	1.03	0.46	± 10.1 %
DCP (mV) <sup>B</sup>	103.2	104.2	100.5	

Calibration Results for Modulation Response

UID	Communication System Name		A dB	B dB√μV	С	D dB	VR mV	Max dev.	Unc <sup>±</sup> (k=2)
0	CW	Х	0.0	0.0	1.0	0.00	216.0	± 3.3 %	± 4.7 %
		Y	0.0	0.0	1.0		189.5		
		Z	0.0	0.0	1.0		205.1		

The reported uncertainty of measurement is stated as the standard uncertainty of measurement multiplied by the coverage factor k=2, which for a normal distribution corresponds to a coverage probability of approximately 95%.

<sup>&</sup>lt;sup>A</sup> The uncertainties of Norm X,Y,Z do not affect the E²-field uncertainty inside TSL (see Page 5). 
<sup>B</sup> Numerical linearization parameter: uncertainty not required.

E Uncertainty is determined using the max. deviation from linear response applying rectangular distribution and is expressed for the square of the field value.

ES3DV3- SN:3311 February 24, 2020

# DASY/EASY - Parameters of Probe: ES3DV3 - SN:3311

#### **Other Probe Parameters**

Sensor Arrangement	Triangular
Connector Angle (°)	60.2
Mechanical Surface Detection Mode	enabled
Optical Surface Detection Mode	disabled
Probe Overall Length	337 mm
Probe Body Diameter	10 mm
Tip Length	10 mm
Tip Diameter	4 mm
Probe Tip to Sensor X Calibration Point	2 mm
Probe Tip to Sensor Y Calibration Point	2 mm
Probe Tip to Sensor Z Calibration Point	2 mm
Recommended Measurement Distance from Surface	3 mm

Certificate No: ES3-3311\_Feb20 Page 4 of 9

ES3DV3- SN:3311 February 24, 2020

# DASY/EASY - Parameters of Probe: ES3DV3 - SN:3311

### Calibration Parameter Determined in Head Tissue Simulating Media

f (MHz) <sup>C</sup>	Relative Permittivity <sup>F</sup>	Conductivity (S/m) <sup>F</sup>	ConvF X	ConvF Y	ConvF Z	Alpha <sup>G</sup>	Depth <sup>G</sup> (mm)	Unc (k=2)
150	52.3	0.76	7.62	7.62	7.62	0.10	1.25	± 13.3 %
220	49.0	0.81	7.46	7.46	7.46	0.10	1.25	± 13.3 %
300	45.3	0.87	7.29	7.29	7.29	0.12	1.30	± 13.3 %
450	43.5	0.87	7.14	7.14	7.14	0.18	1.45	± 13.3 %
600	42.7	0.88	6.73	6.73	6.73	0.12	1.60	± 13.3 %
1450	40.5	1.20	5.76	5.76	5.76	0.56	1.35	± 12.0 %
1640	40.2	1.31	5.52	5.52	5.52	0.80	1.14	± 12.0 %
2450	39.2	1.80	4.78	4.78	4.78	0.73	1.31	± 12.0 %

 $<sup>^{\</sup>rm C}$  Frequency validity above 300 MHz of  $\pm$  100 MHz only applies for DASY v4.4 and higher (see Page 2), else it is restricted to  $\pm$  50 MHz. The uncertainty is the RSS of the ConvF uncertainty at calibration frequency and the uncertainty for the indicated frequency band. Frequency validity below 300 MHz is  $\pm$  10, 25, 40, 50 and 70 MHz for ConvF assessments at 30, 64, 128, 150 and 220 MHz respectively. Validity of ConvF assessed at 6 MHz is 4-9 MHz, and ConvF assessed at 13 MHz is 9-19 MHz. Above 5 GHz frequency validity can be extended to  $\pm$  110 MHz. F At frequencies below 3 GHz, the validity of tissue parameters ( $\epsilon$  and  $\sigma$ ) can be relaxed to  $\pm$  10% if liquid compensation formula is applied to

Certificate No: ES3-3311\_Feb20


F At frequencies below 3 GHz, the validity of tissue parameters ( $\varepsilon$  and  $\sigma$ ) can be relaxed to  $\pm$  10% if liquid compensation formula is applied to measured SAR values. At frequencies above 3 GHz, the validity of tissue parameters ( $\varepsilon$  and  $\sigma$ ) is restricted to  $\pm$  5%. The uncertainty is the RSS of the ConvF uncertainty for indicated target tissue parameters.

the ConvF uncertainty for indicated target tissue parameters.

Galpha/Depth are determined during calibration. SPEAG warrants that the remaining deviation due to the boundary effect after compensation is always less than ± 1% for frequencies below 3 GHz and below ± 2% for frequencies between 3-6 GHz at any distance larger than half the probe tip diameter from the boundary.

February 24, 2020


# Frequency Response of E-Field (TEM-Cell:ifi110 EXX, Waveguide: R22)

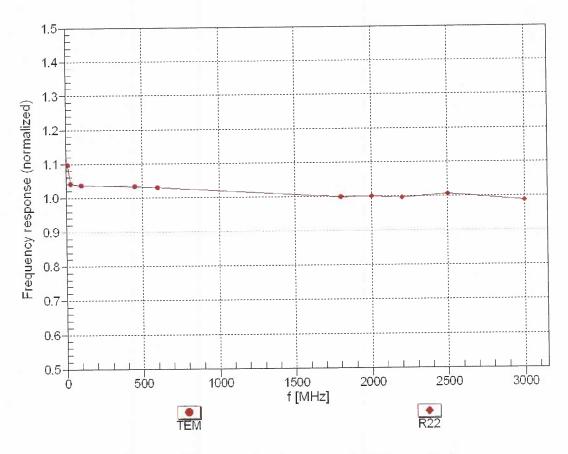


Uncertainty of Frequency Response of E-field:  $\pm$  6.3% (k=2)

February 24, 2020


# Receiving Pattern ( $\phi$ ), $\vartheta = 0^{\circ}$

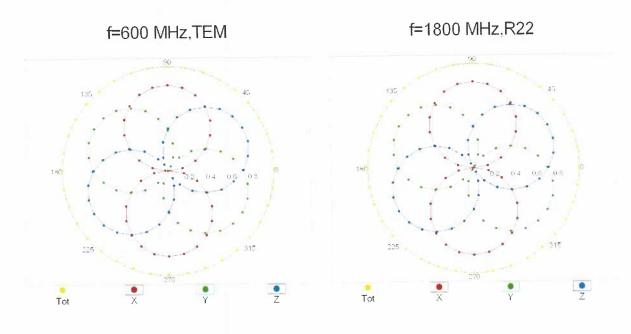


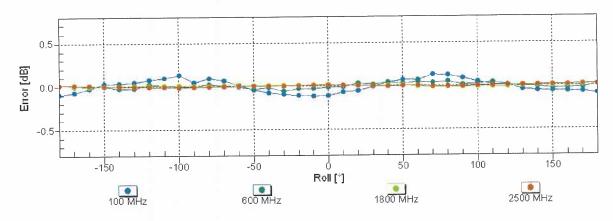

Uncertainty of Axial Isotropy Assessment: ± 0.5% (k=2)

# Dynamic Range f(SAR<sub>head</sub>) (TEM cell , f<sub>eval</sub>= 1900 MHz)

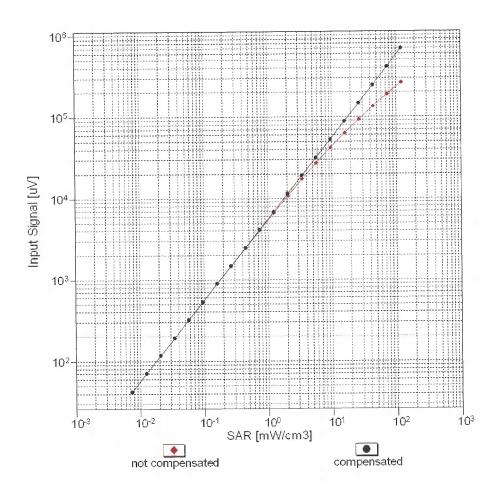


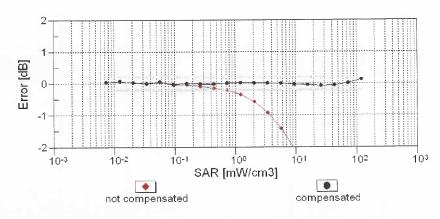


Uncertainty of Linearity Assessment: ± 0.6% (k=2)

ES3DV3- SN:3311 February 24, 2020

# **Conversion Factor Assessment**

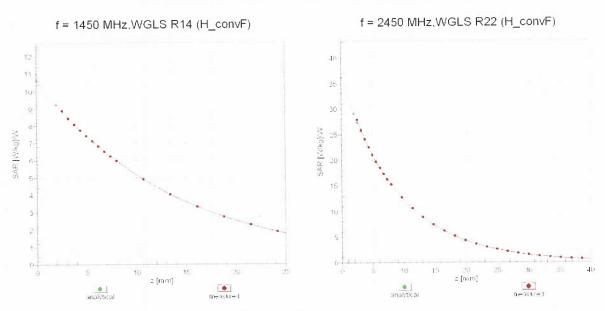

# Deviation from Isotropy in Liquid Error (φ, θ), f = 900 MHz

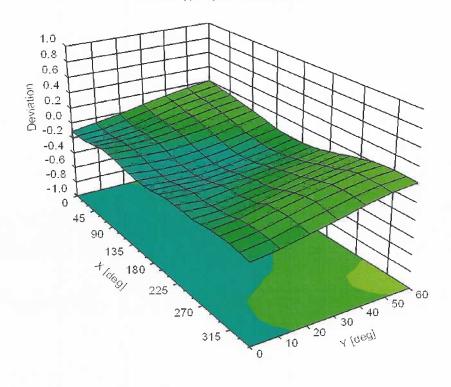



Report Number: SAR.20190805

# **Appendix E – Dipole Calibration Data Sheets**



### Calibration Laboratory of Schmid & Partner Engineering AG Zeughausstrasse 43, 8004 Zurich, Switzerland





S Schweizerischer Kalibrierdienst
C Service suisse d'étalonnage
Servizio svizzero di taratura
S Swiss Calibration Service

Accredited by the Swiss Accreditation Service (SAS)

The Swiss Accreditation Service is one of the signatories to the EA Multilateral Agreement for the recognition of calibration certificates

Client

**RF Exposure Lab** 

Accreditation No.: SCS 0108

Certificate No: D450V3-1085\_Jan19

### CALIBRATION CERTIFICATE

Object

D450V3 - SN:1085

Calibration procedure(s)

**QA CAL-15.v9** 

Calibration Procedure for SAR Validation Sources below 700 MHz

Calibration date:

January 15, 2019

This calibration certificate documents the traceability to national standards, which realize the physical units of measurements (SI). The measurements and the uncertainties with confidence probability are given on the following pages and are part of the certificate.

All calibrations have been conducted in the closed laboratory facility: environment temperature (22 ± 3)°C and humidity < 70%.

Calibration Equipment used (M&TE critical for calibration)

Primary Standards	ID#	Cal Date (Certificate No.)	Scheduled Calibration
Power meter NRP	SN: 104778	04-Apr-18 (No. 217-02672/02673)	Apr-19
Power sensor NRP-Z91	SN: 103244	04-Apr-18 (No. 217-02672)	Apr-19
Power sensor NRP-Z91	SN: 103245	04-Apr-18 (No. 217-02673)	Apr-19
Reference 20 dB Attenuator	SN: 5277 (20x)	04-Apr-18 (No. 217-02682)	Apr-19
Type-N mismatch combination	SN: 5047.2 / 06327	04-Apr-18 (No. 217-02683)	Apr-19
Reference Probe EX3DV4	SN: 3877	31-Dec-18 (No. EX3-3877_Dec18)	Dec-19
DAE4	SN: 654	05-Jul-18 (No. DAE4-654_Jul18)	Jul-19
Secondary Standards	ID #	Check Date (in house)	Scheduled Check
Power meter E4419B	SN: GB41293874	06-Apr-16 (in house check Jun-18)	In house check: Jun-20
Power sensor E4412A	SN: MY41498087	06-Apr-16 (in house check Jun-18)	In house check: Jun-20
Power sensor E4412A	SN: 000110210	06-Apr-16 (in house check Jun-18)	In house check: Jun-20
RF generator HP 8648C	SN: US3642U01700	04-Aug-99 (in house check Jun-18)	In house check: Jun-20
Network Analyzer Agilent E8358A	SN: US41080477	31-Mar-14 (in house check Oct-18)	In house check: Oct-19
	Name	Function	Signature
Calibrated by:	Jeton Kastrati	Laboratory Technician	Alas
Approved by:	Katja Pokovic	Technical Manager	
			XXUS

Issued: January 17, 2019

This calibration certificate shall not be reproduced except in full without written approval of the laboratory.

Certificate No: D450V3-1085\_Jan19

Page 1 of 8

### Calibration Laboratory of

Schmid & Partner
Engineering AG
Zeughausstrasse 43, 8004 Zurich, Switzerland





S Schweizerischer Kalibrierdienst
Service suisse d'étalonnage
Servizio svizzero di taratura
Swiss Calibration Service

Accreditation No.: SCS 0108

Accredited by the Swiss Accreditation Service (SAS)

The Swiss Accreditation Service is one of the signatories to the EA Multilateral Agreement for the recognition of calibration certificates

#### Glossary:

TSL ConvF tissue simulating liquid

sensitivity in TSL / NORM x,y,z

N/A not applicable or not measured

# Calibration is Performed According to the Following Standards:

- a) IEEE Std 1528-2013, "IEEE Recommended Practice for Determining the Peak Spatial-Averaged Specific Absorption Rate (SAR) in the Human Head from Wireless Communications Devices: Measurement Techniques", June 2013
- b) IEC 62209-1, "Measurement procedure for the assessment of Specific Absorption Rate (SAR) from hand-held and body-mounted devices used next to the ear (frequency range of 300 MHz to 6 GHz)", July 2016
- c) IEC 62209-2, "Procedure to determine the Specific Absorption Rate (SAR) for wireless communication devices used in close proximity to the human body (frequency range of 30 MHz to 6 GHz)", March 2010
- d) KDB 865664, "SAR Measurement Requirements for 100 MHz to 6 GHz"

### **Additional Documentation:**

e) DASY4/5 System Handbook

# **Methods Applied and Interpretation of Parameters:**

- Measurement Conditions: Further details are available from the Validation Report at the end of the certificate. All figures stated in the certificate are valid at the frequency indicated.
- Antenna Parameters with TSL: The dipole is mounted with the spacer to position its feed
  point exactly below the center marking of the flat phantom section, with the arms oriented
  parallel to the body axis.
- Feed Point Impedance and Return Loss: These parameters are measured with the dipole
  positioned under the liquid filled phantom. The impedance stated is transformed from the
  measurement at the SMA connector to the feed point. The Return Loss ensures low
  reflected power. No uncertainty required.
- Electrical Delay: One-way delay between the SMA connector and the antenna feed point.
   No uncertainty required.
- SAR measured: SAR measured at the stated antenna input power.
- SAR normalized: SAR as measured, normalized to an input power of 1 W at the antenna connector.
- SAR for nominal TSL parameters: The measured TSL parameters are used to calculate the nominal SAR result.

The reported uncertainty of measurement is stated as the standard uncertainty of measurement multiplied by the coverage factor k=2, which for a normal distribution corresponds to a coverage probability of approximately 95%.

# **Measurement Conditions**

DASY system configuration, as far as not given on page 1.

DASY Version	DASY5	V52.10.2
Extrapolation	Advanced Extrapolation	
Phantom	ELI4 Flat Phantom	Shell thickness: 2 ± 0.2 mm
Distance Dipole Center - TSL	15 mm	with Spacer
Zoom Scan Resolution	dx, $dy$ , $dz = 5 mm$	
Frequency	450 MHz ± 1 MHz	

**Head TSL parameters** 

The following parameters and calculations were applied.

The following parameters and calculations were app.	Temperature	Permittivity	Conductivity
Nominal Head TSL parameters	22.0 °C	43.5	0.87 mho/m
Measured Head TSL parameters	(22.0 ± 0.2) °C	43.7 ± 6 %	0.87 mho/m ± 6 %
Head TSL temperature change during test	< 0.5 °C		

### SAR result with Head TSL

SAR averaged over 1 cm <sup>3</sup> (1 g) of Head TSL	Condition	
SAR measured	250 mW input power	1.12 W/kg
SAR for nominal Head TSL parameters	normalized to 1W	4.48 W/kg ± 18.1 % (k=2)

SAR averaged over 10 cm <sup>3</sup> (10 g) of Head TSL	condition	
SAR measured	250 mW input power	0.751 W/kg
SAR for nominal Head TSL parameters	normalized to 1W	3.01 W/kg ± 17.6 % (k=2)

**Body TSL parameters** 

The following parameters and calculations were applied.

The tenering parameters are	Temperature	Permittivity	Conductivity
Nominal Body TSL parameters	22.0 °C	56.7	0.94 mho/m
Measured Body TSL parameters	(22.0 ± 0.2) °C	55.5 ± 6 %	0.92 mho/m ± 6 %
Body TSL temperature change during test	< 0.5 °C		

# **SAR result with Body TSL**

SAR averaged over 1 cm <sup>3</sup> (1 g) of Body TSL	Condition	
SAR measured	250 mW input power	1.13 W/kg
SAR for nominal Body TSL parameters	normalized to 1W	4.58 W/kg ± 18.1 % (k=2)

SAR averaged over 10 cm <sup>3</sup> (10 g) of Body TSL	condition	
SAR measured	250 mW input power	0.761 W/kg
SAR for nominal Body TSL parameters	normalized to 1W	3.08 W/kg ± 17.6 % (k=2)

Certificate No: D450V3-1085\_Jan19 Page 3 of 8

# Appendix (Additional assessments outside the scope of SCS 0108)

### **Antenna Parameters with Head TSL**

Impedance, transformed to feed point	59.4 Ω - 3.7 jΩ
Return Loss	- 20.7 dB

### **Antenna Parameters with Body TSL**

Impedance, transformed to feed point	55.5 Ω - 7.9 jΩ
Return Loss	- 20.8 dB

# **General Antenna Parameters and Design**

Electrical Delay (one direction)	1.349 ns

After long term use with 100W radiated power, only a slight warming of the dipole near the feedpoint can be measured.

The dipole is made of standard semirigid coaxial cable. The center conductor of the feeding line is directly connected to the second arm of the dipole. The antenna is therefore short-circuited for DC-signals. On some of the dipoles, small end caps are added to the dipole arms in order to improve matching when loaded according to the position as explained in the "Measurement Conditions" paragraph. The SAR data are not affected by this change. The overall dipole length is still according to the Standard.

No excessive force must be applied to the dipole arms, because they might bend or the soldered connections near the feedpoint may be damaged.

### **Additional EUT Data**

Manufactured by	SPEAG

Certificate No: D450V3-1085\_Jan19 Page 4 of 8

### **DASY5 Validation Report for Head TSL**

Date: 15.01.2019

Test Laboratory: SPEAG, Zurich, Switzerland

DUT: Dipole 450 MHz D450V3; Type: D450V3; Serial: D450V3 - SN:1085

Communication System: UID 0 - CW; Frequency: 450 MHz

Medium parameters used: f = 450 MHz;  $\sigma = 0.87 \text{ S/m}$ ;  $\varepsilon_r = 43.7$ ;  $\rho = 1000 \text{ kg/m}^3$ 

Phantom section: Flat Section

Measurement Standard: DASY5 (IEEE/IEC/ANSI C63.19-2011)

#### DASY52 Configuration:

Probe: EX3DV4 - SN3877; ConvF(10.5, 10.5, 10.5) @ 450 MHz; Calibrated: 31.12.2018

• Sensor-Surface: 1.4mm (Mechanical Surface Detection)

• Electronics: DAE4 Sn654; Calibrated: 05.07.2018

Phantom: ELI v4.0; Type: QDOVA001BB; Serial: TP:1003

• DASY52 52.10.2(1495); SEMCAD X 14.6.12(7450)

# Dipole Calibration for Head Tissue/d=15mm, Pin=250mW/Zoom Scan (7x7x7)/Cube 0:


Measurement grid: dx=5mm, dy=5mm, dz=5mm

Reference Value = 38.75 V/m; Power Drift = -0.01 dB

Peak SAR (extrapolated) = 1.74 W/kg


SAR(1 g) = 1.12 W/kg; SAR(10 g) = 0.751 W/kg

Maximum value of SAR (measured) = 1.52 W/kg

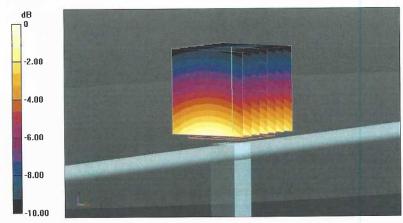

0 dB = 1.52 W/kg = 1.82 dBW/kg

# Impedance Measurement Plot for Head TSL

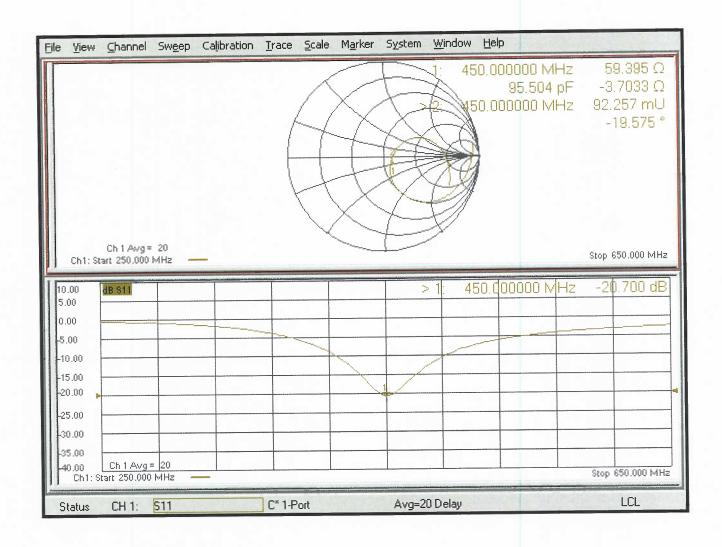

### **DASY5 Validation Report for Body TSL**

Date: 15.01.2019

Test Laboratory: SPEAG, Zurich, Switzerland

DUT: Dipole 450 MHz; Type: D450V3; Serial: D450V3 - SN:1085

Communication System: UID 0 - CW; Frequency: 450 MHz

Medium parameters used: f = 450 MHz;  $\sigma = 0.92 \text{ S/m}$ ;  $\varepsilon_r = 55.5$ ;  $\rho = 1000 \text{ kg/m}^3$ 

Phantom section: Flat Section

Measurement Standard: DASY5 (IEEE/IEC/ANSI C63.19-2011)

#### DASY52 Configuration:

Probe: EX3DV4 - SN3877; ConvF(10.7, 10.7, 10.7) @ 450 MHz; Calibrated: 31.12.2018

• Sensor-Surface: 1.4mm (Mechanical Surface Detection)

• Electronics: DAE4 Sn654; Calibrated: 05.07.2018

• Phantom: ELI v4.0; Type: QDOVA001BB; Serial: TP:1003

• DASY52 52.10.2(1495); SEMCAD X 14.6.12(7450)

# Dipole Calibration for Body Tissue/d=15mm, Pin=250mW/Zoom Scan (7x7x7)/Cube 0:


Measurement grid: dx=5mm, dy=5mm, dz=5mm

Reference Value = 41.97 V/m; Power Drift = -0.07 dB

Peak SAR (extrapolated) = 1.73 W/kg


SAR(1 g) = 1.13 W/kg; SAR(10 g) = 0.761 W/kg

Maximum value of SAR (measured) = 1.51 W/kg

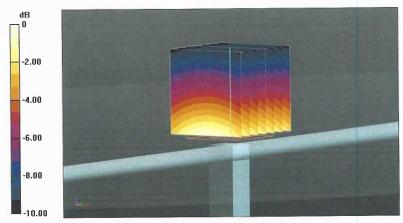

0 dB = 1.51 W/kg = 1.79 dBW/kg

# Impedance Measurement Plot for Body TSL

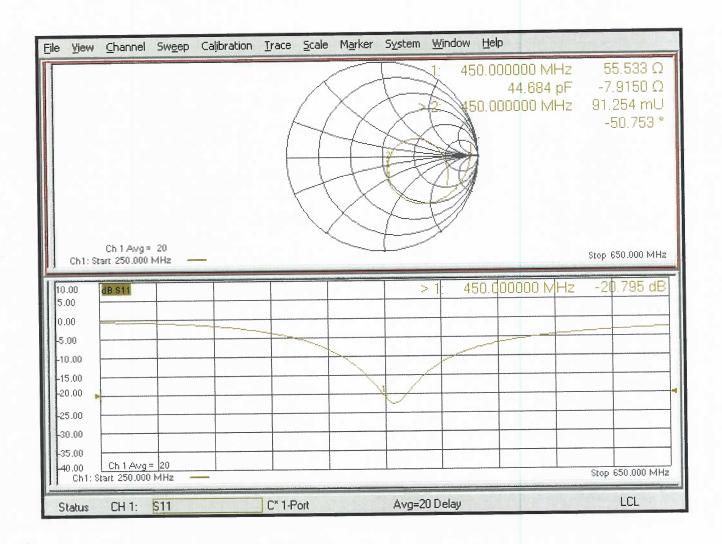



### Calibration Laboratory of Schmid & Partner Engineering AG Zeughausstrasse 43, 8004 Zurich, Switzerland





S Schweizerischer Kalibrierdienst
C Service suisse d'étalonnage
Servizio svizzero di taratura
S Swiss Calibration Service

Accredited by the Swiss Accreditation Service (SAS)

The Swiss Accreditation Service is one of the signatories to the EA Multilateral Agreement for the recognition of calibration certificates

Client

**RF Exposure Lab** 

Accreditation No.: SCS 0108

Certificate No: D450V3-1085\_Jan19

### CALIBRATION CERTIFICATE

Object

D450V3 - SN:1085

Calibration procedure(s)

**QA CAL-15.v9** 

Calibration Procedure for SAR Validation Sources below 700 MHz

Calibration date:

January 15, 2019

This calibration certificate documents the traceability to national standards, which realize the physical units of measurements (SI). The measurements and the uncertainties with confidence probability are given on the following pages and are part of the certificate.

All calibrations have been conducted in the closed laboratory facility: environment temperature (22 ± 3)°C and humidity < 70%.

Calibration Equipment used (M&TE critical for calibration)

Primary Standards	ID#	Cal Date (Certificate No.)	Scheduled Calibration
Power meter NRP	SN: 104778	04-Apr-18 (No. 217-02672/02673)	Apr-19
Power sensor NRP-Z91	SN: 103244	04-Apr-18 (No. 217-02672)	Apr-19
Power sensor NRP-Z91	SN: 103245	04-Apr-18 (No. 217-02673)	Apr-19
Reference 20 dB Attenuator	SN: 5277 (20x)	04-Apr-18 (No. 217-02682)	Apr-19
Type-N mismatch combination	SN: 5047.2 / 06327	04-Apr-18 (No. 217-02683)	Apr-19
Reference Probe EX3DV4	SN: 3877	31-Dec-18 (No. EX3-3877_Dec18)	Dec-19
DAE4	SN: 654	05-Jul-18 (No. DAE4-654_Jul18)	Jul-19
Secondary Standards	ID #	Check Date (in house)	Scheduled Check
Power meter E4419B	SN: GB41293874	06-Apr-16 (in house check Jun-18)	In house check: Jun-20
Power sensor E4412A	SN: MY41498087	06-Apr-16 (in house check Jun-18)	In house check: Jun-20
Power sensor E4412A	SN: 000110210	06-Apr-16 (in house check Jun-18)	In house check: Jun-20
RF generator HP 8648C	SN: US3642U01700	04-Aug-99 (in house check Jun-18)	In house check: Jun-20
Network Analyzer Agilent E8358A	SN: US41080477	31-Mar-14 (in house check Oct-18)	In house check: Oct-19
	Name	Function	Signature
Calibrated by:	Jeton Kastrati	Laboratory Technician	Alas
Approved by:	Katja Pokovic	Technical Manager	
			XXUS

Issued: January 17, 2019

This calibration certificate shall not be reproduced except in full without written approval of the laboratory.

Certificate No: D450V3-1085\_Jan19

Page 1 of 8

### Calibration Laboratory of

Schmid & Partner
Engineering AG
Zeughausstrasse 43, 8004 Zurich, Switzerland





S Schweizerischer Kalibrierdienst
Service suisse d'étalonnage
Servizio svizzero di taratura
Swiss Calibration Service

Accreditation No.: SCS 0108

Accredited by the Swiss Accreditation Service (SAS)

The Swiss Accreditation Service is one of the signatories to the EA Multilateral Agreement for the recognition of calibration certificates

#### Glossary:

TSL ConvF tissue simulating liquid

sensitivity in TSL / NORM x,y,z

N/A not applicable or not measured

# Calibration is Performed According to the Following Standards:

- a) IEEE Std 1528-2013, "IEEE Recommended Practice for Determining the Peak Spatial-Averaged Specific Absorption Rate (SAR) in the Human Head from Wireless Communications Devices: Measurement Techniques", June 2013
- b) IEC 62209-1, "Measurement procedure for the assessment of Specific Absorption Rate (SAR) from hand-held and body-mounted devices used next to the ear (frequency range of 300 MHz to 6 GHz)", July 2016
- c) IEC 62209-2, "Procedure to determine the Specific Absorption Rate (SAR) for wireless communication devices used in close proximity to the human body (frequency range of 30 MHz to 6 GHz)", March 2010
- d) KDB 865664, "SAR Measurement Requirements for 100 MHz to 6 GHz"

### **Additional Documentation:**

e) DASY4/5 System Handbook

# **Methods Applied and Interpretation of Parameters:**

- Measurement Conditions: Further details are available from the Validation Report at the end of the certificate. All figures stated in the certificate are valid at the frequency indicated.
- Antenna Parameters with TSL: The dipole is mounted with the spacer to position its feed
  point exactly below the center marking of the flat phantom section, with the arms oriented
  parallel to the body axis.
- Feed Point Impedance and Return Loss: These parameters are measured with the dipole
  positioned under the liquid filled phantom. The impedance stated is transformed from the
  measurement at the SMA connector to the feed point. The Return Loss ensures low
  reflected power. No uncertainty required.
- Electrical Delay: One-way delay between the SMA connector and the antenna feed point.
   No uncertainty required.
- SAR measured: SAR measured at the stated antenna input power.
- SAR normalized: SAR as measured, normalized to an input power of 1 W at the antenna connector.
- SAR for nominal TSL parameters: The measured TSL parameters are used to calculate the nominal SAR result.

The reported uncertainty of measurement is stated as the standard uncertainty of measurement multiplied by the coverage factor k=2, which for a normal distribution corresponds to a coverage probability of approximately 95%.

# **Measurement Conditions**

DASY system configuration, as far as not given on page 1.

DASY Version	DASY5	V52.10.2
Extrapolation	Advanced Extrapolation	
Phantom	ELI4 Flat Phantom	Shell thickness: 2 ± 0.2 mm
Distance Dipole Center - TSL	15 mm	with Spacer
Zoom Scan Resolution	dx, $dy$ , $dz = 5 mm$	
Frequency	450 MHz ± 1 MHz	

**Head TSL parameters** 

The following parameters and calculations were applied.

The following parameters and calculations were app.	Temperature	Permittivity	Conductivity
Nominal Head TSL parameters	22.0 °C	43.5	0.87 mho/m
Measured Head TSL parameters	(22.0 ± 0.2) °C	43.7 ± 6 %	0.87 mho/m ± 6 %
Head TSL temperature change during test	< 0.5 °C		

### SAR result with Head TSL

SAR averaged over 1 cm <sup>3</sup> (1 g) of Head TSL	Condition	
SAR measured	250 mW input power	1.12 W/kg
SAR for nominal Head TSL parameters	normalized to 1W	4.48 W/kg ± 18.1 % (k=2)

SAR averaged over 10 cm <sup>3</sup> (10 g) of Head TSL	condition	
SAR measured	250 mW input power	0.751 W/kg
SAR for nominal Head TSL parameters	normalized to 1W	3.01 W/kg ± 17.6 % (k=2)

### **Body TSL parameters**

The following parameters and calculations were applied.

The tenering parameters are	Temperature	Permittivity	Conductivity
Nominal Body TSL parameters	22.0 °C	56.7	0.94 mho/m
Measured Body TSL parameters	(22.0 ± 0.2) °C	55.5 ± 6 %	0.92 mho/m ± 6 %
Body TSL temperature change during test	< 0.5 °C		

# **SAR** result with Body TSL

SAR averaged over 1 cm <sup>3</sup> (1 g) of Body TSL	Condition	
SAR measured	250 mW input power	1.13 W/kg
SAR for nominal Body TSL parameters	normalized to 1W	4.58 W/kg ± 18.1 % (k=2)

SAR averaged over 10 cm <sup>3</sup> (10 g) of Body TSL	condition	
SAR measured	250 mW input power	0.761 W/kg
SAR for nominal Body TSL parameters	normalized to 1W	3.08 W/kg ± 17.6 % (k=2)

Certificate No: D450V3-1085\_Jan19 Page 3 of 8

# Appendix (Additional assessments outside the scope of SCS 0108)

#### **Antenna Parameters with Head TSL**

Impedance, transformed to feed point	59.4 Ω - 3.7 jΩ					
Return Loss	- 20.7 dB					

#### **Antenna Parameters with Body TSL**

Impedance, transformed to feed point	55.5 Ω - 7.9 jΩ
Return Loss	- 20.8 dB

### **General Antenna Parameters and Design**

Electrical Delay (one direction)	1.349 ns

After long term use with 100W radiated power, only a slight warming of the dipole near the feedpoint can be measured.

The dipole is made of standard semirigid coaxial cable. The center conductor of the feeding line is directly connected to the second arm of the dipole. The antenna is therefore short-circuited for DC-signals. On some of the dipoles, small end caps are added to the dipole arms in order to improve matching when loaded according to the position as explained in the "Measurement Conditions" paragraph. The SAR data are not affected by this change. The overall dipole length is still according to the Standard.

No excessive force must be applied to the dipole arms, because they might bend or the soldered connections near the feedpoint may be damaged.

#### **Additional EUT Data**

Manufactured by	SPEAG
•	

#### **Extended Calibration**

Usage of SAR dipoles calibrated less than 3 years ago but more than 1 year ago were confirmed in maintaining return loss (<-20 dB, within 20% of prior calibration) and impedance (within 5 ohm from prior calibration) requirements per extended calibrations in KDB Publication 865664 D01 v01r04.

D450V2 SN:1085 - Head											
Date of Measurement	Return Loss (dB)	Δ%	Impedance (Ω)	ΔΩ	Impedance Imaginary (jΩ)	ΔΩ					
1/15/2019	-20.7		59.4		-3.7						
1/15/2020	-21.3	2.9	59.1	-0.3	-3.5	0.2					
D450V2 CN:1095 Pody											
D450V2 SN:1085 - Body											
		D450V2	SN:1085 -	Body		·					
Date of Measurement	Return Loss (dB)	D450V2 Δ%	SN:1085 -	Body ΔΩ	Impedance Imaginary (jΩ)	ΔΩ					
			Impedance		1 -	ΔΩ					

### **DASY5 Validation Report for Head TSL**

Date: 15.01.2019

Test Laboratory: SPEAG, Zurich, Switzerland

DUT: Dipole 450 MHz D450V3; Type: D450V3; Serial: D450V3 - SN:1085

Communication System: UID 0 - CW; Frequency: 450 MHz

Medium parameters used: f = 450 MHz;  $\sigma = 0.87 \text{ S/m}$ ;  $\varepsilon_r = 43.7$ ;  $\rho = 1000 \text{ kg/m}^3$ 

Phantom section: Flat Section

Measurement Standard: DASY5 (IEEE/IEC/ANSI C63.19-2011)

#### DASY52 Configuration:

Probe: EX3DV4 - SN3877; ConvF(10.5, 10.5, 10.5) @ 450 MHz; Calibrated: 31.12.2018

• Sensor-Surface: 1.4mm (Mechanical Surface Detection)

• Electronics: DAE4 Sn654; Calibrated: 05.07.2018

Phantom: ELI v4.0; Type: QDOVA001BB; Serial: TP:1003

• DASY52 52.10.2(1495); SEMCAD X 14.6.12(7450)

# Dipole Calibration for Head Tissue/d=15mm, Pin=250mW/Zoom Scan (7x7x7)/Cube 0:


Measurement grid: dx=5mm, dy=5mm, dz=5mm

Reference Value = 38.75 V/m; Power Drift = -0.01 dB

Peak SAR (extrapolated) = 1.74 W/kg


SAR(1 g) = 1.12 W/kg; SAR(10 g) = 0.751 W/kg

Maximum value of SAR (measured) = 1.52 W/kg

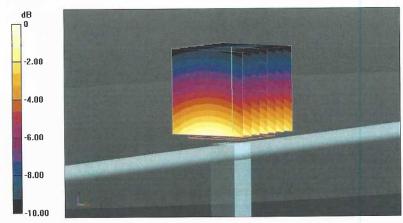

0 dB = 1.52 W/kg = 1.82 dBW/kg

# Impedance Measurement Plot for Head TSL

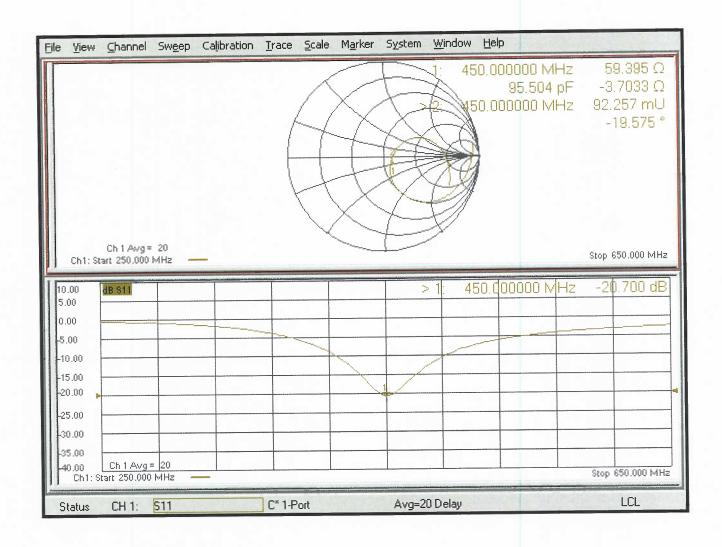

### **DASY5 Validation Report for Body TSL**

Date: 15.01.2019

Test Laboratory: SPEAG, Zurich, Switzerland

DUT: Dipole 450 MHz; Type: D450V3; Serial: D450V3 - SN:1085

Communication System: UID 0 - CW; Frequency: 450 MHz

Medium parameters used: f = 450 MHz;  $\sigma = 0.92 \text{ S/m}$ ;  $\varepsilon_r = 55.5$ ;  $\rho = 1000 \text{ kg/m}^3$ 

Phantom section: Flat Section

Measurement Standard: DASY5 (IEEE/IEC/ANSI C63.19-2011)

#### DASY52 Configuration:

Probe: EX3DV4 - SN3877; ConvF(10.7, 10.7, 10.7) @ 450 MHz; Calibrated: 31.12.2018

• Sensor-Surface: 1.4mm (Mechanical Surface Detection)

• Electronics: DAE4 Sn654; Calibrated: 05.07.2018

• Phantom: ELI v4.0; Type: QDOVA001BB; Serial: TP:1003

• DASY52 52.10.2(1495); SEMCAD X 14.6.12(7450)

# Dipole Calibration for Body Tissue/d=15mm, Pin=250mW/Zoom Scan (7x7x7)/Cube 0:


Measurement grid: dx=5mm, dy=5mm, dz=5mm

Reference Value = 41.97 V/m; Power Drift = -0.07 dB

Peak SAR (extrapolated) = 1.73 W/kg


SAR(1 g) = 1.13 W/kg; SAR(10 g) = 0.761 W/kg

Maximum value of SAR (measured) = 1.51 W/kg

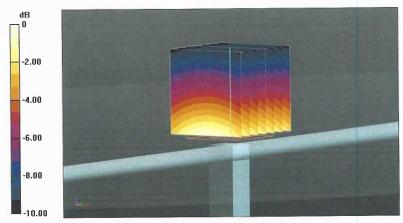

0 dB = 1.51 W/kg = 1.79 dBW/kg

# Impedance Measurement Plot for Body TSL

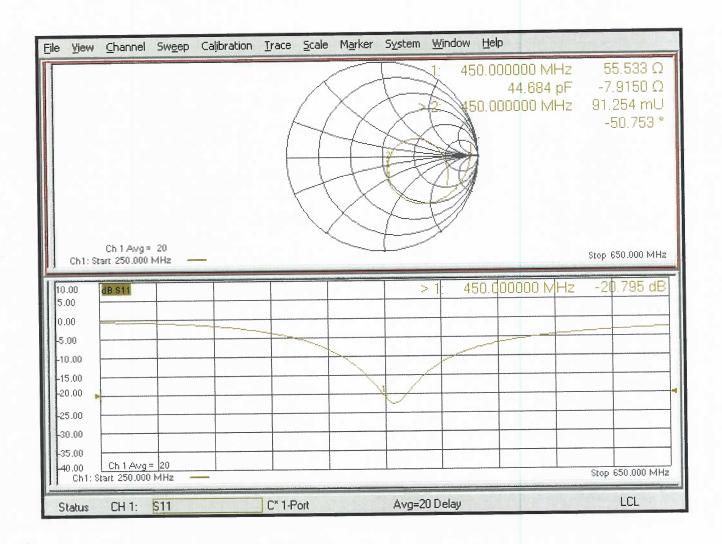



Report Number: SAR.20190805

# **Appendix F – Phantom Calibration Data Sheets**

Zeughausstrasse 43, 8004 Zurich, Switzerland Phone +41 44 245 9700, Fax +41 44 245 9779 info@speag.com, http://www.speag.com

#### Certificate of Conformity / First Article Inspection

Item	Oval Flat Phantom ELI 4.0
Type No	QD OVA 001 B
Series No	1003 and higher
Manufacturer	Untersee Composites
	Knebelstrasse 8
	CH-8268 Mannenbach, Switzerland

#### Tests

Complete tests were made on the prototype units QD OVA 001 AA 1001, QD OVA 001 AB 1002, pre-series units QD OVA 001 BA 1003-1005 as well as on the series units QD OVA 001 BB, 1006 ff.

Test	Requirement	Details	Units tested
Material thickness	Compliant with the standard requirements	Bottom plate: 2.0mm +/- 0.2mm	ali
Material parameters	Dielectric parameters for required frequencies	< 6 GHz: Rel. permittivity = 4 +/-1, Loss tangent ≤ 0.05	Material sample
Material resistivity	The material has been tested to be compatible with the liquids defined in the standards if handled and cleaned according to the instructions.	DGBE based simulating liquids. Observe Technical Note for material compatibility.	Equivalent phantoms, Material sample
Shape	Thickness of bottom material, Internal dimensions, Sagging compatible with standards from minimum frequency	Bottom elliptical 600 x 400 mm Depth 190 mm, Shape is within tolerance for filling height up to 155 mm, Eventual sagging is reduced or eliminated by support via DUT	Prototypes, Sample testing

#### Standards

- [2] IEEE 1528-2003, "Recommended Practice for Determining the Peak Spatial-Average Specific Absorption Rate (SAR) in the Human Head from Wireless Communications Devices: Measurement Techniques, December 2003
- [3] IEC 62209 1, "Specific Absorption Rate (SAR) in the frequency range of 300 MHz to 3 GHz Measurement Procedure, Part 1: Hand-held mobile wireless communication devices", February 2005
- [4] IEC 62209 2, Draft, "Human Exposure to Radio Frequency Fields from Handheld and Body-Mounted Wireless Communication Devices Human models, Instrumentation and Procedures Part 2: Procedure to determine the Specific Absorption Rate (SAR) in the head and body for 30 MHz to 6 GHz Handheld and Body-Mounted Devices used in close proximity to the Body.", February 2005
- [5] OET Bulletin 65, Supplement C, "Evaluating Compliance with FCC Guidelines for Human Exposure to Radiofrequency Electromagnetic Fields", Edition January 2001

Based on the tests above, we certify that this item is in compliance with the standards [1] to [5] if operated according to the specific requirements and considering the thickness. The dimensions are fully compliant with [4] from 30 MHz to 6 GHz. For the other standards, the minimum lower frequency limit is limited due to the dimensional requirements ([1]: 450 MHz, [2]: 300 MHz, [3]: 800 MHz, [5]: 375 MHz) and possibly further by the dimensions of the DUT.

Date

28.4.2008

Signature / Stamp

Schmid & Partner Engineering AG Zeughāugstrasse 43, 8004 Zurich, Switzerland Phone +41 44 245 9709, Fax +41,46,245 9779 info@speag.com; http://www.speag.com



Report Number: SAR.20190805

# **Appendix G – Validation Summary**

Per FCC KDB 865664 D02 v01r02, SAR system validation status should be documented to confirm measurement accuracy. The SAR systems (including SAR probes, system components and software versions) used for this device were validated against its performance specifications prior to the SAR measurements. Reference dipoles were used with the required tissue equivalent media for system validation according to the procedures outlined in FCC KDB 865664 D01 v01r04 and IEEE 1528-2013. Since SAR probe calibrations are frequency dependent, each probe calibration point was validated at a frequency within the valid frequency range of the probe calibration point using the system that normally operates with the probe for routine SAR measurements and according to the required tissue equivalent media.

A tabulated summary of the system validation status including the validation date(s), measurement frequencies, SAR probes and tissue dielectric parameters has been included.

Table G-1 SAR System Validation Summary

CAD	SAP.						CW Validation			Modulation Valildation						
SAR System #	Freq. (MHz)	Date	Probe S/N	Probe Type	Probe Cal. Point				Cond. (σ)	Perm. (ε <sub>r</sub> )	Sens- itivity	Probe Linearity	Probe Isotropy	Modulation Type	Duty Factor	PAR
2	450	08/06/2019	7531	EX3DV4	450	Head	0.88	42.86	Pass	Pass	Pass	FM	N/A	Pass		
3	450	3/28/2020	3311	ES3DV3	450	Head	0.88	42.82	Pass	Pass	Pass	FM	N/A	Pass		