
Winterm[™] Model 3125SE WBT

Quick-Start Guide



Connect –

Caution: Improper connection, mounting, or use of this product could result in component failure and/or flash memory corruption. Read the following caution statements before setting up and operating the terminal.

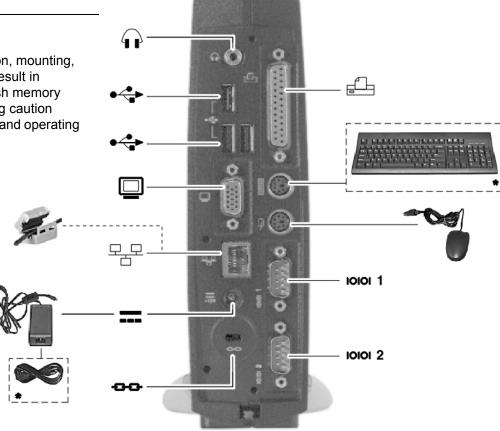

Cautions:

Setup

- Do not connect power until all other connections are made. Connecting or disconnecting components or devices on the back panel when the terminal is receiving power can cause power surges and damage the terminal. (USB ports are hot-swappable.)
- Do not force a connector into its socket. If any undue resistance is encountered, ensure that the connector is correctly oriented to the receptacle.

Orientation and Venting

- Mount the terminal only as shown above. Improper orientation (such as component side down, where the back panel's symbols are upside down) could inhibit the dissipation of heat from the terminal and damage it.
- Allow sufficient space around the terminal for ventilation; do not place the terminal in any enclosure that restricts airflow around the terminal; do not place any objects on the terminal. Product environmental specifications are available through Wyse's Web site at http://www.wyse.com/products/winterm/products.htm.

Power Sources

- To ensure regulatory compliance, use only the power supply included in the shipping box, or a Wyse-approved equivalent, with the terminal. Also, the noise suppressor (ferrite bead) included in the box with the terminal must be installed on the network cable as described in the accompanying instructions. Refer to the regulatory notices in the terminal's on-line documentation at http://www.wyse.com/products/winterm/ quickstart/3000.htm.
- To prevent accidental loss of power, brown out, and spikes which could damage the terminal, avoid connecting it to any form of switching device (including power strips) or hard resetting the terminal by holding down the power button.
- When turning off the terminal, be sure to perform a complete shutdown (via the user interface or power button); do not disconnect the power cord, shut off power at a circuit breaker, etc., to turn off the terminal.

^{*}Supplied for U.S.A.; in other locales, check package contents or contact your Wyse reseller.

Model 3125SE Back Panel Connectors

Icon	Connector	Description
	Headphones	Audio output jack for headphones or powered speakers
•	USB port (3)	USB device connection
	Video	Monitor interface
모모	Network (LAN)	Ethernet RJ45 connection, 10/100Base-T
=	Power	Power module cable interface
	Lock	Receptacle for cable lock
	Parallel Port	Local printer output
	Keyboard	PS/2-type keyboard interface
⊕~	Mouse	PS/2-type mouse interface
10101 1	Serial Port ¹	Serial device connection
10101 2	Serial Port ¹	Serial device connection

^{1.} For a listing of recommended peripherals visit http://www.wyse.com/serviceandsupport/support/winterm/peripherals/3000peripheral.htm.





Wait until the initialization sequence is completed (amber light goes off) before pressing the power button.

Important: By unpacking and using the terminal, you agree to be bound by the license agreements in the users and administrators guides. See those agreements for specific details at http://www.wyse.com/products/winterm/quickstart/3000.htm.

3 Configure – Setup is quick and simple...

The logo will appear on the screen, followed by:

- The Setup Wizard, if it is the first time that you have turned on your terminal.
- The Winterm Connection Manager dialog box, if the Setup Wizard has been completed.



Help – Need more information or upgrades/accessories? http://www.wyse.com/products/winterm/quickstart/3000.htm

Need more information on Wyse Rapport, the remote management software that comes with this terminal, or Wyse's automated warranty registration[†] process? http://www.wyse.com/bundle



Wyse Technology Inc. 3471 North First Street San Jose, CA 95134-1801 U.S.A.

[†]Register within 90 days to get 2 years' extended warranty at no cost.