

Antenna Gain Measurement Report

Report No.: AGBEBU-WTW-P22120823 Brand: Chicony Model No.: 088-02227LHC01 **Received Date: 2022/12/28 Test Date:** 2023/1/5 **Issued Date:** 2023/1/30 Applicant: Chicony Electronics Co., Ltd. Address: No.69, Sec. 2, Guangfu Rd., Sanchong Dist., New Taipei City 241, Taiwan(R.O.C.) Manufacturer: Chicony Electronics Co., Ltd. Address: No.69, Sec. 2, Guangfu Rd., Sanchong Dist., New Taipei City 241, Taiwan(R.O.C.) Issued By: Bureau Veritas Consumer Products Services (H.K.) Ltd., Taoyuan Branch Lin Kou Laboratories Lab Address: No. 47-2, 14th Ling, Chia Pau Vil., Lin Kou Dist., New Taipei City, Taiwan Test Location: No. 47-2, 14th Ling, Chia Pau Vil., Lin Kou Dist., New Taipei City, Taiwan FCC Registration / **Designation Number:** 198487 / TW2021 Leura Cherg Prepared by: 2023/1/30

Jessica Cheng / Senior Specialist	
1 _ /	

Jeremy Lin / Project Engineer

Approved by:

This report is governed by, and incorporates by reference, the Conditions of Testing as posted at the date of issuance of this report at http://www.bureauveritas.com/home/about-us/our-business/cps/about-us/terms-conditions/ and is intended for your exclusive use. Any copying or replication of this report to or for any other person or entity, or use of our name or trademark, is permitted only with our prior written permission. This report sets forth our findings solely with respect to the test samples identified herein. The results set forth in this report are not indicative or representative of the quality or characteristics of the lot from which a test sample was taken or any similar or identical product unless specifically and expressly noted. Our report includes all of the tests requested by you and the results thereof based upon the information that you provided to us. Measurement uncertainty is only provided upon request for accredited tests. Statements of conformity are based on simple acceptance criteria without taking measurement uncertainty into account, unless otherwise requested in writing. You have 60 days from date of issuance of this report to notify us of any material error or omission caused by our negligence or if you require measurement uncertainty; provided, however, that such notice shall be in writing and shall specifically address the issue you wish to raise. A failure to raise such issue within the prescribed time shall constitute your unqualified acceptance of the completeness of this report, the tests conducted and the correctness of the report contents.

Report No.: AGBEBU-WTW-P22120823 Page No. 1 / 11 Report Format Version: 6.1.2



Table of Contents

Release	e Control Record	3
1	EUT Antenna System Description	4
1.1	Antenna Information	
1.2	Antenna Location	
2	2D Antenna Pattern Measurement	5
2.1	Test Location	
2.2	Test Measurement procedure	5
2.3	Test Setup Diagram @ Fully Anechoic Chamber	5
2.4	Test Setup Diagram for EUT	6
2.5	Test Instruments	6
2.6	Measurement Uncertainty	6
2.7	Test Procedure	7
2.8	Test Result	
2.9	2D Pattern Test Plots	8
3	Appendix - Information of the Testing Laboratories	1



Release Control Record

Issue No.	Description	Date Issued
AGBEBU-WTW-P22120823	Original release.	2023/1/30



1 EUT Antenna System Description

1.1 Antenna Information

Frequency Range (GHz)	Antenna Type	Connector Type	Max Gain (dBi)
2.4~2.4835	Monopole	None	5.78

1.2 Antenna Location

Please refer to the attached file (Test Setup Photo)



2 2D Antenna Pattern Measurement

2.1 Test Location

2D antenna pattern measurement in Fully Anechoic Chamber

2.2 Test Measurement procedure

CISPR 16-1-6 ANSI 63.10-2013 clause 13 KDB 412172 D01 Determining ERP and EIRP v01r01

2.3 Test Setup Diagram @ Fully Anechoic Chamber

The 2D antenna pattern measurement is using the test system (refer to Figure 1). The EUT is positioned on center of turntable, for Free Space only in fully anechoic chamber. Data (Raw Value) is recorded using the spectrum analyzer at each position.

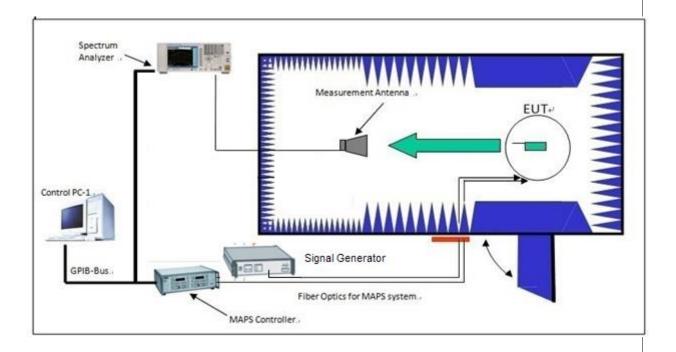


Figure 1. 2D antenna pattern test system.



2.4 **Test Setup Diagram for EUT**

The support equipment connect Gaming Keyboard (Model: AW920K) for testing. Please refer to the attached file (Test Setup Photo)

2.5 **Test Instruments**

Description Manufacturer	Model No.		Serial N	lo.	Calibrated Date	Calibrated Until
Auto Control System(Antenna Tower, Table, Controller) ADT	SC100+AT100+TT	100	N/A		N/A	N/A
Horn Antenna ETS-Lindgren	3117		000341	27	2022/11/13	2023/11/12
Signal Generator R&S	SMR40		3008A01	887	2022/2/17	2023/2/16
RF Coaxial Cable	EMC 104		Cable-RI	- -01	2022/7/7	2023/7/6
EMCI	EIVIC 104		Cable-RI	-02	2022/7/7	2023/7/6
RF Coaxial Cable HUBER SUHNER	SF-104		Cable-RI	- -03	2022/7/7	2023/7/6
Software BVADT	Antenna Pattern V6.2-210118	1	N/A		N/A	N/A
Spectrum Analyzer KEYSIGHT	N9030A		MY54490)260	2022/7/14	2023/7/13
Spectrum Analyzer R&S	FSV40		101042		2022/9/5	2023/9/4
Absorber 30 MHz ~ 40GHz	TDK / IP-045C		N/A		N/A	N/A
TYPICAL ABSORPTION CHARACTERISTICS (VERTICAL INCIDENCE) Unit: dB						
		500MHz	1GHz	5GHz	18GHz	40GHz
IP-045C 18 18	15 2	20	20	30	40	40

Note:

- 1. The test was performed in LK RF chamber.
- 2. The horn antenna used only for the measurement of emission frequency above 1 GHz if tested.

2.6 **Measurement Uncertainty**

This uncertainty represents an expanded uncertainty expressed at approximately the 95% confidence level using a coverage factor of k=2.

Frequency Range	Uncertainty (±)
1 GHz ~ 18 GHz	3.294 dB

Note: Determining compliance based on the results of the compliance measurement, not taking into account measurement instrumentation uncertainty.



2.7 Test Procedure

- a. Connect the EUT antenna connector to the signal generator.
- b. Fasten the EUT to the locator in the center of the turntable, leaving only free space.
- c. Transmit a 0 dBm power level from the signal generator to the EUT antenna connector. Please refer to Figure 2 for detailed configuration.
- d. Make sure the transmit signal is stable at the maximum RF power level.
- e. Read the power level on the spectrum analyzer and record it in the following locations.
- f. The EUT is placed on a turntable that rotates 360° in 1° steps. Measure the E and H plane patterns.
- g. The turntable should be stepped from 0° to 360° with a maximum angular resolution of 1°. The 360° measurement should be compared to the 0° value to complete the pattern.
- h. According to section 2.3 of KDB 412172 D01 Determining ERP and EIRP v01r01, the substitution horn antenna is substituted for EUT at the same position and signals generator export the CW signal to the substitution antenna via a TX cable. Rotated the Turn Table and moved receiving antenna to find the maximum radiation power. Adjust output power level of S.G to get a Value of spectrum reading equal to "Raw Value". Record the power level of S.G.

$$EIRP = P_{SigGen} + G_T - L_C$$

where:

P_{SigGen} = power setting of the signal generator that produces the same received power reading as the DUT, in dBm.

 G_T = gain of the substitute antenna, in dBd (ERP) or dBi (EIRP);

L_C = signal loss in the cable connecting the signal generator to the substitute antenna, in dB.

2.8 Test Result

Tested By	William Su

X-Y Plane

Frequency (MHz)	Max Gain (dBi)
2402	3.83
2440	5.11
2480	5.78

Y-Z Plane


Frequency (MHz)	Max Gain (dBi)	
2402	1.91	
2440	-0.04	
2480	-0.45	

Z-X Plane


Frequency (MHz)	Max Gain (dBi)
2402	4.02
2440	5.06
2480	5.10




2.9 2D Pattern Test Plots

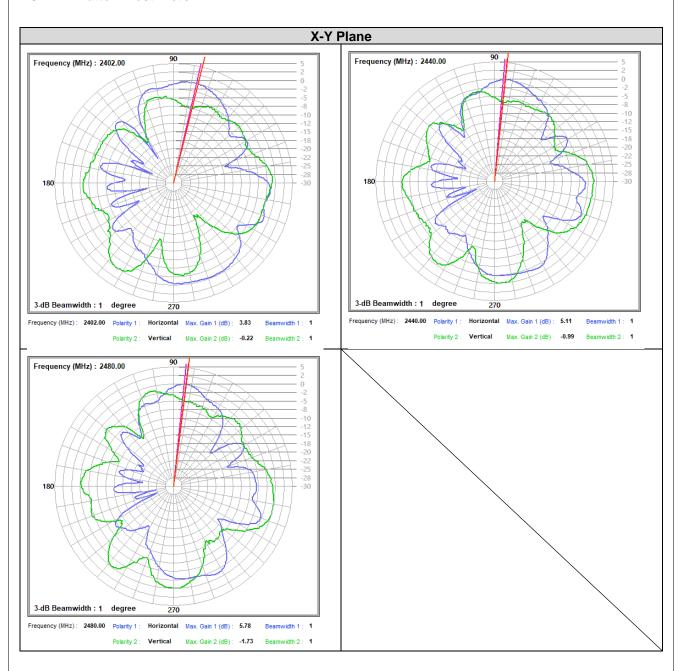



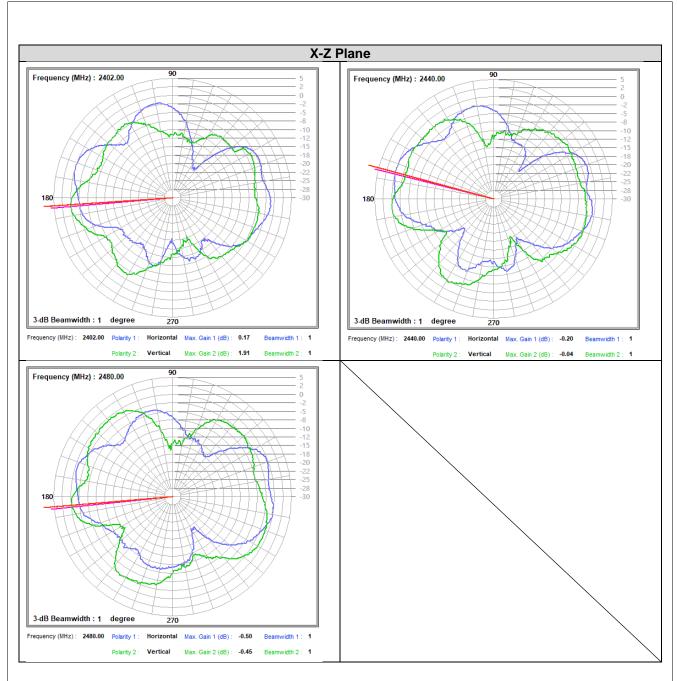



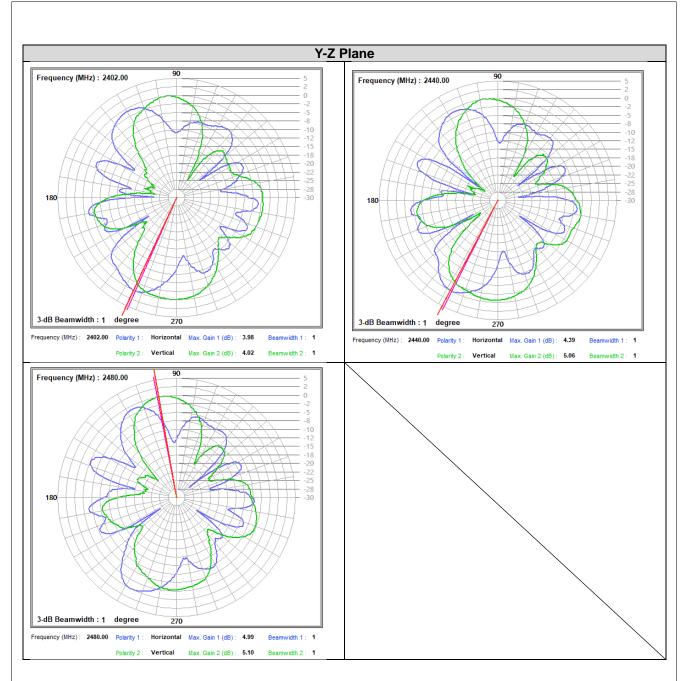



3 Appendix - Information of the Testing Laboratories

We, Bureau Veritas Consumer Products Services (H.K.) Ltd., Taoyuan Branch, were founded in 1988 to provide our best service in EMC, Radio, Telecom and Safety consultation. Our laboratories are FCC recognized accredited test firms and accredited and approved according to ISO/IEC 17025.

Hsin Chu EMC/RF/Telecom Lab

If you have any comments, please feel free to contact us at the following:

Lin Kou EMC/RF Lab

Tel: 886-2-26052180 Tel: 886-3-6668565 Fax: 886-2-26051924 Fax: 886-3-6668323

Hwa Ya EMC/RF/Safety Lab

Tel: 886-3-3183232 Fax: 886-3-3270892

Email: service.adt@tw.bureauveritas.com.
Web Site: http://ee.bureauveritas.com.tw

The address and road map of all our labs can be found in our web site also.

--- END ---