Safe & Sound

Full Color Video and Audio Monitor









Congratulations

on purchasing your new VTech product. Before using this product, please read Important safety instructions

For support, shopping, and everything new at VTech, visit our website at

Register online to get an additional 3-month warranty

Visit www.vtechphones.com.



Registration

Product name

Register your product online for enhanced warranty support.



Learn about the latest VTech products.

What's in the box









Install the battery

You can power up the parent unit by connecting it to AC power or to the rechargeable battery provided. Even if the parent unit is connected to AC power, we recommend you also install the battery. This quarantees continual operation in case of a power outage.

⊘NOTE

Use only the battery supplied with this product.

Install the battery as shown below

Control key panel

select

Press to enter the menu while idle.

item, or save a setting.

the previous menu

While in a menu, press to choose an

While in a menu, press to return to



0

Make sure the supplied rechargeable battery with the

label THIS SIDE LIP facing up

Replace the battery

ANOTES

unit to AC power

possible leakage.

To replace the battery, unplug the battery

the steps above to install the battery.

connector from the socket, and then pull the

The operating time for using the rechargeable

If the parent unit will not be used for a long time

disconnect and remove the battery to prevent

battery is short. If you want to monitor your baby for

a long time, we recommend you connect the parent

battery out of the battery compartment. Follow

Use only the parent unit power adapter or the baby unit power adapter supplied with this product.

Connect and charge the

- Make sure the electrical outlets are not controlled by wall switches
- The parent unit power adapter and baby unit power adapter are intended to be correctly oriented in a vertical or floor mount position. The prongs are not designed to hold the plug in place if it is plugged into a ceiling, under-the-table or cabinet outlet
- Make sure the parent unit, the baby unit and the power adapter cord are out of reach of children.

Connect the baby monitor



Once you have connected the parent unit and installed its battery, press to turn it on. The

- battery icon indicates the battery status (see the following table)
 - The parent unit battery is fully charged after 11 hours of continuous charging It takes longer to charge the battery when the parent unit is turned on. To shorten the charging
 - time, turn the parent unit off while charging

Charge the parent unit battery

The standby time varies depending on the sensitivity level you set, your actual use and the age of the battery. Bettem Bettem Action

indicators	status	Action
The battery icon is off.	No battery is installed. The parent unit can be used only when it is connected to AC power.	Install the parent unit battery. Charge without interruption (at least 30 minutes).
LOW BATTERY and C flash on the screen. The light flashes.	The battery has very little charge and may be used for only a short time.	Charge without interruption (about 30 minutes).
The battery icon becomes solid III .	The battery is fully charged.	To keep the battery charged, connect it to AC power when not in use.

Before use

You may test the baby monitor before initial use, and at regular times thereafter.

To test your audio monitor:

- 1. Place the parent unit and the baby units in the same room to test the product. Make sure the baby unit is at least 3 feet away from the parent unit.
- 2. Press power on to turn on the baby unit The power on lights up.



3. Press & to turn on the parent unit. The screen turns on.



⊘NOTE

If both units are not connected, the parent unit displays NOT LINKED and T flashes

This baby monitor is intended as an aid. It is not a

Positioning the baby monitor

Keen the haby unit out of the reach of the haby. Never

place or mount the baby unit inside the baby's crib or

1. Place the baby unit at least 1 meter / 3 feet

the parent unit to lower the audio feedback sound.

At least 1 meter (3 feet)

if you cannot hear the sounds transmitted from the baby

feet away from the haby unit


away from your haby

(DCALITION

playpen.

⊘NOTE

Baby unit overview substitute for proper adult supervision, and should not be

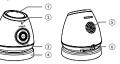

Projector When it is on, it projects some image patterns to the user environment. When it is on, it plays lullaby.

Microphone


Control key panel

Magnetic base

Speaker Power iack

The operating range of the baby monitor is up to 300 meters (1,000 feet) outdoors or 50 meters (160 feet) indoors. The actual operating range may vary depending on the environmental

Parent unit overview

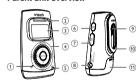

- Microphone
- Visual sound indicator 0000

The vicual cound indicator has two functions. One is to show the sound leve detected by the baby unit. The other one is to show the volume level during speaker volume setting. Sound level detected by the baby unit

One to three green

- lights indicate a moderate sound level detected by the baby unit.
- Additional red lights indicate a higher sound level detected by the baby unit (e.g. baby crying loudly).

Speaker volume level

- One to three green lights indicate Level 1 to Level 3 of the speaker volume setting.
- lights indicate Level 4 to Level 5 of the speaker volume setting
- 3 LCD panel

Press to return idle while current menu is already in root level volume + Press to increase the speaker volume. While in a menu, press to scroll up. volume -Press to decrease the speaker volume While in a menu, press to scroll down Battery level indicator Light on when the parent unit battery is being charged. Light flashes when the parent unit battery is low and needs charging. Light off when the parent unit battery is fully charged, or when no battery is installed (b(On/off) Press to power on. Press and hold to power off. Press to turn on or off the screen Press and hold to talk to the selected baby unit; release to stop talking. While in a menu, press to return idle. Power jack Speaker 10 Belt clip

Battery compartment cover

Parent unit display icons

Connection status

- Il displays when strong signal strength is detected between the baby unit and the parent unit.
- Ti displays when moderate signal strength is detected between the baby unit and the parent unit.
 - T displays when the weak link signal strength is detected between the baby unit and the parent unit.
 - T displays when the link between the baby unit and the parent unit is

Projecto Displays when the projector of the baby unit is on.

- ((4)) und alert Displays when the sound alert of the parent unit is turned on.
 - Flashes when there are sounds detected from the haby unit at which the speaker volume is turned

Vibration alert Displays when the vibration alert of the parent unit is turned on.

Displays when the volume is turned

Battery status

- the battery is charging. m displays solid when the battery
- is fully charged. m flashes when the battery fails to charge.
- displays when battery is in low level and needs charging. No battery icon displays when there is no battery installed.

Parent unit display screen messages

When the link between the

LINKED

	parent unit and the baby unit is established.
LOW BATTERY	The parent unit uses only the rechargeable battery pack and it needs to be recharged.
NOT LINKED	When the link between the parent unit and the baby unit is lost continuously for over 10 seconds.
PAGING	All idle parent units are being paged by the baby unit.
SAVED	Your selection has been saved.
SEARCHING	The parent unit is out of range of the baby unit, or the baby unit is out of power.
TALK	The parent unit is talking to the baby unit.
TALKBACK	The other parent unit is talking to the baby unit.

Using the baby monitor

Power on or off the baby unit Press power on to turn on the baby unit. The power on lights up.

Press and hold power on again to power off the baby unit. The power on turns off.

Power on or off the parent unit

- Press & to power on the parent unit. The screen turns on.
- Press and hold Φ again to power off the parent unit. The screen turns off.

Adjust the speaker volume for baby unit · Press volume + or volume - on the baby

unit at any time. Adjust the speaker volume for parent unit

You can adjust the speaker volume from VOLUME 1 to VOLUME 5, or turn it off. The speaker volume is preset to VOLUME 3.

· Press volume + or volume - on the parent unit while viewing image from baby unit. When the speaker volume is set to off, the screen displays Q

Adjust the sound sensitivity of the baby unit

You can use the parent unit to change the sound sensitivity level of the baby unit from LEVEL 1 to LEVEL 5. The higher the sound sensitivity level is set, the more sensitive the baby unit is in detecting sounds for transmitting to the parent units. The sensitivity level is preset to LEVEL 5. If you want the baby unit to be very sensitive in detecting sounds, you may set the sensitivity level to the highest level (LEVEL 5), so that the baby unit will always detect any sounds including background noises for transmitting to the parent units. If you want the baby unit to be less sensitive in detecting sounds, you may set the sensitivity level to a lower level (LEVEL 1 to LEVEL 4), so that the baby unit will transmit sounds to the parent units only when your baby is very noisy or crying loudly.

- 1. Press menu when the parent unit is not in
- Press select.
- 3. Press volume + or volume to choose the sensitivity level

Press select to confirm your selection

To enter the sensitivity menu of the parent unit, the Sound alert

You may turn on the sound alert while the speaker volume is turned off so that the parent unit beeps as soon as the baby unit detects sounds which light up four sound level indicators on the parent

When the sound alert of the parent unit is turned on. (e) displays. The sound alert is preset to OFF.

- 1. Press menu when the parent unit is not in
- Press volume + or volume to choose SOUND ALERT, then press select.
- Press volume + or volume to choose ON or OFF. Press select to confirm your selection. The screen displays SAVED and you hear a

⊘NOTE

The sound alert setting on each parent unit is

Vibration alert

confirmation tone

You may turn on the vibration alert so that the parent unit vibrates as soon as the baby unit detects sounds which light up four sound level indicators on the parent unit.

When the vibration alert of the parent unit is turned on, a displays. The vibration alert is preset to

- 1. Press menu when the parent unit is not in 2. Press volume + or volume - to choose
- VIBE ALERT, then press select. 3. Press volume + or volume - to choose ON
- 4. Press select to confirm your selection. The screen displays SAVED and you hear a confirmation tone

♠ NOTES

- Each time you set the vibration alert to ON, the parent unit vibrates briefly after you press select
- The vibration alert setting on each parent unit is

Projector You can turn on the projector on the baby unit to

Operating range

play lullaby, and form some interesting and colour images at the same time. When the projector is turned on, # displays. The

conditions, and other interferences such as

walls, doors, and other obstructions

default setting is preset to NO. Press of to play lullaby. The interesting and

- colour images appear at the same time. Press 🏵 again to stop playing the lullaby.
- Press 🏵 for a third time to turn off the projector. The interesting and colour images disappears.

If the baby unit receives talkback from the parent unit during lullaby playback, the lullaby playback will be paused, and resumes after the talkback

Language

You can select a language (English, French or Spanish) to be used in all screen displays. The language is preset to **English**.

- 1. Press menu when the parent unit is not in Press volume + or volume - to choose Language (LANGUE if French is set, or IDIOMA if Spanish is set), then press
- Press volume + or volume to choose ENGLISH. FRANCAIS or ESPANOL. 4. Press select to confirm your selection. The screen display SAVED and you hear a

⊘NOTE

The language setting on each parent unit is independent.

Set default

Use this feature to restore to the default settings Restoring the default settings on one parent unit will also reset the shared settings for sensitivity of the other parent unit.

- 1. Press menu when the parent unit is not in
- Press volume + or volume to choose SET DEFAULT, then press select.
- Press volume + or volume to choose YES or NO When you choose YES, press select to confirm your selection. You hear a confirmation and then the screen displays LINKED.

-OR

your selection. The screen displays the previous When you reset the default settings, any units that are turned off or out of range will not be reset.

When you choose NO press select to confirm

Talk to the baby unit

You can broadcast messages from a parent unit to the baby unit and the other parent unit. If you have two parent units, you can use both of them at the same time to talk to the baby unit.

Press and hold talk on the side of the parent unit. The screen displays TALK when the voice connection to the baby unit is made Speak towards the mic on the parent unit. Your voice is broadcast to the baby unit and the other parent unit.

ANOTE

When a parent unit is talking to the baby unit, it is also broadcast to the other parent unit. However, any sounds from the baby unit cannot be transmitted to the parent units at the same time

Find/page the parent unit


Use this feature to find misplaced parent units.

Press page on the baby unit. All idle parent units ring and display PAGING. To end paging, press any key on the parent unit, or press PAGE on the baby unit.

NOTES

Paging rings all parent units even if the speaker volume of parent unit is set to **VOLUME OFF**.

The baby unit cannot page any parent unit that is turned off, out of range or talking to the baby unit

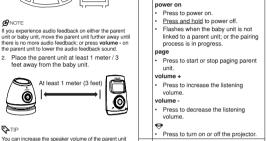

Overview

General product care

To keep this product working well and looking good, follow these guidelines:

- Avoid putting it near heating appliances and devices that generate electrical noise (for example, motors or fluorescent lamps).
- DO NOT expose it to direct sunlight or moisture. Avoid dropping the product or treating it roughly.
- Clean with a soft cloth.
- DO NOT immerse the parent unit and the baby unit in water and do not clean them under the tap.
- DO NOT use cleaning spray or liquid cleaners. Make sure the baby unit and parent unit are dry
- before you connect them to the mains again.

When you are not going to use the baby monitor for some time, remove the rechargeable battery from the parent unit. Store the parent unit, the baby unit and the adapters in a cool and dry place.

Frequently asked questions

Below are the questions most frequently asked about the baby monitor. If you cannot find the answer to your question visit our website at www.vtechnhones.com or call 1 (800

Why does t

baby monito

not respond

Why doesn

the screen

the parent i

go on when switch on th

Why doesn

power on li

go on wher

Why does t

high-pitched

too quickly to

switch on th

) 595-9511 for customer service.			
he or d	Try the following (in the order listed) for common cure: 1. Disconnect the power to the baby unit and the parent units. Per listed in the parent units. Per listed in the parent units. Then, install the batteries again gover back to the connecting power back to the connecting power back to the connecting power back to the parent units. 1. Wat a few minutes before parent units. 5. Wat for the parent units to synchronize with the baby unit. Allow up to one minute for this to take place.		
't of unit i I	Perhaps the rechargeable battery of the parent unit is empty and the parent unit is not connected to the mains. Insert the appliance plug into the parent unit and put the adapter in a wall socket. Then, press & to switch on the parent unit and to establish connection with the baby unit.		
't the ight unit i I	Perhaps the baby unit is not connected to the mains. Connect the baby unit to the mains. Then, press power on to turn on the baby unit and to establish connection with the parent unit.		
he or d	The units may be too close to each other. Make sure the parent unit and the baby unit at least 1 meter/3 feet away from each other.		

Why don't I my haby cry?

Why does the

Why can't I

establish a

connection?

every now and

then? Why are there sound

interruptions?

been?

The volume of the parent unit nav have set too low. Press olume + to increase the volume level

Vou may have eet a low cound ensitivity level. See Adjust the sound sensitivity of the baby unit to change the setting.

The baby units may be out of range. Move the parent unit

closer to the baby units (but not ess than 3 feet).

If the parent unit is powered by the provided battery it may not have enough charge for the parent unit to perform normally. Charge the battery in the paren init for up to 11 hours.

The baby units may be out of range. Move the parent unit closer to the baby units (but not connection los

nool or in a wet basement or shower 6. CAUTION: Use only the batteries indicated in this manual. There may be a risk of explosion Other electronic products may cause interference with your habi if a wrong type of battery is used for the parent nonitor. Try installing your baby nonitor as far away from these unit. Use only the supplied rechargeable battery or replacement battery pack (BT166342/ electronic devices as possible. BT266342) for the parent unit. Do not dispose of batteries in a fire. They may explode. Dispose of used battery according to the

information in The RBRC® seal. 7. Use only the adapters included with this product, Incorrect adapter polarity or voltage can seriously damage the product. Baby unit power adapter: Input 100-120V AC 150mA 60Hz: Output: 6V DC 600mA: Parent unit power adapter: Input 100-120V AC 150mA 60Hz: Output: 6V DC 400mA.

mportant safety

including the following:

on the product.

medical monitor.

2. Adult setup is required.

When using your equipment, basic safety

reduce the risk of fire, electric shock and injury,

1. Follow all warnings and instructions marked

3. This product is intended as an aid. It is not

4. This product is not intended for use as a

5. Do not use this product near water. For

a substitute for responsible and proper adult

supervision and should not be used as such

example, do not use it next to a bath tub, wash.

bowl, kitchen sink, laundry tub or swimming

precautions should always be followed to

8. The power adapters are intended to be correctly oriented in a vertical or floor mount position. The prongs are not designed to hold the plug in place if it is plugged into a ceiling. under-the-table or cabinet outlet.

9. For pluggable equipment, the socket-outlet shall be installed near the equipment and shall be easily accessible. 10.Unplug this product from the wall outlet

before cleaning. Do not use liquid or aerosol cleaners. Use a damp cloth for cleaning. 11.Unplug the power cords before replacing

12.Do not cut off the power adapters to replace them with other plugs, as this causes a

hazardous situation 13.Do not allow anything to rest on the power cords. Do not install this product where the cords may be walked on or crimped.

14 This product should be operated only from the type of power source indicated on the marking label. If you are not sure of the type of power supply in your home, consult your

dealer or local power company 15 Do not overload wall outlets or use an

16.Do not place this product on an unstable table, shelf, stand or other unstable surfaces. 17. This product should not be placed in any area where proper ventilation is not provided. Slots and openings in the back or bottom of this product are provided for ventilation.

To protect them from overheating, these openings must not be blocked by placing the product on a soft surface such as a bed, sofa or rug. This product should never be placed near or over a radiator or heat register

18. Never push objects of any kind into this product through the slots because they may touch dangerous voltage points or create a short circuit. Never spill liquid of any kind on the product.

19.To reduce the risk of electric shock, do not disassamble this product, but take it to an authorized service facility. Opening or removing parts of the product other than specified access doors may expose you to dangerous voltages or other risks. Incorrect reassembling can cause electric shock when the product is subsequently used.

20 You should test the sound recention every time you turn on the units or move one of the components.

21.Periodically examine all components for damage. 22.Be aware of possible loss of privacy while

using public airwayes. Conversations may be picked up by other nursery monitors, cordless phones scanners etc.

23.Children should be supervised to ensure that they do not play with the product.

24. The product is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge. unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.

SAVE THESE INSTRUCTIONS

Cautions

- Use and store the product at a temperature between 32°F and 104°F 2. Do not expose the product to extreme cold.
- neat or direct sunlight. Do not put the product close to a heating source. Batteries should not be exposed to excessive

heat such as bright sunshine or fire.

4. Make sure the baby unit(s) and the adapter cord(s) are always out of reach of the baby. at least 3 feet away from the baby or crib, to

avoid a possible strangulation hazard Never place the baby unit(s) inside the baby's crib or playpen. Never cover the baby unit(s) or parent unit with anything such as a towel or a blanket. 6. Other electronic products may cause

interference with your baby monitor. Try installing your baby monitor as far away from these electronic devices as possible ireless routers, radios, cellular telephones, intercoms, room monitors, televisions personal computers, kitchen appliances and cordless telephones

Precautions for users of implanted cardiac nacomakore

Cardiac pacemakers (applies only to digital Wireless Technology Research, LLC (WTR), an independent research entity, led a multidisciplinary evaluation of the interference between portable wireless devices and implanted cardiac pacemakers. Supported by he U.S. Food and Drug Administration, WTR recommends to physicians that:

Pacemaker patients

- Should keep wireless devices at least six inches from the pacemaker.
- Should NOT place wireless devices directly over the pacemaker, such as in a breast pocket, when it is turned ON.

WTR's evaluation did not identify any risk to bystanders with pacemakers from other persons using wireless devices.

Electromagnetic fields (EMF)

This VTech product complies with all standards regarding electromagnetic fields (EMF). If handled properly and according to the instructions in this user's manual, the product is safe to be used based on scientific evidence available today.

The RBRC® seal

The RBRC® seal on the nickel-metal battery indicates that VTech Communications, Inc. is voluntarily participating in an industry program to collect and recycle these hatteries at the end of their useful lives when taken out of service within the United States and Canada

The RBRC® program provides a convenient alternative to placing used nickel-metal batteries into the trash or municipal waste, which may be illegal in your area. VTech's participation in RRRC® makes it easy for you to drop off the spent battery at local retailers participating

in the RBRC[®] program or at authorized VTech product service centers. Please call 1 (800) 8 BATTERY[®] for information on Ni-MH battery recycling and disposal bans/restrictions in your area. VTech's involvement in this program is part of its commitment to protecting our environment and conserving natural resources

BBRC® and 1 (800) 8 BATTERY® are registered trademarks of Rechargeable Battery Recycling



FCC and IC regulations

FCC Part 15

This equipment has been tested and found to comply with the requirements for a Class B digital device unde Part 15 of the Federal Communications Commission (ECC) rules. These requirements are intended. to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency rgy and, if not installed and used in accorda with the instructions, may cause harmful interference to radio communications. However there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures: Reorient or relocate the receiving antenna.

- Increase the separation between the equipment
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- · Consult the dealer or an experienced radio/TV

Changes or modifications to this equipment not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This device complies with Part 15 of the FCC rules Operation is subject to the following two conditions: (1) s device may not cause harmful interference, and (2) this device must accept any interference received. including interference that may cause undesired

operation. To ensure safety of users, the FCC has established criteria for the amount of radio frequency energy that can be safely absorbed by a user or bystande according to the intended usage of the product. This product has been tested and found to comply with the FCC criteria. The baby unit shall be installed and used such that parts of all persons' body are maintained at a distance of approximately 8 in (20 cm) or more.

The transmitter and antenna of the parent unit shall be held at least 1 in (2.5 cm) from your face. This Class B digital apparatus complies with Canadian

CAN ICES-3 (B)/NMB-3(B)

Industry Canada

This device complies with Industry Canada licence-exempt RSS standard(s).

Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference, including interference that may cause undesired operation The term "IC:" before the certification/registration number only signifies that the Industry Canada echnical specifications were met This product meets the applicable Industry Canada echnical specifications.

RF radiation exposure statement

The baby unit complies with ECC BF radiation exposure limits set forth for an uncontrolled environment. The baby unit should be installed and operated with a minimum distance of 8 in (20 cm) between the baby unit and all persons' body. Use o other accessories may not ensure compliance with FCC RF exposure guidelines. This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter. This equipment complier also with Industry Canada RSS-102 with respect to Canada's Health Code 6 for Exposure of Humans to

California Energy Commission attery charging testing mod

This baby monitor meets the California Energy Commission (CEC) regulations for energy consumption Your baby monitor is set up to comply with the energy-conserving standards right out of the box. Follow the instructions to install and charge the battery. The CEC battery charging testing mode is

Even if the parent unit is paired to baby units, the CEC battery charging testing mode is activated while it is red off and charging.

For cETL compliance only

Mesures de sécurité importantes

activated while charging.

Lorsque vous utilisez votre appareil, vous devriez toujours suivre certaines mesures de précaution de base afin de réduire les risques d'incendie, d'électrocution et de blessures corporelles, dont ceux

- 1. Observez toutes les instructions et mises en garde inscrites sur l'appareil
- 2. L'installation par un adulte est requise.
- 3. Ce produit a été concu pour être un dispositif d'appoint seulement. Il n'est pas le remplacement d'une supervision responsable et adéquate par un adulte et ne devrait pas être utilisé comme telle
- 4. Ce produit n'est pas conçu pour être utilisé en tant que moniteur médical.
- 5. N'utilisez pas cet appareil près de l'eau ni de toute autre source d'humidité, par exemple, près d'une baignoire, cuve à lessive, évier de cuisine, dans un sous-sol humide ni près d'une piscine, dans un soussol humide ou une douche.
- 6. MISE EN GARDE: Il peut y avoir un risque d'explosion si vous utilisez le mauvais type de piles pour l'unité du parent. N'utilisez que le bloc-piles rechargeable inclus ou le bloc-piles de rechange (BT166342/BT266342). N'incinérez pas les piles. Celles-ci risqueraient d'exploser. Jetez es piles usées selon les renseignements suivant le sceau du RBRCMD
- 7. N'utilisez que les adaptateurs inclus avec ce produit. L'utilisation d'un adaptateur dont la polarité ou la tension serait inadéquate risque d'endommager sérieusement le produit et mettre votre sécurité en péril. Adaptateur de l'unité du bébé: Entrée 100-120V CA 150 mA 60 Hz; Sortie : 6 V CC 600 mA Adaptateur de l'unité du parent: Entrée 100-120V CA 150 mA 60 Hz; Sortie : 6 V CC 400 mA.

Lorsqu'ils sont branchés dans une prise de courant, les adaptateurs secteur ont été conçus pour être orientés correctement, soit à la verticale ou au plancher. Les broches n'ont pas été conçues pour supporter le poids du bloc d'alimentation et le maintenir en place si celuici est branché dans une prise au plafond, sous une table ou dans ur meuble.

Why does the parent unit react sounds than those of your baby.

Adjust the sensitivity level to a

lower level or adjust the speaker

- Pour les PRODUITS À BRANCHER À UNE PRISE DE COURANT, la prise de courant doit être installée près du produit, afin d'assurer une accessibilité sécuritaire à la prise de courant 10 Débranchez ce produit de la prise de courant
- avant de procéder au nettoyage. N'utilisez pas de nettovants en aérosols. Utilisez un chiffon humide pour le nettoyer.
- 11. Débranchez les cordons d'alimentation avant de remplacer le bloc-piles.
- 12. Ne coupez pas les cordons d'alimentation pour remplacer les fiches, car ceci peut présenter un danger potentiel.
- Ne laissez aucun objet reposer ni appuyer sur le cordon d'alimentation. N'installez pas cet apparei dans un endroit où l'on risque d'écraser le cordon d'alimentation ou de le piétiner.
- 14. Ne faites fonctionner cet appareil qu'avec le type d'alimentation indiqué sur l'étiquette. Si vous ne connaissez pas le type d'alimentation que vous possédez à votre domicile, consultez votre marchand ou votre compagnie locale d'électricité 15. Ne surchargez pas les prises de courant murales ni les rallonges électriques.
- 16. Ne placez pas cet appareil sur un chariot, meuble épied, support de montage ni table cha
- 17. Les trous et ouvertures du boîtier, situés à l'arrière de l'appareil ou sous celui-ci, servent à aérer l'appareil. Pour l'empêcher de surchauffer, ne bloquez sous aucun prétexte ces ouvertures et n'empêchez pas l'aération adéquate de l'apparei en le plaçant sur un lit, divan, tapis ou toute autre surface similaire. De même, ne le positionnez pas à proximité ni au-dessus d'une source de chaleu ou d'un calorifère. De plus, ne placez pas l'appareil dans un endroit avant de vous assurer qu'il y ait une bonne circulation d'air.
- 18. N'enfoncez jamais d'objets à travers les ouvertures de cet appareil, car ils pourraient entrer en contact avec des points de tension dangereux ou causer des courts-circuits qui peuvent dégénérer en incendies ou en risques d'électrocution. Ne renversez iamais de liquide dans ce produit.
- 19. Afin de réduire les risques d'électrocution, ne démontez pas cet appareil, mais apportez-le dans un centre de service autorisé. L'ouverture du boîtier ou le retrait de toutes pièces que contient

- cet appareil, à l'exception de l'accès autorisé à certaines portes ou ouvertures, risque de vous exposer à des points de tension dangereux ou d'autres dangers. Un remontage incorrect peut par la suite présenter des risques d'électrocution. 20. Vous devriez tester la réception chaque fois que
- vous mettez l'appareil en fonction. 21. Examinez les composantes afin de vérifier si celles-ci ne sont pas endommagées.
- 22. Sovez avisé de la perte de la confidentialité lorsque vous utilisez les ondes publiques. Les conversations peuvent être entendues par d'autres monitours de héhé des télénhones sans fil des scanneurs, etc.
- 23.Les enfants devraient être supervisés afin de vous assurer qu'ils ne jouent pas avec l'appareil.
- 24. Le produit n'est pas concu pour être utilisé par des personnes (incluant des enfants) aux capacités physiques, sensorielles ou mentales réduites ou manquent d'expérience et de connaissances, à moins qu'on leur ait donné suffisamment de supervision ou d'instructions relativement à l'utilisation de l'appareil par une personne responsable de leur sécurité

CONSERVEZ CES INSTRUCTIONS

Mises en garde

 Utilisez et entreposez le produit à une température entre 0° C (32°F) et 40°C (104° F).

- 2. N'exposez pas cet appareil à des froids ou des chaleurs extrêmes, ainsi qu'à la lumière directe du soleil. Ne l'installez pas près d'une source de chauffage
- 3. Le bloc-niles ne doit nas être evnosé à la chaleur excessive telle que la lumière du soleil ou au feu.
- 4. Assurez-vous que le moniteur et le cordon de l'adaptateur sont toujours hors de portée des enfants, à au moins 1 mètre (3 pieds) de l'enfant ou du berceau, pour éviter tout risque de strangulation. Ne jamais placer le moniteur à l'intérieur du

berceau ou du parc de bébé. Ne iamais couvrir le

moniteur ou l'unité (s) portative avec un article tel

une serviette ou une couverture. D'autres équipements électroniques peuven produire des interférences sur votre moniteur vidéo et audio. Tentez d'installer votre moniteur vidéo ou audio à l'écart des appareils électroniques tels que des routeurs sans fil, radios, téléphones cellulaires, interphones, moniteurs, téléphones, ordinateurs personnels, électroménagers et téléphones sans fil.

Stimulateurs cardiaques implantés dans

Les simulateurs cardiaques (ne s'applique qu'aux dispositifs numériques sans fil): L'organisme 'Wireless Technology Research, LLC (WTR)', une firme de recherche indépendante, a mené une évaluation pluridisciplinaire des interférences entre les téléphones sans fil portatifs et les stimulateurs cardiaques implantés dans l'organisme Annuvée par l'Administration des iments et drogues (FDA) des États-Unis, la firme WTR recommande aux médecins:

Avis aux détenteurs de stimulateurs cardiaques

- Vous devriez maintenir les dispositifs sans fil à au moins six pouces du simulateur cardiaque
- Ils ne doivent PAS placer le téléphone sans fil directement sur le stimulateur cardiaque, tel que dans une poche de chemise, lorsque celui-ci es

L'étude effectuée par l'organisme WBS n'a pas identifié de risque pour les détenteurs de simulateurs cardiaques causés par les gens qui utilisent dispositifs sans fil à proximité de ceux-ci.

Champs électromagnétiques (FMF)

Ce produit de VTech est conforme à toutes les normes se rapportant aux champs électromagnétiques (EMF) standard. Si vous le manipulez correctement en suivant les instructions de ce guide, son utilisation sera sécuritaire pendant de nombreuses années, selon les meilleures évidences scientifiques dont nous disposons aujourd'hui.

Limited warranty

What does this limited warranty cover?

The manufacturer of this VTech Product warrants to the holder of a valid proof of purchase ("Consumer" or "you") that the Product and all accessories provided in the sales package ("Product") are free from defects in material and workmanship, pursuant to the following terms and conditions, when installed and used normally and in accordance with the Product operating instructions. This limited warranty extends only to the Consumer for Products purchased and used in the United States of America and Canada.

What will VTech do if the Product is not free from defects in materials and workmanship during the limited warranty period ("Materially Defective

Product")? During the limited warranty period, VTech's authorized service representative will repair or replace at VTech's option, without charge, a Materially Defective Product. If we repair the Product, we may use new or refurbished replacement parts. If we choose to replace the Product, we may replace it with a new or refurbished Product of the same or similar design We will retain defective parts, modules, or equipment. Renair or replacement of the Product, at VTech's option, is your exclusive remedy. VTech will return the repaired or replacement Products to you in working condition. You should expect the repair or replacement

How long is the limited warranty period?

to take approximately 30 days.

The limited warranty period for the Product extends for ONE (1) YEAR from the date of purchase. If VTech repairs or replaces a Materially Defective Product under the terms of this limited warranty, this limited warranty also applies to the repaired or replacement Product for a period of either (a) 90 days from the date the repaired or replacement Product is shipped to you or (b) the time remaining on the original one-year warranty; whichever

What is not covered by this limited warranty?

- This limited warranty does not cover:

 1. Product that has been subjected to misuse, accident, shipping or other physical damage, improper installation, abnormal operation of handling, neglect, inundation, fire, water or other liquid intrusion; or

 2. Product that has been damaged due to repair,
- alteration or modification by anyone other than an authorized service representative of VTech; or Product to the extent that the problem experienced is caused by signal conditions, network reliability, or cable or antenna systems; or

 4. Product to the extent that the problem is caused by
- use with non-VTech accessories: or Product whose warranty/quality stickers, product

serial number plates or electronic serial numbers have been removed, altered or rendered illegible; or Product purchased, used, serviced, or shipped for

renair from outside the United States of America or Canada, or used for commercial or institutional purposes (including but not limited to Products used for rental purposes); or Product returned without a valid proof of purchase (see item 2 on the next page); or 8. Charges for installation or set up, adjustment of

systems outside the unit. How do you get warranty service?

To obtain warranty service in the USA, please visit our website at www.vtechphones.com or call 1 (800) 595-9511. In Canada no to

customer controls, and installation or repair of

www.vtechcanada.com or call 1 (800) 267-7377. NOTE: Before calling for service, please review the user's manual - a check of the Product's controls and features may save you a service call.

Except as provided by applicable law, you assume the risk of loss or damage during transit and transportation and are responsible for delivery or handling charges incurred in the transport of the Product(s) to the service location. VTech will return repaired or replaced Product under this limited warranty. Transportation, delivery or handling charges are prepaid. VTech assumes no risk for damage or loss of the Product in transit. If the Product failure is not covered by this limited warranty, or proof of purchase does not meet the terms of this limited warranty, VTech will notify you and will request that you authorize the cost of repa prior to any further repair activity. You must pay for the cost of repair and return shipping costs for the warranty

What must you return with the Product to get warranty service?

- 1. Return the entire original package and contents including the Product to the VTech service location along with a description of the malfunction or difficulty; and
- Include a "valid proof of purchase" (sales receipt) identifying the Product purchased (Product model)
 and the date of purchase or receipt; and Provide your name, complete and correct mailing address, and telephone number.

Other limitations

This warranty is the complete and exclusive agreement between you and VTech. It supersedes all other written or oral communications related to this Product. VTech provides no other warranties for this Product The warranty exclusively describes all of VTech's responsibilities regarding the Product. There are no other express warranties. No one is authorized to make modifications to this limited warranty and you should not rely on any such modification State/Provincial Law Rights: This warranty gives you

cific legal rights, and you may also have other rights, which vary from state to state or province to province. Limitations: Implied warranties, including those of fitness for a particular purpose and merchantability (an unwritten warranty that the Product is fit for ordinary use) are limited to one year from the date of purchase Some states/provinces do not allow limitations on how long an implied warranty lasts, so the above tion may not apply to you. In no event shall VTech be liable for any indirect, special, incidental, consequential, or similar damages (including, but not limited to lost profits or revenue, inability to use the Product or other associated equipment, the cost of substitute equipment, and claims by third parties) resulting from the use of this Product. Some states provinces do not allow the exclusion or limitation of

incidental or consequential damages, so the above limitation or exclusion may not apply to you Please retain your original sales receipt as proof

Technical specifications

Frequency Crystal controlled PLL synthesizer control Baby unit: 1921.536-1928.448 MHz frequency Parent unit: 1921.536-1928.448 MHz LCD 35 (x) x 21.2 (y) mm B&W LCD Nomina Maximum power allowed by FCC and IC. Actual operating range may vary according to environmental offective range conditions at the time of use. Parent unit: 2.4 V Ni-MH battery Baby unit power adapter Input: 100-120V AC 150mA 60Hz Output: 6V DC 600mA

Parent unit power adapter

Output: 6V DC 400mA

Input: 100-120V AC 150mA 60Hz



© 2015 VTech Communications, Inc. All rights reserved, 03/15, DM222 CIB V1.0 ent order number: 91-008461-010-100