



SAR Evaluation Report

in accordance with the requirements of FCC Report and Order: ET Docket 93-62, and OET Bulletin 65 Supplement C

for

SMART DISPLAY

Model: VSMW24668-1W

FCC ID: GSS-M3AWEB56GA

November 21, 2003

REPORT NO: B31105205

Prepared for

ViewSonic Corp. 381 Brea Canyon Road, Walunt, CA 91789, USA

Prepared by

Compliance Certification Services Inc. No. 81-1, Lane 210, Bade Rd. 2, Luchu Hsiang, Taoyuan Hsien, (338) Taiwan, R.O.C.

TEL: 886-3-324-0332 FAX: 886-3-324-5235



CERTIFICATE OF COMPLIANCE (SAR EVALUATION)

Dates of Tests: November 20, 2003

ViewSonic Corp.

APPLICANT: 381 Brea Canyon Road, Walunt,

CA 91789, USA

BRAND/MODEL: ViewSonic / VSMW24668-1W

FCC ID: GSS-M3AWEB56GA **DEVICE CATEGORY:** PORTABLE DEVICES

EXPOSURE CATEGORY: GENERAL POPULATION/UNCONTROLLED EXPOSURE

Test Sample is a: Production unit

Modulation type: 802.11b

Direct Sequence Spread Spectrum

Tx Frequency: 2412 ~ 2462 MHz

Max. O/P Power: 16.20 dBm

(Conducted/Peak)

Max. SAR (1g): 0.083 mW/g
Application Type: Certification

FCC Rule Part(s): 15C

Note: This Report is only applicable for 802.11b.

This wireless portable device has been shown to be capable of compliance for localized specific absorption rate (SAR) for uncontrolled environment/general population exposure limits specified in ANSI/IEEE Std. C95.1-1992 and had been tested in accordance with the measurement procedures specified in FCC OET 65 Supplement C (released on 6/29/2001 see Test Report).

I attest to the accuracy of data. All measurements reported herein were performed by me or were made under my supervision and are correct to the best of my knowledge and belief. I assume full responsibility for the completeness of these measurements and vouch for the qualifications of all persons taking them.

Approved by:

Reviewed by:

Jonson Lee / Director

Compliance Certification Services Inc.

Miro Chueh / Section Manager Compliance Certification Services Inc.

Min Chel

TABLE OF CONTENTS

1.	\mathbf{EU}	T DESCRIPTION	4
2.	REQ	QUIREMENTS FOR COMPLIANCE TESTING DEFINED BY THE FCC	5
3.	Dos	IMETRIC ASSESSMENT SYSTEM	5
	3.1.	MEASUREMENT SYSTEM DIAGRAM	6
	3.2.	SYSTEM COMPONENTSDASY4 MEASUREMENT SERVER	
		DATA ACQUISITION ELECTRONICS (DAE)	
		SAM PHANTOM (V4.0)	
		SYSTEM VALIDATION KITS	
4.	EVA	LUATION PROCEDURES	9
5.	MEA	ASUREMENT UNCERTAINTY	12
6.	EXP	OSURE LIMIT	13
7.	MEA	ASUREMENT RESULTS	14
	7.1.	SYSTEM PERFORMANCE CHECK	14
	7.2.	TEST LIQUID CONFIRMATION	15
	7.3.	EUT TUNE-UP PROCEDURES	16
	7.4.	SAR MEASUREMENTS RESULTS	17
8.	EUT	ГРнотоя	19
9.	Equ	IIPMENT LIST & CALIBRATION STATUS	21
10.	REF	ERENCES	22
11.	Атт	ACHMENTS	23

Report No: B31105205-SAR-FCC

1. EUT DESCRIPTION

ViewSonic Corp.

APPLICANT: 381 Brea Canyon Road, Walunt,

CA 91789, USA

BRAND/MODEL: ViewSonic / VSMW24668-1W

FCC ID: GSS-M3AWEB56GA **DEVICE CATEGORY:** PORTABLE DEVICES

EXPOSURE CATEGORY: GENERAL POPULATION/UNCONTROLLED EXPOSURE

Test Sample is a: Production unit

Modulation type: 802.11b

Direct Sequence Spread Spectrum

Tx Frequency: 2412 ~ 2462 MHz

Max. O/P Power:

16.20 dBm

(Conducted/Peak)

Max. SAR (1g): 0.083 mW/g
Application Type: Certification

FCC Rule Part(s): 15C

Antennas: Main: PCB antenna.

Aux: PCB antenna.



Date of Issue: November 21, 2003

2. REQUIREMENTS FOR COMPLIANCE TESTING DEFINED BY THE FCC


The US Federal Communications Commission has released the report and order "Guidelines for Evaluating the Environmental Effects of RF Radiation", ET Docket No. 93-62 in August 1996 [1]. The order requires routine SAR evaluation prior to equipment authorization of portable transmitter devices, including portable telephones. For consumer products, the applicable limit is 1.6 mW/g for an uncontrolled environment and 8.0 mW/g for an occupational/controlled environment as recommended by the ANSI/IEEE standard C95.1-1992 [6]. According to the Supplement C of OET Bulletin 65 "Evaluating Compliance with FCC Guide-lines for Human Exposure to Radio frequency Electromagnetic Fields", released on Jun 29, 2001 by the FCC, the device should be evaluated at maximum output power (radiated from the antenna) under "worst-case" conditions for normal or intended use, incorporating normal antenna operating positions, device peak performance frequencies and positions for maximum RF energy coupling.

3. DOSIMETRIC ASSESSMENT SYSTEM

These measurements were performed with the automated near-field scanning system DASY4 from Schmid & Partner Engineering AG (SPEAG). The system is based on a high precision robot (working range greater than 0.9~m) which positions the probes with a positional repeatability of better than $\pm\,0.02~\text{mm}$. Special E- and H-field probes have been developed for measurements close to material discontinuity, the sensors of which are directly loaded with a Schottky diode and connected via highly resistive lines to the data acquisition unit. The SAR measurements were conducted with the dosimetric probe ET3DV6-SN: 1762 (manufactured by SPEAG), designed in the classical triangular configuration and optimized for dosimetric evaluation. The probe has been calibrated according to the procedure with accuracy of better than $\pm 10\%$. The spherical isotropy was evaluated with the procedure and found to be better than $\pm 0.25~\text{dB}$. The phantom used was the SAM Twin Phantom as described in FCC supplement C, IEEE P1528 and EN50361.

Date of Issue: November 21, 2003

3.1. MEASUREMENT SYSTEM DIAGRAM

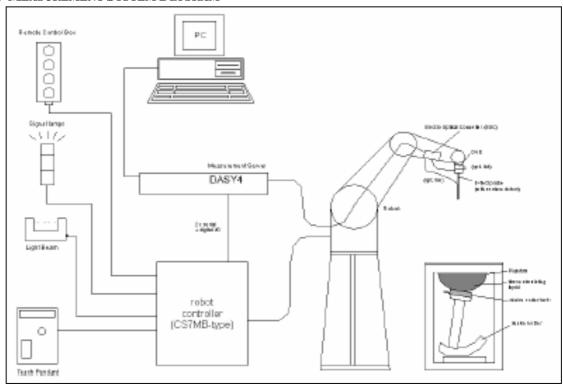

The DASY4 system for performing compliance tests consists of the following items:

- A standard high precision 6-axis robot (St¨aubli RX family) with controller, teach pendant and software.
 An arm extension for accommodating the data acquisition electronics (DAE).
- A dosimetric probe, i.e., an isotropic E-field probe optimized and calibrated for usage in tissue simulating liquid. The probe is equipped with an optical surface detector system.
- A data acquisition electronics (DAE) which performs the signal amplification, signal multiplexing, ADconversion, offset measurements, mechanical surface detection, collision detection, etc. The unit is
 battery powered with standard or rechargeable batteries. The signal is optically transmitted to the EOC.
- The Electro-optical converter (EOC) performs the conversion between optical and electrical of the signals for the digital communication to the DAE and for the analog signal from the optical surface detection. The EOC is connected to the measurement server.
- The function of the measurement server is to perform the time critical tasks such as signal filtering, control of the robot operation and fast movement interrupts.
- A probe alignment unit which improves the (absolute) accuracy of the probe positioning.
- A computer operating Windows 2000 or Windows XP.
- DASY4 software.
- Remote control with teach pendant and additional circuitry for robot safety such as warning lamps, etc.
- The SAM twin phantom enabling testing left-hand and right-hand usage.
- The device holder for handheld mobile phones.
- Tissue simulating liquid mixed according to the given recipes.
- Validation dipole kits allowing validating the proper functioning of the system.

3.2. SYSTEM COMPONENTS

DASY4 Measurement Server



The DASY4 measurement server is based on a PC/104 CPU board with a 166MHz low-power Pentium, 32MB chip disk and 64MB RAM. The necessary circuits for communication with either the DAE3 electronic box as well as the 16-bit AD-converter system for optical detection and digital I/O interface are contained on the DASY4 I/O-board, which is directly connected to the PC/104 bus of the CPU board.

The measurement server performs all real-time data evaluation for field measurements and surface detection, controls robot movements and handles

safety operation. The PC-operating system cannot interfere with these time critical processes. All connections are supervised by a watchdog, and disconnection of any of the cables to the measurement server will automatically disarm the robot and disable all program-controlled robot movements. Furthermore, the measurement server is equipped with two expansion slots which are reserved for future applications. Please note that the expansion slots do not have a standardized pinout and therefore only the expansion cards provided by SPEAG can be inserted. Expansion cards from any other supplier could seriously damage the measurement server. Calibration: No calibration required.

Data Acquisition Electronics (DAE)

The data acquisition electronics (DAE3) consists of a highly sensitive electrometer grade preamplifier with auto-zeroing, a channel and gain-switching multiplexer, a fast 16 bit AD converter and a command decoder and control logic unit. Transmission to the measurement server is accomplished through an optical downlink for data and status information as well as an optical uplink for commands and the clock. The mechanical probe mounting device includes two different sensor systems for frontal and sideways probe contacts. They are used for mechanical surface detection and probe collision



Date of Issue: November 21, 2003

detection. The input impedance of the DAE3 box is 200MOhm; the inputs are symmetrical and floating. Common mode rejection is above 80 dB.

ET3DV6 Isotropic E-Field Probe for Dosimetric Measurements

Construction: Symmetrical design with triangular core Interleaved sensors Built-in optical fiber for surface detection

System and shielding against static charges PEEK enclosure material (resistant to organic solvents, e.g.,

Interior of probe

glycolether)

Calibration: Basic Broad Band Calibration in air: 10-2500 MHz. Conversion Factors (CF) for HSL 900 and HSL 1800

CF-Calibration for other liquids and frequencies upon request.

Frequency: 10 MHz to > 3 GHz; Linearity: \pm 0.2 dB **Directivity:** \pm 0.2 dB in HSL (rotation around probe axis);

 \pm 0.3 dB in tissue material (rotation normal to probe axis)

Dynamic Range: $2 \text{ uW/g to} > 100 \text{ mW/g}; \text{Linearity:} \pm 0.2 \text{ dB}$ **Dimensions:** Overall length: 330 mm (Tip: 16 mm)

Tip diameter: 6.8 mm (Body: 12 mm)

Distance from probe tip to dipole centers: 2.7 mm

Application: General dosimetry up to 3 GHz

Dosimetry in strong gradient fields Compliance tests of mobile phones



Isotropic E-Field Probe

SAM Phantom (V4.0)

Construction: The shell corresponds to the specifications of

the Specific Anthropomorphic Mannequin (SAM) phantom defined in IEEE 1528-200X, CENELEC 50361 and IEC 62209. It enables the dosimetric evaluation of left and right hand phone usage as well as body mounted usage at the flat phantom region. A cover prevents evaporation of the liquid. Reference markings on the phantom allow the complete setup of all predefined phantom positions and measurement grids by manually teaching

three points with the robot.

Shell Thickness: $2 \pm 0.2 \text{ mm}$ Filling Volume: Approx. 25 liters

Dimensions: Height: 810mm; Length: 1000mm; Width:

500mm

Device Holder for SAM Twin Phantom

Construction: In combination with the Twin SAM Phantom V4.0 or Twin SAM, the

Mounting Device (made from POM) enables the rotation of the mounted transmitter in spherical coordinates, whereby the rotation point is the ear opening. The devices can be easily and accurately positioned according to IEC, IEEE, CENELEC, FCC or other specifications. The device holder can be locked at different phantom locations (left head, right head,

flat phantom).

N. I

Date of Issue: November 21, 2003

System Validation Kits

Construction: Symmetrical dipole with 1/4 balun Enables measurement of feedpoint

impedance with NWA Matched for use near flat phantoms filled with brain simulating solutions Includes distance holder and tripod adaptor.

 Frequency:
 450, 900, 1800, 2450, 5800 MHz

 Return loss:
 > 20 dB at specified validation position

 Power capability:
 > 100 W (f < 1GHz); > 40 W (f > 1GHz)

Dimensions: 450V2: dipole length: 270 mm; overall height: 330 mm

D900V2: dipole length: 149 mm; overall height: 330 mm D1800V2: dipole length: 72 mm; overall height: 300 mm D2450V2: dipole length: 51.5 mm; overall height: 300 mm D5GHzV2: dipole length: 25.5 mm; overall height: 290 mm



4. EVALUATION PROCEDURES

DATA EVALUATION

The DASY4 post processing software (SEMCAD) automatically executes the following procedures to calculate the field units from the microvolt readings at the probe connector. The parameters used in the evaluation are stored in the configuration modules of the software:

Probe parameters: - Sensitivity Norm_i, a_{i0} , a_{i1} , a_{i2}

- Conversion factor $ConvF_i$ - Diode compression point dcp_i

Device parameters: - Frequency f

- Crest factor cf

Media parameters: - Conductivity σ

- Density ho

These parameters must be set correctly in the software. They can be found in the component documents or be imported into the software from the configuration files issued for the DASY components. In the direct measuring mode of the multi-meter option, the parameters of the actual system setup are used. In the scan visualization and export modes, the parameters stored in the corresponding document files are used.

The first step of the evaluation is a linearization of the filtered input signal to account for the compression characteristics of the detector diode. The compensation depends on the input signal, the diode type and the DC-transmission factor from the diode to the evaluation electronics. If the exciting field is pulsed, the crest factor of the signal must be known to correctly compensate for peak power. The formula for each channel can be given as:

$$V_i = U_i + U_i^2 \cdot \frac{cf}{dcp_i}$$

with V_i = Compensated signal of channel i (i = x, y, z) U_i = Input signal of channel i (i = x, y, z)

cf = Crest factor of exciting field (DASY parameter) dcp_i = Diode compression point (DASY parameter)

From the compensated input signals the primary field data for each channel can be evaluated:

E-field probes: $E_i = \sqrt{\frac{V_i}{Norm_i \cdot ConvF}}$

H-field probes:

 $H_i = \sqrt{Vi} \cdot \frac{a_{i10} + a_{i11}f + a_{i12}f^2}{f}$

with V_i = Compensated signal of channel i (i = x, y, z)

 $Norm_i$ = Sensor sensitivity of channel i (i = x, y, z)

 $\mu V/(V/m)^2$ for E0field Probes

ConvF = Sensitivity enhancement in solution

aij = Sensor sensitivity factors for H-field probes

f = Carrier frequency (GHz)

Ei = Electric field strength of channel i in V/m
 Hi = Magnetic field strength of channel i in A/m

Date of Issue: November 21, 2003

The RSS value of the field components gives the total field strength (Hermitian magnitude):

$$E_{tot} = \sqrt{E_x^2 + E_y^2 + E_z^2}$$

The primary field data are used to calculate the derived field units.

$$SAR = E_{tot}^2 \cdot \frac{\sigma}{\rho \cdot 1000}$$

with SAR = local specific absorption rate in mW/g

 E_{tot} = total field strength in V/m

 σ = conductivity in [mho/m] or [Siemens/m]

 ρ = equivalent tissue density in g/cm³

Note that the density is normally set to 1 (or 1.06), to account for actual brain density rather than the density of the simulation liquid.

The power flow density is calculated assuming the excitation field as a free space field.

$$P_{pwe} = \frac{E_{tot}^2}{3770}$$
 or $P_{pwe} = H_{tot}^2 \cdot 37.7$

with P_{pwe} = Equivalent power density of a plane wave in mW/cm²

 E_{tot} = total electric field strength in V/m

 H_{tot} = total magnetic field strength in A/m

SAR MEASUREMENT PROCEDURES

The procedure for assessing the peak spatial-average SAR value consists of the following steps:

• Power Reference Measurement

The reference and drift jobs are useful jobs for monitoring the power drift of the device under test in the batch process. Both jobs measure the field at a specified reference position, at a selectable distance from the phantom surface. The reference position can be either the selected section's grid reference point or a user point in this section. The reference job projects the selected point onto the phantom surface, orients the probe perpendicularly to the surface, and approaches the surface using the selected detection method.

Area Scan

The area scan is used as a fast scan in two dimensions to find the area of high field values, before doing a finer measurement around the hot spot. The sophisticated interpolation routines implemented in DASY4 software can find the maximum locations even in relatively coarse grids. The scan area is defined by an editable grid. This grid is anchored at the grid reference point of the selected section in the phantom. When the area scan's property sheet is brought-up, grid was at to 10 mm by 10 mm and can be edited by a user.

Zoom Scan

Zoom scans are used to assess the peak spatial SAR values within a cubic averaging volume containing 1 g and 10 g of simulated tissue. The default zoom scan measures $5 \times 5 \times 7$ points within a cube whose base faces are centered around the maximum found in a preceding area scan job within the same procedure. If the preceding Area Scan job indicates more then one maximum, the number of Zoom Scans has to be enlarged accordingly (The default number inserted is 1).

• Power Drift measurement

The drift job measures the field at the same location as the most recent reference job within the same procedure, and with the same settings. The drift measurement gives the field difference in dB from the reading conducted within the last reference measurement. Several drift measurements are possible for one reference measurement. This allows a user to monitor the power drift of the device under test within a batch process. In the properties of the Drift job, the user can specify a limit for the drift and have DASY4 software stop the measurements if this limit is exceeded.

Z-Scan

The Z Scan job measures points along a vertical straight line. The line runs along the Z-axis of a one-dimensional grid. A user can anchor the grid to the current probe location. As with any other grids, the local Z-axis of the anchor location establishes the Z-axis of the grid.

5. MEASUREMENT UNCERTAINTY

UNCERTAINTY BUDGE ACCORDING TO IEEE P1528								
Error Description	1	Probablility	Divisor	C ₁ 1g	Standard	V_1 or V_{eff}		
Measurement System								
Probe calibration	±4.8	normal	1	1	±4.8			
Axial isotropy of probe	±4.6	rectangular	3	$(1-Cp)^{1/2}$	±1.9			
Sph. Isotropy of probe	±9.7	rectangular	3	$(Cp)^{1/2}$	±3.9			
Probe linearity	±4.5	rectangular	3		±2.7			
Detection Limit	±0.9	rectangular	3	1	±0.6			
Boundary effects	±8.5	rectangular	3	1	±4.8			
Readoutelectronics	±1.0	normal	1	1	±1.0			
Response time	±0.9	rectangular	3	1	±0.5			
Integration time	±1.2	rectangular	3	1	±0.8			
Mech Constrains of robot	±0.5	rectangular	3	1	±0.2			
Probe positioning	±2.7	rectangular	3	1	±1.7			
Extrap. And integration	±4.0	rectangular	3	1	±2.3			
RF ambient conditiona	±0.54	rectangular	3	1	±0.43			
Test Sample Related								
Device positioning	±2.2	normal	1	1	±2.23	11		
Device holder uncertainty	±5	normal	1	1	±5.0	7		
Power drift	±5	rectangular	3	1	±2.9			
Phantom and Setup								
Phantom uncertainty	±4	rectangular	3	1	±2.3			
Liquid conductivity	±5	rectangular	3	0.6	±1.7			
Liquid conductivity	±5	rectangular	3	0.6	±3.5/1.7			
Liquid permittivity	±5	rectangular	3	0.6	±1.7			
Liquid permittivity	±5	rectangular	3	0.6	±1.7			
Combined Standard Uncertainty					±12.14/11.76			
Coverage Factor for 95%		kp=2						
Expaned Standard Uncertainty Table West asses presented			an to IEEE I		±24.29/23.51			

 $Table: Worst-case\ uncertainty\ for\ DASY4\ assessed\ according\ to\ IEEE\ P1528.$

The budge is valid for the frequency range 300 MHz to 3G Hz and represents a worst-case analysis.

6. EXPOSURE LIMIT

(A).Limits for Occupational/Controlled Exposure (W/kg)

<u>Whole-Body</u> <u>Partial-Body</u> <u>Hands, Wrists, Feet and Ankles</u>

0.4 8.0 2.0

(B). Limits for General Population/Uncontrolled Exposure (W/kg)

Whole-Body Partial-Body Hands, Wrists, Feet and Ankles

0.08 1.6 4.0

NOTE: Whole-Body SAR is averaged over the entire body, partial-body SAR is averaged over any 1 gram of tissue defined as a tissue volume in the shape of a cube. SAR for hands, wrists, feet and ankles is averaged over any 10 grams of tissue defined as a tissue volume in the shape of a cube.

Population/Uncontrolled Environments:

are defined as locations where there is the exposure of individuals who have no knowledge or control of their exposure.

Occupational/Controlled Environments:

are defined as locations where there is exposure that may be incurred by people who are aware of the potential for exposure, (i.e. as a result of employment or occupation).

NOTE GENERAL POPULATION/UNCONTROLLED EXPOSURE PARTIAL BODY LIMIT 1.6 mW/g

7. MEASUREMENT RESULTS

7.1. SYSTEM PERFORMANCE CHECK

The system performance check is performed prior to any usage of the system in order to guarantee reproducible results. The system performance check verifies that the system operates within its specifications. The system performance check results are tabulated below. And also the corresponding SAR plot is attached as well in the SAR plots files.

SYSTEM PERFORMANCE CHECK MEASUREMENT CONDITIONS

- The measurements were performed in the flat section of the SAM twin phantom filled with Head simulating liquid of the following parameters.
- The DASY4 system with an E-fileld probe ET3DV6 SN: 1762 was used for the measurements.
- The dipole was mounted on the small tripod so that the dipole feed point was positioned below the center marking of the flat phantom section and the dipole was oriented parallel to the body axis (the long side of the phantom). The standard measuring distance was 10 mm (above 1 GHz) from dipole center to the simulating liquid surface.
- The coarse grid with a grid spacing of 10mm was aligned with the dipole.
- Special 5x5x7 fine cube was chosen for cube integration (dx=dy=7.5 mm, dz=7.5 mm).
- Distance between probe sensors and phantom surface was set to 3.0 mm.
- The dipole input power (forward power) was 250 mW±3%.
- The results are normalized to 1 W input power.

Reference SAR values

The reference SAR values were using measurement results indicated in the dipole calibration document (see table below)

Frequency (MHz)	1g SAR	10g SAR	Local SAR at Surface (Above Feed Point)	Local SAR at Surface (y = 2cm offset from feed point)
900	10.3	6.57	16.4	5.4
1800	38.2	20.3	69.5	6.8
2450	54.8	24.2	104.2	7.7

SYSTEM PERFORMANCE CHECK RESULTS

Dipole: D2450V2 SN: 728 **Date:** November 21, 2003

Ambient condition: Temperature 25.0°C; Relative humidity 58%

Body Simulating Liquid		iquid	Parameters	Target	Measured	Deviation[%]	Limited[%]	
f(GHz)	Temp. [°C]	Depth [cm]	1 arameters	rarget	Wieasuieu	Deviation[%]	Limiteu [%]	
			Permitivity:	39.2	39.3658	0.42	± 5	
2450	23.80	15.00	Conductivity:	1.80	1.818	1.00	± 5	
			1g SAR:	54.8	53.6	-2.19	± 5	

7.2. TEST LIQUID CONFIRMATION

SIMULATING LIQUIDS PARAMETER CHECK

The simulating liquids should be checked at the beginning of a series of SAR measurements to determine of the dielectric parameters are within the tolerances of the specified target values

The relative permittivity and conductivity of the tissue material should be within \pm 5% of the values given in the table below. 5% may not be easily achieved at certain frequencies. Under such circumstances, 10% tolerance may be used until more precise tissue recipes are available

IEEE SCC-34/SC-2 P1528 RECOMMENDED TISSUE DIELECTRIC PARAMETERS

The head tissue dielectric parameters recommended by the IEEE SCC-34/SC-2 in P1528 have been incorporated in the following table. These head parameters are derived from planar layer models simulating the highest expected SAR for the dielectric properties and tissue thickness variations in a human head. Other head and body tissue parameters that have not been specified in P1528 are derived from the tissue dielectric parameters computed from the 4-Cole-Cole equations and extrapolated according to the head parameters specified in P1528

Target Frequency	Head		Во	ody
(MHz)	$\epsilon_{ m r}$	σ (S/m)	ε _r	σ (S/m)
150	52.3	0.76	61.9	0.80
300	45.3	0.87	58.2	0.92
450	43.5	0.87	56.7	0.94
835	41.5	0.90	55.2	0.97
900	41.5	0.97	55.0	1.05
915	41.5	0.98	55.0	1.06
1450	40.5	1.20	54.0	1.30
1610	40.3	1.29	53.8	1.40
1800-2000	40.0	1.40	53.3	1.52
2450	39.2	1.80	52.7	1.95
3000	38.5	2.40	52.0	2.73
5800	45.3	5.27	48.2	6.00

SIMULATING LIQUIDS PARAMETER CHECK RESULTS

Ambient condition: Temperature 25.0°C; Relative humidity 58% **Date**: November 21, 2003

Bod	y Simulating L	Liquid	Parameters	Target	Measured	Deviation[%]	Limited[%]	
f (GHz)	Temp. [°C]	Depth (cm)	Farameters	Target	Measureu	Deviation[%]	Limited[%]	
2450	23.8	22.9		52.70	51.6966	-1.90	± 5	
2430	23.8	15	Conductivity:	1.95	1.99	2.05	± 5	

7.3. EUT TUNE-UP PROCEDURES

The following procedure had been used to prepare the EUT for the SAR test.


- o The client supplied a special driver to program the EUT, allowing it to continually transmit the specified maximum power and change the channel frequency.
- o The conducted power was measured at the high, middle and low channel frequency before and after the SAR measurement.
- o The output power(dBm) we measured before SAR test in different transition rate and channel

IEEE802.11b:

Rate CH	1M	2M	5.5M	11M
1	15.26	15.24	15.29	15.23
6	15.25	15.23	15.27	15.21
11	16.18	16.15	16.20	16.13

7.4. SAR MEASUREMENTS RESULTS

EUT Setup Configuration 1 (Main antenna)

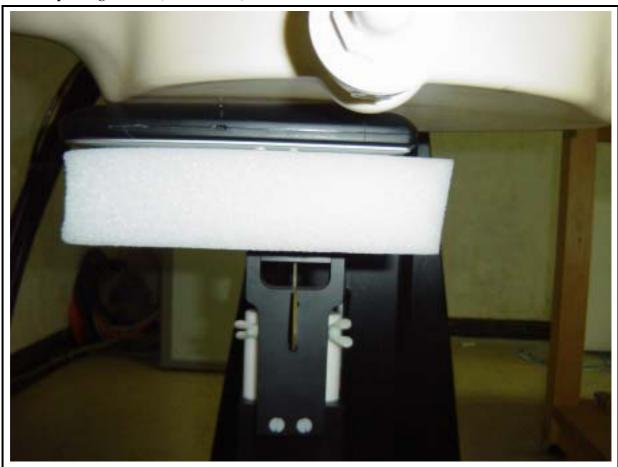

802.11b (DSSS): Duty Cycle = 100%, Crest Factor: 1.


Depth of liquid: 15.0 cm

000000000000000000000000000000000000000			, -			F			
Can [mm]	A4	Rate	Channel	Frequency	*Conducted	*Conducted Pwr_dBm		SAR	Limit
Sep. [mm]	Antenna		Channel	[MHz]	Before	After	Temp [°C]	(W/kg)	(W/kg)
0	1	1	6	2437	15.25	15.24	23.8	0.065	1.6
0	1	2	6	2437	15.23	15.21	23.8	0.063	1.6
0	1	5.5	6	2437	15.27	15.25	23.8	0.069	1.6
0	1	11	6	2437	15.23	15.21	23.8	0.058	1.6
0	1	5.5	1	2412	15.29	15.27	23.8	0.083	1.6
0	1	5.5	6	2437	15.27	15.25	23.8	0.069	1.6
0	1	5.5	11	2462	16.20	16.18	23.8	0.069	1.6

Notes:

- 1. *: Peak power.
- 2. Bottom face in parallel with flat phantom.
- 3. See attachment for the result presentation in plot format.

EUT Setup Configuration 2 (Main antenna)

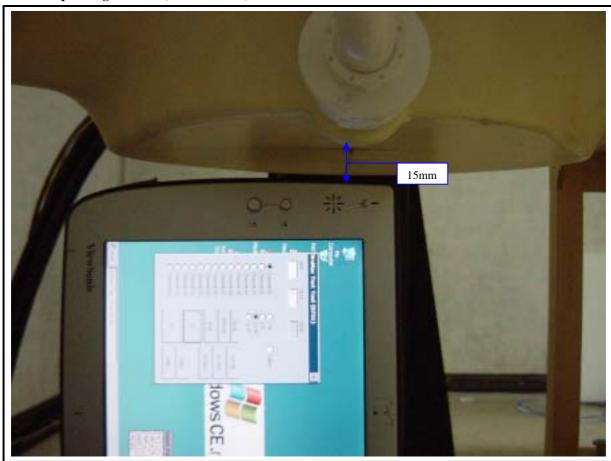

	802.11b (D	SSS): Duty	Depth of	of liquid: 15.0) cm				
	Sep. [mm]	Antenna	Channel	Frequency [MHz]	*Conducted Pwr_dBm		Liquid Temp	SAR	Limit
		Amemia	Chamic		Before	After	[°C]	(W/kg)	(W/kg)
	15	1	1	2412	15.28	15.27	23.8	0.057	1.6
	15	1	6	2437	15.26	15.24	23.8	0.046	1.6

16.19

16.17

23.8

0.043

1.6

Notes:

15

- 1. *: Peak power.
- 2. Host device perpendicular to flat phantom.

11

3. See attachment for the result presentation in plot format.

2462

8. **EUT PHOTOS <u>EUT</u>**
















Page 19 of 23

ANTENNA LOCATIONS



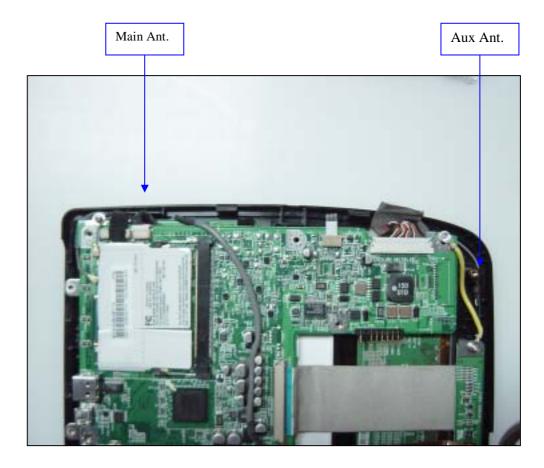

9. EQUIPMENT LIST & CALIBRATION STATUS

Name of Equipment	Manufacturer	Type/Model	Serial Number	Calibration Due
S-Parameter Network Analyzer	Agilent	E8358A	US40280243	03/24/04
Electronic Probe kit	Hewlett Packard	85070D	N/A	N/A
3.5mm electronic Calibration Kit	Agilent	85093C	US01400208	01/22/04
Power Meter	Boonton	4531	13061	01/10/04
Power Sensor	Boonton	56218	2240	01/10/04
Power Meter	Agilent	E4416A	GB41291611	03/15/04
Power Sensor	Agilent	E9327A	US40441097	03/15/04
Thermometer	Amarell	4046	23641	12/12/03
Universal Radio Communication Tester	Rohde & Schwarz	CMU 200	1100.0008.02	N/A
Signal Generator	Agilent	83630B	3844A01022	01/15/04
Amplifier	Mini-Circuit	ZHL- 1724HLN	N/A	N/A
DC Power generator	ABM	8301HD		N/A
Data Acquisition Electronics (DAE)	SPEAG	DAE3	558	03/07/04
Dosimetric E-Field Probe	SPEAG	ET3DV6	1762	03/31/04
900 MHz System Validation Dipole	SPEAG	D900V2	179	03/31/04
1800 MHz System Validation Dipole	SPEAG	D1800V2	2d026	04/01/04
2450 MHz System Validation Dipole	SPEAG	D2450V2	728	03/05/04
Probe Alignment Unit	SPEAG	LB (V2)	348	N/A
Robot	Staubli	RX90B L	F02/5T69A1/A/01	N/A
SAM Twin Phantom V4.0	SPEAG	N/A	N/A	N/A
Devices Holder	SPEAG	N/A	N/A	N/A
Head 835 MHz	CCS	H835A	N/A	N/A
Muscle 835 MHz	CCS	M835A	N/A	N/A
Head 900 MHz	CCS	H900A	N/A	N/A
Muscle 900 MHz	CCS	M900A	N/A	N/A
Head 1800 MHz	CCS	H1800A	N/A	N/A
Muscle 1800 MHz	CCS	M1800A	N/A	N/A
Head 1900 MHz	CCS	H1900A	N/A	N/A
Muscle 1900 MHz	CCS	M1900A	N/A	N/A
Head 2450 MHz	CCS	H2450A	N/A	N/A
Muscle 2450 MHz	CCS	M2450A	N/A	N/A

Date of Issue: November 21, 2003

10. REFERENCES

- [1] Federal Communications Commission, \Report and order: Guidelines for evaluating the environ-mental effects of radiofrequency radiation", Tech. Rep. FCC 96-326, FCC, Washington, D.C. 20554, 1996.
- [2] David L. Means Kwok Chan, Robert F. Cleveland, \Evaluating compliance with FCC guidelines for human exposure to radiofrequency electromagnetic fields", Tech. Rep., Federal Communication Commission, O_ce of Engineering & Technology, Washington, DC, 1997.
- [3] Thomas Schmid, Oliver Egger, and Niels Kuster, \Automated E-_eld scanning system for dosimetric assessments", IEEE Transactions on Microwave Theory and Techniques, vol. 44, pp. 105{113, Jan. 1996.
- [4] Niels Kuster, Ralph K.astle, and Thomas Schmid, \Dosimetric evaluation of mobile communications equipment with known precision", IEICE Transactions on Communications, vol. E80-B, no. 5, pp. 645{652, May 1997.
- [5] CENELEC, \Considerations for evaluating of human exposure to electromagnetic fields (EMFs) from mobile telecommunication equipment (MTE) in the frequency range 30MHz 6GHz", Tech. Rep., CENELEC, European Committee for Electrotechnical Standardization, Brussels, 1997.
- [6] ANSI, ANSI/IEEE C95.1-1992: IEEE Standard for Safety Levels with Respect to Human Exposure to Radio Frequency Electromagnetic Fields, 3 kHz to 300 GHz, The Institute of Electrical and Electronics Engineers, Inc., New York, NY 10017, 1992.
- [7] Katja Pokovic, Thomas Schmid, and Niels Kuster, \Robust setup for precise calibration of E-_eld probes in tissue simulating liquids at mobile communications frequencies", in ICECOM _ 97, Dubrovnik, October 15{17, 1997, pp. 120{124.
- [8] Katja Pokovic, Thomas Schmid, and Niels Kuster, \E-_eld probe with improved isotropy in brain simulating liquids", in Proceedings of the ELMAR, Zadar, Croatia, 23 {25 June, 1996, pp. 172 {175.
- [9] Volker Hombach, Klaus Meier, Michael Burkhardt, Eberhard K. uhn, and Niels Kuster, \The dependence of EM energy absorption upon human head modeling at 900 MHz", IEEE Transactions on Microwave Theory and Techniques, vol. 44, no. 10, pp. 1865{1873, Oct. 1996.
- [10] Klaus Meier, Ralf Kastle, Volker Hombach, Roger Tay, and Niels Kuster, \The dependence of EM energy absorption upon human head modeling at 1800 MHz", IEEE Transactions on Microwave Theory and Techniques, Oct. 1997, in press.
- [11] W. Gander, Computermathematik, Birkhaeuser, Basel, 1992.
- [12] W. H. Press, S. A. Teukolsky, W. T. Vetterling, and B. P. Flannery, Numerical Recepies in C, The Art of Scientific Computing, Second Edition, Cambridge University Press, 1992..Dosimetric Evaluation of Sample device, month 1998 9
- [13] NIS81 NAMAS, \The treatment of uncertainty in EMC measurement", Tech. Rep., NAMAS Executive, National Physical Laboratory, Teddington, Middlesex, England, 1994.
- [14] Barry N. Taylor and Christ E. Kuyatt, \Guidelines for evaluating and expressing the uncertainty of NIST measurement results", Tech. Rep., National Institute of Standards and Technology, 1994. Dosimetric Evaluation of Sample device, month 1998 10

11. ATTACHMENTS

Exhibit	Content				
1	Data Acquisition Electronics (DAE)-DAE3, S/N: 558				
2	Dosimetric E-Field Probe - ET3DV6, S/N: 1762				
3	Validation Dipole - D2450V2, S/N: 728				
4	System Performance Check Plots				
5	SAR Test Plots				

End of Report