# **REPORT ON**

The Specific Absorption Rate Assessment of the Symbol MC9060 Mobile Computer.

Report Number: WS611522 - 001

December 2003







**REPORT ON:** 

FCC ID:

IC:

TUV Product Service Ltd. Segensworth Road, Titchfield Fareham, Hampshire, United Kingdom, PO15 5RH Tel: +44 (0) 1329 443300, Fax: +44 (0) 1329 443331 www.tuvps.co.uk



The Specific Absorption Rate Assessment of the Symbol MC9060 Mobile Computer.

Report No: WS611522 - 001

H9PMC9060B 1549D-MC9060B

PREPARED FOR:

Symbol Technologies One Symbol Plaza Holtsville NY 11742-1300 New York United States of America

ATTESTATION:

The wireless portable device described within this report has been shown to be capable of compliance for localised specific absorption rate (SAR) for General Population/Uncontrolled Exposure Limits as defined in the European standard EN50361: 2002 and Australian Communications Authority Radio communications (Electromagnetic Radiation – Human Exposure) Standard 2003 of 2.0W/kg, FCC standard Supplement C (Edition 01-01) to OET Bulletin 65 (Edition 97-01) and RSS-102 Issue 1 (Provisional) September 25, 1999 of 1.6 W/kg.

The measurements shown in this report were made in accordance with the procedures specified in European standard EN50361: 2002, Supplement C (Edition 01-01) to OET Bulletin 65 (Edition 97-01), RSS-102 Issue 1 (Provisional) September 25 and IEEE1528-200x (Draft December 2002).

All reported testing was carried out on a sample of equipment to demonstrate compliance with the above standards. The sample tested was found to comply with the requirements in the applied rules.

A. Miller Senior SAR Test Engineer

**APPROVED BY:** 

M J Hardy **Deputy Wireless Group Leader** 

DATED:

3<sup>rd</sup> December 2003

**DISTRIBUTION:** 

Symbol Technologies Corporation (CD ROM). Copy No: 1 2 Copy No.:

BABT

Copy No.: 1

Note: The test results reported herein relate only to the item tested as identified above and on the Status Page.



# CONTENTS

EXECUTIV	E SUMMARY	3
1.1	Status	4
1.2	Summary	5
1.3	Test Result Summary	6
TEST DET	AILS	8
2.1	Test Equipment	9
2.2	Test Software	9
2.3	Dielectric Properties of Simulant Liquids	10
2.4	Test Conditions	11
2.5	Measurement Uncertainty	11
2.6	SAR Measuring System Probe and Amplifier Specification Probe Calibration SAR Measurement Procedure	12
2.7	OET65(c) Flat Phantom Test Position – Graphical Representation	30
2.8	SAR Distributions (Area Scans – 2D)	32
2.9	Test Positional Photographs	41
2.10	Record Photographs	42
2.11	User Information	48
2.12	Copyright Statement	49



# **EXECUTIVE SUMMARY**

The Specific Absorption Rate Assessment of Symbol MC9060 Mobile Computer.

PROJECT MANAGER: M. Glasspool



## 1.1 <u>STATUS</u>

MANUFACTURING DESCRIPTION Mobile Computer STATUS OF TEST Specific Absorption Rate Testing APPLICANT Symbol Technologies Inc MANUFACTURER Symbol Technologies Inc **TYPE NUMBER** MC9060 PART NUMBER MC9060-SK0H9AEA715 SERIAL NUMBER BETA01163 HARDWARE VERSION Rev 11 **RADIO LAN** Symbol Main Terminal Module (MTM) with 802.11b embedded Radio. TYPE 21-64436 POWER +17dBm **BLUETOOTH MODULE** Symbol Bluetooth Module TYPE 21-64381 CLASS Class 1 POWER +20dBm

#### **TEST SPECIFICATIONS:**

Federal Communications Commission, Code of Federal Regulations, Title 47 (CFR47), Vol. 1, Chapter 1, Part 2 (§2.1091 and §2.1093).

Federal Communications Commission (FCC) OET Bulletin 65c, Edition 01-01, Evaluating Compliance with FCC Guidelines for Human Exposure to Radiofrequency Electromagnetic Fields – Additional Information for Evaluating Compliance of Mobile and Portable Devices with FCC Limits for Human Exposure to Radiofrequency Emissions

CENELEC EN 50360: July 2001, Product Standard to demonstrate the compliance of mobile phones with the basic restrictions related to human exposure electromagnetic (300 MHz - 3 GHz).

CENELEC EN 50361: July 2001, Basic standard for the measurement of Specific Absorption Rate related to human exposure to electromagnetic fields from mobile phones (300 MHz - 3 GHz).

RSS-102 Issue 1 (Provisional) September 25, 1999: Evaluation Procedure for Mobile and Portable Radio Transmitters with respect to Health Canada's Safety Code 6 for Exposure of Humans to radio Frequency Fields.

Australian Communications Authority – Radio communications (Electromagnetic Radiation – Human Exposure) Standard 2003.

#### **REFERENCES:**

IEEE 1528 –200X: DRAFT Recommended Practice for Determining the Peak Spatial-Average Specific Absorption Rate (SAR) in the Human Body Due to Wireless Communications Devices: Experimental Techniques

Council Recommendations 1999/519/EC on the limitations of exposure of the general public to electromagnetic fields (0 Hz - 3 GHz) annex II.

BABT REGISTRATION NUMBER:WS611522.RECEIPT OF TEST SAMPLES:17th November 2003.START OF TEST:17th November 2003.FINISH OF TEST:19th November 2003.



## 1.2 <u>SUMMARY</u>

The unit supplied for testing is a Symbol Technologies MC9060 Mobile Computer, with a Symbol Bluetooth Module and embedded 2.4GHz 802.11b Wireless Radio.

Sub-equipped Version (RLAN only).

Asub-equipped version of the MC9060 is also available; this version will only offer 802.11b RLAN connectivity, as the Bluetooth module is not included. This was not assessed at this time.

Prior to full SAR assessment, the device was placed into the appropriate test mode and an area scan was performed on each face of the device to ascertain the location of the transmitter to enable the SAR testing to be performed on the appropriate face. This was performed for each Radio Module fitted.

The Symbol Technologies MC9060 Mobile Computer does not support co-located transmission.

SAR testing was performed with the device set in the appropriate CW Test Mode for the Radio Module under test. The device was then placed at distance of 1.0 cm from the side of the flat phantom. Flat Phantom dimensions 220mmx200mmx150mm and with a sidewall thickness of 2.0mm. The phantom was filled to a depth of 150mm with 2450MHz Body simulant liquid. The dielectric properties were in accordance with the requirements for the dielectric properties specified in Supplement C (Edition 01-01) to OET Bulletin 65 (Edition 97-01).

SAR testing was carried out at the top, middle and bottom frequency of each of the device operating bands.

The device was placed into a test WLAN mode using onboard software supplied by the client, which enabled the device to be placed into a CW test mode. The channels 1, 6, 11 & 13 were selected in turn and the maximum SAR levels recorded

The device was placed into a test Bluetooth mode using onboard software supplied by the client, which enabled the device to be placed into a CW test mode. The channels 0, 39 & 78 were selected in turn and the maximum SAR levels recorded.

The device was fitted with the supplied Headset and then the headset was fitted to the SAM phantom and a single scan was performed on each Radio Module, with the headset cable wrapped around the device at the location of the Radio Modules to induce the RF field.

The following accessories were supplied for assessment with the device, these were: -

- Symbol Headset Model Number VXI 61-SYB (p/n 50-11300-050)
- MC9060 Mobile Computer Holster<sup>[1]</sup> Manufactured by AGORA

Included in this report are descriptions of the test method; the equipment used and an analysis of the test uncertainties applicable and diagrams indicating the locations of maximum SAR for each test position along with photographs indicating the positioning of the handset against either the right or left ear, as appropriate,

The maximum 10g volume averaged SAR level measured for all the tests performed did not exceed the 2 W/kg level defined for limiting the exposure of the general population to time-varying electric and magnetic fields by ICNIRP (1998), which is the relevant Standard for testing according to the CENELEC EN50361 test method.

The maximum 1g volume averaged SAR level measured for all the tests performed did not exceed the limits for General Population/Uncontrolled Exposure (W/kg) Partial Body of 1.6 W/kg. Level defined in Supplement C (Edition 01-01) to OET Bulletin 65 (97-01).

[1]. The Holster was declared to be used in one position only on the end user, see section 2.11 for further details. SAR assessment of the Symbol Technologies MC9060 Mobile Computer was based upon this user configuration.



## 1.3 <u>TEST RESULT SUMMARY</u>

#### SYSTEM PERFORMANCE / VALIDATION CHECK RESULTS

Prior to formal testing being performed a System Check was performed in accordance with Appendix D IEEE1528 December 29, 2002 Draft Standard. The following results were obtained: -

Dipole Used	Frequency	Max 1g SAR	Percentage Drift on	Max 10g SAR	Percentage Drift on
	(MHz)	(W/kg)*	1g Reference	(W/kg)*	10g Reference
2450	2450	51.99*	-0.78%	24.20*	0.84%

\*Normalised to 1W

#### MAXIMUM SAR VALUES

The following is a summary of the maximum SAR values found during the assessment.

DSSS 2450 MHz Specific Absorption Rate (Maximum SAR) 1g & 10g WLAN Results for Symbol Technologies MC9060 Mobile Computer at a distance of 10mm from the Flat Phantom (Body SAR)

Position	Channel Number	Frequency (MHz)	Max Spot (W/kg)	Max 1g SAR (W/kg)	Max 10g SAR (W/kg)	Area scan (Figure number)
MC9060 placed 1.0cm from phantom 2.0mm side	1	2412	0.350	0.267	0.123	Figure 16
MC9060 placed 1.0cm from phantom 2.0mm side	6	2437	0.560	0.423	0.196	Figure 17
MC9060 placed 1.0cm from phantom 2.0mm side	11	2462	0.980	0.751	0.346	Figure 18
MC9060 placed 1.0cm from phantom 2.0mm side	13	2472	1.190	0.911	0.417	Figure 19
Head Set fitted to device Headset placed on left hand side	11	2462	0.040	0.033	0.018	Figure 20
Limit for Gen	eral Population	n (Uncontrolled I	Exposure) 1.6	W/kg (1g) & 2	.0 W/kg (10g)	

Bluetooth 2450 MHz Specific Absorption Rate (Maximum SAR) 1g & 10g WLAN Results for Symbol Technologies MC9060 Mobile Computer at a distance of 10mm from the Flat Phantom (Body SAR)

Position	Channel Number	Frequency (MHz)	Max Spot (W/kg)	Max 1g SAR (W/kg)	Max 10g SAR (W/kg)	Area scan (Figure number)
MC9060 placed 1.0cm from phantom 2.0mm side	0	2402	0.330	0.259	0.121	Figure 21
MC9060 placed 1.0cm from phantom 2.0mm side	39	2441	0.410	0.317	0.148	Figure 22
MC9060 placed 1.0cm from phantom 2.0mm side	78	2480	0.260	0.201	0.093	Figure 23
Head Set fitted to device Headset placed on left hand side	78	2480	0.020	0.013	0.007	Figure 24
Limit for Gen	eral Population	n (Uncontrolled	Exposure) 1.6	W/kg (1g) & 2	.0 W/kg (10g)	·



## 1.3 TEST RESULT SUMMARY

## OUTPUT POWER OF TEST DEVICE MEASUREMENT METHOD

For the Symbol Technologies MC9060 Mobile Computer.

The Spectrum Analyser was tuned to the test frequency. The device Output power setting was controlled via the 'Test Mode' on each handset being set to the conditions specified in the Summary on page 5 of this document. The device was then rotated through 360 degrees until the highest power level was observed in both planes of polarisation. The device was then replaced with a substitution antenna, the signal to the antenna was adjusted to equal the related level detected from the device.

## MAXIMUM POWER

Recorded from the Symbol Technologies MC9060 Mobile Computer BETA01163

Radio Device	Frequency (MHz)	Raw Result (dBm)	Substitution Level (dBm)	Substitution Antenna Gain (dB)	Result ERP (dBm)	Result ERP (mW)
2.4GHz DSSS WLAN Radio	2412	-33.4	7.3	9.2	16.5	44.6
2.4GHz DSSS WLAN Radio	2437	-31.1	8.7	9.3	18.0	63.0
2.4GHz DSSS WLAN Radio	2462	-30.7	9.5	9.3	18.8	75.8
2.4GHz DSSS WLAN Radio	2472	-30.4	10.4	9.4	19.8	95.5
Symbol Bluetooth Module	2402	-36.2	7.6	9.2	16.8	47.9
Symbol Bluetooth Module	2441	-35.7	10.1	9.3	19.4	87.1
Symbol Bluetooth Module	2480	-39.6	6.5	9.3	15.8	38.0



**TEST DETAILS** 

The Specific Absorption Rate Assessment of the Symbol MC9060 Mobile Computer.

TEST ENGINEER: A. MILLER



# 2.1 <u>TEST EQUIPMENT</u>

The following test equipment was used at BABT:

INSTRUMENT DESCRIPTION	MANUFACTURER	MODEL TYPE	INVENTORY NO.	SERIAL NUMBER	CALIBRATION DATES
Bench-top Robot	Mitsubishi	RV-E2	4691	EA009006	N/A
2450 MHz – Head Tissue Simulant	BABT	Head	N/A	Batch 4	29/10/03*
2450 MHz – Body Tissue Simulant	BABT	Body	N/A	Batch 1	29/10/03*
2450 MHz Calibration Dipole	BABT	IEEE1528	A	N/A	29/10/03*
RF Amplifier	Vectawave	10M-2.5G	4697	N/A	N/A
Directional Coupler	Krytar	1850	4651	N/A	TU
20dB Attenuator	Narda	766F-10	EMC 1791	1791	24/05/04 (due)
Power Meter	Rohde Schwarz	NRV	2472	860327/025	24/05/04 (due)
Hygrometer	Rotronic	I-1000	3230	N/A	04/10/04 (due)
Digital Thermometer	Digitron	T208	3178	N/A	16/06/04 (due)
Thermocouple	RS	219-4539	4859	N/A	16/06/04 (due)
SAR Probe	IndexSAR	IXP-050	N/A	84	18/03/04 (due)
Flat Phantom box 2mm side(200mm cube)	IndexSAR.	N/A	N/A	N/A	N/A

\* Verified at time of test.

## 2.2 <u>TEST SOFTWARE</u>

The following software was used to control the BABT SARA2 System:

INSTRUMENT	VERSION NO.	DATE
SARA2 system	v.0.281	023/07/2002
Mitsubishi robot controller firmware revision	RV-E2 Version C9a	-
IXA-10 Probe amplifier	Version 2.5	-



## 2.3 DIELECTRIC PROPERTIES OF SIMULANT LIQUIDS

The dielectric properties of the tissue simulant liquids used for the SAR testing at BABT are as follows:-

FLUID TYPE AND FREQUENY	RELATIVE PERMITTIVITY εr (ε') TARGET	RELATIVE PERMITTIVITY εr (ε') MEASURED	CONDUCTIVITY σ TARGET	CONDUCTIVITY o MEASURED
Head 2450MHz	39.2	36.88	1.80 S/m	1.889
Body 2450MHz	52.7	51.32	1.95 S/m	2.027

Fluid Mass Density,  $\rho = 1000 \text{ kg/m}^3$ 

The fluids were calibrated in our Laboratory and re-checked prior to any measurements being made against reference fluids stated in IEEE 1528-200X of 0.9% NaCI (Salt Solution) at 23°C and also for Dimethylsulphoxide (DMS) at 21°C.

The fluids were made at BABT under controlled conditions from the following OET(65)c formulae and reference made to Draft Standard IEEE1528-200x. The composition of ingredients may have been modified accordingly to achieve the desired target tissue parameters required for routine SAR evaluation:

Ingredients	Frequency (MHz)									
(% by weight)	4	50	83	835		915		00	2450	
Tissue Type	Head	Body	Head	Body	Head	Body	Head	Body	Head	Body
Water	38.56	51.16	41.45	52.4	41.05	56.0	54.9	40.4	62.7	73.2
Salt (NaCl)	3.95	1.49	1.45	1.4	1.35	0.76	0.18	0.5	0.5	0.04
Sugar	56.32	46.78	56.0	45.0	56.5	41.76	0.0	58.0	0.0	0.0
HEC	0.98	0.52	1.0	1.0	1.0	1.21	0.0	1.0	0.0	0.0
Bactericide	0.19	0.05	0.1	0.1	0.1	0.27	0.0	0.1	0.0	0.0
Triton X-100	0.0	0.0	0.0	0.0	0.0	0.0	0.0	0.0	36.8	0.0
DGBE	0.0	0.0	0.0	0.0	0.0	0.0	44.92	0.0	0.0	26.7
Dielectric Constant	43.42	58.0	42.54	56.1	42.0	56.8	39.9	54.0	39.8	52.5
Conductivity (S/m)	0.85	0.83	0.91	0.95	1.0	1.07	1.42	1.45	1.88	1.78



## 2.4 TEST CONDITIONS

Ambient Temperature: Within +15°C to +35°C at 20% RH to 75% RH. The actual temperature during the testing ranged from 22.1°C to 23.4°C. The actual humidity during the testing ranged from 38.8% to 48.9% RH.

Tissue simulating liquid temperature: +20°C to +25°C.

The actual tissue simulating liquid temperature was recorded as min  $23.0^{\circ}$ C and max  $23.2^{\circ}$ C SAR Drift in during scans. The maximum SAR Drift, drift due to the deivice electronics, was recorded as -0.163 (-3.7%) for all of the testing.

## 2.5 MEASUREMENT UNCERTAINTY

ERROR SOURCES	EN 50361 Description (Subclause)	Uncertainty (%)	Probability Distribution	Divisor	ci	ci^2	Standard Uncertainty (%)	Stand Uncert^2	(Stand Uncert^2) X (ci^2)
Measurement Equipment									
Calibration	7.2.1.1	10	Normal	2.00	1	1	5.00	25.00	25.00
Isotropy	7.2.1.2	10.6	Rectangular	1.73	1	1	6.12	37.45	37.45
Linearity	7.2.1.3	2.92	Rectangular	1.73	1	1	1.69	2.84	2.84
Probe Stability	-	2.46	Rectangular	1.73	1	1	1.42	2.02	2.02
Detection limits	7.2.1.4	0	Rectangular	1.73	1	1	0.00	0.00	0.00
Boundary effect	7.2.1.5	1.7	Rectangular	1.73	1	1	0.98	0.96	0.96
Measurement device	7.2.1.6	0	Normal	1.00	1	1	0.00	0.00	0.00
Response time	7.2.1.7	0	Normal	1.00	1	1	0.00	0.00	0.00
Noise	7.2.1.8	0	Normal	1.00	1	1	0.00	0.00	0.00
Integration time	7.2.1.9	2.3	Normal	1.00	1	1	2.30	5.29	5.29
Mechanical constraints									
Scanning system	7.2.2.1	0.57	Rectangular	1.73	1	1	0.33	0.11	0.11
Phantom shell	7.2.2.2	1.43	Rectangular	1.73	1	1	0.83	0.68	0.68
Matching between probe and phantom	7.2.2.3	2.86	Rectangular	1.73	1	1	1.65	2.73	2.73
Positioning of the phone 'Y' Co- ordinate	7.2.2.4	1.5	Normal	1.00	1	1	1.50	2.25	2.25
Positioning of the phone 'Z' Co- ordinate	7.2.2.4	1.73	Normal	1.00	1	1	1.73	2.99	2.99
Physical Parameters									
Liquid conductivity (deviation from target)	7.2.3.2	5	Rectangular	1.73	0.5	0.25	2.89	8.33	2.08
Liquid conductivity (measurement error)	7.2.3.2	5	Rectangular	1.73	0.5	0.25	2.89	8.33	2.08
Liquid permittivity (deviation from target)	7.2.3.3	5	Rectangular	1.73	0.5	0.25	2.89	8.33	2.08
Liquid permittivity (measurement error)	7.2.3.3	5	Rectangular	1.73	0.5	0.25	2.89	8.33	2.08
Drifts in output power of the phone, probe, temperature and humidity	7.2.3.4	5	Rectangular	1.73	0.5	0.25	2.89	8.33	8.33
Perturbation by the environment	7.2.3.5	3	Rectangular	1.73	1	1	1.73	3.00	3.00
Post-Processing									
SAR interpolation and extrapolation	7.2.4.1	2.4	Rectangular	1.73	1	1	1.39	1.92	1.92
Maximum SAR evaluation	7.2.4.2	2.4	Rectangular	1.73	1	1	1.39	1.92	1.92
Combined standard uncertainty	10.29		1				Total	1	105.83
Expanded uncertainty = (confidence interval of	20.57 95 %)	% (Using	a Coverag	e Facto	r of k	(=2)			



## ROBOT SYSTEM SPECIFICATION

The SAR measurement system being used is the IndexSAR SARA2 system, which consists of a Mitsubishi RV-E2 6-axis robot arm and controller, IndexSAR probe and amplifier and SAM phantom Head Shape. The robot is used to articulate the probe to programmed positions inside the phantom head to obtain the SAR readings from the DUT.

The system is controlled remotely from a PC, which contains the software to control the robot and data acquisition equipment. The software also displays the data obtained from test scans.

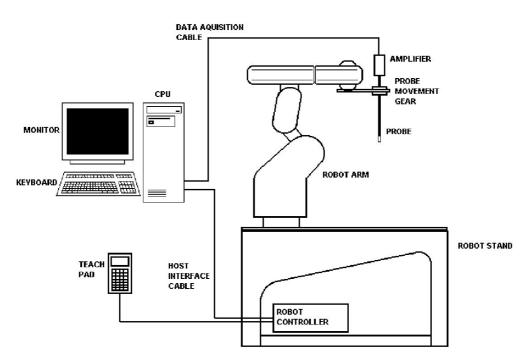


Figure 1: Schematic diagram of the SAR measurement system

The position and digitised shape of the phantom heads are made available to the software for accurate positioning of the probe and reduction of set-up time. The SAM phantom heads are individually digitised using a Mitutoyo CMM machine to a precision of 0.001mm. The data is then converted into a shape format for the software, providing an accurate description of the phantom shell.

In operation, the system first does an area (2D) scan at a fixed depth within the liquid from the inside wall of the phantom. When the maximum SAR point has been found, the system will then carry out a 3D scan centred at that point to determine volume averaged SAR level.



#### PROBE AND AMPLIFIER SPECIFICATION

#### IXP-050 Indexsar isotropic immersible SAR probe

The probes are constructed using three orthogonal dipole sensors arranged on an interlocking, triangular prism core. The probes have built-in shielding against static charges and are contained within a PEEK cylindrical enclosure material at the tip. Probe calibration is described in the following section.

**IXP-039** Amplifier

The amplifier unit has a multi-pole connector to connect to the probe and a multiplexer selects between the 3-channel single-ended inputs. A 16-bit AtoD converter with programmable gain is used along with an on-board micro-controller with non-volatile firmware. Battery life is around 150 hours and data are transferred to the PC via 3m of duplex optical fibre and a self-powered RS232 to optical converter.

#### Phantoms

The Specific Anthropomorphic Mannequin (SAM) Upright Phantom is fabricated using moulds generated from the CAD files as specified by CENELEC EN50361. It is mounted via a rotation base to a supporting table, which also holds the robotic positioner. The phantom and robot alignment is assured by both mechanical and laser registration systems.



## PROBE CALIBRATION PROCEDURE

#### EQUIPMENT USED

For the first part of the characterisation procedure, the probe is placed in an isotropy measurement jig as pictured in Figure 2. In this position the probe can be rotated about its axis by a non-metallic belt driven by a stepper motor.

The probe is attached via its amplifier and an optical cable to a PC. A schematic representation of the test geometry is illustrated in Figure 3.

A balanced dipole (900 MHz) is inserted horizontally into the bracket attached to a second belt (Figure 2). The dipole can also be rotated about its axis. A cable connects the dipole to a signal generator, via a directional coupler and power meter. The signal generator feeds an RF amplifier at constant power, the output of which is monitored using the power meter. The probe is positioned so that its sensors line up with the rotation center of the source dipole. By recording output voltage measurements of each channel as both the probe and the dipole are rotated, data are obtained from which the spherical isotropy of the probe can be optimised and its magnitude determined.

The calibration process requires E-field measurements to be taken in air, in 900 MHz simulated brain liquid and at other frequencies/liquids as appropriate.

## LINEARISING PROBE OUTPUT

The probe channel output signals are linearised in the manner set out in Refs [1] and [2]. The following equation is utilized for each channel:

$$U_{lin} = U_{o/p} + U_{o/p}^{2} / DCP$$
 (1)

where  $U_{lin}$  is the linearised signal,  $U_{o/p}$  is the raw output signal in voltage units and DCP is the diode compression potential in similar voltage units.

DCP is determined from fitting equation (1) to measurements of  $U_{lin}$  versus source feed power over the full dynamic range of the probe. The DCP is a characteristic of the schottky diodes used as the sensors. For the IXP-050 probes with CW signals the DCP values are typically 0.10V (or 20 in the voltage units used by Indexsar software, which are V\*200).

#### SELECTING CHANNEL SENSITIVITY FACTORS TO OPTIMISE ISOTROPIC RESPONSE

The basic measurements obtained using the calibration jig (Fig 2) represent the output from each diode sensor as a function of the presentation angle of the source (probe and dipole rotation angles). The directionality of the orthogonally-arranged sensors can be checked by analysing the data using dedicated Indexsar software, which displays the data in 3D format as in Figure 4. The left-hand side of this diagram shows the individual channel outputs after linearisation (see above). The program uses these data to balance the channel outputs and then applies an optimisation process, which makes fine adjustments to the channel factors for optimum isotropic response.



#### **PROBE CALIBRATION PROCEDURE - Continued**

The next stage of the process is to calibrate the Indexsar probe to a W&G EMR300 E-field meter in air. The principal reasons for this are to obtain conversion factors applicable should the probe be used in air and to provide an overall measure of the probe sensitivity.

A multiplier is applied to factors to bring the magnitudes of the average E-field measurements as close as possible to those of the W&G probe.

The following equation is used (where linearised output voltages are in units of V\*200):

 $E_{air}^{2} (V/m) = U_{linx} * Air Factor_{x}$  $+ U_{liny} * Air Factor_{y}$  $+ U_{linz} * Air Factor_{z}$ (2)

It should be noted that the air factors are not separately used for normal SAR testing. The IXP-050 probes are optimised for use in tissue-simulating liquids and do not behave isotropically in air.

## 900 MHz LIQUID CALIBRATION

Conversion factors for use when the probes are immersed in tissue-simulant liquids at 900 MHz are determined either using a waveguide or by comparison to a reference probe that has been calibrated by NPL. Waveguide procedures are described later. The summary sheet indicates the method used for the probe S/N 0084.

The conversion factor, referred to as the 'liquid factor' is also applied to the measurements of each channel. The following equation is used (where output voltages are in units of V\*200):

$E_{lig}^{2}$ (V/m) =	U <sub>linx</sub> * Air Factor <sub>x</sub> * Liq Factor <sub>x</sub>	
	+ U <sub>liny</sub> * Air Factor <sub>y</sub> * Liq Factor <sub>y</sub>	
	+ U <sub>linz</sub> * Air Factor <sub>z</sub> * Liq Factor <sub>z</sub>	(3)

A 3D representation of the spherical isotropy for probe S/N 0084 using these factors is shown in Figure 4

The rotational isotropy can also determined from the calibration jig measurements and is reported as the 900MHz isotropy in the summary table. Note that waveguide measurements can also be used to determine rotational isotropy (Fig. 6).

The design of the cells used for determining probe conversion factors are waveguide cells is shown in Figure 5. The cells consist of a coax to waveguide transition and an open-ended section of waveguide containing a dielectric separator. Each waveguide cell stands in the upright positition and is filled with liquid within 10 mm of the open end. The seperator provides a liquid seal and is designed for a good electrical transition from air filled guide to liquid filled guide. The choice of cell depends on the portion of the frequency band to be examined and the choice of liquid used. The depth of liquid ensures there is negligible radiation from the waveguide open top and that the probe calibration is not influenced by reflections from nearby objects. The return loss at the coaxial connector of the filled waveguide cell is measured initially using a network analyser and this information is used subsequently in the calibration procedure. The probe is positioned in the centre of the waveguide and is adjusted vertically or rotated using stepper motor arrangements. The signal generator is connected to the waveguide cell and the power is monitored with a coupler and a power meter. A fuller description of the waveguide method is given below.



#### **PROBE CALIBRATION PROCEDURE - Continued**

The liquid dielectric parameters used for the probe calibrations are listed in the Tables below. The final calibration factors for the probe are listed in the summary chart.

## WAVEGUIDE MEASUREMENT PROCEDURE

The calibration method is based on setting up a calculable specific absorption rate (SAR) in a vertically-mounted WG8 (R22) waveguide section [1]. The waveguide has an air-filled, launcher section and a liquid-filled section separated by a matching window that is designed to minimise reflections at the liquid interface. A TE<sub>01</sub> mode is launched into the waveguide by means of a N-type-to-waveguide adapter. The power delivered to the liquid section is calculated from the forward power and reflection coefficient measured at the input to the waveguide. At the centre of the cross-section of the waveguide, the local spot SAR in the liquid as a function of distance from the window is given by functions set out in IEEE1528 as below:

Because of the low cutoff frequency, the field inside the liquid nearly propagates as a TEM wave. The depth of the medium (greater than three penetration depths) ensures that reflections at the upper surface of the liquid are negligible. The power absorbed in the liquid is determined by measuring the waveguide forward and reflected power. Equation (4) shows the relationship between the SAR at the cross-sectional center of the lossy waveguide and the longitudinal distance (*z*) from the dielectric separator

$$SAR(z) = \frac{4(P_f - P_b)}{\rho ab\delta} e^{-2z/\delta}$$
(4)

where the density  $\rho$  is conventionally assumed to be 1000 kg/m<sup>3</sup>, *ab* is the cross-sectional area of the waveguide,  $P_f$  and  $P_b$  are the forward and reflected power inside the lossless section of the waveguide, respectively. The penetration depth  $\delta$ , which is the reciprocal of the waveguide-mode attenuation coefficient, is determined from a scan along the *z*-axis and compared with the theoretical value determined from Equation (5) using the measured dielectric properties of the lossy liquid.

$$\delta = \left[ \operatorname{Re}\left\{ \sqrt{\left(\pi / a\right)^{2} + j\omega\mu_{o}\left(\sigma + j\omega\varepsilon_{o}\varepsilon_{r}\right)} \right\} \right]^{-1}$$
(5)

Table A.1 of [1] can be used for designing calibration waveguides with a return loss greater than 30 dB at the most important frequencies used for personal wireless communications. Values for the penetration depth for these specific fixtures and tissue-simulating mixtures are also listed in Table A.1.

According to [1], this calibration technique provides excellent accuracy, with standard uncertainty of less than 3.6% depending on the frequency and medium. The calibration itself is reduced to power measurements traceable to a standard calibration procedure. The practical limitation to the frequency band of 800 to 2500 MHz because of the waveguide size is not severe in the context of compliance testing.



#### PROBE CALIBRATION PROCEDURE - Continued

#### CALIBRATION FACTORS MEASURED FOR PROBE S/N 0084

The probe was calibrated at 900, 1800, 1900 and 2450MHz in liquid samples representing both brain liquid and body fluid at these frequencies. The calibration was for CW signals only, and the axis of the probe was parallel to the direction of propagation of the incident field i.e. end-on to the incident radiation. The axial isotropy of the probe was measured by rotating the probe about its axis in 10 degree steps through 360 degrees in this orientation.

The reference point for the calibration is in the centre of the probe's cross-section at a distance of 2.7 m from the probe tip in the direction of the probe amplifier. A value of 2.7 mm should be used for the tip to sensor offset distance in the software.

It is important that the diode compression point and air factors used in the software are the same as those quoted in the results tables, as these are used to convert the diode output voltages to a SAR value.

#### DIELECTRIC PROPERTIES OF LIQUIDS

The dielectric properties of the brain and body tissue-simulant liquids employed for calibration are listed in the tables below. The measurements were performed prior to each waveguide test using an Indexsar DiLine measurement kit, which uses the TEM method as recommended in [2].

#### AMBIENT CONDITIONS

Measurements were made in the open laboratory at  $22 \pm 2.0^{\circ}$ C. The temperature of the liquids in the waveguide used was measured using a mercury thermometer.

#### **RESPONSE TO MODULATED SIGNALS**

To measure the response of the probe and amplifier to modulated signals, the probe is held vertically in a liquid-filled waveguide.

An RF amplifier is allowed to warm up and stabilise before use. A spectrum analyser is used to demonstrate that the peak power of the RF amplifier for the CW signals and the pulsed signals are within 0.1dB of each other when the signal generator is switched from CW to modulated output. Subsequently, the power levels recorded are read from a power meter when a CW signal is being transmitted.

The test sequence involves manually stepping the power up in regular (e.g. 2 dB) steps from the lowest power that gives a measurable reading on the SAR probe up to the maximum that the amplifiers can deliver.

At each power level, the individual channel outputs from the SAR probe are recorded at CW and then recorded again with the modulation setting. The results are entered into a spreadsheet. Using the spreadsheets, the modulated power is calculated by applying a factor to the measured CW power (e.g. for GSM, this factor is 9.03dB). This process is repeated 3 times with the response maximised for each channel sensor in turn.



## PROBE CALIBRATION PROCEDURE - Continued

The probe channel output signals are linearised in the manner set out in Section 1 above using equation (1) with the DCPs determined from the linearisation procedure. Calibration factors for the probe are used to determine the E-field values corresponding to the probe readings using equation (3). SAR is determined from the equation

SAR (W/kg) = 
$$E_{lig}^{2}$$
 (V/m) \*  $\sigma$ (S/m) / 1000 (6)

Where  $\sigma$  is the conductivity of the simulant liquid employed.


Using the spreadsheet data, the DCP value for linearising each of the individual channels (X, Y and Z) is assessed separately. The corresponding DCP values are listed in the summary page of the calibration factors for each probe.

Figure 9 shows the linearised probe response to 900MHz GSM signals, Figure 9a the response to 1800MHz GSM signals, Figure 10 the response to GPRS signals (GSM with 2 timeslots) and Figure 11 &12 the response to CDMA IS-95A and W-CDMA signals.

Additional tests have shown that the modulation response is similar at 1800MHz and is not affected by the orientation between the source and the probe.



## PROBE CALIBRATION PROCEDURE - Continued

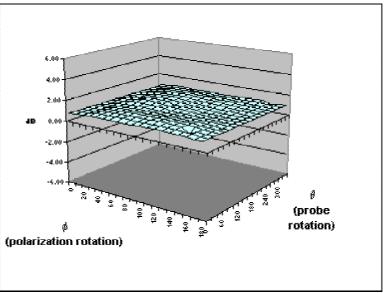

## SUMMARY OF CALIBRATION FACTORS FOR PROBE IXP-050 S/N 0084

	Х	Y	Z	
Air factors	500	410	385	(V*200)
DCPs	20	20	20	(V*200)
GSM	10.9	13	11.4	(V*200)
GPRS	16.1	16.1	14.7	(V*200)
CDMA	20	20	20	(V*200)

f (MHz)	Axial isotropy (+/- dB)		SAR conversion factors(liq/air)		Notes
	BRAIN	BODY	BRAIN	BODY	
900	0.09	0.09	0.279	0.300	3,4
1800	0.12	0.10	0.342	0.375	3,4
1900	0.13	0.10	0.354	0.405	3,4
2450	0.12	0.09	0.396	0.468	3,4

	Notes
1)	Calibrations done at 22C +/- 2C
2)	Probe calibration by substitution against NPL-calibrated probe (Probe IXP-050 S/N0071; NPL Cal Rept. No: EF07/2002/03/IndexSAR
3)	Waveguide calibration
4)	Checked using box-phantom validation test

(The graph shows a simple, spreadsheet representation of surface shown in 3D in Figure 4)



#### PROBE CALIBRATION PROCEDURE - Continued

#### PROBE SPECIFICATIONS

IndexSAR probe 0084, along with its calibration, is compared with CENELEC and IEEE standards recommendations (Refs [1] and [2]) in the Tables below. A listing of relevant specifications is contained in the tables below:

DIMENSIONS	S/N 0084	CENELEC [1]	IEEE [2]
Overall length (mm)	350	-	-
Tip length (mm)	10	-	-
Body diameter (mm)	12	-	-
Tip diameter (mm)	5.2	8	8
Distance from probe tip to dipole centers (mm)	2.7	-	-

DYNAMIC RANGE	S/N 0084	CENELEC [1]	IEEE [2]
Minimum (W/kg)	0.01	<0.02	0.01
Maximum (W/kg)	>100	>100	100

LINEARITY OF RESPONSE	S/N 0084	CENELEC [1]	IEEE [2]
	0.125	0.50	0.25
Over range 0.01 – 100 W/kg (+/- dB)			

Isotropy (measured at 900MHz)	S/N 0084	CENELEC [1]	IEEE [2]
Axial rotation with probe normal to source	Max. 0.13	0.5	0.25
(+/- dB) at 900, 1800, 1900 and 2450 MHz	(see summary table)		
Spherical isotropy covering all orientations to	0.34	1.0	0.50
source (+/- dB)			

CONSTRUCTION	Each probe contains three orthogonal dipole sensors arranged on a triangular prism core, protected against static charges by built-in shielding, and covered at the tip by PEEK cylindrical enclosure material. No adhesives are used in the immersed section. Outer case materials are PEEK and heat-shrink sleeving.	
CHEMICAL RESISTANCE	Tested to be resistant to glycol and alcohol containing simulant liquids but probes should be removed, cleaned and dried when not in use.	



#### **PROBE CALIBRATION PROCEDURE - Continued**


#### REFERENCES

[1] CENELEC, EN 50361, July 2001. Basic Standard for the measurement of specific absorption rate related to human exposure to electromagnetic fields from mobile phones.

[2] IEEE 1528, Recommended practice for determining the spatial-peak specific absorption rate (SAR) in the human body due to wireless communications devices: Experimental techniques.

[3] Calibration report on SAR probe IXP-050 S/N 0071 from National Physical Laboratory. Test Report EF07/2002/03/IndexSAR. Dated 20 February 2002.



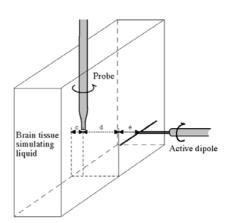

**Figure 2**. Spherical isotropy jig showing probe, dipole and box filled with simulated brain liquid (see Ref [2], Section A.5.2.1)

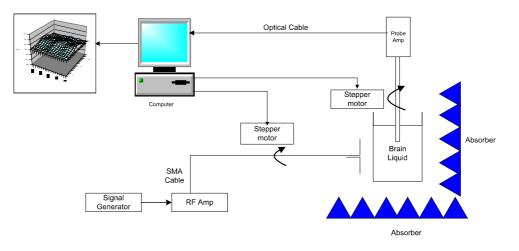


Figure 3. Schematic diagram of the test geometry used for isotropy determination


FCC ID: H9PMC9060B IC: 1549D-MC9060B



## 2.6 SAR MEASUREMENT SYSTEM

#### **PROBE CALIBRATION PROCEDURE - Continued**

#### REFERENCES

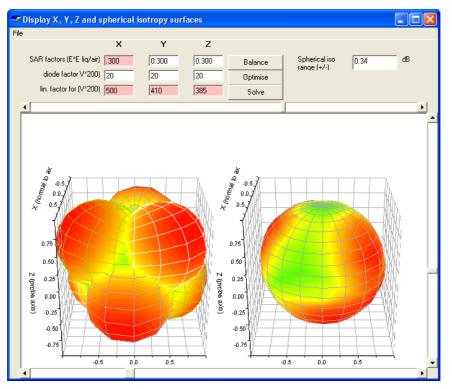

**Figure 4**. Graphical representation of the probe response to fields applied from each direction. The diagram on the left shows the individual response characteristics of each of the three channels and the diagram on the right shows the resulting probe sensitivity in each direction. The colour range in the figure images the lowest values as blue and the maximum values as red. For the probe S/N 0084, this range is (+/-) 0.34 dB. The probe is more sensitive to fields parallel to the axis and less sensitive to fields normal to the probe axis.


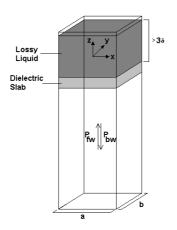



Figure 5. Geometry used for waveguide calibration (after Ref [2]. Section A.3.2.2)



#### **PROBE CALIBRATION PROCEDURE - Continued**

## REFERENCES

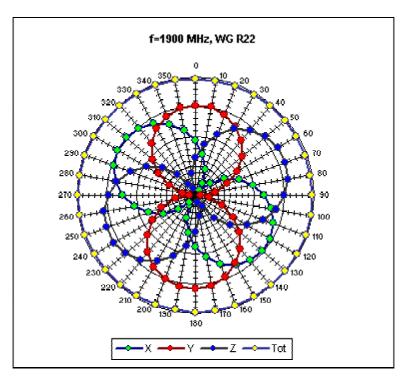

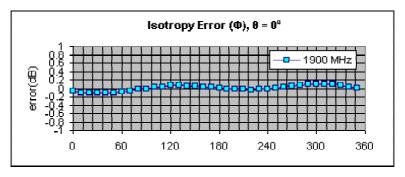

**Figure 6.** Example of the rotational isotropy of probe S/N 0084 obtained by rotating the probe in a liquid-filled waveguide at 1800 MHz. Similar distributions are obtained at the other test frequencies (900, 1900 and 2450 MHz) both in brain liquids and body fluids (see summary table)

FCC ID: H9PMC9060B IC: 1549D-MC9060B



## 2.6 SAR MEASUREMENT SYSTEM

#### **PROBE CALIBRATION PROCEDURE - Continued**

## REFERENCES


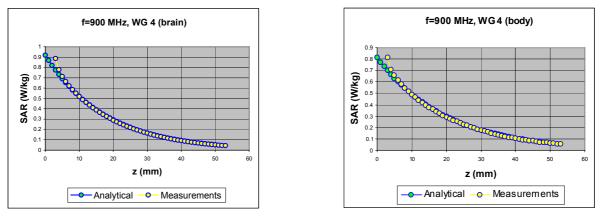


Figure 7. The measured SAR decay function along the centreline of the WG4 waveguide with conversion factors adjusted to fit to the theoretical function for the particular dimension, frequency, power and liquid properties employed.



**Figure 8.** The measured SAR decay function along the centreline of the R22 waveguide with conversion factors adjusted to fit to the theoretical function for the particular dimension, frequency, power and liquid properties employed.

FCC ID: H9PMC9060B IC: 1549D-MC9060B

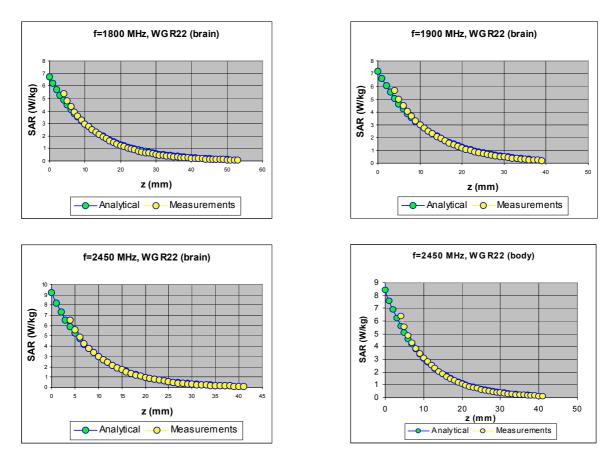

## 2.6 SAR MEASUREMENT SYSTEM

## PROBE CALIBRATION PROCEDURE - Continued

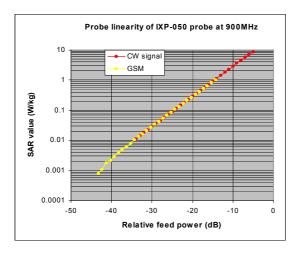


Figure 9. The GSM response of an IXP-050 probe at 900MHz





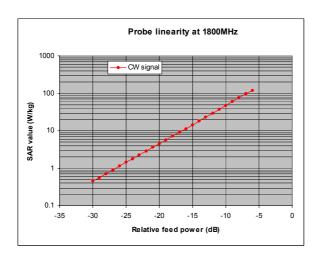


Figure 9b. The actual CW response of IXP-050 probe SN0084 up to 100W/kg

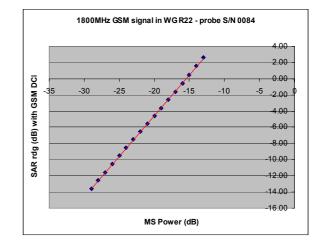



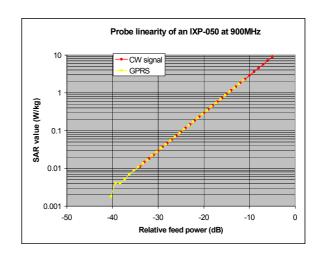




## FCC ID: H9PMC9060B IC: 1549D–MC9060B



## 2.6 SAR MEASUREMENT SYSTEM

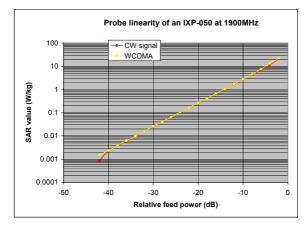

#### Probe linearity of an IXP-050 at 1900MHz 10 - CW signal CDMA IS95A 1 SAR value (W/kg) 0.1 0.01 -40 -35 -30 -25 -20 -15 -10 -5 0 Relat feed power r (dB)

Figure 11.	The WCDMA response of an IXP-050 probe
	at 1900MHz.

Figure 12. The CDMA IS95A response of an IXP-050 prob	be
at 1900MHz.	

# TABLE INDICATING THE DIELECTRIC PARAMETERS OF THE LIQUIDS USED FOR CALIBRATIONS AT EACH FREQUENCY

Liquid used	Relative permittivity (measured)	Conductivity (S/m) (measured)
900 MHz BRAIN	41.8	1.00
900 MHz BODY	57.5	1.031
1800 MHz BRAIN	38.64	1.38
1800 MHz BODY	54.3	1.587
1900 MHz BRAIN	38.12	1.47
1900 MHz BODY	52.97	1.46
2450 MHz BRAIN	38.67	1.881
2450 MHz BODY	52.19	1.949

## **PROBE CALIBRATION PROCEDURE - Continued**



## SAR MEASUREMENT PROCEDURE

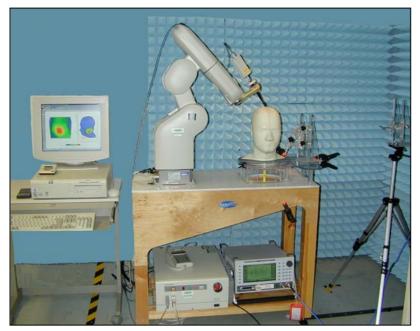


Figure 13: Principal components of the SAR measurement test bench

The major components of the test bench are shown in the picture above. A test set and dipole antenna control the handset via an air link and a low-mass phone holder can position the phone at either ear. Graduated scales are provided to set the phone in the 15 degree position. The upright phantom head holds approx. 7 litres of simulant liquid. The phantom is filled and emptied through a 45mm diameter penetration hole in the top of the head.

After an area scan has been done at a fixed distance of 8mm from the surface of the phantom on the source side, a 3D scan is set up around the location of the maximum spot SAR. First, a point within the scan area is visited by the probe and a SAR reading taken at the start of testing. At the end of testing, the probe is returned to the same point and a second reading is taken. Comparison between these start and end readings enables the power drift during measurement to be assessed.

## SARA2 Interpolation and Extrapolation schemes

SARA2 software contains support for both 2D cubic B-spline interpolation as well as 3D cubic B-spline interpolation. In addition, for extrapolation purposes, a general n<sup>-th</sup> order polynomial fitting routine is implemented following a singular value decomposition algorithm presented in [4]. A 4<sup>th</sup> order polynomial fit is used by default for data extrapolation, but a linear-logarithmic fitting function can be selected as an option. The polynomial fitting procedures have been tested by comparing the fitting coefficients generated by the SARA2 procedures with those obtained using the polynomial fit functions of Microsoft Excel when applied to the same test input data.

#### Interpolation of 2D area scan

The 2D cubic B-spline interpolation is used after the initial area scan at fixed distance from the phantom shell wall. The initial scan data are collected with approx. 10mm spatial resolution and spline interpolation is used to find the location of the local maximum to within a 1mm resolution for positioning the subsequent 3D scanning.



#### SAR MEASUREMENT PROCEDURE - Continued

#### Extrapolation of 3D scan

For the 3D scan, data are collected on a spatially regular 3D grid having (by default) 6.4 mm steps in the lateral dimensions and 3.5 mm steps in the depth direction (away from the source). SARA2 enables full control over the selection of alternative step sizes in all directions.

The digitised shape of the head is available to the SARA2 software, which decides which points in the 3D array are sufficiently well within the shell wall to be 'visited' by the SAR probe. After the data collection, the data are extrapolated in the depth direction to assign values to points in the 3D array closer to the shell wall. A notional extrapolation value is also assigned to the first point outside the shell wall so that subsequent interpolation schemes will be applicable right up to the shell wall boundary.

#### Interpolation of 3D scan and volume averaging

The procedure used for defining the shape of the volumes used for SAR averaging in the SARA2 software follow the method of adapting the surface of the 'cube' to conform with the curved inner surface of the phantom (see Appendix C.2.2.1 in EN 50361). This is called, here, the conformal scheme.

For each row of data in the depth direction, the data are extrapolated and interpolated to less than 1mm spacing and average values are calculated from the phantom surface for the row of data over distances corresponding to the requisite depth for 10g and 1g cubes. This results in two 2D arrays of data, which are then cubic B-spline interpolated to sub mm lateral resolution. A search routine then moves an averaging square around through the 2D array and records the maximum value of the corresponding 1g and 10g volume averages. For the definition of the surface in this procedure, the digitised position of the headshell surface is used for measurement in head-shaped phantoms. For measurements in rectangular, box phantoms, the distance between the phantom wall and the closest set of gridded data points is entered into the software.

For measurements in box-shaped phantoms, this distance is under the control of the user. The effective distance must be greater than 2.5mm as this is the tip-sensor distance and to avoid interface proximity effects, it should be at least 5mm. A value of 6 or 8mm is recommended. This distance is called **dbe** in EN 50361.

For automated measurements inside the head, the distance cannot be less than 2.5mm, which is the radius of the probe tip and to avoid interface proximity effects, a minimum clearance distance of x mm is retained. The actual value of dbe will vary from point to point depending upon how the spatially-regular 3D grid points fit within the shell. The greatest separation is when a grid point is just not visited due to the probe tip dimensions. In this case the distance could be as large as the step-size plus the minimum clearance distance (i.e with x=5 and a step size of 3.5, **dbe** will be between 3.5 and 8.5mm).

The default step size (**dstep** in EN 50361) used is 3.5mm, but this is under user-control. The compromise is with time of scan, so it is not practical to make it much smaller or scan times become long and power-drop influences become larger.

The robot positioning system specification for the repeatability of the positioning (**dss** in EN50361) is +/- 0.04mm.



## SAR MEASUREMENT PROCEDURE - Continued

The phantom shell is made by an industrial moulding process from the CAD files of the SAM shape, with both internal and external moulds. For the upright phantoms, the external shape is subsequently digitised on a Mitutoyo CMM machine (Euro C574) to a precision of 0.001mm. Wall thickness measurements made non-destructively with an ultrasonic sensor indicate that the shell thickness (**dph**) away from the ear is 2.0 +/- 0.1mm. The ultrasonic measurements were calibrated using additional mechanical measurements on available cut surfaces of the phantom shells.

For the upright phantom, the alignment is based upon registration of the rotation axis of the phantom on its 253mm-diameter baseplate bearing and the position of the probe axis when commanded to go to the axial position. A laser alignment tool is provided (procedure detailed elsewhere). This enables the registration of the phantom tip (**dmis**) to be assured to within approx. 0.2mm. This alignment is done with reference to the actual probe tip after installation and probe alignment. The rotational positioning of the phantom is variable – offering advantages for special studies, but locating pins ensure accurate repositioning at the principal positions (LH and RH ears).

FCC ID: H9PMC9060B IC: 1549D–MC9060B



## 2.7 TEST POSITIONS

OET65(c) FLAT PHANTOM TEST POSITIONS – GRAPHICAL REPRESENTATION

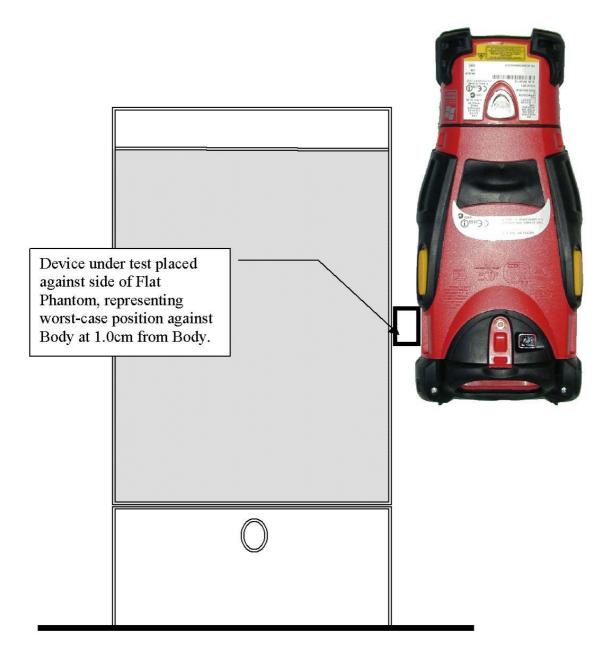


Figure 14. – MC9060 Test Position for WLAN Mode; 1.0 cm from phantom side

FCC ID: H9PMC9060B IC: 1549D–MC9060B



## 2.7 TEST POSITIONS

OET65(c) FLAT PHANTOM TEST POSITIONS - GRAPHICAL REPRESENTATION

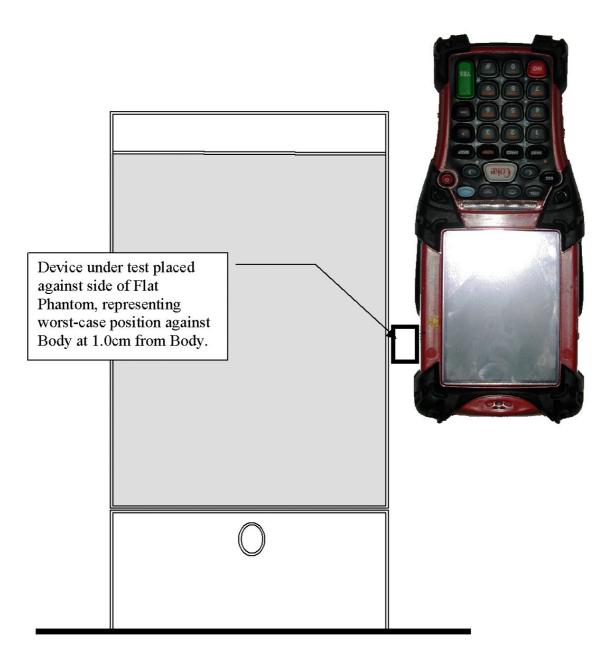


Figure 15. – MC9060 Test Position for Bluetooth Mode; 1.0 cm from phantom side



# 2.8 TEST RESULTS INCLUDING SAR DISTRIBUTIONS (AREA SCANS – 2D)

Phantom Rotation (deg): 0Liquid Ambient: 23.0 °CTest Position: 1.0 cm from sideMax SAR 'Y' Axis Location: 14.0 mmAntenna Position: IntegratedMax SAR 'Z' Axis Location: 128.5 mmTest Frequency	Test Position 1.0 cm from s Antenna Position Integrated Test Frequency 2412 MHz Radio Module / Test Mode RLAN / CW Crest Factor 1.0	Battery Model 21-62960-01   Probe Serial Number IXP-050 0084   Liquid Simulant 2450 MHz Bod   Permittivity 51.32   Conductivity 2027   Liquid Ambient 23.0 °C   Max SAR 'Y' Axis Location 14.0 mm   Max SAR 'Z' Axis Location -128.5 mm   SAR 1g 0.267 W/kg   SAR 10g 0.123 W/kg   SAR Drift -0.116 dB
--	---	--

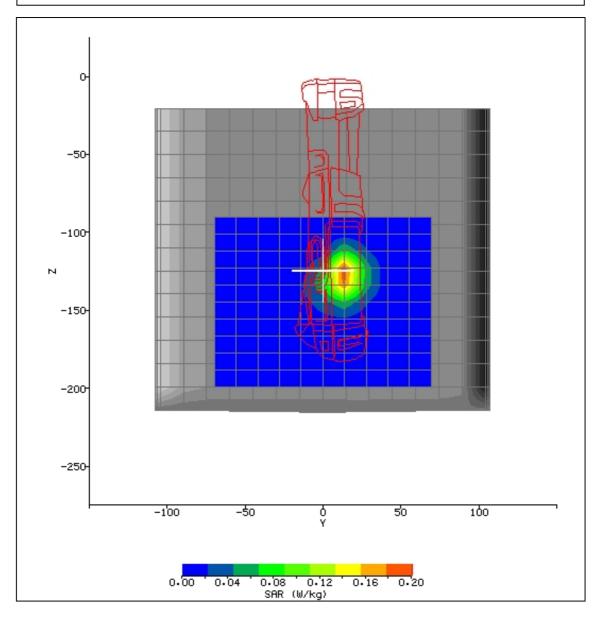


Figure 16



# 2.8 TEST RESULTS INCLUDING SAR DISTRIBUTIONS (AREA SCANS – 2D)

System : IndexSAR SARA2   Date of Test : 19/11/03   Lab Ambient : 23.3 °C   Device ID : MC9060   Phantom : Flat   Phantom Rotation (deg) : 0   Test Position : 1.0 cm from side   Antenna Position : Integrated   Test Frequency : 2437 MHz   Radio Module / Test Mode : RLAN / CW   Crest Factor : 1.0   Diode Compression factor : 20:20:20	Power Drift
---	-------------

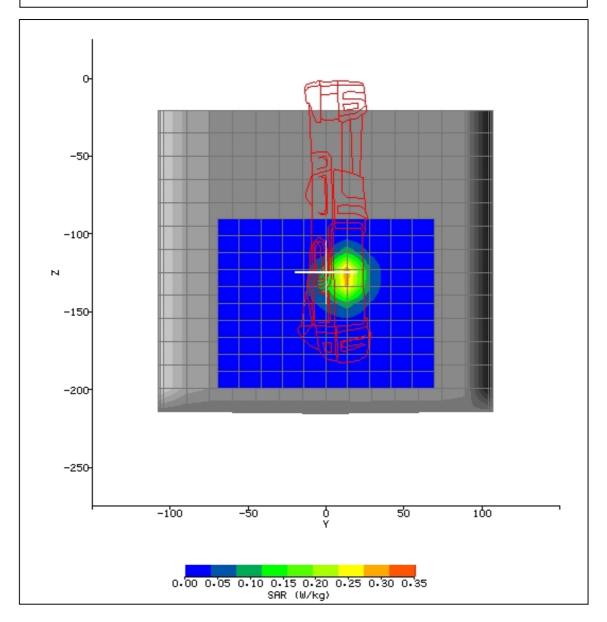


Figure 17



# 2.8 TEST RESULTS INCLUDING SAR DISTRIBUTIONS (AREA SCANS – 2D)

System : IndexSAR SARA2   Date of Test : 19/11/03   Lab Ambient : 23.3 °C   Device ID : MC9060   Phantom : Flat   Phantom S/No : 2mmb   Phantom Rotation (deg) : 0   Test Position : 1.0 cm from side   Antenna Position : Integrated   Test Frequency : 2462 MHz   Radio Module / Test Mode : RLAN / CW   Crest Factor : 1.0   Diode Compression factor : 20;20;20	Power Drift
---	-------------

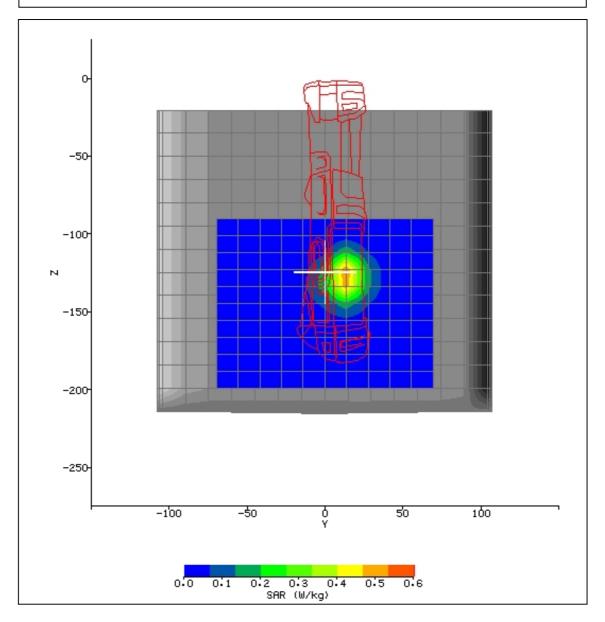


Figure 18



## 2.8

# TEST RESULTS INCLUDING SAR DISTRIBUTIONS (AREA SCANS – 2D)

System	19/11/03 23.0°C MC9060 Flat 2mmb 0 1.0 cm from side Integrated 2472 MHz RLAN / CW	Power Drift Battery Model Probe Serial Number Liquid Simulant Permittivity Conductivity Liquid Ambient Max SAR 'Y' Axis Location Max SAR 'Z' Axis Location SAR 1g SAR 10g SAR Drift	: 21-62960-01 : IXP-050 0084 : 2450 MHz Body( : 51.32 : 2.027 : 23.0°C : 14mm : -128.5mm : <b>0.911 W/kg</b> : <b>0.417 W/kg</b>
Crest Factor	-	SAR Drift	
Diode Compression factor :	20;20;20	Probe Conversion Factors	

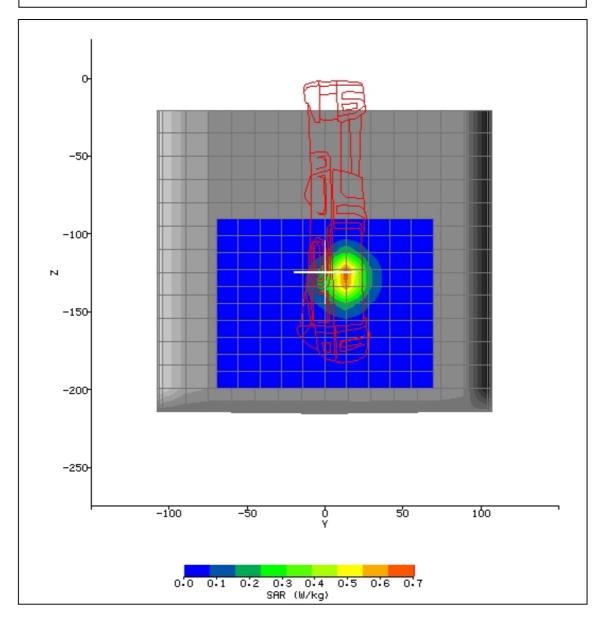


Figure 19



#### 2.8 TEST RESULTS INCLUDING SAR DISTRIBUTIONS (AREA SCANS – 2D)

System: IndexSAR SARA2 Date of Test: 19/11/03 Lab Ambient: 22.7 °C Device ID: MC9060 Phantom: Head SAM Phantom S/No: 04/02 FT 04 Phantom Rotation (deg): 330 Test Position: Headset Left Cheek Antenna Position: Integrated Test Frequency: 2462 MHz Radio Module / Test Mode: RLAN / CW	Power Drift
Crest Factor: 1.0	SAR Drift: <b>0.0dB</b>
Diode Compression factor : 20;20;20	Probe Conversion Factors: 0.468

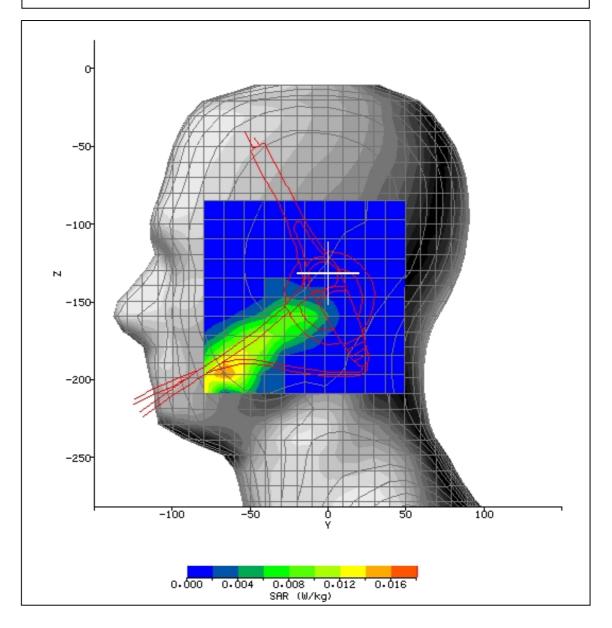


Figure 20



### 2.8 TEST RESULTS INCLUDING SAR DISTRIBUTIONS (AREA SCANS – 2D)

Lab Ambient22.1 °CProDevice IDMC9060LicPhantomFlatPePhantom S/No2mmbCcPhantom Rotation (deg): 0LiqTest Position1.0 cm from sideAntenna PositionIntegratedTest Frequency2402 MHzRadio Module / Test ModeBluetooth / CWCrest Factor1.0SA	attery Model 21-62960-01   robe Serial Number IXP-050 0084   iquid Simulant 2450 MHz Body   ermittivity 51.32   conductivity 23.0 °C   lax SAR 'Y' Axis Location -16.8 mm   lax SAR 'Z' Axis Location -128.5 mm   AR 1g 0.259 W/kg   AR 10g 0.121 W/kg   AR Drift -0.060 dB
	AR Drift: <b>-0.060 dB</b> robe Conversion Factors: 0.468

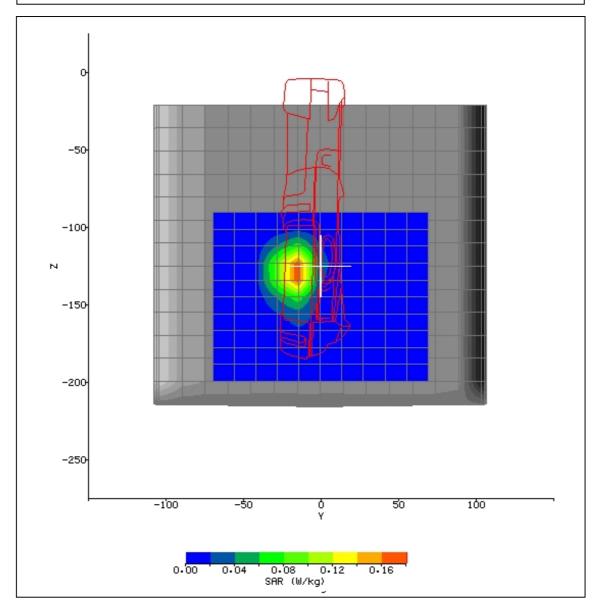


Figure 21



## 2.8 TEST RESULTS INCLUDING SAR DISTRIBUTIONS (AREA SCANS – 2D)

System: IndexSAR SARA2Date of Test: 19/11/03Lab Ambient: 23.3 °CDevice ID: MC9060Phantom: FlatPhantom Rotation (deg): 0Test Position: 1.0 cm from sideAntenna Position: IntegratedTest Frequency: 2441 MHzRadio Module / Test Mode: Bluetooth / CWCrest Factor: 1.0Diode Compression factor: 20;20;20	Power Drift
---	-------------

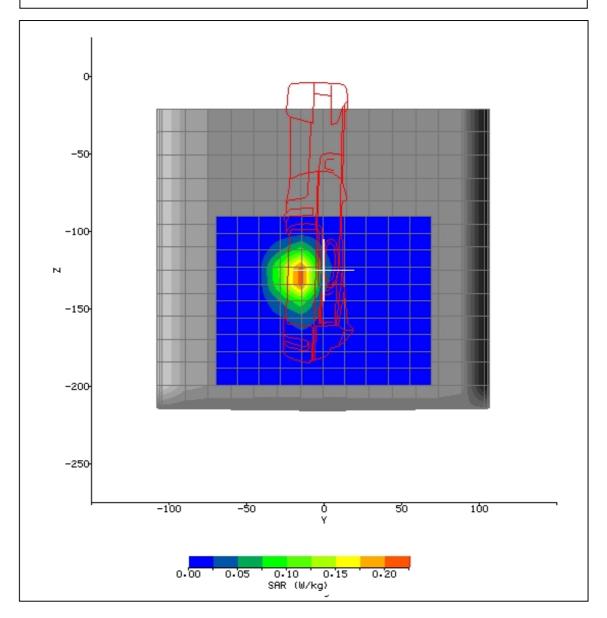


Figure 22



#### 2.8 TEST RESULTS INCLUDING SAR DISTRIBUTIONS (AREA SCANS – 2D)

System: IndexSAR SARA2Date of Test: 19/11/03Lab Ambient: 23.0°CDevice ID: MC9060Phantom: FlatPhantom S/No: 2mmbPhantom Rotation (deg): 0Test Position: 1.0 cm from sideAntenna Position: IntegratedTest Frequency: 2480 MHzRadio Module / Test Mode: Bluetooth / CWCrest Factor: 1.0Diode Compression factor: 20:20:20	Power Drift
--	-------------

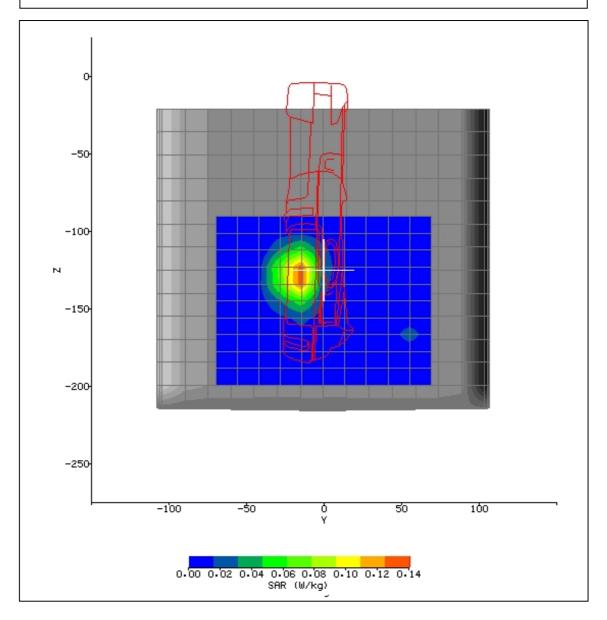


Figure 23



### 2.8 TEST RESULTS INCLUDING SAR DISTRIBUTIONS (AREA SCANS – 2D)

System Date of Test Lab Ambient Device ID Phantom Phantom S/No Phantom Rotation (deg) Test Position Antenna Position Test Frequency Radio Module / Test Mode Crest Factor	: 19/11/03 : 23.4°C : MC9060 : Head SAM : 04/02 FT 04 : 0 : Touch Left Cheek : Integrated : 2441 MHz : Bluetooth / CW	Power Drift Battery Model Probe Serial Number Liquid Simulant Permittivity Conductivity Liquid Ambient Max SAR 'Y' Axis Location Max SAR 'Z' Axis Location SAR 1g SAR 10g SAR Drift	: 21-62960-01 :IXP-050 0084 : 2450 MHz Head : 36.88 : 1.889 : 23.2°C : -56.6 mm : -185.0 mm : <b>0.013 W/kg</b> : <b>0.007 W/kg</b>
Crest Factor		SAR Tog	
Diode Compression factor		Probe Conversion Factors	

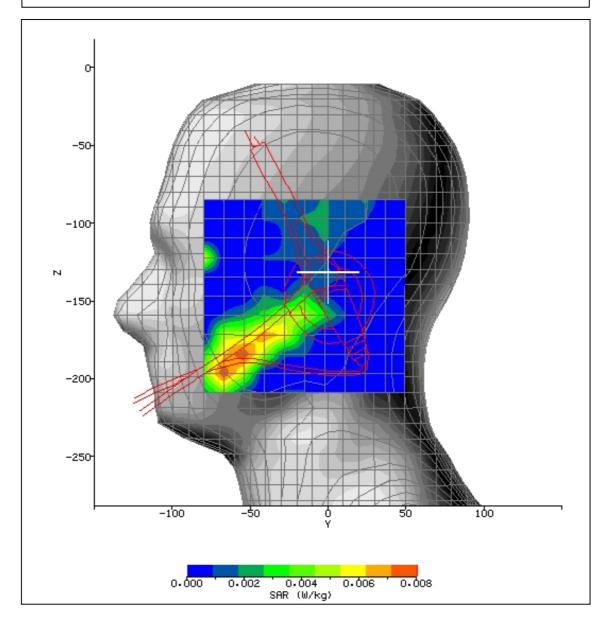


Figure 2	4
----------	---



# 2.9 TEST POSITIONAL PHOTOGRAPHS



Figure 25. Positional photograph of the MC9060 left-hand side at 1.0cm from Phantom side



Figure 26. Positional photograph of the MC9060 Right-hand side at 1.0cm from Phantom side



Figure 27. Positional photograph of the MC9060 with Headset connected and placed against the SAM Phantom in the left-hand Cheek Position.







Figure 28. Front view








Figure 29. Rear view



## 2.10 RECORD PHOTOGRAPHS



Figure 30. View – with Battery Removed



# 2.10 RECORD PHOTOGRAPHS



Figure 31. Headset



## 2.10 RECORD PHOTOGRAPHS



Figure 32. Front View



## 2.10 RECORD PHOTOGRAPHS



Figure 33. Front View



#### 2.11 USER INFORMATION

The holster in normal operation will be placed on the belt at the side of the body. This position has been assessed for SAR compliance.

The following SAR statement will be included in the Regulatory Guide for the MC9060.

<sup>6</sup> This device was tested for typical body-worn operation. A minimum separation distance of 1.0 cm must be maintained between this device and the body. The use of third-party belt-clips, holsters, and similar accessories should not contain metallic components in its assembly. The use of these accessories that do not satisfy these requirements may not comply with FCC RF exposure compliance requirements, and should not be used.'



## 2.12 <u>COPYRIGHT</u>

#### © 2003 TUV Product Service Limited

This report must not be reproduced without the written permission of TUV Product Service Limited.