

**Kannad Marine
Safelink R10 SRS
Survivor Recovery System**



The antenna is folded and retained under the red Activation Cap



the Programming Label is mounted on one side



the Product Label is mounted on the other side





ARMED - the orange Arming Tab has been removed




DEPLOYED - the red Activation Cap has been pulled causing the antenna to deploy and the beacon to activate






The beacon may be attached to a lifejacket using the Oral Tube Clip, shown here, or using the Webbing Clip, see next page.

The Oral Tube Clip is assembled to the Oral Tube Clip Back Plate, - left-handed or right-handed as required - before the Back Plate is assembled to the beacon body.

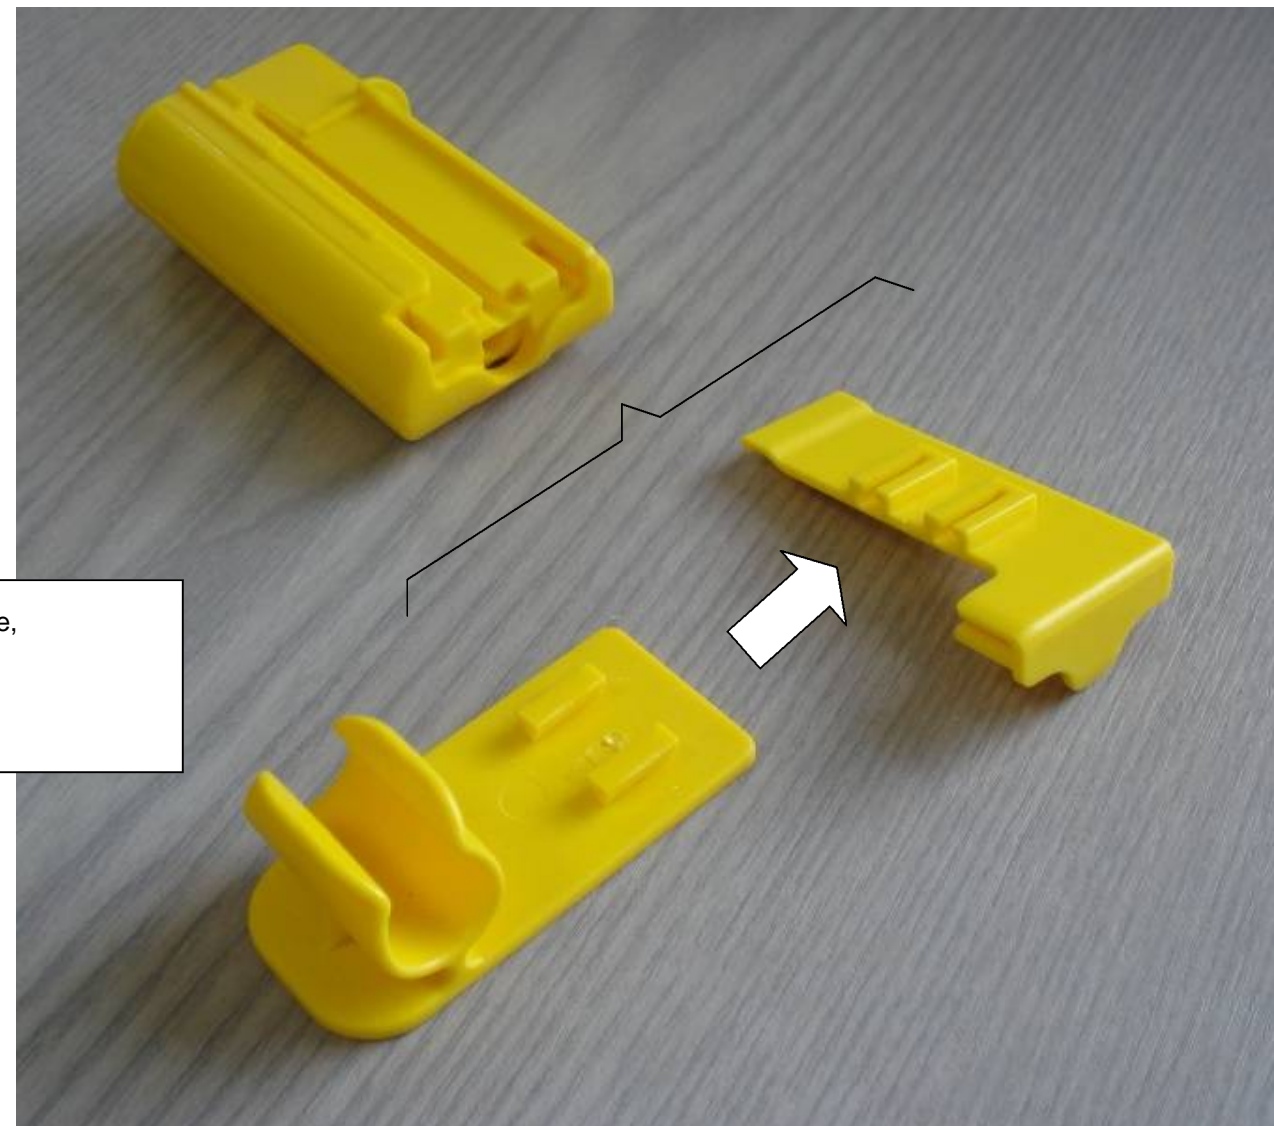

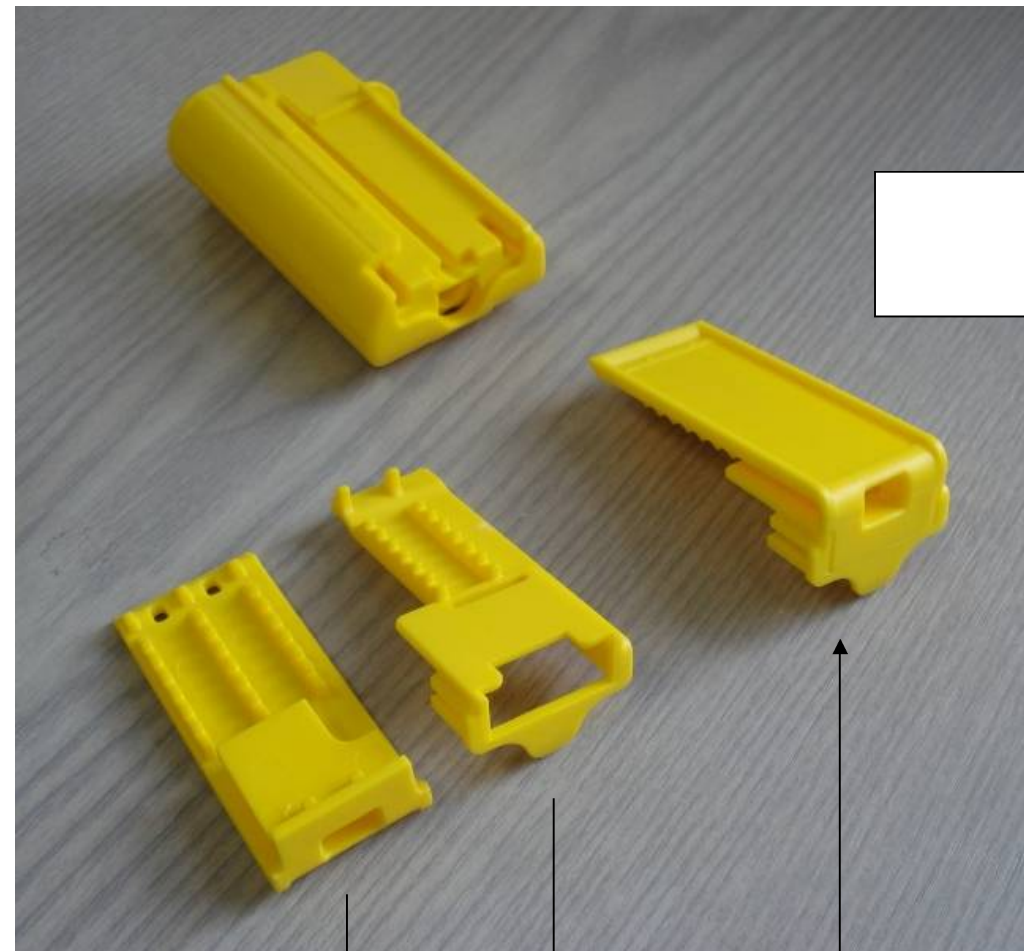

The Webbing Clip is assembled to the Webbing Clip Back Plate,
before the Back Plate is assembled to the beacon body.

