

## Pull Cord Station

The Pull Cord Station is used with the Quick Response® Wireless Call Solution. This wireless device can be mounted in a resident's room or bathroom, as well as in common areas such as activity rooms and wellness rooms.

When used with the Code Alert™ computer-based system, an optional Check-In button can be used by residents to "check in" with staff remotely, eliminating the need for staff rounds. Alternatively, it can be used by staff to record the number of times they were in the room assisting a resident. This information can then be used to compare times and quantity of services offered to a resident.

### Benefits:

#### Easy to Use


The Pull Cord Station allows residents to easily summon help with the pull of the cord. When the cord is pulled, a visual display "flag" appears assuring them that help was called for. A simple reset of the Pull Cord sends a reset message to the Wireless Call Solution and its pagers.

#### Aesthetically Pleasing Design

The low profile faceplate design of the Pull Cord blends in seamlessly with the wall and other decor. The red pull string aids in assisting residents with poor eyesight when calling for help.

#### Stationary Yet Portable

The Pull Cord operates on a self-contained battery, making installation or relocation of the Pull Cord Station very easy. When the battery is low, staff is continuously notified until the battery is changed.

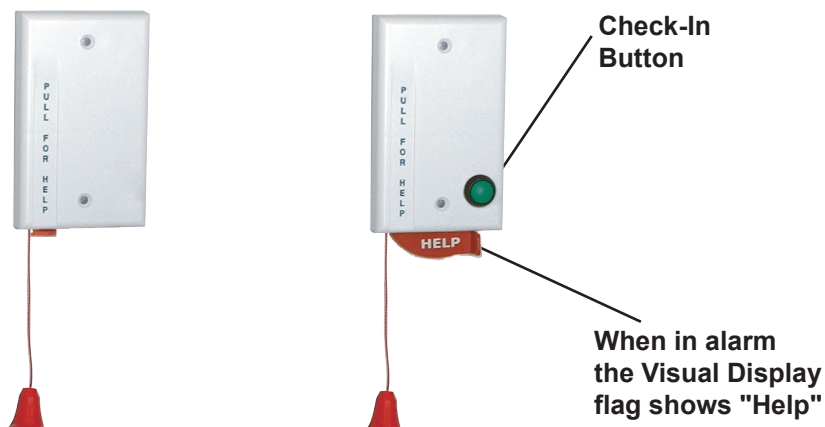

### Features

- Advanced 2.4 GHz Direct Sequence Spread Spectrum Technology
- Fully supervised with continuous reassurance of proper operation
- Optional check-in feature allows staff and residents to record non-alarm events in the computer system
- Water resistant design allows for installation near showers and tubs

### Specifications

#### Size

Flush mount:  
4.5"H x 2.7"W x .56"D  
(11.4cm x 6.7cm x 1.4cm)

Surface Mount:  
4.5"H x 2.7"W x 2.31"D  
(11.4cm x 6.7cm x 5.7cm)

#### Weight

2.9 oz. (82.21g)

#### Power

3.0V Lithium battery

#### Battery Life

4-5 years

#### Frequency

2.4 GHz Direct Sequence  
Spread Spectrum

#### Frequency Range

2.405Hz - 2.480 GHz

#### Bandwidth

5 MHz

#### Transmit Power

0 dBm

#### Certification

FCC, Part 15  
Zigbee 802.15.4 compliant

#### Color

White

#### Mounting Options

Surface Mount:  
Fits into a single gang surface  
plastic enclosure

Flush Mount:  
Fits into a 20 square Inch non-metallic  
retrofit electrical box or into a 4" square  
non-metallic junction box with a single  
gang plaster ring.

RFTechnologies™

3125 N. 126th St. Brookfield, WI 53005

1-800-669-9946 • 262-790-1771 • Fax: 262-790-1784

www.rft.com • info@rft.com