

# **Certification Report on**

Specific Absorption Rate (SAR) Experimental Analysis

# Research in Motion LTD.

**BlackBerry Wireless Handheld** 

Test Date: April 2001





RIMB-BlackBerry Wireless Handheld-3607

51 Spectrum Way Nepean ON K2R 1E6 Tel: (613) 820-2730 Fax: (613) 820-4161

email: info@aprel.com



## CERTIFICATION REPORT

Subject:

Specific Absorption Rate (SAR) Experimental Analysis

Product:

BlackBerry Wireless Handheld

Model:

R1900G-1-4

Client:

Research In Motion Limited

Address:

295 Phillip St.

Waterloo, Ontario Canada N2L 3W8

Project #:

RIMB-BlackBerry Wireless Handheld-3706

Prepared by

APREL Laboratories

51 Spectrum Way Nepean, Ontario

K2R 1E6

Approved by

Stuart Nicol

Director Product Development, Dosimetric R&D

Submitted by

Jay Sarkar Technical Director of Standards & Certification

Released by

Dr. Jacek J. Wojcik, P. Eng.

Date: Apri

Page 1 of 18

51 Spectrum Way Nepean, Ontario, K2R 1E6

Project #: RIMB-BlackBerry Wireless Handheld-3706 Tel. (613) 820-2730 Fax (613) 820 4161

e-mail: info@aprel.com

142-BlackBerr

© APREL 2000 This report shall not be reproduced, except in full,



FCC ID: L6AR1900G-1-4

Applicant: Research In Motion LTD. Equipment: BlackBerry Wireless Handheld

Model: R1900G-1-4

Standard: FCC 96 –326, Guidelines for Evaluating the Environmental Effects of Radio-

Frequency Radiation

### **ENGINEERING SUMMARY**

This report contains the results of the engineering evaluation performed on the RIM BlackBerry Wireless Handheld operating in PCS mode. The measurements were carried out in accordance with FCC 96-326. The RIM BlackBerry Wireless Handheld was evaluated for its maximum power level 31.4 dBi (EIRP) with a 12.5 % duty cycle.

The RIM BlackBerry Wireless Handheld is intended to be used in the hand as well as in the belt clip, ASY-02363-001, for body-worn operation.

The RIM BlackBerry Wireless Handheld was tested in PCS mode at low, middle and high channels for hand exposure on the keyboard up, keyboard down, and left sides. The maximum 10g SAR (1.45 W/kg) was found to coincide with the peak performance RF output power of channel 512 (1850.2MHz) for the left side of the device. (The hot spot is located on the antenna).

The RIM BlackBerry Wireless Handheld was also tested at low, middle and high channels in PCS mode for body exposure on the keyboard up side and bystander exposure on the keyboard down side. The maximum 1g SAR (without the belt clip) for bystander exposure (0.99 W/kg) was found to coincide with the peak performance RF output power of channel 661 (1880 MHz) for the keyboard down side of the device. The maximum 1g SAR with the pager attached to the belt clip (0.12 W/kg) was found to coincide with the peak performance RF output power of channel 512 (1850.2 MHz) for the keyboard up side of the device. (The hot spot is located on the antenna).

The RIM BlackBerry Wireless Handheld was also tested with three different headsets, HDW-03458-001, HDW-03458-002, and, HDW-03458-003. It was found that the conservative SAR was lower while each of the headsets were attached.

Based on the test results and on how the device will be marketed and used, it is certified that the product meets the requirements as set forth in the above specifications, for the RF exposure environment.

(The results presented in this report relate only to the sample tested.)

Page 2 of 18 51 Spectrum Way Nepean, Ontario, K2R 1E6 Project #: RIMB-BlackBerry Wireless Handheld-3706 Tel. (613) 820-2730 Fax (613) 820 4161

e-mail: info@aprel.com



### **Table of Contents**

1.	Introduction	4
2.	Applicable Documents	4
3.	Device Under Investigation	4
4.	Test Equipment	5
5.	Test Methodology	5
6.	Test Results	6
6.	5.1. Transmitter Characteristics	6
6.	5.2. SAR Measurements	7
7.	User's Hand Exposure	9
8.	Body-Worn Exposure	9
9.	Bystander Exposure	10
10.	Conclusions	
APP	PENDIX A. Measurement Setup, Tissue Properties and SAR Graphs	13
APP	PENDIX B. Uncertainty Budget	16
APP	PENDIX C. Validation Scan on a Flat Phantom	18
APP	PENDIX D. Probe Calibration	19
TAI	BLES AND FIGURES	
Tabl	ole 1. Sampled RF Power	6
Tabl	ole 2. SAR Measurements	8
Figu	ure 1. Setup	13
Tabl	ole 3. Dielectric Properties of the Simulated Muscle Tissue at 1900 MHz	13
Figu	ure 2. Contour Plot of the Area Scan 2.5mm Above Phantom Surface (Body Ex	posure).14
Figu	ure 3. Surface Plot of the Area Scan 2.5mm Above Phantom Surface (Body Exp	posure)14
Figu	ure 4. Contour Plot of the Area Scan 2.5mm Above Phantom Surface (Hand Ex	
	(View screen is facing down on right side)	15
Figu	ure 5. Surface Plot of the Area Scan 2.5mm Above Phantom Surface (Hand Exp	posure)15
	ble 4. Uncertainty Budget (1 gram, bystander)	
	No. 5. Uncontainty Dydgat (10 arom, hand)	
	ble 5. Uncertainty Budget (10 gram, hand)	
	ole 6. Uncertainty Budget (1 gram, body)	17
		17 18

Page 3 of 18 51 Spectrum Way Nepean, Ontario, K2R 1E6





#### 1. INTRODUCTION

Tests were conducted to determine the Specific Absorption Rate (SAR) for a sample RIM BlackBerry Wireless Handheld transceiver. These tests were conducted at APREL Laboratories' facility located at 51 Spectrum Way, Nepean, Ontario, Canada. A view of the SAR measurement setup can be seen in Appendix A Figure 1. This report describes the results obtained.

#### 2. APPLICABLE DOCUMENTS

The following documents are applicable to the work performed:

- 1) FCC 96-326, Guidelines for Evaluating the Environmental Effects of Radio-Frequency Radiation
- 2) ANSI/IEEE C95.1-1999, IEEE Standard for Safety Levels with Respect to Human Exposure to Radio Frequency Electromagnetic Fields, 3 kHz to 300 GHz.
- 3) ANSI/IEEE C95.3-1992, IEEE Recommended Practice for the Measurement of Potentially Hazardous Electromagnetic Fields – RF and Microwave.
- 4) OET Bulletin 65 (Edition 97-01) Supplement C (Edition 97-01), "Evaluating Compliance with FCC Guidelines for Human Exposure to Radio Frequency Electromagnetic Fields".

#### 3. DEVICE UNDER INVESTIGATION

RIM BlackBerry Wireless Handheld s/n 003SB-008, received on April 4, 2001.

The RIM BlackBerry Wireless Handheld will be called DUI (Device Under Investigation) in the following.

Refer to the manufacturer's submission documentation for drawings and more design details.

Page 4 of 18 51 Spectrum Way Nepean, Ontario, K2R 1E6 Project #: RIMB-BlackBerry Wireless Handheld-3706 Tel. (613) 820-2730 Fax (613) 820 4161

without the express written approval of APREL Laboratories.

e-mail: info@aprel.com



#### 4. TEST EQUIPMENT

- APREL Triangular Dosimetric Probe Model E-009, s/n 115, Asset # 301420
- CRS Robotics A255 articulated robot arm, s/n RA2750, Asset # 301335
- CRS Robotics C500 robotic system controller, s/n RC584, Asset # 301334
- Wavetek communication test instrument 4400M. s/n 1011020511057
- Tissue Recipe and Calibration Requirements, APREL procedure SSI/DRB-TP-D01-033

#### 5. TEST METHODOLOGY

- 1. The test methodology utilized in the certification of the DUI complies with the requirements of FCC 96-326 and ANSI/IEEE C95.3-1992.
- 2. The E-field is measured with a small isotropic probe (output voltage proportional to  $E^2$ ).
- 3. The probe is moved precisely from one point to the next using the robot (10 mm increments for wide area scanning, 5 mm increments for zoom scanning, and 2.5 mm increments for the final depth profile measurement).
- 4. The probe travels in the homogeneous liquid simulating human tissue. Appendix A contains information about the properties of the simulated tissue used for these measurements.
- 5. The liquid is contained in a manikin simulating a portion of the human body with an overall shell thickness of 3 mm.
- 6. The DUI is positioned with the surface under investigation against the phantom.
- 7. All tests were performed with the highest power available from the sample DUI under transmit conditions.

More detailed descriptions of the test method are given in Section 6 where appropriate.

Page 5 of 18 51 Spectrum Way Nepean, Ontario, K2R 1E6 Project #: RIMB-BlackBerry Wireless Handheld-3706 Tel. (613) 820-2730

Fax (613) 820 4161 e-mail: info@aprel.com



#### **TEST RESULTS** 6.

#### 6.1. TRANSMITTER CHARACTERISTICS

The battery-powered DUI will consume energy from its batteries, which may affect the DUI's transmission characteristics. In order to gage this effect the output Tx power of the transmitter is sampled before and after each SAR run. In the case of this DUI, the conducted power was sampled. The following table shows the conducted RF power sampled before and after each of the seven sets of data used for the worst case SAR in this report.

Scan		Power Read	dings (dBm)	D	Battery #
Type	Height (mm)	Before	After	(dB)	
Area	2.5	30.11	30.08	-0.03	5
Zoom	2.5	30.11	30.08	-0.03	3
Zoom	7.5	30.11	30.08	-0.03	3
Zoom	12.5	30.11	30.08	-0.03	3
Zoom	17.5	30.11	30.08	-0.03	3
Zoom	22.5	30.11	30.08	-0.03	3
Depth	2.5 - 22.5	30.03	30.14	+0.11	4

Table 1. Sampled RF Power

Page 6 of 18 51 Spectrum Way Nepean, Ontario, K2R 1E6



#### 6.2. SAR MEASUREMENTS

- 1) RF exposure is expressed as Specific Absorption Rate (SAR). SAR is calculated from the E-field, measured in a grid of test points as shown in Appendix A Figure 1. SAR is expressed as RF power per kilogram of mass, averaged in 10 grams of tissue for the extremities and 1 gram of tissue elsewhere.
- 2) The DUI was put into test mode for the SAR measurements by enabling a call via the Wavetek communications test instrument. A SIMM card was located in the DUI to enable the interaction between the Wavetek communications test instrument and the DUI. The Wavetek communications test instrument then sent out a command for the DUI to transmit at full power at the specified frequency.
- 3) Figures 2 and 4 in Appendix A show contour plots of the SAR measurements for the DUI (channel 512, 1850.2 MHz for body exposure) and (channel 512, 1850.2 MHz, left side for hand exposure). It also shows an overlay of the DUI's outlines, superimposed onto the contour plots.
  - A different presentation of the same data is shown in Appendix A Figures 3 and 5. These are surface plots, where the measured SAR values provide the vertical dimension, which is useful as a visualization aid.
- 4) Wide area scans were performed for the low, middle and high channels on the keyboard up, keyboard down, and left sides of the DUI. The DUI was operating at maximum output power 31.4 dBi (EIRP) and 12.5 % duty factor. The peak single point SAR for the scans were:

Page 7 of 18 51 Spectrum Way Nepean, Ontario, K2R 1E6



					Channel		Peak
TYPE OF EXPOSURE		Belt Clip	Headset	L/M/H	#	Freq (MHz)	Local SAR (W/kg)
	Keyboard up side	NO	No	Middle	661	1880	1.49
-	Keyboard up side	NO	No	Low	512	1850.2	1.18
	Keyboard up side	NO	No	High	810	1909.8	1.55
-	Keyboard up side	Yes	No	Middle	661	1880	0.21
-	Keyboard up side	Yes	No	Low	512	1850.2	0.36
Body & Hand	Keyboard up side	Yes	No	High	810	1909.8	0.13
Exposure	Keyboard up side	NO	HDW-03458-002	High	810	1909.8	1.39
	Keyboard up side	NO	HDW-03458-001	High	810	1909.8	1.41
_	Keyboard up side	NO	HDW-03458-003	High	810	1909.8	1.41
_	Keyboard down side	NO	No	Middle	661	1880	1.38
_	Keyboard down side	NO	No	Low	512	1850.2	1.27
_	Keyboard down side	NO	No	High	810	1909.8	1.42
	Left side	NO	No	Middle	661	1880	2.29
Hand Exposure	Left side	NO	No	Low	512	1850.2	2.66
	Left side	NO	No	High	810	1909.8	1.91
	Left side	NO	HDW-03458-002	Low	512	1850.2	2.57
	Left side	NO	HDW-03458-001	Low	512	1850.2	2.55
	Left side	NO	HDW-03458-003	Low	512	1850.2	2.55

**Table 2. SAR Measurements** 

Page 8 of 18 51 Spectrum Way Nepean, Ontario, K2R 1E6 Project #: RIMB-BlackBerry Wireless Handheld-3706 Tel. (613) 820-2730 Fax (613) 820 4161

e-mail: info@aprel.com without the express written approval of APREL Laboratories.



### 7. USER'S HAND EXPOSURE

All subsequent testing for user's hand exposure was performed on channel 512 (1850.2 MHz), with the left side of the DUI facing up against the bottom of the phantom. This relates to the position and frequency found to provide the maximum measured SAR value.

- 1) Channel 512 (1850.2 MHz) was then explored on a refined 5 mm grid in three dimensions. The SAR value averaged over 10 grams was determined from these measurements by averaging the 125 points (5x5x5) comprising a 2 cm cube. The maximum SAR value measured averaged over 10 grams was determined from these measurements to be 0.74 W/kg.
- 2) To extrapolate the maximum SAR value averaged over 10 grams to the inner surface of the phantom a series of measurements were made at five (x,y) coordinates within the refined grid as a function of depth, with 2.5 mm spacing. The average exponential coefficient was determined to be (-0.142± 0.006) / mm.
- 3) The distance from the probe tip to the inner surface of the phantom for the lowest point is 2.5 mm. The distance from the probe tip to the tip of the measuring dipole within the APREL Triangular Dosimetric Probe Model E-009 is 2.3 mm. The total extrapolation distance is 4.8 mm, the sum of these two.

Applying the exponential coefficient over the 4.8 mm to the maximum SAR value averaged over 10 grams that was determined previously, we obtain the maximum SAR value at the surface averaged over 10 grams, 1.45 W/kg.

### 8. BODY-WORN EXPOSURE

All subsequent testing for body exposure was performed on channel 512 (1850.2 MHz), with the keyboard up side of the DUI facing up against the bottom of the phantom and the DUI inserted into the belt clip. This relates to the position and frequency found to provide the maximum measured SAR value.

1) Channel 512 (1850.2 MHz) was also explored on a refined 5 mm grid in three dimensions. The SAR value averaged over 1 gram was determined from these measurements by averaging the 27 points (3x3x3) comprising a 1 cm cube. The maximum SAR value measured averaged over 1 gram was determined from these measurements to be 0.06 W/kg.

Page 9 of 18 51 Spectrum Way Nepean, Ontario, K2R 1E6 Project #: RIMB-BlackBerry Wireless Handheld-3706 Tel. (613) 820-2730 Fax (613) 820 4161

e-mail: info@aprel.com

© APREL 2000



- 2) To extrapolate the maximum SAR value averaged over 1 gram to the inner surface of the phantom a series of measurements were made at five (x,y) coordinates within the refined grid as a function of depth, with 2.5 mm spacing. The average exponential coefficient was determined to be  $(-0.124 \pm 0.006)$  / mm.
- 3) The distance from the probe tip to the inner surface of the phantom for the lowest point is 2.5 mm. The distance from the probe tip to the tip of the measuring dipole within the APREL Triangular Dosimetric Probe Model E-009 is 2.3 mm. The total extrapolation distance is 4.8 mm, the sum of these two.

Applying the exponential coefficient over the 4.8 mm to the maximum SAR value averaged over 1 gram that was determined previously, we obtain the maximum SAR value at the surface averaged over 1 gram, 0.12 W/kg.

#### 9. BYSTANDER EXPOSURE

All subsequent testing for bystander exposure was performed on channel 661 (1880 MHz), with the keyboard down side of the DUI facing up against the bottom of the phantom. This relates to the position and frequency found to provide the maximum measured SAR value.

- 1) Channel 661 (1880 MHz) was also explored on a refined 5 mm grid in three dimensions. The SAR value averaged over 1 gram was determined from these measurements by averaging the 27 points (3x3x3) comprising a 1 cm cube. The maximum SAR value measured averaged over 1 gram was determined from these measurements to be 0.53 W/kg.
- 2) To extrapolate the maximum SAR value averaged over 1 gram to the inner surface of the phantom a series of measurements were made at five (x,y) coordinates within the refined grid as a function of depth, with 2.5 mm spacing. The average exponential coefficient was determined to be  $(-0.129 \pm 0.006)$  / mm.
- 3) The distance from the probe tip to the inner surface of the phantom for the lowest point is 2.5 mm. The distance from the probe tip to the tip of the measuring dipole within the APREL Triangular Dosimetric Probe Model E-009 is 2.3 mm. The total extrapolation distance is 4.8 mm, the sum of these two.

Page 10 of 18 51 Spectrum Way Nepean, Ontario, K2R 1E6

Project #: RIMB-BlackBerry Wireless Handheld-3706

Tel. (613) 820-2730 Fax (613) 820 4161 e-mail: info@aprel.com

SINCE 1981 . CONSULTING . RESEARCH . TRAINING . CERTIFICATION TESTING



Applying the exponential coefficient over the 4.8 mm to the maximum SAR value averaged over 1 gram that was determined previously, we obtain the maximum SAR value at the surface averaged over 1 gram, 0.99 W/kg.

Project #: RIMB-BlackBerry Wireless Handheld-3706 Tel. (613) 820-2730

Fax (613) 820 4161 e-mail: info@aprel.com



### 10. CONCLUSIONS

The maximum Specific Absorption Rate (SAR) averaged over 10 grams, determined at 1850.2 (channel 512) of the RIM BlackBerry Wireless Handheld, is 1.45 W/kg. The overall margin of uncertainty for this measurement is ± 15.2 % (Appendix B). The SAR limit given in the FCC 96-326 Safety Guideline is 4 W/kg for hand exposure for the general population.

For a user exposing a part of the body other than the extremities, the maximum Specific Absorption Rate (SAR) averaged over 1gram is 0.12 W/kg while the DUI is attached to the belt clip. The SAR limit given in the FCC 96-326 Safety Guideline is 1.6 W/kg for uncontrolled partial body exposure of the general population. The overall margin of uncertainty for this measurement is ± 17.2 % (Appendix B). The SAR limit given in the FCC 96-326 Safety Guideline is 1.6 W/kg for body exposure for the general population.

For a bystander exposing a part of the body other than the extremities, at a separation distance of 0 cm from the device, the maximum Specific Absorption Rate (SAR) averaged over 1 g is 0.99 W/kg. The SAR limit given in the FCC 96-326 Safety Guideline is 1.6 W/kg for uncontrolled partial body exposure of the general population The overall margin of uncertainty for this measurement is ± 15.1 % (Appendix B).

Considering the above, this unit as tested, and as it will be marketed and used, is found to be compliant with the FCC 96-326 requirement.

Tested by

1 B

Date APRIL 24, 2001





Page 12 of 18 51 Spectrum Way Nepean, Ontario, K2R 1E6

© APREL 2000 This report shall not be reproduced, except in full, Project #: RIMB-BlackBerry Wireless Handheld-3706 Tel. (613) 820-2730 Fax (613) 820 4161 e-mail: info@aprel.com



### APPENDIX A. Measurement Setup, Tissue Properties and SAR Graphs

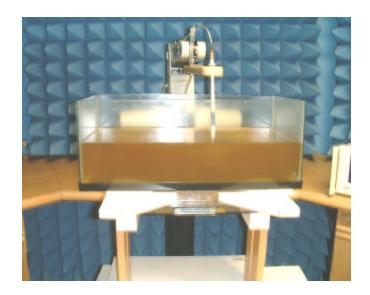




Figure 1. Setup Simulated Tissue Material and Calibration Technique

The mixture used was based on that presented in SSI/DRB-TP-D01-033, "Tissue Recipe and Calibration Requirements". The density used to determine SAR from the measurements was the recommended 1040 kg/m<sup>3</sup> found in Appendix C of Supplement C to OET Bulletin 65, Edition 97-01).

Dielectric parameters of the simulated tissue material were determined using a Hewlett Packard 8510 Network Analyzer, a Hewlett Packard 809B Slotted Line Carriage, and an APREL SLP-001 Slotted Line Probe.

	APREL	Target Values	Δ (%) (OET)
Dielectric constant, $\varepsilon_r$	49.88	51.50	-3.1 %
Conductivity, σ [S/m]	2.08	1.95	6.8%
Tissue Conversion Factor, γ	11.5	-	-

Table 3. Dielectric Properties of the Simulated Muscle Tissue at 1900 MHz

Page 13 of 18 51 Spectrum Way Nepean, Ontario, K2R 1E6

Project #: RIMB-BlackBerry Wireless Handheld-3706

Tel. (613) 820-2730 Fax (613) 820 4161 e-mail: info@aprel.com

© APREL 2000



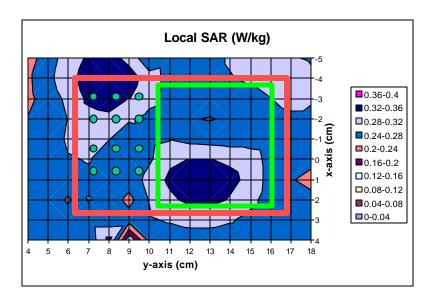


Figure 2. Contour Plot of the Area Scan 2.5mm Above Phantom Surface (Body Exposure)

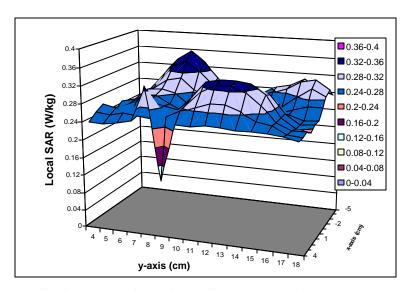


Figure 3. Surface Plot of the Area Scan 2.5mm Above Phantom Surface (Body Exposure)

Page 14 of 18 51 Spectrum Way Nepean, Ontario, K2R 1E6



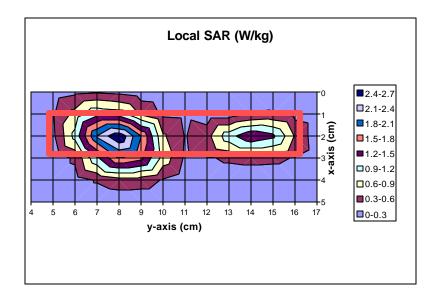


Figure 4. Contour Plot of the Area Scan 2.5mm Above Phantom Surface (Hand Exposure) (View screen is facing down on right side)

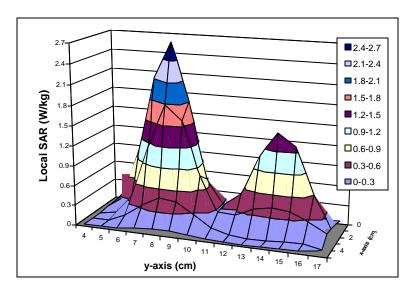


Figure 5. Surface Plot of the Area Scan 2.5mm Above Phantom Surface (Hand Exposure)

Page 15 of 18 51 Spectrum Way Nepean, Ontario, K2R 1E6



## **APPENDIX B. Uncertainty Budget**

Uncertainties Contributing to the Overall Uncertainty					
Type of Uncertainty	Specific to	Uncertainty			
Power variation due to battery condition	DUI	0.2%			
Extrapolation due to curve fit of SAR vs depth	DUI & Setup	8.7%			
Extrapolation due to depth measurement	setup	6.3%			
Conductivity	setup	6.0%			
Density	setup	2.6%			
Tissue enhancement factor	setup	7.0%			
Voltage measurement	setup	3.0%			
Probe sensitivity factor	setup	3.5%			
		15.1%	RSS		

Table 4. Uncertainty Budget (1 gram, bystander)

Uncertainties Contributing to the Overall Uncertainty			
Type of Uncertainty	Specific to	Uncertainty	
Power variation due to battery condition	DUI	1.3%	
Extrapolation due to curve fit of SAR vs depth	DUI & Setup	8.5%	
Extrapolation due to depth measurement	setup	6.9%	
Conductivity	setup	6.0%	
Density	setup	2.6%	
Tissue enhancement factor	setup	7.0%	
Voltage measurement	setup	2.4%	
Probe sensitivity factor	setup	3.5%	
		15.2%	RSS

Table 5. Uncertainty Budget (10 gram, hand)

Page 16 of 18 51 Spectrum Way Nepean, Ontario, K2R 1E6 Project #: RIMB-BlackBerry Wireless Handheld-3706 Tel. (613) 820-2730

Fax (613) 820 4161 e-mail: info@aprel.com

© APREL 2000



Uncertainties Contributing to the Overall Uncertainty			
Type of Uncertainty	Specific to	Uncertainty	
Power variation due to battery condition	DUI	0.5%	
Extrapolation due to curve fit of SAR vs depth	DUI & Setup	9.6%	
Extrapolation due to depth measurement	setup	6.1%	
Conductivity	setup	6.0%	
Density	setup	2.6%	
Tissue enhancement factor	setup	7.0%	
Voltage measurement	setup	8.0%	
Probe sensitivity factor	setup	3.5%	
		17.2%	RSS

Table 6. Uncertainty Budget (1 gram, body)

Page 17 of 18 51 Spectrum Way Nepean, Ontario, K2R 1E6

© APREL 2000

This report shall not be reproduced, except in full,

Project #: RIMB-BlackBerry Wireless Handheld-3706 Tel. (613) 820-2730

Fax (613) 820 4161 e-mail: info@aprel.com





### **APPENDIX C. Validation Scan on a Flat Phantom**

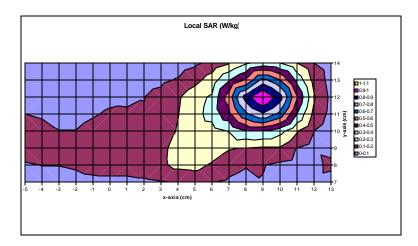


Figure 6. Contour Plot of the Reference Area Scan 2.5mm Above Phantom

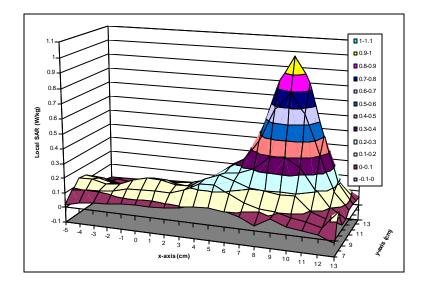


Figure 7. Surface Plot of the Reference Area Scan 2.5mm Above Phantom

Page 18 of 18 51 Spectrum Way Nepean, Ontario, K2R 1E6



### APPENDIX D. Probe Calibration

## **NCL CALIBRATION LABORATORIES**

Calibration File No.: 301420

# CERTIFICATE OF CALIBRATION

It is certified that the equipment identified below has been calibrated in the NCL CALIBRATION LABORATORIES by qualified personnel following recognized procedures and using transfer standards traceable to NRC/NIST.

Equipment: Miniature Isotropic RF Probe

Manufacturer: APREL Laboratories/IDX Robotics Inc.

Model No.: E-009 Serial No.: 115

Customer: APREL Asset No.:301420

Calibration Procedure: SSI/DRB-TP-D01-032

Cal. Date: 9 November, 2000 Cal. Due Date: 8 November, 2001 Remarks: None

51 SPECTRUM WAY NEPEAN, ONTARIO CANADA K2R 1E6

Division of APREL Lab. TEL: (613) 820-4988 FAX: (613) 820-4161

51 Spectrum Way Nepean, Ontario, K2R 1E6

© APREL 2000 This report shall not be reproduced, except in full, Project #: RIMB-BlackBerry Wireless Handheld-3706 Tel. (613) 820-2730 Fax (613) 820 4161

e-mail: info@aprel.com