 RESEARCH IN MOTION	Document		Page
	SAR Compliance Test Report for the BlackBerry 7100t Wireless Handheld Model No. RAQ40GW		1(25)
Author Data	Dates of Test	Test Report No	FCC ID:
Daoud Attayi	June 29 – July 07, 2004	RIM-0094-0407-03	L6AQAP40GW

SAR Compliance Test Report



Testing Lab:	Research In Motion Limited 305 Phillip Street Waterloo, Ontario Canada N2L 3W8 Phone: 519-888-7465 Fax: 519-880-8173 Web site: www.rim.net	Applicant:	Research In Motion Limited 295 Phillip Street Waterloo, Ontario Canada N2L 3W8 Phone: 519-888-7465 Fax: 519-888-6906 Web site: www.rim.net
---------------------	--	-------------------	--


Statement of Compliance: Research In Motion Limited, declares under its sole responsibility that the product to which this declaration relates, is in conformity with the appropriate RF exposure standards, recommendations and guidelines. It also declares that the product was tested in accordance with the appropriate measurement standards, guidelines and recommended practices. Any deviations from these standards, guidelines and recommended practices are noted below:

(none)

Device Category: This wireless handheld is a portable device, designed to be used in direct contact with the user's head, hand and to be carried in approved accessories when carried on the user's body.


RF exposure environment: This wireless portable device has been shown to be in compliance for localized specific absorption rate (SAR) for uncontrolled environment/general population exposure limits specified in OET Bulletin 65 Supplement C (Edition 01-01), FCC 96-326-August 1, 1996, IEEE Std. C95.1-1999, Health Canada's Safety Code 6-1999, and reproduced in RSS-102-Issue 1-September 25, 1999 and had been tested in accordance with the measurement procedures specified in OET Bulletin 65 Supplement C (Edition 01-01), ANSI/IEEE Std. C95.3-1991, IEEE 1528-2003 and Health Canada's Safety Code 6-1999.

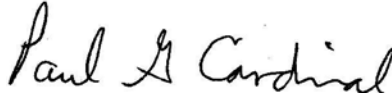Approved by:	Signatures	Date
Paul G. Cardinal, Ph.D. Manager, Compliance & Certification		July 27, 2004
Tested and documented by: Daoud Attayi Compliance Specialist		July 15, 2004

 RESEARCH IN MOTION	Document		Page
	SAR Compliance Test Report for the BlackBerry 7100t Wireless Handheld Model No. RAQ40GW		2(25)
Author Data	Dates of Test	Test Report No	FCC ID:
Daoud Attayi	June 29 – July 07, 2004	RIM-0094-0407-03	L6ARAQ40GW


CONTENTS

GENERAL INFORMATION	1
1.0 OPERATING CONFIGURATIONS AND TEST CONDITIONS	4
1.1 PICTURE OF HANDHELD	4
1.2 ANTENNA DESCRIPTION	4
1.3 HANDHELD DESCRIPTION	4
1.4 BODY WORN ACCESSORIES	5
1.5 HEADSETS	6
1.6 BATTERIES	6
1.7 PROCEDURE USED TO ESTABLISHING THE TEST SIGNAL	6
2.0 DESCRIPTION OF THE TEST EQUIPMENT	6
2.1 SAR MEASUREMENT SYSTEM	6
2.2 DESCRIPTION OF THE TEST SETUP	8
2.2.1 HANDHELD AND BASE STATION SIMULATOR	8
2.2.2 DASY SETUP	8
3.0 ELECTRIC FIELD PROBE CALIBRATION	8
3.1 PROBE SPECIFICATION	8
3.2 PROBE CALIBRATION AND MEASUREMENT ERROR	9
4.0 SAR MEASUREMENT SYSTEM VERIFICATION	9
4.1 SYSTEM ACCURACY VERIFICATION for Head Adjacent Use	9
5.0 PHANTOM DESCRIPTION	10
6.0 TISSUE DIELECTRIC PROPERTY	11
6.1 COMPOSITION OF TISSUE SIMULANT	11
6.1.1 EQUIPMENT	11
6.1.2 PREPARATION PROCEDURE	11
6.2 ELECTRICAL PARAMETERS OF THE TISSUE SIMULATING LIQUID	12
6.2.1 EQUIPMENT	12
6.2.2 TEST CONFIGURATION	13
6.2.3 TEST PROCEDURE	13
7.0 SAR SAFETY LIMITS	16
8.0 DEVICE POSITIONING	17
8.1 DEVICE HOLDER	17
8.2 DESCRIPTION OF TEST POSITION	18
8.2.1 TEST POSITION OF DEVICE RELATIVE TO HEAD	18
8.2.1.1 DEFINITION OF THE "CHEEK" POSITION	19
8.2.1.2 DEFINITION OF THE "TILTED" POSITION	20
8.2.2 BODY-WORN TEST CONFIGURATION	20

 RESEARCH IN MOTION	Document		Page
	SAR Compliance Test Report for the BlackBerry 7100t Wireless Handheld Model No. RAQ40GW		3(25)
Author Data	Dates of Test	Test Report No	FCC ID:
Daoud Attayi	June 29 – July 07, 2004	RIM-0094-0407-03	L6ARAQ40GW

9.0 HIGH LEVEL EVALUATION	21
9.1 MAXIMUM SEARCH	21
9.2 EXTRAPOLATION	
9.3 BOUNDARY CORRECTION	21
9.4 PEAK SEARCH FOR 1G AND 10G AVERAGED SAR	21
10.0 MEASUREMENT UNCERTAINTIES	22
11.0 SAR TEST RESULTS	23
11.1 HEAD CONFIGURATION	23
11.2 BODY-WORN CONFIGURATION USING HOLSTERS	23
12.0 REFERENCES	24

APPENDIX A: SAR DISTRIBUTION COMPARISON FOR THE ACCURACY VERIFICATION
 APPENDIX B: SAR DISTRIBUTION PLOTS FOR HEAD CONFIGURATION
 APPENDIX C: SAR DISTRIBUTION PLOTS FOR BODY-WORN CONFIGURATION
 APPENDIX D: PROBE & DIPOLE CALIBRATION DATA
 APPENDIX E: SAR TEST SETUP PHOTOGRAPHS

 RESEARCH IN MOTION	Document SAR Compliance Test Report for the BlackBerry 7100t Wireless Handheld Model No. RAQ40GW			Page 4(25)
	Author Data Daoud Attayi	Dates of Test June 29 – July 07, 2004	Test Report No RIM-0094-0407-03	FCC ID: L6ARAQ40GW

1.0 OPERATING CONFIGURATIONS AND TEST CONDITIONS

1.1 Picture of Handheld

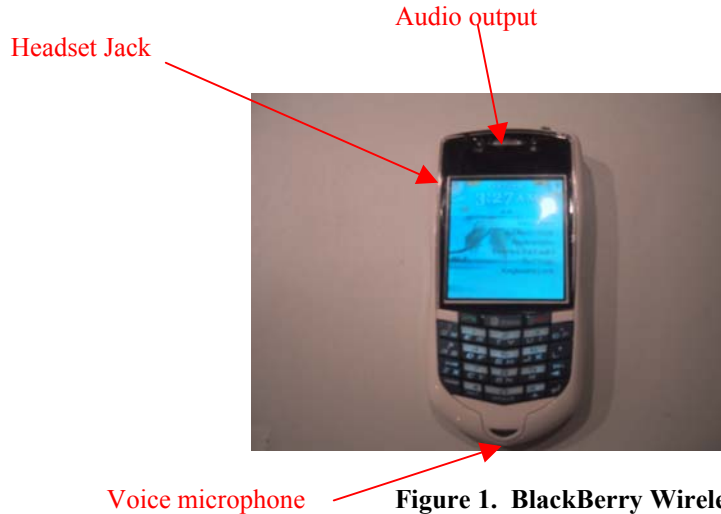


Figure 1. BlackBerry Wireless Handheld

1.2 Antenna description

Type	Internal fixed antenna
Location	Back lower centre section
Configuration	Internal fixed antenna


Table 1. Antenna description

1.3 Handheld description

Handheld Model	RAQ40GW				
FCC ID	L6ARAQ40GW				
PIN Number	20134D4B				
Prototype or Production Unit	Pre-production				
Mode(s) of Operation	GSM 850	GSM 900	DCS 1800	PCS 1900	Bluetooth
Maximum conducted RF Output Power	33.00 dBm	33.00 dBm	30.00 dBm	30.00 dBm	3.5 dBm
Tolerance in Power Setting on center channel	32.7 ± 0.3 dB	32.7 ± 0.3 dB	29.7 ± 0.3 dB	29.7 ± 0.3 dB	N/A
Duty Cycle	1:8	1:8	1:8	1:8	N/A
Transmitting Frequency Range (MHz)	824.20-848.80	880.20-814.80	1710.20-1784.80	1850.20-1909.80	2402-2483

Table 2. Test device description

Note: GSM 900 & DCS 1800 bands are not operational in the North America, therefore there are no SAR results presented in this report for FCC/IC submission. A separate report has been generated for these bands.

 RESEARCH IN MOTION	Document SAR Compliance Test Report for the BlackBerry 7100t Wireless Handheld Model No. RAQ40GW		Page 5(25)
	Author Data Daoud Attayi	Dates of Test June 29 – July 07, 2004	Test Report No RIM-0094-0407-03

1.3 Body worn accessories


Holster

The black fabric holster part number: HDW-08104-001, with integral belt-clip, is designed to allow the BlackBerry handheld to be slid in as shown in the photo below.



Figure 2. Body-worn holster

The device-to-phantom spacing when the handheld is in the holster is 15 mm as shown in the bottom portion of Figure 2.

	Document		Page
	SAR Compliance Test Report for the BlackBerry 7100t Wireless Handheld Model No. RAQ40GW		6(25)
Author Data	Dates of Test	Test Report No	FCC ID:
Daoud Attayi	June 29 – July 07, 2004	RIM-0094-0407-03	L6ARAQ40GW

1.5 Headsets

The BlackBerry Wireless Handheld was tested with and without headset model number HDW-03458-001. The SAR values are shown in the Table 16.

1.6 Batteries

The Blackberry Wireless Handheld can operate and was tested with the following Lithium Ion Batteries:

- Sanyo battery pack, RIM part number: BAT-06860-001
- Sanyo GS battery pack, RIM part number: BAT-06860-001
- Sanyo GS higher capacity battery pack, RIM part number: BAT-06985-001

1.7 Procedure used to establish the test signal

The Handheld was put into test mode for the SAR measurements by enabling a call via a Rohde & Schwartz CMU 200 Base Station Simulator test instrument. A SIM card was placed in the Handheld to enable the interaction between the BSS communications test instrument and the Handheld. The CMU 200 communications test instrument then sent out a command for the Handheld to transmit at full power at the specified frequency.

A second CMU 200 was used to connect to the Bluetooth band and set to transmit at maximum power. Worst case SAR was measured with GSM and Bluetooth bands ON simultaneously.

2.0 DESCRIPTION OF THE TEST EQUIPMENT

2.1 SAR measurement system

SAR measurements were performed using a Dosimetric Assessment System (DASY 4), an automated SAR measurement system manufactured by Schmid & Partner Engineering AG (SPEAG), of Zurich, Switzerland.

The DASY 4 system for performing compliance tests consists of the following items:

- A standard high precision 6-axis robot (Stäubli RX family) with controller and software.
- An arm extension for accommodating the data acquisition electronics (DAE).
- A dosimetric probe, i.e., an isotropic E-field probe optimized and calibrated for usage in tissue simulating liquid. The probe is equipped with an optical surface detector system.
- A DAE module which performs the signal amplification, signal multiplexing, AD-conversion, offset measurements, mechanical surface detection, collision detection, etc. The unit is battery powered with standard or rechargeable batteries. The signal is optically transmitted to the Electro-optical coupler (EOC).
- A unit to operate the optical surface detector which is connected to the EOC.
- The EOC performs the conversion from an optical signal into the digital electric signal of the DAE. The EOC is connected to the PC plug-in card.
- The functions of the PC plug-in card based on a DSP is to perform the time critical tasks such as signal filtering, surveillance of the robot operation fast movement interrupts.
- A computer operating Windows NT.
- DASY 4 software version 3.1C.
- Remote control with teach pendant and additional circuitry for robot safety such as

warning lamps, etc.

- The SAM Twin Phantom enabling testing left-hand and right-hand usage.
- The device holder for handheld mobile phones.
- Tissue simulating liquid mixed according to the given recipes (see Application Note).
- System validation dipoles allowing for the validation of proper functioning of the system.

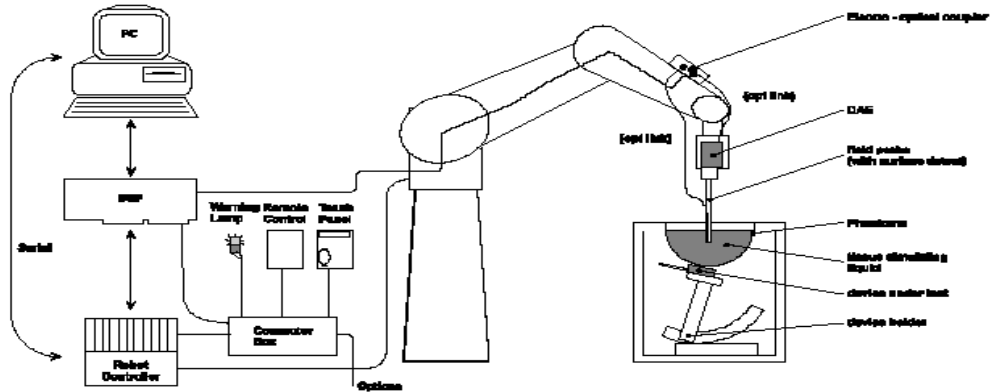



Figure 3: System Description

2.1.1 Equipment List

Manufacturer	Test Equipment	Model Number	Serial Number	Cal. Due Date
SCHMID & Partner Engineering AG	E-field probe	ET3DV6	1643	09/10/2004
SCHMID & Partner Engineering AG	Data Acquisition Electronics (DAE3)	DAE3 V1	473	09/10/2004
SCHMID & Partner Engineering AG	Dipole Validation Kit	D835V2	446	21/08/2005
SCHMID & Partner Engineering AG	Dipole Validation Kit	D1900V2	545	22/08/2005
Agilent Technologies	Signal generator	HP 8648C	4037U03155	01/08/2005
Agilent Technologies	Power meter	E4419B	GB40202821	31/07/2004
Agilent Technologies	Power sensor	8482A	US37295126	07/08/2004
Amplifier Research	Amplifier	5S1G4M3	300986	CNR
Agilent Technologies	Network analyzer	8753ES	US39174857	31/07/2004
Rohde & Schwarz	Base Station Simulator	CMU 200	103437	22/04/2005
Rohde & Schwarz	Base Station Simulator	CMU 200	100251	21/04/2005

Table 3. Equipment list

 RESEARCH IN MOTION	Document		Page
	SAR Compliance Test Report for the BlackBerry 7100t Wireless Handheld Model No. RAQ40GW		8(25)
Author Data	Dates of Test	Test Report No	FCC ID:
Daoud Attayi	June 29 – July 07, 2004	RIM-0094-0407-03	L6ARAQ40GW

2.2 Description of the test setup

Before a SAR test is conducted the Handheld and the DASYS equipment are setup as follows:

2.2.1 Handheld and base station simulator setup

- Insert SIM card into the Handheld's SIM card slot and power it up.
- Turn on the CMU 200 test set and set the carrier frequency and power to the appropriate values.
- Connect an antenna to the RF IN/OUT of the communication test set and place it close to the Handheld.


2.2.2 DASYS setup

- Turn the computer on and log on to Windows NT.
- Start DASYS 4 software by clicking on the icon located on the Windows desktop. Once the software loads, click on the Change to Robot toolbar button to open the State and Robot Monitoring Windows.
- Once the DASYS State dialog opens you can ignore all errors and click OK to open the Robot Monitoring window.
- Mount the DAE unit and the probe. Turn on the DAE unit.
- Turn the Robot Controller on by turning the main power switch to the horizontal position
- Align the probe and click the align probe in the light beam button to correct the probe offset.
- Open a program and configure it to the proper parameters
- Establish a connection between the Handheld and the communications test instrument. Place the Handheld on the stand and adjust it under the phantom.
- Start SAR measurements.

3.0 ELECTRIC FIELD PROBE CALIBRATION

3.1 Probe Specification

SAR measurements were conducted using the dosimetric probe ET3DV6, designed by Schmid & Partner Engineering AG for the measurement of SAR. The probe is constructed using the thin film technique, with printed resistive lines on ceramic substrates. It has a symmetrical design with triangular core, built-in optical fiber for the surface detection system and built-in shielding against static discharge. The probe is sensitive to E-fields and thus incorporates three small dipoles arranged so that the overall response is close to isotropic. The table below summarizes the technical data for the probe.

 RESEARCH IN MOTION	Document		Page
	SAR Compliance Test Report for the BlackBerry 7100t Wireless Handheld Model No. RAQ40GW		9(25)
Author Data	Dates of Test	Test Report No	FCC ID:
Daoud Attayi	June 29 – July 07, 2004	RIM-0094-0407-03	L6ARAQ40GW

Property	Data
Frequency range	30 MHz – 3 GHz
Linearity	± 0.1 dB
Directivity (rotation around probe axis)	$\leq \pm 0.2$ dB
Directivity (rotation normal to probe axis)	± 0.4 dB
Dynamic Range	5 mW/kg – 100 W/kg
Probe positioning repeatability	± 0.2 mm
Spatial resolution	< 0.125 mm ³

Table 4. Probe specification

3.2 Probe calibration and measurement errors

The probe was calibrated on 09/10/2003 with an accuracy better than $\pm 10\%$. The sensitivity parameters (NormX, NormY, NormZ), the diode compression parameter (DCP) and the conversion factor (ConvF) of the probe were tested. The probe calibration parameters are shown on Appendix D.


4.0 SAR MEASUREMENT SYSTEM VERIFICATION

Prior to conducting SAR evaluation, the measurements were validated using the dipole validation kit and a flat phantom. A power level of 1.0 W was applied to the dipole antenna. The verification results are in the table below with a comparison to reference values. Printouts are shown in Appendix A. All the measured parameters are satisfactory.

4.1 System accuracy verification for Head Adjacent use

f (MHz)	Limits / Measured	SAR (W/kg) 1 g/ 10 g	Dielectric Parameters		Liquid Temp (°C)
			ϵ_r	σ [S/m]	
835	Measured	9.8 / 6.4	43.5	0.92	23.2
	Recommended Limits	9.6 / 6.2	43.3	0.91	N/A
1900	Measured	42.1 / 22.0	38.2	1.47	22.4
	Recommended Limits	41.2 / 21.3	40.2	1.46	N/A

Table 5. System accuracy (Validation for Head Adjacent use)

 RESEARCH IN MOTION	Document		Page
	SAR Compliance Test Report for the BlackBerry 7100t Wireless Handheld Model No. RAQ40GW		10(25)
Author Data	Dates of Test	Test Report No	FCC ID:
Daoud Attayi	June 29 – July 07, 2004	RIM-0094-0407-03	L6ARAQ40GW

5.0 PHANTOM DESCRIPTION

The SAM Twin Phantom, manufactured by SPEAG, was used during the SAR measurements. The phantom is made of a fiberglass shell integrated with a wooden table.

The SAM Twin Phantom is a fiberglass shell phantom with 2 mm shell thickness. It has three measurement areas:

- Left hand
- Right hand
- Flat phantom

The phantom table dimensions are: 100x50x85 cm (LxWxH). The table is intended for use with free standing robots.


The bottom shelf contains three pair of bolts for locking the device holder in place. The device holder positions are adjusted to the standard measurement positions in the three sections. Only one device holder is necessary if two phantoms are used (e.g., for different solutions).

A white cover is provided to top the phantom during off-periods to prevent water evaporation and changes in the liquid parameters. Free space scans of devices on the cover are possible; however the optical surface detector does not work properly at the cover surface. Place a sheet of white paper on the cover when using optical surface detection.

Liquid depth of ≥ 15 cm is maintained in the phantom for all the measurement.



Figure 4
SAM Twin Phantom

	Document		Page
	SAR Compliance Test Report for the BlackBerry 7100t Wireless Handheld Model No. RAQ40GW		11(25)
Author Data	Dates of Test	Test Report No	FCC ID:
Daoud Attayi	June 29 – July 07, 2004	RIM-0094-0407-03	L6ARAQ40GW

6.0 TISSUE DIELECTRIC PROPERTY

6.1 Composition of tissue simulant

The composition of the brain and muscle simulating liquids for 800-900 MHz and 1800-1900 MHz are shown in the table below.

INGREDIENT	MIXTURE 800–900MHz		MIXTURE 1800–1900MHz	
	Brain %	Muscle %	Brain %	Muscle %
Water	51.07	65.45	54.88	69.91
Sugar	47.31	34.31	0	0
Salt	1.15	0.62	0.21	0.13
HEC	0.23	0	0	0
Bactericide	0.24	0.10	0	0
DGBE	0	0	44.91	29.96

Table 6. Tissue simulant recipe

6.1.1 Equipment


Manufacturer	Test Equipment	Model Number	Serial Number	Cal. Due Date
Pyrex, England	Graduated Cylinder	N/A	N/A	N/A
Pyrex, USA	Beaker	N/A	N/A	N/A
Acculab	Weight Scale	V1-1200	018WB2003	N/A
Hart Scientific	Digital Thermometer	61161-302	21352860	15/09/2004
IKA Works Inc.	Hot Plate	RC Basic	3.107433	N/A

Table 7. Tissue simulant preparation equipment

6.1.2 Preparation procedure

800-900 MHz liquids

- Fill the container with **water**. Begin heating and stirring.
- Add the **Cellulose**, the **preservative substance** and the **salt**. After several hours, the liquid will become more transparent again. The container must be covered to prevent evaporation.
- Add **Sugar**. Stir it well until the sugar is sufficiently dissolved.
- Keep the liquid hot but below the boiling point for at least an hour. The container must be covered to prevent evaporation.
- Remove the container from, and turn the hotplate off and allow the liquid to cool off to room temperature prior to performing dielectric measurements.

	Document		Page
	SAR Compliance Test Report for the BlackBerry 7100t Wireless Handheld Model No. RAQ40GW		12(25)
Author Data	Dates of Test	Test Report No	FCC ID:
Daoud Attayi	June 29 – July 07, 2004	RIM-0094-0407-03	L6ARAQ40GW

1800-1900 MHz liquid

- Fill the container with **water**. Begin heating and stirring.
- Add the **salt** and **Glycol**. The container must be covered to prevent evaporation.
- Keep the liquid hot but below the boiling point for at least an hour. The container must be covered to prevent evaporation.
- Remove the container from, and turn the hotplate off and allow the liquid to cool off to room temperature prior to performing dielectric measurements.

6.2 Electrical parameters of the tissue simulating liquid

The tissue dielectric parameters shall be measured before a batch can be used for SAR measurements to ensure that the simulated tissue was properly made and will simulate the desired human characteristic. Limits and measured electrical parameters are show in the table below.

Recommended limits are adopted from IEEE 1528-2003:

“ Recommended Practice for Determining the Peak Spatial-Average Specific Absorption Rate (SAR) in the Human Head from Wireless Communications Devices: Measurement Techniques”, SPEAG dipole calibration certificates and from FCC Tissue Dielectric Properties web page at <http://www.fcc.gov/fcc-bin/dielec.sh>


f (MHz)	Tissue Type	Limits / Measured	Dielectric Parameters		Liquid Temp (°C)
			ϵ_r	σ [S/m]	
835	Head	Measured	43.5	0.92	23.2
		Recommended Limits	43.3	0.91	N/A
	Muscle	Measured	53.2	0.98	22.1
		Recommended Limits	55.2	0.97	N/A
1900	Head	Measured	38.2	1.47	22.4
		Recommended Limits	40.0	1.46	N/A
	Muscle	Measured	50.4	1.56	22.1
		Recommended Limits	53.3	1.52	N/A

Table 8. Electrical parameters of tissue simulating liquid

6.2.1 Equipment

Manufacturer	Test Equipment	Model Number	Serial Number	Cal. Due Date
Agilent Technologies	Network Analyzer	8753ES	US39174857	31/07/2004
Agilent Technologies	Dielectric probe kit	HP 85070C	US9936135	CNR
Dell	PC using GPIB card	GX110	347	N/A
Hart Scientific	Digital Thermometer	61161-302	21352860	15/09/2004

Table 9. Equipment required for electrical parameter measurements

 RESEARCH IN MOTION	Document		Page
	SAR Compliance Test Report for the BlackBerry 7100t Wireless Handheld Model No. RAQ40GW		13(25)
Author Data	Dates of Test	Test Report No	FCC ID:
Daoud Attayi	June 29 – July 07, 2004	RIM-0094-0407-03	L6ARAQ40GW

6.2.2 Test Configuration

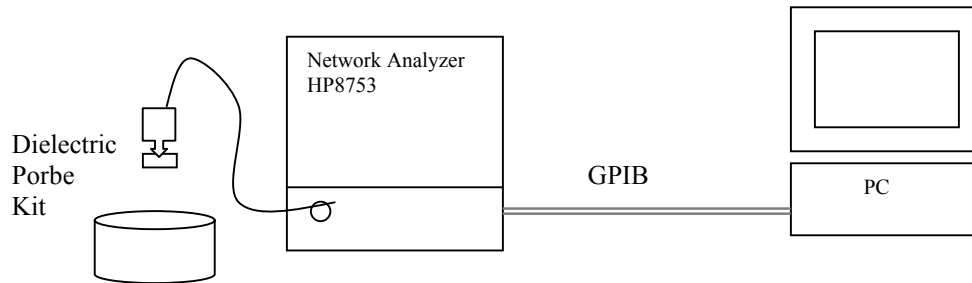


Figure 5: Test configuration

6.2.3 Procedure

1. Turn NWA on and allow at least 30 minutes for warm up.
2. Mount dielectric probe kit so that interconnecting cable to NWA will not be moved during measurements or calibration.
3. Pour de-ionized water and measure water temperature ($\pm 1^\circ$).
4. Set water temperature in HP-Software (Calibration Setup).
5. Perform calibration.
6. Validate calibration with dielectric material of known properties (e.g. polished ceramic slab with $>8\text{mm}$ thickness $\epsilon' = 10.0$, $\epsilon'' = 0.0$). If measured parameters do not fit within tolerance, repeat calibration (± 0.2 for ϵ' ; ± 0.1 for ϵ'').
7. Relative permittivity $\epsilon_r = \epsilon'$ and conductivity can be calculated from ϵ''

$$\sigma = \omega \epsilon_0 \epsilon''$$
8. Measure liquid shortly after calibration.
9. Stir the liquid to be measured. Take a sample ($\sim 50\text{ml}$) with a syringe from the center of the liquid container.
10. Pour the liquid into a small glass flask. Hold the syringe at the bottom of the flask to avoid air bubbles.
11. Put the dielectric probe in the glass flask. Check that there are no air bubbles in front of the opening in the dielectric probe kit.
12. Perform measurements.
13. Adjust medium parameters in DASY 4 for the frequencies necessary for the measurements ('Setup Config', select medium (e.g. Brain 900 MHz) and press 'Option'-button.
14. Select the current medium for the frequency of the validation (e.g. Setup Medium Brain 900 MHz).

Sample calculation for 835 MHz head tissue dielectric parameters using data from Table 10.

Relative permittivity $\epsilon_r = \epsilon' = 43.45$

Conductivity $\sigma = \omega \epsilon_0 \epsilon'' = 2 \times 3.1416 \times 835 \text{ e}+6 \times 8.854\text{e-}12 \times 19.80 = 0.92 \text{ S/m}$

Title

SubTitle

June 29, 2004 10:06 AM

Frequency	e'	e''
800.000000 MHz	43.9374	19.9542
805.000000 MHz	43.8832	19.9093
810.000000 MHz	43.7969	19.9012
815.000000 MHz	43.7198	19.9017
820.000000 MHz	43.6616	19.8701
825.000000 MHz	43.5939	19.8578
830.000000 MHz	43.5180	19.8322
835.000000 MHz	43.4531	19.8038
840.000000 MHz	43.3726	19.7911
845.000000 MHz	43.3212	19.8016
850.000000 MHz	43.2814	19.7774
855.000000 MHz	43.1879	19.7799
860.000000 MHz	43.1575	19.7637
865.000000 MHz	43.0994	19.7561
870.000000 MHz	43.0441	19.7376
875.000000 MHz	42.9739	19.7342
880.000000 MHz	42.9111	19.7185
885.000000 MHz	42.8551	19.7215
890.000000 MHz	42.8201	19.7079
895.000000 MHz	42.7826	19.7003
900.000000 MHz	42.7263	19.6938
905.000000 MHz	42.6759	19.6557
910.000000 MHz	42.5897	19.6590
915.000000 MHz	42.5156	19.6341
920.000000 MHz	42.4567	19.6392
925.000000 MHz	42.3993	19.6147
930.000000 MHz	42.3422	19.6197
935.000000 MHz	42.2604	19.5745
940.000000 MHz	42.2056	19.5504
945.000000 MHz	42.1285	19.5145
950.000000 MHz	42.0635	19.5135

Title

SubTitle

June 30, 2004 08:42 AM

Frequency	e'	e''
800.000000 MHz	53.5220	21.2290
805.000000 MHz	53.4956	21.1985
810.000000 MHz	53.4095	21.1723
815.000000 MHz	53.3770	21.1669
820.000000 MHz	53.3282	21.1282
825.000000 MHz	53.2853	21.0879
830.000000 MHz	53.2551	21.0654
835.000000 MHz	53.2179	20.9907
840.000000 MHz	53.1259	21.0350
845.000000 MHz	53.1002	20.9570
850.000000 MHz	53.0518	20.9639
855.000000 MHz	52.9713	20.9394
860.000000 MHz	52.9452	20.9275
865.000000 MHz	52.9188	20.8837
870.000000 MHz	52.8252	20.8439
875.000000 MHz	52.7981	20.8648
880.000000 MHz	52.7301	20.8587
885.000000 MHz	52.6712	20.8177
890.000000 MHz	52.6209	20.8107
895.000000 MHz	52.6080	20.7896
900.000000 MHz	52.5608	20.7453
905.000000 MHz	52.4979	20.7385
910.000000 MHz	52.4666	20.7043
915.000000 MHz	52.4093	20.6804
920.000000 MHz	52.3581	20.6699
925.000000 MHz	52.3043	20.6504
930.000000 MHz	52.2603	20.6273
935.000000 MHz	52.2275	20.6304
940.000000 MHz	52.1781	20.5897
945.000000 MHz	52.1070	20.5681
950.000000 MHz	52.0576	20.5233

Table 10. 835 MHz head and muscle tissue dielectric parameters


Title
SubTitle
July 06, 2004 11:23 AM

Title
SubTitle
July 06, 2004 04:21 PM

Frequency	e'	e''
1.800000000 GHz	38.6611	13.6559
1.805000000 GHz	38.6359	13.6709
1.810000000 GHz	38.6275	13.6882
1.815000000 GHz	38.6010	13.7101
1.820000000 GHz	38.5878	13.7182
1.825000000 GHz	38.5728	13.7483
1.830000000 GHz	38.5829	13.7695
1.835000000 GHz	38.5483	13.7603
1.840000000 GHz	38.5411	13.7767
1.845000000 GHz	38.5165	13.8035
1.850000000 GHz	38.4844	13.8170
1.855000000 GHz	38.4748	13.8229
1.860000000 GHz	38.4624	13.8483
1.865000000 GHz	38.4436	13.8627
1.870000000 GHz	38.4190	13.8718
1.875000000 GHz	38.3832	13.8670
1.880000000 GHz	38.3681	13.8763
1.885000000 GHz	38.3218	13.9017
1.890000000 GHz	38.2943	13.9187
1.895000000 GHz	38.2765	13.9269
1.900000000 GHz	38.2401	13.9524
1.905000000 GHz	38.2216	13.9728
1.910000000 GHz	38.1956	13.9949
1.915000000 GHz	38.1732	14.0032
1.920000000 GHz	38.1472	14.0195
1.925000000 GHz	38.1221	14.0178
1.930000000 GHz	38.0814	14.0375
1.935000000 GHz	38.0493	14.0520
1.940000000 GHz	38.0517	14.0743
1.945000000 GHz	38.0248	14.0914
1.950000000 GHz	38.0168	14.1056

Frequency	e'	e''
1.800000000 GHz	50.8145	14.4741
1.805000000 GHz	50.7955	14.4842
1.810000000 GHz	50.7735	14.5073
1.815000000 GHz	50.7546	14.5208
1.820000000 GHz	50.7357	14.5379
1.825000000 GHz	50.7183	14.5433
1.830000000 GHz	50.6934	14.5691
1.835000000 GHz	50.6598	14.5880
1.840000000 GHz	50.6390	14.5964
1.845000000 GHz	50.6055	14.6226
1.850000000 GHz	50.5888	14.6348
1.855000000 GHz	50.5705	14.6485
1.860000000 GHz	50.5513	14.6524
1.865000000 GHz	50.5408	14.6702
1.870000000 GHz	50.5054	14.6914
1.875000000 GHz	50.4886	14.7007
1.880000000 GHz	50.4489	14.6908
1.885000000 GHz	50.4340	14.7055
1.890000000 GHz	50.4134	14.7253
1.895000000 GHz	50.3771	14.7304
1.900000000 GHz	50.3767	14.7400
1.905000000 GHz	50.3506	14.7437
1.910000000 GHz	50.3387	14.7633
1.915000000 GHz	50.3062	14.7588
1.920000000 GHz	50.2965	14.7800
1.925000000 GHz	50.2778	14.7743
1.930000000 GHz	50.2543	14.7867
1.935000000 GHz	50.2346	14.8030
1.940000000 GHz	50.2335	14.8240
1.945000000 GHz	50.2294	14.8371
1.950000000 GHz	50.2144	14.8494

Table 11. 1900 MHz head and muscle tissue dielectric parameters

 RESEARCH IN MOTION	Document		Page
	SAR Compliance Test Report for the BlackBerry 7100t Wireless Handheld Model No. RAQ40GW		16(25)
Author Data	Dates of Test	Test Report No	FCC ID:
Daoud Attayi	June 29 – July 07, 2004	RIM-0094-0407-03	L6ARAQ40GW

7.0 SAR SAFETY LIMITS

Standards/Guideline	Localized SAR Limit (W/kg) General public (uncontrolled)	Localized SAR Limits (W/kg) Workers (controlled)
ICNIRP (1998) Standard	2.0 (10g)	10.0 (10g)
IEEE C95.1 (1999) Standard	1.6 (1g)	8.0 (1g)


Table 12. SAR safety limits for Controlled / Uncontrolled environment

Human Exposure	Localized SAR Limits (W/kg) 10g, ICNIRP (1998) Standard	Localized SAR Limits (W/kg) 1g, IEEE C95.1 (1999) Standard
Spatial Average (averaged over the whole body)	0.08	0.08
Spatial Peak (averaged over any X g of tissue)	2.00	1.60
Spatial Peak (hands/wrists/feet/ankles averaged over 10 g)	4.00	4.00 (10g)

Table 13. SAR safety limits

Uncontrolled Environments are defined as locations where there is exposure of individuals who have no knowledge or control of their exposure.

Controlled Environments are defined as locations where there is exposure that may be incurred by persons who are aware of the potential for exposure, (i.e. as a result of employment or occupation).

 RESEARCH IN MOTION	Document SAR Compliance Test Report for the BlackBerry 7100t Wireless Handheld Model No. RAQ40GW		Page 17(25)
	Author Data Daoud Attayi	Dates of Test June 29 – July 07, 2004	Test Report No RIM-0094-0407-03

8.0 DEVICE POSITIONING

8.1 Device holder for SAM Twin Phantom

The Handheld was positioned for all test configurations using the DASY 4 holder. The device holder facilitates the rotation of the mounted transmitter in spherical coordinates whereby the rotation point is the ear opening. The devices can be easily, accurately and with repeatability positioned according to FCC and CENELEC specifications. The device holder can be locked at different phantom locations (left head, right head, flat phantom).

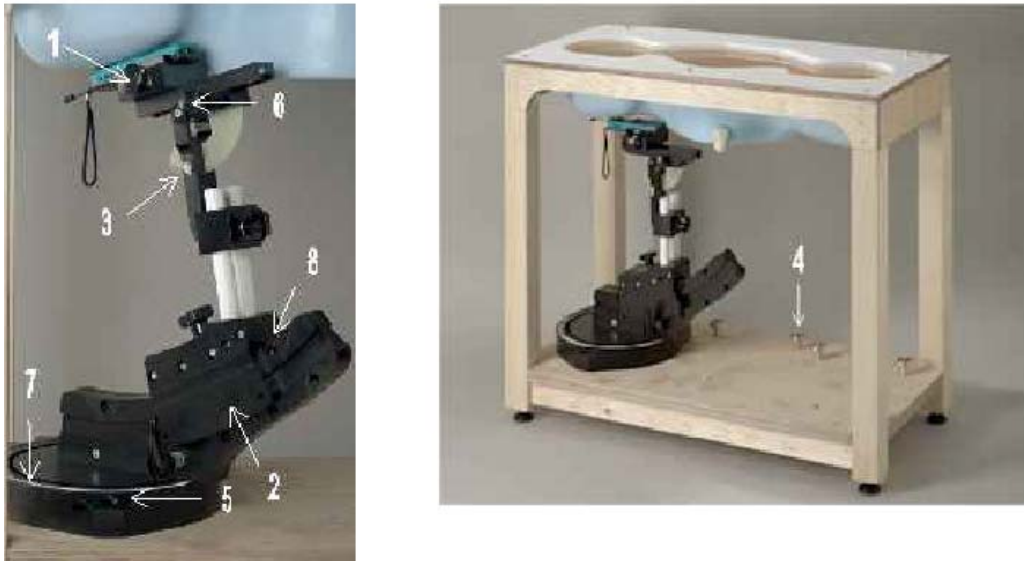



Figure 6
Device Holder

1. Put the phone in the clamp mechanism (1) and hold it straight while tightening. (Curved phones or phones with asymmetrical ear pieces should be positioned so that the ear piece is in the symmetry plane of the clamp).

2. Adjust the sliding carriage (2) to 90°. Then adjust the phone holder angle (3) until the reference line of the phone is horizontal (parallel to the flat phantom bottom). The phone reference line is defined as the front tangential line between the ear piece and the center of the device bottom (or the center of the flip hinge). For devices with parallel front and back sides, the phone holder angle (3) is 0°.

3. Place the device holder at the desired phantom section and move it securely against the positioning pins (4). The screw in front of the turning plate can be applied for correct positioning (5). (Do not tighten it too strongly).

4. Shift the phone clamp (6) so that the ear piece is exactly below the ear marking of the phantom. The phone is now correctly positioned in the holder for all standard phantom measurements, even after changing the phantom or phantom section.

	Document SAR Compliance Test Report for the BlackBerry 7100t Wireless Handheld Model No. RAQ40GW		Page 18(25)
	Author Data Daoud Attayi	Dates of Test June 29 – July 07, 2004	Test Report No RIM-0094-0407-03

5. Adjust the device position angles to the desired measurement position.
6. After fixing the device angles, move the phone fixture up until the phone touches the ear marking. (The point of contact depends on the design of the device and the positioning angle).

8.2 Description of the test positioning

8.2.1 Test Positions of Device Relative to Head

The handset was tested in two test positions against the head phantom, the “cheek” position and the “tilted” position, on both left and right sides of the phantom.

The handset was tested in the above positions according to IEEE 1528/D.2, April 21, 2003 “Recommended Practice for Determining the Spatial-Peak Specific Absorption Rate (SAR) in the Human Body Due to Wireless Communications Devices: Experimental Techniques”.

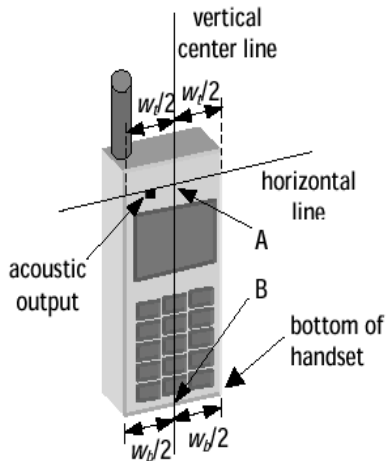


Figure 7a – Handset vertical and horizontal reference lines – fixed case

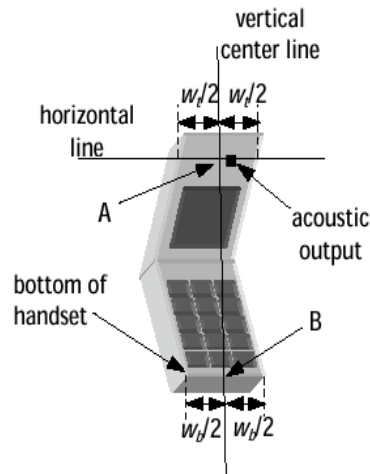



Figure 7b – Handset vertical and horizontal reference lines – “clam-shell”

	Document		Page
	SAR Compliance Test Report for the BlackBerry 7100t Wireless Handheld Model No. RAQ40GW		19(25)
Author Data	Dates of Test	Test Report No	FCC ID:
Daoud Attayi	June 29 – July 07, 2004	RIM-0094-0407-03	L6ARAQ40GW

8.2.1.1 Definition of the “cheek” position

- 1) Ready the handset for talk operation, if necessary. For example, for handsets with a cover piece, open the cover.
- 2) Define two imaginary lines on the handset: the vertical centerline and the horizontal line. The vertical centerline passes through two points on the front side of the handset: the midpoint of the width w_t of the handset at the level of the acoustic output (point A on Figures 7a and 7b), and the midpoint of the width w_b of the bottom of the handset (point B). The horizontal line is perpendicular to the vertical centerline and passes through the center of the acoustic output (see Figure 7a). The two lines intersect at point A. Note that for many handsets, point A coincides with the center of the acoustic output. However, the acoustic output may be located elsewhere on the horizontal line. Also note that the vertical centerline is not necessarily parallel to the front face of the handset (see Figure 7b), especially for clamshell handsets, handsets with flip pieces, and other irregularly shaped handsets.
- 3) Position the handset close to the surface of the phantom such that point A is on the (virtual) extension of the line passing through points RE and LE on the phantom (see Figure 7), such that the plane defined by the vertical center line and the horizontal center line is in a plane approximately parallel to the sagittal plane of the phantom.
- 4) Translate the handset towards the phantom along the line passing through RE and LE until the handset touches the ear.
- 5) While maintaining the handset in this plane, rotate it around the LE-RE line until the vertical centerline is the plane normal to MB (“mouth-back”) - NF (“neck-front”) including the line MB (reference plane).
- 6) Rotate the phone around the vertical centerline until the phone (horizontal line) is symmetrical with respect to the line NF.
- 7) While maintaining the vertical centerline in the reference plane, keeping point A on the line passing through RE and LE, and maintaining the phone contact with the ear, rotate the handset about the line NF until any point on the handset is in contact with a phantom point below the ear (cheek).

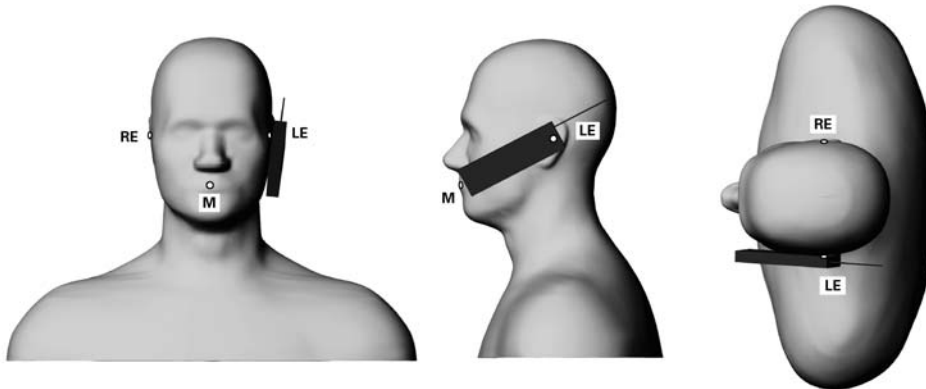



Figure 8 – Phone position 1, “cheek” or “touch” position. The reference points for the right ear (RE), left ear (LE) and mouth (M), which define the reference plane for phone positioning, are indicated. The shoulders are shown for illustration purposes only.

 RESEARCH IN MOTION	Document SAR Compliance Test Report for the BlackBerry 7100t Wireless Handheld Model No. RAQ40GW		Page 20(25)
	Author Data Daoud Attayi	Dates of Test June 29 – July 07, 2004	Test Report No RIM-0094-0407-03

8.2.1.2 Definition of the “Tilted” Position

- 1) Repeat steps 1 to 7 of 5.4.1 (in this report 8.2.1.1) to replace the device in the “cheek position.”
- 2) While maintaining the device in the reference plane (described above) and pivoting against the ear, move the device outward away from the mouth by an angle of 15 degrees, or until the antenna touches the phantom.

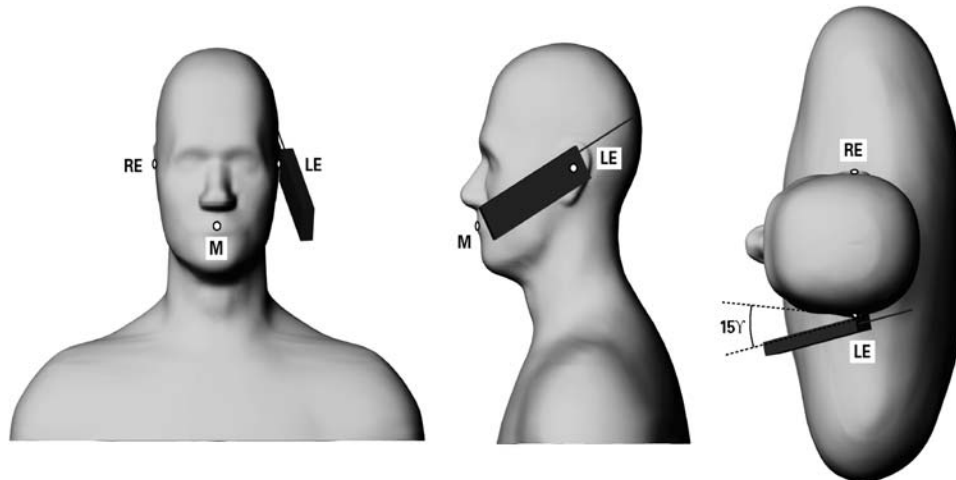



Figure 9 – Phone position 2, “tilted position.” The reference points for the right ear (RE), left ear (LE) and mouth (M), which define the reference plane for phone positioning, are indicated. The shoulders are shown for illustration purposes only.

8.2.2 Body Holster Configuration

A body worn holster, as shown on Figure 2, was tested with the Wireless Handheld for FCC/IC RF exposure compliance. The EUT was positioned in the holster case and the belt clip was placed against the flat section of the phantom. A headset was then connected to the handheld to simulate hands-free operation in a body worn holster configuration.

 RESEARCH IN MOTION	Document		Page
	SAR Compliance Test Report for the BlackBerry 7100t Wireless Handheld Model No. RAQ40GW		21(25)
Author Data	Dates of Test	Test Report No	FCC ID:
Daoud Attayi	June 29 – July 07, 2004	RIM-0094-0407-03	L6ARAQ40GW

9.0 High Level Evaluation

9.1 Maximum search

The maximum search is automatically performed after each coarse scan measurement. It is based on splines in two or three dimensions. The procedure can find the maximum for most SAR distributions even with relatively large grid spacing. After the coarse scan measurement, the probe is automatically moved to a position at the interpolated maximum. The following scan can directly use this position for reference, e.g., for a finer resolution grid or the cube evaluations.

9.2 Extrapolation

The extrapolation can be used in z-axis scans with automatic surface detection. The SAR values can be extrapolated to the inner phantom surface. The extrapolation distance is the sum of the probe sensor offset, the surface detection distance and the grid offset. The extrapolation is based on fourth order polynomial functions. The extrapolation is only available for SAR values.


9.3 Boundary correction

The correction of the probe boundary effect in the vicinity of the phantom surface is done in the standard (worst case) evaluation; the boundary effect is reduced by different weights for the lowest measured points in the extrapolation routine. The result is a slight overestimation of the extrapolated SAR values (2% to 8%) depending on the SAR distribution and gradient. The advanced evaluation makes a full compensation of the boundary effect before doing the extrapolation. This is only possible for probes with specifications on the boundary effect.

9.4 Peak search for 1g and 10g cube averaged SAR

The 1g and 10g peak evaluations are only available for the predefined cube 5x5x7 scan. The routines are verified and optimized for the grid dimensions used in these cube measurements.


The measure volume of 32x32x35mm mm contains about 35g of tissue. The first procedure is an extrapolation (incl. Boundary correction) to get the points between the lowest measured plane and the surface. The next step uses 3D interpolation to get all points within the measured volume in a 1mm grid (35000 points). In the last step, a 1g cube is placed numerically into the volume and its averaged SAR is calculated. This cube is then moved around until the highest averaged SAR is found. This last procedure is repeated for a 10 g cube. If the highest SAR is found at the edge of the measured volume, the system will issue a warning: higher SAR values might be found outside of the measured volume. In that case the cube measurement can be repeated, using the new interpolated maximum as the center.

 RESEARCH IN MOTION	Document		Page	
	SAR Compliance Test Report for the BlackBerry 7100t Wireless Handheld Model No. RAQ40GW		22(25)	
Author Data	Dates of Test	Test Report No	FCC ID:	
Daoud Attayi	June 29 – July 07, 2004	RIM-0094-0407-03	L6ARAQ40GW	

10.0 MEASUREMENT UNCERTAINTIES

DASY4 Uncertainty Budget According to IEEE P1528 [1]								
Error Description	Uncertainty value	Prob. Dist.	Div.	(c_i) 1g	(c_i) 10g	Std. Unc. (1g)	Std. Unc. (10g)	(v_i) v_{eff}
Measurement System								
Probe Calibration	±4.8%	N	1	1	1	±4.8%	±4.8%	∞
Axial Isotropy	±4.7%	R	√3	0.7	0.7	±1.9%	±1.9%	∞
Hemispherical Isotropy	±9.6%	R	√3	0.7	0.7	±3.9%	±3.9%	∞
Boundary Effects	±1.0%	R	√3	1	1	±0.6%	±0.6%	∞
Linearity	±4.7%	R	√3	1	1	±2.7%	±2.7%	∞
System Detection Limits	±1.0%	R	√3	1	1	±0.6%	±0.6%	∞
Readout Electronics	±1.0%	N	1	1	1	±1.0%	±1.0%	∞
Response Time	±0.8%	R	√3	1	1	±0.5%	±0.5%	∞
Integration Time	±2.6%	R	√3	1	1	±1.5%	±1.5%	∞
RF Ambient Conditions	±3.0%	R	√3	1	1	±1.7%	±1.7%	∞
Probe Positioner	±0.4%	R	√3	1	1	±0.2%	±0.2%	∞
Probe Positioning	±2.9%	R	√3	1	1	±1.7%	±1.7%	∞
Max. SAR Eval.	±1.0%	R	√3	1	1	±0.6%	±0.6%	∞
Test Sample Related								
Device Positioning	±2.9%	N	1	1	1	±2.9%	±2.9%	145
Device Holder	±3.6%	N	1	1	1	±3.6%	±3.6%	5
Power Drift	±5.0%	R	√3	1	1	±2.9%	±2.9%	∞
Phantom and Setup								
Phantom Uncertainty	±4.0%	R	√3	1	1	±2.3%	±2.3%	∞
Liquid Conductivity (target)	±5.0%	R	√3	0.64	0.43	±1.8%	±1.2%	∞
Liquid Conductivity (meas.)	±2.5%	N	1	0.64	0.43	±1.6%	±1.1%	∞
Liquid Permittivity (target)	±5.0%	R	√3	0.6	0.49	±1.7%	±1.4%	∞
Liquid Permittivity (meas.)	±2.5%	N	1	0.6	0.49	±1.5%	±1.2%	∞
Combined Std. Uncertainty						±10.3%	±10.0%	330
Expanded STD Uncertainty						±20.6%	±20.1%	

Table 14. Measurement uncertainty


 RESEARCH IN MOTION	Document		Page	
	SAR Compliance Test Report for the BlackBerry 7100t Wireless Handheld Model No. RAQ40GW		23(25)	
Author Data	Dates of Test	Test Report No	FCC ID:	
Daoud Attayi	June 29 – July 07, 2004	RIM-0094-0407-03	L6ARAQ40GW	

11.0 TEST RESULTS

11.1 SAR Measurement results at highest power measured against the head

Mode	f (MHz)	Cond. Output Power (dBm)	Battery type	SAR, averaged over 1 g (W/Kg)			SAR, averaged over 1 g (W/Kg)		
				Left-hand			Right-hand		
				Liquid Temp (°C)	Cheek	Tilted	Liquid Temp (°C)	Cheek	Tilted
GSM 850	824.20	33.0	Sanyo	-	-	-	22.5	0.82	-
	* 836.80	33.2	Sanyo	22.6	0.79	0.47	23.0	0.86	0.42
	848.80	33.2	Sanyo	-	-	-	23.1	0.67	-
	836.80	33.2	Sanyo GS	-	-	-	23.0	0.81	-
	836.80	33.2	Higher capacity	-	-	-	22.9	0.81	-
	836.80 + BT	33.2	Sanyo	-	-	-	22.6	0.84	-
GSM 1900	* 1880.00	30.2	Sanyo	23.2	0.56	0.47	22.6	0.57	0.28
	1880.00	30.2	Sanyo GS	-	-	-	22.7	0.56	-
	1880.00	30.2	Higher capacity	-	-	-	22.5	0.63	-
	1880.00 + BT	30.2	Higher capacity	-	-	-	22.8	0.63	-

Table 15. SAR results for head configuration


 RESEARCH IN MOTION	Document		Page
	SAR Compliance Test Report for the BlackBerry 7100t Wireless Handheld Model No. RAQ40GW		24(25)
Author Data	Dates of Test	Test Report No	FCC ID:
Daoud Attayi	June 29 – July 07, 2004	RIM-0094-0407-03	L6ARAQ40GW

11.2 SAR measurement results at highest power measured against the body using holster

Mode	f (MHz)	Cond. Output Power (dBm)	Liquid Temp (°C)	Battery pack type	SAR, averaged over 1 g (W/kg) Holster
GSM 850	824.20	33.0	22.3	BAT-06860-001 Sanyo	0.99
	836.80	33.2	22.8	BAT-06860-001 Sanyo	0.85
	848.80	33.2	22.3	BAT-06860-001 Sanyo	0.79
	824.20	33.0	22.4	BAT-06860-001 Sanyo GS	1.03
	824.20	33.0	22.3	BAT-06985-001 Sanyo GS higher cap.	0.92
	824.20 + BT	33.0	22.2	BAT-06860-001 Sanyo GS	0.87
GSM 1900	*1880.00	30.2	22.0	BAT-06860-001 Sanyo	0.59
	1880.00	30.2	22.2	BAT-06860-001 Sanyo GS	0.61
	1880.00	30.2	22.1	BAT-06985-001 Sanyo GS higher cap.	0.47
	1880.00+BT	30.2	22.1	BAT-06860-001 Sanyo	0.62

Table 16. SAR results with body-worn holster

* Supplement C: Middle channel testing is sufficient only if SAR < 3dB below limit see PN 02-1438

 RESEARCH IN MOTION	Document		Page
	SAR Compliance Test Report for the BlackBerry 7100t Wireless Handheld Model No. RAQ40GW		25(25)
Author Data	Dates of Test	Test Report No	FCC ID:
Daoud Attayi	June 29 – July 07, 2004	RIM-0094-0407-03	L6ARAQ40GW

12.0 REFERENCES

- [1] EN 50360: 2001, Product standard to demonstrate the compliance of mobile phones with the basic restrictions related to human exposure to electromagnetic fields (300 MHz – 3 GHz)
- [2] EN 50361: 2001, Basic standard for the measurement of Specific Absorption Rate related to human exposure to electromagnetic fields from mobile phones (300 MHz – 3 GHz)
- [3] ICNIRP, International Commission on Non-Ionizing Radiation Protection (1998), Guidelines for limiting exposure in time-varying electric, magnetic, and electromagnetic fields (up to 300 GHz).
- [4] Council Recommendation 1999/519/EC of July 1999 on the limitation of exposure of the general public to electromagnetic fields (0 Hz to 300 GHz)
- [5] IEEE C95.3-1991, IEEE Recommended Practice for the Measurement of Potentially Hazardous Electromagnetic Fields – RF and Microwave.
- [6] IEEE C95.1-1999, IEEE Standard for Safety Levels with Respect to Human Exposure to Radio Frequency Electromagnetic Fields, 3 kHz to 300 GHz.
- [7] OET Bulletin 65 (Edition 97-01) Supplement C (Edition 01-01), Evaluating Compliance with FCC Guidelines for Human Exposure to Radio Frequency Electromagnetic Fields.
- [8] FCC 96-326-August 1, 1996, Guidelines for Evaluating the Environmental Effects of Radio-Frequency Radiation.
- [9] DASY 4 DOSIMETRIC ASSESSMENT SYSTEM SOFTWARE MANUAL V4.1
Schmid & Partner Engineering AG, April 2003.
- [10] IEEE 1528-2003: Recommended Practice for Determining the Peak Spatial-Average Specific Absorption Rate (SAR) in the Human Head from Wireless Communications Devices: Measurement Techniques.
- [11] Health Canada, Safety Code 6, 1999: Limits of Human Exposure to Radiofrequency Electromagnetic Fields in the Frequency range from 3 kHz to 300 GHz.
- [12] RSS-102, issue 1 (Provisional), September 25, 1999: Evaluation Procedure for Mobile and Portable Radio Transmitters with respect to Health Canada's Safety Code 6 for Exposure of Humans to Radio Frequency Fields.