

APPENDIX 11

EXTRACT FROM EMITECH TEST REPORT (MAGNETIC EFFECT)

ORIGINAL EN ROUGE

E.M.C TEST REPORT

According to the standard :
RTCA DO 160 D – Issue 1997

Equipment under test :
ADT 406 AF/AP
P/N : 01N63735A S/N : Proto 007-2001

Company :
ELTA

Distribution : Mr CRESP

(Company : ELTA)
Number of pages : 110

Ed.	Date	Page(s) modified	Written by		Verified by		Approved by	
			Name	Visa	Name	Visa	Name	Visa
0	27.11.01	First edition	A. CHARPENTIER		P. SEZILLE		Le Responsable Qualité	

Duplication of this document is only permitted for an integral photographic facsimile. It includes the number of pages referenced above. This document is the result of testing a specimen or a sample of the product submitted. It does not imply an assessment of the conformity of the whole production to the item tested.

EMITECH ILE DE FRANCE

Centres de MONTIGNY
3, rue des Coudriers - CAP 78
ZA de l'Observatoire
78180 MONTIGNY LE BX
Tél. 01 30 57 55 55
Fax 01 30 43 74 48
Siret : 344 545 645 00022

Centre de SATORY
Bâtiment 147
13, route de la Minière
78000 VERSAILLES
Tél. 01 30 97 05 70
Fax 01 39 51 84 79
Siret : 344 545 645 00071

GRAND SUD

Centre de MONTPELLIER
Z.I. de la Vallée du Salaison
145, rue du Massacan - BP 25
34741 VENDARGUES Cedex
Tél. 04 67 87 11 02
Fax 04 67 70 94 55
Siret : 344 545 645 00063

ATLANTIQUE

Centre d'ANGERS
Z.I. Angers - Beaucouze
15, rue de la Claire
49070 BEAUCOUZE
Tél. 02 41 73 26 27
Fax 02 41 73 26 40
Siret : 344 545 645 00055

europcem

Groupe EMITECH
364, rue Armand Japy
Technoland - BP 39
25461 ETUPES Cedex
Tél. 03 81 90 75 90
Fax 03 81 32 36 28
Siret : 384 552 659 00029

E-mail : commercial@emitech.fr - URL : www.emitech.fr

EMITECH S.A. au capital de 480 000 € - R.C. VERSAILLES B 344 545 645 - APE 742 C

5.4 Magnetic effect test

(According to RTCA DO 160 D – Section 15)

- **Purpose of the test**

This test determines the magnetic effect to the equipment.

With the equipment operating in its functional mode defined chapter 3 and oriented to produce the maximum magnet deflection, measure the distance between the magnet pivot and the nearest part of the equipment at which a deflection of 1 degree exists.

- **Test set-up**

Calibration

The compass is placed on a wood table distant of magnetic source. The table is oriented according to East / West axis of the magnet pivot.

Test

The equipment powered is placed on the table and correctly oriented. Moving the equipment, on East / West axis, first toward and then away from the compass.

The test set-up is performed according to Figure 5.4.1 and photography Picture 5.4.2.

- Apparatus list


NoEmitech	Category	Marque	Type
5/24/00/039	Compass	Wilkie	-

- Test results

Mod	Deviation	Distance between the axis of the compass and the EUT
Armed	1°	17 cm
	2°	10.5 cm
Activated	1°	10.5 cm

Figure 5.4.1

MAGNETIC EFFECT TEST SET-UP

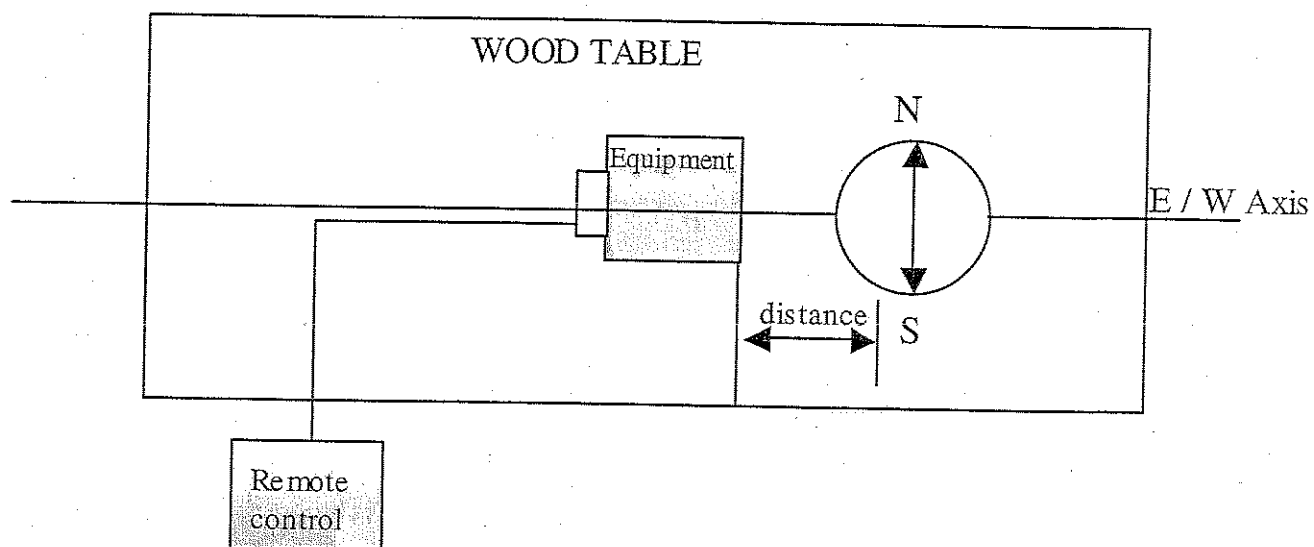

Picture 5.4.2

MAGNETIC EFFECT TEST SET-UP

