




# RADIO TEST REPORT


**Test Report No. : 10604551H-C**

**Applicant** : **silex technology, Inc.**  
**Type of Equipment** : **PCI Express Half mini card WLAN module**  
**Model No.** : **SX-PCEAN2**  
**FCC ID** : **N6C-SXPCEAN2**  
**Test regulation** : **FCC Part 15 Subpart E: 2015  
(DFS test only)**  
**Test Result** : **Complied**

1. This test report shall not be reproduced in full or partial, without the written approval of UL Japan, Inc.
2. The results in this report apply only to the sample tested.
3. This sample tested is in compliance with above regulation.
4. The test results in this report are traceable to the national or international standards.
5. This test report must not be used by the customer to claim product certification, approval, or endorsement by NVLAP, NIST, or any agency of the Federal Government.
6. This test report covers Radio technical requirements. It does not cover administrative issues such as Manual or non-Radio test related Requirements. (if applicable)

**Date of test:** March 16 to 27, 2015

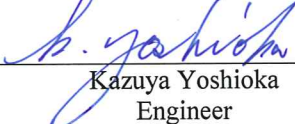**Representative test engineer:**   
Kazuya Yoshioka  
Engineer  
Consumer Technology Division

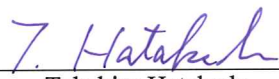**Approved by:**   
Takahiro Hatakeda  
Leader  
Consumer Technology Division



NVLAP LAB CODE: 200572-0

This laboratory is accredited by the NVLAP LAB CODE 200572-0, U.S.A. The tests reported herein have been performed in accordance with its terms of accreditation.  
\*As for the range of Accreditation in NVLAP, you may refer to the WEB address,  
<http://www.ul.com/japan/jpn/pages/services/emc/about/mark1/index.jsp#nvlap>

**UL Japan, Inc.**  
**Ise EMC Lab.**

4383-326 Asama-cho, Ise-shi, Mie-ken 516-0021 JAPAN  
Telephone : +81 596 24 8999  
Facsimile : +81 596 24 8124

---

## REVISION HISTORY

Original Test Report No.: 10604551H-C

| Revision        | Test report No. | Date          | Page revised | Contents |
|-----------------|-----------------|---------------|--------------|----------|
| -<br>(Original) | 10604551H-C     | April 2, 2015 | -            | -        |
|                 |                 |               |              |          |
|                 |                 |               |              |          |
|                 |                 |               |              |          |
|                 |                 |               |              |          |
|                 |                 |               |              |          |
|                 |                 |               |              |          |
|                 |                 |               |              |          |
|                 |                 |               |              |          |
|                 |                 |               |              |          |
|                 |                 |               |              |          |
|                 |                 |               |              |          |
|                 |                 |               |              |          |
|                 |                 |               |              |          |
|                 |                 |               |              |          |
|                 |                 |               |              |          |
|                 |                 |               |              |          |
|                 |                 |               |              |          |
|                 |                 |               |              |          |
|                 |                 |               |              |          |
|                 |                 |               |              |          |
|                 |                 |               |              |          |
|                 |                 |               |              |          |
|                 |                 |               |              |          |
|                 |                 |               |              |          |
|                 |                 |               |              |          |
|                 |                 |               |              |          |
|                 |                 |               |              |          |
|                 |                 |               |              |          |
|                 |                 |               |              |          |
|                 |                 |               |              |          |
|                 |                 |               |              |          |
|                 |                 |               |              |          |
|                 |                 |               |              |          |
|                 |                 |               |              |          |
|                 |                 |               |              |          |
|                 |                 |               |              |          |
|                 |                 |               |              |          |
|                 |                 |               |              |          |
|                 |                 |               |              |          |
|                 |                 |               |              |          |
|                 |                 |               |              |          |
|                 |                 |               |              |          |
|                 |                 |               |              |          |
|                 |                 |               |              |          |
|                 |                 |               |              |          |
|                 |                 |               |              |          |
|                 |                 |               |              |          |

| <b>CONTENTS</b>  | <b>PAGE</b> |
|--|-------------|
| <b>SECTION 1: Customer information.....</b>  | <b>4</b>    |
| <b>SECTION 2: Equipment under test (E.U.T.).....</b>                                       | <b>4</b>    |
| <b>SECTION 3: Scope of Report.....</b>   | <b>5</b>    |
| <b>SECTION 4: Test specification, procedures &amp; results.....</b>                        | <b>5</b>    |
| <b>SECTION 5: Operation of E.U.T. during testing.....</b>                                  | <b>11</b>   |
| <b>SECTION 6: U-NII Detection Bandwidth.....</b>   | <b>21</b>   |
| <b>SECTION 7: Initial Channel Availability Check Time .....</b>                            | <b>23</b>   |
| <b>SECTION 8: Radar Burst at the Beginning of the Channel Availability Check Time.....</b> | <b>24</b>   |
| <b>SECTION 9: Radar Burst at the End of the Channel Availability Check Time .....</b>      | <b>26</b>   |
| <b>SECTION 10: Channel Move Time, Channel Closing Transmission Time.....</b>               | <b>28</b>   |
| <b>SECTION 11: Non-Occupancy Period.....</b>   | <b>31</b>   |
| <b>SECTION 12: In-Service Monitoring(Statistical Performance Check) .....</b>              | <b>34</b>   |
| <b>APPENDIX 1: Data of DFS test .....</b>  | <b>36</b>   |
| <b>APPENDIX 2: Test instruments .....</b>  | <b>87</b>   |
| <b>APPENDIX 3: Photographs of test setup.....</b>  | <b>88</b>   |

---

**UL Japan, Inc.**

**Ise EMC Lab.**

4383-326 Asama-cho, Ise-shi, Mie-ken 516-0021 JAPAN

Telephone : +81 596 24 8999

Facsimile : +81 596 24 8124

## **SECTION 1: Customer information**

Company Name : silex technology, Inc.  
Address : 2-3-1 Hikaridai, Seika-cho, Kyoto 619-0237, Japan  
Telephone Number : +81-774-98-3878  
Facsimile Number : +81-774-98-3758  
Contact Person : Toshiro Kometani

## **SECTION 2: Equipment under test (E.U.T.)**

### **2.1 Identification of E.U.T.**

Type of Equipment : PCI Express Half mini card WLAN module  
Model No. : SX-PCEAN2  
Serial No. : Refer to Clause 4.2  
Rating : DC3.3V  
Receipt Date of Sample : February 12, 2015  
Country of Mass-production : Japan  
Condition of EUT : Production prototype  
(Not for Sale: This sample is equivalent to mass-produced items.)  
Modification of EUT : No Modification by the test lab

### **2.2 Product Description**

Model No: SX-PCEAN2 (referred to as the EUT in this report) is the PCI Express Half mini card WLAN module.

#### **General Specification**

Clock frequency(ies) in the system : 40MHz

#### **Radio Specification**

Radio Type : Transceiver  
Method of Frequency Generation : Synthesizer  
Power Supply (inner) : DC1.2V

#### **Radio Specification**

|                        | <b>IEEE802.11b</b>             | <b>IEEE802.11g/n<br/>(20 M band)</b>      | <b>IEEE802.11a/n<br/>(20 M band)</b>                                 | <b>IEEE802.11n<br/>(40 M band)</b>   |
|------------------------|--------------------------------|---|--|--|
| Frequency of operation | 2412-2462MHz                   | 2412-2462MHz                              | 5180-5240MHz<br>5260-5320MHz *1)<br>5500-5700MHz *1)<br>5745-5825MHz | 2422-2452MHz<br>5190-5230MHz<br>5270-5310MHz *1)<br>5510-5670MHz *1)<br>5755-5795MHz |
| Type of modulation     | DSSS<br>(CCK, DQPSK,<br>DBPSK) | OFDM-CCK<br>(64QAM, 16QAM,<br>QPSK, BPSK) | OFDM<br>(64QAM, 16QAM, QPSK, BPSK)                                   |  |
| Channel spacing        | 5MHz                           |   | 20MHz  | 2.4GHz: 5MHz<br>5GHz: 40MHz  |
| Antenna type           | WiFi Dual Band PCB antenna     |   |  |  |
| Antenna Gain           | 2.4GHz: 1.8dBi<br>5GHz: 3.9dBi |   |  |  |
| Antenna Connector type | U.FL Alternative connector     |   |  |  |

\*1) 5260-5320MHz, 5270-5310MHz, 5500-5700MHz, and 5510-5670MHz are applied for this test report.

## **UL Japan, Inc. Ise EMC Lab.**

4383-326 Asama-cho, Ise-shi, Mie-ken 516-0021 JAPAN  
Telephone : +81 596 24 8999  
Facsimile : +81 596 24 8124

### **SECTION 3: Scope of Report**

This report only covers DFS requirement, as specified by the following referenced procedures.

### **SECTION 4: Test specification, procedures & results**

#### **4.1 Test Specification**

|                    |   |   |
|--------------------|---|---|
| Test Specification | : | FCC Part 15 Subpart E: 2015, final revised on January 21, 2015  |
| Title              | : | FCC 47CFR Part15 Radio Frequency Device<br>Subpart E Unlicensed National Information Infrastructure Devices<br>Section 15.407 General technical requirements  |
| Test Specification | : | KDB905462 D02 UNII DFS Compliance Procedures New Rules v01r01   |
| Title              | : | COMPLIANCE MEASUREMENT PROCEDURES FOR UNLICENSED-<br>NATIONAL INFORMATION INFRASTRUCTURE DEVICES<br>OPERATING IN THE 5250-5350MHz AND 5470-5725MHz BANDS<br>INCORPORATING DYNAMIC FREQUENCY SELECTION |
| Test Specification | : | KDB905462 D03 Client Without DFS New Rules v01r01   |
| Title              | : | U-NII CLIENT DEVICES WITHOUT RADAR DETECTION CAPABILITY   |
| Test Specification | : | KDB905462 D04 Operational Modes for DFS Testing New Rules v01   |
| Title              | : | OPERATIONAL MODES SUGGESTED FOR DFS TESTING   |

#### **FCC Part 15.31 (e)**

The RF Module has own regulator.

The RF Module is constantly provided voltage through own regulator regardless of input voltage (DC3.3V).

Therefore, this EUT complies with the requirement.

#### **FCC Part 15.203/212 Antenna requirement**

The EUT has a unique antenna connector (U.FL on the Module).

Therefore the equipment complies with the requirement of 15.203/212.

---

**UL Japan, Inc.**

**Ise EMC Lab.**

4383-326 Asama-cho, Ise-shi, Mie-ken 516-0021 JAPAN

Telephone : +81 596 24 8999

Facsimile : +81 596 24 8124

## 4.2 Procedures and results

**Table 1: Applicability of DFS Requirements**

<Master mode>

| Requirement  | Operating Mode | Test Procedures                     | Limits  | Deviation | Results  |
|--|----------------|-------------------------------------|---|-----------|----------|
|  | Master         |                                     |   |           |          |
| U-NII Detection Bandwidth  | Yes            | FCC/IC:<br>KDB905462 D02 7.8.1      | FCC/IC:KDB905462 D02<br>5.3                             | N/A       | Complied |
| Initial Channel Availability Check Time  | Yes            | FCC/IC:<br>KDB905462 D02<br>7.8.2.1 | FCC:FCC15.407(h)(2)(ii)<br>IC:RSS-210 A9.3(b)(ii)       | N/A       | Complied |
| Radar Burst at the Beginning of the Channel Availability Check Time            | Yes            | FCC/IC:<br>KDB905462 D02<br>7.8.2.2 | FCC:FCC15.407(h)(2)(ii)<br>IC:RSS-210 A9.3(b)(ii)       | N/A       | Complied |
| Radar Burst at the End of the Channel Availability Check Time                  | Yes            | FCC/IC:<br>KDB905462 D02<br>7.8.2.3 | FCC:FCC15.407(h)(2)(ii)<br>IC:RSS-210 A9.3(b)(ii)       | N/A       | Complied |
| In-Service Monitoring for Channel Move Time, Channel Closing Transmission Time | Yes            | FCC/IC:<br>KDB905462 D02<br>7.8.3   | FCC:FCC15.407(h)(2)(iii)<br>IC:RSS-210 A9.3(b)(iii)(iv) | N/A       | Complied |
| In-Service Monitoring for Non-Occupancy period                                 | Yes            | FCC/IC:<br>KDB905462 D02<br>7.8.3   | FCC: FCC15.407(h)(2)(iv)<br>IC:RSS-210 A9.3(b)(v)       | N/A       | Complied |
| Statistical Performance Check  | Yes            | FCC/IC:<br>KDB905462 D02<br>7.8.4   | FCC/IC:KDB905462 D02<br>6.1,6.2,6.3                     | N/A       | Complied |
| Note: UL Japan, Inc.'s EMI Work Procedures No. 13-EM-W0422.                    |                |                                     |   |           |          |

**UL Japan, Inc.**

**Ise EMC Lab.**

4383-326 Asama-cho, Ise-shi, Mie-ken 516-0021 JAPAN

Telephone : +81 596 24 8999

Facsimile : +81 596 24 8124

< Client mode >

| Requirement  | Operating Mode                 | Test Procedures                     | Limits  | Deviation | Results  |
|--|--------------------------------|-------------------------------------|---|-----------|----------|
|  | Client Without Radar Detection |                                     |   |           |          |
| U-NII Detection Bandwidth  | No                             | FCC/IC:<br>KDB905462 D02 7.8.1      | FCC/IC:<br>KDB905462 D02 5.3                            | N/A       | N/A      |
| Initial Channel Availability Check Time  | No                             | FCC/IC:<br>KDB905462 D02<br>7.8.2.1 | FCC:FCC15.407(h)(2)(ii)<br>IC:RSS-210 A9.3(b)(ii)       | N/A       | N/A      |
| Radar Burst at the Beginning of the Channel Availability Check Time            | No                             | FCC/IC:<br>KDB905462 D02<br>7.8.2.2 | FCC:FCC15.407(h)(2)(ii)<br>IC:RSS-210 A9.3(b)(ii)       | N/A       | N/A      |
| Radar Burst at the End of the Channel Availability Check Time                  | No                             | FCC/IC:<br>KDB905462 D02<br>7.8.2.3 | FCC:FCC15.407(h)(2)(ii)<br>IC:RSS-210 A9.3(b)(ii)       | N/A       | N/A      |
| In-Service Monitoring for Channel Move Time, Channel Closing Transmission Time | Yes                            | FCC/IC:<br>KDB905462 D02<br>7.8.3   | FCC:FCC15.407(h)(2)(iii)<br>IC:RSS-210 A9.3(b)(iii)(iv) | N/A       | Complied |
| In-Service Monitoring for Non-Occupancy period                                 | Yes                            | FCC/IC:<br>KDB905462 D02<br>7.8.3   | FCC: FCC15.407(h)(2)(iv)<br>IC:RSS-210 A9.3(b)(v)       | N/A       | Complied |
| Statistical Performance Check  | No                             | FCC/IC:<br>KDB905462 D02<br>7.8.4   | FCC/IC:<br>KDB905462 D02<br>6.1,6.2,6.3                 | N/A       | N/A      |
| Note: UL Japan, Inc.'s EMI Work Procedures No. 13-EM-W0422.                    |                                |                                     |   |           |          |

**UL Japan, Inc.**  
**Ise EMC Lab.**

4383-326 Asama-cho, Ise-shi, Mie-ken 516-0021 JAPAN  
Telephone : +81 596 24 8999  
Facsimile : +81 596 24 8124

**Table 2 DFS Detection Thresholds for Master Devices and Client Devices With Radar Detection**

| Maximum Transmit Power  | Value (See Notes 1,2, and 3) |
|---|------------------------------|
| ≥ 200 milliwatt   | -64 dBm                      |
| < 200 milliwatt and power spectral density < 10dBm/MHz  | -62 dBm                      |
| < 200 milliwatt that do not meet the power spectral density requirement   | -64 dBm                      |
| <p>Note 1: This is the level at the input of the receiver assuming a 0 dBi receive antenna.</p> <p>Note 2: Throughout these test procedures an additional 1 dB has been added to the amplitude of the test transmission waveforms to account for variations in measurement equipment. This will ensure that the test signal is at or above the detection threshold level to trigger a DFS response.</p> <p>Note 3: EIRP is based on the highest antenna gain. For MIMO devices refer to KDB Publication 662911 D01.</p> |                              |

**Table 3 DFS Response Requirement Values**

| Parameter   | Value  |
|---|--|
| Non-occupancy period  | Minimum 30 minutes   |
| Channel Availability Check Time   | 60 seconds   |
| Channel Move Time   | 10 seconds<br>See Note 1   |
| Channel Closing Transmission Time   | 200 milliseconds + an aggregate of 60 milliseconds over remaining 10 second period.<br>See Notes 1 and 2 |
| U-NII Detection Bandwidth   | Minimum 100% of the U-NII 99% transmission power bandwidth<br>See Note 3                                 |
| <p><b>Note 1:</b> Channel Move Time and the Channel Closing Transmission Time should be performed with Radar Type 0. The measurement timing begins at the end of the Radar Type 0 burst.</p> <p><b>Note 2:</b> The Channel Closing Transmission Time is comprised of 200 milliseconds starting at the beginning of the Channel Move Time plus any additional intermittent control signals required to facilitate a Channel move (an aggregate of 60 milliseconds) during the remainder of the 10 second period. The aggregate duration of control signal will not count quiet periods in between transmissions.</p> <p><b>Note 3:</b> During the U-NII Detection Bandwidth detection test, radar type 0 should be used. For each frequency step the minimum percentage of detection is 90 percent. Measurements are performed with no data traffic.</p> |  |

**UL Japan, Inc.**

**Ise EMC Lab.**

4383-326 Asama-cho, Ise-shi, Mie-ken 516-0021 JAPAN

Telephone : +81 596 24 8999

Facsimile : +81 596 24 8124



**Table 4 Short Pulse Radar Test Waveform**

| Radar Type   | Pulse Width (μsec) | PRI (μsec)  | Number of Pulses   | Minimum Percentage of Successful Detection | Minimum Number of Trials |
|--|--------------------|---|--|--|--------------------------|
| 0  | 1                  | 1428  | 18   | See Note 1                                 | See Note 1               |
| 1  | 1                  | Test A: 15 unique PRI values randomly selected from the list of 23 PRI values in Table 5a   | Roundup $\{(1/360) * (19 * 10^6 / \text{PRI}_{\text{μsec}})\}$ | 60%  | 30                       |
|  |                    | Test B: 15 unique PRI values randomly selected within the range of 518-3066 μsec, with a minimum increment of 1 μsec, excluding PRI values selected in Test A |  |  |                          |
| 2  | 1-5                | 150-230   | 23-29  | 60%  | 30                       |
| 3  | 6-10               | 200-500   | 16-18  | 60%  | 30                       |
| 4  | 11-20              | 200-500   | 12-16  | 60%  | 30                       |
| Aggregate (Rader Types 1-4)  |                    |   |  | 80%  | 120                      |
| Note 1: Short Pulse Radar Type 0 should be used for the detection bandwidth test, channel move time, and channel closing time tests. |                    |   |  |  |                          |

**Table 5 Long Pulse Radar Test Waveform**

| Radar Type | Pulse Width (μsec) | Chip Width (MHz) | PRI (μsec) | Number of Pulses per Burst | Number of Burst | Minimum Percentage of Successful Detection | Minimum Number of Trials |
|------------|--------------------|------------------|------------|----------------------------|-----------------|--|--------------------------|
| 5          | 50-100             | 5-20             | 1000-2000  | 1-3                        | 8-20            | 80%  | 30                       |

**Table 6 Frequency Hopping Radar Test Waveform**

| Radar Type | Pulse Width (μsec) | PRI (μsec) | Pulse per Hop (kHz) | Hopping Rate (kHz) | Hopping Sequence Length (msec) | Minimum Percentage of Successful Detection | Minimum Number of Trials |
|------------|--------------------|------------|---------------------|--------------------|--------------------------------|--|--------------------------|
| 6          | 1                  | 333        | 9                   | 0.333              | 300                            | 70%  | 30                       |

### 4.3 Test Location

UL Japan, Inc. Ise EMC Lab. \*NVLAP Lab. code: 200572-0  
4383-326 Asama-cho, Ise-shi, Mie-ken 516-0021 JAPAN  
Telephone : +81 596 24 8999 Facsimile : +81 596 24 8124

|                            | IC Registration Number | Width x Depth x Height (m) | Size of reference ground plane (m) / horizontal conducting plane | Other rooms            |
|----------------------------|------------------------|----------------------------|--|------------------------|
| No.1 semi-anechoic chamber | 2973C-1                | 19.2 x 11.2 x 7.7m         | 7.0 x 6.0m   | No.1 Power source room |
| No.2 semi-anechoic chamber | 2973C-2                | 7.5 x 5.8 x 5.2m           | 4.0 x 4.0m   | -                      |
| No.3 semi-anechoic chamber | 2973C-3                | 12.0 x 8.5 x 5.9m          | 6.8 x 5.75m  | No.3 Preparation room  |
| No.3 shielded room         | -                      | 4.0 x 6.0 x 2.7m           | N/A  | -                      |
| No.4 semi-anechoic chamber | 2973C-4                | 12.0 x 8.5 x 5.9m          | 6.8 x 5.75m  | No.4 Preparation room  |
| No.4 shielded room         | -                      | 4.0 x 6.0 x 2.7m           | N/A  | -                      |
| No.5 semi-anechoic chamber | -                      | 6.0 x 6.0 x 3.9m           | 6.0 x 6.0m   | -                      |
| No.6 shielded room         | -                      | 4.0 x 4.5 x 2.7m           | 4.0 x 4.5 m  | -                      |
| No.6 measurement room      | -                      | 4.75 x 5.4 x 3.0m          | 4.75 x 4.15 m  | -                      |
| No.7 shielded room         | -                      | 4.7 x 7.5 x 2.7m           | 4.7 x 7.5m   | -                      |
| No.8 measurement room      | -                      | 3.1 x 5.0 x 2.7m           | N/A  | -                      |
| No.9 measurement room      | -                      | 8.0 x 4.6 x 2.8m           | 2.4 x 2.4m   | -                      |
| No.11 measurement room     | -                      | 6.2 x 4.7 x 3.0m           | 4.8 x 4.6m   | -                      |

\* Size of vertical conducting plane (for Conducted Emission test) : 2.0 x 2.0m for No.1, No.2, No.3, and No.4 semi-anechoic chambers and No.3 and No.4 shielded rooms.

### 4.4 Uncertainty

The following uncertainties have been calculated to provide a confidence level of 95% using a coverage factor k=2.  
Time Measurement uncertainty for this test was: (±) 0.012%

### 4.5 Data of DFS test, Test instruments of DFS, Test set up

Refer to APPENDIX.

## UL Japan, Inc. Ise EMC Lab.

4383-326 Asama-cho, Ise-shi, Mie-ken 516-0021 JAPAN  
Telephone : +81 596 24 8999  
Facsimile : +81 596 24 8124

## **SECTION 5: Operation of E.U.T. during testing**

### **5.1 Operating Modes**

For FCC the EUT operates over the 5250-5350MHz and 5470-5725MHz ranges.

For IC the EUT operates over the 5250-5350MHz and 5470-5725MHz ranges, excluding the 5600-5650MHz range.

The EUT has the Master mode and the Client mode without Radar Detection.

The highest power level is 20.76dBm EIRP in the 5250-5350MHz band.

Power level(EIRP) of the EUT[dBm]

| Output Power (Max) |         |
|--------------------|---------|
| 20Mband            | 40Mband |
| 20.76              | 18.40   |

Power spectral density level of the EUT[dBm/MHz]

| Output Power (Max) |         |
|--------------------|---------|
| 20Mband            | 40Mband |
| 6.45               | 0.79    |

\*Refer to 10604551H-B, FCC Part 15E (FCC 15.407) report for other parts than DFS.

The channel-loading of approximately 17% or greater was used for testing, and its test data was transferred from the Master Device to the Client Device for all test configurations.

The EUT utilizes the 802.11a/n architecture, with a 20MHz and 40MHz channel bandwidth.

WLAN traffic is generated by streaming the MPEG Test file "6 ½ Magic Hours" from the Master to the Client in full motion video mode using the media player with the V2.61 Codec package.

#### 1. In case of Master mode

The rated output power of the Master Device is <200mW(23dBm) and power spectral density of the Master Device is <10dBm/MHz. However, worst condition was selected for interference threshold level and antenna gain according to the customer's request. Therefore the required interference threshold level is -64 dBm. After correction for antenna gain and procedural adjustments, the required conducted threshold at the antenna port is  $-64 + 1 + 0 = -63$  dBm (threshold level + additional 1dB + antenna gain).

#### 2. In case of Client mode without Radar Detection

The FCC ID for the Master Device used with EUT for DFS testing is LDK102061.

The rated output power of the Master unit is >200mW(23dBm). Therefore the required interference threshold level is -64 dBm. After correction for antenna gain and procedural adjustments, the required conducted threshold at the antenna port is  $-64 + 1 + 3.5 = -59.5$  dBm (threshold level + additional 1dB + antenna gain).

It is impossible for users to change DFS control, because the DFS function is written on the firmware and users cannot access it.

The EUT was set by the software as follows:

Software name & version: LSDK-10.2-00082-4

---

**UL Japan, Inc.**

**Ise EMC Lab.**


4383-326 Asama-cho, Ise-shi, Mie-ken 516-0021 JAPAN

Telephone : +81 596 24 8999

Facsimile : +81 596 24 8124

## 5.2 Configuration and peripherals

<Master mode>

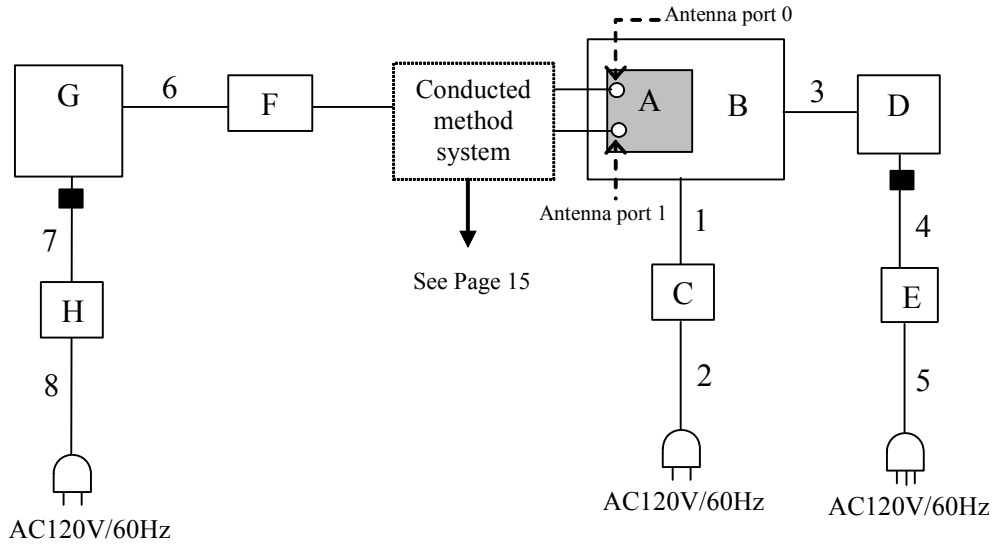

■ : Standard Ferrite Core

\* Cabling and setup(s) were taken into consideration and test data was taken under worse case conditions.

\* The test was performed using a typical evaluation board (Jig board).

### Description of EUT

| No. | Item                                   | Model number   | Serial number                 | Manufacturer | Remarks |
|-----|--|----------------|-------------------------------|--------------|---------|
| A   | PCI Express Half Mini Card WLAN Module | SX-PCEAN2      | 002                           | Silex        | EUT     |
| B   | Jig board                              | -              | -                             | -            | -       |
| C   | AC Adapter                             | UI318-12       | C07-0504976                   | UNIFIVE      | -       |
| D   | Laptop PC                              | T60            | L3-DM302                      | IBM          | -       |
| E   | AC Adapter                             | 92P1160        | 11S92P1160Z1ZBGH6B6D KV       | IBM          | -       |
| F   | Wireless LAN Adapter                   | WI-U3-866V     | A40707                        | BUFFALO      | -       |
| G   | Laptop PC                              | Latitude E6530 | CUO1930                       | DELL         | -       |
| H   | AC Adapter                             | PA-1900-32D2   | CN-0Y4M8K-72438-2B Q-72B9-A00 | DELL         | -       |

### List of cables used

| No. | Name      | Length (m) | Shield     |            | Remarks |
|-----|-----------|------------|------------|------------|---------|
|     |           |            | Cable      | Connector  |         |
| 1   | DC Cable  | 1.8        | Unshielded | Unshielded | -       |
| 2   | AC Cable  | 1.0        | Unshielded | Unshielded | -       |
| 3   | LAN Cable | 1.8        | Unshielded | Unshielded | -       |
| 4   | DC Cable  | 1.8        | Unshielded | Unshielded | -       |
| 5   | AC Cable  | 0.9        | Unshielded | Unshielded | -       |
| 6   | USB Cable | 0.5        | Shielded   | Shielded   | -       |
| 7   | DC Cable  | 1.8        | Unshielded | Unshielded | -       |
| 8   | AC Cable  | 1.0        | Unshielded | Unshielded | -       |

**UL Japan, Inc.**


**Ise EMC Lab.**

4383-326 Asama-cho, Ise-shi, Mie-ken 516-0021 JAPAN

Telephone : +81 596 24 8999

Facsimile : +81 596 24 8124

<Client mode>

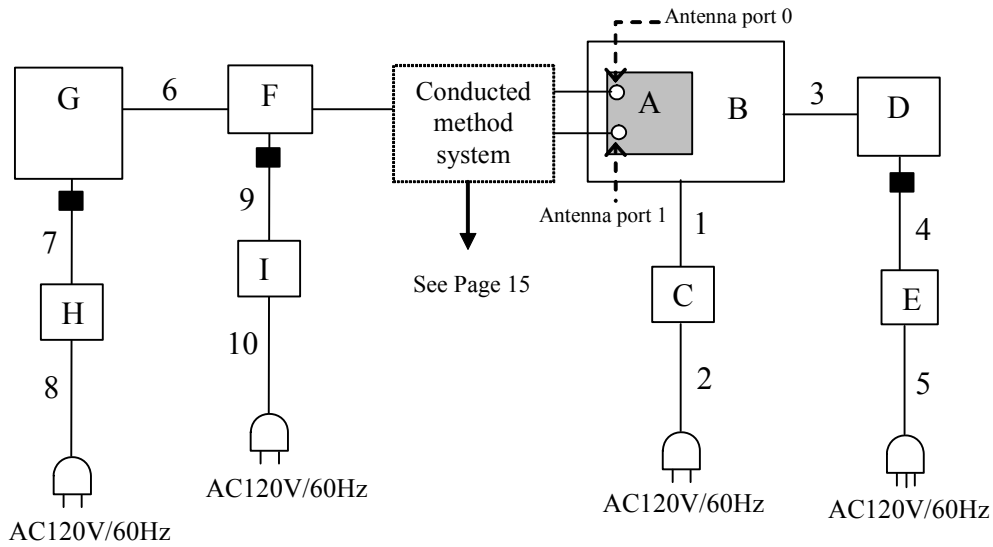

■ : Standard Ferrite Core

\* Cabling and setup(s) were taken into consideration and test data was taken under worse case conditions.

\* The test was performed using a typical evaluation board (Jig board).

**Description of EUT**

| No. | Item                                   | Model number      | Serial number                 | Manufacturer           | Remarks |
|-----|--|-------------------|-------------------------------|------------------------|---------|
| A   | PCI Express Half Mini Card WLAN Module | SX-PCEAN2         | 002                           | Silex                  | EUT     |
| B   | Jig board                              | -                 | -                             | -                      | -       |
| C   | AC Adapter                             | UI318-12          | CO7-0504976                   | UNIFIVE                | -       |
| D   | Laptop PC                              | T60               | L3-DM302                      | IBM                    | -       |
| E   | AC Adapter                             | 92P1160           | 11S92P1160Z1ZBGH6B6D KV       | IBM                    | -       |
| F   | Wireless LAN access point              | AIR-AP1252AG-A-K9 | FTX122391JU                   | Cisco Systems          | -       |
| G   | Laptop PC                              | Latitube E6530    | CUO1930                       | DELL                   | -       |
| H   | AC Adapter                             | PA-1900-32D2      | CN-0Y4M8K-72438-2B Q-72B9-A00 | DELL                   | -       |
| I   | AC Adapter                             | EADP-45BB         | DTH11329086                   | DELTA ELECTRONICS,INC. | -       |

**List of cables used**

| No. | Name      | Length (m) | Shield     |            | Remarks |
|-----|-----------|------------|------------|------------|---------|
|     |           |            | Cable      | Connector  |         |
| 1   | DC Cable  | 1.8        | Unshielded | Unshielded | -       |
| 2   | AC Cable  | 1.0        | Unshielded | Unshielded | -       |
| 3   | LAN Cable | 1.8        | Unshielded | Unshielded | -       |
| 4   | DC Cable  | 1.8        | Unshielded | Unshielded | -       |
| 5   | AC Cable  | 0.9        | Unshielded | Unshielded | -       |
| 6   | LAN Cable | 1.0        | Unshielded | Unshielded | -       |
| 7   | DC Cable  | 1.8        | Unshielded | Unshielded | -       |
| 8   | AC Cable  | 1.0        | Unshielded | Unshielded | -       |
| 9   | DC Cable  | 1.8        | Unshielded | Unshielded | -       |
| 10  | AC Cable  | 2.0        | Unshielded | Unshielded | -       |

**UL Japan, Inc.**

**Ise EMC Lab.**

4383-326 Asama-cho, Ise-shi, Mie-ken 516-0021 JAPAN

Telephone : +81 596 24 8999

Facsimile : +81 596 24 8124

### 5.3 Test and Measurement System

#### SYSTEM OVERVIEW

The measurement system is based on a conducted test method.

The software selects waveform parameters from within the bounds of the signal type on a random basis using uniform distribution. The short pulse types 1, 2, 3, and 4, the long pulse type 5, and the frequency hopping type 6 parameters are randomized at run-time.

The signal monitoring equipment consists of a spectrum analyzer with the capacity to display 8001 bins on the horizontal axis. A time-domain resolution of 2 msec/bin is achievable with a 16 second sweep time, meeting the 10 seconds short pulse reporting criteria. The aggregate ON time is calculated by multiplying the number of bins above a threshold during a particular observation period by the dwell time per bin, with the analyzer set to peak detection.

#### FREQUENCY HOPPING RADAR WAVEFORM GENERATING SUBSYSTEM

The first 100 frequencies are selected out of the hopping sequence of the randomized 475 hop frequencies. Only a *Burst* that has the frequency falling within the receiver bandwidth of the tested U-NII device is selected among those frequencies. (Frequency-domain simulation). The radar waveform generated at the start time of the selected *Burst* (Time-domain simulation) is download to the Signal Generator. If all of the randomly selected 100 frequencies do not fall within the receiver bandwidth of the U-NII device, the radar waveform is not used for the test.

---

**UL Japan, Inc.**

**Ise EMC Lab.**


4383-326 Asama-cho, Ise-shi, Mie-ken 516-0021 JAPAN

Telephone : +81 596 24 8999


Facsimile : +81 596 24 8124

**CONDUCTED METHODS SYSTEM BLOCK DIAGRAM**

**<Master mode>**

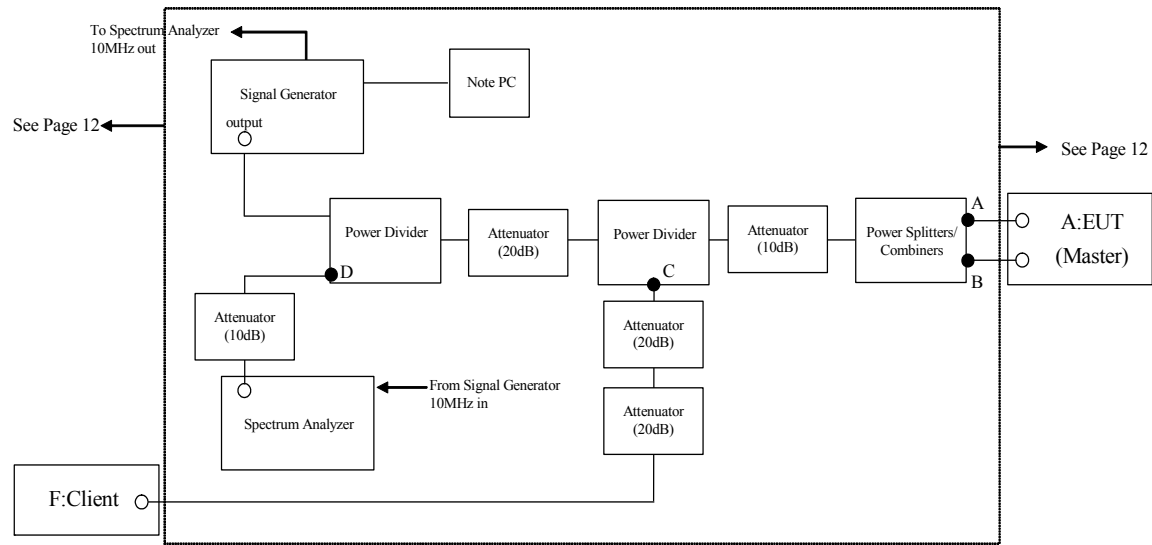

**<Client mode>**

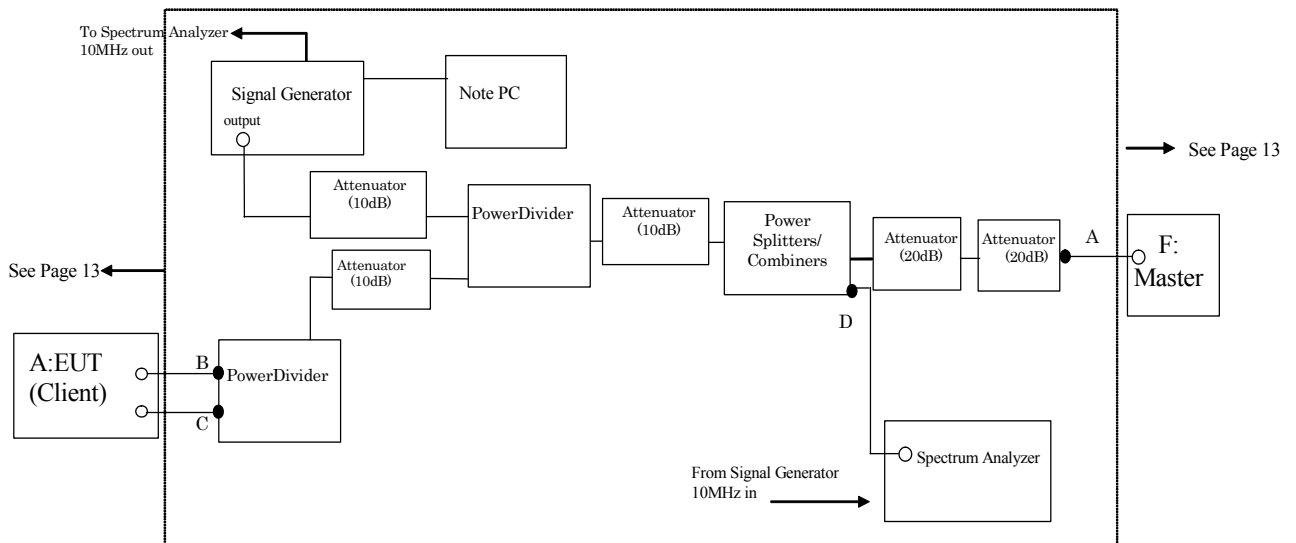

**MEASUREMENT SYSTEM FREQUENCY REFERENCE**

Lock the signal generator and the spectrum analyzer to the same reference sources as follows: Connect the 10MHz OUT on the signal generator to the 10MHz IN on the spectrum analyzer and set the spectrum analyzer 10MHz In to On.

**UL Japan, Inc.**  
**Ise EMC Lab.**

4383-326 Asama-cho, Ise-shi, Mie-ken 516-0021 JAPAN  
 Telephone : +81 596 24 8999  
 Facsimile : +81 596 24 8124

## **SYSTEM CALIBRATION**

<Master mode>

**Step 1:** Set the system as shown in Figure 2 of KDB905462 D02 7.2.1.

**Step 2:** Adjust each attenuator to fulfill the following three conditions:

- WLAN can be communicated, and
- Rader detection threshold level is bigger than Master Device traffic level on the spectrum analyzer, and
- Client Device traffic level is not displayed on the spectrum analyzer.

**Step 3:** Terminate 50 ohm at B, C and D points, and connect the spectrum analyzer to the point A. (See the figure on page 15)

At the point A, adjust the signal generator and spectrum analyzer to the center frequency of the channel to be measured.

Download the applicable radar waveforms to the signal generator. Select the radar waveform, trigger a burst manually and measure the amplitude on the spectrum analyzer. Readjust the amplitude of the signal generator as required so that the peak level of the waveform is at a displayed level equal to the required or desired interference detection threshold.

Separate signal generator amplitude settings are determined as required for each radar type.

<Client mode>

**Step 1:** Set the system as shown in Figure 3 of KDB905462 D02 7.2.2.

**Step 2:** Adjust each attenuator to fulfill the following three conditions:

- WLAN can be communicated, and
- Rader detection threshold level is bigger than Client Device traffic level on the spectrum analyzer, and
- Master Device traffic level is not displayed on the spectrum analyzer.

**Step 3:** Terminate 50 ohm at B, C and D points, and connect the spectrum analyzer to the point A. (See the figure on page 15)

At the point A, adjust the signal generator and spectrum analyzer to the center frequency of the channel to be measured.

Download the applicable radar waveforms to the signal generator. Select the radar waveform, trigger a burst manually and measure the amplitude on the spectrum analyzer. Readjust the amplitude of the signal generator as required so that the peak level of the waveform is at a displayed level equal to the required or desired interference detection threshold.

Separate signal generator amplitude settings are determined as required for each radar type.

**Step 4:** Without changing any of the instrument settings, restore the system setting to Step 2 and adjust the Reference Level Offset of the spectrum analyzer to the level at Step 3.

By taking the above steps 1 to 4, the spectrum analyzer displays the level of the signal generator as received at the antenna ports of the Master Device.

See Clause 5.4 for Plots of Noise, Rader Waveforms, and WLAN signals.

---

**UL Japan, Inc.**

**Ise EMC Lab.**

4383-326 Asama-cho, Ise-shi, Mie-ken 516-0021 JAPAN


Telephone : +81 596 24 8999

Facsimile : +81 596 24 8124




### 5.4 Plots of Noise, Rader Waveforms, and WLAN signals



<Master mode>

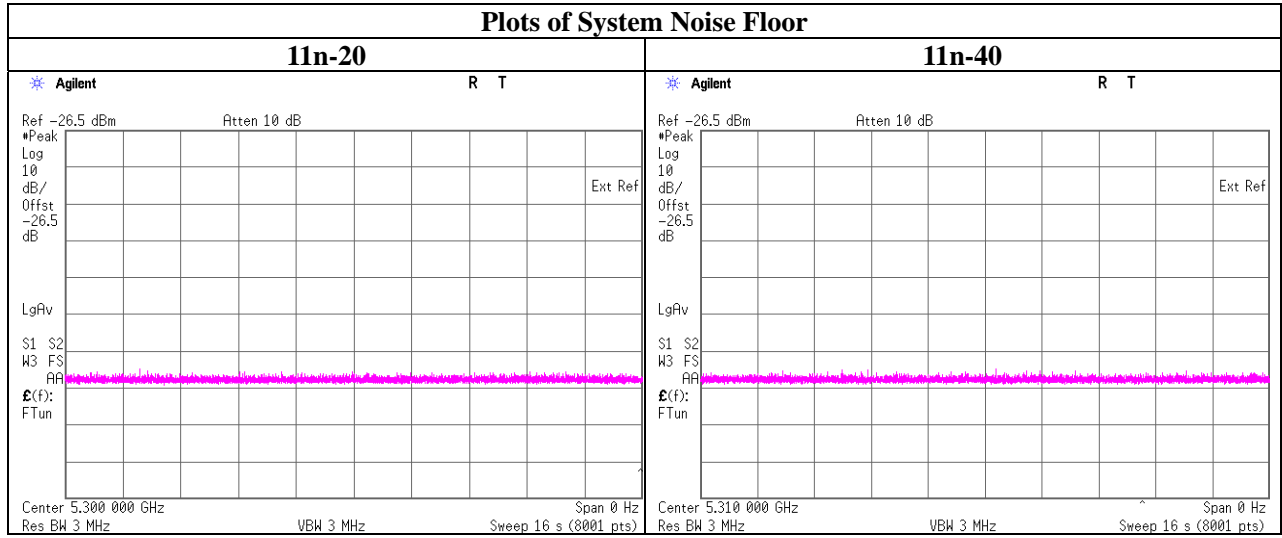




**UL Japan, Inc.**  
**Ise EMC Lab.**

4383-326 Asama-cho, Ise-shi, Mie-ken 516-0021 JAPAN  
 Telephone : +81 596 24 8999  
 Facsimile : +81 596 24 8124

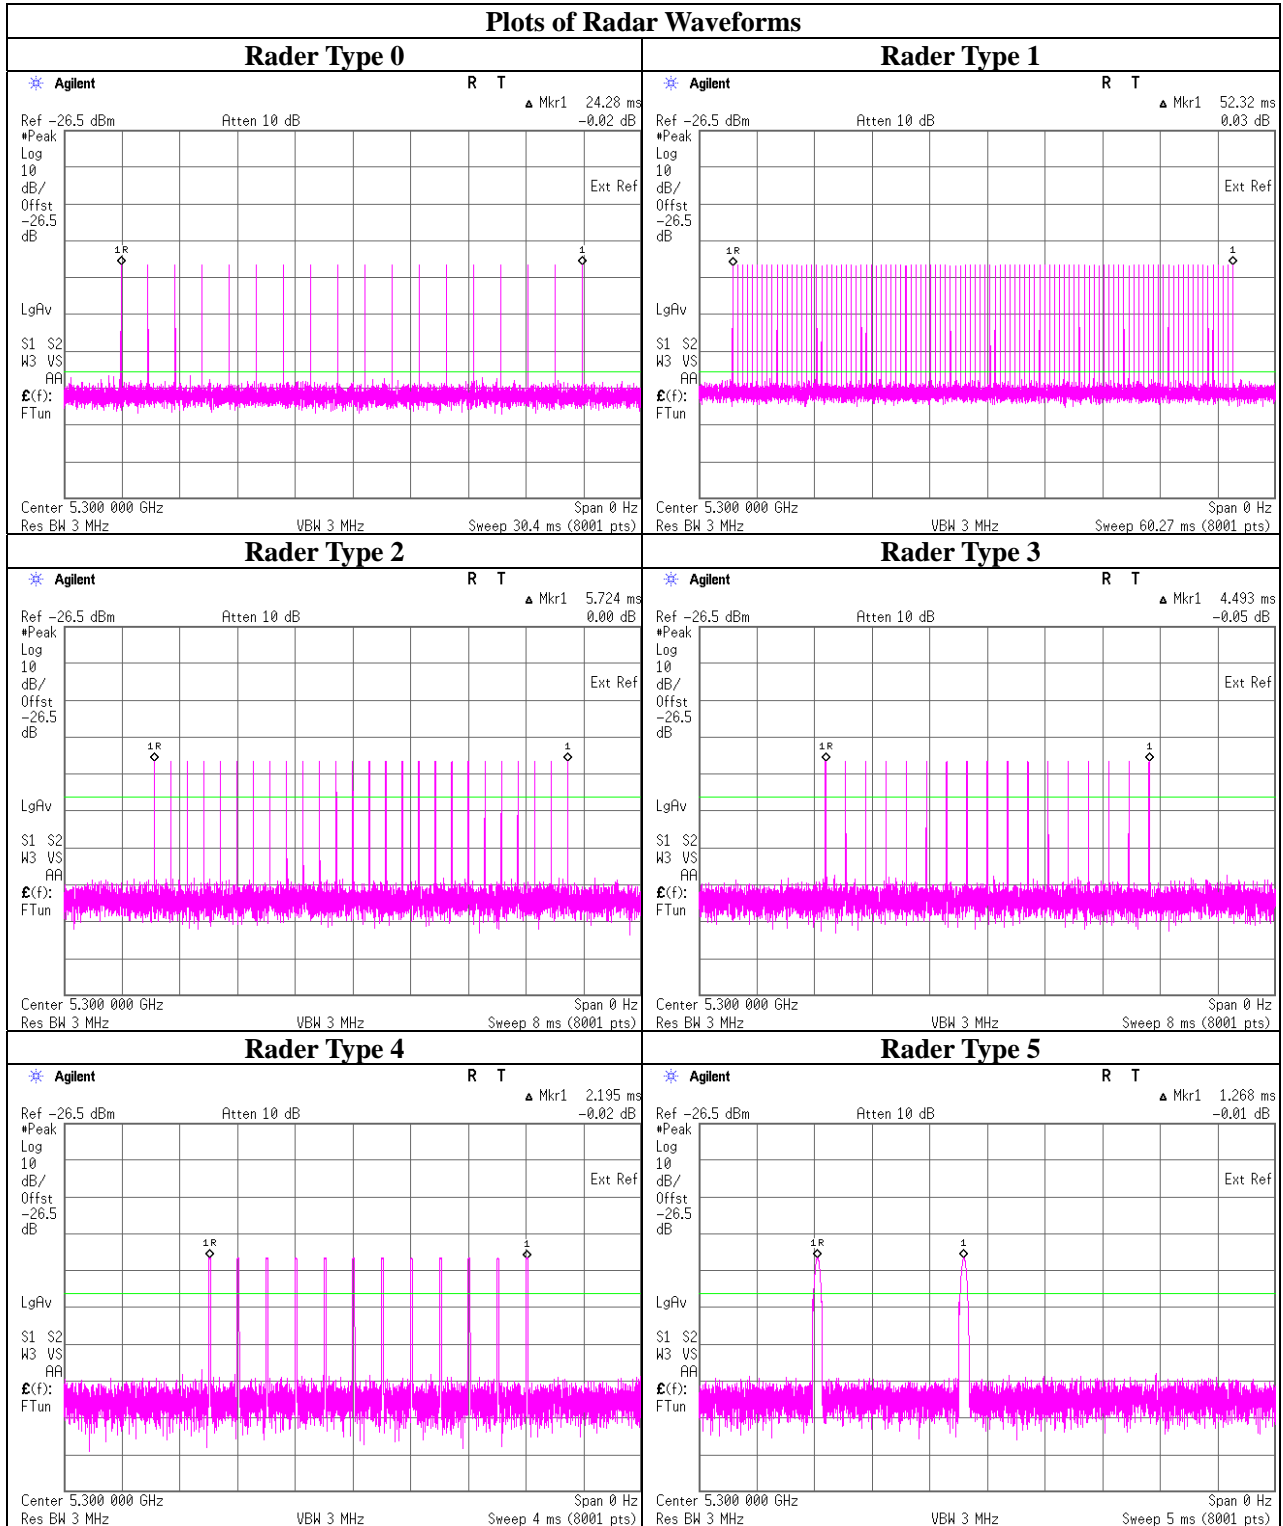

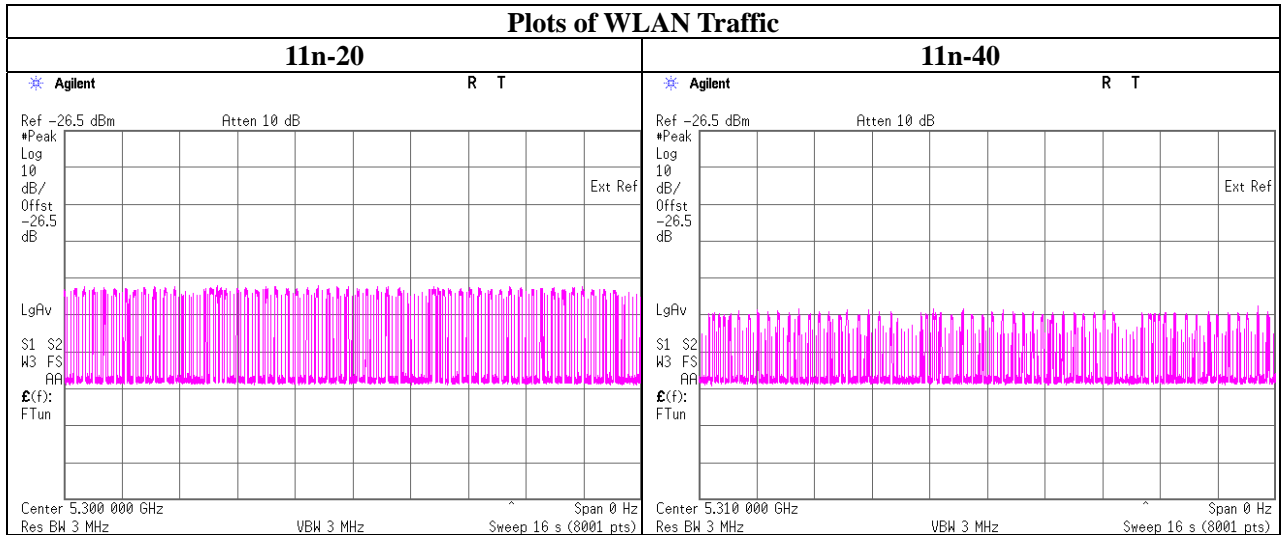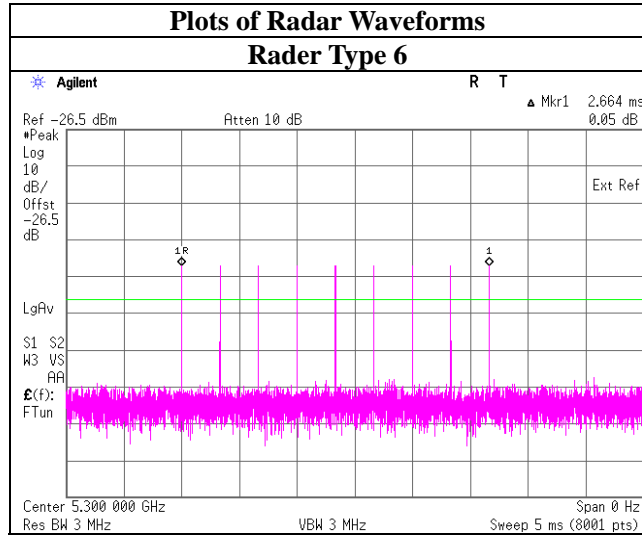

<Client mode>

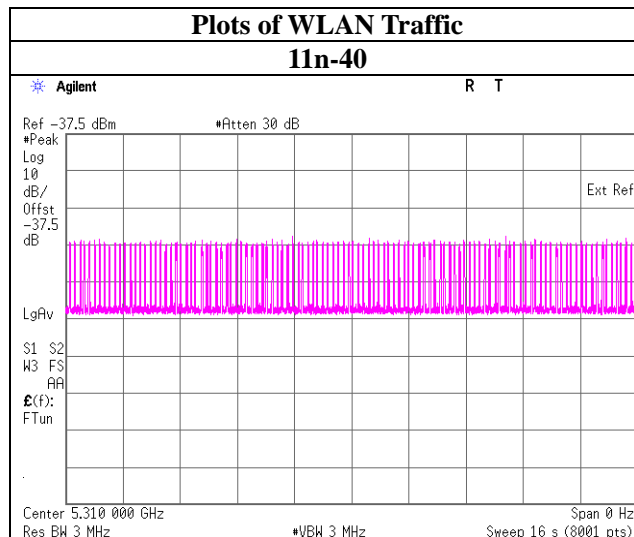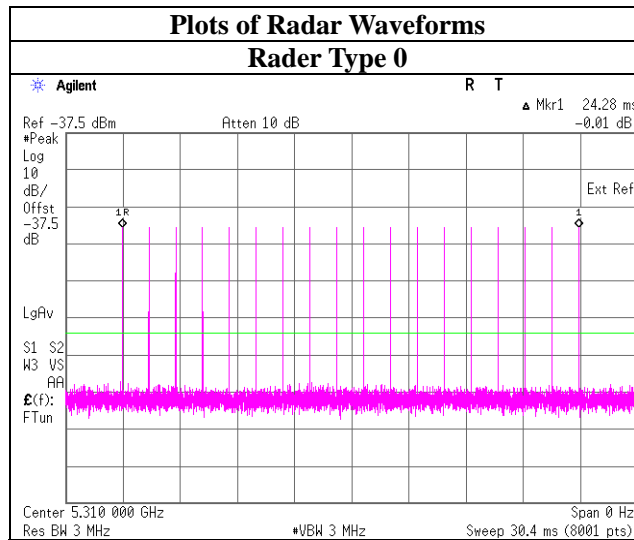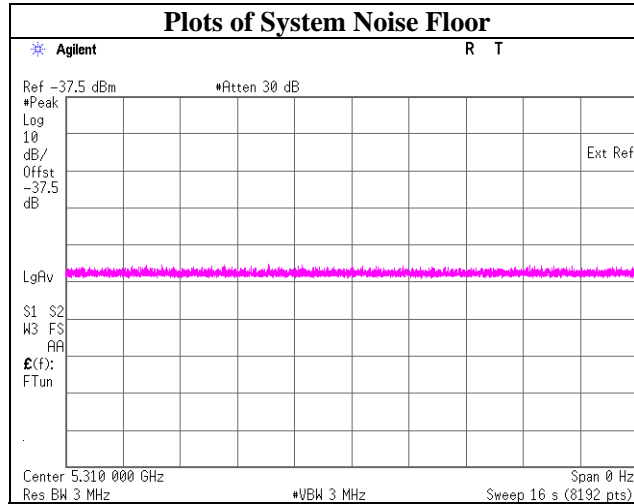

## **SECTION 6: U-NII Detection Bandwidth**

### **6.1 Operating environment**

|                       |                                     |
|-----------------------|-------------------------------------|
| Test place            | Ise EMC Lab. No.11 measurement room |
| Date                  | 03/19/2015                          |
| Temperature/ Humidity | 23deg. C / 42% RH                   |
| Engineer              | Kazuya Yoshioka                     |
| Mode                  | 11n-20 / 11n-40                     |

### **6.2 Test Procedure**

Adjust the equipment to produce a single Burst of the Short Pulse Radar Type 0 at the center frequency of the EUT Operating Channel at the specified DFS Detection Threshold level.

Set the EUT up as a standalone device (no associated Client or Master, as appropriate) and no traffic.

Frame based systems will be set to a talk/listen ratio reflecting the worst case (maximum) that is user configurable during this test.

Generate a single radar Burst, and note the response of the EUT. Repeat for a minimum of 10 trials. The EUT must detect the Radar Waveform within the DFS band using the specified U-NII Detection Bandwidth criterion. In cases where the channel bandwidth may exceed past the DFS band edge on specific channels (i.e., 802.11ac or wideband frame based systems) select a channel that has the entire emission bandwidth within the DFS band. If this is not possible, test the detection BW to the DFS band edge.

Starting at the center frequency of the EUT operating Channel, increase the radar frequency in 5 MHz steps, repeating the above test sequence, until the detection rate falls below the U-NII Detection Bandwidth criterion. Repeat this measurement in 1MHz steps at frequencies 5 MHz below where the detection rate begins to fall. Record the highest frequency (denote as FH) at which detection is greater than or equal to the U-NII Detection Bandwidth criterion. Recording the detection rate at frequencies above FH is not required to demonstrate compliance.

Starting at the center frequency of the EUT operating Channel, decrease the radar frequency in 5 MHz steps, repeating the above test sequence, until the detection rate falls below the U-NII Detection Bandwidth criterion. Repeat this measurement in 1MHz steps at frequencies 5 MHz above where the detection rate begins to fall. Record the lowest frequency (denote as FL) at which detection is greater than or equal to the U-NII Detection Bandwidth criterion. Recording the detection rate at frequencies below FL is not required to demonstrate compliance.

The U-NII Detection Bandwidth is calculated as follows:

U-NII Detection Bandwidth = FH – FL

Radar detection is observed by two techniques.

- a). Monitoring LAN traffic with Spectrum Analyzer.
- b). Indicator of EUT and PC connected to EUT

---

**UL Japan, Inc.**

**Ise EMC Lab.**

4383-326 Asama-cho, Ise-shi, Mie-ken 516-0021 JAPAN

Telephone : +81 596 24 8999

Facsimile : +81 596 24 8124

**6.3 Test data**

5300MHz (11n-20)

Waveform : Radar Type 0


| FL<br>[MHz] | FH<br>[MHz] | Detection<br>Bandwidth<br>[MHz] | 99% Power<br>Bandwidth<br>[MHz] | Ratio of Detection BW<br>to 99% Power BW<br>[%] | Limit<br>[%] | Results |
|-------------|-------------|---------------------------------|---------------------------------|---|--------------|---------|
| 5291        | 5310        | 19                              | 17.6110                         | 107.9   | 100          | Pass    |

5310MHz (11n-40)

Waveform : Radar Type 0

| FL<br>[MHz] | FH<br>[MHz] | Detection<br>Bandwidth<br>[MHz] | 99% Power<br>Bandwidth<br>[MHz] | Ratio of Detection BW<br>to 99% Power BW<br>[%] | Limit<br>[%] | Results |
|-------------|-------------|---------------------------------|---------------------------------|---|--------------|---------|
| 5290        | 5330        | 40                              | 36.1193                         | 110.7   | 100          | Pass    |

**99% Occupied Bandwidth**

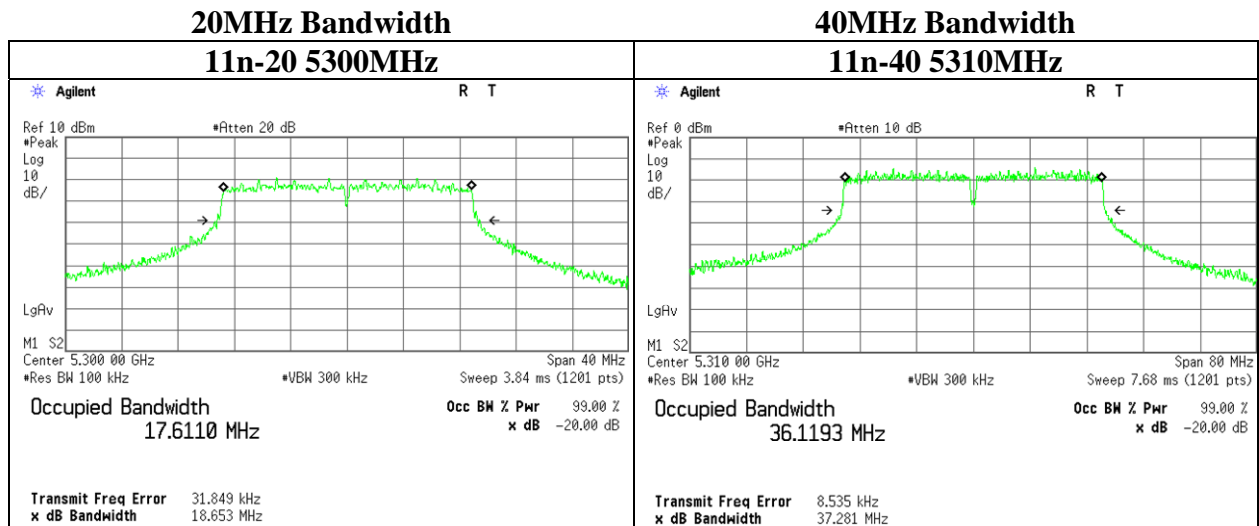

**6.4 Test result**

Test result: Pass

## SECTION 7: Initial Channel Availability Check Time

### 7.1 Operating environment

Test place : Ise EMC Lab. No.11 measurement room  
Date : 03/20/2015  
Temperature/ Humidity : 23deg. C / 45% RH  
Engineer : Kazuya Yoshioka  
Mode : 11n-20

### 7.2 Test Procedure


The Initial Channel Availability Check Time tests that the EUT does not emit beacon, control, or data signals on the test Channel until the power-up sequence has been completed and the U-NII device checks for Radar Waveforms for one minute on the test Channel.

This test does not use any Radar Waveforms and only needs to be performed one time.

The U-NII devices will be powered on and be instructed to operate on the appropriate U-NII Channel that must incorporate DFS functions. At the same time the EUT is powered on, the spectrum analyzer will be set to zero span mode with a 3 MHz RBW and 3 MHz VBW on the Channel occupied by the radar (Chr) with a 2.5 minute sweep time. The spectrum analyzer's sweep will be started at the same time power is applied to the U-NII device.

The EUT should not transmit any beacon or data transmissions until at least 1 minute after the completion of the power-on cycle.

### 7.3 Test data

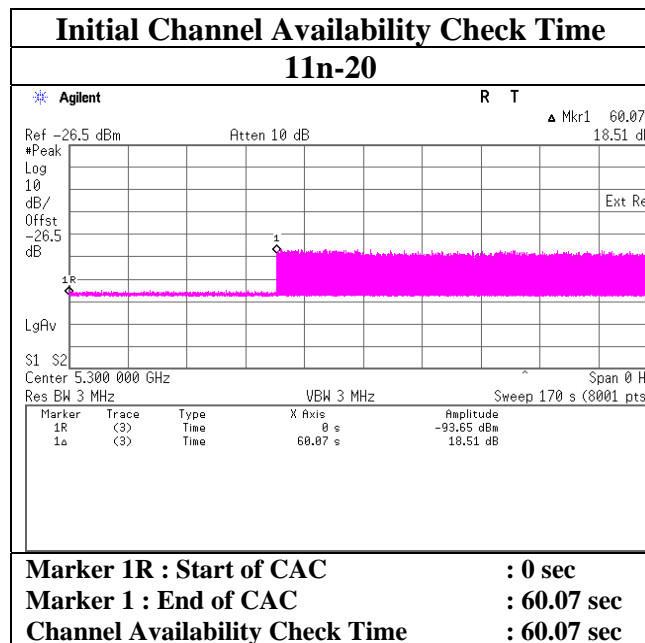

### 7.4 Test result

Test result: Pass

**UL Japan, Inc.**

**Ise EMC Lab.**

4383-326 Asama-cho, Ise-shi, Mie-ken 516-0021 JAPAN

Telephone : +81 596 24 8999

Facsimile : +81 596 24 8124

**SECTION 8: Radar Burst at the Beginning of the Channel Availability Check Time**


**8.1 Operating environment**

Test place : Ise EMC Lab. No.11 measurement room  
Date : 03/20/2015  
Temperature/ Humidity : 23deg. C / 45% RH  
Engineer : Kazuya Yoshioka  
Mode : 11n-20

**8.2 Test Procedure**

A single Burst of the Short Pulse Radar Types 0-4 will commence within a 6 second window starting at Start of CAC. An additional 1 dB is added to the radar test signal to ensure it is at or above the DFS Detection Threshold, accounting for equipment variations/errors.  
Verify that during the 2.5 minute measurement window no EUT transmissions occurred on Chr.


**8.3 Test data**

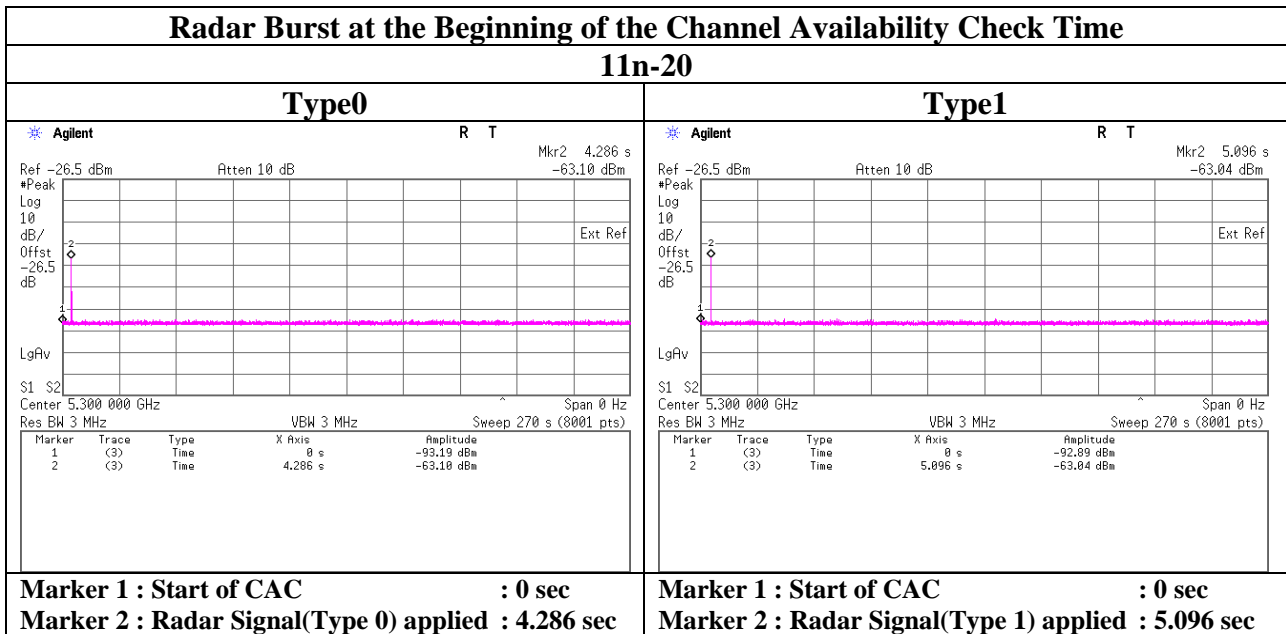




**Radar Burst at the Beginning of the Channel Availability Check Time**  
**11n-20**

**Type2**

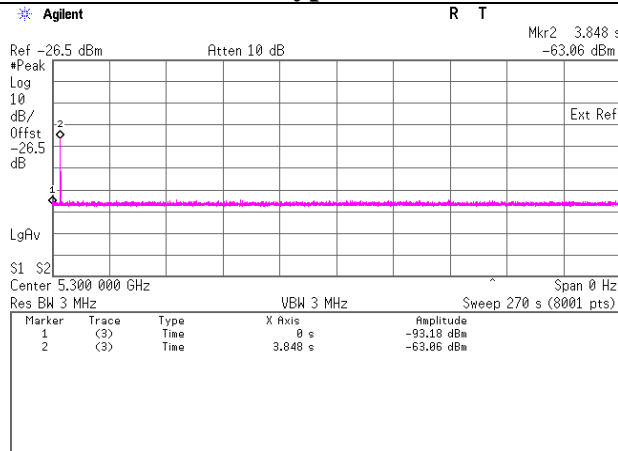


**Marker 1 : Start of CAC : 0 sec**  
**Marker 2 : Radar Signal(Type 2) applied : 3.848 sec**

**Type3**

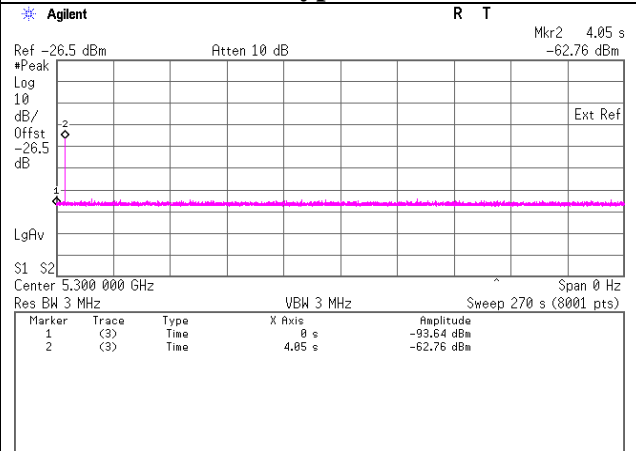

**Marker 1 : Start of CAC : 0 sec**  
**Marker 2 : Radar Signal(Type 3) applied : 4.05 sec**

**Type4**

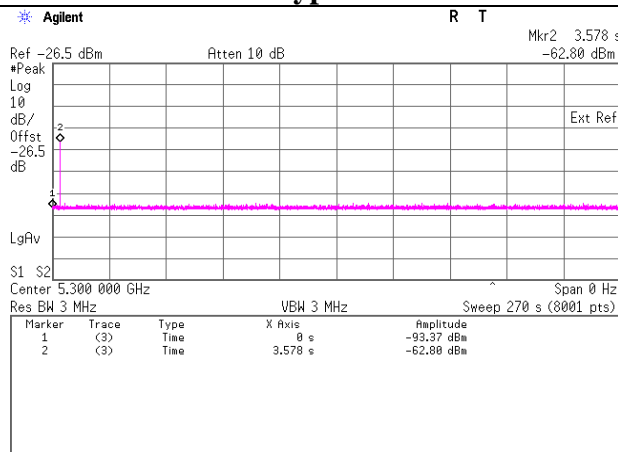

**Marker 1 : Start of CAC : 0 sec**  
**Marker 2 : Radar Signal(Type 4) applied : 3.578 sec**

**8.4 Test result**

Test result: Pass

**SECTION 9: Radar Burst at the End of the Channel Availability Check Time**


**9.1 Operating environment**

Test place : Ise EMC Lab. No.11 measurement room  
Date : 03/20/2015  
Temperature/ Humidity : 23deg. C / 45% RH  
Engineer : Kazuya Yoshioka  
Mode : 11n-20

**9.2 Test Procedure**

A single Burst of the Short Pulse Radar Types 0-4 will commence within a 6 second window starting at Start of CAC + 54 seconds. An additional 1 dB is added to the radar test signal to ensure it is at or above the DFS Detection Threshold, accounting for equipment variations/errors. Verify that during the 2.5 minute measurement window no EUT transmissions occurred on Chr.


**9.3 Test data**

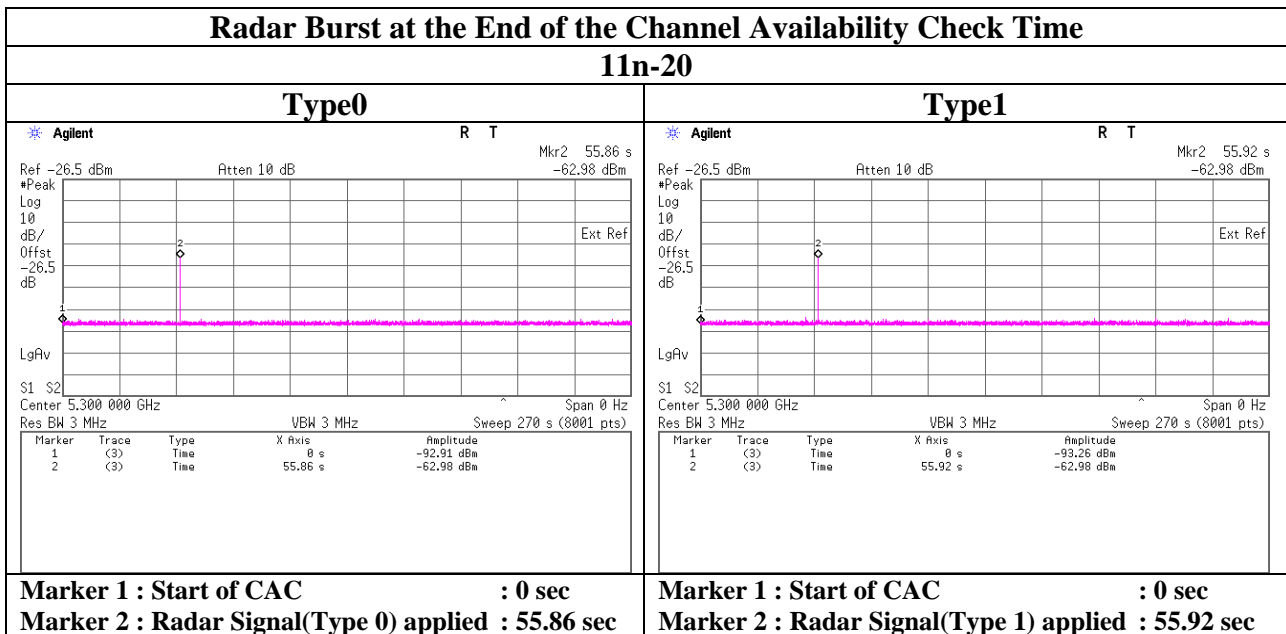


**Radar Burst at the End of the Channel Availability Check Time**

**11n-20**

**Type2**

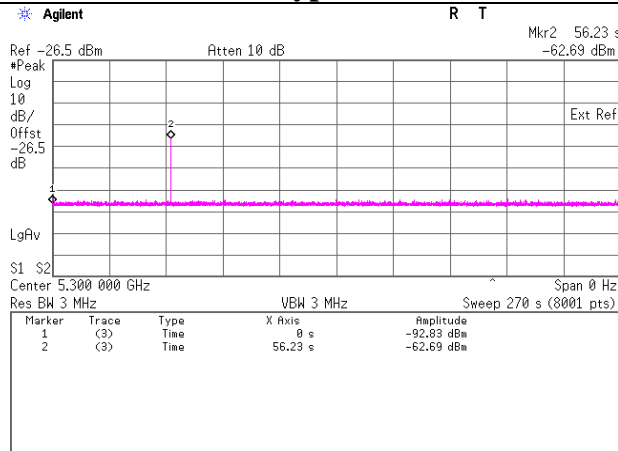


**Type3**

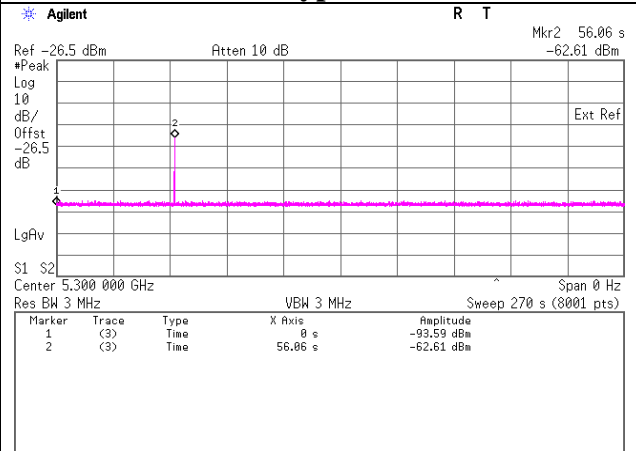

**Marker 1 : Start of CAC : 0 sec**  
**Marker 2 : Radar Signal(Type 2) applied : 56.23 sec**

**Marker 1 : Start of CAC : 0 sec**  
**Marker 2 : Radar Signal(Type 3) applied : 56.06 sec**

**Type4**

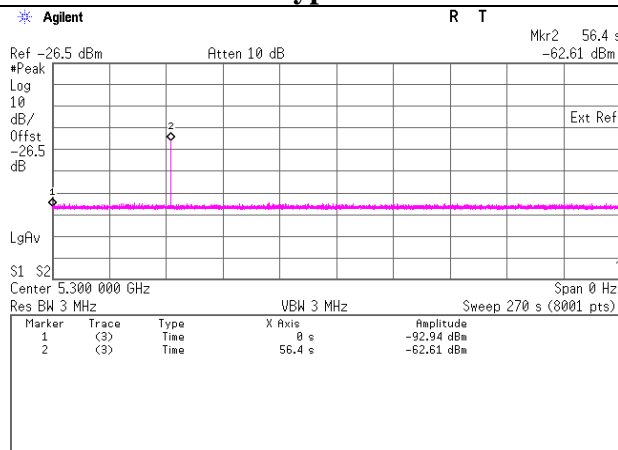

**Marker 1 : Start of CAC : 0 sec**  
**Marker 2 : Radar Signal(Type 4) applied : 56.4 sec**

**9.4 Test result**

Test result: Pass

## **SECTION 10: Channel Move Time, Channel Closing Transmission Time**

### **10.1 Operating environment**

Test place Ise EMC Lab. No.11 measurement room and No.7 shielded room  
Date 03/20/2015 03/27/2015  
Temperature/ Humidity 23deg. C / 45% RH 22deg. C / 36% RH  
Engineer Kazuya Yoshioka Takumi Shimada  
Mode 11n-40

### **10.2 Test Procedure**

Stream the MPEG test file from the Master Device to the Client Device on the test Channel for the entire period of the test.

The Radar Waveform generator sends a Burst of pulses for one of the Radar Types 0 at levels defined on the Operating Channel. An additional 1 dB is added to the radar test signal to ensure it is at or above the DFS Detection Threshold, accounting for equipment variations/errors.

Observe the transmissions of the EUT at the end of the radar Burst on the Operating Channel for duration greater than 10 seconds.

### **10.3 Test data**

#### **<Master Device>**

##### **11n-40**

| Test Item                             | Unit   | Measurement Time | Limit  | Results |
|---------------------------------------|--------|------------------|--------|---------|
| Channel Move Time *1)                 | [sec]  | 0.502            | 10.000 | Pass    |
| Channel Closing Transmission Time *2) | [msec] | 6                | 60     | Pass    |

\*1) Channel Move Time is calculated as follows:

$$(\text{Channel Move Time}) = (\text{End of Transmission}) - (\text{End of Burst}) = 2.392 - 1.89$$

\*2) Channel Closing Transmission Time is calculated from (End of Burst + 200msec) to (End of Burst + 10sec )

$$(\text{Channel Closing Transmission Time}) = (\text{Number of analyzer bins showing transmission}) \times (\text{dwell time per bin}) = 3 \times 2[\text{msec}]$$

#### **<Client Device>**

##### **11n-40**

| Test Item                             | Unit   | Measurement Time | Limit  | Results |
|---------------------------------------|--------|------------------|--------|---------|
| Channel Move Time *1)                 | [sec]  | 0.020            | 10.000 | Pass    |
| Channel Closing Transmission Time *2) | [msec] | 0                | 60     | Pass    |

\*1) Channel Move Time is calculated as follows:

$$(\text{Channel Move Time}) = (\text{End of Transmission}) - (\text{End of Burst}) = 2.112 - 2.092$$

\*2) Channel Closing Transmission Time is calculated from (End of Burst + 200msec) to (End of Burst + 10sec )

$$(\text{Channel Closing Transmission Time}) = (\text{Number of analyzer bins showing transmission}) \times (\text{dwell time per bin}) = 0 \times 2[\text{msec}]$$

**UL Japan, Inc.**


**Ise EMC Lab.**

4383-326 Asama-cho, Ise-shi, Mie-ken 516-0021 JAPAN

Telephone : +81 596 24 8999

Facsimile : +81 596 24 8124

<Master mode>

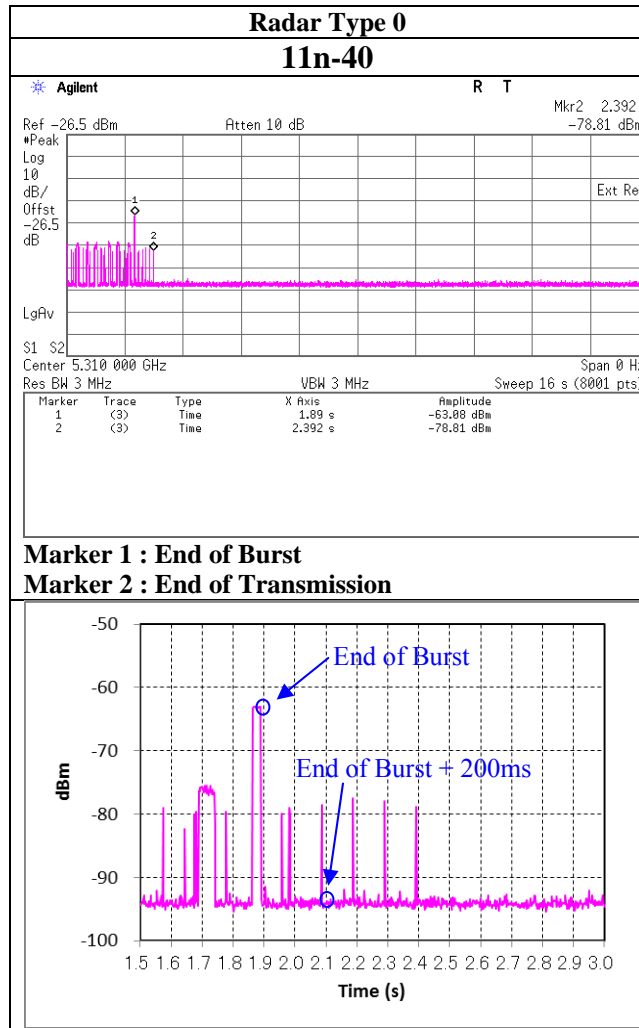


**UL Japan, Inc.**  
**Ise EMC Lab.**

4383-326 Asama-cho, Ise-shi, Mie-ken 516-0021 JAPAN

Telephone : +81 596 24 8999

Facsimile : +81 596 24 8124

<Client mode>

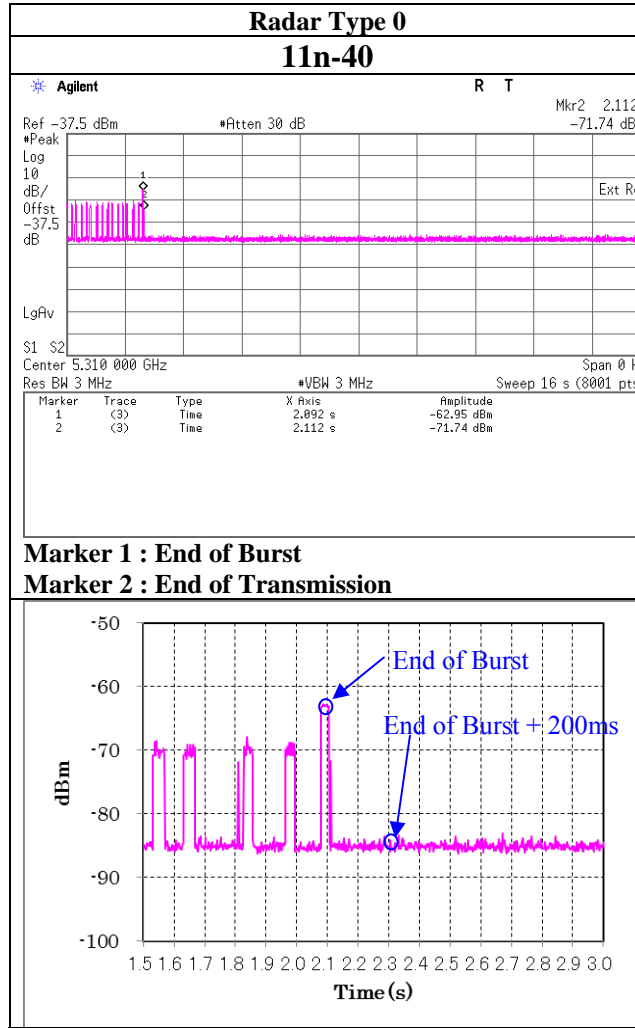

#### 10.4 Test result

Test result: Pass

**UL Japan, Inc.**  
**Ise EMC Lab.**

4383-326 Asama-cho, Ise-shi, Mie-ken 516-0021 JAPAN

Telephone : +81 596 24 8999

Facsimile : +81 596 24 8124

## **SECTION 11: Non-Occupancy Period**

### **11.1 Operating environment**

|                       |  |                   |
|-----------------------|--|-------------------|
| Test place            | I Ise EMC Lab. No.11 measurement room and No.7 shielded room |                   |
| Date                  | 03/20/2015   | 03/27/2015        |
| Temperature/ Humidity | 23deg. C / 45% RH  | 22deg. C / 36% RH |
| Engineer              | Kazuya Yoshioka  | Takumi Shimada    |
| Mode                  | 11n-20   |                   |

### **11.2 Test Procedure**

The following two tests are performed:

1).Stream the MPEG test file from the Master Device to the Client Device on the test Channel for the entire period of the test.

The Radar Waveform generator sends a Burst of pulses for one of the Radar Types 0-4(Master Device) or the Radar Types 0(Client Device) at levels defined on the Operating Channel. An additional 1 dB is added to the radar test signal to ensure it is at or above the DFS Detection Threshold, accounting for equipment variations/errors.

Observe the transmissions of the EUT after the Channel Move Time on the Operating Channel for duration greater than 30 minutes.

<Client mode only>

2). Stream the MPEG test file from the Master Device to the Client Device on the test Channel for the entire period of the test.

Observe the transmissions of the EUT on the Operating Channel for duration greater than 30 minutes after the Master Device is shut off.

---

**UL Japan, Inc.**

**Ise EMC Lab.**


4383-326 Asama-cho, Ise-shi, Mie-ken 516-0021 JAPAN

Telephone : +81 596 24 8999

Facsimile : +81 596 24 8124



11.3 Test data

<Master mode>

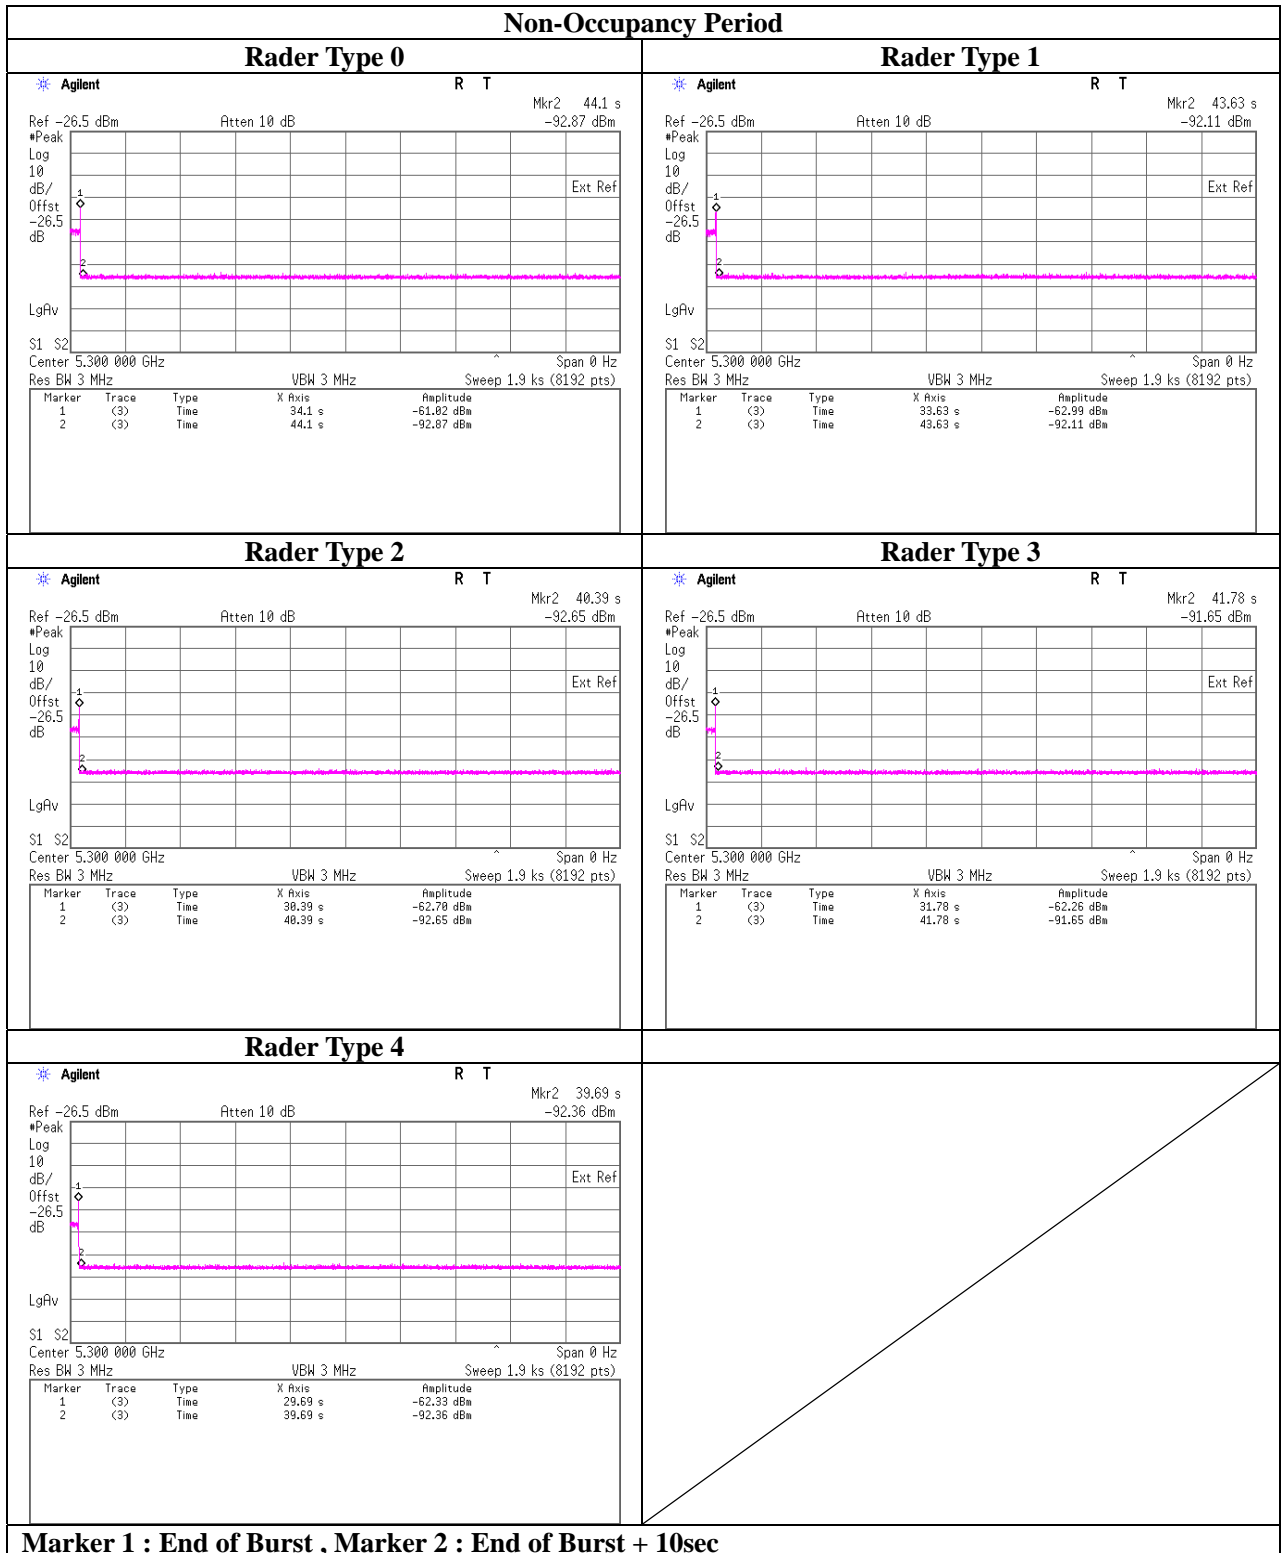



<Client mode>

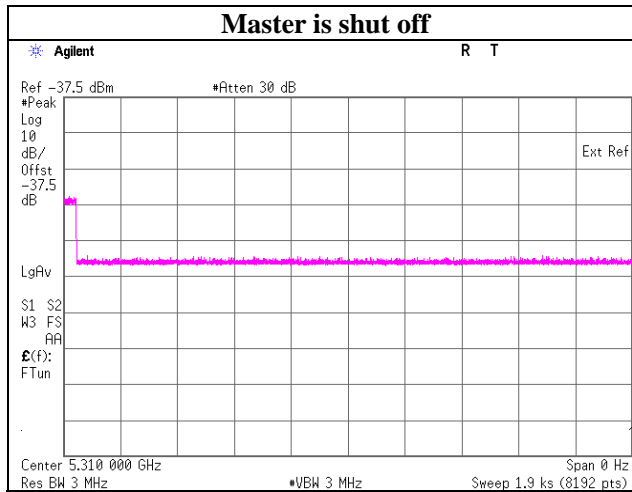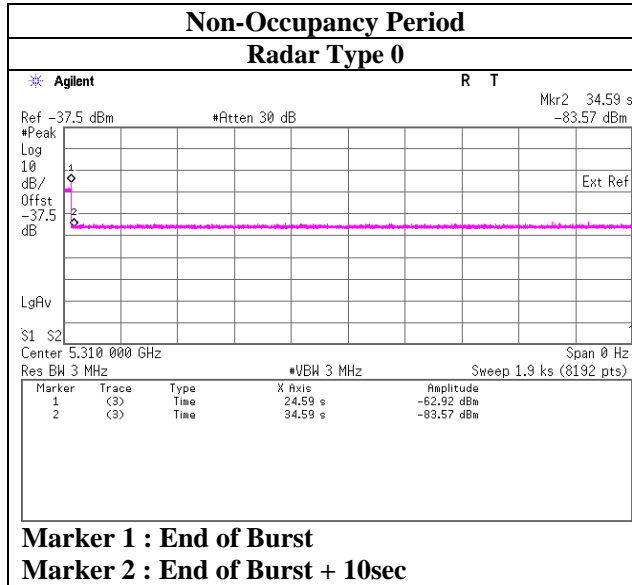

#### 11.4 Test result

Test result: Pass

## **SECTION 12: In-Service Monitoring(Statistical Performance Check)**

### **12.1 Operating environment**

|                       |  |                   |                   |
|-----------------------|--|-------------------|-------------------|
| Test place            | Ise EMC Lab. No.7 shielded room and No.11 measurement room |                   |                   |
| Date                  | 03/16/2015   | 03/18/2015        | 03/19/2015        |
| Temperature/ Humidity | 23deg. C / 45% RH  | 24deg. C / 39% RH | 23deg. C / 42% RH |
| Engineer              | Kazuya Yoshioka  | Kazuya Yoshioka   | Kazuya Yoshioka   |
| Mode                  | 11n-20 / 11n-40  |                   |                   |

### **12.2 Test Procedure**

Stream the MPEG test file from the Master Device to the Client Device on the test Channel for the entire period of the test.

Radar Waveform generator sends the individual waveform for each of the Radar Types 1-6, at levels defined, on the Operating Channel. An additional 1dB is added to the radar test signal to ensure it is at or above the DFS Detection Threshold, accounting for equipment variations/errors.

Observe the transmissions of the EUT at the end of the Burst on the Operating Channel for duration greater than 10 seconds for Short Pulse Radar Types 1-4 and 6 to ensure detection occurs.

Observe the transmissions of the EUT at the end of the Burst on the Operating Channel for duration greater than 22 seconds for Long Pulse Radar Type 5 to ensure detection occurs.

Radar detection is observed by two techniques.

- a). Monitoring LAN traffic with Spectrum Analyzer.
- b). Indicator of PC connected to EUT

---

**UL Japan, Inc.**

**Ise EMC Lab.**

4383-326 Asama-cho, Ise-shi, Mie-ken 516-0021 JAPAN

Telephone : +81 596 24 8999

Facsimile : +81 596 24 8124

### 12.3 Test data

#### 5300MHz (11n-20)

| Radar Type          | Number of Trials | Number of Successful Detections | Percentage of Successful Detections [%] | Limit [%] | Results |
|---------------------|------------------|---------------------------------|---|-----------|---------|
| 1                   | 30               | 27                              | 90.00                                   | 60        | Pass    |
| 2                   | 30               | 24                              | 80.00                                   | 60        | Pass    |
| 3                   | 30               | 23                              | 76.67                                   | 60        | Pass    |
| 4                   | 30               | 24                              | 80.00                                   | 60        | Pass    |
| Aggregate of 1 to 4 | -                | -                               | 81.67                                   | 80        | Pass    |
| 5                   | 30               | 30                              | 100.00                                  | 80        | Pass    |
| 6                   | 30               | 29                              | 96.67                                   | 70        | Pass    |

#### 5310MHz (11n-40)

| Radar Type          | Number of Trials | Number of Successful Detections | Percentage of Successful Detections [%] | Limit [%] | Results |
|---------------------|------------------|---------------------------------|---|-----------|---------|
| 1                   | 30               | 29                              | 96.67                                   | 60        | Pass    |
| 2                   | 30               | 26                              | 86.67                                   | 60        | Pass    |
| 3                   | 30               | 26                              | 86.67                                   | 60        | Pass    |
| 4                   | 30               | 27                              | 90.00                                   | 60        | Pass    |
| Aggregate of 1 to 4 | -                | -                               | 90.00                                   | 80        | Pass    |
| 5                   | 30               | 29                              | 96.67                                   | 80        | Pass    |
| 6                   | 30               | 30                              | 100.00                                  | 70        | Pass    |

### 12.4 Test result

Test result: Pass

**UL Japan, Inc.**

**Ise EMC Lab.**

4383-326 Asama-cho, Ise-shi, Mie-ken 516-0021 JAPAN

Telephone : +81 596 24 8999

Facsimile : +81 596 24 8124

**APPENDIX 1: Data of DFS test**

**U-NII Detection Bandwidth**

**5300MHz (11n-20)**

| Frequency [MHz] | Number of Trials [Times] | Number of Detected [Times] | Ratio of Detected [%] | Mark |
|-----------------|--------------------------|----------------------------|-----------------------|------|
| 5290            | 10                       | 8                          | 80                    |      |
| 5291            | 10                       | 10                         | 100                   | FL   |
| 5292            | 10                       | 10                         | 100                   |      |
| 5293            | 10                       | 10                         | 100                   |      |
| 5294            | 10                       | 10                         | 100                   |      |
| 5295            | 10                       | 10                         | 100                   |      |
| 5300            | 10                       | 10                         | 100                   |      |
| 5305            | 10                       | 10                         | 100                   |      |
| 5310            | 10                       | 10                         | 100                   | FH   |
| 5311            | 10                       | 7                          | 70                    |      |
| 5315            | 10                       | 1                          | 10                    |      |

**5310MHz (11n-40)**

| Frequency [MHz] | Number of Trials [Times] | Number of Detected [Times] | Ratio of Detected [%] | Mark |
|-----------------|--------------------------|----------------------------|-----------------------|------|
| 5285            | 10                       | 0                          | 0                     |      |
| 5289            | 10                       | 0                          | 0                     |      |
| 5290            | 10                       | 10                         | 100                   | FL   |
| 5295            | 10                       | 10                         | 100                   |      |
| 5300            | 10                       | 10                         | 100                   |      |
| 5305            | 10                       | 10                         | 100                   |      |
| 5310            | 10                       | 10                         | 100                   |      |
| 5315            | 10                       | 10                         | 100                   |      |
| 5320            | 10                       | 10                         | 100                   |      |
| 5325            | 10                       | 10                         | 100                   |      |
| 5330            | 10                       | 10                         | 100                   | FH   |
| 5331            | 10                       | 0                          | 0                     |      |
| 5335            | 10                       | 0                          | 0                     |      |

**Statistical Performance Check**

**5300MHz (11n-20)**

| Trial #                    | Radar Type1 | Radar Type2 | Radar Type3 | Radar Type4 | Radar Type5 | Radar Type6 |
|----------------------------|-------------|-------------|-------------|-------------|-------------|-------------|
|                            | Detection   | Detection   | Detection   | Detection   | Detection   | Detection   |
|                            | Yes/No      | Yes/No      | Yes/No      | Yes/No      | Yes/No      | Yes/No      |
| 1                          | Yes         | Yes         | Yes         | Yes         | Yes         | Yes         |
| 2                          | Yes         | Yes         | Yes         | Yes         | Yes         | Yes         |
| 3                          | Yes         | Yes         | Yes         | Yes         | Yes         | Yes         |
| 4                          | Yes         | No          | Yes         | No          | Yes         | Yes         |
| 5                          | Yes         | Yes         | Yes         | No          | Yes         | Yes         |
| 6                          | Yes         | Yes         | Yes         | No          | Yes         | Yes         |
| 7                          | Yes         | Yes         | Yes         | Yes         | Yes         | Yes         |
| 8                          | Yes         | Yes         | Yes         | Yes         | Yes         | Yes         |
| 9                          | No          | Yes         | No          | Yes         | Yes         | Yes         |
| 10                         | Yes         | No          | Yes         | Yes         | Yes         | Yes         |
| 11                         | Yes         | Yes         | Yes         | No          | Yes         | Yes         |
| 12                         | Yes         | Yes         | Yes         | Yes         | Yes         | Yes         |
| 13                         | Yes         | Yes         | No          | Yes         | Yes         | Yes         |
| 14                         | No          | No          | Yes         | Yes         | Yes         | Yes         |
| 15                         | Yes         | Yes         | No          | Yes         | Yes         | Yes         |
| 16                         | Yes         | Yes         | Yes         | Yes         | Yes         | Yes         |
| 17                         | Yes         | Yes         | Yes         | Yes         | Yes         | Yes         |
| 18                         | Yes         | No          | No          | Yes         | Yes         | Yes         |
| 19                         | Yes         | Yes         | Yes         | Yes         | Yes         | No          |
| 20                         | Yes         | No          | No          | Yes         | Yes         | Yes         |
| 21                         | Yes         | Yes         | Yes         | Yes         | Yes         | Yes         |
| 22                         | Yes         | Yes         | Yes         | No          | Yes         | Yes         |
| 23                         | No          | Yes         | Yes         | No          | Yes         | Yes         |
| 24                         | Yes         | Yes         | No          | Yes         | Yes         | Yes         |
| 25                         | Yes         | No          | No          | Yes         | Yes         | Yes         |
| 26                         | Yes         | Yes         | Yes         | Yes         | Yes         | Yes         |
| 27                         | Yes         | Yes         | Yes         | Yes         | Yes         | Yes         |
| 28                         | Yes         | Yes         | Yes         | Yes         | Yes         | Yes         |
| 29                         | Yes         | Yes         | Yes         | Yes         | Yes         | Yes         |
| 30                         | Yes         | Yes         | Yes         | Yes         | Yes         | Yes         |
| EUT Test Frequency:5300MHz |             |             |             |             |             |             |
| Radar Frequency:5300MHz    |             |             |             |             |             |             |

**UL Japan, Inc.**

**Ise EMC Lab.**

4383-326 Asama-cho, Ise-shi, Mie-ken 516-0021 JAPAN

Telephone : +81 596 24 8999

Facsimile : +81 596 24 8124

**Statistical Performance Check**

**5310MHz (11n-40)**

| Trial #                    | Radar Type1 | Radar Type2 | Radar Type3 | Radar Type4 | Radar Type5 | Radar Type6 |
|----------------------------|-------------|-------------|-------------|-------------|-------------|-------------|
|                            | Detection   | Detection   | Detection   | Detection   | Detection   | Detection   |
|                            | Yes/No      | Yes/No      | Yes/No      | Yes/No      | Yes/No      | Yes/No      |
| 1                          | Yes         | Yes         | Yes         | No          | Yes         | Yes         |
| 2                          | Yes         | Yes         | Yes         | Yes         | Yes         | Yes         |
| 3                          | Yes         | Yes         | Yes         | Yes         | Yes         | Yes         |
| 4                          | Yes         | Yes         | Yes         | No          | Yes         | Yes         |
| 5                          | Yes         | Yes         | Yes         | Yes         | Yes         | Yes         |
| 6                          | Yes         | Yes         | Yes         | Yes         | Yes         | Yes         |
| 7                          | Yes         | Yes         | Yes         | Yes         | Yes         | Yes         |
| 8                          | Yes         | Yes         | Yes         | Yes         | Yes         | Yes         |
| 9                          | Yes         | Yes         | Yes         | Yes         | Yes         | Yes         |
| 10                         | Yes         | Yes         | No          | Yes         | Yes         | Yes         |
| 11                         | Yes         | Yes         | Yes         | Yes         | Yes         | Yes         |
| 12                         | Yes         | No          | No          | Yes         | Yes         | Yes         |
| 13                         | Yes         | Yes         | Yes         | Yes         | Yes         | Yes         |
| 14                         | Yes         | Yes         | Yes         | Yes         | Yes         | Yes         |
| 15                         | Yes         | No          | Yes         | Yes         | Yes         | Yes         |
| 16                         | Yes         | Yes         | Yes         | Yes         | Yes         | Yes         |
| 17                         | Yes         | Yes         | Yes         | Yes         | Yes         | Yes         |
| 18                         | Yes         | Yes         | Yes         | Yes         | Yes         | Yes         |
| 19                         | Yes         | Yes         | Yes         | Yes         | Yes         | Yes         |
| 20                         | Yes         | Yes         | Yes         | Yes         | Yes         | Yes         |
| 21                         | Yes         | Yes         | Yes         | Yes         | Yes         | Yes         |
| 22                         | Yes         | Yes         | Yes         | Yes         | Yes         | Yes         |
| 23                         | No          | No          | Yes         | Yes         | Yes         | Yes         |
| 24                         | Yes         | No          | No          | No          | Yes         | Yes         |
| 25                         | Yes         | Yes         | Yes         | Yes         | Yes         | Yes         |
| 26                         | Yes         | Yes         | Yes         | Yes         | Yes         | Yes         |
| 27                         | Yes         | Yes         | Yes         | Yes         | No          | Yes         |
| 28                         | Yes         | Yes         | Yes         | Yes         | Yes         | Yes         |
| 29                         | Yes         | Yes         | Yes         | Yes         | Yes         | Yes         |
| 30                         | Yes         | Yes         | No          | Yes         | Yes         | Yes         |
| EUT Test Frequency:5310MHz |             |             |             |             |             |             |
| Radar Frequency:5310MHz    |             |             |             |             |             |             |

**UL Japan, Inc.**

**Ise EMC Lab.**

4383-326 Asama-cho, Ise-shi, Mie-ken 516-0021 JAPAN

Telephone : +81 596 24 8999

Facsimile : +81 596 24 8124

**Parameter Data sheet for Radar Type 1**

**5300MHz (11n-20)**

| Radar Type1 |  |  |                  |  |
|-------------|--|--|------------------|--|
| Trial #     | Pulse Repetition Frequency Number(1 to 23) | Pulse Repetition Frequency (Pulses Per Second) | Number of Pulses | Pulse Repetition Interval (Microseconds) |
| 1           | 12   | 1355.0   | 72               | 738                                      |
| 2           | 10   | 1432.7   | 76               | 698                                      |
| 3           | 3  | 1792.1   | 95               | 558                                      |
| 4           | 22   | 1066.1   | 57               | 938                                      |
| 5           | 19   | 1139.0   | 61               | 878                                      |
| 6           | 6  | 1618.1   | 86               | 618                                      |
| 7           | 16   | 1222.5   | 65               | 818                                      |
| 8           | 1  | 1930.5   | 102              | 518                                      |
| 9           | 5  | 1672.2   | 89               | 598                                      |
| 10          | 18   | 1165.6   | 62               | 858                                      |
| 11          | 14   | 1285.3   | 68               | 778                                      |
| 12          | 23   | 326.2  | 18               | 3066                                     |
| 13          | 11   | 1392.8   | 74               | 718                                      |
| 14          | 7  | 1567.4   | 83               | 638                                      |
| 15          | 20   | 1113.6   | 59               | 898                                      |
| 16          | -  | 1236.1   | 66               | 809                                      |
| 17          | -  | 1841.6   | 98               | 543                                      |
| 18          | -  | 1472.8   | 78               | 679                                      |
| 19          | -  | 1503.8   | 80               | 665                                      |
| 20          | -  | 1071.8   | 57               | 933                                      |
| 21          | -  | 1297.0   | 69               | 771                                      |
| 22          | -  | 1175.1   | 63               | 851                                      |
| 23          | -  | 1712.3   | 91               | 584                                      |
| 24          | -  | 1510.6   | 80               | 662                                      |
| 25          | -  | 1172.3   | 62               | 853                                      |
| 26          | -  | 1230.0   | 65               | 813                                      |
| 27          | -  | 1287.0   | 68               | 777                                      |
| 28          | -  | 1834.9   | 97               | 545                                      |
| 29          | -  | 1721.2   | 91               | 581                                      |
| 30          | -  | 1073.0   | 57               | 932                                      |

**UL Japan, Inc.**  
**Ise EMC Lab.**

4383-326 Asama-cho, Ise-shi, Mie-ken 516-0021 JAPAN

Telephone : +81 596 24 8999

Facsimile : +81 596 24 8124

**Parameter Data sheet for Radar Type 1**

**5310MHz (11n-40)**

| Radar Type1 |  |  |                  |  |
|-------------|--|--|------------------|--|
| Trial #     | Pulse Repetition Frequency Number(1 to 23) | Pulse Repetition Frequency (Pulses Per Second) | Number of Pulses | Pulse Repetition Interval (Microseconds) |
| 1           | 5  | 1672.2   | 89               | 598                                      |
| 2           | 11   | 1392.8   | 74               | 718                                      |
| 3           | 13   | 1319.3   | 70               | 758                                      |
| 4           | 8  | 1519.8   | 81               | 658                                      |
| 5           | 21   | 1089.3   | 58               | 918                                      |
| 6           | 22   | 1066.1   | 57               | 938                                      |
| 7           | 14   | 1285.3   | 68               | 778                                      |
| 8           | 6  | 1618.1   | 86               | 618                                      |
| 9           | 9  | 1474.9   | 78               | 678                                      |
| 10          | 1  | 1930.5   | 102              | 518                                      |
| 11          | 19   | 1139.0   | 61               | 878                                      |
| 12          | 17   | 1193.3   | 63               | 838                                      |
| 13          | 10   | 1432.7   | 76               | 698                                      |
| 14          | 20   | 1113.6   | 59               | 898                                      |
| 15          | 16   | 1222.5   | 65               | 818                                      |
| 16          | -  | 1237.6   | 66               | 808                                      |
| 17          | -  | 1845.0   | 98               | 542                                      |
| 18          | -  | 1477.1   | 78               | 677                                      |
| 19          | -  | 1506.0   | 80               | 664                                      |
| 20          | -  | 1073.0   | 57               | 932                                      |
| 21          | -  | 1298.7   | 69               | 770                                      |
| 22          | -  | 1173.7   | 62               | 852                                      |
| 23          | -  | 1715.3   | 91               | 583                                      |
| 24          | -  | 1342.3   | 71               | 745                                      |
| 25          | -  | 1766.8   | 94               | 566                                      |
| 26          | -  | 1848.4   | 98               | 541                                      |
| 27          | -  | 1234.6   | 66               | 810                                      |
| 28          | -  | 327.1  | 18               | 3057                                     |
| 29          | -  | 1724.1   | 91               | 580                                      |
| 30          | -  | 1555.2   | 83               | 643                                      |

**UL Japan, Inc.**  
**Ise EMC Lab.**

4383-326 Asama-cho, Ise-shi, Mie-ken 516-0021 JAPAN  
Telephone : +81 596 24 8999  
Facsimile : +81 596 24 8124



**Parameter Data sheet for Radar Type 2**

**5300MHz (11n-20)**

| Radar Type2 |                         |                  |          |
|-------------|-------------------------|------------------|----------|
| Trial #     | Number Pulses per Burst | Pulse Width [us] | PRI [us] |
| 1           | 26                      | 3.8              | 229      |
| 2           | 29                      | 3.4              | 209      |
| 3           | 26                      | 4.4              | 183      |
| 4           | 27                      | 2.3              | 201      |
| 5           | 28                      | 3.9              | 195      |
| 6           | 26                      | 1.6              | 164      |
| 7           | 29                      | 1.2              | 185      |
| 8           | 23                      | 1.1              | 170      |
| 9           | 25                      | 3.9              | 160      |
| 10          | 28                      | 2.8              | 166      |
| 11          | 27                      | 4.6              | 151      |
| 12          | 28                      | 2.0              | 228      |
| 13          | 28                      | 3.5              | 212      |
| 14          | 25                      | 4.0              | 173      |
| 15          | 23                      | 5.0              | 156      |
| 16          | 24                      | 3.2              | 206      |
| 17          | 28                      | 1.2              | 152      |
| 18          | 23                      | 4.7              | 176      |
| 19          | 29                      | 3.7              | 156      |
| 20          | 27                      | 3.7              | 165      |
| 21          | 27                      | 3.7              | 176      |
| 22          | 26                      | 4.7              | 156      |
| 23          | 29                      | 2.6              | 198      |
| 24          | 26                      | 4.5              | 215      |
| 25          | 29                      | 4.6              | 228      |
| 26          | 27                      | 3.6              | 167      |
| 27          | 23                      | 4.8              | 208      |
| 28          | 29                      | 2.4              | 199      |
| 29          | 25                      | 4.2              | 228      |
| 30          | 28                      | 1.2              | 167      |

**Parameter Data sheet for Radar Type 2**

**5310MHz (11n-40)**

| Radar Type2 |                         |                  |          |
|-------------|-------------------------|------------------|----------|
| Trial #     | Number Pulses per Burst | Pulse Width [us] | PRI [us] |
| 1           | 28                      | 4.6              | 184      |
| 2           | 23                      | 2.8              | 196      |
| 3           | 23                      | 3.4              | 217      |
| 4           | 29                      | 1.0              | 163      |
| 5           | 23                      | 4.7              | 163      |
| 6           | 29                      | 2.1              | 174      |
| 7           | 24                      | 1.3              | 155      |
| 8           | 24                      | 3.9              | 211      |
| 9           | 29                      | 3.4              | 190      |
| 10          | 24                      | 1.0              | 195      |
| 11          | 26                      | 1.5              | 225      |
| 12          | 23                      | 2.3              | 207      |
| 13          | 24                      | 1.5              | 181      |
| 14          | 25                      | 4.2              | 175      |
| 15          | 28                      | 4.2              | 162      |
| 16          | 26                      | 2.3              | 174      |
| 17          | 26                      | 1.4              | 217      |
| 18          | 25                      | 2.4              | 190      |
| 19          | 28                      | 3.5              | 173      |
| 20          | 24                      | 2.0              | 168      |
| 21          | 25                      | 2.1              | 189      |
| 22          | 23                      | 4.6              | 195      |
| 23          | 28                      | 1.1              | 196      |
| 24          | 25                      | 1.0              | 213      |
| 25          | 25                      | 2.3              | 210      |
| 26          | 26                      | 1.0              | 163      |
| 27          | 29                      | 1.1              | 152      |
| 28          | 26                      | 2.3              | 230      |
| 29          | 25                      | 4.8              | 193      |
| 30          | 28                      | 3.0              | 187      |

**Parameter Data sheet for Radar Type 3**

**5300MHz (11n-20)**

| Radar Type3 |                         |                  |          |
|-------------|-------------------------|------------------|----------|
| Trial #     | Number Pulses per Burst | Pulse Width [us] | PRI [us] |
| 1           | 17                      | 7.0              | 281      |
| 2           | 16                      | 9.0              | 221      |
| 3           | 16                      | 9.2              | 266      |
| 4           | 17                      | 6.4              | 211      |
| 5           | 16                      | 6.5              | 250      |
| 6           | 18                      | 7.7              | 269      |
| 7           | 16                      | 6.9              | 334      |
| 8           | 17                      | 9.4              | 409      |
| 9           | 17                      | 9.2              | 270      |
| 10          | 18                      | 6.4              | 261      |
| 11          | 17                      | 9.7              | 377      |
| 12          | 17                      | 7.2              | 261      |
| 13          | 17                      | 8.9              | 258      |
| 14          | 18                      | 6.8              | 363      |
| 15          | 17                      | 9.9              | 291      |
| 16          | 16                      | 7.9              | 448      |
| 17          | 17                      | 6.7              | 345      |
| 18          | 16                      | 6.5              | 232      |
| 19          | 18                      | 9.0              | 450      |
| 20          | 16                      | 9.7              | 455      |
| 21          | 17                      | 9.8              | 277      |
| 22          | 18                      | 6.5              | 367      |
| 23          | 18                      | 6.9              | 459      |
| 24          | 17                      | 8.2              | 339      |
| 25          | 18                      | 8.5              | 274      |
| 26          | 16                      | 6.8              | 216      |
| 27          | 17                      | 8.9              | 360      |
| 28          | 17                      | 9.6              | 449      |
| 29          | 16                      | 6.9              | 448      |
| 30          | 18                      | 6.0              | 261      |

**Parameter Data sheet for Radar Type 3**

**5310MHz (11n-40)**

| Radar Type3 |                         |                  |          |
|-------------|-------------------------|------------------|----------|
| Trial #     | Number Pulses per Burst | Pulse Width [us] | PRI [us] |
| 1           | 17                      | 9.6              | 317      |
| 2           | 18                      | 8.9              | 410      |
| 3           | 18                      | 6.4              | 277      |
| 4           | 16                      | 7.1              | 407      |
| 5           | 16                      | 6.0              | 224      |
| 6           | 17                      | 8.7              | 486      |
| 7           | 17                      | 7.6              | 414      |
| 8           | 17                      | 9.3              | 389      |
| 9           | 17                      | 8.6              | 291      |
| 10          | 18                      | 7.6              | 425      |
| 11          | 18                      | 7.1              | 476      |
| 12          | 18                      | 9.2              | 398      |
| 13          | 18                      | 8.9              | 221      |
| 14          | 17                      | 9.7              | 341      |
| 15          | 18                      | 7.0              | 485      |
| 16          | 16                      | 7.6              | 470      |
| 17          | 17                      | 6.2              | 473      |
| 18          | 16                      | 9.6              | 344      |
| 19          | 16                      | 6.4              | 239      |
| 20          | 17                      | 7.6              | 221      |
| 21          | 18                      | 9.6              | 265      |
| 22          | 16                      | 8.8              | 301      |
| 23          | 16                      | 6.0              | 250      |
| 24          | 17                      | 6.8              | 329      |
| 25          | 16                      | 6.1              | 460      |
| 26          | 16                      | 10.0             | 463      |
| 27          | 17                      | 7.6              | 498      |
| 28          | 18                      | 8.4              | 213      |
| 29          | 18                      | 8.7              | 328      |
| 30          | 17                      | 9.6              | 499      |

**Parameter Data sheet for Radar Type 4**

**5300MHz (11n-20)**

| Radar Type4 |                         |                  |          |
|-------------|-------------------------|------------------|----------|
| Trial #     | Number Pulses per Burst | Pulse Width [us] | PRI [us] |
| 1           | 12                      | 13.7             | 200      |
| 2           | 14                      | 19.2             | 481      |
| 3           | 13                      | 12.5             | 283      |
| 4           | 15                      | 18.4             | 399      |
| 5           | 13                      | 12.5             | 489      |
| 6           | 14                      | 16.6             | 286      |
| 7           | 13                      | 11.1             | 225      |
| 8           | 14                      | 17.1             | 401      |
| 9           | 16                      | 18.9             | 372      |
| 10          | 13                      | 19.5             | 357      |
| 11          | 13                      | 12.8             | 307      |
| 12          | 12                      | 13.2             | 409      |
| 13          | 13                      | 12.0             | 337      |
| 14          | 15                      | 19.9             | 444      |
| 15          | 13                      | 15.7             | 498      |
| 16          | 14                      | 16.9             | 247      |
| 17          | 16                      | 20.0             | 466      |
| 18          | 13                      | 19.0             | 309      |
| 19          | 16                      | 13.4             | 483      |
| 20          | 13                      | 16.6             | 427      |
| 21          | 12                      | 19.2             | 277      |
| 22          | 12                      | 13.9             | 283      |
| 23          | 14                      | 19.4             | 284      |
| 24          | 15                      | 18.5             | 299      |
| 25          | 16                      | 19.8             | 467      |
| 26          | 16                      | 12.1             | 383      |
| 27          | 13                      | 15.9             | 434      |
| 28          | 14                      | 13.4             | 210      |
| 29          | 13                      | 15.8             | 426      |
| 30          | 13                      | 19.1             | 467      |

**Parameter Data sheet for Radar Type 4**

**5310MHz (11n-40)**

| Radar Type4 |                         |                  |          |
|-------------|-------------------------|------------------|----------|
| Trial #     | Number Pulses per Burst | Pulse Width [us] | PRI [us] |
| 1           | 15                      | 18.0             | 409      |
| 2           | 12                      | 14.3             | 364      |
| 3           | 13                      | 17.1             | 281      |
| 4           | 14                      | 18.8             | 470      |
| 5           | 13                      | 19.4             | 308      |
| 6           | 12                      | 11.9             | 400      |
| 7           | 16                      | 12.4             | 436      |
| 8           | 14                      | 20.0             | 276      |
| 9           | 16                      | 11.5             | 225      |
| 10          | 13                      | 15.0             | 361      |
| 11          | 14                      | 15.7             | 426      |
| 12          | 16                      | 16.7             | 429      |
| 13          | 16                      | 14.4             | 201      |
| 14          | 12                      | 19.9             | 330      |
| 15          | 13                      | 18.4             | 464      |
| 16          | 12                      | 18.1             | 365      |
| 17          | 15                      | 11.3             | 270      |
| 18          | 12                      | 13.4             | 346      |
| 19          | 16                      | 11.7             | 303      |
| 20          | 16                      | 11.3             | 211      |
| 21          | 16                      | 13.1             | 486      |
| 22          | 15                      | 19.8             | 317      |
| 23          | 16                      | 17.5             | 434      |
| 24          | 14                      | 17.8             | 334      |
| 25          | 14                      | 12.9             | 275      |
| 26          | 12                      | 19.7             | 418      |
| 27          | 12                      | 19.6             | 397      |
| 28          | 15                      | 15.0             | 484      |
| 29          | 15                      | 18.7             | 432      |
| 30          | 14                      | 11.4             | 305      |

---

**UL Japan, Inc.**

**Ise EMC Lab.**

4383-326 Asama-cho, Ise-shi, Mie-ken 516-0021 JAPAN

Telephone : +81 596 24 8999

Facsimile : +81 596 24 8124

**Parameter Data sheet for Radar Type 5**

**5300MHz (11n-20)**

| Trial # | Burst Number | Number of Pulses | Pulse Width [usec] | Chirp Width [MHz] | Pulse 1-to-2 Spacing [usec] | Pulse 2-to-3 Spacing [usec] | Starting Location Within Interval [usec] |
|---------|--------------|------------------|--------------------|-------------------|-----------------------------|-----------------------------|--|
| 1       | 1            | 3                | 60                 | 6                 | 1227                        | 1775                        | 575084                                   |
|         | 2            | 1                | 56                 | 11                |                             |                             | 498635                                   |
|         | 3            | 1                | 75                 | 19                |                             |                             | 800953                                   |
|         | 4            | 3                | 78                 | 14                | 1902                        | 1321                        | 298734                                   |
|         | 5            | 3                | 56                 | 19                | 1565                        | 1973                        | 638971                                   |
|         | 6            | 2                | 94                 | 6                 | 1966                        |                             | 943584                                   |
|         | 7            | 1                | 96                 | 19                |                             |                             | 454005                                   |
|         | 8            | 3                | 58                 | 16                | 1869                        | 1737                        | 976935                                   |
|         | 9            | 1                | 87                 | 14                |                             |                             | 109471                                   |
|         | 10           | 1                | 68                 | 18                |                             |                             | 129589                                   |
|         | 11           | 1                | 50                 | 10                |                             |                             | 97556                                    |
|         | 12           | 2                | 86                 | 7                 | 1270                        |                             | 774950                                   |

| Trial # | Burst Number | Number of Pulses | Pulse Width [usec] | Chirp Width [MHz] | Pulse 1-to-2 Spacing [usec] | Pulse 2-to-3 Spacing [usec] | Starting Location Within Interval [usec] |
|---------|--------------|------------------|--------------------|-------------------|-----------------------------|-----------------------------|--|
| 2       | 1            | 3                | 57                 | 10                | 1821                        | 1602                        | 16504                                    |
|         | 2            | 2                | 51                 | 13                | 1612                        |                             | 514142                                   |
|         | 3            | 1                | 99                 | 15                |                             |                             | 324384                                   |
|         | 4            | 3                | 61                 | 10                | 1735                        | 1260                        | 175492                                   |
|         | 5            | 3                | 74                 | 14                | 1762                        | 1842                        | 537436                                   |
|         | 6            | 3                | 88                 | 11                | 1891                        | 1361                        | 36238                                    |
|         | 7            | 3                | 57                 | 6                 | 1447                        | 1738                        | 473029                                   |
|         | 8            | 3                | 55                 | 14                | 1213                        | 1698                        | 344634                                   |
|         | 9            | 3                | 100                | 14                | 1430                        | 1589                        | 308996                                   |
|         | 10           | 2                | 56                 | 14                | 1230                        |                             | 681781                                   |
|         | 11           | 2                | 75                 | 5                 | 1394                        |                             | 55725                                    |
|         | 12           | 2                | 65                 | 11                | 1117                        |                             | 114161                                   |
|         | 13           | 2                | 65                 | 16                | 1542                        |                             | 435162                                   |
|         | 14           | 1                | 64                 | 15                |                             |                             | 156329                                   |
|         | 15           | 3                | 99                 | 19                | 1454                        | 1179                        | 169307                                   |
|         | 16           | 3                | 72                 | 16                | 1616                        | 1139                        | 346682                                   |
|         | 17           | 2                | 99                 | 17                | 1334                        |                             | 406625                                   |

**UL Japan, Inc.**  
**Ise EMC Lab.**

4383-326 Asama-cho, Ise-shi, Mie-ken 516-0021 JAPAN

Telephone : +81 596 24 8999

Facsimile : +81 596 24 8124

| Trial # | Burst Number | Number of Pulses | Pulse Width [usec] | Chirp Width [MHz] | Pulse 1-to-2 Spacing [usec] | Pulse 2-to-3 Spacing [usec] | Starting Location Within Interval [usec] |
|---------|--------------|------------------|--------------------|-------------------|-----------------------------|-----------------------------|--|
| 3       | 1            | 2                | 62                 | 12                | 1000                        |                             | 1415338                                  |
|         | 2            | 3                | 64                 | 5                 | 1587                        | 1405                        | 1018325                                  |
|         | 3            | 2                | 96                 | 11                | 1323                        |                             | 36610                                    |
|         | 4            | 1                | 80                 | 5                 |                             |                             | 246644                                   |
|         | 5            | 2                | 81                 | 12                | 1748                        |                             | 721106                                   |
|         | 6            | 1                | 86                 | 10                |                             |                             | 507008                                   |
|         | 7            | 2                | 59                 | 16                | 1194                        |                             | 959579                                   |
|         | 8            | 2                | 81                 | 16                | 1472                        |                             | 519294                                   |

| Trial # | Burst Number | Number of Pulses | Pulse Width [usec] | Chirp Width [MHz] | Pulse 1-to-2 Spacing [usec] | Pulse 2-to-3 Spacing [usec] | Starting Location Within Interval [usec] |
|---------|--------------|------------------|--------------------|-------------------|-----------------------------|-----------------------------|--|
| 4       | 1            | 3                | 71                 | 7                 | 1872                        | 1110                        | 239921                                   |
|         | 2            | 2                | 85                 | 9                 | 1645                        |                             | 1045811                                  |
|         | 3            | 2                | 53                 | 12                | 1384                        |                             | 1003677                                  |
|         | 4            | 3                | 73                 | 16                | 1783                        | 1735                        | 693918                                   |
|         | 5            | 2                | 87                 | 10                | 1551                        |                             | 478750                                   |
|         | 6            | 2                | 90                 | 7                 | 1710                        |                             | 466778                                   |
|         | 7            | 3                | 62                 | 19                | 1972                        | 1474                        | 556921                                   |
|         | 8            | 2                | 52                 | 5                 | 1111                        |                             | 648863                                   |
|         | 9            | 3                | 62                 | 11                | 1970                        | 1109                        | 572323                                   |
|         | 10           | 1                | 55                 | 9                 |                             |                             | 478210                                   |
|         | 11           | 1                | 65                 | 12                |                             |                             | 366420                                   |

| Trial # | Burst Number | Number of Pulses | Pulse Width [usec] | Chirp Width [MHz] | Pulse 1-to-2 Spacing [usec] | Pulse 2-to-3 Spacing [usec] | Starting Location Within Interval [usec] |
|---------|--------------|------------------|--------------------|-------------------|-----------------------------|-----------------------------|--|
| 5       | 1            | 3                | 86                 | 14                | 1113                        | 1246                        | 961334                                   |
|         | 2            | 3                | 76                 | 19                | 1079                        | 1449                        | 63541                                    |
|         | 3            | 2                | 94                 | 16                | 1039                        |                             | 1031982                                  |
|         | 4            | 1                | 63                 | 13                |                             |                             | 692688                                   |
|         | 5            | 3                | 83                 | 7                 | 1703                        | 1675                        | 905722                                   |
|         | 6            | 3                | 55                 | 16                | 1744                        | 1136                        | 175114                                   |
|         | 7            | 3                | 95                 | 8                 | 1374                        | 1760                        | 522173                                   |
|         | 8            | 1                | 61                 | 8                 |                             |                             | 403005                                   |
|         | 9            | 3                | 75                 | 20                | 1832                        | 1763                        | 419522                                   |
|         | 10           | 3                | 88                 | 17                | 1622                        | 1273                        | 511657                                   |
|         | 11           | 1                | 84                 | 17                |                             |                             | 473476                                   |

**UL Japan, Inc.**  
**Ise EMC Lab.**

4383-326 Asama-cho, Ise-shi, Mie-ken 516-0021 JAPAN  
Telephone : +81 596 24 8999  
Facsimile : +81 596 24 8124



| Trial # | Burst Number | Number of Pulses | Pulse Width [usec] | Chirp Width [MHz] | Pulse 1-to-2 Spacing [usec] | Pulse 2-to-3 Spacing [usec] | Starting Location Within Interval [usec] |
|---------|--------------|------------------|--------------------|-------------------|-----------------------------|-----------------------------|--|
| 6       | 1            | 2                | 99                 | 8                 | 1000                        |                             | 460668                                   |
|         | 2            | 2                | 56                 | 19                | 1061                        |                             | 392369                                   |
|         | 3            | 3                | 92                 | 15                | 1026                        | 1004                        | 268707                                   |
|         | 4            | 3                | 87                 | 14                | 1828                        | 1578                        | 289366                                   |
|         | 5            | 3                | 64                 | 5                 | 1713                        | 1709                        | 645143                                   |
|         | 6            | 3                | 69                 | 18                | 1408                        | 1594                        | 560124                                   |
|         | 7            | 1                | 56                 | 16                |                             |                             | 167040                                   |
|         | 8            | 3                | 68                 | 15                | 1195                        | 1852                        | 50137                                    |
|         | 9            | 2                | 91                 | 15                | 1127                        |                             | 257741                                   |
|         | 10           | 3                | 81                 | 15                | 1059                        | 1663                        | 99721                                    |
|         | 11           | 2                | 66                 | 20                | 1437                        |                             | 300478                                   |
|         | 12           | 2                | 68                 | 6                 | 1518                        |                             | 211171                                   |
|         | 13           | 3                | 85                 | 12                | 1037                        | 1519                        | 427138                                   |
|         | 14           | 1                | 89                 | 14                |                             |                             | 423379                                   |
|         | 15           | 1                | 95                 | 17                |                             |                             | 100986                                   |
|         | 16           | 3                | 77                 | 16                | 1635                        | 1256                        | 484032                                   |

| Trial # | Burst Number | Number of Pulses | Pulse Width [usec] | Chirp Width [MHz] | Pulse 1-to-2 Spacing [usec] | Pulse 2-to-3 Spacing [usec] | Starting Location Within Interval [usec] |
|---------|--------------|------------------|--------------------|-------------------|-----------------------------|-----------------------------|--|
| 7       | 1            | 1                | 91                 | 10                |                             |                             | 88                                       |
|         | 2            | 2                | 89                 | 17                | 1956                        |                             | 14337                                    |
|         | 3            | 3                | 68                 | 9                 | 1862                        | 1291                        | 342964                                   |
|         | 4            | 2                | 72                 | 15                | 1069                        |                             | 768133                                   |
|         | 5            | 3                | 94                 | 12                | 1802                        | 1659                        | 982833                                   |
|         | 6            | 2                | 86                 | 18                | 1919                        |                             | 780502                                   |
|         | 7            | 3                | 95                 | 8                 | 1045                        | 1010                        | 298747                                   |
|         | 8            | 2                | 71                 | 18                | 1029                        |                             | 757244                                   |
|         | 9            | 3                | 71                 | 19                | 1176                        | 1676                        | 333091                                   |
|         | 10           | 2                | 92                 | 8                 | 1981                        |                             | 548183                                   |
|         | 11           | 2                | 67                 | 10                | 1232                        |                             | 655699                                   |
|         | 12           | 2                | 72                 | 7                 | 1164                        |                             | 304542                                   |

**UL Japan, Inc.**  
**Ise EMC Lab.**

4383-326 Asama-cho, Ise-shi, Mie-ken 516-0021 JAPAN  
Telephone : +81 596 24 8999  
Facsimile : +81 596 24 8124

| Trial # | Burst Number | Number of Pulses | Pulse Width [usec] | Chirp Width [MHz] | Pulse 1-to-2 Spacing [usec] | Pulse 2-to-3 Spacing [usec] | Starting Location Within Interval [usec] |
|---------|--------------|------------------|--------------------|-------------------|-----------------------------|-----------------------------|--|
| 8       | 1            | 1                | 63                 | 6                 |                             |                             | 1226                                     |
|         | 2            | 3                | 55                 | 20                | 1120                        | 1908                        | 1438324                                  |
|         | 3            | 1                | 79                 | 13                |                             |                             | 88362                                    |
|         | 4            | 1                | 96                 | 12                |                             |                             | 667931                                   |
|         | 5            | 2                | 76                 | 6                 | 1827                        |                             | 350613                                   |
|         | 6            | 2                | 79                 | 5                 | 1067                        |                             | 972588                                   |
|         | 7            | 1                | 55                 | 20                |                             |                             | 366240                                   |
|         | 8            | 2                | 74                 | 8                 | 1332                        |                             | 351341                                   |

| Trial # | Burst Number | Number of Pulses | Pulse Width [usec] | Chirp Width [MHz] | Pulse 1-to-2 Spacing [usec] | Pulse 2-to-3 Spacing [usec] | Starting Location Within Interval [usec] |
|---------|--------------|------------------|--------------------|-------------------|-----------------------------|-----------------------------|--|
| 9       | 1            | 2                | 90                 | 13                | 1000                        |                             | 329192                                   |
|         | 2            | 1                | 89                 | 12                |                             |                             | 618104                                   |
|         | 3            | 2                | 76                 | 6                 | 1881                        |                             | 722159                                   |
|         | 4            | 1                | 56                 | 10                |                             |                             | 764479                                   |
|         | 5            | 3                | 56                 | 19                | 1440                        | 1238                        | 579862                                   |
|         | 6            | 1                | 84                 | 20                |                             |                             | 413268                                   |
|         | 7            | 2                | 55                 | 12                | 1686                        |                             | 701586                                   |
|         | 8            | 3                | 54                 | 18                | 1727                        | 1352                        | 328932                                   |
|         | 9            | 2                | 56                 | 10                | 1317                        |                             | 836737                                   |
|         | 10           | 3                | 68                 | 11                | 1101                        | 1979                        | 223703                                   |
|         | 11           | 1                | 96                 | 14                |                             |                             | 823192                                   |
|         | 12           | 1                | 61                 | 11                |                             |                             | 900535                                   |
|         | 13           | 1                | 59                 | 6                 |                             |                             | 92479                                    |

| Trial # | Burst Number | Number of Pulses | Pulse Width [usec] | Chirp Width [MHz] | Pulse 1-to-2 Spacing [usec] | Pulse 2-to-3 Spacing [usec] | Starting Location Within Interval [usec] |
|---------|--------------|------------------|--------------------|-------------------|-----------------------------|-----------------------------|--|
| 10      | 1            | 1                | 96                 | 10                |                             |                             | 685                                      |
|         | 2            | 3                | 97                 | 20                | 1463                        | 1626                        | 428232                                   |
|         | 3            | 1                | 72                 | 10                |                             |                             | 587879                                   |
|         | 4            | 3                | 85                 | 8                 | 1266                        | 1901                        | 1048891                                  |
|         | 5            | 3                | 81                 | 6                 | 1395                        | 1951                        | 510170                                   |
|         | 6            | 1                | 80                 | 19                |                             |                             | 1183495                                  |
|         | 7            | 1                | 81                 | 20                |                             |                             | 739061                                   |
|         | 8            | 3                | 71                 | 6                 | 1476                        | 1393                        | 541141                                   |
|         | 9            | 3                | 80                 | 10                | 1875                        | 1379                        | 888272                                   |

**UL Japan, Inc.**  
**Ise EMC Lab.**

4383-326 Asama-cho, Ise-shi, Mie-ken 516-0021 JAPAN  
Telephone : +81 596 24 8999  
Facsimile : +81 596 24 8124

| Trial # | Burst Number | Number of Pulses | Pulse Width [usec] | Chirp Width [MHz] | Pulse 1-to-2 Spacing [usec] | Pulse 2-to-3 Spacing [usec] | Starting Location Within Interval [usec] |
|---------|--------------|------------------|--------------------|-------------------|-----------------------------|-----------------------------|--|
| 11      | 1            | 1                | 50                 | 5                 |                             |                             | 327                                      |
|         | 2            | 2                | 72                 | 5                 | 1575                        |                             | 204682                                   |
|         | 3            | 1                | 98                 | 16                |                             |                             | 659266                                   |
|         | 4            | 3                | 94                 | 19                | 1851                        | 1829                        | 690271                                   |
|         | 5            | 2                | 67                 | 14                | 1708                        |                             | 125455                                   |
|         | 6            | 3                | 76                 | 17                | 1632                        | 1231                        | 266655                                   |
|         | 7            | 1                | 66                 | 11                |                             |                             | 468606                                   |
|         | 8            | 3                | 52                 | 17                | 1094                        | 1991                        | 237085                                   |
|         | 9            | 1                | 85                 | 20                |                             |                             | 386438                                   |
|         | 10           | 3                | 98                 | 16                | 1503                        | 1806                        | 258843                                   |
|         | 11           | 1                | 65                 | 15                |                             |                             | 253897                                   |
|         | 12           | 2                | 91                 | 9                 | 1510                        |                             | 565476                                   |
|         | 13           | 1                | 75                 | 11                |                             |                             | 40154                                    |
|         | 14           | 3                | 92                 | 14                | 1931                        | 1010                        | 14731                                    |
|         | 15           | 1                | 95                 | 13                |                             |                             | 642708                                   |
|         | 16           | 3                | 58                 | 15                | 1728                        | 1359                        | 276730                                   |

| Trial # | Burst Number | Number of Pulses | Pulse Width [usec] | Chirp Width [MHz] | Pulse 1-to-2 Spacing [usec] | Pulse 2-to-3 Spacing [usec] | Starting Location Within Interval [usec] |
|---------|--------------|------------------|--------------------|-------------------|-----------------------------|-----------------------------|--|
| 12      | 1            | 2                | 95                 | 8                 | 1000                        |                             | 605191                                   |
|         | 2            | 1                | 52                 | 6                 |                             |                             | 1178113                                  |
|         | 3            | 3                | 86                 | 19                | 1098                        | 1201                        | 1224252                                  |
|         | 4            | 1                | 53                 | 18                |                             |                             | 198228                                   |
|         | 5            | 3                | 89                 | 5                 | 1574                        | 1538                        | 1029048                                  |
|         | 6            | 2                | 68                 | 20                | 1299                        |                             | 1217328                                  |
|         | 7            | 2                | 73                 | 9                 | 1071                        |                             | 1223938                                  |
|         | 8            | 3                | 84                 | 5                 | 1548                        | 1432                        | 104441                                   |
|         | 9            | 3                | 67                 | 14                | 1172                        | 1083                        | 1113146                                  |

| Trial # | Burst Number | Number of Pulses | Pulse Width [usec] | Chirp Width [MHz] | Pulse 1-to-2 Spacing [usec] | Pulse 2-to-3 Spacing [usec] | Starting Location Within Interval [usec] |
|---------|--------------|------------------|--------------------|-------------------|-----------------------------|-----------------------------|--|
| 13      | 1            | 2                | 83                 | 15                | 1000                        |                             | 462632                                   |
|         | 2            | 2                | 81                 | 11                | 1467                        |                             | 360663                                   |
|         | 3            | 3                | 73                 | 14                | 1304                        | 1224                        | 566255                                   |
|         | 4            | 1                | 71                 | 5                 |                             |                             | 747649                                   |
|         | 5            | 2                | 53                 | 10                | 1916                        |                             | 483034                                   |
|         | 6            | 2                | 81                 | 7                 | 1200                        |                             | 328243                                   |
|         | 7            | 1                | 88                 | 12                |                             |                             | 284851                                   |
|         | 8            | 2                | 100                | 15                | 1922                        |                             | 216397                                   |
|         | 9            | 2                | 75                 | 15                | 1631                        |                             | 78111                                    |
|         | 10           | 2                | 72                 | 8                 | 1797                        |                             | 190143                                   |
|         | 11           | 3                | 53                 | 12                | 1828                        | 1559                        | 649214                                   |
|         | 12           | 2                | 71                 | 7                 | 1286                        |                             | 161915                                   |
|         | 13           | 1                | 62                 | 11                |                             |                             | 315973                                   |
|         | 14           | 1                | 76                 | 10                |                             |                             | 249073                                   |
|         | 15           | 3                | 80                 | 5                 | 1693                        | 1013                        | 244210                                   |

**UL Japan, Inc.**  
**Ise EMC Lab.**

4383-326 Asama-cho, Ise-shi, Mie-ken 516-0021 JAPAN  
Telephone : +81 596 24 8999  
Facsimile : +81 596 24 8124

| Trial # | Burst Number | Number of Pulses | Pulse Width [usec] | Chirp Width [MHz] | Pulse 1-to-2 Spacing [usec] | Pulse 2-to-3 Spacing [usec] | Starting Location Within Interval [usec] |
|---------|--------------|------------------|--------------------|-------------------|-----------------------------|-----------------------------|--|
| 14      | 1            | 3                | 64                 | 9                 | 1060                        | 1389                        | 1389247                                  |
|         | 2            | 3                | 68                 | 18                | 1857                        | 1211                        | 817897                                   |
|         | 3            | 3                | 73                 | 18                | 1298                        | 1967                        | 695974                                   |
|         | 4            | 2                | 56                 | 20                | 1324                        |                             | 1458722                                  |
|         | 5            | 2                | 59                 | 12                | 1921                        |                             | 564457                                   |
|         | 6            | 1                | 92                 | 19                |                             |                             | 1424226                                  |
|         | 7            | 1                | 76                 | 17                |                             |                             | 55187                                    |
|         | 8            | 3                | 83                 | 20                | 1225                        | 1229                        | 364467                                   |

| Trial # | Burst Number | Number of Pulses | Pulse Width [usec] | Chirp Width [MHz] | Pulse 1-to-2 Spacing [usec] | Pulse 2-to-3 Spacing [usec] | Starting Location Within Interval [usec] |
|---------|--------------|------------------|--------------------|-------------------|-----------------------------|-----------------------------|--|
| 15      | 1            | 2                | 95                 | 15                | 1000                        |                             | 310315                                   |
|         | 2            | 1                | 89                 | 7                 |                             |                             | 418941                                   |
|         | 3            | 3                | 69                 | 16                | 1227                        | 1303                        | 404592                                   |
|         | 4            | 3                | 55                 | 13                | 1166                        | 1666                        | 392289                                   |
|         | 5            | 1                | 84                 | 8                 |                             |                             | 384488                                   |
|         | 6            | 1                | 61                 | 11                |                             |                             | 330527                                   |
|         | 7            | 2                | 64                 | 5                 | 1242                        |                             | 517674                                   |
|         | 8            | 1                | 67                 | 10                |                             |                             | 556078                                   |
|         | 9            | 3                | 80                 | 19                | 1696                        | 1760                        | 294198                                   |
|         | 10           | 1                | 72                 | 8                 |                             |                             | 60910                                    |
|         | 11           | 3                | 64                 | 12                | 1857                        | 1796                        | 334038                                   |
|         | 12           | 2                | 78                 | 11                | 1803                        |                             | 324519                                   |
|         | 13           | 2                | 52                 | 18                | 1085                        |                             | 14714                                    |
|         | 14           | 3                | 58                 | 13                | 1342                        | 1690                        | 484704                                   |
|         | 15           | 2                | 54                 | 19                | 1840                        |                             | 48286                                    |
|         | 18           | 1                | 75                 | 9                 |                             |                             | 158780                                   |
|         | 19           | 3                | 58                 | 15                | 1270                        | 1114                        | 398520                                   |
|         | 20           | 2                | 64                 | 7                 | 1157                        |                             | 189980                                   |

**UL Japan, Inc.**  
**Ise EMC Lab.**

4383-326 Asama-cho, Ise-shi, Mie-ken 516-0021 JAPAN  
Telephone : +81 596 24 8999  
Facsimile : +81 596 24 8124

| Trial # | Burst Number | Number of Pulses | Pulse Width [usec] | Chirp Width [MHz] | Pulse 1-to-2 Spacing [usec] | Pulse 2-to-3 Spacing [usec] | Starting Location Within Interval [usec] |
|---------|--------------|------------------|--------------------|-------------------|-----------------------------|-----------------------------|--|
| 16      | 1            | 2                | 89                 | 6                 | 1000                        |                             | 49861                                    |
|         | 2            | 2                | 60                 | 16                | 1795                        |                             | 220732                                   |
|         | 3            | 2                | 93                 | 17                | 1753                        |                             | 336331                                   |
|         | 4            | 3                | 54                 | 12                | 1971                        | 1127                        | 490899                                   |
|         | 5            | 3                | 60                 | 20                | 1822                        | 1948                        | 566715                                   |
|         | 6            | 1                | 62                 | 5                 |                             |                             | 534774                                   |
|         | 7            | 1                | 66                 | 13                |                             |                             | 432254                                   |
|         | 8            | 3                | 69                 | 9                 | 1107                        | 1599                        | 458752                                   |
|         | 9            | 1                | 92                 | 8                 |                             |                             | 13801                                    |
|         | 10           | 2                | 56                 | 16                | 1839                        |                             | 281767                                   |
|         | 11           | 2                | 70                 | 13                | 1781                        |                             | 257920                                   |
|         | 12           | 3                | 98                 | 7                 | 1660                        | 1756                        | 564335                                   |
|         | 13           | 3                | 89                 | 16                | 1403                        | 1250                        | 452405                                   |
|         | 14           | 1                | 80                 | 10                |                             |                             | 595864                                   |
|         | 15           | 2                | 63                 | 5                 | 1987                        |                             | 420168                                   |
|         | 16           | 1                | 67                 | 16                |                             |                             | 453152                                   |

| Trial # | Burst Number | Number of Pulses | Pulse Width [usec] | Chirp Width [MHz] | Pulse 1-to-2 Spacing [usec] | Pulse 2-to-3 Spacing [usec] | Starting Location Within Interval [usec] |
|---------|--------------|------------------|--------------------|-------------------|-----------------------------|-----------------------------|--|
| 17      | 1            | 2                | 70                 | 14                | 1000                        |                             | 253751                                   |
|         | 2            | 2                | 54                 | 11                | 1286                        |                             | 304950                                   |
|         | 3            | 2                | 54                 | 13                | 1177                        |                             | 46562                                    |
|         | 4            | 3                | 53                 | 20                | 1956                        | 1940                        | 764476                                   |
|         | 5            | 1                | 73                 | 9                 |                             |                             | 823140                                   |
|         | 6            | 1                | 56                 | 5                 |                             |                             | 110410                                   |
|         | 7            | 2                | 66                 | 10                | 1887                        |                             | 368179                                   |
|         | 8            | 3                | 71                 | 5                 | 1176                        | 1398                        | 542129                                   |
|         | 9            | 3                | 95                 | 10                | 1062                        | 1896                        | 566987                                   |
|         | 11           | 3                | 50                 | 17                | 1584                        | 1876                        | 342659                                   |
|         | 12           | 1                | 82                 | 8                 |                             |                             | 167811                                   |
|         | 13           | 3                | 65                 | 9                 | 1827                        | 1324                        | 324282                                   |
|         | 14           | 1                | 82                 | 16                |                             |                             | 556103                                   |

| Trial # | Burst Number | Number of Pulses | Pulse Width [usec] | Chirp Width [MHz] | Pulse 1-to-2 Spacing [usec] | Pulse 2-to-3 Spacing [usec] | Starting Location Within Interval [usec] |
|---------|--------------|------------------|--------------------|-------------------|-----------------------------|-----------------------------|--|
| 18      | 1            | 3                | 79                 | 9                 | 1578                        | 1788                        | 268637                                   |
|         | 2            | 2                | 67                 | 9                 | 1514                        |                             | 357905                                   |
|         | 3            | 3                | 92                 | 15                | 1299                        | 1871                        | 52060                                    |
|         | 4            | 2                | 59                 | 10                | 1371                        |                             | 373698                                   |
|         | 5            | 2                | 56                 | 7                 | 1305                        |                             | 388593                                   |
|         | 6            | 2                | 60                 | 12                | 1715                        |                             | 266850                                   |
|         | 7            | 3                | 88                 | 19                | 1839                        | 1745                        | 154789                                   |
|         | 8            | 3                | 70                 | 17                | 1542                        | 1702                        | 389165                                   |
|         | 9            | 3                | 53                 | 16                | 1594                        | 1106                        | 424209                                   |
|         | 10           | 3                | 71                 | 17                | 1758                        | 1631                        | 398851                                   |
|         | 11           | 3                | 81                 | 7                 | 1588                        | 1025                        | 308396                                   |
|         | 12           | 1                | 74                 | 11                |                             |                             | 481019                                   |
|         | 13           | 2                | 65                 | 16                | 1024                        |                             | 57269                                    |
|         | 14           | 2                | 83                 | 15                | 1095                        |                             | 44095                                    |
|         | 15           | 1                | 88                 | 11                |                             |                             | 388804                                   |
|         | 16           | 3                | 78                 | 10                | 1394                        | 1248                        | 288447                                   |
|         | 17           | 1                | 73                 | 14                |                             |                             | 66630                                    |
|         | 18           | 2                | 53                 | 6                 | 1994                        |                             | 380270                                   |

**UL Japan, Inc.**  
**Ise EMC Lab.**

4383-326 Asama-cho, Ise-shi, Mie-ken 516-0021 JAPAN  
Telephone : +81 596 24 8999  
Facsimile : +81 596 24 8124

| Trial # | Burst Number | Number of Pulses | Pulse Width [usec] | Chirp Width [MHz] | Pulse 1-to-2 Spacing [usec] | Pulse 2-to-3 Spacing [usec] | Starting Location Within Interval [usec] |
|---------|--------------|------------------|--------------------|-------------------|-----------------------------|-----------------------------|--|
| 19      | 1            | 2                | 71                 | 19                | 1000                        |                             | 530435                                   |
|         | 2            | 3                | 71                 | 6                 | 1166                        | 1863                        | 23555                                    |
|         | 3            | 3                | 91                 | 14                | 1272                        | 1818                        | 601498                                   |
|         | 4            | 3                | 95                 | 15                | 1421                        | 1315                        | 354078                                   |
|         | 5            | 1                | 73                 | 20                |                             |                             | 368480                                   |
|         | 6            | 2                | 89                 | 13                | 1098                        |                             | 430091                                   |
|         | 7            | 1                | 79                 | 15                |                             |                             | 186629                                   |
|         | 8            | 2                | 59                 | 9                 | 1628                        |                             | 488245                                   |
|         | 9            | 3                | 83                 | 20                | 1772                        | 1398                        | 309540                                   |
|         | 10           | 3                | 91                 | 6                 | 1987                        | 1547                        | 131823                                   |
|         | 11           | 1                | 81                 | 16                |                             |                             | 91455                                    |
|         | 12           | 2                | 77                 | 8                 | 1363                        |                             | 500715                                   |
|         | 13           | 3                | 51                 | 19                | 1208                        | 1329                        | 626155                                   |
|         | 14           | 3                | 83                 | 19                | 1054                        | 1486                        | 370031                                   |
|         | 15           | 2                | 64                 | 15                | 1208                        |                             | 533976                                   |
|         | 16           | 1                | 87                 | 11                |                             |                             | 130056                                   |
|         | 17           | 2                | 82                 | 18                | 1221                        |                             | 80736                                    |
|         | 18           | 1                | 100                | 8                 |                             |                             | 400734                                   |

| Trial # | Burst Number | Number of Pulses | Pulse Width [usec] | Chirp Width [MHz] | Pulse 1-to-2 Spacing [usec] | Pulse 2-to-3 Spacing [usec] | Starting Location Within Interval [usec] |
|---------|--------------|------------------|--------------------|-------------------|-----------------------------|-----------------------------|--|
| 20      | 1            | 2                | 67                 | 14                | 1000                        |                             | 417577                                   |
|         | 2            | 3                | 89                 | 15                | 1814                        | 1200                        | 749936                                   |
|         | 3            | 2                | 84                 | 11                | 1972                        |                             | 29584                                    |
|         | 4            | 2                | 97                 | 16                | 1348                        |                             | 39020                                    |
|         | 5            | 1                | 81                 | 12                |                             |                             | 516900                                   |
|         | 6            | 3                | 89                 | 12                | 1350                        | 1577                        | 45783                                    |
|         | 7            | 3                | 89                 | 12                | 1439                        | 1610                        | 277760                                   |
|         | 8            | 2                | 91                 | 18                | 1436                        |                             | 474452                                   |
|         | 9            | 1                | 50                 | 7                 |                             |                             | 9073                                     |
|         | 10           | 2                | 99                 | 16                | 1813                        |                             | 3307                                     |
|         | 11           | 1                | 73                 | 17                |                             |                             | 98931                                    |
|         | 12           | 1                | 63                 | 11                |                             |                             | 549315                                   |
|         | 13           | 1                | 100                | 6                 |                             |                             | 467280                                   |
|         | 14           | 3                | 64                 | 6                 | 1341                        | 1643                        | 14171                                    |
|         | 15           | 2                | 80                 | 5                 | 1951                        |                             | 60308                                    |

**UL Japan, Inc.**  
**Ise EMC Lab.**

4383-326 Asama-cho, Ise-shi, Mie-ken 516-0021 JAPAN  
Telephone : +81 596 24 8999  
Facsimile : +81 596 24 8124

| Trial # | Burst Number | Number of Pulses | Pulse Width [usec] | Chirp Width [MHz] | Pulse 1-to-2 Spacing [usec] | Pulse 2-to-3 Spacing [usec] | Starting Location Within Interval [usec] |
|---------|--------------|------------------|--------------------|-------------------|-----------------------------|-----------------------------|--|
| 21      | 1            | 2                | 77                 | 18                | 1000                        |                             | 368006                                   |
|         | 2            | 3                | 55                 | 13                | 1218                        | 1023                        | 131188                                   |
|         | 3            | 1                | 80                 | 7                 |                             |                             | 94652                                    |
|         | 4            | 2                | 98                 | 19                | 1848                        |                             | 345833                                   |
|         | 5            | 1                | 72                 | 13                |                             |                             | 403533                                   |
|         | 6            | 3                | 82                 | 9                 | 1785                        | 1084                        | 531912                                   |
|         | 7            | 2                | 60                 | 9                 | 1523                        |                             | 447344                                   |
|         | 8            | 3                | 92                 | 17                | 1140                        | 1502                        | 392926                                   |
|         | 9            | 3                | 76                 | 18                | 1913                        | 1222                        | 406696                                   |
|         | 10           | 1                | 83                 | 5                 |                             |                             | 33819                                    |
|         | 11           | 1                | 51                 | 6                 |                             |                             | 223414                                   |
|         | 12           | 3                | 72                 | 12                | 1332                        | 1548                        | 274258                                   |
|         | 13           | 2                | 91                 | 6                 | 1362                        |                             | 481616                                   |
|         | 14           | 2                | 92                 | 17                | 1812                        |                             | 289842                                   |
|         | 15           | 1                | 90                 | 5                 |                             |                             | 464979                                   |
|         | 16           | 2                | 69                 | 14                | 1653                        |                             | 26061                                    |
|         | 17           | 3                | 81                 | 20                | 1537                        | 1582                        | 474086                                   |
|         | 18           | 1                | 50                 | 16                |                             |                             | 206976                                   |
|         | 19           | 1                | 90                 | 12                |                             |                             | 217876                                   |
|         | 20           | 1                | 57                 | 16                |                             |                             | 291968                                   |

| Trial # | Burst Number | Number of Pulses | Pulse Width [usec] | Chirp Width [MHz] | Pulse 1-to-2 Spacing [usec] | Pulse 2-to-3 Spacing [usec] | Starting Location Within Interval [usec] |
|---------|--------------|------------------|--------------------|-------------------|-----------------------------|-----------------------------|--|
| 22      | 1            | 3                | 92                 | 6                 | 1109                        | 1096                        | 852484                                   |
|         | 2            | 2                | 93                 | 13                | 1475                        |                             | 649523                                   |
|         | 3            | 2                | 71                 | 8                 | 1565                        |                             | 151227                                   |
|         | 4            | 3                | 79                 | 5                 | 1782                        | 1530                        | 472754                                   |
|         | 5            | 2                | 76                 | 10                | 1121                        |                             | 563139                                   |
|         | 6            | 2                | 66                 | 5                 | 1823                        |                             | 860468                                   |
|         | 7            | 2                | 55                 | 15                | 1703                        |                             | 669477                                   |
|         | 8            | 2                | 99                 | 5                 | 1465                        |                             | 444703                                   |
|         | 9            | 3                | 81                 | 6                 | 1898                        | 1870                        | 341140                                   |
|         | 10           | 1                | 94                 | 12                |                             |                             | 585543                                   |
|         | 11           | 1                | 85                 | 20                |                             |                             | 196131                                   |
|         | 12           | 1                | 50                 | 16                |                             |                             | 269336                                   |
|         | 13           | 3                | 92                 | 12                | 1637                        | 1371                        | 652817                                   |

| Trial # | Burst Number | Number of Pulses | Pulse Width [usec] | Chirp Width [MHz] | Pulse 1-to-2 Spacing [usec] | Pulse 2-to-3 Spacing [usec] | Starting Location Within Interval [usec] |
|---------|--------------|------------------|--------------------|-------------------|-----------------------------|-----------------------------|--|
| 23      | 1            | 2                | 71                 | 15                | 1000                        |                             | 481876                                   |
|         | 2            | 1                | 55                 | 11                |                             |                             | 102309                                   |
|         | 3            | 1                | 61                 | 19                |                             |                             | 823455                                   |
|         | 4            | 2                | 90                 | 13                | 1871                        |                             | 693047                                   |
|         | 5            | 2                | 55                 | 15                | 1416                        |                             | 251845                                   |
|         | 6            | 2                | 84                 | 15                | 1528                        |                             | 1140391                                  |
|         | 7            | 1                | 64                 | 11                |                             |                             | 584703                                   |
|         | 8            | 1                | 88                 | 19                |                             |                             | 1135948                                  |
|         | 9            | 2                | 82                 | 11                | 1448                        |                             | 317699                                   |

**UL Japan, Inc.**  
**Ise EMC Lab.**

4383-326 Asama-cho, Ise-shi, Mie-ken 516-0021 JAPAN  
Telephone : +81 596 24 8999  
Facsimile : +81 596 24 8124

| Trial # | Burst Number | Number of Pulses | Pulse Width [usec] | Chirp Width [MHz] | Pulse 1-to-2 Spacing [usec] | Pulse 2-to-3 Spacing [usec] | Starting Location Within Interval [usec] |
|---------|--------------|------------------|--------------------|-------------------|-----------------------------|-----------------------------|--|
| 24      | 1            | 1                | 79                 | 10                |                             |                             | 502                                      |
|         | 2            | 2                | 76                 | 17                | 1924                        |                             | 683615                                   |
|         | 3            | 3                | 68                 | 11                | 1773                        | 1157                        | 334227                                   |
|         | 4            | 2                | 84                 | 18                | 1484                        |                             | 1339610                                  |
|         | 5            | 1                | 95                 | 11                |                             |                             | 1295901                                  |
|         | 6            | 3                | 79                 | 13                | 1997                        | 1559                        | 930277                                   |
|         | 7            | 3                | 76                 | 7                 | 1350                        | 1169                        | 984612                                   |
|         | 8            | 3                | 81                 | 8                 | 1100                        | 1556                        | 1190974                                  |

| Trial # | Burst Number | Number of Pulses | Pulse Width [usec] | Chirp Width [MHz] | Pulse 1-to-2 Spacing [usec] | Pulse 2-to-3 Spacing [usec] | Starting Location Within Interval [usec] |
|---------|--------------|------------------|--------------------|-------------------|-----------------------------|-----------------------------|--|
| 25      | 1            | 1                | 98                 | 13                |                             |                             | 431                                      |
|         | 2            | 2                | 98                 | 15                | 1178                        |                             | 218287                                   |
|         | 3            | 3                | 87                 | 9                 | 1853                        | 1983                        | 47586                                    |
|         | 4            | 3                | 89                 | 19                | 1074                        | 1112                        | 605621                                   |
|         | 5            | 1                | 86                 | 6                 |                             |                             | 489104                                   |
|         | 6            | 2                | 88                 | 10                | 1547                        |                             | 185698                                   |
|         | 7            | 2                | 58                 | 14                | 1445                        |                             | 60948                                    |
|         | 8            | 3                | 65                 | 7                 | 1419                        | 1187                        | 576689                                   |
|         | 9            | 2                | 64                 | 13                | 1795                        |                             | 407838                                   |
|         | 10           | 3                | 64                 | 16                | 1277                        | 1934                        | 504383                                   |
|         | 11           | 1                | 62                 | 16                |                             |                             | 316127                                   |
|         | 12           | 2                | 99                 | 16                | 1831                        |                             | 86683                                    |
|         | 13           | 1                | 89                 | 6                 |                             |                             | 235090                                   |
|         | 14           | 2                | 92                 | 17                | 1973                        |                             | 174000                                   |
|         | 15           | 2                | 50                 | 6                 | 1037                        |                             | 230591                                   |
|         | 16           | 3                | 80                 | 8                 | 1706                        | 1594                        | 510516                                   |
|         | 17           | 3                | 96                 | 9                 | 1157                        | 1220                        | 490779                                   |
|         | 18           | 3                | 62                 | 19                | 1079                        | 1188                        | 131101                                   |
|         | 19           | 3                | 59                 | 15                | 1216                        | 1955                        | 320823                                   |

| Trial # | Burst Number | Number of Pulses | Pulse Width [usec] | Chirp Width [MHz] | Pulse 1-to-2 Spacing [usec] | Pulse 2-to-3 Spacing [usec] | Starting Location Within Interval [usec] |
|---------|--------------|------------------|--------------------|-------------------|-----------------------------|-----------------------------|--|
| 26      | 1            | 2                | 90                 | 7                 | 1000                        |                             | 21406                                    |
|         | 2            | 2                | 70                 | 12                | 1156                        |                             | 410413                                   |
|         | 3            | 2                | 53                 | 14                | 1457                        |                             | 29335                                    |
|         | 4            | 2                | 91                 | 19                | 1269                        |                             | 72993                                    |
|         | 5            | 3                | 57                 | 16                | 1573                        | 1384                        | 8169                                     |
|         | 6            | 1                | 69                 | 18                |                             |                             | 561596                                   |
|         | 7            | 1                | 66                 | 20                |                             |                             | 696671                                   |
|         | 8            | 3                | 72                 | 20                | 1061                        | 1122                        | 730958                                   |
|         | 9            | 1                | 91                 | 14                |                             |                             | 178592                                   |
|         | 10           | 3                | 73                 | 15                | 1879                        | 1073                        | 394285                                   |
|         | 11           | 2                | 74                 | 12                | 1042                        |                             | 581205                                   |
|         | 12           | 3                | 52                 | 14                | 1321                        | 1985                        | 601492                                   |
|         | 13           | 2                | 66                 | 10                | 1339                        |                             | 311074                                   |
|         | 14           | 3                | 68                 | 19                | 1432                        | 1190                        | 642255                                   |
|         | 15           | 2                | 88                 | 5                 | 1938                        |                             | 456778                                   |

**UL Japan, Inc.**  
**Ise EMC Lab.**

4383-326 Asama-cho, Ise-shi, Mie-ken 516-0021 JAPAN  
Telephone : +81 596 24 8999  
Facsimile : +81 596 24 8124



| Trial # | Burst Number | Number of Pulses | Pulse Width [usec] | Chirp Width [MHz] | Pulse 1-to-2 Spacing [usec] | Pulse 2-to-3 Spacing [usec] | Starting Location Within Interval [usec] |
|---------|--------------|------------------|--------------------|-------------------|-----------------------------|-----------------------------|--|
| 27      | 1            | 3                | 67                 | 13                | 1773                        | 1879                        | 269482                                   |
|         | 2            | 2                | 87                 | 12                | 1770                        |                             | 362023                                   |
|         | 3            | 1                | 89                 | 6                 |                             |                             | 529815                                   |
|         | 4            | 1                | 68                 | 12                |                             |                             | 549730                                   |
|         | 5            | 1                | 65                 | 18                |                             |                             | 483308                                   |
|         | 6            | 2                | 73                 | 11                | 1873                        |                             | 349802                                   |
|         | 7            | 1                | 90                 | 10                |                             |                             | 584007                                   |
|         | 8            | 2                | 64                 | 11                | 1019                        |                             | 359296                                   |
|         | 9            | 2                | 71                 | 5                 | 1300                        |                             | 490535                                   |
|         | 10           | 3                | 97                 | 19                | 1328                        | 1160                        | 516755                                   |
|         | 11           | 2                | 62                 | 5                 | 1616                        |                             | 19691                                    |
|         | 12           | 3                | 64                 | 18                | 1511                        | 1858                        | 75022                                    |
|         | 13           | 3                | 75                 | 12                | 1481                        | 1791                        | 366913                                   |
|         | 14           | 3                | 52                 | 8                 | 1790                        | 1634                        | 451743                                   |
|         | 15           | 2                | 55                 | 11                | 1917                        |                             | 438242                                   |
|         | 16           | 1                | 60                 | 6                 |                             |                             | 229121                                   |
|         | 17           | 2                | 58                 | 12                | 1016                        |                             | 612445                                   |
|         | 18           | 1                | 93                 | 20                |                             |                             | 289962                                   |
|         | 19           | 2                | 92                 | 17                | 1550                        |                             | 305005                                   |

| Trial # | Burst Number | Number of Pulses | Pulse Width [usec] | Chirp Width [MHz] | Pulse 1-to-2 Spacing [usec] | Pulse 2-to-3 Spacing [usec] | Starting Location Within Interval [usec] |
|---------|--------------|------------------|--------------------|-------------------|-----------------------------|-----------------------------|--|
| 28      | 1            | 3                | 77                 | 10                | 1742                        | 1027                        | 263870                                   |
|         | 2            | 3                | 58                 | 11                | 1034                        | 1090                        | 724492                                   |
|         | 3            | 3                | 74                 | 14                | 1406                        | 1033                        | 689054                                   |
|         | 4            | 3                | 68                 | 15                | 1166                        | 1872                        | 604675                                   |
|         | 5            | 1                | 54                 | 14                |                             |                             | 276118                                   |
|         | 6            | 1                | 59                 | 5                 |                             |                             | 203975                                   |
|         | 7            | 1                | 99                 | 9                 |                             |                             | 206433                                   |
|         | 8            | 3                | 76                 | 14                | 1011                        | 1212                        | 153936                                   |
|         | 9            | 3                | 58                 | 20                | 1102                        | 1506                        | 642672                                   |
|         | 10           | 1                | 61                 | 20                |                             |                             | 689435                                   |
|         | 11           | 1                | 82                 | 18                |                             |                             | 689123                                   |
|         | 12           | 1                | 67                 | 16                |                             |                             | 725793                                   |
|         | 13           | 3                | 88                 | 9                 | 1786                        | 1768                        | 354605                                   |
|         | 14           | 2                | 89                 | 10                | 1974                        |                             | 280460                                   |
|         | 15           | 3                | 57                 | 6                 | 1317                        | 1099                        | 412638                                   |
|         | 16           | 2                | 53                 | 8                 | 1301                        |                             | 240301                                   |

| Trial # | Burst Number | Number of Pulses | Pulse Width [usec] | Chirp Width [MHz] | Pulse 1-to-2 Spacing [usec] | Pulse 2-to-3 Spacing [usec] | Starting Location Within Interval [usec] |
|---------|--------------|------------------|--------------------|-------------------|-----------------------------|-----------------------------|--|
| 29      | 1            | 2                | 59                 | 8                 | 1000                        |                             | 714854                                   |
|         | 2            | 1                | 68                 | 19                |                             |                             | 370073                                   |
|         | 3            | 2                | 89                 | 13                | 1833                        |                             | 940039                                   |
|         | 4            | 1                | 94                 | 16                |                             |                             | 248190                                   |
|         | 5            | 2                | 66                 | 7                 | 1539                        |                             | 374497                                   |
|         | 6            | 3                | 68                 | 10                | 1639                        | 1521                        | 641873                                   |
|         | 7            | 2                | 97                 | 12                | 1102                        |                             | 454420                                   |
|         | 8            | 1                | 78                 | 5                 |                             |                             | 85878                                    |
|         | 9            | 1                | 98                 | 17                |                             |                             | 772224                                   |

**UL Japan, Inc.**  
**Ise EMC Lab.**

4383-326 Asama-cho, Ise-shi, Mie-ken 516-0021 JAPAN  
Telephone : +81 596 24 8999  
Facsimile : +81 596 24 8124

| Trial # | Burst Number | Number of Pulses | Pulse Width [usec] | Chirp Width [MHz] | Pulse 1-to-2 Spacing [usec] | Pulse 2-to-3 Spacing [usec] | Starting Location Within Interval [usec] |
|---------|--------------|------------------|--------------------|-------------------|-----------------------------|-----------------------------|--|
| 30      | 1            | 3                | 69                 | 16                | 1339                        | 1381                        | 222494                                   |
|         | 2            | 1                | 70                 | 7                 |                             |                             | 594563                                   |
|         | 3            | 3                | 56                 | 20                | 1660                        | 1444                        | 530020                                   |
|         | 4            | 2                | 73                 | 11                | 1710                        |                             | 652048                                   |
|         | 5            | 2                | 100                | 17                | 1536                        |                             | 244442                                   |
|         | 6            | 3                | 93                 | 5                 | 1652                        | 1731                        | 632428                                   |
|         | 7            | 2                | 55                 | 9                 | 1629                        |                             | 76229                                    |
|         | 8            | 1                | 79                 | 10                |                             |                             | 352412                                   |
|         | 9            | 2                | 97                 | 10                | 1504                        |                             | 447176                                   |
|         | 10           | 2                | 87                 | 10                | 1658                        |                             | 278814                                   |
|         | 11           | 2                | 73                 | 6                 | 1719                        |                             | 549650                                   |
|         | 12           | 3                | 63                 | 12                | 1220                        | 1669                        | 724119                                   |
|         | 13           | 3                | 58                 | 6                 | 1030                        | 1034                        | 721387                                   |
|         | 14           | 1                | 69                 | 11                |                             |                             | 21782                                    |
|         | 15           | 3                | 79                 | 11                | 1218                        | 1069                        | 345240                                   |
|         | 16           | 1                | 93                 | 17                |                             |                             | 613570                                   |

---

**UL Japan, Inc.**  
**Ise EMC Lab.**

4383-326 Asama-cho, Ise-shi, Mie-ken 516-0021 JAPAN  
 Telephone : +81 596 24 8999  
 Facsimile : +81 596 24 8124

**Parameter Data sheet for Radar Type 5**

**5310MHz (11n-40)**

| Trial # | Burst Number | Number of Pulses | Pulse Width [usec] | Chirp Width [MHz] | Pulse 1-to-2 Spacing [usec] | Pulse 2-to-3 Spacing [usec] | Starting Location Within Interval [usec] |
|---------|--------------|------------------|--------------------|-------------------|-----------------------------|-----------------------------|--|
| 1       | 1            | 2                | 89                 | 6                 | 1000                        |                             | 49861                                    |
|         | 2            | 2                | 60                 | 16                | 1795                        |                             | 220732                                   |
|         | 3            | 2                | 93                 | 17                | 1753                        |                             | 336331                                   |
|         | 4            | 3                | 54                 | 12                | 1971                        | 1127                        | 490899                                   |
|         | 5            | 3                | 60                 | 20                | 1822                        | 1948                        | 566715                                   |
|         | 6            | 1                | 62                 | 5                 |                             |                             | 534774                                   |
|         | 7            | 1                | 66                 | 13                |                             |                             | 432254                                   |
|         | 8            | 3                | 69                 | 9                 | 1107                        | 1599                        | 458752                                   |
|         | 9            | 1                | 92                 | 8                 |                             |                             | 13801                                    |
|         | 10           | 2                | 56                 | 16                | 1839                        |                             | 281767                                   |
|         | 11           | 2                | 70                 | 13                | 1781                        |                             | 257920                                   |
|         | 12           | 3                | 98                 | 7                 | 1660                        | 1756                        | 564335                                   |
|         | 13           | 3                | 89                 | 16                | 1403                        | 1250                        | 452405                                   |
|         | 14           | 1                | 80                 | 10                |                             |                             | 595864                                   |
|         | 15           | 2                | 63                 | 5                 | 1987                        |                             | 420168                                   |
|         | 16           | 1                | 67                 | 16                |                             |                             | 453152                                   |
|         | 17           | 2                | 63                 | 12                | 1615                        |                             | 314403                                   |
|         | 18           | 2                | 82                 | 16                | 1134                        |                             | 382560                                   |

| Trial # | Burst Number | Number of Pulses | Pulse Width [usec] | Chirp Width [MHz] | Pulse 1-to-2 Spacing [usec] | Pulse 2-to-3 Spacing [usec] | Starting Location Within Interval [usec] |
|---------|--------------|------------------|--------------------|-------------------|-----------------------------|-----------------------------|--|
| 2       | 1            | 2                | 70                 | 14                | 1000                        |                             | 253751                                   |
|         | 2            | 2                | 54                 | 11                | 1286                        |                             | 304950                                   |
|         | 3            | 2                | 54                 | 13                | 1177                        |                             | 46562                                    |
|         | 4            | 3                | 53                 | 20                | 1956                        | 1940                        | 764476                                   |
|         | 5            | 1                | 73                 | 9                 |                             |                             | 823140                                   |
|         | 6            | 1                | 56                 | 5                 |                             |                             | 110410                                   |
|         | 7            | 2                | 66                 | 10                | 1887                        |                             | 368179                                   |
|         | 8            | 3                | 71                 | 5                 | 1176                        | 1398                        | 542129                                   |
|         | 9            | 3                | 95                 | 10                | 1062                        | 1896                        | 566987                                   |
|         | 10           | 1                | 87                 | 16                |                             |                             | 647826                                   |
|         | 11           | 3                | 50                 | 17                | 1584                        | 1876                        | 342659                                   |
|         | 12           | 1                | 82                 | 8                 |                             |                             | 167811                                   |
|         | 13           | 3                | 65                 | 9                 | 1827                        | 1324                        | 324282                                   |
|         | 14           | 1                | 82                 | 16                |                             |                             | 556103                                   |

**UL Japan, Inc.**  
**Ise EMC Lab.**

4383-326 Asama-cho, Ise-shi, Mie-ken 516-0021 JAPAN  
Telephone : +81 596 24 8999  
Facsimile : +81 596 24 8124

| Trial # | Burst Number | Number of Pulses | Pulse Width [usec] | Chirp Width [MHz] | Pulse 1-to-2 Spacing [usec] | Pulse 2-to-3 Spacing [usec] | Starting Location Within Interval [usec] |
|---------|--------------|------------------|--------------------|-------------------|-----------------------------|-----------------------------|--|
| 3       | 1            | 3                | 79                 | 9                 | 1578                        | 1788                        | 268637                                   |
|         | 2            | 2                | 67                 | 9                 | 1514                        |                             | 357905                                   |
|         | 3            | 3                | 92                 | 15                | 1299                        | 1871                        | 52060                                    |
|         | 4            | 2                | 59                 | 10                | 1371                        |                             | 373698                                   |
|         | 5            | 2                | 56                 | 7                 | 1305                        |                             | 388593                                   |
|         | 6            | 2                | 60                 | 12                | 1715                        |                             | 266850                                   |
|         | 7            | 3                | 88                 | 19                | 1839                        | 1745                        | 154789                                   |
|         | 8            | 3                | 70                 | 17                | 1542                        | 1702                        | 389165                                   |
|         | 9            | 3                | 53                 | 16                | 1594                        | 1106                        | 424209                                   |
|         | 10           | 3                | 71                 | 17                | 1758                        | 1631                        | 398851                                   |
|         | 11           | 3                | 81                 | 7                 | 1588                        | 1025                        | 308396                                   |
|         | 12           | 1                | 74                 | 11                |                             |                             | 481019                                   |
|         | 13           | 2                | 65                 | 16                | 1024                        |                             | 57269                                    |
|         | 14           | 2                | 83                 | 15                | 1095                        |                             | 44095                                    |
|         | 15           | 1                | 88                 | 11                |                             |                             | 388804                                   |
|         | 16           | 3                | 78                 | 10                | 1394                        | 1248                        | 288447                                   |
|         | 17           | 1                | 73                 | 14                |                             |                             | 66630                                    |
|         | 18           | 2                | 53                 | 6                 | 1994                        |                             | 380270                                   |

| Trial # | Burst Number | Number of Pulses | Pulse Width [usec] | Chirp Width [MHz] | Pulse 1-to-2 Spacing [usec] | Pulse 2-to-3 Spacing [usec] | Starting Location Within Interval [usec] |
|---------|--------------|------------------|--------------------|-------------------|-----------------------------|-----------------------------|--|
| 4       | 1            | 2                | 71                 | 19                | 1000                        |                             | 530435                                   |
|         | 2            | 3                | 71                 | 6                 | 1166                        | 1863                        | 23555                                    |
|         | 3            | 3                | 91                 | 14                | 1272                        | 1818                        | 601498                                   |
|         | 4            | 3                | 95                 | 15                | 1421                        | 1315                        | 354078                                   |
|         | 5            | 1                | 73                 | 20                |                             |                             | 368480                                   |
|         | 6            | 2                | 89                 | 13                | 1098                        |                             | 430091                                   |
|         | 7            | 1                | 79                 | 15                |                             |                             | 186629                                   |
|         | 8            | 2                | 59                 | 9                 | 1628                        |                             | 488245                                   |
|         | 9            | 3                | 83                 | 20                | 1772                        | 1398                        | 309540                                   |
|         | 10           | 3                | 91                 | 6                 | 1987                        | 1547                        | 131823                                   |
|         | 11           | 1                | 81                 | 16                |                             |                             | 91455                                    |
|         | 12           | 2                | 77                 | 8                 | 1363                        |                             | 500715                                   |
|         | 13           | 3                | 51                 | 19                | 1208                        | 1329                        | 626155                                   |
|         | 14           | 3                | 83                 | 19                | 1054                        | 1486                        | 370031                                   |
|         | 15           | 2                | 64                 | 15                | 1208                        |                             | 533976                                   |
|         | 16           | 1                | 87                 | 11                |                             |                             | 130056                                   |
|         | 17           | 2                | 82                 | 18                | 1221                        |                             | 80736                                    |
|         | 18           | 1                | 100                | 8                 |                             |                             | 400734                                   |

**UL Japan, Inc.**  
**Ise EMC Lab.**

4383-326 Asama-cho, Ise-shi, Mie-ken 516-0021 JAPAN  
Telephone : +81 596 24 8999  
Facsimile : +81 596 24 8124

| Trial # | Burst Number | Number of Pulses | Pulse Width [usec] | Chirp Width [MHz] | Pulse 1-to-2 Spacing [usec] | Pulse 2-to-3 Spacing [usec] | Starting Location Within Interval [usec] |
|---------|--------------|------------------|--------------------|-------------------|-----------------------------|-----------------------------|--|
| 5       | 1            | 2                | 67                 | 14                | 1000                        |                             | 417577                                   |
|         | 2            | 3                | 89                 | 15                | 1814                        | 1200                        | 749936                                   |
|         | 3            | 2                | 84                 | 11                | 1972                        |                             | 29584                                    |
|         | 4            | 2                | 97                 | 16                | 1348                        |                             | 39020                                    |
|         | 5            | 1                | 81                 | 12                |                             |                             | 516900                                   |
|         | 6            | 3                | 89                 | 12                | 1350                        | 1577                        | 45783                                    |
|         | 7            | 3                | 89                 | 12                | 1439                        | 1610                        | 277760                                   |
|         | 8            | 2                | 91                 | 18                | 1436                        |                             | 474452                                   |
|         | 9            | 1                | 50                 | 7                 |                             |                             | 9073                                     |
|         | 10           | 2                | 99                 | 16                | 1813                        |                             | 3307                                     |
|         | 11           | 1                | 73                 | 17                |                             |                             | 98931                                    |
|         | 12           | 1                | 63                 | 11                |                             |                             | 549315                                   |
|         | 13           | 1                | 100                | 6                 |                             |                             | 467280                                   |
|         | 14           | 3                | 64                 | 6                 | 1341                        | 1643                        | 14171                                    |
|         | 15           | 2                | 80                 | 5                 | 1951                        |                             | 60308                                    |

| Trial # | Burst Number | Number of Pulses | Pulse Width [usec] | Chirp Width [MHz] | Pulse 1-to-2 Spacing [usec] | Pulse 2-to-3 Spacing [usec] | Starting Location Within Interval [usec] |
|---------|--------------|------------------|--------------------|-------------------|-----------------------------|-----------------------------|--|
| 6       | 1            | 2                | 77                 | 18                | 1000                        |                             | 368006                                   |
|         | 2            | 3                | 55                 | 13                | 1218                        | 1023                        | 131188                                   |
|         | 3            | 1                | 80                 | 7                 |                             |                             | 94652                                    |
|         | 4            | 2                | 98                 | 19                | 1848                        |                             | 345833                                   |
|         | 5            | 1                | 72                 | 13                |                             |                             | 403533                                   |
|         | 6            | 3                | 82                 | 9                 | 1785                        | 1084                        | 531912                                   |
|         | 7            | 2                | 60                 | 9                 | 1523                        |                             | 447344                                   |
|         | 8            | 3                | 92                 | 17                | 1140                        | 1502                        | 392926                                   |
|         | 9            | 3                | 76                 | 18                | 1913                        | 1222                        | 406696                                   |
|         | 10           | 1                | 83                 | 5                 |                             |                             | 33819                                    |
|         | 11           | 1                | 51                 | 6                 |                             |                             | 223414                                   |
|         | 12           | 3                | 72                 | 12                | 1332                        | 1548                        | 274258                                   |
|         | 13           | 2                | 91                 | 6                 | 1362                        |                             | 481616                                   |
|         | 14           | 2                | 92                 | 17                | 1812                        |                             | 289842                                   |
|         | 15           | 1                | 90                 | 5                 |                             |                             | 464979                                   |
|         | 16           | 2                | 69                 | 14                | 1653                        |                             | 26061                                    |
|         | 17           | 3                | 81                 | 20                | 1537                        | 1582                        | 474086                                   |
|         | 18           | 1                | 50                 | 16                |                             |                             | 206976                                   |
|         | 19           | 1                | 90                 | 12                |                             |                             | 217876                                   |
|         | 20           | 1                | 57                 | 16                |                             |                             | 291968                                   |

**UL Japan, Inc.**  
**Ise EMC Lab.**

4383-326 Asama-cho, Ise-shi, Mie-ken 516-0021 JAPAN  
Telephone : +81 596 24 8999  
Facsimile : +81 596 24 8124

| Trial # | Burst Number | Number of Pulses | Pulse Width [usec] | Chirp Width [MHz] | Pulse 1-to-2 Spacing [usec] | Pulse 2-to-3 Spacing [usec] | Starting Location Within Interval [usec] |
|---------|--------------|------------------|--------------------|-------------------|-----------------------------|-----------------------------|--|
| 7       | 1            | 3                | 92                 | 6                 | 1109                        | 1096                        | 852484                                   |
|         | 2            | 2                | 93                 | 13                | 1475                        |                             | 649523                                   |
|         | 3            | 2                | 71                 | 8                 | 1565                        |                             | 151227                                   |
|         | 4            | 3                | 79                 | 5                 | 1782                        | 1530                        | 472754                                   |
|         | 5            | 2                | 76                 | 10                | 1121                        |                             | 563139                                   |
|         | 6            | 2                | 66                 | 5                 | 1823                        |                             | 860468                                   |
|         | 7            | 2                | 55                 | 15                | 1703                        |                             | 669477                                   |
|         | 8            | 2                | 99                 | 5                 | 1465                        |                             | 444703                                   |
|         | 9            | 3                | 81                 | 6                 | 1898                        | 1870                        | 341140                                   |
|         | 10           | 1                | 94                 | 12                |                             |                             | 585543                                   |
|         | 11           | 1                | 85                 | 20                |                             |                             | 196131                                   |
|         | 12           | 1                | 50                 | 16                |                             |                             | 269336                                   |
|         | 13           | 3                | 92                 | 12                | 1637                        | 1371                        | 652817                                   |

| Trial # | Burst Number | Number of Pulses | Pulse Width [usec] | Chirp Width [MHz] | Pulse 1-to-2 Spacing [usec] | Pulse 2-to-3 Spacing [usec] | Starting Location Within Interval [usec] |
|---------|--------------|------------------|--------------------|-------------------|-----------------------------|-----------------------------|--|
| 8       | 1            | 2                | 71                 | 15                | 1000                        |                             | 481876                                   |
|         | 2            | 1                | 55                 | 11                |                             |                             | 102309                                   |
|         | 3            | 1                | 61                 | 19                |                             |                             | 823455                                   |
|         | 4            | 2                | 90                 | 13                | 1871                        |                             | 693047                                   |
|         | 5            | 2                | 55                 | 15                | 1416                        |                             | 251845                                   |
|         | 6            | 2                | 84                 | 15                | 1528                        |                             | 1140391                                  |
|         | 7            | 1                | 64                 | 11                |                             |                             | 584703                                   |
|         | 8            | 1                | 88                 | 19                |                             |                             | 1135948                                  |
|         | 9            | 2                | 82                 | 11                | 1448                        |                             | 317699                                   |

| Trial # | Burst Number | Number of Pulses | Pulse Width [usec] | Chirp Width [MHz] | Pulse 1-to-2 Spacing [usec] | Pulse 2-to-3 Spacing [usec] | Starting Location Within Interval [usec] |
|---------|--------------|------------------|--------------------|-------------------|-----------------------------|-----------------------------|--|
| 9       | 1            | 1                | 79                 | 10                |                             |                             | 502                                      |
|         | 2            | 2                | 76                 | 17                | 1924                        |                             | 683615                                   |
|         | 3            | 3                | 68                 | 11                | 1773                        | 1157                        | 334227                                   |
|         | 4            | 2                | 84                 | 18                | 1484                        |                             | 1339610                                  |
|         | 5            | 1                | 95                 | 11                |                             |                             | 1295901                                  |
|         | 6            | 3                | 79                 | 13                | 1997                        | 1559                        | 930277                                   |
|         | 7            | 3                | 76                 | 7                 | 1350                        | 1169                        | 984612                                   |
|         | 8            | 3                | 81                 | 8                 | 1100                        | 1556                        | 1190974                                  |

**UL Japan, Inc.**  
**Ise EMC Lab.**

4383-326 Asama-cho, Ise-shi, Mie-ken 516-0021 JAPAN  
Telephone : +81 596 24 8999  
Facsimile : +81 596 24 8124

| Trial # | Burst Number | Number of Pulses | Pulse Width [usec] | Chirp Width [MHz] | Pulse 1-to-2 Spacing [usec] | Pulse 2-to-3 Spacing [usec] | Starting Location Within Interval [usec] |
|---------|--------------|------------------|--------------------|-------------------|-----------------------------|-----------------------------|--|
| 10      | 1            | 1                | 98                 | 13                |                             |                             | 431                                      |
|         | 2            | 2                | 98                 | 15                | 1178                        |                             | 218287                                   |
|         | 3            | 3                | 87                 | 9                 | 1853                        | 1983                        | 47586                                    |
|         | 4            | 3                | 89                 | 19                | 1074                        | 1112                        | 605621                                   |
|         | 5            | 1                | 86                 | 6                 |                             |                             | 489104                                   |
|         | 6            | 2                | 88                 | 10                | 1547                        |                             | 185698                                   |
|         | 7            | 2                | 58                 | 14                | 1445                        |                             | 60948                                    |
|         | 8            | 3                | 65                 | 7                 | 1419                        | 1187                        | 576689                                   |
|         | 9            | 2                | 64                 | 13                | 1795                        |                             | 407838                                   |
|         | 10           | 3                | 64                 | 16                | 1277                        | 1934                        | 504383                                   |
|         | 11           | 1                | 62                 | 16                |                             |                             | 316127                                   |
|         | 12           | 2                | 99                 | 16                | 1831                        |                             | 86683                                    |
|         | 13           | 1                | 89                 | 6                 |                             |                             | 235090                                   |
|         | 14           | 2                | 92                 | 17                | 1973                        |                             | 174000                                   |
|         | 15           | 2                | 50                 | 6                 | 1037                        |                             | 230591                                   |
|         | 16           | 3                | 80                 | 8                 | 1706                        | 1594                        | 510516                                   |
|         | 17           | 3                | 96                 | 9                 | 1157                        | 1220                        | 490779                                   |
|         | 18           | 3                | 62                 | 19                | 1079                        | 1188                        | 131101                                   |
|         | 19           | 3                | 59                 | 15                | 1216                        | 1955                        | 320823                                   |

| Trial # | Burst Number | Number of Pulses | Pulse Width [usec] | Chirp Width [MHz] | Pulse 1-to-2 Spacing [usec] | Pulse 2-to-3 Spacing [usec] | Starting Location Within Interval [usec] |
|---------|--------------|------------------|--------------------|-------------------|-----------------------------|-----------------------------|--|
| 11      | 1            | 2                | 90                 | 7                 | 1000                        |                             | 21406                                    |
|         | 2            | 2                | 70                 | 12                | 1156                        |                             | 410413                                   |
|         | 3            | 2                | 53                 | 14                | 1457                        |                             | 29335                                    |
|         | 4            | 2                | 91                 | 19                | 1269                        |                             | 72993                                    |
|         | 5            | 3                | 57                 | 16                | 1573                        | 1384                        | 8169                                     |
|         | 6            | 1                | 69                 | 18                |                             |                             | 561596                                   |
|         | 7            | 1                | 66                 | 20                |                             |                             | 696671                                   |
|         | 8            | 3                | 72                 | 20                | 1061                        | 1122                        | 730958                                   |
|         | 9            | 1                | 91                 | 14                |                             |                             | 178592                                   |
|         | 10           | 3                | 73                 | 15                | 1879                        | 1073                        | 394285                                   |
|         | 11           | 2                | 74                 | 12                | 1042                        |                             | 581205                                   |
|         | 12           | 3                | 52                 | 14                | 1321                        | 1985                        | 601492                                   |
|         | 13           | 2                | 66                 | 10                | 1339                        |                             | 311074                                   |
|         | 14           | 3                | 68                 | 19                | 1432                        | 1190                        | 642255                                   |
|         | 15           | 2                | 88                 | 5                 | 1938                        |                             | 456778                                   |

**UL Japan, Inc.**  
**Ise EMC Lab.**

4383-326 Asama-cho, Ise-shi, Mie-ken 516-0021 JAPAN  
Telephone : +81 596 24 8999  
Facsimile : +81 596 24 8124

| Trial # | Burst Number | Number of Pulses | Pulse Width [usec] | Chirp Width [MHz] | Pulse 1-to-2 Spacing [usec] | Pulse 2-to-3 Spacing [usec] | Starting Location Within Interval [usec] |
|---------|--------------|------------------|--------------------|-------------------|-----------------------------|-----------------------------|--|
| 12      | 1            | 3                | 67                 | 13                | 1773                        | 1879                        | 269482                                   |
|         | 2            | 2                | 87                 | 12                | 1770                        |                             | 362023                                   |
|         | 3            | 1                | 89                 | 6                 |                             |                             | 529815                                   |
|         | 4            | 1                | 68                 | 12                |                             |                             | 549730                                   |
|         | 5            | 1                | 65                 | 18                |                             |                             | 483308                                   |
|         | 6            | 2                | 73                 | 11                | 1873                        |                             | 349802                                   |
|         | 7            | 1                | 90                 | 10                |                             |                             | 584007                                   |
|         | 8            | 2                | 64                 | 11                | 1019                        |                             | 359296                                   |
|         | 9            | 2                | 71                 | 5                 | 1300                        |                             | 490535                                   |
|         | 10           | 3                | 97                 | 19                | 1328                        | 1160                        | 516755                                   |
|         | 11           | 2                | 62                 | 5                 | 1616                        |                             | 19691                                    |
|         | 12           | 3                | 64                 | 18                | 1511                        | 1858                        | 75022                                    |
|         | 13           | 3                | 75                 | 12                | 1481                        | 1791                        | 366913                                   |
|         | 14           | 3                | 52                 | 8                 | 1790                        | 1634                        | 451743                                   |
|         | 15           | 2                | 55                 | 11                | 1917                        |                             | 438242                                   |
|         | 16           | 1                | 60                 | 6                 |                             |                             | 229121                                   |
|         | 17           | 2                | 58                 | 12                | 1016                        |                             | 612445                                   |
|         | 18           | 1                | 93                 | 20                |                             |                             | 289962                                   |
|         | 19           | 2                | 92                 | 17                | 1550                        |                             | 305005                                   |

| Trial # | Burst Number | Number of Pulses | Pulse Width [usec] | Chirp Width [MHz] | Pulse 1-to-2 Spacing [usec] | Pulse 2-to-3 Spacing [usec] | Starting Location Within Interval [usec] |
|---------|--------------|------------------|--------------------|-------------------|-----------------------------|-----------------------------|--|
| 13      | 1            | 3                | 77                 | 10                | 1742                        | 1027                        | 263870                                   |
|         | 2            | 3                | 58                 | 11                | 1034                        | 1090                        | 724492                                   |
|         | 3            | 3                | 74                 | 14                | 1406                        | 1033                        | 689054                                   |
|         | 4            | 3                | 68                 | 15                | 1166                        | 1872                        | 604675                                   |
|         | 5            | 1                | 54                 | 14                |                             |                             | 276118                                   |
|         | 6            | 1                | 59                 | 5                 |                             |                             | 203975                                   |
|         | 7            | 1                | 99                 | 9                 |                             |                             | 206433                                   |
|         | 8            | 3                | 76                 | 14                | 1011                        | 1212                        | 153936                                   |
|         | 9            | 3                | 58                 | 20                | 1102                        | 1506                        | 642672                                   |
|         | 10           | 1                | 61                 | 20                |                             |                             | 689435                                   |
|         | 11           | 1                | 82                 | 18                |                             |                             | 689123                                   |
|         | 12           | 1                | 67                 | 16                |                             |                             | 725793                                   |
|         | 13           | 3                | 88                 | 9                 | 1786                        | 1768                        | 354605                                   |
|         | 14           | 2                | 89                 | 10                | 1974                        |                             | 280460                                   |
|         | 15           | 3                | 57                 | 6                 | 1317                        | 1099                        | 412638                                   |
|         | 16           | 2                | 53                 | 8                 | 1301                        |                             | 240301                                   |

| Trial # | Burst Number | Number of Pulses | Pulse Width [usec] | Chirp Width [MHz] | Pulse 1-to-2 Spacing [usec] | Pulse 2-to-3 Spacing [usec] | Starting Location Within Interval [usec] |
|---------|--------------|------------------|--------------------|-------------------|-----------------------------|-----------------------------|--|
| 14      | 1            | 2                | 59                 | 8                 | 1000                        |                             | 714854                                   |
|         | 2            | 1                | 68                 | 19                |                             |                             | 370073                                   |
|         | 3            | 2                | 89                 | 13                | 1833                        |                             | 940039                                   |
|         | 4            | 1                | 94                 | 16                |                             |                             | 248190                                   |
|         | 5            | 2                | 66                 | 7                 | 1539                        |                             | 374497                                   |
|         | 6            | 3                | 68                 | 10                | 1639                        | 1521                        | 641873                                   |
|         | 7            | 2                | 97                 | 12                | 1102                        |                             | 454420                                   |
|         | 8            | 1                | 78                 | 5                 |                             |                             | 85878                                    |
|         | 9            | 1                | 98                 | 17                |                             |                             | 772224                                   |

**UL Japan, Inc.**  
**Ise EMC Lab.**

4383-326 Asama-cho, Ise-shi, Mie-ken 516-0021 JAPAN  
Telephone : +81 596 24 8999  
Facsimile : +81 596 24 8124



| Trial # | Burst Number | Number of Pulses | Pulse Width [usec] | Chirp Width [MHz] | Pulse 1-to-2 Spacing [usec] | Pulse 2-to-3 Spacing [usec] | Starting Location Within Interval [usec] |
|---------|--------------|------------------|--------------------|-------------------|-----------------------------|-----------------------------|--|
| 15      | 1            | 3                | 69                 | 16                | 1339                        | 1381                        | 222494                                   |
|         | 2            | 1                | 70                 | 7                 |                             |                             | 594563                                   |
|         | 3            | 3                | 56                 | 20                | 1660                        | 1444                        | 530020                                   |
|         | 4            | 2                | 73                 | 11                | 1710                        |                             | 652048                                   |
|         | 5            | 2                | 100                | 17                | 1536                        |                             | 244442                                   |
|         | 6            | 3                | 93                 | 5                 | 1652                        | 1731                        | 632428                                   |
|         | 7            | 2                | 55                 | 9                 | 1629                        |                             | 76229                                    |
|         | 8            | 1                | 79                 | 10                |                             |                             | 352412                                   |
|         | 9            | 2                | 97                 | 10                | 1504                        |                             | 447176                                   |
|         | 10           | 2                | 87                 | 10                | 1658                        |                             | 278814                                   |
|         | 11           | 2                | 73                 | 6                 | 1719                        |                             | 549650                                   |
|         | 12           | 3                | 63                 | 12                | 1220                        | 1669                        | 724119                                   |
|         | 13           | 3                | 58                 | 6                 | 1030                        | 1034                        | 721387                                   |
|         | 14           | 1                | 69                 | 11                |                             |                             | 21782                                    |
|         | 15           | 3                | 79                 | 11                | 1218                        | 1069                        | 345240                                   |
|         | 16           | 1                | 93                 | 17                |                             |                             | 613570                                   |

| Trial # | Burst Number | Number of Pulses | Pulse Width [usec] | Chirp Width [MHz] | Pulse 1-to-2 Spacing [usec] | Pulse 2-to-3 Spacing [usec] | Starting Location Within Interval [usec] |
|---------|--------------|------------------|--------------------|-------------------|-----------------------------|-----------------------------|--|
| 16      | 1            | 1                | 70                 | 11                |                             |                             | 219                                      |
|         | 2            | 1                | 55                 | 12                |                             |                             | 91544                                    |
|         | 3            | 2                | 54                 | 11                | 1450                        |                             | 285302                                   |
|         | 4            | 3                | 73                 | 16                | 1436                        | 1044                        | 499422                                   |
|         | 5            | 3                | 50                 | 5                 | 1905                        | 1344                        | 232437                                   |
|         | 6            | 2                | 90                 | 18                | 1794                        |                             | 36643                                    |
|         | 7            | 1                | 74                 | 13                |                             |                             | 166401                                   |
|         | 8            | 2                | 63                 | 10                | 1740                        |                             | 567539                                   |
|         | 9            | 1                | 81                 | 6                 |                             |                             | 457265                                   |
|         | 10           | 2                | 78                 | 10                | 1171                        |                             | 486482                                   |
|         | 11           | 3                | 84                 | 17                | 1479                        | 1350                        | 40458                                    |
|         | 12           | 2                | 52                 | 18                | 1886                        |                             | 65475                                    |
|         | 13           | 3                | 81                 | 18                | 1113                        | 1657                        | 60914                                    |
|         | 14           | 3                | 62                 | 18                | 1639                        | 1168                        | 294958                                   |
|         | 15           | 1                | 65                 | 18                |                             |                             | 4149                                     |
|         | 16           | 2                | 62                 | 6                 | 1286                        |                             | 485493                                   |
|         | 17           | 2                | 68                 | 11                | 1979                        |                             | 150196                                   |
|         | 18           | 1                | 82                 | 13                |                             |                             | 106012                                   |
|         | 19           | 1                | 79                 | 16                |                             |                             | 570526                                   |
|         | 20           | 3                | 55                 | 19                | 1936                        | 1715                        | 120740                                   |

**UL Japan, Inc.**  
**Ise EMC Lab.**

4383-326 Asama-cho, Ise-shi, Mie-ken 516-0021 JAPAN  
Telephone : +81 596 24 8999  
Facsimile : +81 596 24 8124

| Trial # | Burst Number | Number of Pulses | Pulse Width [usec] | Chirp Width [MHz] | Pulse 1-to-2 Spacing [usec] | Pulse 2-to-3 Spacing [usec] | Starting Location Within Interval [usec] |
|---------|--------------|------------------|--------------------|-------------------|-----------------------------|-----------------------------|--|
| 17      | 1            | 2                | 56                 | 10                | 1000                        |                             | 539891                                   |
|         | 2            | 3                | 80                 | 8                 | 1549                        | 1684                        | 681328                                   |
|         | 3            | 1                | 63                 | 11                |                             |                             | 539925                                   |
|         | 4            | 3                | 50                 | 20                | 1390                        | 1007                        | 267645                                   |
|         | 5            | 1                | 98                 | 12                |                             |                             | 621161                                   |
|         | 6            | 1                | 64                 | 9                 |                             |                             | 196708                                   |
|         | 7            | 3                | 85                 | 18                | 1561                        | 1090                        | 293673                                   |
|         | 8            | 2                | 99                 | 17                | 1988                        |                             | 176979                                   |
|         | 9            | 3                | 75                 | 9                 | 1679                        | 1564                        | 552594                                   |
|         | 10           | 3                | 70                 | 19                | 1575                        | 1608                        | 634106                                   |
|         | 11           | 1                | 60                 | 13                |                             |                             | 344130                                   |
|         | 12           | 2                | 95                 | 8                 | 1101                        |                             | 655663                                   |
|         | 13           | 1                | 98                 | 17                |                             |                             | 629943                                   |
|         | 14           | 1                | 76                 | 13                |                             |                             | 173445                                   |
|         | 15           | 3                | 66                 | 15                | 1636                        | 1607                        | 61900                                    |
|         | 16           | 1                | 76                 | 17                |                             |                             | 26991                                    |
|         | 17           | 1                | 62                 | 17                |                             |                             | 158477                                   |

| Trial # | Burst Number | Number of Pulses | Pulse Width [usec] | Chirp Width [MHz] | Pulse 1-to-2 Spacing [usec] | Pulse 2-to-3 Spacing [usec] | Starting Location Within Interval [usec] |
|---------|--------------|------------------|--------------------|-------------------|-----------------------------|-----------------------------|--|
| 18      | 1            | 1                | 95                 | 7                 |                             |                             | 346                                      |
|         | 2            | 2                | 70                 | 20                | 1085                        |                             | 769475                                   |
|         | 3            | 1                | 68                 | 19                |                             |                             | 383420                                   |
|         | 4            | 3                | 51                 | 18                | 1543                        | 1880                        | 105402                                   |
|         | 5            | 1                | 98                 | 10                |                             |                             | 751080                                   |
|         | 6            | 3                | 80                 | 5                 | 1185                        | 1571                        | 770484                                   |
|         | 7            | 3                | 60                 | 9                 | 1975                        | 1075                        | 53740                                    |
|         | 8            | 3                | 53                 | 18                | 1281                        | 1671                        | 89173                                    |
|         | 9            | 1                | 64                 | 8                 |                             |                             | 349207                                   |
|         | 10           | 3                | 51                 | 15                | 1988                        | 1365                        | 603981                                   |
|         | 11           | 3                | 52                 | 16                | 1367                        | 1997                        | 727147                                   |
|         | 12           | 2                | 67                 | 13                | 1453                        |                             | 747598                                   |
|         | 13           | 3                | 51                 | 5                 | 1278                        | 1115                        | 616108                                   |
|         | 14           | 3                | 68                 | 20                | 2000                        | 1936                        | 384487                                   |
|         | 15           | 1                | 97                 | 5                 |                             |                             | 664771                                   |

**UL Japan, Inc.**  
**Ise EMC Lab.**

4383-326 Asama-cho, Ise-shi, Mie-ken 516-0021 JAPAN  
Telephone : +81 596 24 8999  
Facsimile : +81 596 24 8124

| Trial # | Burst Number | Number of Pulses | Pulse Width [usec] | Chirp Width [MHz] | Pulse 1-to-2 Spacing [usec] | Pulse 2-to-3 Spacing [usec] | Starting Location Within Interval [usec] |
|---------|--------------|------------------|--------------------|-------------------|-----------------------------|-----------------------------|--|
| 19      | 1            | 2                | 50                 | 14                | 1000                        |                             | 346521                                   |
|         | 2            | 2                | 90                 | 17                | 1000                        |                             | 592183                                   |
|         | 3            | 2                | 95                 | 12                | 1063                        |                             | 215677                                   |
|         | 4            | 3                | 72                 | 9                 | 1115                        | 1409                        | 278587                                   |
|         | 5            | 1                | 99                 | 14                |                             |                             | 590212                                   |
|         | 6            | 1                | 56                 | 10                |                             |                             | 378303                                   |
|         | 7            | 3                | 100                | 10                | 1390                        | 1169                        | 60881                                    |
|         | 8            | 1                | 60                 | 5                 |                             |                             | 197412                                   |
|         | 9            | 3                | 56                 | 20                | 1101                        | 1234                        | 129352                                   |
|         | 10           | 1                | 84                 | 7                 |                             |                             | 325                                      |
|         | 11           | 1                | 96                 | 10                |                             |                             | 204492                                   |
|         | 12           | 1                | 70                 | 19                |                             |                             | 385184                                   |
|         | 13           | 2                | 60                 | 10                | 1485                        |                             | 79447                                    |
|         | 14           | 3                | 61                 | 8                 | 1272                        | 1478                        | 152413                                   |
|         | 15           | 2                | 86                 | 11                | 1632                        |                             | 8966                                     |
|         | 16           | 2                | 52                 | 12                | 1863                        |                             | 600740                                   |
|         | 17           | 3                | 51                 | 20                | 1481                        | 1306                        | 135542                                   |
|         | 18           | 2                | 50                 | 12                | 1974                        |                             | 46065                                    |
|         | 19           | 3                | 58                 | 18                | 1173                        | 1907                        | 224147                                   |

| Trial # | Burst Number | Number of Pulses | Pulse Width [usec] | Chirp Width [MHz] | Pulse 1-to-2 Spacing [usec] | Pulse 2-to-3 Spacing [usec] | Starting Location Within Interval [usec] |
|---------|--------------|------------------|--------------------|-------------------|-----------------------------|-----------------------------|--|
| 20      | 1            | 1                | 80                 | 16                |                             |                             | 581                                      |
|         | 2            | 1                | 87                 | 5                 |                             |                             | 780650                                   |
|         | 3            | 3                | 95                 | 14                | 1766                        | 1590                        | 519524                                   |
|         | 4            | 1                | 56                 | 15                |                             |                             | 517                                      |
|         | 5            | 1                | 51                 | 19                |                             |                             | 858352                                   |
|         | 6            | 3                | 83                 | 6                 | 1728                        | 1656                        | 373720                                   |
|         | 7            | 3                | 82                 | 18                | 1322                        | 1353                        | 1119998                                  |
|         | 8            | 3                | 84                 | 11                | 1868                        | 1935                        | 1306648                                  |

| Trial # | Burst Number | Number of Pulses | Pulse Width [usec] | Chirp Width [MHz] | Pulse 1-to-2 Spacing [usec] | Pulse 2-to-3 Spacing [usec] | Starting Location Within Interval [usec] |
|---------|--------------|------------------|--------------------|-------------------|-----------------------------|-----------------------------|--|
| 21      | 1            | 2                | 68                 | 15                | 1000                        |                             | 38594                                    |
|         | 2            | 3                | 67                 | 16                | 1348                        | 1435                        | 57417                                    |
|         | 3            | 2                | 81                 | 17                | 1990                        |                             | 398541                                   |
|         | 4            | 1                | 51                 | 17                |                             |                             | 502899                                   |
|         | 5            | 3                | 58                 | 20                | 1229                        | 1476                        | 151036                                   |
|         | 6            | 2                | 79                 | 15                | 1094                        |                             | 232896                                   |
|         | 7            | 3                | 85                 | 16                | 1381                        | 1158                        | 282177                                   |
|         | 8            | 2                | 69                 | 9                 | 1503                        |                             | 8307                                     |
|         | 9            | 1                | 50                 | 14                |                             |                             | 169145                                   |
|         | 10           | 1                | 65                 | 15                |                             |                             | 172270                                   |
|         | 11           | 3                | 61                 | 19                | 1589                        | 1236                        | 399689                                   |
|         | 12           | 3                | 61                 | 7                 | 1397                        | 1272                        | 173407                                   |
|         | 13           | 3                | 65                 | 12                | 1998                        | 1902                        | 137596                                   |
|         | 14           | 3                | 66                 | 20                | 1388                        | 1169                        | 103278                                   |
|         | 15           | 2                | 90                 | 14                | 1145                        |                             | 211735                                   |
|         | 16           | 2                | 72                 | 20                | 1973                        |                             | 103037                                   |
|         | 17           | 1                | 70                 | 15                |                             |                             | 254649                                   |
|         | 18           | 3                | 74                 | 17                | 1669                        | 1957                        | 314448                                   |
|         | 19           | 2                | 96                 | 7                 | 1055                        |                             | 174686                                   |
|         | 20           | 2                | 69                 | 7                 | 1500                        |                             | 506863                                   |

**UL Japan, Inc.**  
**Ise EMC Lab.**

4383-326 Asama-cho, Ise-shi, Mie-ken 516-0021 JAPAN  
Telephone : +81 596 24 8999  
Facsimile : +81 596 24 8124

| Trial # | Burst Number | Number of Pulses | Pulse Width [usec] | Chirp Width [MHz] | Pulse 1-to-2 Spacing [usec] | Pulse 2-to-3 Spacing [usec] | Starting Location Within Interval [usec] |
|---------|--------------|------------------|--------------------|-------------------|-----------------------------|-----------------------------|--|
| 22      | 1            | 1                | 68                 | 20                |                             |                             | 35                                       |
|         | 2            | 2                | 53                 | 6                 | 1039                        |                             | 474496                                   |
|         | 3            | 2                | 70                 | 18                | 1401                        |                             | 586726                                   |
|         | 4            | 2                | 90                 | 14                | 1456                        |                             | 512051                                   |
|         | 5            | 3                | 97                 | 10                | 1259                        | 1606                        | 203811                                   |
|         | 6            | 2                | 88                 | 6                 | 1007                        |                             | 307479                                   |
|         | 7            | 3                | 79                 | 7                 | 1335                        | 1361                        | 11814                                    |
|         | 8            | 2                | 53                 | 6                 | 1041                        |                             | 488674                                   |
|         | 9            | 1                | 94                 | 5                 |                             |                             | 517333                                   |
|         | 10           | 3                | 91                 | 12                | 1560                        | 1666                        | 30606                                    |
|         | 11           | 3                | 88                 | 20                | 1164                        | 1980                        | 58758                                    |
|         | 12           | 1                | 95                 | 18                |                             |                             | 468892                                   |
|         | 13           | 2                | 57                 | 10                | 1874                        |                             | 155775                                   |
|         | 14           | 3                | 66                 | 7                 | 1136                        | 1555                        | 579960                                   |
|         | 15           | 3                | 88                 | 5                 | 1959                        | 1439                        | 266195                                   |
|         | 16           | 1                | 58                 | 18                |                             |                             | 424579                                   |
|         | 17           | 3                | 77                 | 14                | 1497                        | 1305                        | 124044                                   |
|         | 18           | 1                | 66                 | 10                |                             |                             | 452947                                   |
|         | 19           | 3                | 96                 | 8                 | 1533                        | 1418                        | 416333                                   |
|         | 20           | 3                | 53                 | 9                 | 1479                        | 1888                        | 474699                                   |

| Trial # | Burst Number | Number of Pulses | Pulse Width [usec] | Chirp Width [MHz] | Pulse 1-to-2 Spacing [usec] | Pulse 2-to-3 Spacing [usec] | Starting Location Within Interval [usec] |
|---------|--------------|------------------|--------------------|-------------------|-----------------------------|-----------------------------|--|
| 23      | 1            | 3                | 66                 | 9                 | 1230                        | 1755                        | 240034                                   |
|         | 2            | 2                | 58                 | 11                | 1985                        |                             | 1097690                                  |
|         | 3            | 3                | 67                 | 18                | 1242                        | 1840                        | 848471                                   |
|         | 4            | 3                | 68                 | 5                 | 1963                        | 1446                        | 184748                                   |
|         | 5            | 2                | 56                 | 14                | 1474                        |                             | 665830                                   |
|         | 6            | 2                | 84                 | 16                | 1386                        |                             | 792195                                   |
|         | 7            | 3                | 79                 | 17                | 1061                        | 1706                        | 789650                                   |
|         | 8            | 2                | 94                 | 18                | 1110                        |                             | 444320                                   |
|         | 9            | 2                | 69                 | 12                | 1610                        |                             | 314695                                   |

| Trial # | Burst Number | Number of Pulses | Pulse Width [usec] | Chirp Width [MHz] | Pulse 1-to-2 Spacing [usec] | Pulse 2-to-3 Spacing [usec] | Starting Location Within Interval [usec] |
|---------|--------------|------------------|--------------------|-------------------|-----------------------------|-----------------------------|--|
| 24      | 1            | 3                | 64                 | 12                | 1836                        | 1639                        | 939258                                   |
|         | 2            | 1                | 70                 | 16                |                             |                             | 1274359                                  |
|         | 3            | 3                | 66                 | 5                 | 1327                        | 1335                        | 823435                                   |
|         | 4            | 3                | 52                 | 8                 | 1148                        | 1031                        | 1448899                                  |
|         | 5            | 3                | 50                 | 15                | 1924                        | 1718                        | 905792                                   |
|         | 6            | 2                | 60                 | 19                | 1523                        |                             | 542201                                   |
|         | 7            | 3                | 79                 | 11                | 1357                        | 1174                        | 131480                                   |
|         | 8            | 1                | 92                 | 5                 |                             |                             | 393399                                   |

**UL Japan, Inc.**  
**Ise EMC Lab.**

4383-326 Asama-cho, Ise-shi, Mie-ken 516-0021 JAPAN  
Telephone : +81 596 24 8999  
Facsimile : +81 596 24 8124

| Trial # | Burst Number | Number of Pulses | Pulse Width [usec] | Chirp Width [MHz] | Pulse 1-to-2 Spacing [usec] | Pulse 2-to-3 Spacing [usec] | Starting Location Within Interval [usec] |
|---------|--------------|------------------|--------------------|-------------------|-----------------------------|-----------------------------|--|
| 25      | 1            | 2                | 62                 | 13                | 1000                        |                             | 145713                                   |
|         | 2            | 1                | 74                 | 13                |                             |                             | 552810                                   |
|         | 3            | 1                | 60                 | 19                |                             |                             | 587543                                   |
|         | 4            | 3                | 56                 | 9                 | 1846                        | 1581                        | 1032442                                  |
|         | 5            | 2                | 69                 | 14                | 1593                        |                             | 85406                                    |
|         | 6            | 3                | 70                 | 17                | 1010                        | 1838                        | 1273771                                  |
|         | 7            | 1                | 55                 | 16                |                             |                             | 1091092                                  |
|         | 8            | 1                | 90                 | 17                |                             |                             | 1217310                                  |
|         | 9            | 2                | 74                 | 7                 | 1530                        |                             | 544309                                   |

| Trial # | Burst Number | Number of Pulses | Pulse Width [usec] | Chirp Width [MHz] | Pulse 1-to-2 Spacing [usec] | Pulse 2-to-3 Spacing [usec] | Starting Location Within Interval [usec] |
|---------|--------------|------------------|--------------------|-------------------|-----------------------------|-----------------------------|--|
| 26      | 1            | 2                | 80                 | 14                | 1000                        |                             | 673221                                   |
|         | 2            | 2                | 69                 | 16                | 1353                        |                             | 1110251                                  |
|         | 3            | 2                | 88                 | 20                | 1023                        |                             | 776559                                   |
|         | 4            | 2                | 70                 | 9                 | 1020                        |                             | 886213                                   |
|         | 5            | 2                | 74                 | 19                | 1280                        |                             | 570481                                   |
|         | 6            | 3                | 95                 | 16                | 1115                        | 1782                        | 163097                                   |
|         | 7            | 1                | 96                 | 20                |                             |                             | 450171                                   |
|         | 8            | 1                | 60                 | 5                 |                             |                             | 937041                                   |

| Trial # | Burst Number | Number of Pulses | Pulse Width [usec] | Chirp Width [MHz] | Pulse 1-to-2 Spacing [usec] | Pulse 2-to-3 Spacing [usec] | Starting Location Within Interval [usec] |
|---------|--------------|------------------|--------------------|-------------------|-----------------------------|-----------------------------|--|
| 27      | 1            | 1                | 66                 | 19                |                             |                             | 496                                      |
|         | 2            | 3                | 90                 | 6                 | 1512                        | 1231                        | 363587                                   |
|         | 3            | 2                | 74                 | 16                | 1532                        |                             | 266573                                   |
|         | 4            | 3                | 96                 | 6                 | 1795                        | 1482                        | 646079                                   |
|         | 5            | 3                | 87                 | 10                | 1514                        | 1742                        | 741696                                   |
|         | 6            | 1                | 98                 | 17                |                             |                             | 752907                                   |
|         | 7            | 2                | 54                 | 11                | 1374                        |                             | 79605                                    |
|         | 8            | 3                | 88                 | 8                 | 1853                        | 1703                        | 184493                                   |
|         | 9            | 3                | 52                 | 7                 | 1812                        | 1368                        | 478523                                   |
|         | 10           | 3                | 84                 | 18                | 1724                        | 1652                        | 842921                                   |
|         | 11           | 3                | 84                 | 17                | 1811                        | 1059                        | 505304                                   |
|         | 12           | 1                | 61                 | 9                 |                             |                             | 201051                                   |
|         | 13           | 3                | 98                 | 12                | 1325                        | 1850                        | 825320                                   |

**UL Japan, Inc.**  
**Ise EMC Lab.**

4383-326 Asama-cho, Ise-shi, Mie-ken 516-0021 JAPAN  
Telephone : +81 596 24 8999  
Facsimile : +81 596 24 8124

| Trial # | Burst Number | Number of Pulses | Pulse Width [usec] | Chirp Width [MHz] | Pulse 1-to-2 Spacing [usec] | Pulse 2-to-3 Spacing [usec] | Starting Location Within Interval [usec] |
|---------|--------------|------------------|--------------------|-------------------|-----------------------------|-----------------------------|--|
| 28      | 1            | 3                | 79                 | 14                | 1842                        | 1516                        | 292174                                   |
|         | 2            | 3                | 64                 | 8                 | 1491                        | 1561                        | 193347                                   |
|         | 3            | 2                | 73                 | 7                 | 1225                        |                             | 748406                                   |
|         | 4            | 2                | 88                 | 13                | 1766                        |                             | 479901                                   |
|         | 5            | 3                | 97                 | 20                | 1291                        | 1286                        | 16110                                    |
|         | 6            | 1                | 77                 | 10                |                             |                             | 181969                                   |
|         | 7            | 1                | 72                 | 17                |                             |                             | 657379                                   |
|         | 8            | 2                | 56                 | 8                 | 1501                        |                             | 839653                                   |
|         | 9            | 2                | 99                 | 18                | 1715                        |                             | 631033                                   |
|         | 10           | 1                | 80                 | 10                |                             |                             | 518603                                   |
|         | 11           | 1                | 56                 | 8                 |                             |                             | 202776                                   |
|         | 12           | 1                | 74                 | 15                |                             |                             | 436289                                   |
|         | 13           | 1                | 77                 | 7                 |                             |                             | 414995                                   |
|         | 14           | 3                | 53                 | 7                 | 1242                        | 1848                        | 210079                                   |

| Trial # | Burst Number | Number of Pulses | Pulse Width [usec] | Chirp Width [MHz] | Pulse 1-to-2 Spacing [usec] | Pulse 2-to-3 Spacing [usec] | Starting Location Within Interval [usec] |
|---------|--------------|------------------|--------------------|-------------------|-----------------------------|-----------------------------|--|
| 29      | 1            | 1                | 51                 | 6                 |                             |                             | 524                                      |
|         | 2            | 2                | 63                 | 8                 | 1624                        |                             | 485631                                   |
|         | 3            | 1                | 91                 | 7                 |                             |                             | 608433                                   |
|         | 4            | 3                | 89                 | 20                | 1919                        | 1082                        | 102016                                   |
|         | 5            | 3                | 100                | 10                | 1389                        | 1645                        | 516895                                   |
|         | 6            | 1                | 51                 | 19                |                             |                             | 8690                                     |
|         | 7            | 3                | 89                 | 13                | 1191                        | 1193                        | 129053                                   |
|         | 8            | 2                | 70                 | 17                | 1589                        |                             | 560596                                   |
|         | 9            | 3                | 82                 | 8                 | 1541                        | 1859                        | 578340                                   |
|         | 10           | 3                | 81                 | 5                 | 1343                        | 1589                        | 644526                                   |
|         | 11           | 1                | 70                 | 16                |                             |                             | 153975                                   |
|         | 12           | 3                | 61                 | 16                | 1077                        | 1952                        | 571022                                   |
|         | 13           | 3                | 52                 | 8                 | 1770                        | 1912                        | 333910                                   |
|         | 14           | 3                | 71                 | 6                 | 1164                        | 1950                        | 99519                                    |
|         | 15           | 2                | 69                 | 16                | 1682                        |                             | 43463                                    |
|         | 16           | 2                | 60                 | 18                | 1797                        |                             | 386596                                   |
|         | 17           | 1                | 80                 | 20                |                             |                             | 146406                                   |
|         | 18           | 1                | 66                 | 18                |                             |                             | 146854                                   |

| Trial # | Burst Number | Number of Pulses | Pulse Width [usec] | Chirp Width [MHz] | Pulse 1-to-2 Spacing [usec] | Pulse 2-to-3 Spacing [usec] | Starting Location Within Interval [usec] |
|---------|--------------|------------------|--------------------|-------------------|-----------------------------|-----------------------------|--|
| 30      | 1            | 1                | 74                 | 5                 |                             |                             | 1082                                     |
|         | 2            | 3                | 68                 | 11                | 1292                        | 1890                        | 968502                                   |
|         | 3            | 1                | 83                 | 12                |                             |                             | 585516                                   |
|         | 4            | 2                | 70                 | 18                | 1258                        |                             | 569019                                   |
|         | 5            | 1                | 50                 | 12                |                             |                             | 593403                                   |
|         | 6            | 3                | 92                 | 20                | 1524                        | 1622                        | 805625                                   |
|         | 7            | 1                | 85                 | 9                 |                             |                             | 116598                                   |
|         | 8            | 1                | 56                 | 14                |                             |                             | 507871                                   |

**UL Japan, Inc.**  
**Ise EMC Lab.**

4383-326 Asama-cho, Ise-shi, Mie-ken 516-0021 JAPAN  
Telephone : +81 596 24 8999  
Facsimile : +81 596 24 8124

**Parameter Data sheet for Radar Type 6**

**5300MHz (11n-20)**

| Trial # | Hopping Number | Start Time [ms] | Frequency [MHz] |
|---------|----------------|-----------------|-----------------|
| 1       | 32             | 93              | 5291            |
|         | 34             | 99              | 5305            |
|         | 84             | 240             | 5291            |

| Trial # | Hopping Number | Start Time [ms] | Frequency [MHz] |
|---------|----------------|-----------------|-----------------|
| 2       | 12             | 33              | 5299            |
|         | 19             | 54              | 5291            |
|         | 25             | 72              | 5306            |
|         | 29             | 84              | 5293            |

| Trial # | Hopping Number | Start Time [ms] | Frequency [MHz] |
|---------|----------------|-----------------|-----------------|
| 3       | 31             | 90              | 5291            |
|         | 83             | 246             | 5309            |

| Trial # | Hopping Number | Start Time [ms] | Frequency [MHz] |
|---------|----------------|-----------------|-----------------|
| 4       | 74             | 219             | 5292            |
|         | 82             | 243             | 5307            |

| Trial # | Hopping Number | Start Time [ms] | Frequency [MHz] |
|---------|----------------|-----------------|-----------------|
| 5       | 24             | 69              | 5299            |
|         | 32             | 93              | 5305            |
|         | 50             | 147             | 5301            |

---

**UL Japan, Inc.**

**Ise EMC Lab.**

4383-326 Asama-cho, Ise-shi, Mie-ken 516-0021 JAPAN

Telephone : +81 596 24 8999

Facsimile : +81 596 24 8124

| Trial # | Hopping Number | Start Time [ms] | Frequency [MHz] |
|---------|----------------|-----------------|-----------------|
| 6       | 42             | 123             | 5308            |
|         | 46             | 135             | 5295            |
|         | 78             | 231             | 5298            |

| Trial # | Hopping Number | Start Time [ms] | Frequency [MHz] |
|---------|----------------|-----------------|-----------------|
| 7       | 20             | 57              | 5291            |
|         | 38             | 111             | 5297            |
|         | 94             | 279             | 5304            |

| Trial # | Hopping Number | Start Time [ms] | Frequency [MHz] |
|---------|----------------|-----------------|-----------------|
| 8       | 41             | 120             | 5294            |
|         | 44             | 129             | 5291            |
|         | 58             | 171             | 5310            |
|         | 67             | 198             | 5302            |
|         | 70             | 207             | 5299            |

| Trial # | Hopping Number | Start Time [ms] | Frequency [MHz] |
|---------|----------------|-----------------|-----------------|
| 9       | 4              | 9               | 5292            |
|         | 17             | 48              | 5303            |
|         | 33             | 96              | 5293            |
|         | 47             | 138             | 5310            |
|         | 60             | 177             | 5300            |
|         | 92             | 273             | 5299            |

| Trial # | Hopping Number | Start Time [ms] | Frequency [MHz] |
|---------|----------------|-----------------|-----------------|
| 10      | 51             | 150             | 5308            |
|         | 62             | 183             | 5306            |
|         | 65             | 192             | 5297            |
|         | 66             | 195             | 5301            |

| Trial # | Hopping Number | Start Time [ms] | Frequency [MHz] |
|---------|----------------|-----------------|-----------------|
| 11      | 46             | 135             | 5306            |
|         | 66             | 195             | 5303            |
|         | 88             | 261             | 5302            |
|         | 94             | 279             | 5296            |

**UL Japan, Inc.**  
**Ise EMC Lab.**

4383-326 Asama-cho, Ise-shi, Mie-ken 516-0021 JAPAN  
Telephone : +81 596 24 8999  
Facsimile : +81 596 24 8124



| Trial # | Hopping Number | Start Time [ms] | Frequency [MHz] |
|---------|----------------|-----------------|-----------------|
| 12      | 3              | 6               | 5291            |
|         | 21             | 60              | 5308            |
|         | 32             | 93              | 5304            |
|         | 45             | 132             | 5291            |
|         | 48             | 141             | 5298            |
|         | 88             | 261             | 5292            |
|         | 96             | 265             | 5309            |

| Trial # | Hopping Number | Start Time [ms] | Frequency [MHz] |
|---------|----------------|-----------------|-----------------|
| 13      | 21             | 60              | 5307            |
|         | 40             | 117             | 5302            |
|         | 42             | 123             | 5291            |
|         | 64             | 189             | 5296            |
|         | 100            | 297             | 5294            |

| Trial # | Hopping Number | Start Time [ms] | Frequency [MHz] |
|---------|----------------|-----------------|-----------------|
| 14      | 31             | 90              | 5296            |
|         | 76             | 225             | 5302            |
|         | 92             | 273             | 5307            |

| Trial # | Hopping Number | Start Time [ms] | Frequency [MHz] |
|---------|----------------|-----------------|-----------------|
| 15      | 6              | 15              | 5296            |
|         | 26             | 75              | 5310            |
|         | 65             | 192             | 5300            |
|         | 99             | 294             | 5295            |

| Trial # | Hopping Number | Start Time [ms] | Frequency [MHz] |
|---------|----------------|-----------------|-----------------|
| 16      | 6              | 15              | 5304            |
|         | 21             | 60              | 5291            |
|         | 40             | 117             | 5296            |
|         | 64             | 189             | 5301            |
|         | 100            | 297             | 5309            |

| Trial # | Hopping Number | Start Time [ms] | Frequency [MHz] |
|---------|----------------|-----------------|-----------------|
| 17      | 20             | 57              | 5295            |
|         | 63             | 186             | 5309            |
|         | 65             | 192             | 5298            |

| Trial # | Hopping Number | Start Time [ms] | Frequency [MHz] |
|---------|----------------|-----------------|-----------------|
| 18      | 12             | 33              | 5310            |
|         | 27             | 78              | 5296            |
|         | 39             | 114             | 5293            |
|         | 48             | 141             | 5303            |
|         | 66             | 195             | 5299            |
|         | 82             | 243             | 5304            |

| Trial # | Hopping Number | Start Time [ms] | Frequency [MHz] |
|---------|----------------|-----------------|-----------------|
| 19      | 71             | 210             | 5310            |
|         | 92             | 273             | 5306            |

| Trial # | Hopping Number | Start Time [ms] | Frequency [MHz] |
|---------|----------------|-----------------|-----------------|
| 20      | 9              | 24              | 5296            |
|         | 15             | 42              | 5299            |
|         | 70             | 207             | 5305            |
|         | 91             | 270             | 5310            |
|         | 94             | 279             | 5308            |

| Trial # | Hopping Number | Start Time [ms] | Frequency [MHz] |
|---------|----------------|-----------------|-----------------|
| 21      | 15             | 42              | 5291            |
|         | 27             | 78              | 5310            |
|         | 52             | 153             | 5294            |
|         | 63             | 186             | 5295            |
|         | 64             | 189             | 5296            |
|         | 68             | 201             | 5291            |

| Trial # | Hopping Number | Start Time [ms] | Frequency [MHz] |
|---------|----------------|-----------------|-----------------|
| 22      | 24             | 69              | 5301            |
|         | 40             | 117             | 5291            |
|         | 46             | 135             | 5309            |
|         | 57             | 168             | 5295            |
|         | 60             | 177             | 5292            |
|         | 67             | 198             | 5304            |
|         | 99             | 294             | 5293            |

---

**UL Japan, Inc.**  
**Ise EMC Lab.**

4383-326 Asama-cho, Ise-shi, Mie-ken 516-0021 JAPAN  
Telephone : +81 596 24 8999  
Facsimile : +81 596 24 8124

| Trial # | Hopping Number | Start Time [ms] | Frequency [MHz] |
|---------|----------------|-----------------|-----------------|
| 23      | 91             | 69              | 5298            |
|         | 96             | 84              | 5293            |

| Trial # | Hopping Number | Start Time [ms] | Frequency [MHz] |
|---------|----------------|-----------------|-----------------|
| 24      | 28             | 81              | 5308            |
|         | 37             | 108             | 5301            |

| Trial # | Hopping Number | Start Time [ms] | Frequency [MHz] |
|---------|----------------|-----------------|-----------------|
| 25      | 44             | 129             | 5291            |
|         | 62             | 183             | 5298            |
|         | 67             | 198             | 5292            |
|         | 70             | 207             | 5296            |
|         | 77             | 228             | 5291            |

| Trial # | Hopping Number | Start Time [ms] | Frequency [MHz] |
|---------|----------------|-----------------|-----------------|
| 26      | 38             | 111             | 5305            |
|         | 59             | 174             | 5294            |
|         | 60             | 177             | 5298            |
|         | 68             | 201             | 5302            |

| Trial # | Hopping Number | Start Time [ms] | Frequency [MHz] |
|---------|----------------|-----------------|-----------------|
| 27      | 5              | 12              | 5292            |
|         | 11             | 30              | 5303            |
|         | 26             | 75              | 5307            |
|         | 33             | 96              | 5296            |
|         | 36             | 105             | 5300            |
|         | 64             | 189             | 5305            |

| Trial # | Hopping Number | Start Time [ms] | Frequency [MHz] |
|---------|----------------|-----------------|-----------------|
| 28      | 24             | 69              | 5310            |
|         | 26             | 75              | 5292            |
|         | 95             | 282             | 5293            |

| Trial # | Hopping Number | Start Time [ms] | Frequency [MHz] |
|---------|----------------|-----------------|-----------------|
| 29      | 10             | 27              | 5305            |
|         | 25             | 72              | 5291            |
|         | 33             | 96              | 5293            |
|         | 51             | 150             | 5295            |

| Trial # | Hopping Number | Start Time [ms] | Frequency [MHz] |
|---------|----------------|-----------------|-----------------|
| 30      | 18             | 51              | 5292            |
|         | 28             | 81              | 5296            |
|         | 85             | 252             | 5308            |
|         | 90             | 267             | 5301            |
|         | 98             | 291             | 5293            |

**Parameter Data sheet for Radar Type 6**

**5310MHz (11n-40)**

| Trial # | Hopping Number | Start Time [ms] | Frequency [MHz] |
|---------|----------------|-----------------|-----------------|
| 1       | 19             | 54              | 5303            |
|         | 24             | 69              | 5326            |
|         | 62             | 183             | 5315            |
|         | 71             | 210             | 5299            |
|         | 72             | 213             | 5323            |
|         | 77             | 228             | 5322            |
|         | 99             | 294             | 5312            |

| Trial # | Hopping Number | Start Time [ms] | Frequency [MHz] |
|---------|----------------|-----------------|-----------------|
| 2       | 13             | 54              | 5294            |
|         | 28             | 99              | 5302            |
|         | 31             | 108             | 5329            |
|         | 45             | 150             | 5290            |
|         | 52             | 171             | 5317            |
|         | 55             | 180             | 5293            |
|         | 59             | 192             | 5308            |
|         | 62             | 201             | 5328            |
|         | 78             | 249             | 5327            |
|         | 85             | 270             | 5303            |

| Trial # | Hopping Number | Start Time [ms] | Frequency [MHz] |
|---------|----------------|-----------------|-----------------|
| 3       | 15             | 42              | 5297            |
|         | 40             | 117             | 5329            |
|         | 45             | 132             | 5323            |
|         | 53             | 156             | 5328            |
|         | 54             | 159             | 5302            |
|         | 67             | 198             | 5324            |
|         | 77             | 228             | 5325            |
|         | 79             | 234             | 5305            |
|         | 99             | 294             | 5320            |

| Trial # | Hopping Number | Start Time [ms] | Frequency [MHz] |
|---------|----------------|-----------------|-----------------|
| 4       | 11             | 30              | 5329            |
|         | 15             | 42              | 5320            |
|         | 35             | 102             | 5293            |
|         | 58             | 171             | 5303            |
|         | 59             | 174             | 5316            |
|         | 86             | 255             | 5324            |
|         | 87             | 258             | 5301            |
|         | 99             | 294             | 5294            |

| Trial # | Hopping Number | Start Time [ms] | Frequency [MHz] |
|---------|----------------|-----------------|-----------------|
| 5       | 16             | 45              | 5322            |
|         | 30             | 87              | 5291            |
|         | 36             | 105             | 5328            |
|         | 38             | 111             | 5307            |
|         | 52             | 153             | 5305            |
|         | 57             | 168             | 5301            |
|         | 70             | 207             | 5308            |
|         | 82             | 243             | 5292            |
|         | 98             | 291             | 5321            |

| Trial # | Hopping Number | Start Time [ms] | Frequency [MHz] |
|---------|----------------|-----------------|-----------------|
| 6       | 3              | 6               | 5317            |
|         | 4              | 9               | 5313            |
|         | 12             | 33              | 5290            |
|         | 39             | 114             | 5296            |
|         | 62             | 183             | 5309            |
|         | 87             | 258             | 5330            |
|         | 97             | 288             | 5321            |

| Trial # | Hopping Number | Start Time [ms] | Frequency [MHz] |
|---------|----------------|-----------------|-----------------|
| 7       | 2              | 3               | 5312            |
|         | 10             | 27              | 5299            |
|         | 14             | 39              | 5298            |
|         | 17             | 48              | 5329            |
|         | 22             | 63              | 5302            |
|         | 24             | 69              | 5291            |
|         | 36             | 105             | 5330            |
|         | 47             | 138             | 5294            |
|         | 61             | 180             | 5325            |
|         | 74             | 219             | 5313            |
|         | 82             | 243             | 5297            |

| Trial # | Hopping Number | Start Time [ms] | Frequency [MHz] |
|---------|----------------|-----------------|-----------------|
| 8       | 26             | 75              | 5322            |
|         | 35             | 102             | 5303            |
|         | 40             | 117             | 5305            |
|         | 43             | 126             | 5295            |
|         | 54             | 159             | 5290            |
|         | 56             | 165             | 5330            |
|         | 61             | 180             | 5297            |
|         | 79             | 234             | 5319            |
|         | 83             | 246             | 5326            |
|         | 97             | 288             | 5292            |

| Trial # | Hopping Number | Start Time [ms] | Frequency [MHz] |
|---------|----------------|-----------------|-----------------|
| 9       | 28             | 81              | 5301            |
|         | 34             | 99              | 5327            |
|         | 35             | 102             | 5324            |
|         | 42             | 1223            | 5303            |
|         | 69             | 204             | 5321            |
|         | 78             | 231             | 5319            |
|         | 81             | 240             | 5293            |
|         | 86             | 255             | 5296            |
|         | 96             | 285             | 5313            |
|         | 100            | 297             | 5307            |

| Trial # | Hopping Number | Start Time [ms] | Frequency [MHz] |
|---------|----------------|-----------------|-----------------|
| 10      | 23             | 66              | 5292            |
|         | 30             | 87              | 5330            |
|         | 47             | 138             | 5308            |
|         | 70             | 207             | 5327            |
|         | 75             | 222             | 5303            |
|         | 78             | 231             | 5309            |
|         | 83             | 246             | 5304            |
|         | 86             | 255             | 5328            |

| Trial # | Hopping Number | Start Time [ms] | Frequency [MHz] |
|---------|----------------|-----------------|-----------------|
| 11      | 5              | 12              | 5302            |
|         | 15             | 42              | 5294            |
|         | 21             | 60              | 5307            |
|         | 29             | 84              | 5306            |
|         | 35             | 102             | 5319            |
|         | 44             | 129             | 5320            |
|         | 88             | 261             | 5316            |
|         | 91             | 270             | 5303            |

| Trial # | Hopping Number | Start Time [ms] | Frequency [MHz] |
|---------|----------------|-----------------|-----------------|
| 12      | 4              | 9               | 5299            |
|         | 7              | 18              | 5313            |
|         | 34             | 99              | 5319            |
|         | 36             | 105             | 5327            |
|         | 55             | 162             | 5309            |
|         | 60             | 177             | 5316            |
|         | 66             | 195             | 5323            |
|         | 67             | 198             | 5290            |
|         | 81             | 240             | 5301            |
|         | 83             | 246             | 5298            |
|         | 94             | 279             | 5310            |



| Trial # | Hopping Number | Start Time [ms] | Frequency [MHz] |
|---------|----------------|-----------------|-----------------|
| 13      | 12             | 33              | 5305            |
|         | 43             | 126             | 5314            |
|         | 49             | 144             | 5326            |
|         | 63             | 186             | 5302            |
|         | 72             | 213             | 5330            |
|         | 74             | 219             | 5320            |
|         | 80             | 237             | 5292            |
|         | 86             | 255             | 5307            |

| Trial # | Hopping Number | Start Time [ms] | Frequency [MHz] |
|---------|----------------|-----------------|-----------------|
| 14      | 14             | 39              | 5329            |
|         | 23             | 66              | 5317            |
|         | 24             | 69              | 5312            |
|         | 34             | 99              | 5304            |
|         | 44             | 129             | 5323            |
|         | 72             | 213             | 5295            |
|         | 85             | 252             | 5302            |

| Trial # | Hopping Number | Start Time [ms] | Frequency [MHz] |
|---------|----------------|-----------------|-----------------|
| 15      | 3              | 6               | 5306            |
|         | 10             | 27              | 5295            |
|         | 11             | 30              | 5304            |
|         | 13             | 36              | 5307            |
|         | 21             | 60              | 5323            |
|         | 26             | 75              | 5330            |
|         | 37             | 108             | 5317            |
|         | 53             | 156             | 5322            |
|         | 71             | 210             | 5318            |
|         | 75             | 222             | 5298            |
|         | 88             | 261             | 5325            |
|         | 89             | 264             | 5310            |
|         | 92             | 273             | 5328            |
|         | 93             | 276             | 5320            |

| Trial # | Hopping Number | Start Time [ms] | Frequency [MHz] |
|---------|----------------|-----------------|-----------------|
| 16      | 6              | 15              | 5326            |
|         | 19             | 54              | 5316            |
|         | 30             | 87              | 5308            |
|         | 47             | 138             | 5314            |
|         | 50             | 147             | 5294            |
|         | 56             | 165             | 5310            |
|         | 63             | 186             | 5309            |
|         | 73             | 216             | 5307            |
|         | 81             | 240             | 5329            |
|         | 85             | 252             | 5303            |
| 97      | 288            | 5296            |                 |

| Trial # | Hopping Number | Start Time [ms] | Frequency [MHz] |
|---------|----------------|-----------------|-----------------|
| 17      | 8              | 21              | 5294            |
|         | 10             | 27              | 5323            |
|         | 14             | 39              | 5325            |
|         | 62             | 183             | 5305            |
|         | 71             | 210             | 5292            |
|         | 76             | 225             | 5326            |

| Trial # | Hopping Number | Start Time [ms] | Frequency [MHz] |
|---------|----------------|-----------------|-----------------|
| 18      | 8              | 21              | 5302            |
|         | 9              | 24              | 5311            |
|         | 11             | 30              | 5297            |
|         | 17             | 48              | 5294            |
|         | 30             | 87              | 5330            |
|         | 65             | 192             | 5312            |
|         | 73             | 216             | 5329            |
|         | 86             | 255             | 5305            |

| Trial # | Hopping Number | Start Time [ms] | Frequency [MHz] |
|---------|----------------|-----------------|-----------------|
| 19      | 7              | 18              | 5294            |
|         | 9              | 24              | 5298            |
|         | 29             | 84              | 5326            |
|         | 32             | 93              | 5311            |
|         | 45             | 132             | 5330            |
|         | 54             | 19              | 5292            |
|         | 72             | 213             | 5319            |
|         | 76             | 225             | 5313            |
|         | 96             | 285             | 5325            |
|         | 100            | 297             | 5296            |

| Trial # | Hopping Number | Start Time [ms] | Frequency [MHz] |
|---------|----------------|-----------------|-----------------|
| 20      | 20             | 57              | 5329            |
|         | 29             | 84              | 5291            |
|         | 34             | 99              | 5301            |
|         | 48             | 141             | 5317            |
|         | 56             | 165             | 5310            |
|         | 66             | 195             | 5318            |
|         | 71             | 210             | 5313            |
|         | 73             | 216             | 5320            |
|         | 92             | 273             | 5330            |

| Trial # | Hopping Number | Start Time [ms] | Frequency [MHz] |
|---------|----------------|-----------------|-----------------|
| 21      | 17             | 48              | 5319            |
|         | 21             | 60              | 5309            |
|         | 22             | 63              | 5300            |
|         | 25             | 72              | 5306            |
|         | 26             | 75              | 5316            |
|         | 31             | 90              | 5293            |
|         | 58             | 171             | 5290            |
|         | 72             | 213             | 5301            |
|         | 74             | 219             | 5294            |
|         | 92             | 273             | 5323            |

| Trial # | Hopping Number | Start Time [ms] | Frequency [MHz] |
|---------|----------------|-----------------|-----------------|
| 22      | 4              | 9               | 5327            |
|         | 8              | 21              | 5297            |
|         | 10             | 27              | 5329            |
|         | 16             | 45              | 5318            |
|         | 17             | 48              | 5326            |
|         | 26             | 75              | 5303            |
|         | 29             | 84              | 5294            |
|         | 32             | 93              | 5304            |
|         | 48             | 141             | 5296            |
|         | 49             | 144             | 5315            |
|         | 50             | 147             | 5299            |
|         | 62             | 183             | 5311            |
|         | 78             | 231             | 5293            |
|         | 96             | 285             | 5301            |

| Trial # | Hopping Number | Start Time [ms] | Frequency [MHz] |
|---------|----------------|-----------------|-----------------|
| 23      | 2              | 3               | 5304            |
|         | 46             | 135             | 5317            |
|         | 47             | 138             | 5325            |
|         | 58             | 171             | 5305            |
|         | 65             | 192             | 5297            |
|         | 72             | 213             | 5316            |
|         | 77             | 228             | 5299            |
|         | 90             | 267             | 5330            |

| Trial # | Hopping Number | Start Time [ms] | Frequency [MHz] |
|---------|----------------|-----------------|-----------------|
| 24      | 12             | 33              | 5307            |
|         | 36             | 105             | 5313            |
|         | 41             | 120             | 5311            |
|         | 67             | 198             | 5294            |
|         | 75             | 222             | 5295            |
|         | 92             | 273             | 5317            |

| Trial # | Hopping Number | Start Time [ms] | Frequency [MHz] |
|---------|----------------|-----------------|-----------------|
| 25      | 7              | 18              | 5295            |
|         | 34             | 99              | 5312            |
|         | 48             | 141             | 5291            |
|         | 59             | 174             | 5290            |
|         | 61             | 180             | 5313            |
|         | 66             | 195             | 5305            |
|         | 84             | 249             | 5302            |
|         | 85             | 252             | 5301            |
|         | 95             | 282             | 5330            |

| Trial # | Hopping Number | Start Time [ms] | Frequency [MHz] |
|---------|----------------|-----------------|-----------------|
| 26      | 13             | 36              | 5298            |
|         | 15             | 42              | 5294            |
|         | 50             | 147             | 5313            |
|         | 72             | 213             | 5322            |

| Trial # | Hopping Number | Start Time [ms] | Frequency [MHz] |
|---------|----------------|-----------------|-----------------|
| 27      | 2              | 3               | 5319            |
|         | 9              | 24              | 5330            |
|         | 15             | 42              | 5315            |
|         | 32             | 93              | 5325            |
|         | 34             | 99              | 5295            |
|         | 45             | 132             | 5326            |
|         | 47             | 138             | 5297            |
|         | 96             | 283             | 5314            |

| Trial # | Hopping Number | Start Time [ms] | Frequency [MHz] |
|---------|----------------|-----------------|-----------------|
| 28      | 4              | 9               | 5294            |
|         | 12             | 33              | 5323            |
|         | 22             | 63              | 5298            |
|         | 36             | 105             | 5290            |
|         | 38             | 111             | 5319            |
|         | 39             | 114             | 5327            |
|         | 59             | 174             | 5324            |
|         | 60             | 177             | 5296            |

| Trial # | Hopping Number | Start Time [ms] | Frequency [MHz] |
|---------|----------------|-----------------|-----------------|
| 29      | 13             | 36              | 5296            |
|         | 22             | 63              | 5322            |
|         | 34             | 99              | 5293            |
|         | 42             | 123             | 5303            |
|         | 45             | 132             | 5305            |
|         | 65             | 192             | 5323            |
|         | 78             | 231             | 5325            |
|         | 95             | 282             | 5298            |
|         | 98             | 291             | 5321            |

| Trial # | Hopping Number | Start Time [ms] | Frequency [MHz] |
|---------|----------------|-----------------|-----------------|
| 30      | 14             | 39              | 5324            |
|         | 20             | 57              | 5296            |
|         | 29             | 84              | 5316            |
|         | 30             | 87              | 5302            |
|         | 62             | 183             | 5329            |
|         | 79             | 234             | 5318            |
|         | 97             | 288             | 5299            |

## **APPENDIX 2: Test instruments**

### **EMI Test Equipment**

| Control No.   | Instrument                        | Manufacturer             | Model No              | Serial No  | Test Item | Calibration Date *<br>Interval(month) |
|---------------|-----------------------------------|--------------------------|-----------------------|------------|-----------|---------------------------------------|
| MOS-14        | Thermo-Hygrometer                 | Custom                   | CTH-201               | 1401       | DFS       | 2015/01/13 * 12                       |
| MSA-10        | Spectrum Analyzer                 | Agilent                  | E4448A                | MY46180655 | DFS       | 2015/02/26 * 12                       |
| EST-48<br>*1) | Signal Generator                  | Agilent                  | E4438C                | MY45090353 | DFS       | 2014/12/19 * 12                       |
| COTS-MDFS-01  | Signal Studio Software for DFS    | Agilent                  | N7620A-101            | 5010-7739  | DFS       | -                                     |
| COTS-MDFS-02  | Radar Generating Software for DFS | Agilent                  | -                     | -          | DFS       | -                                     |
| MCC-67        | Microwave Cable 1G-40GHz          | Suhner                   | SUCOFLEX102           | 28635/2    | DFS       | 2014/04/14 * 12                       |
| MCC-137       | Microwave cable                   | HUBER+SUHNER             | SUCOFLEX 102          | 37954/2    | DFS       | 2014/10/02 * 12                       |
| MCC-99        | Microwave Cable 1G-40GHz          | Suhner                   | SUCOFLEX102           | 30820/2    | DFS       | 2014/05/16 * 12                       |
| MPD-03        | Power Divider DC-12.4GHz          | SUHNER                   | 4901.19.A             | -          | DFS       | 2014/05/14 * 12                       |
| MPD-04        | Power Divider DC-12.4GHz          | SUHNER                   | 4901.19.A             | -          | DFS       | 2014/05/20 * 12                       |
| MAT-57        | Attenuator(10dB)                  | Suhner                   | 6810.19.A             | -          | DFS       | 2015/01/08 * 12                       |
| MAT-58        | Attenuator(10dB)                  | Suhner                   | 6810.19.A             | -          | DFS       | 2015/01/09 * 12                       |
| MAT-59        | Attenuator(20dB)                  | Suhner                   | 6820.19.A             | -          | DFS       | Pre Check                             |
| MAT-60        | Attenuator(20dB)                  | Suhner                   | 6820.19.A             | -          | DFS       | Pre Check                             |
| MAT-61        | Attenuator(20dB)                  | Suhner                   | 6820.19.A             | -          | DFS       | Pre Check                             |
| MPSC-04       | Power Splitters/Combiners         | Mini-Circuit             | ZFSC-2-10G            | 0326       | DFS       | 2014/09/26 * 12                       |
| MCC-45        | Microwave Cable                   | Murata                   | MXGS83RK3000          | -          | DFS       | 2014/07/31 * 12                       |
| MCC-103       | Microwave Cable                   | Hirose Electric          | U.FL-2LP-066J1-A(200) | -          | DFS       | 2014/06/12 * 12                       |
| MCC-105       | Microwave Cable                   | Hirose Electric          | U.FL-2LP-066J1-A(200) | -          | DFS       | 2014/06/12 * 12                       |
| MOS-19        | Thermo-Hygrometer                 | Custom                   | CTH-201               | 0001       | DFS       | 2014/12/22 * 12                       |
| MOS-34        | Thermo-Hygrometer                 | Custom                   | CTH-201               | 3401       | DFS       | 2015/01/13 * 12                       |
| MCC-35        | Microwave Cable                   | Hirose Electric          | U.FL-2LP-066-A-(200)  | -          | DFS       | 2014/09/12 * 12                       |
| MCC-37        | Microwave Cable                   | Hirose Electric          | U.FL-2LP-066-A-(200)  | -          | DFS       | 2014/09/25 * 12                       |
| MCC-97        | Microwave Cable 1G-40GHz          | Suhner                   | SUCOFLEX102           | 30818/2    | DFS       | 2014/05/16 * 12                       |
| MAT-20        | Attenuator(10dB)(above 1GHz)      | HIROSE ELECTRIC CO.,LTD. | AT-110                | -          | DFS       | 2015/01/08 * 12                       |
| MAT-24        | Attenuator(10dB)(above 1GHz)      | Agilent                  | 8493C                 | 71389      | DFS       | 2014/06/12 * 12                       |
| MAT-56        | Attenuator(10dB)                  | Suhner                   | 6810.19.A             | -          | DFS       | 2015/01/08 * 12                       |

**\*1) Signal generator is only used to generate radar test signal, and the wave form is confirmed with spectrum analyzer every time before the test.**

**The expiration date of the calibration is the end of the expired month.**

**All equipment is calibrated with valid calibrations. Each measurement data is traceable to the national or international standards.**

**As for some calibrations performed after the tested dates, those test equipment have been controlled by means of an unbroken chains of calibrations.**

**DFS: Dynamic Frequency Selection**

**UL Japan, Inc.**

**Ise EMC Lab.**

4383-326 Asama-cho, Ise-shi, Mie-ken 516-0021 JAPAN

Telephone : +81 596 24 8999

Facsimile : +81 596 24 8124