Specific Absorption Rate (SAR) Test Report

for

Wistron Ne Web Corporation on the

Notebook Personal Computer Model Number: MS2143

Test Report: EME-031287 Date of Report: Dec. 12, 2003 Date of test: Dec. 10, 2003

Total No of Pages Contained in this Report: 71



0597 ILAC MRA

Accredited for testing to FCC Part 15

Tested by:	Kevin Chen	Cenin Chi
Reviewed by:	Elton Chen	At Ken

Review Date: Dec. 12, 2003

All services undertaken are subject to the following general policy: Reports are submitted for exclusive use of the client to whom they are addressed. Their significance is subject to the adequacy and representative character of the samples and to the comprehensiveness of the tests, examinations or surveys made. This report shall not be reproduced except in full, without written consent of Intertek Testing Services, Taiwan Ltd.



Page 2 of 71

Table of Contents

1.0 Job Description	
1.1 Client Information4	
1.2 Equipment under test (EUT)4	
1.3 Test plan reference	
1.4 System test configuration	
1.4.1 System block diagram & Support equipment	
1.4.2 Test Position6	
1.4.3 Test Condition6	
1.5 Modifications required for compliance	
1.6 Additions, deviations and exclusions from standards	
2.0 SAR Evaluation8	
2.1 SAR Limits	
2.2 Configuration Photographs9	
2.3 SAR measurement system	
2.4 SAR measurement system validation	
2.4.1 System Validation result	
2.4.2 System Performance Check result	
2.5 Test Result	
3.0 Test Equipment	
3.1 Equipment List	
3.2 Tissue Simulating Liquid	
3.2.1 Body Tissue Simulating Liquid for evaluation test	
3.2.2 Head Tissue Simulating Liquid for System performance Check test	
3.2.3 Body Liquid results	
3.2.4 Head Liquid results	
3.3 E-Field Probe and 2450 Balanced Dipole Antenna Calibration	
4.0 Measurement Uncertainty	
5.0 Measurement Traceability	
6.0 WARNING LABEL INFORMATION - USA31	
7.0 REFERENCES	
8.0 DOCUMENT HISTORY	
APPENDIX A - SAR Evaluation Data	
APPENDIX B - Photographs40	
APPENDIX C - E-Field Probe and 2450MHz Balanced Dipole Antenna Calibration Data 4	١7



Page 3 of 71

STATEMENT OF COMPLIANCE

The Wistron sample device, model # MS2143 was evaluated in accordance with the requirements for compliance testing defined in FCC OET Bulletin 65, Supplement C (Edition 01-01). Testing was performed at the Intertek Testing Services facility in Hsinchu, Taiwan.

For the evaluation, the dosimetric assessment system INDEXSAR SARA2 was used. The phantom employed was the box phantom of 2mm thick in one wall. The total uncertainty for the evaluation of the spatial peak SAR values averaged over a cube of 1g tissue mass had been assessed for this system to be $\pm 29.7\%$.

The device was tested at their maximum output power declared by the Wistron.

In summary, the maximum spatial peak SAR value for the sample device averaged over 1g was found to be:

Phantom	Position	SAR _{1g} , mW/g
2mm thick box phantom wall	N/A	N/A

Note:

The measurement was only performed in Area Scan due to scanning system couldn't continue performing Zoom Scan with such a low SAR distribution.

In conclusion, the tested Sample device was found to be in compliance with the requirements defined in OET Bulletin 65, Supplement C (Edition 01-01) for body configurations.



Page 4 of 71

1.0 Job Description

1.1 Client Information

The MS2143 has been tested at the request of:

Company: Wistron Ne Web Corporation

No. 10-1, Li-hsin Road I, Science-based Industrial Park

Hsinchu 300, Taiwan

1.2 Equipment under test (EUT)

Product Descriptions:

Equipment	Notebook Personal Computer		
Trade Name	acer	Model No:	MS2143
FCC ID	NKRMS2143CM6	S/N No.	Not Labeled
Category	Portable	RF Exposure	Uncontrolled Environment
Frequency Band	2412 – 2462 MHz	System	DSSS, OFDM

EUT Antenna Description			
Type PIFA Configuration Fixed			
Dimensions	26.5 x 4 mm	Gain	2.89 dBi
Location	Embedded		

Use of Product: Wireless Data Communication

Manufacturer: Wistron

Production is planned: [X] Yes, [] No

EUT receive date: Nov. 26, 2003

EUT received condition: Good operating condition prototype

Test start date: Dec. 10, 2003

Test end date: Dec. 10, 2003



Page 5 of 71

1.3 Test plan reference

FCC Rule: Part 2.1093, FCC's OET Bulletin 65, Supplement C (Edition 01-01) and IEEE 1528/D1.2

1.4 System test configuration

1.4.1 System block diagram & Support equipment

Support Equipment				
Item # Equipment Brand Model No. S/N				
1	N/A	N/A	N/A	N/A





Page 6 of 71

1.4.2 Test Position

See the photographs as section 2.2

1.4.3 Test Condition

During tests the worst-case data (max RF coupling) was determined with following conditions:

Usage	Operates with a portable computer	Distance between antenna axis at the joint and the liquid surface:	bottom position and 15 mm in	ng the Phantom in a, separating 0mm n perpendicular to phantom
Simulating human Head/ Body/Hand	Body	EUT Battery	_	wered from host crough battery.
802.11b	Channel	Frequency MHz	Before SAR Test (dBm)	After SAR Test (dBm)
Conducted output power	Low Channel - 1	2412	17.12	-
	Mid Channel - 6	2437	17.54	-
	High Channel- 11	2462	17.63	-
802.11g	Channel	Frequency MHz	Before SAR Test (dBm)	After SAR Test (dBm)
Conducted output power	Low Channel - 1	2412	17.96	-
	Mid Channel - 6	2437	17.85	17.85
	High Channel- 11	2462	17.82	-

The spatial peak SAR values were assessed for lowest, middle and highest operating channels, defined by the manufacturer.

The conducted output power was measured before and after the test using a diode detector, oscilloscope and signal generator.

The EUT was transmitted continuously during the test.

The EUT contains 802.11b and 802.11g function, due to the worst case output power was found in 802.11g function, we only performed the 802.11g for SAR testing.

After verifying the maximum output power, we found the maximum output power was occurred at 6 Mbps data rate.

All the test data were performed under the above transmission rate.



Page 7 of 71

1.5 Modifications required for compliance

Intertek Testing Services implemented no modifications.

1.6 Additions, deviations and exclusions from standards

The phantom employed was the box phantom of 2mm thick in vertical wall.



Page 8 of 71

2.0 SAR Evaluation

2.1 SAR Limits

The following FCC limits for SAR apply to devices operate in General Population/Uncontrolled Exposure environment:

EXPOSURE	SAR
(General Population/Uncontrolled Exposure environment)	(W/kg)
Average over the whole body	0.08
Spatial Peak (1g)	1.60
Spatial Peak for hands, wrists, feet and ankles (10g)	4.00



Page 9 of 71

2.2 Configuration Photographs

SAR Measurement Test Setup


Test System





Page 10 of 71

SAR Measurement Test Setup Bottom side of Laptop facing phantom touching

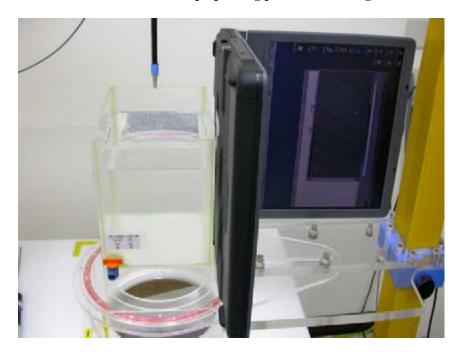

Bottom side of Laptop facing phantom touching – Zoom In





Page 11 of 71

SAR Measurement Test Setup EUT perpendicular rear to phantom, 0 mm separation



EUT perpendicular rear to phantom – **Zoom In**





Page 12 of 71

SAR Measurement Test Setup EUT perpendicular rear to phantom, 15 mm separation




EUT perpendicular rear to phantom-Zoom In






Page 13 of 71

SAR Measurement Test Setup EUT perpendicular right to phantom, 0 mm separation

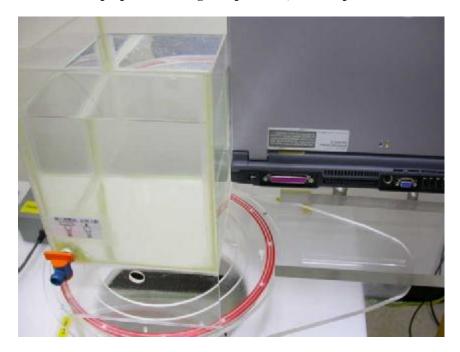


EUT perpendicular right to phantom - Zoom In

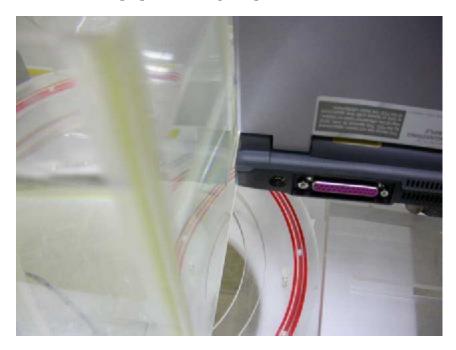



Page 14 of 71

SAR Measurement Test Setup EUT perpendicular right to phantom, 15 mm separation

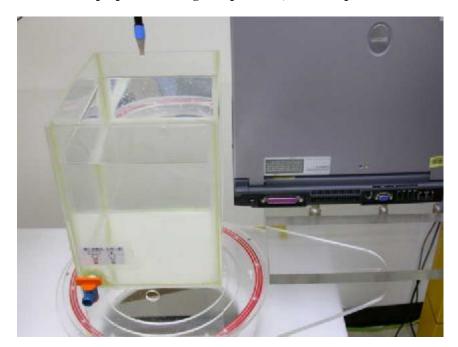

EUT perpendicular right to phantom - Zoom In





Page 15 of 71

2.3 SAR measurement system

Robot system specification

The SAR measurement system being used is the IndexSAR SARA2 system, which consists of a Mitsubishi RV-E2 6-axis robot arm and controller, IndexSAR probe and amplifier and SAM phantom Head Shape. The robot is used to articulate the probe to programmed positions inside the phantom head to obtain the SAR readings from the DUT.

The system is controlled remotely from a PC, which contains the software to control the robot and data acquisition equipment. The software also displays the data obtained from test scans.

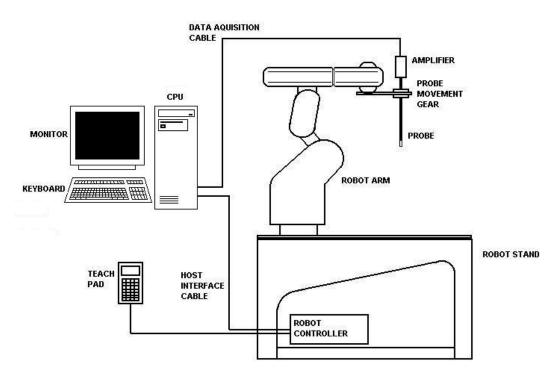


Figure 1: Schematic diagram of the SAR measurement system

The position and digitised shape of the phantom heads are made available to the software for accurate positioning of the probe and reduction of set-up time.

The SAM phantom heads are individually digitised using a Mitutoyo CMM machine to a precision of 0.02mm. The data is then converted into a shape format for the software, providing an accurate description of the phantom shell. In operation, the system first does an area (2D) scan at a fixed depth within the liquid from the inside wall of the phantom. When the maximum SAR point has been found, the system will then carry out a 3D scan centred at that point to determine volume averaged SAR level.

The first 2 measurements points in a direction perpendicular to the surface of the phantom during the zoom scan and closest to the phantom surface, were only 3.5mm and the probe is kept at greater than half a diameter from the surface.



Page 16 of 71

2.4 SAR measurement system validation

Prior to the assessment, the system was verified to the $\pm 10\%$ of the specifications by using the system validation equipments. The validation was performed at 2450 MHz on the bottom side of box phantom.

Procedures

The SAR evaluation was performed with the following procedures:

- a. The SAR distribution was measured at the exposed side of the bottom of the box phantom and was measured at a distance of 8 mm from the inner surface of the shell. The feed power was 1/4W.
- b. The dimension for this cube is 32 mm x 32 mm x 34 mm was assessed by measuring 5 x 5 x 7 points. On the basis of this data set, the spatial peak SAR value was evaluated with the following procedure:
 - i) The data at the surface were extrapolated, since the center of the dipoles is 2.7 mm away from the tip of the probe and the distance between the surface and the lowest measurement point is 5 mm. The extrapolation was based on a least square algorithm. A polynomial of the fourth order was calculated through the points in Z-axes. This polynomial was then used to evaluate the points between the surface and the probe tip.
 - ii) The maximum interpolated value was searched with a straightforward algorithm. Around this maximum, the SAR values averaged over the spatial volumes (1g or 10g) were computed using the 3-D spline interpolation algorithm. The 3-D spline is composed of three one-dimensional splines with the "Not a knot" condition (in x, y and z directions). The volume was integrated with the trapezoidal algorithm. 1000 points (10 x 10 x 10) were interpolated to calculate the average.
 - iii) All neighboring volumes were evaluated until no neighboring volume with a higher average value was found.

2.4.1 System Validation result

System Validation (2450 MHz Head)				
Frequency MHz				
2450	CW	52.4	54.688	4.37%

Please see the plot below:



Page 17 of 71

Date:2003/10/15Position:BottomFilename:2450val10-15.txtPhantom:Box1.csvDevice Tested:SARA2 systemHead Rotation:0

Antenna: 2450dipole Test Frequency: 2450MHz
Shape File: none.csv Power Level: 24dBm/CW

.453

Probe: 0136

Cal File: SN0136_2450_CW_HEAD

Lin

 X
 Y
 Z

 Air
 490
 405
 405

 DCP
 20
 20
 20


.453

.453

Amp Gain: 2
Averaging: 1
Batteries
Replaced:

Cal Factors:

Liquid: 15.5cm 2450MHz Head Type: **Conductivity:** 1.80379 38.1223 **Relative Permittivity:** Liquid Temp (deg C): 23.3 Ambient Temp (deg C): 24 Ambient RH (%): 50 1000 Density (kg/m3): 0.421N **Software Version:**

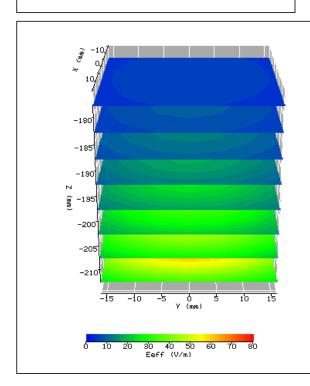

ZOOM SCAN RESULTS:

Spot SAR	Start Scan	End Scan
(W/kg):	0.896	0.889
Change during	-0.78	

1g

Scan (%)

Max E-field (V/m): 74.25

Max SAR (W/kg)

13.672	6.405

10g

Location of Max (mm):

X	Y	Z	
-1.3	0.0	-220.7	

Normalized to an input power of 1W Averaged over 1 cm³ (1g) of tissue **54.688W/kg**



Page 18 of 71

2.4.2 System Performance Check result

System performance check (2450 MHz Head)					
$ \begin{array}{ c c c c c c c c c c c c c c c c c c c$					
2450	CW	52.4	51.752	-1.237%	

Please see the plot below:



Page 19 of 71

Date / Time:2003/12/10Position:bottom of phantomFilename:2450performance checkPhantom:HeadBox2-test.csv

Device Tested: 2450performance check **Head Rotation:**

Antenna:2450 dipoleTest Frequency:2450MHzShape File:none.csvPower Level:24dBm

Probe: 0136

Cal File: SN0136_2450_CW_HEAD

Cal Factors: X Y Z

Air 490 405 405

PGP 20 20 20 20

 DCP
 20
 20
 20


 Lin
 .378
 .378
 .378

Amp Gain: 2
Averaging: 1
Batteries
Replaced:

Liquid: 15.5cm

Type: 2450MHz Head

Conductivity: 1.786
Relative Permittivity: 37.908
Liquid Temp (deg C): 23.2
Ambient Temp (deg C): 22
Ambient RH (%): 45
Density (kg/m3): 1000
Software Version: 2.0VPM

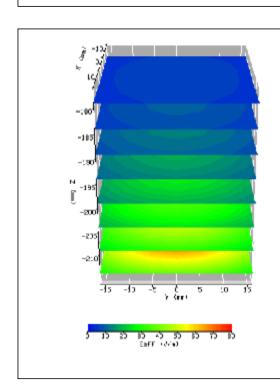

ZOOM SCAN RESULTS:

Spot SAR	Start Scan	End Scan
(W/kg):	0.824	0.841
Change during	2.00	

Scan (%)

Max E-field 72.45

Max SAR (W/kg)	1g	10g
wax san (w/kg)	12.938	6.119

 Location of Max
 X
 Y
 Z

 (mm):
 -1.3
 1.3
 -221.8

Normalized to an input power of 1W Averaged over 1 cm³ (1g) of tissue 51.752W/kg



Page 20 of 71

2.5 Test Result

The results on the following page(s) were obtained when the device was tested in the condition described in this report. Detailed measurement data and plots, which reveal information about the location of the maximum SAR with respect to the device, are reported in Appendix A.



FCC ID.: NKRMS2143CM6 Report No.: EME-031287 Page 21 of 71

Measurement Results

Trade Name:	Wistron		Model No.:	MS2143	
Serial No.:	Not Labled		Test Engineer:	Kevin Chen	
TEST CONDITIONS					
Ambient Temperature 21.5 °C		21.5 °C	Relative Humidity		50 %
Test Signal Source		Test Mode	Signal Modulation		OFDM
Output Power Before		See page 6	Output Power After SAR		See page 6
SAR Test		Test			
Test Duration		22 min. each scan	Number of Batte	ry Change	1

	EUT Position								
Channel (MHz)	Operating Mode	Crest Factor	Description	Distance (mm)	Measured SAR _{1g} (mW/g)	Plot Number			
2437	OFDM	1	Bottom to phantom	0	Note 2	1			
2437	OFDM	1	Perpendicular rear to phantom	0	Note 2	2			
2437	OFDM	1	Perpendicular rear to phantom	15	Note 2	3			
2437	OFDM	1	Perpendicular right to phantom	0	Note 2	4			
2437	OFDM	1	Perpendicular right to phantom	15	Note 2	5			

Note:

- 1. Configuration at middle channel with more than –3dB of applicable limit.
- 2. The measurement was only performed in Area Scan due to scanning system couldn't continue performing Zoom Scan with such a low SAR distribution.



Page 22 of 71

3.0 Test Equipment

3.1 Equipment List

The Specific Absorption Rate (SAR) tests were performed with the INDEXSAR SARA2 SYSTEM.

The following major equipment/components were used for the SAR evaluations:

	SAR Measurement System				
EQUIPMENT	SPECIFICATIONS	S/N #	LAST CAL. DATE		
Balanced Validation dipole	2450MHz	0048	03/26/2002		
Controller	Mitsubishi CR-E116	F1008007	N/A		
Robot	Mitsubishi RV-E2	EA009002	N/A		
	Repeatability: ± 0.04mm; Number of Axes: 6				
E-Field Probe	IXP-050	0136	09/10/2003		
	Frequency Range: Probe outer diameter: 5.2 mm; probe tip and the dipole center: 2.7 mm	Length: 350 mm;	Distance between the		
Data Acquisition	SARA2	N/A	N/A		
	Processor: Pentium 4; Clock speed: 1.5GHz; OS: Windows XP; I/O: two RS232; Software: SARA2 ver. 2.0VPM				
Phantom	2mm wall thickness box phantom	N/A	N/A		
	Shell Material: clear Perspex; Thickness: 2 ± 0.1 mm; Capacity: $152.5 \times 215.5 \times 200$ (W D) mm ³ ; Dielectric constant: less than 2.85 above 500MHz;				
Device holder	Material: clear Perspex; Dielectric constant: less than 2.85 above 500MHz	N/A	N/A		
Simulated Tissue	Mixture	N/A	12/10/2003		
	Please see section 3.2 for details				
RF Power Meter	Boonton 4231A with 51011-EMC power sensor	79401-32482	03/21/2003		
	Frequency Range: 0.03 to 8 GHz, <24dBm				
RF Power Amplifier	INDEXSAR VTL5400	0302	01/23/2003		
	10MHz to 2.5GHz, Gain >30dB				
Directional Coupler	INDEXSAR VDC0830-20	0302	05/19/2003		
	0.8 to 3 GHz, Max. Power<500W				
Vector Network Analyzer	HP 8753B HP 85046A	2807J04037 2729A01958	07/04/2003		
	300k to 3GHz				
Signal Generator	R&S SMR27	100036	09/19/2003		
	10M to 27GHz, <120dBuV				
Crystal Detector	Agilent 8472B	MY42240243	N/A		
	10MHz to 18GHz				
Two Channel Digital Storage Oscilloscope	Tektronix TDS1012	C031679	08/16/2003		



Page 23 of 71

3.2 Tissue Simulating Liquid

3.2.1 Body Tissue Simulating Liquid for evaluation test

Body Ingredients Frequency (2.45 GHz)				
DGBE (Dilethylene Glycol Butyl Ether)	26.7%			
Salt	0.04%			
Water	73.2%			

The dielectric parameters were verified prior to assessment using the HP 85046A dielectric probe kit and the HP 8753B network Analyzer. The dielectric parameters were:

Frequency (MHz)	Temp. (°C)	e _r / Relative Permittivity			s / Conductivity (mho/m)		$r *(kg/m^3)$	
2450	22.7	measured	target	Δ(±5%)	measured	target	$\Delta(\pm 5\%)$	1000
2430	22.1	50.399	52.7	-2.9%	1.948	1.95	0.102%	1000

^{*} Worst-case assumption

3.2.2 Head Tissue Simulating Liquid for System performance Check test

Head Ingredients Frequency (2.45 GHz)				
DGBE (Dilethylene Glycol Butyl Ether)	53.3%			
Water	46.7%			

The dielectric parameters were verified prior to assessment using the HP 85046A dielectric probe kit and the HP 8753B network Analyzer. The dielectric parameters were:

Frequency (MHz)	Temp. (°C)	e _r / Relative Permittivity			s / Conductivity (mho/m)			r *(kg/m ³)
2450	24.0	measured	target	Δ(±5%)	measured	target	Δ(±5%)	1000
2430	24.0	37.908	39.2	-3.296%	1.786	1.80	-0.778	1000


^{*} Worst-case assumption



Page 24 of 71

3.2.3 Body Liquid results

Date: 09 Dec. 2003 Temperature:22.7°C	Type: 2450MHz/body (FCC)	Tested by: Kevin
2410, 49.7540795333, -2.0120171811 2411, 49.7347992795, -2.001735824 2412, 49.7170124346, -2.0036205249 2413, 49.7243217155, -2.0009344974 2414, 49.7310882496, -1.9949020188 2415, 49.7182555481, -1.9911816501 2416, 49.7396604968, -1.9990122621 2417, 49.7084898015, -1.9868435119 2418, 49.7178323994, -1.9847410169 2419, 49.7368803522, -1.9817652002 2420, 49.7617995426, -1.9741287085 2421, 49.7892718997, -1.971407656 2422, 49.762793849, -1.9667936994 2423, 49.786523525, -1.9663092 24244, 49.7802558521, -1.9630343986 2424, 49.789278933, -1.96039479 2426, 49.8158297485, -1.9566544664 2427, 49.8652412431, -1.9590716759 2428, 49.8395346367, -1.95032283 2429, 49.843064716, -1.9522441523 2420, 49.78172786, -1.9476723982 2430, 49.87112772786, -1.9476723982 2431, 49.9077633965, -1.9488242994 2432, 49.9278122519, -1.9461841454 2433, 49.932701961, -1.9423684474 2434, 49.992508378, -1.9416929073 242548, 50.0481963078, -1.94308162 2437, 50.0524526852, -1.94611841454 2434, 49.9927508378, -1.9415929073 24248, 50.0524526852, -1.9401199075 24248, 50.0524526852, -1.9401199075 24248, 50.0524526852, -1.9401199075 24248, 50.0524526852, -1.9401199075 242493, 50.0921522252, -1.9386851269 2444, 50.1039856465, -1.9395594072 2438, 50.0139856465, -1.9395594072 2438, 50.0139856465, -1.9395594072 2438, 50.0139856465, -1.9395594072 2438, 50.0139856465, -1.9395594072 2438, 50.0139856465, -1.9360733435 2442, 50.1589749437, -1.9405307841 2443, 50.22280316937, -1.9409287322 2444, 50.2280316937, -1.9409287322 2444, 50.2280316937, -1.9409287322 2445, 50.2717432857, -1.9360733435 2447, 50.3143647719, -1.942064241 2448, 50.3347420897, -1.93405653	450, 50.3991151807, -1.9477818996 451, 50.4392985014, -1.9438481397 452, 50.449855177, -1.9485987788 453, 50.460763417, -1.9501332212 454, 50.5102622809, -1.9478556239 455, 50.5003811545, -1.9494883132 456, 50.5456812031, -1.95083352112 457, 50.5512697192, -1.9586295865 458, 50.5525595147, -1.9629906163 459, 50.6357076729, -1.9671435364 460, 50.6413061427, -1.9715372393 461, 50.6771545496, -1.9716117427 462, 50.7075594601, -1.9706628005 463, 50.7355899696, -1.9794389818 464, 50.7163360298, -1.9767684085 465, 50.7573458341, -1.9794470494 466, 50.8047282186, -1.9924619895 467, 50.7761311717, -1.9923150064 468, 50.8558765652, -1.9941720696 469, 50.799765091, -1.998312382 470, 50.8627204477, -2.0016721817 471, 50.8645743939, -2.0110210729 472, 50.8932120852, -2.097397075 473, 50.8769268236, -2.0138669775 474, 50.8947119909, -2.0156312038 475, 50.9166234334, -2.0264362906 476, 50.9259651945, -2.0340189578 477, 50.9660112604, -2.0369800288 478, 51.0168983207, -2.0387943844 479, 50.9259651945, -2.0340189578 477, 50.9860112604, -2.0369800288 478, 51.0163983207, -2.0533828079 482, 50.9829380486, -2.0564610869 483, 50.984653937, -2.0873058614 484, 51.0013777932, -2.0553828079 484, 51.0023383985, -2.0650374453 487, 50.9984965397, -2.0873058614 488, 50.98891414736, -2.0752559808 488, 50.988951366, -2.0972456987 490, 51.0075737152, -2.101759855	rested by. Kevin

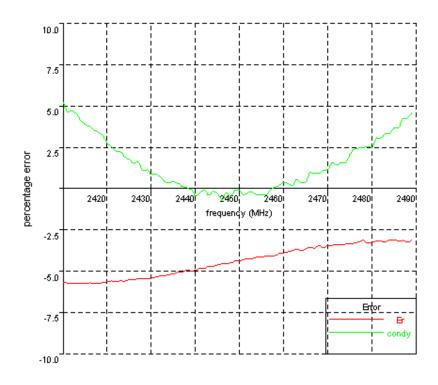




Page 25 of 71

3.2.4 Head Liquid results

2410, 37.3831837671, -1.8405309607 2411, 37.3814123798, -1.8346731554 2412, 37.3790503871, -1.8369912495 2413, 37.3932347749, -1.8304662954 2414, 37.3555172176, -1.8310491042 2415, 37.3696926752, -1.8270743597 2415, 37.3696926752, -1.8270743597 2415, 37.34066333266, -1.8215919725 2416, 37.3406633266, -1.8215919725 2416, 37.3406633266, -1.8215919725	Date: 09 Dec. 2003	Temperature:24.0°C	Type: 2450MHz/head (FCC)	Tested by: Kevin
2417, 37,3749761756, 1,81945596	2410, 37.3831837671, -1.8402 2411, 37.3814123798, -1.8346 2412, 37.3790503871, -1.8362 2413, 37.3790503871, -1.8362 2414, 37.3555172176, -1.83102 2415, 37.3696926752, -1.8270 2416, 37.3406633266, -1.82192 2417, 37.347961756, -1.8192 2418, 37.3350996226, -1.8161 2419, 37.367182364, -1.8175 2420, 37.3622336909, -1.8162 2421, 37.3626336909, -1.8122 2421, 37.3626363609, -1.8122 2421, 37.3648663163, -1.8081 2422, 37.3867210532, -1.8076 2423, 37.349565316, -1.7993362 2424, 37.4101460194, -1.803 2424, 37.445227171, -1.8034 2426, 37.43956538015, -1.799362 2428, 37.45233616, -1.7993362 2428, 37.45233616, -1.7993362 2429, 37.4523616, -1.7993362 2429, 37.4523616, -1.7993362 2429, 37.4523616, -1.7993362 2429, 37.4523616, -1.7962 2430, 37.475834725, -1.7878 2431, 37.5309865628, -1.7842 2431, 37.5309865628, -1.7842 2433, 37.5539135615, -1.7862 2433, 37.5539135615, -1.7852 2434, 37.5713496425, -1.7826 2436, 37.6047498563, -1.7842 2437, 37.635280946, -1.7851 2438, 37.6533135015, -1.7852 2438, 37.6533135015, -1.7857 2440, 37.671766638, -1.7842 2441, 37.726244197, -1.78238 2442, 37.8046412723, -1.7846 2444, 37.7804481269, -1.7842 2444, 37.780458727, -1.7848 2446, 37.8046412723, -1.7846 2447, 37.8347647912, -1.7866 2447, 37.8347647912, -1.7862 2448, 37.8347647912, -1.7862 2448, 37.88347647912, -1.7846 2444, 37.8347647912, -1.7846 2444, 37.8347647912, -1.7846 2444, 37.8347647912, -1.7846 2444, 37.8347647912, -1.7846 2444, 37.8347647912, -1.7846 2444, 37.8347647912, -1.7846 2444, 37.8347647912, -1.7846 2444, 37.8347647912, -1.7846 2444, 37.8347647912, -1.7846 2444, 37.8347647912, -1.7846 2444, 37.8347647912, -1.7846	37309607 3731554 9912495 1662954 1491042 1743597 3919725 155596 374673 381455 18968059 1750849 5114781 1917143 1146891 1538904 19955713 1851 1851 1851 1852 1853 1862 1893 1894 1995 1993 1994 1995 1994 1995 1994 1995 1994 1995 1994 1995 1994 1995 1994 1995 199	2450, 37.9080799313, -1.7862742387 2451, 37.9080799313, -1.79067993 2452, 37.9568573347, -1.7934976175 2453, 37.9861650337, -1.7952902849 2454, 38.0416519163, -1.7952932328 2455, 37.9884955311, -1.796291694 2456, 37.9931111334, -1.8021994608 2457, 38.0662377814, -1.7982352798 2458, 38.0705714145, -1.8026795064 2459, 38.0588054238, -1.8048310282 2460, 38.1316415464, -1.8131096796 2461, 38.1167539353, -1.8136461657 2462, 38.1463102346, -1.8135623565 2463, 38.1412583787, -1.8195532579 2464, 38.158513659, -1.8158823242 2465, 38.2945925913, -1.8213911535 2466, 38.2057966433, -1.8298573382 2466, 38.234285756, -1.8377034341 2468, 38.2342845756, -1.837703446 2470, 38.23458576, -1.83763446 2470, 38.2345845946, -1.8336242138 2471, 38.2479411949, -1.8451783338 2472, 38.2690570128, -1.8478255932 2473, 38.3033852714, -1.846600794 2474, 38.2882910783, -1.8510946096 2475, 38.2991439247, -1.8584849775 2476, 38.2687230102, -1.856600472 2477, 38.3508690043, -1.877534849775 2476, 38.2687230102, -1.856600472 2477, 38.3508690043, -1.87525745245 2480, 38.3456499371, -1.8846933344 2481, 38.357560992, -1.87259383356 2479, 38.3456499371, -1.8889236832 2483, 38.3725021238, -1.8897053959 2484, 38.3558215413, -1.9101029688 2487, 38.323948393, -1.8811858548 2488, 38.3725021238, -1.8897053959 2484, 38.3558215413, -1.9101029688 2487, 38.323948393, -1.881185857914 2489, 38.3508824162, -1.9143488763	Tested by, Kevin

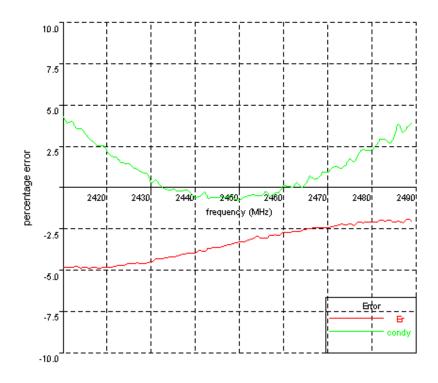



Page 26 of 71

3.3 E-Field Probe and 2450 Balanced Dipole Antenna Calibration

Probe calibration factors and dipole antenna calibration are included in Appendix C.



Page 27 of 71

4.0 Measurement Uncertainty

The uncertainty budget has been determined for the INDEXSAR SARA2 measurement system according to IEEE P1528 documents [3] and is given in the following table. The extended uncertainty (95% confidence level) was assessed to be 29.7 %

Table 1 Exposure Assessment Uncertainty Example of measurement uncertainty assessment SAR measurement

(blue entries are site-specific)											
a	b			С	d	е		f	g	h	1
Uncertainty Component	Sec.	T (dB)	ol. (+/-) (%)	Prob. Dist.	Divisor (descrip)			c1 (10g)	Standard Uncertainty (%) 1g	Standard Uncertainty (%) 10g
Measurement System		(ub)		(70)							
Probe Calibration	E2.1			2.5	N	1 or k	1	1	1	2.50	2.50
Axial Isotropy	E2.2	0.25	5.93	5.93	R	√3	1.73	0	0	0.00	0.00
Hemispherical Isotropy	E2.2	0.45	10.92	10.92	R	√3	1.73	1	1	6.30	6.30
Boundary effect	E2.3		4	4.00	R	√3	1.73	1	1	2.31	2.31
Linearity	E2.4	0.04	0.93	0.93	R	√3	1.73	1	1	0.53	0.53
System Detection Limits	E2.5		1	1.00	R	√3	1.73	1	1	0.58	0.58
Readout Electronics	E2.6		1	1.00	Ν	1 or k	1.00	1	1	1.00	1.00
Response time	E2.7		0	0.00	R	√3	1.73	1	1	0.00	0.00
Integration time	E2.8		1.4	1.40	R	√3	1.73	1	1	0.81	0.81
RF Ambient Conditions	E6.1		3	3.00	R	√3	1.73	1	1	1.73	1.73
Probe Positioner Mechanical Tolerance	E6.2		0.6	0.60	R	√3	1.73	1	1	0.35	0.35
Probe Position wrt. Phantom Shell	E6.3		3	3.00	R	√3	1.73	1	1	1.73	1.73
SAR Evaluation Algorithms	E5		8	8.00	R	√3	1.73	1	1	4.62	4.62
Test Sample Related											
Test Sample Positioning	E4.2		2	2.00	Ν	1	1.00	1	1	2.00	2.00
Device Holder Uncertainty	E4.1		2	2.00	N	1	1.00	1	1	2.00	2.00
Output Power Variation	6.6.2		5	5.00	R	√3	1.73	1	1	2.89	2.89
Phantom and Tissue Parameters											
Phantom Uncertainty (shape and thickness)	E3.1		4	4.00	R	√3	1.73	1	1	2.31	2.31
Liquid conductivity (Deviation from target)	E3.2		5	5.00	R	√3	1.73	0.64	0.43	1.85	1.24
Liquid conductivity (measurement uncert.)	E3.3		1.1	1.10	N	1	1.00	0.64	0.43	0.70	0.47
Liquid permittivity (Deviation from target)	E3.2		5	5.00	R	√3	1.73	0.6	0.49	1.73	1.41
Liquid permittivity (measurement uncert.)	E3.3		1.1	1.10	Ν	1	1.00	0.6	0.49	0.66	0.54
Combined standard uncertainty					RSS					10.5	10.3
Expanded uncertainty	(95% Confidence Level)				k=2					20.6	20.3



FCC ID.: NKRMS2143CM6 Report No.: EME-031287 Page 28 of 71

Table 2 System Check (Verification)

Example of measurement uncertainty assessment for system performance check

(blue entries are site-specific)

(blue entries are site-specific)	1		1			1				ı	
а	b			С	d	е		f	g	h	I
Uncertainty Component	Sec.	-	Tol. (+/	r'	Prob. Dist.	Divisor (descrip)	Divisor (value)		c1 (10g)	Standard Uncertainty (%) 1g	Standard Uncertainty (%) 10g
		(dB)		(%)		V.					
Measurement System											
Probe Calibration	E2.1			2.5	N	1 or k	1	1	1	2.50	2.50
Axial Isotropy	E2.2	0.25	5.93	5.93	R	√3	1.73	0	0	0.00	0.00
Hemispherical Isotropy	E2.2	0.45	10.92	10.92	R	√3	1.73	1	1	6.30	6.30
Boundary effect	E2.3		4	4.00	R	√3	1.73	1	1	2.31	2.31
Linearity	E2.4	0.04	0.93	0.93	R	√3	1.73	1	1	0.53	0.53
System Detection Limits	E2.5		1	1.00	R	√3	1.73	1	1	0.58	0.58
Readout Electronics	E2.6		1	1.00	N	1 or k	1.00	1	1	1.00	1.00
Response time	E2.7		0	0.00	R	√3	1.73	1	1	0.00	0.00
Integration time	E2.8		1.4	1.40	R	√3	1.73	1	1	0.81	0.81
RF Ambient Conditions	E6.1		3	3.00	R	√3	1.73	1	1	1.73	1.73
Probe Positioner Mechanical Tolerance	E6.2		0.6	0.60	R	√3	1.73	1	1	0.35	0.35
Probe Position wrt. Phantom Shell	E6.3		3	3.00	R	√3	1.73	1	1	1.73	1.73
SAR Evaluation Algorithms	E5		8	8.00	R	√3	1.73	1	1	4.62	4.62
Dipole						,					
Dipole axis to liquid distance	8, E4.2		2	2.00	N	1	1.00	1	1	2.00	2.00
Input power and SAR drift measurement	8, 6.6.2		5	5.00	R	√3	1.73	1	1	2.89	2.89
Phantom and Tissue Parameters											
Phantom Uncertainty (thickness)	E3.1		4	4.00	R	√3	1.73	1	1	2.31	2.31
Liquid conductivity (Deviation from target)	E3.2		5	5.00	R	√3	1.73	0.64	0.43	1.85	1.24
Liquid conductivity (measurement uncert.)	E3.3		1.1	1.10	Ν	1	1.00	0.64	0.43	0.70	0.47
Liquid permittivity (Deviation from target)	E3.2		5	5.00	R	√3	1.73	0.6	0.49	1.73	1.41
Liquid permittivity (measurement uncert.)	E3.3		1.1	1.10	Ν	1	1.00	0.6	0.49	0.66	0.54
Combined standard uncertainty			-		RSS					10.3	10.1
Expanded uncertainty	(95% Confidence Level)				k=2					20.2	19.9



Page 29 of 71

Table 3 Uncertainty assessment for waveguide probe calibration

	а		b		С	
Uncertainty Component	Tol. (+/-%)	Prob. Dist.	Divisor (descrip)	Divisor (value)	c1	Standard Uncertainty (+/- %)
	,					
Waveguide calibrations						
Incident or forward power	1	R	√3	1.73	1	0.58
Refected power	1.00	R	$\sqrt{3}$	1.73	1	0.58
Liquid conductivity	2.00	R	$\sqrt{3}$	1.73	1	1.15
Liquid permittivity	2.00	R	$\sqrt{3}$	1.73	1	1.15
Probe positioning	1.00	N	1	1.00	1	1.00
Field homogeneity	1.00	R	$\sqrt{3}$	1.73	1	0.58
Field probe positioning	2.00	R	$\sqrt{3}$	1.73	1	1.15
Field probe linearity	1.00	R	$\sqrt{3}$	1.73	1	0.58
Combined standard uncertainty		RSS				2.5
Expanded uncertainty		k=2			•	4.9

Table 4 Uncertainty assessment for DiLine dielectric property measurement

	а		b		С	
		Prob.	Divisor	Divisor		Standard
Uncertainty Component	Tol. (+/- %)	Dist.	(descrip)	(value)	c1	Uncertainty (+/- %)
Permittivity measurement						
Repeatability (n repeats)	1	N	1 or k	1	1	1.00
Temperature measurement	0.30	R	$\sqrt{3}$	1.73	1	0.17
VNA drift, linearity	0.50	R	$\sqrt{3}$	1.73	1	0.29
Test port cable variations	0.50	R	$\sqrt{3}$	1.73	1	0.29
Combined standard uncertainty		RSS				1.1
Expanded uncertainty		k=2				2.1

	_		h		-	
	а		b		С	
		Prob.	Divisor	Divisor		Standard
Uncertainty Component	Tol. (+/- %)	Dist.	(descrip)	(value)	c1	Uncertainty (+/- %)
Conductivity measurement						
Repeatability (n repeats)	1	Ν	1 or k	1	1	1.00
Temperature measurement	0.30	R	$\sqrt{3}$	1.73	1	0.17
VNA drift, linearity	0.50	R	√3	1.73	1	0.29
Test port cable variations	0.50	R	√3	1.73	1	0.29
Combined standard uncertainty		RSS				1.1
Expanded uncertainty		k=2				2.1



Page 30 of 71

5.0 Measurement Traceability

All measurements described in this report are traceable to Chinese National Laboratory Accreditation (CNLA) standards or appropriate national standards.



Page 31 of 71

6.0 WARNING LABEL INFORMATION - USA

See user manual.



Page 32 of 71

7.0 REFERENCES

- [1] ANSI, ANSI/IEEE C95.1-1999: IEEE Standard for Safety Levels with Respect to Human Exposure to Radio Frequency Electromagnetic Fields, 3kHz to 300 GHz, The Institute of electrical and Electronics Engineers, Inc., New York, NY 10017, 1999
- [2] Federal Communications Commission, "Evaluating Compliance with FCC Guidelines for Human Exposure to Radiofrequency Electromagnetic Fields", Supplement C to OET Bulletin 65, Washington, D.C. 20554, 1997
- [3] IEEE Standards Coordinating Committee 34, "Recommended Practice for Determining the Peak Spatial-Average Specific Absorption Rate (SAR) in the Human Head from Wireless Communications Devices: Measurement Techniques", IEEE Std 1528/D1.2, April 21, 2003



Page 33 of 71

8.0 DOCUMENT HISTORY

Revision/ Job Number	Writer Initials	Date	Change
N/A	J.C.	Dec. 12, 2003	Original document



Page 34 of 71

APPENDIX A - SAR Evaluation Data

Power drift is the measurement of power drift of the device over one complete SAR scan.

To assess the drift of the power of the device under test, a SAR measurement was made in the middle of the zoom scan volume at the start of the scan and a measurement at this point was then also made after the measurement scan. The difference between the two measurements should be less than 5%.



Page 35 of 71

Plot #1

Date / Time: 2003/12/10 **Position:** bottom

Filename: 2437bota.txt **Phantom:** HeadBox2-test.csv

MS2143 **Device Tested: Head Rotation:**

PIFA 2437MHz Antenna: **Test Frequency:**

MS2143bot.csv 17.85dBm **Shape File: Power Level:**

.405

0136 **Probe:**

Cal File: SN0136_2450_CW_BODY

X Y \mathbf{Z} 490 405 405 Air **Cal Factors:** DCP 20 20 20

.405

.405

Lin


2 Amp Gain: Averaging: 1

Batteries Replaced:

15.5cm Liquid:

2450MHz Body Type:

1.94778 **Conductivity: Relative Permittivity:** 50.39911 **Liquid Temp (deg C):** 22.6 **Ambient Temp (deg C):** 21.5 Ambient RH (%): 43 1000 Density (kg/m3): **Software Version:** 2.0 VPM

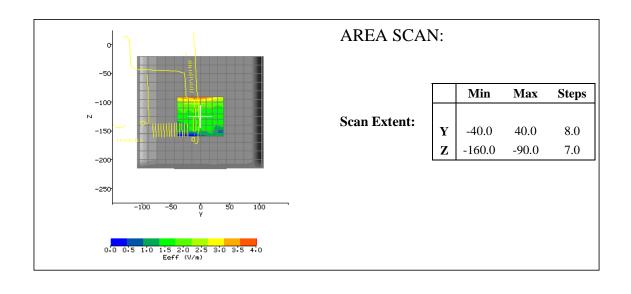



Page 36 of 71

Plot #2

Date / Time: 2003/12/10 **Position:** perpendicular rear 0mm

Filename: 2437per1-0a.txt Phantom: HeadBox2-test.csv

Device Tested: MS2143 **Head Rotation:**

Antenna: PIFA Test Frequency: 2437MHz

Shape File: MS2143per1.csv **Power Level:** 17.85dBm

.405

Probe: 0136

Cal File: SN0136_2450_CW_BODY

Lin

 Cal Factors:
 X
 Y
 Z

 DCP
 20
 405
 405

 DCP
 20
 20
 20

.405


.405

Amp Gain: 2
Averaging: 1
Batteries

Batteries Replaced: Liquid: 15.5cm

Type: 2450MHz Body

Conductivity: 1.94778
Relative Permittivity: 50.39911
Liquid Temp (deg C): 22.6
Ambient Temp (deg C): 21.5
Ambient RH (%): 43
Density (kg/m3): 1000
Software Version: 2.0 VPM

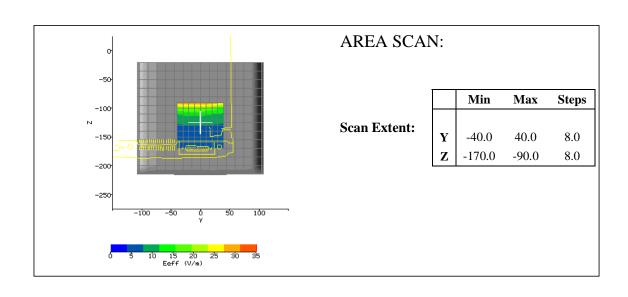



Page 37 of 71

Plot #3

Date / Time: 2003/12/10 **Position:** perpendicular rear 15mm

Filename: 2437per1-15a.txt Phantom: HeadBox2-test.csv

Device Tested: MS2143 **Head Rotation:** O

.405

Antenna: PIFA Test Frequency: 2437MHz

Shape File: MS2143per1.csv **Power Level:** 17.85dBm

.405

Probe: 0136

Cal File: SN0136_2450_CW_BODY

 Cal Factors:
 X Y Z

 DCP
 20
 405
 405

 DCP
 20
 20
 20


Amp Gain: 2
Averaging: 1

Batteries
Replaced:

Liquid: 15.5cm

Type: 2450MHz Body

Conductivity: 1.94778
Relative Permittivity: 50.39911
Liquid Temp (deg C): 22.6
Ambient Temp (deg C): 21.5
Ambient RH (%): 43
Density (kg/m3): 1000
Software Version: 2.0 VPM

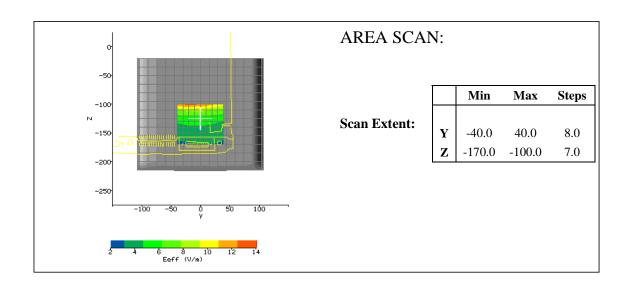



Page 38 of 71

Plot #4

Date / Time: 2003/12/10 **Position:** perpendicular right 0mm

Filename: 2437per2-0a.txt Phantom: HeadBox2-test.csv

Device Tested: MS2143 **Head Rotation:** 0

Antenna: PIFA Test Frequency: 2437MHz

Shape File: MS2143per2.csv **Power Level:** 17.85dBm

Probe: 0136

Cal File: SN0136_2450_CW_BODY

Cal Factors: X Y Z

Air 490 405 405

DCP 20 20 20 Lin .405 .405 .405


Amp Gain: 2

Averaging: 1
Batteries
Replaced:

Liquid: 15.5cm
Type: 2450MHz Body

Conductivity: 1.94778
Relative Permittivity: 50.39911
Liquid Temp (deg C): 22.6
Ambient Temp (deg C): 21.5
Ambient RH (%): 43
Density (kg/m3): 1000

Software Version: 2.0 VPM

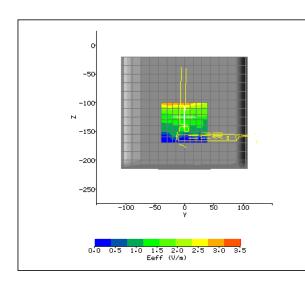

AREA SCAN:

Scan Extent:

	Min	Max	Steps
		•	
Y	-40.0	40.0	8.0
Z	-170.0	-100.0	7.0



Page 39 of 71

15.5cm

Plot #5

Date / Time: 2003/12/10 **Position:** perpendicular right 15mm

Liquid:

Filename: 2437per2-15a.txt Phantom: HeadBox2-test.csv

Device Tested: MS2143 **Head Rotation:** O

Antenna: PIFA Test Frequency: 2437MHz

Shape File: MS2143per2.csv **Power Level:** 17.85dBm

Probe: 0136

Cal File: SN0136_2450_CW_BODY


Cal Factors: X Y Z

Air 490 405 405

| DCP | 20 | 20 | 20 | |
| Lin | .405 | .405 | .405 |
| Amp Gain: 2

Amp Gain: 2
Averaging: 1
Batteries
Replaced:

Type: 2450MHz Body 1.94778 **Conductivity: Relative Permittivity:** 50.39911 **Liquid Temp (deg C):** 22.6 **Ambient Temp (deg C):** 21.5 Ambient RH (%): 43 1000 Density (kg/m3): **Software Version:** 2.0 VPM

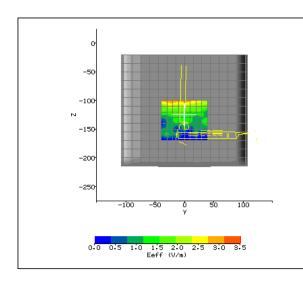

AREA SCAN:

Scan Extent:

	Min	Max	Steps
Y	-40.0	40.0	8.0
7.	-170.0	-100.0	7.0



Page 40 of 71

APPENDIX B - Photographs







Page 41 of 71


Internal photo 1








Page 42 of 71

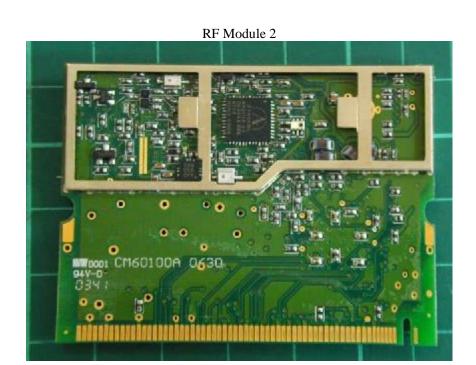

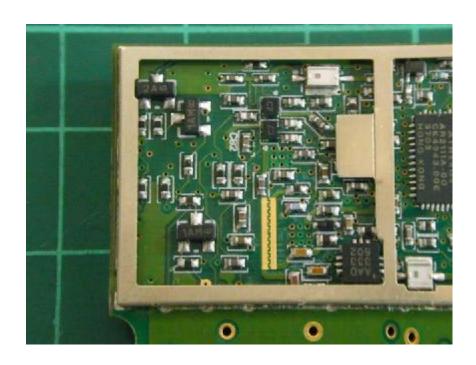




Report No.: EME-031287 FCC ID.: NKRMS2143CM6

Page 43 of 71



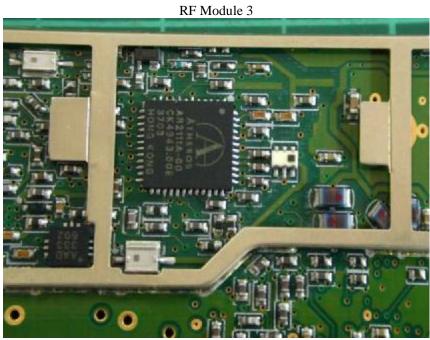





Page 44 of 71








Report No.: EME-031287 FCC ID.: NKRMS2143CM6

Page 45 of 71



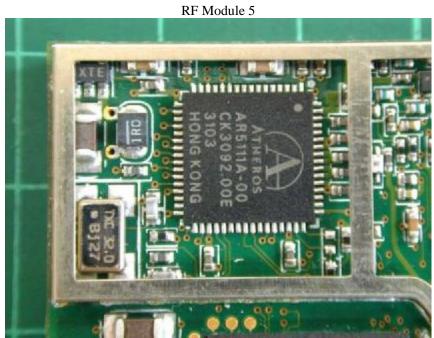





Page 46 of 71







Page 47 of 71

 $\label{eq:appendix} \textbf{APPENDIX} \ \textbf{C} \ \textbf{-} \ \textbf{E-Field Probe} \ \textbf{and} \ \textbf{2450MHz} \ \textbf{Balanced Dipole Antenna Calibration} \\ \textbf{Data}$



Page 48 of 71



IMMERSIBLE SAR PROBE

CALIBRATION REPORT

Part Number: IXP – 050

S/N 0136

10th September 2003



Indexsar Limited
Oakfield House
Cudworth Lane
Newdigate
Surrey RH5 5DR

Tel: +44 (0) 1306 631 233 Fax: +44 (0) 1306 631 834 e-mail: <u>enquiries@indexsar.com</u>



Page 49 of 71

INTRODUCTION

This Report presents measured calibration data for a particular Indexsar SAR probe (S/N 0136) and describes the procedures used for characterisation and calibration.

Indexsar probes are characterised using procedures that, where applicable, follow the recommendations of CENELEC [1] and IEEE [2] standards. The procedures incorporate techniques for probe linearisation, isotropy assessment and determination of liquid factors (conversion factors). Calibrations are determined by comparing probe readings with analytical computations in canonical test geometries (waveguides) using normalised power inputs.

Each step of the calibration procedure and the equipment used is described in the sections below.

CALIBRATION PROCEDURE

1. Equipment Used

For the first part of the characterisation procedure, the probe is placed in an isotropy measurement jig as pictured in Figure 1. In this position the probe can be rotated about its axis by a non-metallic belt driven by a stepper motor.

The probe is attached via its amplifier and an optical cable to a PC. A schematic representation of the test geometry is illustrated in Figure 2.

A balanced dipole (900 MHz) is inserted horizontally into the bracket attached to a second belt (Figure 1). The dipole can also be rotated about its axis. A cable connects the dipole to a signal generator, via a directional coupler and power meter. The signal generator feeds an RF amplifier at constant power, the output of which is monitored using the power meter. The probe is positioned so that its sensors line up with the rotation center of the source dipole. By recording output voltage measurements of each channel as both the probe and the dipole are rotated, data are obtained from which the spherical isotropy of the probe can be optimised and its magnitude determined.

The calibration process requires E-field measurements to be taken in air, in 900 MHz simulated brain liquid and at other frequencies/liquids as appropriate.

2. Linearising probe output

The probe channel output signals are linearised in the manner set out in Refs [1] and [2]. The following equation is utilized for each channel:

$$U_{lin} = U_{o/p} + U_{o/p}^{2} / DCP$$
 (1)

where U_{lin} is the linearised signal, $U_{o/p}$ is the raw output signal in voltage units and DCP is the diode compression potential in similar voltage units.

DCP is determined from fitting equation (1) to measurements of $U_{\rm lin}$ versus source feed power over the full dynamic range of the probe. The DCP is a characteristic of the schottky diodes used as the sensors. For the IXP-050 probes with CW signals the DCP values are typically 0.10V (or 20 in the voltage units used by Indexsar software, which are V*200).

3. Selecting channel sensitivity factors to optimise isotropic response

The basic measurements obtained using the calibration jig (Fig 1) represent the output from each



Page 50 of 71

diode sensor as a function of the presentation angle of the source (probe and dipole rotation angles). The directionality of the orthogonally-arranged sensors can be checked by analysing the data using dedicated Indexsar software, which displays the data in 3D format as in Figure 3. The left-hand side of this diagram shows the individual channel outputs after linearisation (see above). The program uses these data to balance the channel outputs and then applies an optimisation process, which makes fine adjustments to the channel factors for optimum isotropic response.

The next stage of the process is to calibrate the Indexsar probe to a W&G EMR300 E-field meter in air. The principal reasons for this are to obtain conversion factors applicable should the probe be used in air and to provide an overall measure of the probe sensitivity.

A multiplier is applied to factors to bring the magnitudes of the average E-field measurements as close as possible to those of the W&G probe.

The following equation is used (where linearised output voltages are in units of V*200):

$$\begin{split} E_{air}^{2}\left(V/m\right) &= & U_{linx} * Air \ Factor_{x} \\ &+ U_{liny} * Air \ Factor_{y} \\ &+ U_{linz} * Air \ Factor_{z} \end{split} \tag{2}$$

It should be noted that the air factors are not separately used for normal SAR testing. The IXP-050 probes are optimised for use in tissue-simulating liquids and do not behave isotropically in air.

4. 900 MHz Liquid Calibration

Conversion factors for use when the probes are immersed in tissue-simulant liquids at 900 MHz are determined either using a waveguide or by comparison to a reference probe that has been calibrated by NPL. Waveguide procedures are described later. The summary sheet indicates the method used for the probe S/N 0136.

The conversion factor, referred to as the 'liquid factor' is also applied to the measurements of each channel. The following equation is used (where output voltages are in units of V*200):

$$\begin{split} E_{liq}^{\ 2}\left(V/m\right) &= \quad U_{linx} * Air \ Factor_x * \ Liq \ Factor_x \\ &+ U_{liny} * Air \ Factor_y * \ Liq \ Factor_y \\ &+ U_{linz} * Air \ Factor_z * \ Liq \ Factor_z \end{split} \tag{3}$$

A 3D representation of the spherical isotropy for probe S/N 0136 using these factors is shown in Figure 3.

The rotational isotropy can also determined from the calibration jig measurements and is reported as the 900MHz isotropy in the summary table. Note that waveguide measurements can also be used to determine rotational isotropy (Fig. 5).

The design of the cells used for determining probe conversion factors are waveguide cells is shown in Figure 4. The cells consist of a coax to waveguide transition and an open-ended section of waveguide containing a dielectric separator. Each waveguide cell stands in the upright positition and is filled with liquid within 10 mm of the open end. The seperator provides a liquid seal and is designed for a good electrical transition from air filled guide to liquid filled guide. The choice of cell depends on the portion of the frequency band to be examined and the choice of liquid used. The depth of liquid ensures there is negligible radiation from the waveguide open top and that the probe calibration is not influenced by reflections from nearby objects. The return loss at the coaxial connector of the filled waveguide cell is measured initially using a network analyser and this information is used subsequently in the calibration procedure. The probe is positioned in the centre of the waveguide and



Page 51 of 71

is adjusted vertically or rotated using stepper motor arrangements. The signal generator is connected to the waveguide cell and the power is monitored with a coupler and a power meter. A fuller description of the waveguide method is given below.

The liquid dielectric parameters used for the probe calibrations are listed in the Tables below. The final calibration factors for the probe are listed in the summary chart.

WAVEGUIDE MEASUREMENT PROCEDURE

The calibration method is based on setting up a calculable specific absorption rate (SAR) in a vertically-mounted WG8 (R22) waveguide section [1]. The waveguide has an air-filled, launcher section and a liquid-filled section separated by a matching window that is designed to minimise reflections at the liquid interface. A TE_{01} mode is launched into the waveguide by means of a N-type-to-waveguide adapter. The power delivered to the liquid section is calculated from the forward power and reflection coefficient measured at the input to the waveguide. At the centre of the cross-section of the waveguide, the local spot SAR in the liquid as a function of distance from the window is given by functions set out in IEEE1528 as below:

Because of the low cutoff frequency, the field inside the liquid nearly propagates as a TEM wave. The depth of the medium (greater than three penetration depths) ensures that reflections at the upper surface of the liquid are negligible. The power absorbed in the liquid is determined by measuring the waveguide forward and reflected power. Equation (4) shows the relationship between the SAR at the cross-sectional center of the lossy waveguide and the longitudinal distance (z) from the dielectric separator

$$SAR(z) = \frac{4(P_f - P_b)}{rabd}e^{-2z/d}$$
(4)

where the density r is conventionally assumed to be 1000 kg/m^3 , ab is the cross-sectional area of the waveguide, P_f and P_b are the forward and reflected power inside the lossless section of the waveguide, respectively. The penetration depth d, which is the reciprocal of the waveguide-mode attenuation coefficient, is determined from a scan along the z-axis and compared with the theoretical value determined from Equation (5) using the measured dielectric properties of the lossy liquid.

$$d = \left[\text{Re} \left\{ \sqrt{\left(p / a \right)^2 + j w m_o \left(s + j w e_o e_r \right)} \right\} \right]^{-1}.$$
 (5)

Table A.1 of [1] can be used for designing calibration waveguides with a return loss greater than 30 dB at the most important frequencies used for personal wireless communications. Values for the penetration depth for these specific fixtures and tissue-simulating mixtures are also listed in Table A.1.

According to [1], this calibration technique provides excellent accuracy, with standard uncertainty of less than 3.6% depending on the frequency and medium. The calibration itself is reduced to power measurements traceable to a standard calibration procedure. The practical limitation to the frequency band of 800 to 2500 MHz because of the waveguide size is not severe in the context of compliance testing.

CALIBRATION FACTORS MEASURED FOR PROBE S/N 0136

The probe was calibrated at 900, 1800, 1900 and 2450MHz MHz in liquid samples representing both brain liquid and body fluid at these frequencies. The calibration was for CW signals only, and the



Page 52 of 71

axis of the probe was parallel to the direction of propagation of the incident field i.e. end-on to the incident radiation. The axial isotropy of the probe was measured by rotating the probe about its axis in 10 degree steps through 360 degrees in this orientation.

The reference point for the calibration is in the centre of the probe's cross-section at a distance of 2.7 m from the probe tip in the direction of the probe amplifier. A value of 2.7 mm should be used for the tip to sensor offset distance in the software.

It is important that the diode compression point and air factors used in the software are the same as those quoted in the results tables, as these are used to convert the diode output voltages to a SAR value.

DIELECTRIC PROPERTIES OF LIQUIDS

The dielectric properties of the brain and body tissue-simulant liquids employed for calibration are listed in the tables below. The measurements were performed prior to each waveguide test using an Indexsar DiLine measurement kit, which uses the TEM method as recommended in [2].

AMBIENT CONDITIONS

Measurements were made in the open laboratory at 22 ± 2.0 °C. The temperature of the liquids in the waveguide used was measured using a mercury thermometer.

RESPONSE TO MODULATED SIGNALS

To measure the response of the probe and amplifier to modulated signals, the probe is held vertically in a liquid-filled waveguide.

An RF amplifier is allowed to warm up and stabilise before use. A spectrum analyser is used to demonstrate that the peak power of the RF amplifier for the CW signals and the pulsed signals are within 0.1dB of each other when the signal generator is switched from CW to modulated output. Subsequently, the power levels recorded are read from a power meter when a CW signal is being transmitted.

The test sequence involves manually stepping the power up in regular (e.g. 2 dB) steps from the lowest power that gives a measurable reading on the SAR probe up to the maximum that the amplifiers can deliver.

At each power level, the individual channel outputs from the SAR probe are recorded at CW and then recorded again with the modulation setting. The results are entered into a spreadsheet. Using the spreadsheets, the modulated power is calculated by applying a factor to the measured CW power (e.g. for GSM, this factor is 9.03dB). This process is repeated 3 times with the response maximised for each channel sensor in turn.



Page 53 of 71

The probe channel output signals are linearised in the manner set out in Section 1 above using equation (1) with the DCPs determined from the linearisation procedure. Calibration factors for the probe are used to determine the E-field values corresponding to the probe readings using equation (3). SAR is determined from the equation

SAR (W/kg) =
$$E_{liq}^2$$
 (V/m) * σ (S/m) / 1000 (6)

Where σ is the conductivity of the simulant liquid employed.

Using the spreadsheet data, the DCP value for linearising each of the individual channels (X, Y and Z) is assessed separately. The corresponding DCP values are listed in the summary page of the calibration factors for each probe.

Figure 7 shows the linearised probe response to GSM signals, Figure 8 the response to GPRS signals (GSM with 2 timeslots) and Figure 9 the response to CDMA IS-95A and W-CDMA signals.

Additional tests have shown that the modulation response is similar at 1800MHz and is not affected by the orientation between the source and the probe.



Page 54 of 71

SUMMARY OF CALIBRATION FACTORS FOR PROBE IXP-050 S/N 0136

Spherical isotropy measured at 900 MHz 0.24 (+/-) dB

	Χ	Υ	Z	
Air factors	490	405	405	(V*200)
DCPs	20	20	20	(V*200)
DSSS	20	20	20	(V*200)
GSM	8	9.5	11.2	(V*200)
CDMA	20	20	20	(V*200)

f (MHz)	А	xial isotı	ору	SAR conv	ersion factors	Notes
	(-	+/- dB)		(liq/air)		
	В	RAIN	BODY	BRAIN	BODY	
45	0					
83	35	0.05	0.04	0.257	0.272	1,2,3
90	00	0.05	0.04	0.261	0.282	1,2,3
180	00	0.06	0.06	0.315	0.339	1,2,3
190	00	0.06	0.06	0.327	0.351	1,2,3
245	0	0.05	0.10	0.378	0.405	1,2,3

Notes		
1)	Calibrations done at 22C +/- 2C	
2)	Waveguide calibration	
3)	Checked using box-phantom validation test	

(the graph shows a simple, spreadsheet representation of surface shown in 3D in Figure 3 below)



Page 55 of 71

ROBE SPECIFICATIONS

Indexsar probe 0136, along with its calibration, is compared with CENELEC and IEEE standards recommendations (Refs [1] and [2]) in the Tables below. A listing of relevant specifications is contained in the tables below:

D'	C/NI 0126	CENELEC	TEEE (A)
Dimensions	S/N 0136	CENELEC [1]	IEEE [2]
Overall length (mm)	350	LJ	
Tip length (mm)	10		
Body diameter (mm)	12		
Tip diameter (mm)	5.2	8	8
Distance from probe tip to dipole centers (mm)	2.7		
Dynamic range	S/N 0136	CENELEC [1]	IEEE [2]
Minimum (W/kg)	0.01	< 0.02	0.01
Maximum (W/kg) N.B. only measured to 35 W/kg	>35	>100	100
Linearity of response	S/N 0136	CENELEC [1]	IEEE [2]
Over range 0.01 – 100 W/kg (+/- dB)	0.125	0.50	0.25
Isotropy (measured at 900MHz)	S/N 0136	CENELEC	IEEE [2]
isotropy (measured at 7001viriz)	5/14 0130		ILLL [2]
Axial rotation with probe normal to source (+/- dB) at 835, 900, 1800, 1900 and 2450 MHz	Max. 0.10 (see summary table)	0.5	0.25
Spherical isotropy covering all orientations to source (+/- dB)	0.24	1.0	0.50
Construction		ontains three orth	

Construction	Each probe contains three orthogonal dipole sensors arranged on a triangular prism core, protected against static charges by built-in shielding, and covered at the tip by PEEK cylindrical enclosure material. No adhesives are used in the immersed section. Outer case materials are PEEK and heat-shrink sleeving.
Chemical resistance	Tested to be resistant to glycol and alcohol containing simulant liquids but probes should be removed, cleaned and dried when not in use.




Page 56 of 71

REFERENCES

- [1] CENELEC, EN 50361, July 2001. Basic Standard for the measurement of specific absorption rate related to human exposure to electromagnetic fields from mobile phones.
- [2] IEEE 1528, Recommended practice for determining the spatial-peak specific absorption rate (SAR) in the human body due to wireless communications devices: Experimental techniques.
- [3] Calibration report on SAR probe IXP-050 S/N 0071 from National Physical Laboratory. Test Report EF07/2002/03/IndexSAR. Dated 20 February 2002.



Page 57 of 71

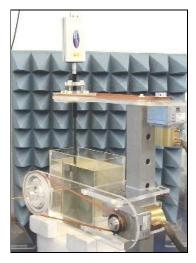

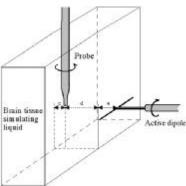


Figure 1. Spherical isotropy jig showing probe, dipole and box filled with simulated brain liquid (see Ref [2], Section A.5.2.1)

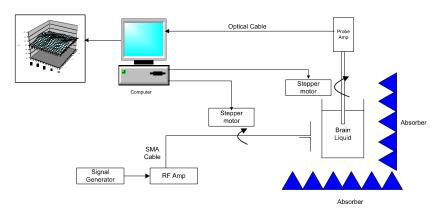


Figure 2. Schematic diagram of the test geometry used for isotropy determination



Page 58 of 71

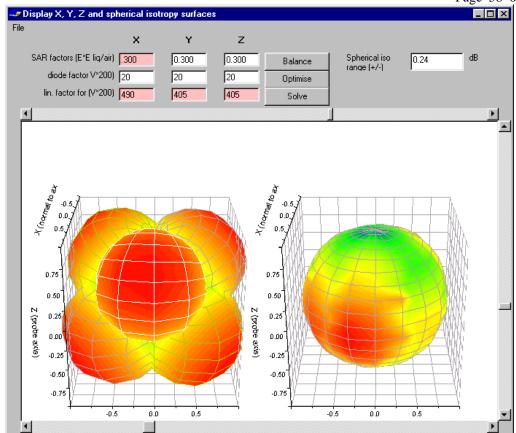


Figure 3. Graphical representation of the probe response to fields applied from each direction. The diagram on the left shows the individual response characteristics of each of the three channels and the diagram on the right shows the resulting probe sensitivity in each direction. The colour range in the figure images the lowest values as blue and the maximum values as red. For the probe S/N 0136, this range is (+/-) 0.24 dB. The probe is more sensitive to fields parallel to the axis and less sensitive to fields normal to the probe axis.

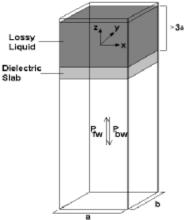



Figure 4. Geometry used for waveguide calibration (after Ref [2]. Section A.3.2.2)



FCC ID.: NKRMS2143CM6 Report No.: EME-031287 Page 59 of 71

IXP-050 S/N 0136

18-Aug-03

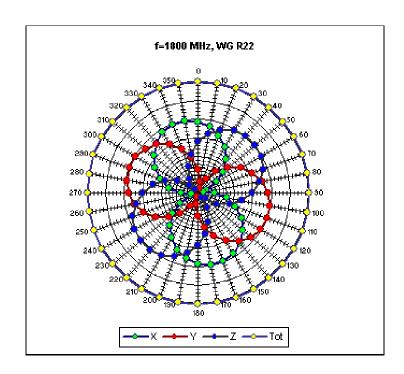


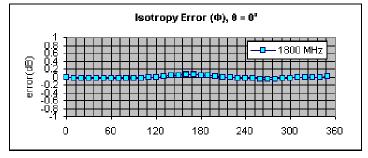


Figure 5. Example of the rotational isotropy of probe S/N 0136 obtained by rotating the probe in a liquid-filled waveguide at 2450 MHz. Similar distributions are obtained at the other test frequencies (1800 and 1900 MHz) both in brain liquids and body fluids (see summary table)

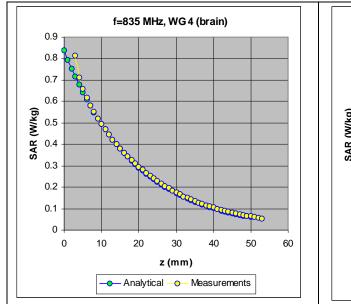

Page 60 of 71



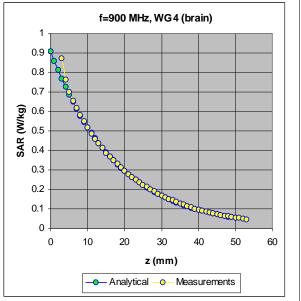


Figure 6. The measured SAR decay function along the centreline of the WG4 waveguide with conversion factors adjusted to fit to the theoretical function for the particular dimension, frequency, power and liquid properties employed.



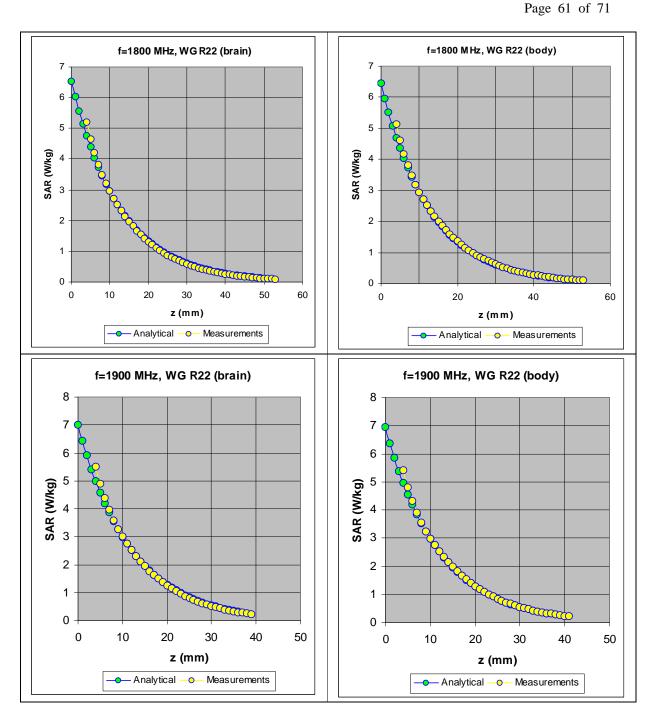


Figure 7. The measured SAR decay function along the centreline of the R22 waveguide with conversion factors adjusted to fit to the theoretical function for the particular dimension, frequency, power and liquid properties employed.



Page 62 of 71

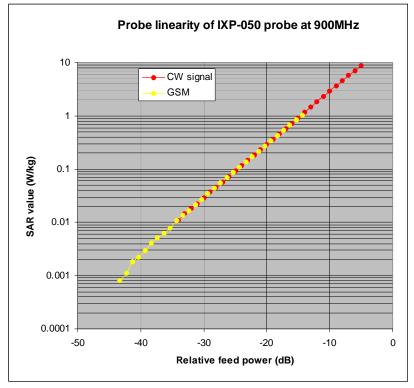


Figure 8. The GSM response of an IXP-050 probe at 900MHz.

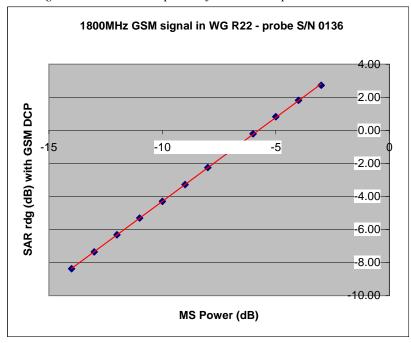


Figure 8a. The actual GSM response of IXP-050 probe S/N 0136 at 1800MHz



Page 63 of 71


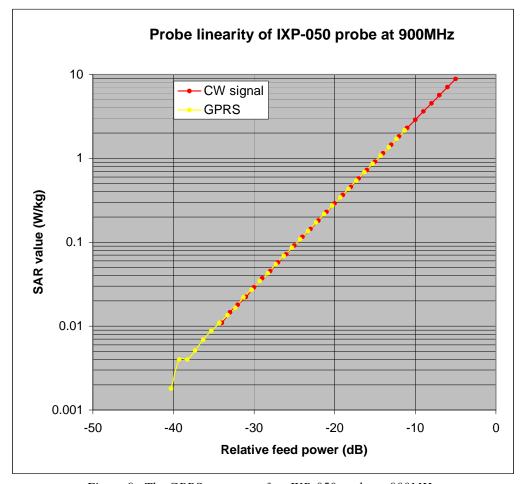


Figure 9. The GPRS response of an IXP-050 probe at 900MHz.

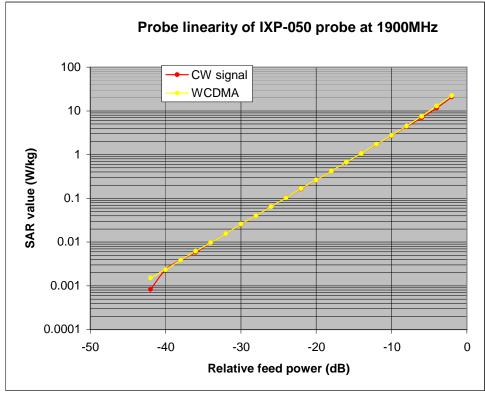

Page 64 of 71



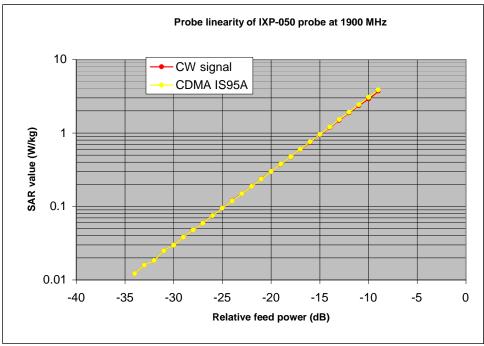


Figure 10. The CDMA response of an IXP-050 probe at 1900MHz.



Page 65 of 71

Table indicating the dielectric parameters of the liquids used for calibrations at each frequency

Liquid used	Relative permittivity (measured)	Conductivity (S/m) (measured)
835 MHz BRAIN	43.18	0.935
835 MHz BODY	59.19	0.992
900 MHz BRAIN	42.47	0.998
900 MHz BODY	58.7	1.056
1800 MHz BRAIN	38.72	1.34
1800 MHz BODY	52.5	1.53
1900 MHz BRAIN	38.31	1.43
1900 MHz BODY	52.06	1.64
2450 MHz BRAIN	38.9	1.87
2450 MHz BODY	52.59	2.08



Page 66 of 71




Report No. SN0048_2450 26th March 2003

INDEXSAR 2450MHz validation Dipole Type IXD-245 S/N 0048

Performance measurements

MI Manning

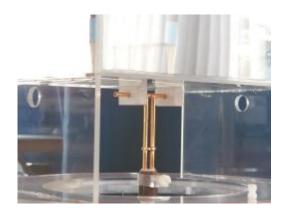

Indexsar, Oakfield House, Cudworth Lane, Newdigate, Surrey RH5 5DR. UK.

Tel: +44 (0) 1306 631233 Fax: +44 (0) 1306 631834 e-mail: enquiries@indexsar.com



FCC ID.: NKRMS2143CM6



Report No.: EME-031287
Page 67 of 71
Indexsar Limited
Oakfield House
Cudworth Lane
Newdigate
Surrey RH5 5DR

Tel: +44 (0) 1306 631 233 Fax: +44 (0) 1306 631 834 e-mail: <u>enquiries@indexsar.com</u>

Calibration / Conformance statement Balanced Validation dipole

Type: IXI	0-245 2450MHz		
Manufacturer:	IndexSAR, UK		
Serial Number:	0048		
Place of Calibration:	IndexSAR, UK		
	hat the IXD series dipole named above has been checked for in the draft IEEE 1528 and CENELEC En 50361 standards on		
Date of Calibration/Check:	26 th March 2003		
The dipole named above should be periodically re-checked using the procedures set out in the dipole calibration document. It is important that the cautions regarding handling of the dipoles (given in the calibration document) are adhered to.			
Next Calibration Date:	March 2005		
The calibration measurements were carried out using the methods described in the calibration document. Where applicable, the standards used in the calibration process are traceable to the UK's National Physical Laboratory.			
Calibrated By:			
	M. Marif		
Approved By:	. 7		

1. Tests on Validation Dipole

Tests have been performed on a balanced dipole made for 2450MHz application according to the



Page 68 of 71

construction guidelines, dimensions and tolerances given in the draft IEEE1528 standard [1]. Measurements have been made of the impedance and return loss when positioned against the liquid-filled phantom and a validation test has been performed according to the procedures set out in IEEE 1528 [1].

2. Measurement Conditions

Measurements were performed using a box-shaped phantom made of PMMA with dimensions designed to meet the accuracy criteria for reasonably-sized phantoms that do not have liquid capacities substantially in excess of the volume of liquid required to fill the Indexsar upright SAM phantoms used for SAR testing of handsets against the ear.

An HP 8753B vector network analyser was used for the return loss measurements. The dipole was placed in a special holder made of low-permittivity, low-loss materials. This holder enables the dipole to be positioned accurately in the centre of the base of the Indexsar box-phantom used for flat-surface testing and validation checks.

The validation dipoles are supplied with special spacers made from a low-permittivity, low-loss foam material. These spacers are fitted to the dipole arms to ensure that, when the dipole is offered up to the phantom surface, the spacing between the dipole and the liquid surface is accurately aligned according to the guidance in the relevant standards documentation. The spacers are rectangular with a central hole equal to the dipole arm diameter and dimensioned so that the longer side can be used to ensure a spacing of 15mm from the liquid in the phantom (for tests at 900MHz and below) and the shorter side can be used for tests at 1800MHz and above to ensure a spacing of 10mm from the liquid in the phantom. The spacers are made on a CNC milling machine with an accuracy of $1/40^{th}$ mm but they may suffer wear and tear and need to be replaced periodically. The material used is Rohacell, which has a relative permittivity of approx. 1.05 and a negligible loss tangent.

The apparatus supplied by Indexsar for dipole validation tests thus includes:

Balanced dipoles for each frequency required are dimensioned according to the guidelines given in IEEE 1528 [1]. The dipoles are made from semi-rigid 50 Ohm co-ax, which is joined by soldering and is gold-plated subsequently. The constructed dipoles are easily deformed, if mis-handled, and periodic checks need to be made of their symmetry.

Rohacell foam spacers designed for presenting the dipoles to 2mm thick PMMA box phantoms. These components also suffer wear and tear and should be replaced when the central hole is a loose-fit on the dipole arms or if the edges are too worn to ensure accurate alignment. The standard spacers are dimensioned for use with 2mm wall thickness (additional spacers are available for 4mm wall thickness).

3. SAR Validation Measurement

A SAR validation check was performed with the box-phantom located on the SARA2 phantom support base on the SARA2 robot system. Tests were then conducted at a feed power level of approx. 0.25W. The actual power level was recorded and used to normalise the results obtained to the standard input power conditions of 1W (forward power). The ambient temperature was 24°C.

The phantom was filled with a 2450MHz brain liquid using a recipe from [1], which was measured using an Indexsar DiLine kit at 2450MHz. Measurements were taken at 23°C and 30°C and interpolation was used to find the properties at 24°C which were as below:


Relative Permittivity 39.221 Conductivity 1.8714 S/m



Page 69 of 71

The SARA2 software version 0.420N was used with an Indexsar probe previously calibrated using waveguide techniques.

The 3D measurement made using the dipole at the bottom of the phantom box is shown below:

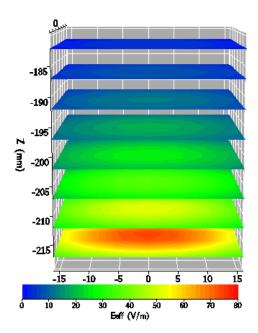

The volume-averaged SAR results, normalised to an input power of 1W (forward power) are:

Averaged over 1 cm³ (1g) of tissue 51.376 W/kg Averaged over 10cm³ (10g) of tissue 23.888 W/kg

These results can be compared with Table 8.1 in [1]. The agreement is within 10%.

4. Dipole impedance and return loss


The dipoles are designed to have low return loss ONLY when presented against a lossy-phantom at the specified distance. A Vector Network Analyser (VNA) was used to perform a return loss measurement on the specific dipole when in the measurement-location against the box phantom. The distance was as specified in the standard i.e. 10mm from the liquid (for 2450MHz). The Indexsar foam spacers (described above) were used to ensure this condition during measurement.

The impedance was measured at the SMA-connector with the network analyser. The following parameters were measured:

Dipole impedance at 2450 MHz Re{Z} = **44.814** Ω Im{Z} = **-5.3359** Ω

Return loss at 2450MHz -22.122 dB



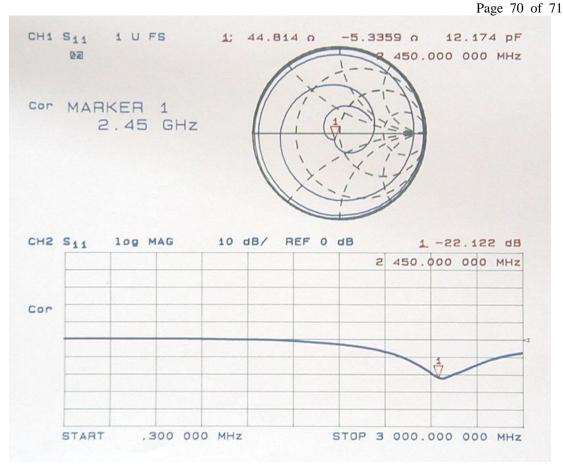

5. Dipole handling

The dipoles are made from standard, copper-sheathed coaxial cable. In assembly, the sections are joined using ordinary soft-soldering. This is necessary to avoid excessive heat input in manufacture, which would destroy the polythene dielectric used for the cable. The consequence of the construction material and the assembly technique is that the dipoles are fragile and can be deformed by rough handling. Conversely, they can be straightened quite easily as described in this report.

If a dipole is suspected of being deformed, a normal workshop lathe can be used as an alignment jig to restore the symmetry. To do this, the dipole is first placed in the headstock of the lathe (centred on the plastic or brass spacers) and the headstock is rotated by hand (do NOT use the motor). A marker (lathe tool or similar) is brought up close to the end of one dipole arm and then the headstock is rotated by 0.5 rev. to check the opposing arm. If they are not balanced, judicious deformation of the arms can be used to restore the symmetry.

If a dipole has a failed solder joint, the dipole can be fixed down in such a way that the arms are colinear and the joint re-soldered with a reasonably-powerful electrical soldering iron. Do not use gas soldering irons. After such a repair, electrical tests must be performed as described below.

Please note that, because of their construction, the dipoles are short-circuited for DC signals.



Page 71 of 71

6. Tuning the dipole

The dipole dimensions are based on calculations that assumed specific liquid dielectric properties. If the liquid dielectric properties are somewhat different, the dipole tuning will also vary. A pragmatic way of accounting for variations in liquid properties is to 'tune' the dipole (by applying minor variations to its effective length). For this purpose, Indexsar can supply short brass tube lengths to extend the length of the dipole and thus 'tune' the dipole. It cannot be made shorter without removing a bit from the arm. An alternative way to tune the dipole is to use copper shielding tape to extend the effective length of the dipole. Do both arms equally.

It should be possible to tune a dipole as described, whilst in place in the measurement position as long as the user has access to a VNA for determining the return loss.

7. Reference

[1] Draft recommended practice for determining the peak spatial-average specific absorption rate (SAR) in the human body due to wireless communications devices: Measurement Techniques. Draft CD1.1 – December 29, 2002.