



2.3 Remote handset 75019

Frontside

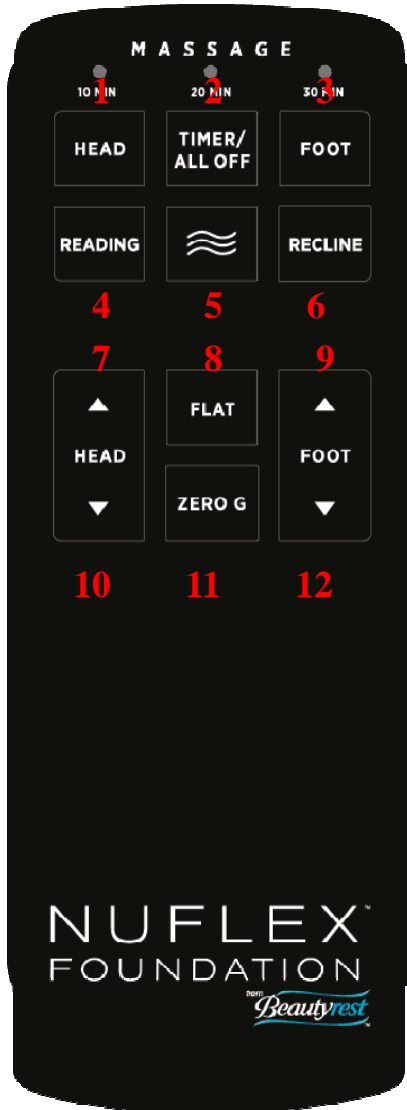

Pairing button & battery box (flipside)

Insert 3x AAA

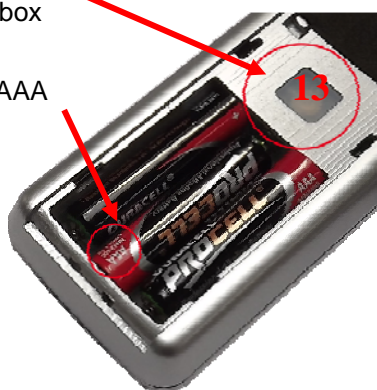


Keys for fixed positions



Choose between comfortable positions

Manual adjustment keys

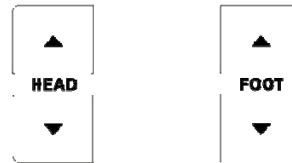

Move head & foot rest up and down manually

Massage keys



- ▶ With the timer key you program duration and stop the massage function.
- ▶ The LEDs signal the programmed duration, the key below starts the massage. With the Head & Foot keys you can select the massage zones.

Key	Function
1	Massage Head ON
2	Adjust Massage timer
3	Massage Foot ON
4	Move bed in TV position
5	Start both Massage (Head and Foot)
6	Move bed in Lounge position
7	Relay 1 on
8	Move bed in Flat position
9	Relay 3 on
10	Relay 2 on
11	Move bed in Zero G position
12	Relay 4 on
13	Pairing

Performance data remote (RF transmitter)	
Modulation	GFSK
Frequency Range	2.400~2.4835GHz
Transmitted Power	0 dBm
Battery	AAA
Working Current	<40mA
Standby Current	<8uA
Ambient Temperature	-40—85°C
RC Dimension	145*50*14mm
PCB Material & Size	FR4 1.6mm 79*42mm
Housing Material	ABS+PC

FCC WARNING

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.

NOTE 1: Any changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.