Calibration Laboratory of Schmid & Partner Engineering AG Zeughausstrasse 43, 8004 Zurich, Switzerland





S Schweizerischer Kalibrierdienst
Service suisse d'étalonnage
Servizio svizzero di taratura
Swiss Calibration Service

Accredited by the Swiss Accreditation Service (SAS)

The Swiss Accreditation Service is one of the signatories to the EA Multilateral Agreement for the recognition of calibration certificates

Client

PC Test

Accreditation No.: SCS 108

Certificate No: ES3-3022_Oct07

CALIBRATION CERTIFICATE ES3DV2 - SN:3022 Object QA CAL-01.v6 and QA CAL-12.v5 Calibration procedure(s) Calibration procedure for dosimetric E-field probes Calibration date: October 23, 2007 Condition of the calibrated item In Tolerance This calibration certificate documents the traceability to national standards, which realize the physical units of measurements (SI). The measurements and the uncertainties with confidence probability are given on the following pages and are part of the certificate. All calibrations have been conducted in the closed laboratory facility: environment temperature (22 ± 3)°C and humidity < 70%. Calibration Equipment used (M&TE critical for calibration) ID# Cal Date (Calibrated by, Certificate No.) **Scheduled Calibration Primary Standards** 29-Mar-07 (METAS, No. 217-00670) Mar-08 GB41293874 Power meter E4419B Mar-08 Power sensor E4412A MY41495277 29-Mar-07 (METAS, No. 217-00670) Mar-08 MY41498087 29-Mar-07 (METAS, No. 217-00670) Power sensor E4412A Aug-08 8-Aug-07 (METAS, No. 217-00719) Reference 3 dB Attenuator SN: S5054 (3c) Mar-08 Reference 20 dB Attenuator SN: S5086 (20b) 29-Mar-07 (METAS, No. 217-00671) Reference 30 dB Attenuator SN: S5129 (30b) 8-Aug-07 (METAS, No. 217-00720) Aug-08 Reference Probe ES3DV2 SN: 3013 4-Jan-07 (SPEAG, No. ES3-3013_Jan07) Jan-08 SN: 654 Apr-08 DAE4 20-Apr-07 (SPEAG, No. DAE4-654_Apr07) ID# Check Date (in house) Scheduled Check Secondary Standards In house check: Nov-07 RF generator HP 8648C US3642U01700 4-Aug-99 (SPEAG, in house check Nov-05) Network Analyzer HP 8753E US37390585 18-Oct-01 (SPEAG, in house check Oct-06) In house check: Oct-07 Name Function Signature Katja Pokovic Calibrated by: **Technical Manager** Fin Bomholt **R&D Director** Approved by: Issued: October 23, 2007

Certificate No: ES3-3022 Oct07

This calibration certificate shall not be reproduced except in full without written approval of the laboratory.

Calibration Laboratory of

Schmid & Partner
Engineering AG
Zeughausstrasse 43, 8004 Zurich, Switzerland





S Schweizerischer Kalibrierdienst
Service suisse d'étalonnage
Servizio svizzero di taratura
Swiss Calibration Service

Accreditation No.: SCS 108

Accredited by the Swiss Federal Office of Metrology and Accreditation
The Swiss Accreditation Service is one of the signatories to the EA
Multilateral Agreement for the recognition of calibration certificates

Glossary:

TSL tissue simulating liquid NORMx,y,z sensitivity in free space

ConF sensitivity in TSL / NORMx,y,z

 $\begin{array}{ll} \text{DCP} & \text{diode compression point} \\ \text{Polarization } \phi & \text{ rotation around probe axis} \end{array}$

Polarization 9 9 rotation around an axis that is in the plane normal to probe axis (at

measurement center), i.e., $\vartheta = 0$ is normal to probe axis

Calibration is Performed According to the Following Standards:

 a) IEEE Std 1528-2003, "IEEE Recommended Practice for Determining the Peak Spatial-Averaged Specific Absorption Rate (SAR) in the Human Head from Wireless Communications Devices: Measurement Techniques", December 2003

b) IEC 62209-1, "Procedure to measure the Specific Absorption Rate (SAR) for hand-held devices used in close proximity to the ear (frequency range of 300 MHz to 3 GHz)", February 2005

Methods Applied and Interpretation of Parameters:

- NORMx,y,z: Assessed for E-field polarization 9 = 0 (f ≤ 900 MHz in TEM-cell; f > 1800 MHz: R22 waveguide). NORMx,y,z are only intermediate values, i.e., the uncertainties of NORMx,y,z does not effect the E²-field uncertainty inside TSL (see below ConvF).
- NORM(f)x,y,z = NORMx,y,z * frequency_response (see Frequency Response Chart). This linearization is implemented in DASY4 software versions later than 4.2. The uncertainty of the frequency response is included in the stated uncertainty of ConvF.
- DCPx,y,z: DCP are numerical linearization parameters assessed based on the data of power sweep (no uncertainty required). DCP does not depend on frequency nor media.
- ConvF and Boundary Effect Parameters: Assessed in flat phantom using E-field (or Temperature Transfer Standard for f ≤ 800 MHz) and inside waveguide using analytical field distributions based on power measurements for f > 800 MHz. The same setups are used for assessment of the parameters applied for boundary compensation (alpha, depth) of which typical uncertainty values are given. These parameters are used in DASY4 software to improve probe accuracy close to the boundary. The sensitivity in TSL corresponds to NORMx,y,z * ConvF whereby the uncertainty corresponds to that given for ConvF. A frequency dependent ConvF is used in DASY version 4.4 and higher which allows extending the validity from ± 50 MHz to ± 100 MHz.
- Spherical isotropy (3D deviation from isotropy): in a field of low gradients realized using a flat phantom exposed by a patch antenna.
- Sensor Offset: The sensor offset corresponds to the offset of virtual measurement center from the probe tip (on probe axis). No tolerance required.

October 23, 2007

ES3DV2 SN:3022

Probe ES3DV2

SN:3022

Manufactured:

April 15, 2003

Last calibrated: Recalibrated:

September 20, 2006

October 23, 2007

Calibrated for DASY Systems

(Note: non-compatible with DASY2 system!)

Certificate No: ES3-3022_Oct07

ES3DV2 SN:3022 October 23, 2007

DASY - Parameters of Probe: ES3DV2 SN:3022

Sensitivity in Free Space ^A			Diode Compression ^B		
NormX	1.00 ± 10.1%	μ V/(V/m) ²	DCP X	91 mV	
		211211-2	DODV	00\/	

NormY 1.05 ± 10.1% $\mu V/(V/m)^2$ DCP Y 90 mV NormZ 1.00 ± 10.1% $\mu V/(V/m)^2$ DCP Z 90 mV

Sensitivity in Tissue Simulating Liquid (Conversion Factors)

Please see Page 8.

Boundary Effect

TSL 835 MHz Typical S

Typical SAR gradient: 5 % per mm

Sensor Center to	3.0 mm	4.0 mm	
SAR _{be} [%]	Without Correction Algorithm	2.8	1.2
SAR _{be} [%]	With Correction Algorithm	0.3	8.0

TSL 1900 MHz Typical SAR gradient: 10 % per mm

Sensor Center to	3.0 mm	4.0 mm	
SAR _{be} [%]	Without Correction Algorithm	7.3	4.6
SAR _{be} [%]	With Correction Algorithm	0.2	1.2

Sensor Offset

Probe Tip to Sensor Center 2.0 mm


The reported uncertainty of measurement is stated as the standard uncertainty of measurement multiplied by the coverage factor k=2, which for a normal distribution corresponds to a coverage probability of approximately 95%.

^A The uncertainties of NormX,Y,Z do not affect the E²-field uncertainty inside TSL (see Page 8).

^B Numerical linearization parameter: uncertainty not required.


Frequency Response of E-Field


(TEM-Cell:ifi110 EXX, Waveguide: R22)

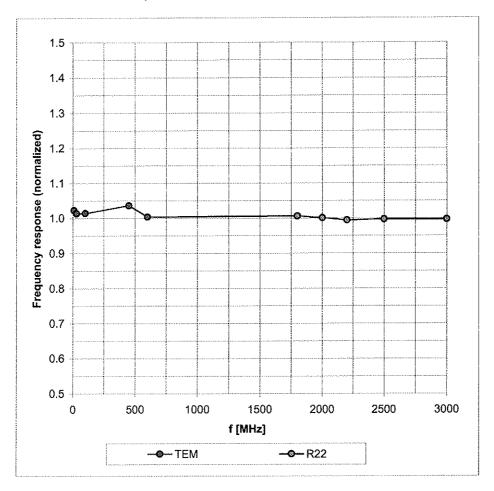


Uncertainty of Frequency Response of E-field: ± 6.3% (k=2)

Receiving Pattern (ϕ), ϑ = 0°

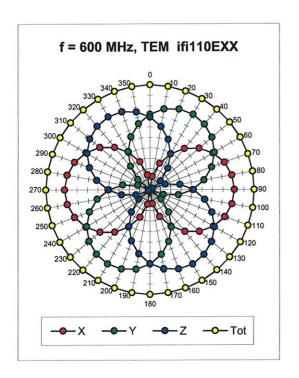

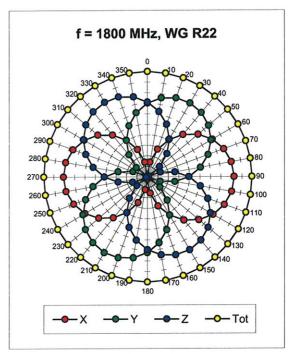

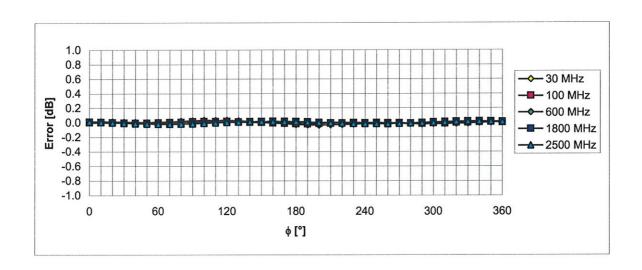


Uncertainty of Axial Isotropy Assessment: ± 0.5% (k=2)

100

10

Dynamic Range f(SAR_{head})

(Waveguide R22, f = 1800 MHz)

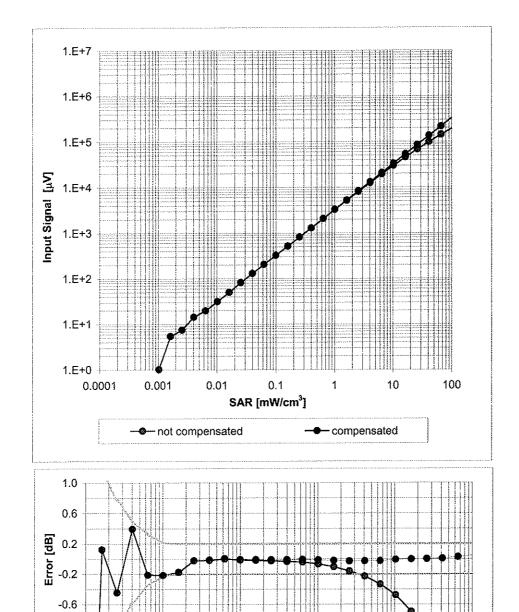

Uncertainty of Linearity Assessment: ± 0.6% (k=2)

-1.0


0.001


0.01

0.1

SAR [mW/cm³]

Conversion Factor Assessment

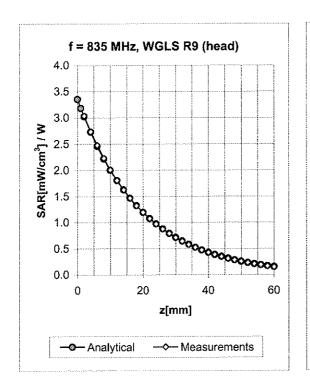

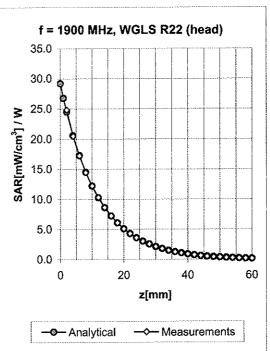


f [MHz]	Validity [MHz] ^c	TSL	Permittivity	Conductivity	Alpha	Depth	ConvF Uncertainty
450	± 50 / ± 100	Head	43.5 ± 5%	0.87 ± 5%	0.30	1.33	6.29 ± 13.3% (k=2)
835	± 50 / ± 100	Head	41.5 ± 5%	0.90 ± 5%	0.88	1.10	6.22 ± 11.0% (k=2)
1450	± 50 / ± 100	Head	40.5 ± 5%	1.20 ± 5%	0.81	1.14	5.33 ± 11.0% (k=2)
1900	± 50 / ± 100	Head	40.0 ± 5%	1.40 ± 5%	0.64	1.34	4.84 ± 11.0% (k=2)
2450	± 50 / ± 100	Head	39.2 ± 5%	1.80 ± 5%	0.80	1.10	4.34 ± 11.8% (k=2)
450	± 50 / ± 100	Body	56.7 ± 5%	0.94 ± 5%	0.23	1.28	6.83 ± 13.3% (k=2)
835	± 50 / ± 100	Body	55.2 ± 5%	0.97 ± 5%	0.95	1.10	6.05 ± 11.0% (k=2)
1450	± 50 / ± 100	Body	54.0 ± 5%	1.30 ± 5%	0.69	1.25	4.85 ± 11.0% (k=2)
1900	± 50 / ± 100	Body	53.3 ± 5%	1.52 ± 5%	0.58	1.49	4.59 ± 11.0% (k=2)
2450	± 50 / ± 100	Body	52.7 ± 5%	1.95 ± 5%	0.80	0.99	4.01 ± 11.8% (k=2)

^c The validity of ± 100 MHz only applies for DASY v4.4 and higher (see Page 2). The uncertainty is the RSS of the ConvF uncertainty at calibration frequency and the uncertainty for the indicated frequency band.

Deviation from Isotropy in HSL

Error (ϕ , ϑ), f = 900 MHz

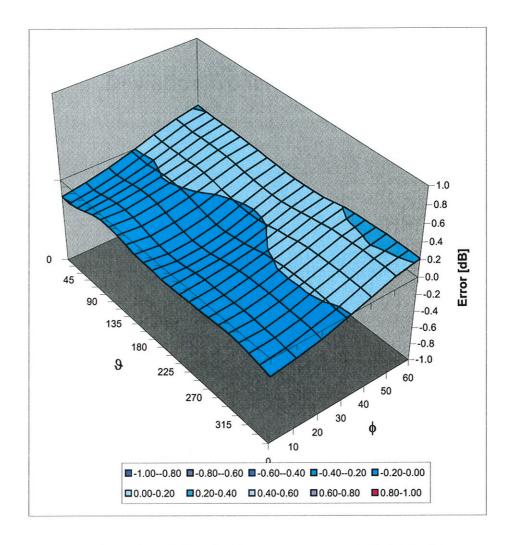

Uncertainty of Spherical Isotropy Assessment: ± 2.6% (k=2)

Zeughausstrasse 43, 8004 Zurich, Switzerland Phone +41 44 245 9700, Fax +41 44 245 9779 info@speag.com, http://www.speag.com

Additional Conversion Factors

for Dosimetric E-Field Probe

Type:	ES3DV2
Serial Number:	3022
Place of Assessment:	Zurich
Date of Assessment:	October 25, 2007
Probe Calibration Date:	October 23, 2007

Schmid & Partner Engineering AG hereby certifies that conversion factor(s) of this probe have been evaluated on the date indicated above. The assessment was performed using the FDTD numerical code SEMCAD of Schmid & Partner Engineering AG. The evaluation is coupled with measured conversion factors (probe calibration date indicated above). The uncertainty of the numerical assessment is based on the extrapolation from measured value at 835 MHz or at 1900 MHz.

Assessed by:

October 25, 2007

Zeughausstrasse 43, 8004 Zurich, Switzerland Phone +41 44 245 9700, Fax +41 44 245 9779 info@speag.com, http://www.speag.com

Dosimetric E-Field Probe ES3DV2 SN:3022

Conversion factor (± standard deviation)

$650 \pm 50 \text{ MHz}$	ConvF	$6.6 \pm 7\%$	$\varepsilon_r = 42.5 \pm 5\%$ $\sigma = 0.89 \pm 5\%$ mho/m (head tissue)
$750 \pm 50 \text{ MHz}$	ConvF	$6.4 \pm 7\%$	$\epsilon_r = 41.9 \pm 5\%$ $\sigma = 0.89 \pm 5\%$ mho/m (head tissue)
$550 \pm 50 \text{ MHz}$	ConvF	$6.7 \pm 7\%$	$\epsilon_r = 56.3 \pm 5\%$ $\sigma = 0.95 \pm 5\% \text{ mho/m}$ (body tissue)
$650 \pm 50 \text{ MHz}$	ConvF	$6.4 \pm 7\%$	$\varepsilon_r = 55.9 \pm 5\%$ $\sigma = 0.95 \pm 5\% \text{ mho/m}$ (body tissue)
$750 \pm 50 \text{ MHz}$	ConvF	$6.2 \pm 7\%$	$\varepsilon_r = 55.5 \pm 5\%$ $\sigma = 0.96 \pm 5\% \text{ mho/m}$ (body tissue)

Important Note:

For numerically assessed probe conversion factors, parameters Alpha and Delta in the DASY software must have the following entries: Alpha = 0 and Delta = 1.

Please see also Section 4.7 of the DASY4 Manual.